

USER MANUAL

TIF951

Dual Telephone Interface for the CS9500, CS9600, and CS9700 Intercom Systems

RTSTM



DO NOT
REMOVE

9350-7154-000 Rev B 1/98

TABLE OF CONTENTS

General Description	1
Installation.....	1
Connecting to the intercom.....	1
DIP Switch Settings.....	1
Rear Panel. Switch #1. Auto answer, Ring, Password, Address, Baud	1
Internal. Switch #2. Ring count	2
Internal Switch #3, Password select, Password length	3
Operation	5
From a keypanel	5
Programmin keys	5
Dialing a calf	6
Hanging up	6
Re-dialing	7
Speed Dial	7
Answering a Call	8
Programming for use from a phone	7
Auto Answer	8
Manual answer	9
Using from a phone	9
DTMF codes. preassigned keys	10
Programming keys from the phone	11

End-User License Agreement for Telex® Software

IMPORTANT - Please **read** this document carefully before using this product

THIS DOCUMENT STATES THE **TERMS** AND CONDITIONS UPON WHICH TELEX COMMUNICATIONS, INC. (the "COMPANY") OFFERS TO LICENSE THE INSTALLED SOFTWARE OR PROGRAM (the "SOFTWARE") FOR USE WITH THE PRODUCT IN WHICH IT WAS INSTALLED. YOU **ARE** AGREEING TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF **THIS** AGREEMENT, DO NOT USE **THIS** PRODUCT. PROMPTLY RETURN THE PRODUCT TO THE PLACE WHERE YOU OBTAINED IT FOR A FULL REFUND.

The **installed** software **as** supplied by **the** Company is licensed, not sold, to you for use only under the terms **of** this license, and the Company reserves all **rights** **not** expressly granted to you. You own the product or other media on or in which the Software is originally **or** subsequently recorded or **fixe**d, but the Company **retains** ownership **of** all copies of **the** Software itself.

1. License: This license allows you to use the Software for internal purposes only on a single **product** in which it **was** installed.

2. Restrictions: (a) You may not market, distribute or transfer copies **of** the Software to others or electronically transfer or duplicate the Software. YOU **MAY NOT** REVERSE ENGINEER, DECOMPILE, DISASSEMBLE, MODIFY, **adapt**, TRANSLATE, RENT, LEASE OR LOAN THE SOFTWARE OR CREATE DERIVATIVE WORKS BASED ON **THE** SOFTWARE OR **ANY** ACCOMPANYING WRITTEN MATERIALS. (b) The Software and the accompanying written materials **are** copyrighted. Unauthorized copying **of** the Software, including portions thereof **or** the written materials, is expressly forbidden. (c) You understand that the Company may update **or** revise the Software **and** in so doing incurs no obligation **to** furnish such updates to you.

3. Limited Warranty: **The** Company does **not** warrant that the operation **of** the Software **will** meet your requirements or **operate free** from error. The Company **DISCLAIMS** ALL OTHER WARRANTIES AND CONDITIONS EITHER EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY, **FITNESS** FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT **OF** THIRD PARTY RIGHTS.

4. Limited Liability: The liability of the Company for any claims arising out of this License based **upon** the Software, regardless of the form **of** action, shall not exceed the greater **of** the license fee for the Software or **\$50**.

38109-709 Rev A

10/97

End-User License Agreement for Telex® Software

IMPORTANT * Please read **this** document carefully before **using** this product.

THIS DOCUMENT STATES THE TERMS AND CONDITIONS UPON WHICH TELEX COMMUNICATIONS, INC. (the "COMPANY") OFFERS TO LICENSE THE INSTALLED SOFTWARE OR PROGRAM (the "SOFTWARE") FOR USE WITH THE PRODUCT IN WHICH IT WAS INSTALLED. YOU ARE AGREEING TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT USE **THIS** PRODUCT. PROMPTLY RETURN THE PRODUCT TO THE PLACE WHERE YOU OBTAINED IT FOR A FULL REFUND.

The installed software **as** supplied by the Company is licensed, not **sold**, to you for use only under the terms of this license, and the Company reserves all rights not expressly **granted** to you. **You own** the product or other media on or in which the **Software** is originally or subsequently recorded or **fixed**, but the Company retains ownership **of** all copies of the Software itself.

1. License: This license allows **you** to use the Software for internal purposes only on **a** single product in which it was installed.

2. Restrictions: (a) You may not market, distribute or transfer copies **of** the Software to others or electronically transfer or duplicate the Software. **YOU MAY NOT REVERSE ENGINEER, DECOMPILE, DISASSEMBLE, MODIFY, ADAPT, TRANSLATE, RENT, LEASE OR LOAN THE SOFTWARE OR CREATE DERIVATIVE WORKS BASED ON THE SOFTWARE OR ANY ACCOMPANYING WRITTEN MATERIALS.** (b) The **Software** and the accompanying **written** materials **are** copyrighted. Unauthorized copying of the **Software**, including portions thereof or the **written** materials, is expressly forbidden. (c) You understand that the Company may update or revise the **Software** and in so doing **incurs** no obligation **to** furnish such updates to you.

3. Limited Warranty: **The** Company does **not** warrant that the operation of the Software will meet your requirements or **operate free** from error. The Company **DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS EITHER EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS.**

4. Limited Liability: The liability of the Company for any claims arising out of this License based upon the **Software**, regardless **of** the form of action, shall not exceed the greater **of** the license fee for the Software or **\$50**.

38109-709 Rev A

10/97

SECTION 1: GENERAL DESCRIPTION

The TIF951 connects a pair of telephone dial tone lines to the CS9500/CS9600/CS9700 series intercom systems. Each of the two telephone lines occupies an input/output port in the intercom matrix, and each channel occupies one key panel data address.

The TIF951 provides general purpose control and interfacing for telephone lines. Each telephone interface channel may be used to dial out from any key panel, auto answer incoming calls, or accept incoming calls to be answered by key panels.


SECTION 2: INSTALLATION

2.0 Connecting the TIF951 to the intercom.

Each channel of the TIF951 connects to the matrix in exactly the same way as an intercom key panel. If your system utilizes the XCP954 cross connect panel, you may plug the TIF951 directly in using a 3 pair cable with DB9 connectors at each end.

If your intercom uses the XCP955 cross connect panel, you may use the DB9 to RJ11 adapters which are supplied in the accessory kit packaged with the TIF951. In the event you need to make your own adapter, the wiring is as follows (these adapters are readily available from companies which sell computer wiring accessories):

RJ11		DB9
1 (blue)	2	Data -
2 (yellow)	8	TIF input +
3 (green)	4	TIF output +
4 (red)	5	TIF output -
5 (black)	7	TIF input -
6 (white)	1	Data +

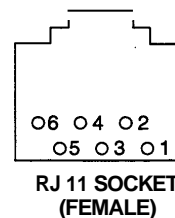

* Note, twist the wires, white with blue, black with yellow, red with green

2.1 DIP Switch Settings

The rear panel DIP switch contains switches to configure the most often changed options. These include auto answer mode, ring signal mode, password mode, intercom port address (key panel number), and baud rate.

2.1.1 Rear panel DIP Switch #1:

DIP switch 1 (rear panel) settings:

SW #		On (down)	Off (up)
1	Auto Answer	yes	no
2	Generate Ring Signal	yes	no
3	Password Required	yes	no
4	Address	1's	
5	Address	2's	
6	Address	4's	
7	Address	8's	
8	Baud Rate	76800	9600

DIP switch 1, address settings:

Address Settings:	Rear DIP Switch, Switch # (down is on, up is <i>off</i>)			
Port Number	4	5	6	7
1, 11, 21, etc	on	off	off	off
2, 12, 22, etc	off	on	off	off
3, 13, 23, etc	on	on	off	off
4, 14, 24, etc	off	off	on	off
5, 15, 25, etc	on	off	on	off
6, 16, 26, etc	off	on	on	off
7, 17, 27, etc	on	on	on	off
8, 18, 28, etc	off	off	off	on
9, 19, 29, etc	on	off	off	on
10, 20, 30, etc	off	on	off	on

AUTO ANSWER mode will set the unit to answer the phone automatically when it rings. The number of rings required before it answers is set on internal DIP switch #2. If set for manual answer, the line will ring until someone at a key panel answers the call.

GENERATING SIGNAL sets the unit so that when the phone line is ringing, certain designated key panels or circuits will receive an audible ring signal.

PASSWORD REQUIRED sets the unit so that when a call is automatically answered, it will require that the user enter a password via DTMF before the unit will allow communications. The actual password is set using internal DIP switch #3.

PORT ADDRESS tells the unit and the intercom which matrix inputs and outputs belong to the TIF. The settings are the same as for a key panel. The setting is the binary representation of the last digit of the matrix input/output number which that channel of the TIF is connected. See the address table above for the actual settings.

BAUD RATE sets the data rate with which the TIF951 communicates with the intercom. The data rate for all CS9500 intercom matrices is 9600 BPS (switch *off*). The data rate for all CS9600 and CS9700 matrices is 76.8K BPS (switch on).

2.1.2 Internal DIP switch #2:

DIP switch #2, which is located internally to the unit sets the number of rings before the unit auto answers. Please note that the ring count is approximate. This switch has no effect unless the rear panel DIP switch is set for auto answer mode. If the ring count is set for a high number (8), and auto answer is enabled, the unit may be used for mixed mode operation, where key panel operators normally answer the incoming call, but the line will auto answer in the event they are away from their panels.

DIP Switch #2 (internal):

- 1 Ring Count
- 2 Ring Count
- 3 Not used (future)
- 4 Not used (future)
- 5 Not used (future)
- 6 Not used (future)
- 7 Not used (future)
- 8 Not used (future)

DIP Switch #2, Ring Count settings

Rings	Internal DIP SW2, Switch # (down is on, up is off)	
	1	2
1	off	off
2	on	off
4	off	on
8	on	on

2.1.3 Internal DIP switch #3:

DIP switch #3, which is located internally to the unit selects the password. It has no effect unless password required has been enabled on DIP switch #1 (rear panel). When password required is enabled, the password must be entered via DTMF by the caller before he may communicate. This is to prevent unauthorized use of the intercom by callers. Switches 7 and 8 select the length of the password, from 1 digit to 4 digits. If set for 1 digit, only the first digit of the password is used, if set for 2 digits, then the first 2 digits are used etc.

DIP Switch #3 (internal):

- 1 Password select
- 2 Password select
- 3 Password select
- 4 Password select
- 5 Password select
- 6 Password select
- 7 Password length
- 8 Password length

DIP Switch #3, Password settings
Password Internal DIP SW3, Switch #

	1	2	3	4	5	6
4,7,8,8	off	off	Off	Off	Off	Off
7,7,7,7	on	off	Off	Off	Off	Off
4,6,8,7	off	on	Off	off	Off	Off
1,0,5,8	on	on	Off	off	Off	Off
1,4,8,4	off	off	on	off	Off	off
7,0,3,3	on	off	on	off	Off	off
5,9,0,7	off	on	on	off	Off	off
0,9,3,5	on	on	on	off	Off	off
3,7,8,0	off	off	off	on	Off	off
1,4,5,0	on	off	off	on	Off	off
6,9,2,7	off	on	off	on	Off	off
8,3,0,3	on	on	off	on	Off	off
8,3,3,6	off	off	on	on	Off	Off
6,0,8,0	on	Off	on	on	Off	Off
2,9,5,7	off	on	on	on	Off	Off
5,8,5,1	on	on	on	on	Off	Off
9,5,9,9	off	off	Off	Off	on	Off
8,2,0,6	on	Off	Off	Off	on	Off
4,7,4,0	off	on	Off	Off	on	off
4,5,7,3	on	on	Off	Off	on	Off
8,8,3,0	off	off	on	Off	on	off
0,6,2,0	on	Off	on	Off	on	Off
3,3,3,9	off	on	on	Off	on	Off
9,8,5,0	on	on	on	Off	on	Off
7,3,5,6	off	Off	Off	on	on	off
9,1,4,6	on	Off	Off	on	on	off
9,9,9,1	off	on	Off	on	on	off
3,8,8,1	on	on	Off	on	on	off
4,2,4,0	off	Off	on	on	on	off
1,0,6,3	on	Off	on	on	on	off
8,6,3,2	off	on	on	on	on	off
4,2,3,4	on	on	on	on	on	off
0,8,5,1	off	off	off	Off	Off	on
0,6,7,4	on	off	Off	Off	Off	on
0,0,1,5	off	on	Off	Off	Off	on
6,2,9,4	on	on	Off	Off	Off	on
9,9,5,4	off	off	on	Off	Off	on
1,0,7,9	on	off	on	Off	off	on
9,0,3,0	off	on	on	Off	Off	on
0,1,6,6	on	on	on	Off	Off	on
9,5,5,6	off	Off	Off	on	Off	on
8,0,5,4	on	Off	Off	on	Off	on
6,2,9,3	off	on	Off	on	Off	on
6,6,1,1	on	on	Off	on	Off	on
6,3,6,7	off	off	on	on	Off	on
1,5,2,9	on	off	on	on	Off	on
2,7,8,6	off	on	on	on	Off	on
8,3,1,3	on	on	on	on	Off	on
1,6,5,6	off	Off	Off	Off	Off	on

DIP Switch #3, Password settings, continued

Password	Internal DIP SW3, Switch #					
	1	2	3	4	5	6

7,6,4,2	on	off	off	off	Off	on
1,6,5,3	off	on	off	off	Off	on
1,6,0,3	on	on	off	off	Off	on
4,3,7,3	off	off	on	off	Off	on
3,5,7,4	on	off	on	off	Off	on
4,7,6,4	off	on	on	off	Off	on
3,8,6,8	on	on	on	off	Off	on
5,7,1,9	off	off	off	on	Off	on
3,9,2,7	on	off	off	on	Off	on
6,8,5,7	off	on	off	on	off	on
5,4,8,7	on	on	off	on	off	on
3,2,5,2	off	off	on	on	off	on
0,4,0,1	on	off	on	on	off	on
6,4,0,9	off	on	on	on	off	on
4,3,4,3	on	on	on	on	off	on

DIP Switch #3, Password Length

Internal DIP SW3	Switch #	
Length	7	8

4	off	off
3	on	off
2	off	on
1	on	on

SECTION 3, OPERATION

3.1 OPERATION FROM A KEY PANEL

The **TIF951** is operated from the intercom key panels, and from the dial pad on the telephone at the remote end of the line. Any key panel with a key pad may use a **TIF951**. All that is necessary is to program a key to talk to the **TIF951**, as if it were a key panel.

The alpha numeric display or tally LED for that key then provides information about the phone line. A solid display or non illumined LED indicates a line which is not in use. A slow flash indicates a line which is in use (off hook). A rapidly flashing display or LED indicates a line which is ringing. In addition, the alpha numeric display will display digits as they are dialed, and the LED will flash for each digit.

3.1.1 Programming a key to use the TIF951.

To use the **TIF951**, either to answer a call, or to call out, you first need to program a key to talk to the **TIF951**. This is accomplished in the same manner as programming a key to talk to a key panel. To program a key by port number, enter NUM-~~nnn~~-~~PGM~~-t, where NUM is the number 1 key, ~~nnn~~ is the port number of the **TIF951** you want to use, and t is any talk

key. In general, you will also need to use the listen key, so it should be assigned as either **AF** (auto follow), or **AL** (auto listen).

Note that the TIF951 only responds to commands which are sent via a point to point key assignment. If you wish to use the TIF951 primarily on a **PL**, you must add a point to point assignment as the **L2** talk assignment on the talk key for any panels which are going to either answer the line, or dial out on the line.

3.1.2 Dialing a call:

Any key panel may dial calls on the TIF-951.

To dial a call on the TIF951:

1. **Turn** on the listen key for the line you wish to dial **on**. This will allow you to hear dial tone, and your **DTMF** dialing tones.
2. Enter dial mode by entering **PHONE-PGM-T**. **PHONE** is the **4** button on the keypad. **PGM** is the red **PGM** key on the key pad, and **T** is the talk key which is programmed to talk to the TIF951 you are dialing on. Leave the talk key in the up engaged position as you dial the number.
3. Dial the number. As you enter each digit, it will appear in the alpha display above the key you are dialing **on**. On panels with **LED** tally, the **LED** will flash **on** each digit. If the listen key is engaged, you will hear each **DTMF** tone as it is generated.
4. When you have completed dialing, momentarily disengage the talk key to exit dial mode. The alpha numeric display will revert to **normal**, and you may use the key and key pad in the normal manner.

Note: The key pad is used in the **usual** way. Digits 0-9 generate the **DTMF** digits 0-9. **PGM** generates **#**, and **CLR** generates ***** (***** and **#** are displayed for these keys). If the last number redial/speed dial option is present, it is necessary to press **CLR** twice if you wish to generate a *****, as a single **CLR** is used to trigger the speed dial and redial features.

3.1.3 Hanging up:

The TIF951 will detect that the caller at the far end has hung up under most circumstances. It detects the hang up by either loop interrupt, battery reversal, or the presence of dial tone. Some telephone systems do not provide any of the above, so it **will** be necessary to force a hang up. In addition, if the call was placed to an auto answer device, it **will** be necessary to force a hang up when the **call** is complete.

Enter **PHONE-CLR-t**, where **PHONE** is the **4** button on the key pad **0** is the **0** button, **PGM** is the red **PGM** button, and **t** is the talk key which is programmed to talk to the TIF951 which you wish to **hang** up. This **will** disconnect the line for which you struck the **talk** key.

Note that if the talk key is in the **on** position, you must **turn off** the key, then momentarily turn it on again to indicate which line you wish to disconnect. If the line is in dialing mode, then you must first exit dialing mode by **turning off** the key, then use **PHONE-CLR-t** to hang up.

3.1.4 Re-dialing the last number:

The TIF951 remembers the last number which it has dialed.

1. Enter dialing mode by following the instructions for dialing a **cal**.
2. Enter CLR-0-0. The TIF will automatically redial the last number it dialed.
3. Momentarily release the talk key to exit dialing mode.

Note that the number is remembered on a phone line by phone line basis. When the last number redial command is issued, you will get the last number dialed on that TIF951 channel, regardless of which key panel dialed the number. For example, if you have a call to 818-566-6700 on channel 1 of the TIF, and a call to 201-891-6002 on the other channel, and you are disconnected, issuing the redial command will re-establish the calls on the same channels. The redial command may be issued ~~from~~ any key panel in the intercom, not just the key panel that originally dialed the calls.

3.1.5 Dialing a Speed Dial number (stored number):

The TIF951 has **32** internal memories for storing frequently used phone numbers. To dial one of these numbers:

1. Enter dial mode.
2. CLR-*nn* where CLR is the clear button on the key pad, and *nn* is two digits, which are the speed dial code.
3. Momentarily release the talk key to exit dialing mode.

3.1.6 Storing a speed dial number:

1. After dialing the number the usual way, enter the CLR-PGM-*nn* before you release the talk key to exit dialing mode.
2. Momentarily release the talk key to exit dialing mode.

Note: To generate a pause during auto dial, enter *99. **This is** used for example if you need to enter **a** digit to get an outside line, and your phone system requires a pause before continuing to dial.

Each number may contain **up to 30** digits. Note that the memory for the stored numbers is RAM in the TIF951. **The** numbers are unique to each TIF951 channel, and each TIF951 channel can have different numbers stored in it. If you plan to use the speed dial feature, it is advisable to supply the TIF951 with **UPS** power, to prevent losing the speed dial information when the power fails.

3.1.7 Answering a call:

1. When a line is ringing, the alpha numeric display or **LED** above the talk key which is programmed for that line will **flash** rapidly.
2. To answer the call, first turn on the listen key, then press the talk key and speak into the microphone or headset.
3. If you have been programmed **as** a default station, your panel will "**ring**" when ever one of the lines rings. If you do not have a key already programmed, the **ringing** line **will appear on** your incoming call key (the key farthest to the right **on** the main panel). To answer, press the incoming call key and answer. **You** should copy the key to main key position, either just before or just after you answer, so you can turn on the listen key to hear the caller audio.

3.2 TIF951 SYSTEM SETUP TO RECEIVE CALLS

To the intercom system, the TIF951 is very much like a key panel. If the phone lines are to be used for outgoing calls only, then no programming in **CSE**DIT is necessary. If users are going to phone into the intercom from the outside, then the TIF951 needs to be configured to allow them to use the phone line in much the same way a local user uses **his** key panel.

Programming information for the phone line is entered into the **CSE**DIT software just **as if** the TIF951 were **an** ordinary key panel, by selecting "**Keys**" from the main menu, then selecting the TIF951 from the pick list of key panels. **The TIF951 operates much** the same way **as** a key panel, except that the "keys" are really the **DTMF** buttons on the users telephone.

3.2.1 Auto Answer Mode:

To use the TIF951 in auto answer mode, you must first enable auto answer mode on the rear panel DIP switch, toggle number 1. You may also wish to enable Password required, toggle number 3. In addition, you may select the number of rings before the unit answers (internal DIP switch #2), and the actual password (internal **DIP** switch #3).

When the caller dials into the TIF951, he will hear the line ring, then the unit will answer, and beep to request the pass word (if password **required** is enabled). The user then must enter the password. The unit **will** beep once to **confirm** a proper password. **If** the password is not correct, the unit **will** beep twice to allow another try.

Once the password has been entered, the TIF951 will establish communications on key #1 automatically. From **CSE**DIT, this will be talk and listen keys #1. **If** for example the user were a camera operator, it **might** be desirable to program the camera PL **as** talk and listen on talk and listen keys #1. **If** the caller were a reporter, you might program **an** **IFB** on listen key #1, but **no** talk **on** talk key #1.

Keys 2 to 7 may also be programmed. To use the other **keys** from the phone, just press the **DTMF** button for the key you wish to use. For example, **if** key #1 **was** the camera PL, and you have finished with the shot, you may press #1, which **will** toggle off key 1. **If** master control were **programmed** on key #2, **you** may then press 2 and call master control. Likewise, you **might** have an **IFB** programmed on listen 3, with no talk. **If** you press 3, you will hear the **IFB**. #4 could have an **IFB** talk on it, to allow **a** caller to speak **on** **an** **IFB** circuit.

Each DTMF button acts **as if** it were a push on/push off switch. When programming in

CSEEDIT, just program the same key number **as** the number the user is going to press **on** the telephone to speak.

Talk keys 8 to 15 have a special purpose. If you are not using auto answer mode, but have set up the TIF951 to be manually answered, talk keys 8 to 15 will be programmed for the panels which are to receive the ring signal. They may also be toggled **on** and off from the phone by DTMF 8, so they may be used in auto answer mode **as** well. **You** may program only key 8, in which case it will behave the same **as** keys **1-7**. **You** may also program additional panels, PL's, IFB's etc on keys 9-15, and they will be activated simultaneously by the 8 button on the phone.

3.2.2 Manual Answer Mode:

In manual answer mode, the line will ring until it is answered from a key panel. In general, you must designate panels which are to receive the "ring", so they can answer the line. When a line is manually answered, the caller does not have to enter a password, even if the password required switch is turned on. You may **mix** modes by enabling auto answer, but setting the ring count for 8 rings. If no user has answered the call by 8 rings, the **TIF** will then automatically answer the call, and if password required is also enabled, the call will be screened by requiring a password.

To use manual answer mode, you may choose to program keys 1 to **7** **as** above if you wish. When the phone is manually answered, key one will not be automatically activated, but the caller may activate any of the keys if he wishes.

You must also designate the panels which are going to ring when the line rings. Program these panels on keys 8 to **15**, using both L1 and L2 **if** you have more than 8. It is generally not necessary to program the listen keys **on** these positions. When the line rings, the TIF951 will "call" these panels when the line is ringing. When the line **rings**, the TIF951 generates a ringer noise which is then transmitted to these panels. The panels will display the TIF951's alpha numeric **in** the incoming call window, and if a talk key has already been programmed on the panel, it's alpha numeric will flash rapidly.

3.3 Using the TIF951 from the telephone:

The TIF951 will behave differently depending on how it is programmed. It is up to the operator who programs the TIF951 to convey to the user what to expect. If the user is not familiar with the operation of the TIF951, it is best keep the operation **as** simple **as** possible, until they are familiar with its operation. For this reason, it is suggested that you not use password required unless you have had problems with nuisance calls in the past. If the **TIF951** field user only requires one service, it is best to program that service on key **1**, enable auto answer, and disable password required. The telephone user will then only have to dial the proper phone number to use the interface. **As** they become more familiar with its operation, you can then begin to offer more options to the users, or begin to require a password.

In general, it is very easy to use, if the user has knows what to expect.

When calling in, if the unit is in auto answer mode, it **will** answer the call after the number of rings **which** have been selected. If password required is **not** enabled, the unit **will** indicate it is ready with a single beep. **If** password required **is** enabled, the TIF951 will prompt for a password with **2** beeps. The user **will** enter the password, and the unit will

beep once if the password was correct, twice ~~was~~ wrong. The user is allowed **3 attempts** to enter the password, after which the TIF951 will disconnect. ~~In~~ the event a user ~~calls~~ the TIF951 when the intercom system is either turned off or absent, the TIF951 will answer prompt with **3 beeps**.

Once the password is entered, the TIF951 will enable talk and listen on key **1**. This should be programmed ahead of time to what ever communications the caller generally needs first. ~~If~~ it is not desirable for the caller to be able to talk at this point, then only the listen key for key **1** should be programmed.

The caller may then either continue to use key **1**, or he may select other keys with his **DTMF** pad. He may turn off key **1** by pressing **DTMF 1**, or may continue to just add other keys. At any time, the caller may turn ~~off~~ all keys without hanging up by pressing **0**.

When the call is complete, the caller should enter ***#**, which will cause the TIF951 to disconnect. This is more reliable than waiting for the phone system to pass the disconnect information to the TIF951.

33.1 DTMF codes

Once programmed ~~as~~ described in section **3.2**, the TIF951 may be ~~operated~~ via the **DTMF** Touch Tone™ key pad ~~on~~ the telephone. The DTMF keys have the following functions:

Normal Mode:

1 thru 7	Toggle on and off talk and listen #1 to #7. Note that initially, #1 will be enabled if the unit auto answered the line.
8	Toggle on and off talk and listen to the panels which ring when the line is ringing. This allows the caller to "recall" the panels without having to hang up and redial. Toggling this on will allow the callers voice to be heard from all the panels which normally ring.
9	Enters programming mode, to reassign keys.
0	Turn off all talk and listen keys. Since 1-8 are toggles, it is possible to forget which keys are " on " and which are " off ". In this case, just press 0 to turn then all off , and start over .
*1 thru *7	Toggle on and off listen 1-7 . By pressing * before the key, you only change the listen. This allows you to listen to a circuit without talking to it, or to talk to a circuit without listening to it. Note that you will automatically listen and talk to #1 if the TIF951 auto answered the line.
*8	Toggle on and off listen for 8-15.
*#	Disconnect. This will cause the TIF951 to hang up . It is a good idea to do this before you hang up, as many phone systems take a long time to signal that the far end has hung up .

Programming Mode:


You may reprogram the talk and listen assignments on 1-7, just as you can on a key panel (if they are not restricted via **CREDIT**). Note that the sequences are the same as the sequence you would use from a key panel, except that you must first enter programming mode by pressing 9.


1 nnn # K	Program a talk key to a point to point.
2 nn # K	Program a talk key to a PL.
01 nn # K	Program a talk key to a special list.
02 nn # K	Program a talk key to an IFB.
03 nn # K	Program a talk key to an ISO.
04 nn # K	Program a talk key to a Relay.
3 5 # K	Program a talk key to All Call (turns on the lower numbered talk keys)
1 nnn # *K	Program a listen key to a point to point.
2 nn # *K	Program a listen key to a PL
3 2 # *K	Program a listen key to Auto Follow
3 3 # *K	Program a listen key to Auto Mute
01 nn # *K	Program a listen key to a special list.
02 nn # *K	Program a listen key to an IFB.
03 M # *K	Program a listen key to an ISO.
04 nn # *K	Program a listen key to a Relay.
*9	Exit programming mode
*0	Exit programming mode and turn off all talk & listen.
*#	Disconnect

Note: 0-9 are the number keys, * and # are the star and pound keys.
 nnn is three digits for a key panel number
 M is two digits, for an IFB, PL, Relay, Special List, or ISO.
 K is a key which you are programming, just press the digit (1-7).
 *K is the * key followed by a digit (1-7). This is used to represent the listen key.

Telos *ONEplus ONE* Dual Digital Telephone Interface

User's Manual 1.1



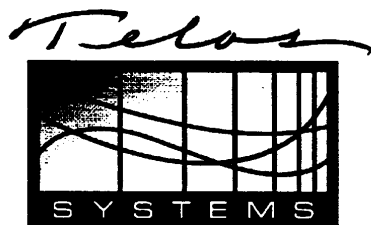

Telos Systems • 2101 Superior Avenue • Cleveland, OH 44114
(216) 241-7225 • FAX: (216) 241-4103

© Copyright 1991 by TLS Corporation

July 10, 1989

A personal note:

You have in your possession a remarkable piece of technology. The Telos One does what would have been either impossible or impractical only a few years ago. It relies on *digital signal processing*, a concept **known** to theorists for years but only very recently available to us **as users**.

It is entertaining to read the **signal** processing textbooks written **as** recently **as** the mid 70's. The authors describe the state of the **art** a few seconds of audio is collected **and** processed with **FORTRAN** programs running on million dollar mainframe computers. Only after minutes (or hours!) of expensive number crunching did the expectant researchers get to **actually hear** the brief audible result.

About the same time, **yours** truly began **his** first **radio** station job. Using phones on air was always a problem owing to the **familiar** shortcomings of speakerphones and hybrids. Thus began what was to become many **years** of tinkering with telephone interfacing. Nothing had worked - resulting in discouragement having become firmly rooted when, in **1983**, articles describing practical *real-time* DSP began to appear in obscure **journals**. This was made possible by the introduction of single-chip processors optimized for use in manipulating analog signals. They cost \$350 - but I sensed that their availability signalled the beginning **of** a revolution. The next year and a half found me at work weekends and evenings learning the exciting new technology and experimenting with telephone interfacing approaches using it. By late **1984**, the now famous Telos 10 was the result.

It had the singular virtue among available interface devices that it **actually worked**. At last it was possible to carry on a natural on-air conversation without the common up-cutting or distortion difficulties. We put it on the **air** at WFBQ, Indianapolis and made a few for **friends**. Slowly, the word spread. Since I was happily employed and thus had no **compelling** interest in Telos' economic success, it was only amusing **to** observe the digital hybrid technology take the usual path **of** any new idea to eventual acceptance:

- *It was ignored*
- *It was accused (by other interface manufacturers) of being ineffective*
- *It was accepted by users with tolerance for risk and novelty*
- *It was accepted by large numbers of users*
- *It was co-opted and copied!*

For a couple of years, Telos Systems was operated as a sideline enterprise while I continued to work as a CE. However, as is now evident, increasing sales caused Telos to grow beyond its "garage" origins to become a bona-fide broadcast manufacturer, adding staff, an office, phones, and an occasional ad. I finally even had to quit my job!

Our research continued and resulted a little over a year ago in the second generation Telos 100 hybrid • which advanced the state of the art by significantly improving performance and taking advantage of DSP for the dynamic processing functions.

So here we are in the present. The work of the signal processing theorists for decades (actually, centuries Fourier was at it a few hundred years ago!), our continuous work over the course of the past six years, and the near-incredible advances in digital audio and low-cost computing power have combined to allow the creation of a result even the digital dreamers would have been shy to predict a decade ago.

We trust you will like it.

Keep on keeping the GM happy.

Steve Church
President

User's Manual V1.1
Telos One plus ONE
Dual Digital Hybrid Telephone Interface

1 INTRODUCTION	1
1.1 Overview	2
1.2 Specifications	6
2 INSTALLATION	7
2.1 Audio	9
2.2 Connection to the Telephone Line	13
2.3 Remote Control	13
2.4 Power Source	14
3 OPERATION	15
3.1 Front Panel Controls	16
3.2 Metering and Level Adjustment	18
3.3 Feedback Control	19
4 TECHNICAL DATA and TROUBLESHOOTING	21
4.1 Overview	22
4.2 Digital Section	25
4.2.1 Theory of Operation	25
4.2.2 Troubleshooting the Digital Section	26
4.3 Audio Section	26
4.3.1 Theory of Operation	26
4.3.2 Troubleshooting the Audio Section	27
4.4 Power Supply	27
4.5 Internal Connections	28
Connector Pinout Charts	31
Parts List	32
5 DRAWINGS	35
Signal Flow Block Diagrams	
schematics	
6 APPENDIX	
Alternate Software Versions	
Warranty and Application Caution	
Power Supply Data Sheets	

ACCESSORY PCB MODULES:

DTMF-to-ROTARY CONVERTER
BASIC AUTO-ANSWER
"SUPER" AUTO-ANSWER

ELECTRONIC PHONE SYSTEM TUTORIAL

SECTION 1

INTRODUCTION

Telos ONE plus ONE - INTRODUCTION 1

1.1 OVERVIEW

The Telos ONE plus ONE Dual Interface

The Telos ~~ONE~~ plus ~~ONE~~ consists of two Telos One digital hybrids in ~~one~~ 19 rack mount enclosure.

The Telos One interface embodies a state of the art approach to interfacing telephone lines for broadcast on-air, intercom interface, or teleconferencing use. The very fast and precise digital automatic nulling hybrid allows smooth, natural, simultaneous conversation without the usual speakerphone up-cutting effect or the audio distortion and feedback problems often experienced with poorer hybrid-type interface devices.

As well, a number of additional functions are accomplished in the digital domain in order to enhance "real-world" performance. Included are sophisticated automatic gain control in both the send and receive paths, a carefully-implemented override ducking system, and a pitch shifter for feedback reduction.

Telephone connections are via standard modular jacks, while audio input and output are connected via XLRs. Each hybrid has one balanced input with provision for mic or line levels and two balanced outputs. The second output may be switched to be either a second isolated output or a mix of the send and caller signals.

Purpose

The purpose of the Telos One broadcast telephone hybrid is to deliver to the receive output pure caller audio with as little of the send (announcer) audio as possible mixed-in. Until digital signal processing techniques were applied to the telephone interface problem, there were two choices:

Switching. The send and receive paths were separated by having only one talk direction active at a time. The common "speakerphones" use this approach. The disadvantage is that natural conversation is impossible, since the caller is cut-off when the announcer talks - and vice-versa.

2 Telos ONEplus ONE - INTRODUCTION

Analog hybrids. These were, on most phone lines, *very* poor at removing the send signal from the caller's audio. **This** meant that the announcer's voice would become distorted **as** the phone audio was added to the **mix**.


(A full discussion of hybrids and interface systems is included in the *Telos Telephone Q & A*.)

The Telos One is a *true digital* second generation telephone interface. It **uses** state-of-the-art digital techniques to perform the hybrid function - the subtraction of the **send** from the receive audio. The input and caller audio signals are converted to digital and operated on in **such** a way **as** to very effectively remove the send audio from the output while maintaining natural simultaneous full-duplex conversation. The digital approach assures consistently good trans-hybrid loss regardless of varying phone **line** impedance.

Special Features

The Telos One incorporates sophisticated audio processing **in the digital domain** for **gain** control and filtering.

- A digital high-pass filter is **used** to reduce hum and other low frequency interference. High frequency noise above the telephone frequency range is **also** attenuated.

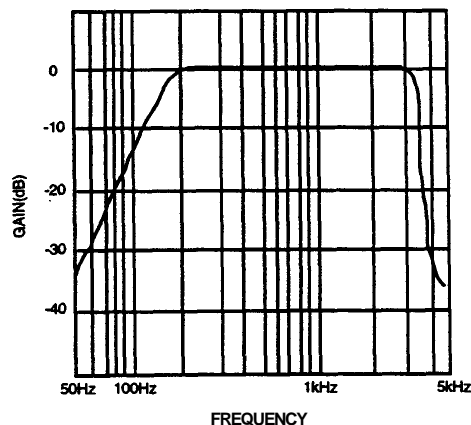

- **Smart Digital** Automatic **Gain** control smooths input and output levels. A **noise-gate/downward** expander is provided on the receive path to reduce phone line noise during caller pauses.
- A switchable **override** function is provided to allow ducking of the caller while the announcer is speaking. The **override** function includes an **acoustic ducker** which dynamically reduces send audio when caller audio is present in order to reduce feedback and aid natural conversation.
- Unique to the Telos One is a special feedback reduction function using a pitch-shifting approach. The input (send) audio is shifted downward in frequency by **4 Hz** to help prevent feedback build-up.
- Front panel metering is provided for input level, output level, and **gain** reduction.

Operation

When a call is initially established, a brief mute/adapt period provides an opportunity for the system to set up to the line before the call is passed to the output. The caller hears a "noisy tone," but none of this tone is heard at the output since the output is muted during this time. This has the incidental benefit of removing the line switching "clunk." Adaption to the telephone line characteristic continues as the conversation proceeds using voice as the driving signal.

The Hardware

The process of analog-to-digital and digital-to-analog conversion is critical to audio quality and hybrid performance. In the Telos One, IC converters called **CODECS** intended for telephone central office application are employed. The ICs in the Telos One are better than the usual telephone **CODECS** in that they use an oversampling and digital filtering technique for the anti-aliasing and reconstruction filters rather than the usual switched-capacitor filter approach. Thus noise and distortion are quite good.

Because the audio processing functions are performed in the digital domain, the hardware design of the Telos One is quite simple.

Multi-Line Systems

Telos makes interface modules for multi-line switching. The Direct Interface Module offers a convenient and flexible means to switch up to **10** telco ~~lines~~ with provision for program-on-hold, additional telephone sets for off-air conversation, etc. The 1A2 interface module is for use within a standard 1A2 key telephone environment. A number **of options** are available with regard to interface methods, control panels, etc. Please contact **us** for details.

In addition, the "Super" Auto-Answer PCB module may be configured ~~so~~ that the Telos One **may** be connected directly to 1A2-style telephones with the telephone itself being **used as** the line selection device.

In some cases, the Telos One **may** be interfaced to "electronic" telephone systems. There is a tutorial on these phone systems included later in **this** manual which should be helpful to those who wish to do this.

1.2 SPECIFICATIONS

System

True digital. **Second** generation Texas Instruments **TMS320C25** processor. **8 kHz** sampling rate. Internal digital input and output **gain** processing, filtering.

Trans-hybrid Loss

>40 dB with pink noise or voice **as** test input. Test set-up **as specified** in our *Telephone Q&A*. **All dynamic enhancement processing is switched off**. With the ovemde and output expander **functions** switched-in, trans-hybrid **loss** is enhanced by approximately 12 dB.

Send Level to Phone Line

-10 dBm average level. Maintained by internal digital AGC.

Frequency Response (caller to output)

200 - 3400 Hz \pm 1dB.

Noise and Distortion (caller to output)

Distortion: <.5% **THD + N**. 1 kHz; **caller** levels from -48 to -8 dBm.
Signal-to-Noise: >60 **dB**. Referred to -18 dBm phone level. >72 **dB** ref to 0 dBm phone line level.

Send Audio Input

XLR female connector. Active **balanced**. Accommodates **-24** to +12 dBm levels in LINE mode; **-68 to -35 dBm** in **MIC** mode. Front panel screwdriver level adjust.

Caller ~~Audio~~ Output


XLR male connector. Active differential. Output levels to +14 dBm depending upon caller telephone line level and adjustment of front panel level adjust. Will drive 600 Ω .

Aux/Mix Output

XLR male connector. Active differential. In **AUX** mode, this output is **an** isolated second output. In **MIX** mode, **this** is a combined send and caller output. **INPUT to MIX Output specifications: Unity gain;** <.04% THD; +12 dBm clip point.

SECTION 2 INSTALLATION

Telos ONE plus ONE - INSTALLATION 7

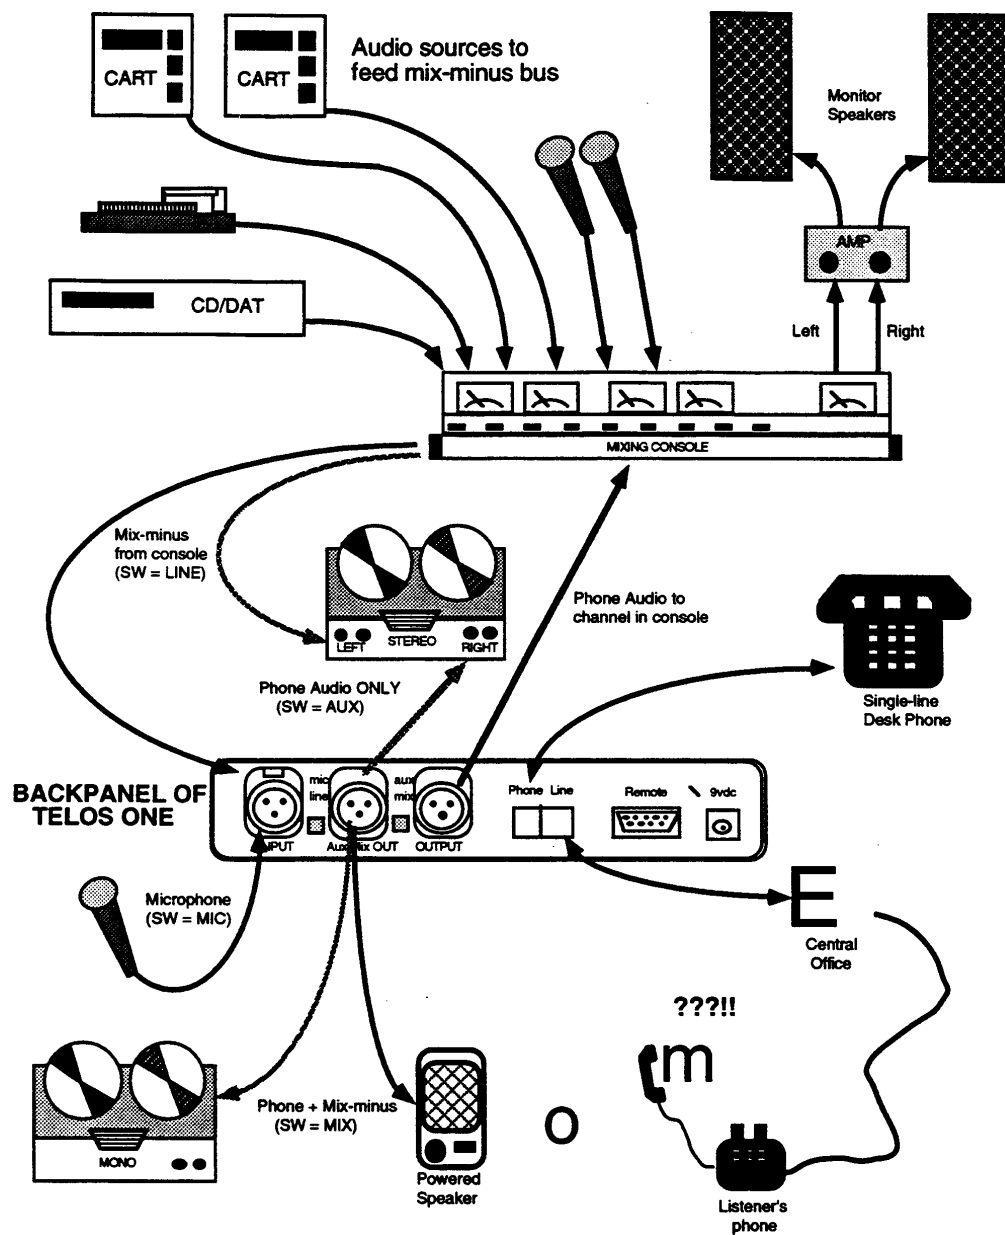


8 Telos ONEplus ONE - INSTALLATION

2.1 AUDIO

The drawing on the preceding page shows how the unit may be incorporated into an on-air **studio** environment.

2.1.1 Mix-minus

The Telos One-plus-One send inputs should be fed *mix-minus* audio. That ~~is~~ the *mix* of all the sources you want to feed the phone *minus* the hybrid output itself.

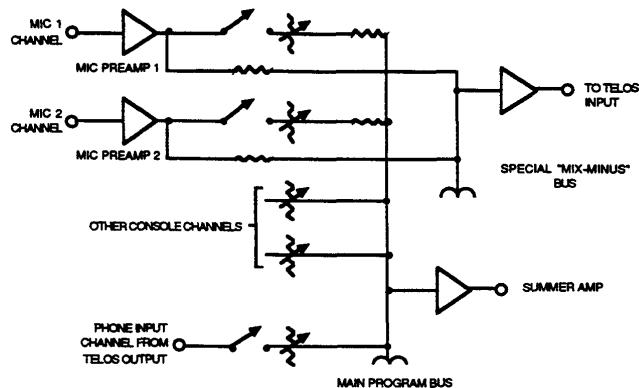

Broadcast Consoles

Most modern broadcast consoles make some provision for mix-minus. The best allow selective feeds to the telephone system. This is useful since you sometimes want only one mic feeding the phone, sometimes you want three or four **mics** (during the morning show, for instance), and sometimes you want to feed cart **machines** when callers need to hear and react to contest effects, etc.



User-Provided Mix-Minus

For a simple installation, you can just take the patch send or pre-**amp** output from the mic channel to feed the phone. **This** works well, but doesn't have much flexibility. One approach which allows more control is to **use an** outboard mixer to combine sources **as** desired. All of the desired sources are paralleled into the on-air board and the mixer and the mixer's output feeds the hybrid.

Internal Mix-Minus in the ONEplus ONE

The two hybrids in the One-plus-One unit may be configured so that a single **mix-minus** feed may be **used** for both hybrids, with each hybrid's output fed to the other's input *internally at unity gain*. Both hybrid **outputs still** function independently.

The internal **mix-minus** cross-couples each **hybrid's** receive audio to the other's input and **sums** the user-provided **mix-minus** to the inputs. The user **mix-minus** must have NO hybrid audio **mixed** in it. Five jumper pins are **located** on the connector board, marked JP1. Move **all** five jumpers from the "2 HYBRIDS" position to the "MIX/MINUS" position. Then feed your **mix-minus** to the #1 hybrid input. The input to the #2 hybrid is disabled. Both input trimmers on the front panel function normally. The cross-coupled hybrid audio is **fixed** at **unity** gain, **relying** on the **output** AGC to keep levels OK. The block diagram below and schematics should help to make all of this clearer.

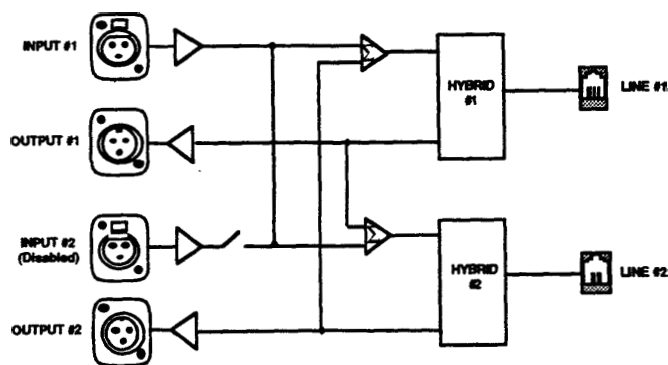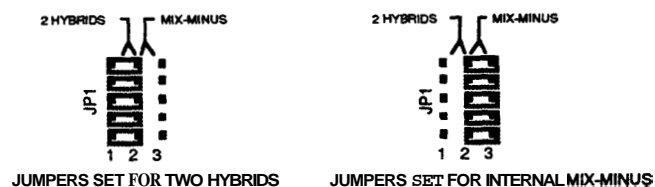

Internal Mix-Minus Scheme

A Good Idea ...

Here's a **useful** scheme for stations which do a lot of taping of calls for later play on the air. The **mix-minus** goes into the left channel of the studio tape machine, while the right channel gets fed **from** the hybrid output. The result is a two-track tape with the announcer and caller audio separated. When you play back on the air, you set the console input to mono and adjust the relative balance as desired. You also have a tape which is easier to do production from for contest squeals, etc.


2.1.2 INPUT AUDIO CONNECTION

The input has the following characteristics:

- Active balanced.
- Approximately $2K\Omega$ impedance.
- Pin 1 is ground and pins 2 & 3 are the balanced audio inputs.

Unbalanced sources **may** be used by connecting pins 1 & 2 to the source ground while the signal hot is connected to pin 3.

There **are** internal jumpers on the hybrid board to select line or mic level for the inputs. **On** HDR3 jumper pins 1 & 2 for line level; jumper pins 2 & 3 for mic level. Be sure to move **BOTH** jumpers when **changing** this function.

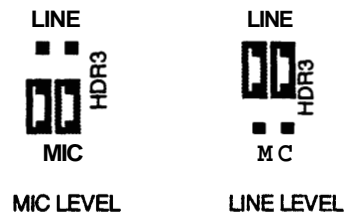

- With jumpers **set** to **LINE**, input level is **-24 to +12 dBv**
- With jumpers **set** to **MIC**, input level is **-68 to -35 dBv**

2.1.3 OUTPUT AUDIO CONNECTIONS

There are two separate and independent active differential audio outputs each with the following characteristics:

- Active balanced.

- Output level **vary** from approximately -20 dBm to +10 dBm depending upon **gain** control adjustment, caller level and whether or not the AGC is engaged.
- **Pin 1 is ground. Pins 2 and 3 are the balanced signal outputs.**

If an unbalanced output is required, connect between ground **and** either of the hot pins. Do not ground the unused hot pin.

Note that the output level meter is before the gain control.


Main Output

Caller audio appears on each of the MAIN outputs.


AUX/MIX Output

The AUX/MIX output **is** either an extra isolated AUXiliary output or a MIX of the send and caller signals.

Internal jumpers on the hybrid circuit board, on HDR4, select which of the **modes** is to be enabled. Jumper pins 1 & 2 to get the AUX **function**, pins 2 & 3 for the MIX **function**.

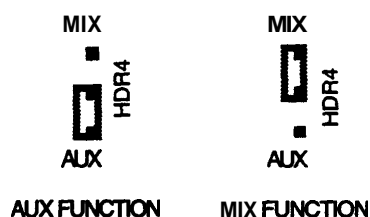

When in the **MIX** mode, the input is passed to the **mix** output at **unity** gain. Note from the block diagram below that the pass-through gain is **not** affected by the input or output **gain** controls. However, since the output gain control **does** affect the caller level in the **mixed** output, it **can** be **used** to adjust the balance between the send and caller signals.

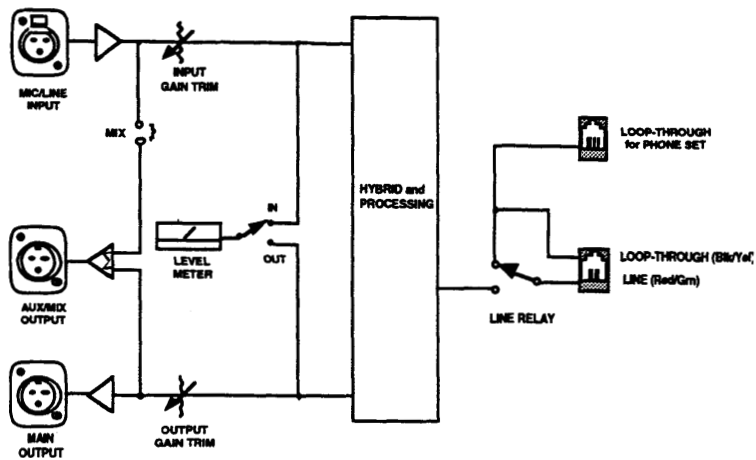

Audio Signal Flow (Each Hybrid)

2.2 CONNECTION TO THE TELEPHONE LINE

LINE and PHONE Modular Jacks

Phone connections are made via the standard **modular** jacks on the rear panel.

Each LINE jack is to be connected to **an incoming** central office telephone line. The **two** center pins (**red** and green) are the Telco connection, while the two **outer** pins (black and yellow) **are** a loop through connection which pass the phone line **through** when the hybrid is not active.

Each **PHONE** jack provides another loop-through connection which **also** passes the phone line when the hybrid is not active. It is normally used for connection **of a desk set** phone.

2.3 REMOTE CONTROL

Female DB15-type connectors on the rear panel provide access to control functions. **This** connector's functionality and pin-out depends upon whether the "Super" Auto-Answer PCB module is

installed. (When the **SAA PCB** is installed, the rear panel DB15 is internally connected to it, and **the on/off commands** and other functions are **passed** to the hybrid from the **SAA as** required. When the **SAA** is not installed, **the rear panel DB15 goes** directly to the hybrid.

Without the SAA installed, **OFF** and **ON** control requires a momentary closure **to** ground. It is a standard TTL input pulled-up with a **2.2 K Ω** resistor. Thus, it may be connected directly to switches or may be driven by **an** open collector or TTL-compatible logic output **as** desired.

If the "Super" Auto-answer board is installed, refer to its manual section for details on remote control operation.

REMOTE CONTROL PINOUT/FUNCTION		
IF PLUGGED TO SUPER AA PCB		IF DIRECT TO HYBRID PCB
1	AUTO control input	AUTO button
2	DROP control input	OFF (paralleled from switch)
3	+5VDC	+5VDC
4	D8 DTMF output	n/c
5	D4 DTMF output	n/c
6	D2 DTMF output	n/c
7	D1 DTMF output	n/c
8	SCL	N.O. A-lead contact
9	SEIZE control input	ON (paralleled from switch)
10	Digital Ground	Digital Ground
11	tine Mode output	A-lead wiper contact
12	Auto Mode output	AUTO LED
13	DTMF Data Valid	n/c
14	n/c	n/c
15	SDA	N.C A-lead contact

2.4 POWER INPUT

The **ONE** plus ONE **uses** a universal input switching power supply which accepts AC input at either **50/60 Hz, from 90** to 260 volts without any user selection being required.

The line **fuse** is located on the supply **PCB**.

SECTION 3

OPERATION

Telos ONE plus ONE - OPERATION 15

3.1 FRONT PANEL CONTROLS



ON/OFF/AUTO Pushbuttons

When the ON button is pressed, the phone line is *seized* and the system sends a burst of white noise down the line, allowing the hybrid to adapt to the phone line prior to the *start* of conversation. During *this* time, the outputs *are* muted.

At the conclusion of the mute/adapt period, the output is enabled and the conversation *may* proceed.

When the OFF button is pressed, the phone line is released.

The AUTO button is a momentary button that, when a "Super" Auto-answer board is installed, toggles the unit in and out of the auto answer/release mode. Its accompanying LED indicator illuminates when in *auto* mode. (If the "Super" Auto-answer board is not installed, this button and LED is brought to the rear panel remote connector and may be used for any desired external function.)

Output Processing: Override

This pushbutton engages two independent **functions**: the *culler ducking* and the *acoustic ducking* function. In most broadcast applications, you will find that engaging the override function results in better overall performance.

Caller Ducking

This function operates in the caller audio path. When active, there is approximately 6 dB of ducking applied to the caller audio when *the* announcer speaks. However, very little change in caller level will be noticed due to the very high speed operation of the duck function and the *masking* provided by the presence of the *send* audio.

The purpose of **this** function is twofold

- *Aesthetic Preference.* Many air talents prefer the effect of having some control over the caller when they speak.
- *Improvement of "dynamic" Trans-hybrid Loss.*

Acoustic Ducking


This function operates in the send audio path. The acoustic ducker works by reducing the **send** (announcer) signal dynamically when the caller speaks.

The acoustic ducker is a used to prevent feedback when open speakers are being used to monitor callers. *Also*, since **an** open monitor causes callers to hear themselves fed back **via** the acoustic path **from** the speaker to the announce mic, **this** function has the additional benefit of allowing the caller to perceive a more **natural** sounding conversation.

The time constant is very fast, **so** the effect of the acoustic ducking usually is not be noticed by the caller. The only disadvantage might be that the announcer may be less able to break in on a caller who is insisting upon shouting **on**.

Output Processing: AGC

The telephone dynamic **gain** processing is enabled with this pushbutton. The output processing includes both **an** automatic gain control **and** a smart noise gate / downward **expander function**.

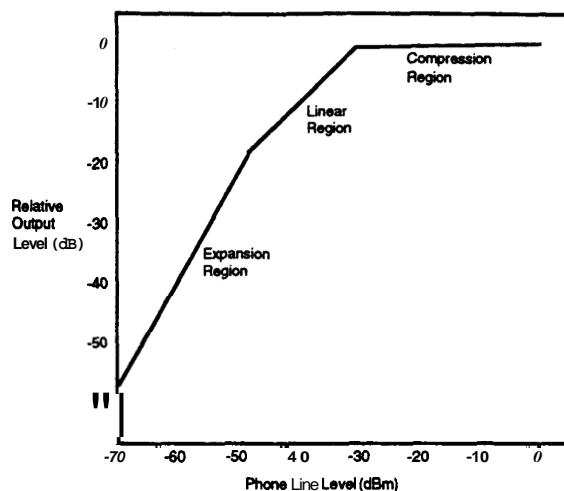

As can be seen in the graph **which** shows the relationship between telco line level and the Telos One output level, the AGC **maintains** a constant output level when the phone **line** level varies between approximately -30 and 0 dBm. Below approximately -48 dBm, a gentle **noise gate**/downward expander operates to reduce residual hybrid leakage and phone line noise.

- According to AT&T statistical studies **of** the USA telephone network, the average level found on standard phone lines **is** -16 dBm. *In our experience high-volume "choke network" lines generally have poorer levels.*

3.2 METERING AND LEVEL ADJUSTMENT

The meter mode pushbuttons select the desired **function**:

- Input level
 - Input gain **reduction**
 - Output level
 - Output gain **reduction**
- The input level metering is after the input gain control. After selecting MIC or LINE level, adjust the trimmer marked "IN" to **get** a "0" reading **on** the input level meter (G/R -LEVEL button out,

IN-OUT button in) while audio is present on the **INPUT**.

Turning **this** trimmer up much past the "0" LED *will not* increase the send level to the phone line due to the digital AGC! Overdriving the input may result in distortion and very **poor** hybrid performance!

- The output level meter is placed *before* the output gain control. This is *so* that the level may be adjusted to equipment downstream. The Telos' output level meter (G/R **-LEVEL** button out, IN-OUT button out) shows caller level. Adjust the trimmer marked **"OUT"** on the hybrid for a **normal** (0 VU) reading on your equipment while audio is present on the phone line. Dial tone is OK for **this**, but keep in mind that dial tone level is about 6 dB hotter *than* voice.

Note: When the AGC button is switched out, the meter reads the telco line level and thus may be used to determine if there is a phone line level problem. The meter's 0dB indication corresponds to a phone line level of approximately -15 dBm.

3.3 FEEDBACK CONTROL

Sometimes, even with the exceptional trans-hybrid **loss** produced by the digital process, trouble with feedback may occur when the system is being used with an open speaker. Generally, **this** happens only with poorer phone lines, or with very weak callers **requiring** lots of **gain** in the phone-to-speaker path.

Some **suggestions** for solution of **this** problem:

1. Enable the Telos **OVERRIDE** function.
2. When mic processing is being used, connect the hybrid input in such a way that it gets the **unprocessed** mic signal. The problem here is that the mic processing combines with the internal Telos input AGC to increase **gain** in the feedback path when no announcer audio is present. Depending on the mic processor, the feedback **margin** could be reduced by many dB. The Telos internal AGC **has** a smart adaptive gate to prevent inappropriate **gain** increase, but it is thwarted by additional processing. If it is not possible to wire around the processing, **try** to **set** the mic processing gate function **so** that the **gain** is not "sucked-up" during pauses. You might **also** try reducing the input level to the hybrid. The send level will still be OK, since the AGC **has** considerable range, but the system won't

have **as** much room to reach for **gain**. In some difficult ~~cases~~ it may be desirable to disengage the Telos *output* AGC function since it could reduce feedback margin in the same way input AGC does.

3. **Try** repositioning the **mics** and/or speaker. Of course, it also helps to use **mics** and speakers that are directional. In typical broadcast studio application, EV **RE-20s** and Shure **SM-7's** have proven appropriate.

4. Add equalization to the monitor path. Acoustic resonances usually cause pronounced peaks in the "feedback response" of a **sound** system. Since ~~the~~ largest peaks generally **occur** at just a few frequencies, reducing system gain at these frequencies with a graphic or notch **EQ** helps tremendously.

5. If necessary, soften acoustic **reflections** in your studio by adding **curtains** or wall treatment.

The foregoing is intended to help in those situations where you **must** have an open speaker. Whenever possible, it is best to use headphones to hear callers. When you have an **open** speaker, the on-air phone audio **has** both a **direct and** an acoustic path * from the speaker to the announce **mic(s)**. Depending on the relative levels, phone audio **quality** may suffer.

Generally, the best scheme is to have the phone monitor speaker mute when the mic is turned **on**. If you have the announce mics active to the phone system input even when the **mic** channel is switched off, the system can still be **used** like a speakerphone when taking **calls off** the **air**. **When** the call is to be **used** on **air**, the announce **mike** is on, **so** the speaker is muted.

SECTION 4

TECHNICAL DATA and TROUBLESHOOTING

Telos ONEplus ONE - TECHNICAL DATA and TROUBLESHOOTING 21

4.1 OVERVIEW

Philosophy

In the past few years, the nature of broadcast engineering **has** changed considerably. At many stations, the engineering staff **has** been reduced in size and new responsibilities have been added. At the same time, equipment has gotten more complicated and specialized. Thus, many practitioners of the broadcast electronic arts are forced to become **systems** engineers, emphasizing equipment application rather than component-level troubleshooting.

This is probably a positive development since it really would be impossible for a station engineer to fully understand the internal nuances of all the wonderful new high-tech stuff that is now available to improve station operations! Also, as equipment becomes more sophisticated and specialized, stocking spare parts for every eventuality has become difficult.

Thus, we don't really expect that much component-level troubleshooting will occur. *So*, to support you when you need help, we keep spare boards available for fast overnight shipping. In most *cases*, we will swap boards with you at no cost. In the five years since we introduced the Telos **10**, we have yet to charge for a routine repair.

However, despite the comments above, we do provide full schematics and component level troubleshooting information in case you have the need or desire to tackle a repair (or modification) yourself. Another reason we provide the information is to satisfy your curiosity. If you are like me, you probably just *have* to know what's happenin' inside the fancy box. *So* we tell you.

General Troubleshooting Information

CAUTION

The installation and servicing instructions in this manual are for use **by** qualified personnel only. **To** avoid electric shock **do not** perform any servicing other than that contained in the Operating Instructions **unless** you are qualified to do *so*. Refer all servicing to qualified service personnel.

Access to the PC Boards

1) The top cover is removed with a 1/16" allen key. This will expose all the circuit boards. Refer to the chart to identify the various PC boards.

2) The power supply and AC receptacle are covered by a **small** piece of clear plexiglass. Do not remove this protective cover or place your fingers under it unless the ac plug is disconnected from the unit! When the cover is removed the power supply has exposed live surfaces!

If the hybrid PC board is to be removed, continue as follows:

3) Unscrew the four Phillips screws located near each corner of the board. If a "Super" Auto-answer board is installed, unscrew its mounting hardware and gently lift it off the headers. A mounting bushing must be removed, too.


If the rear panel is to be removed:

4) Unscrew the DB15 connector retaining stand-offs.

5) The six XLR connectors have retaining screws which have to be turned in order to be released. Do this as illustrated below.

XLR CONNECTOR RELEASE:

Insert a small screwdriver into the holes in the connectors, shown at right. Turn the screwdriver about one eighth of a turn counter clockwise to release the connectors. A small screwdriver such as the Xcelite R3322 or R3324 need to be filed down some to fit the slots. Remember to retighten the XLR latches when replacing the Telos ONE PCB. This will ensure correct support for the XLR connectors on the PCB.

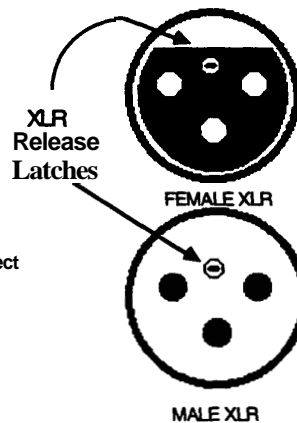

Desoldering

While we socket the ICs that have the greatest potential for failure, most of the Telos One ICs are soldered in. That's because most of the time the socket is more likely to cause trouble than the IC. This is of no consolation when one of the soldered ICs appears to have failed. When you need to replace a soldered-in chip, the right tool is essential. We use a vacuum desoldering system made by Pace (the MBT-100) and highly recommend it. Cost is about \$450 - worth it if you do much PC board troubleshooting work. The only other real alternative is to clip the leads from the top and remove the solder from the holes with solder-wick. We've not had much luck with the non-heated, manual vacuum desoldering devices such as the one sold by Radio Shack. We do not recommend that newly soldered connections be defluxed.

Digital Signal Processing

Because the Telos One hybrid makes use of digital signal processing for functions traditionally done in analog, the hardware design of the hybrid is relatively uncomplicated and straightforward. In many ways, the hardware is a "textbook" implementation of a general-purpose processing system.

As in any DSP system, the input signals are passed through anti-aliasing low-pass filters to remove signal components above the Nyquist frequency. In this case, the Nyquist frequency is 4 kHz and the ultimate sampling rate is 8 kHz.

After A/D conversion, the signals are presented to the TMS320C25 DSP processor, where software performs the hybrid and processing functions.

Then, the signals are converted back to analog and filtered to "re-construct" the desired analog audio.

Notation

Whenever a slash (/) is used after a signal designation in the text or on the ~~schematics~~, an active low is signified.

4.2 DIGITAL SECTION

4.2.1 THEORY OF OPERATION

The Processor and Bus

(Refer to the Processor & I/O Logic Schematic in the DRAWINGS section of this manual.)

The **TMS320C25** is a specialized high-speed processor intended for signal processing applications. Despite its unique properties, it operates much like any other microcomputer from a hardware standpoint.

Program store is provided by the two high-speed EPROMS (**U2** & **U3**). These connect to the bus and are selected directly by the **320C25's** assertion of **STRB/**, **PS/**(Program Select/), and **R/**(W/).

U6, an **AC138**, provides the chip select signals decoded in the usual microprocessorway by expanding the lower address lines.

CS7/ is used to trigger a watchdog timer, **U7**, at regular intervals. If processor operation should fail, the watchdog reacts by asserting **RES/** to the processor, thus restarting it. The watchdog also provides a reliable reset when the +5 V power supply drops below 4.5 V.

U5 is an output port used for the meter as well as for the control input to the CODECS **U12** and **13**.

U4 is an input port which is used to communicate button status to the processor.

The CODECS have logic outputs. One of these is used to operate the line and "A" relays as well as the ON and OFF LEDs. **Q1** provides current drive to the relay, while the appropriate **U11** sections drive the LEDs.

CODEC Interface

The CODECS are interfaced serially to the **320C25** through its on-board serial port. Each CODEC is programmed to occupy a time slot on the serial bus.

Clock and Timing

The **timing** chain starts with a **40 MHz** clock oscillator module. The **40 MHz** output is fed directly to the 320C25. The HC390, U9 divides the **40 MHz** to **2 MHz** in order to generate the **CLKR** and **CLKX** signals for U1 **and** the CODECS. This is the data clock.

The HC393 further divides the **signal** to 8 kHz in order to generate the Frame-Sync input to the **DSP** and CODECS.

4.2.2 TROUBLESHOOTING THE DIGITAL SECTION

Check the power supply.

Check the **40 MHz** oscillator output and the divided-down clock signals to see that they are OK.

Unlike TTL, the CMOS logic ICs used in the Telos One Hybrid should have a nice almost rail-to-rail **output**.

Make sure that all of the required signals are getting to the CODECS and that the CODECS are **outputting** data.

None of the logic section ICs should get hot, ~~so~~ if any is, you've found the problem. ~~On~~ rare occasions, a **CMOS** chip **may** latch up and **get** hot, but recover **and** work normally when power is removed for awhile and restored.

Check the 16 **data bus** lines to **see** if any are shorted. They should all exhibit lots of activity, ~~as~~ should the lower **address** bits.

4.3 AUDIO SECTION

4.3.1 THEORY OF OPERATION

(Refer to the Block Diagram and the audio section schematic in the **DRAWINGS** section of **this manual**.)

The audio section **is** simple and straightforward. Everything should be self-evident **from** the schematic.

U15, a 5532 op-amp, provides an active hybrid function. One section drives the phone line while the other is configured as a differential amplifier in order to subtract some of the send audio before the digital process completes the job. RF3 is a special pi-filter network used to remove RF interference.

The audio input section uses one half of U16, another 5532 op-amp. This is a standard active differential configuration. SW8 changes gain for either mic or line level inputs levels. RF1 and RF2 provide RFI filtering.

The other half of U16 is used in a circuit which provides the output gain control and a single pole of low-pass filtering for de-emphasis. (The pre-emphasis is a digital function provided within CODEC U13).

U17, another 5532 op-amp, provides the balanced output for the AUX/MIX output port. One section operates as a summing amplifier; one of the summer inputs is always connected to the hybrid output while the other is switched by SW9 to either ground or the input audio signal.

U14 is a special purpose IC which has two low-pass filter sections as well as a balanced 600 Ω line driver. The U14 line driver section provides the main audio output.

4.3.2 TROUBLESHOOTING THE AUDIO SECTION

Using a scope for signal tracing should do the trick. All chips should run cool except for non-Signetix brand 5532s - if is normal for these to run hot.

4.4 POWER SUPPLY


The Telos ONE plus ONE uses a 40W +12VDC universal input power supply. Refer to the appendix for manufacturer's data sheet. Each circuit board that requires power locally regulates the +12VDC down to the required voltage. Each board has its own regulators:

- **+5v DIGITAL** Powers the processor and other digital ICs. Regulated by three-terminal regulator VR3. A gold cap, C3, holds up the power voltage in the event of a brief line voltage dip.

+5v ANALOG Powers all the op-amps and the CODECS. Regulated by VR2.

-5v ANALOG: Powers op-amps **and** the CODECS. Uses U18, a switching inverter, in order to generate a negative voltage which is then regulated by VR1.

4.5 INTERNAL CONNECTIONS

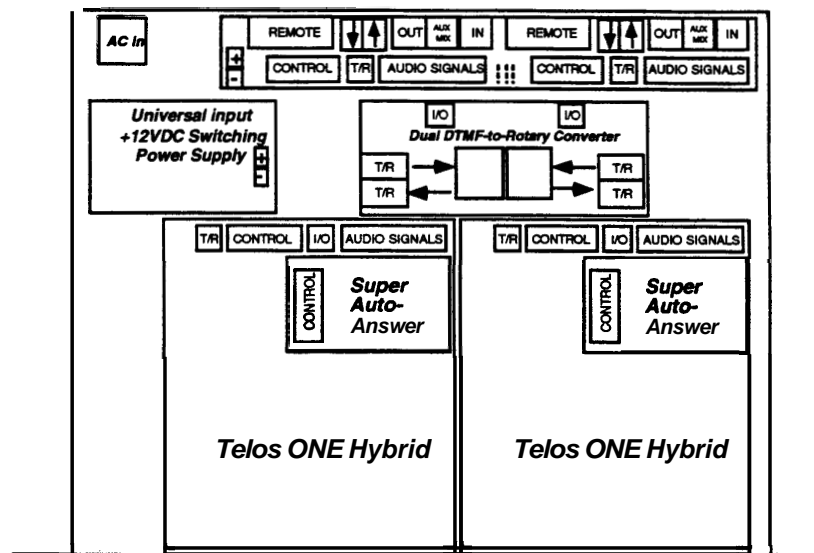

Telos ONE plus ONE circuit board and connector identification diagram

T/R

The jacks marked "T/R" are the "tip and ring" of the telephone line. A four-conductor cable routes the **main telco and loop-through signals** from the rear panel connector board to the hybrid. If the DTMF-to-Rotary converter board is **used**, the connector board cable **goes to** the **rearmost** RJ11 jack on the converter board; the other RJ11 jack then **goes** to the hybrid. That is, the converter board **goes**

in series **with** the phone line.

CONTROL

The connectors **marked CONTROL** route various control signals from the hybrid to the rear panel 15-pin D-sub connector. This cable **runs** from the connector board to the hybrid. If a "Super" auto-answer card is being used, the **CONTROL** cable on the connector board is plugged to the "Super" auto-answer board's connector.

I/O

This connector routes send audio to the DTMF-to-Rotary converter board (for DTMF detection), the ON pin of the auto-answer card (to mute the hybrid during rotary dialing), +12VDC and ground. Not used if the converter board is absent.

AUDIO SIGNALS

Route the audio input, output, aux/mix, mix-minus signals, +12VDC and ground **from** the connector **boards XLRs** and power supply connector.

+/-

This is the power supply connector. +12VDC and ground are brought to the rear panel connector board, which, in **turn**, distributes these signals to both hybrids via their respective AUDIO SIGNALS connector.

J2 to P3,P4 pin #'s	REMOTE CONTROL PINOUT/FUNCTION		
	IF PLUGGED TO SUPER AA PCB		IF DIRECT TO HYBRID PCB
2	1	AUTO control input	AUTO button
4	2	DROP control input	OFF (paralleled from switch)
6	3	+5VDC	+5VDC
8	4	D8 DTMF output	n/c
10	5	D4 DTMF output	n/c
12	6	D2 DTMF output	n/c
14	7	D1 DTMF output	n/c
16	8	SCL	n/c
3	9	SEIZE control input	ON (paralleled from switch)
5	10	Digital Ground	Digital Ground
7	11	Line Mode output	n/c
9	12	Auto Mode output	AUTO LED
11	13	DTMF Data Valid	n/c
13	14	n/c	n/c
15	15	SDA	n/c

AUDIO SIGNALS (J1 to P1,P2)

'AUTO" button	11	aux/mix XLR pin 3
'AUTO' LED indicator	12	aux/mix XLR pin 2
+12VDC	13	input XLR pin 3
+12VDC	14	aux/mix XLR pin 1
GND	15	input XLR pin 1
GND	16	input XLR pin 2
output XLR pin 2	17	extrainput from JP1
GND	18	input to 'IN. LVL" pot
output XLR pin 1	19	extra output to JP1
output XLR pin 3	20	output of U16 pin 7

UO SIGNALS to decoder board (J4 to J3,J4)

1	P3 pin 3 'ON' signal from Super Auto answer board
2	P1 pin 18 Input audio for DTMF converter chip
3	GND
4	GND
5	+12VDC
6	+12VDC

Telos ONE plus ONE Connector Cross-Connect and Function Directory

HYBRID PARTS LIST

<u>Designation</u>	<u>Description</u>	<u>Designation</u>	<u>Description</u>
R1	100R	R33	10KR
R2	100R	R34	39KR
R3	10KR	R35	270K Ω
R4	1KR	C1	2.2 μ F/25 tant
R5	560Ω	c2	2.2 μ F/25 tant
R6	10KR	C3	0.1 Farad Gold Cap
R7	10KR	C4	22pF mono
R8	10KR	C5	2000pF mono
R9	100R	C6	2000pF mono
R10	33KR	C7	.01 μ F mono
R11	10KR	C8	2.2 μ F/25 tant
R12	10KR	C9	2.2 μ F/25 tant
R13	1K Ω /1 $\%_{\text{VO}}$	C10	2.2 μ F/25 tant
R14	1KR/1 $\%_{\text{VO}}$	C11	100 μ F/35 electrolytic
R15	1KR/1 $\%_{\text{VO}}$	c12	1000 μ F/35 electrolytic
R16	1KR/1%	C13	10 μ F/25 tant
R17	100K Ω /1%	C14	0.1 μ F mono
R18	100K Ω /1 $\%_{\text{VO}}$	C15	2.2 μ F/25 tant
R19	1KR	C16	2.2 μ F/25 tant
R20	2.4K Ω	C17	2.2 μ F/25 tant
R21	10KR	C18	01 μ F mono
R22	49.9Ω/1%	C19	0.1 μ F mono
R23	49.9Ω/1%	c20	0.1 μ F mono
R24	10KR	c21	0.1 μ F mono
R25	56KR	D1	1N4730 3.9v zener
R26	1KR	D2	1N4730 3.9v zener
R27	15KR	D3	1N5818
R28	49.9Ω/1%	D4	1N4004
R29	49.9Ω/1%	IND1	100uH toroid
R30	10KR	Q1	2N2222
R31	10KR	RP1	2.2K Ω SIP
R32	10KR	RP2	330 Ω SIP

HYBRID PARTS LIST continued...

<u>Designation</u>	<u>Description</u>	<u>Designation</u>	<u>Description</u>
U1	TI 320C25	J1	Neutrik NC3FDHBAG XLR f
U2,3	27C292-3JL EPROM	J2,3	Neutrik NC3MDHBAG XLR i
u4	74AC244	J4	DB15 female
u5	74HCT374	J3	modular phone receptacle
U6	74ACT138	VR1	7905 -5v reg
u7	DS1232 watchdog/reset	VR2,3	7805 +5v reg
U8	74HC590	Z1	150v ZNR
U9	74HC390	P1,2	10K rt angle multiturn trir
U10	Saronix NCH080C-40Mhz osc	SW1,2,3,4	Alt action switch
U11	74HCT04	SW5,6,8	Mom switch
U12,13	AMD7901CPC CODEC	sw7	Two pos DIP sw
U14	2912A	RF1,2,3	TDK Z7K51R1-05 RF filte
U15,16,17	5532 op-amp	L1,2,3,4,5,8	Green LED LTL-1234A
U18	MAX636 switching inverter	L6,7	Red LED LTL-1224A
T1	Prem #SPT-195 xfmr	L9	Yellow LED LTL-1254A
K1,2	Omron 5v DIP relay		

SECTION 5 DRAWINGS

Telos ONE plus ONE - DRAWINGS 35

DRAWINGS:

Hybrid Signal Flow Block Diagram


TMS320C25 Pinouts

Hybrid Digital Circuits Schematic

Connector Board Schematic

Hybrid Input and Output Audio Schematic


Hybrid Phone and Control Schematic

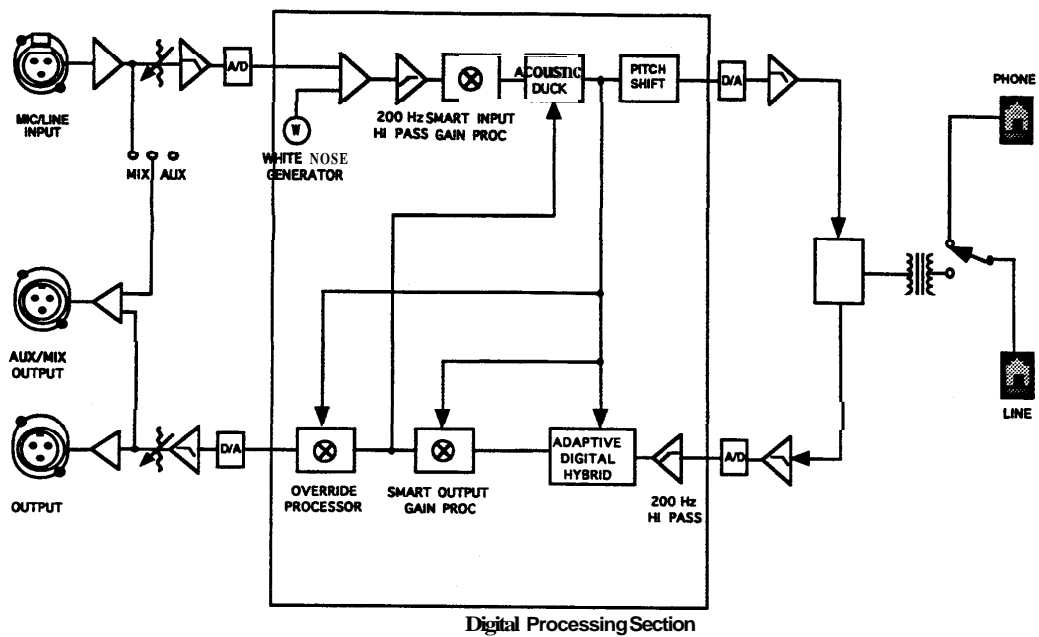

Telos ONE PLUS ONE
Signal Flow Block Diagram


PIN ASSIGNMENTS

PIN	FUNCTION	PIN	FUNCTION	PIN	FUNCTION
A2	D8	C11	CLKOUT1	J10	PS
A3	D10	D1	D4	J11	IE
A4	D12	D2	D3	K1	A0
A5	D14	D10	CLKOUT2	K2	A1
A6	MP/MC	D11	XF	K3	A3
A7	HOLD	E1	D2	K4	A5
A8	RS	E2	D1	K5	A7
A9	CLKX	E10	HOLDA	K6	A8
A10	VCC	E11	DX	K7	A10
B1	VSS	F1	DO	K8	A12
B2	D7	F2	SYNRC	K9	A14
B3	D9	F10	FSX	K10	DS
B4	D11	F11	X2/CLKIN	K11	VSS
B5	D13	G1	INT0	L2	VSS
B6	D15	G2	INT1	L3	A2
B7	BRO	G10	X1	L4	A4
B8	READY	G11	BR	L5	A6
B9	CLKR	M1	INT2	L6	VCC
B10	VCC	M2	VCC	L7	A9
B11	JACK	H10	STRB	L8	A11
C1	D6	H11	R/W	L9	A13
C2	D5	J1	DR	L10	A15
C10	MSC	J2	FSR		

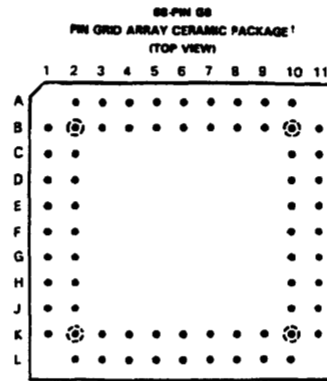



¹ See Pin Assignments Table (Page 1) and Pin Nomenclature Table (Page 2) for location and description of all pins.

TEXAS
INSTRUMENTS

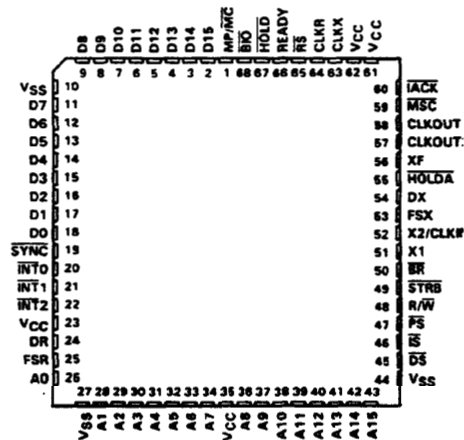


Telos ONE PLUS ONE
TMS320C25 Pinouts

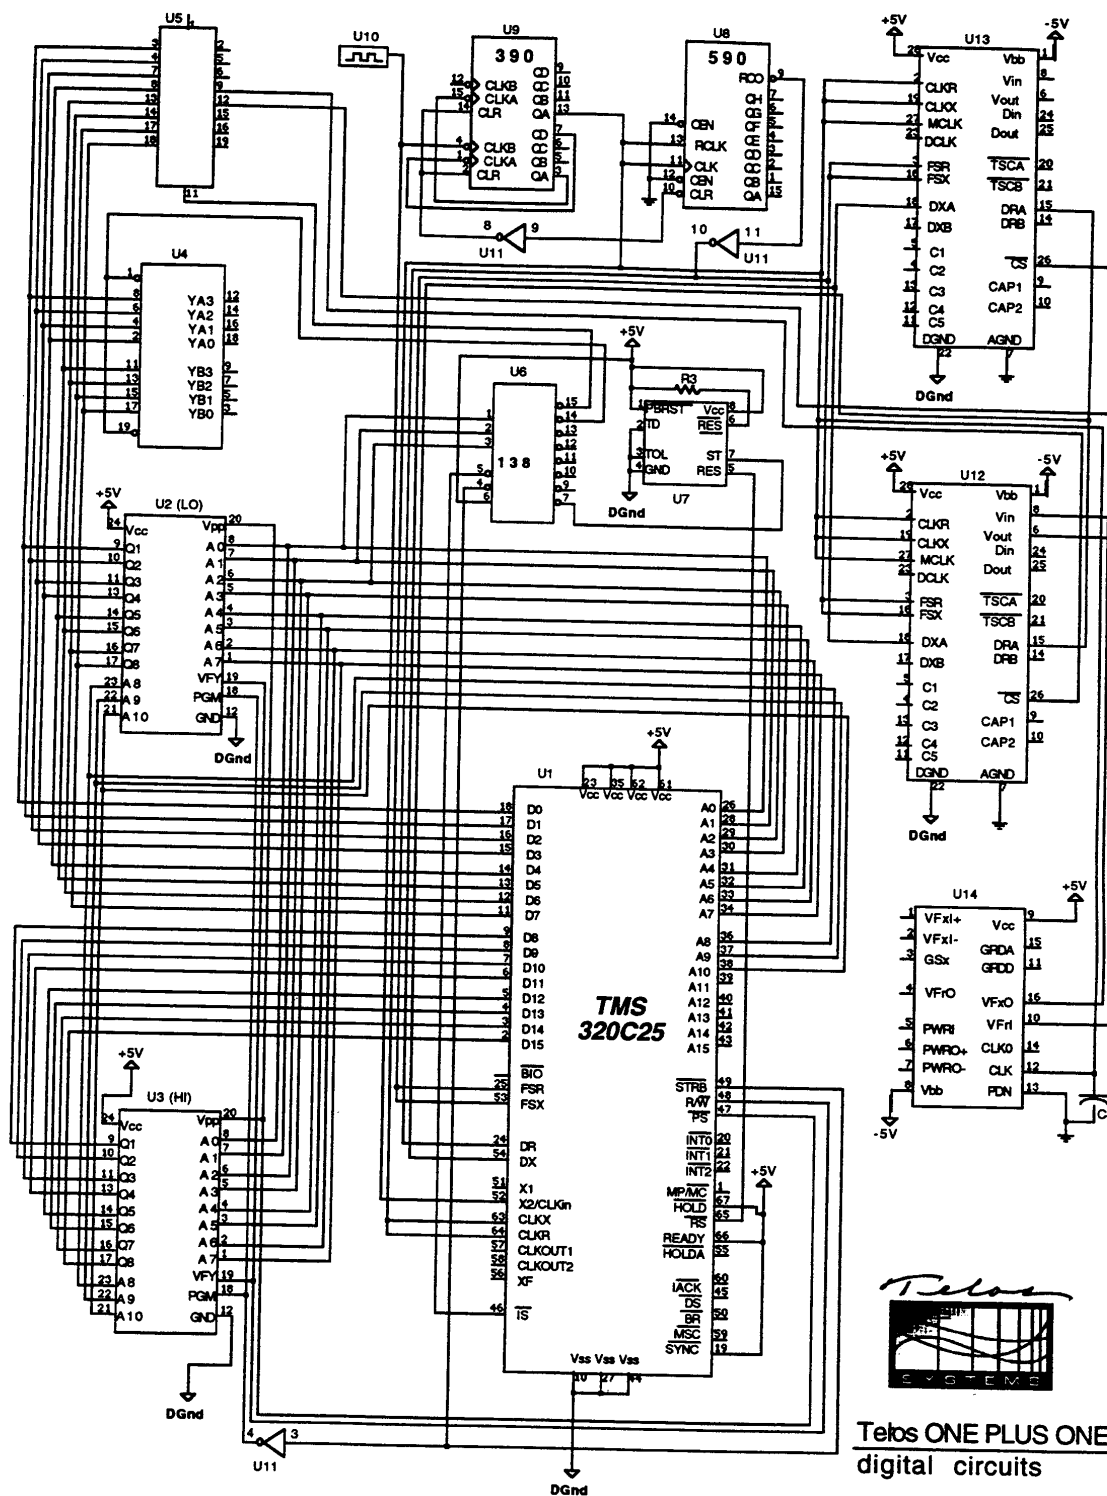


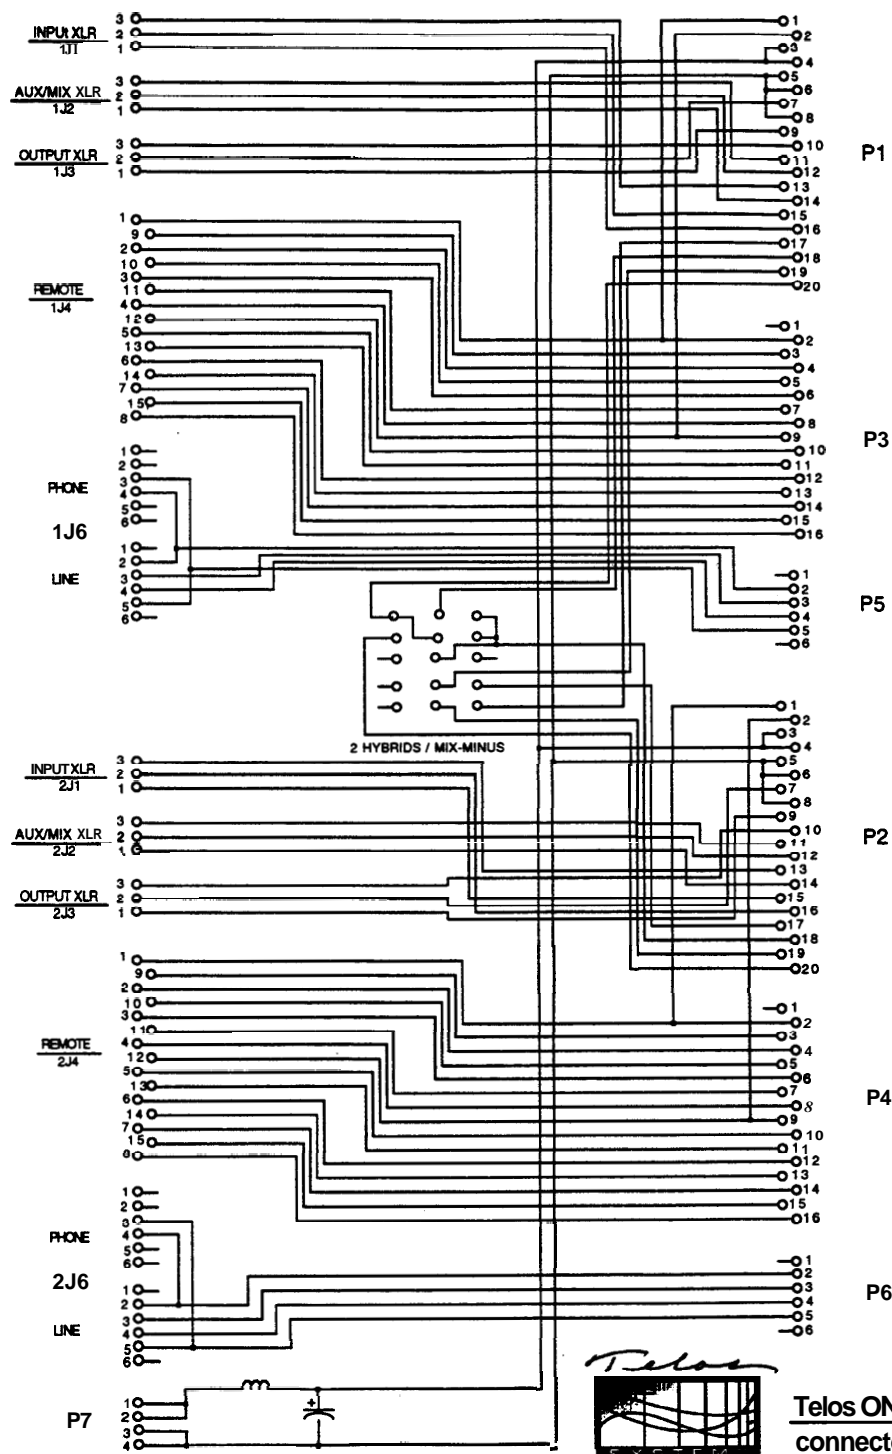

Telos ONE PLUS ONE
connector board

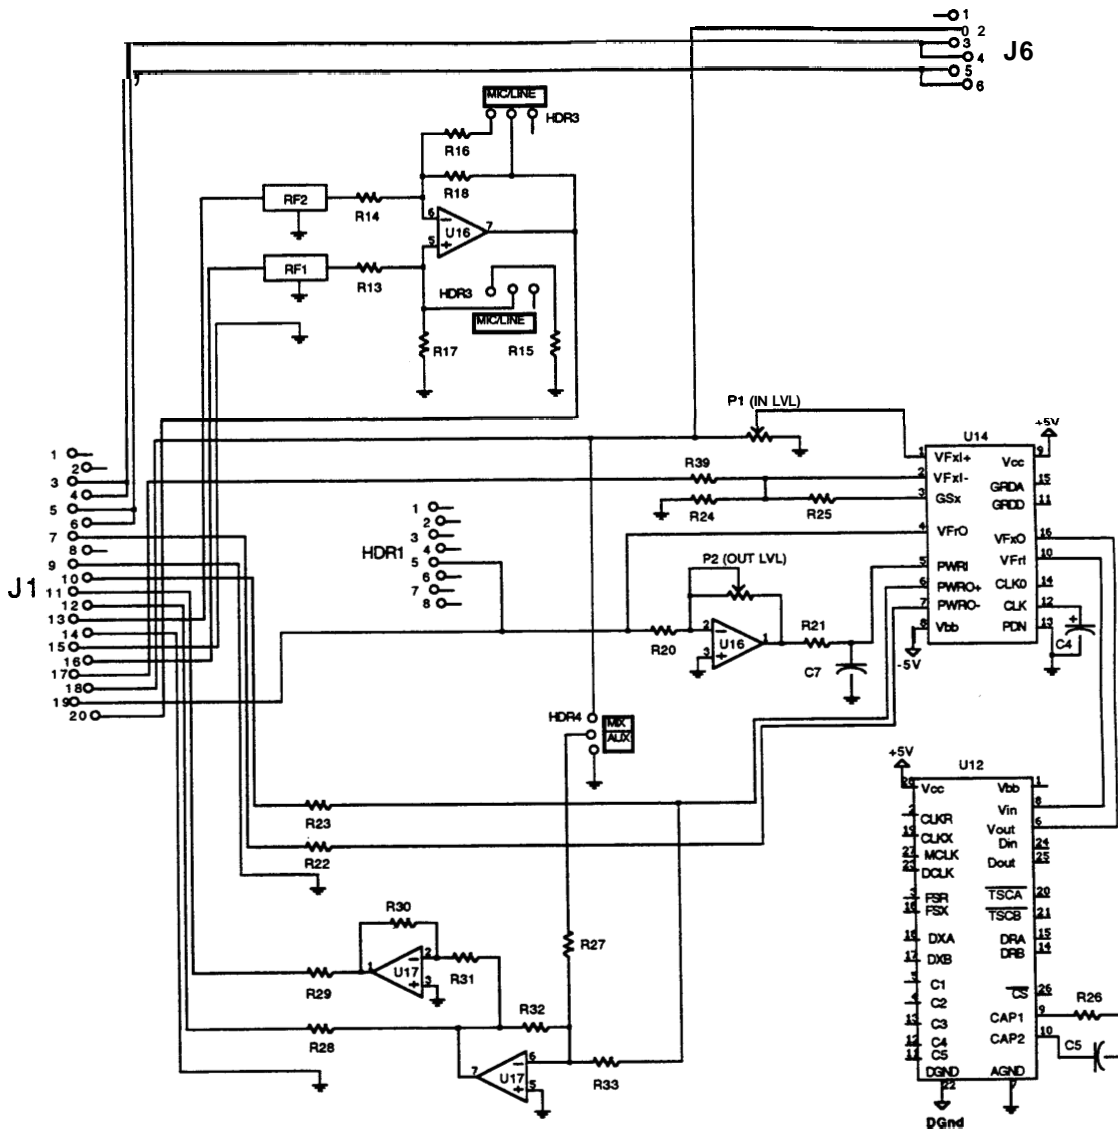

Telos ONE PLUS ONE
input & output audio

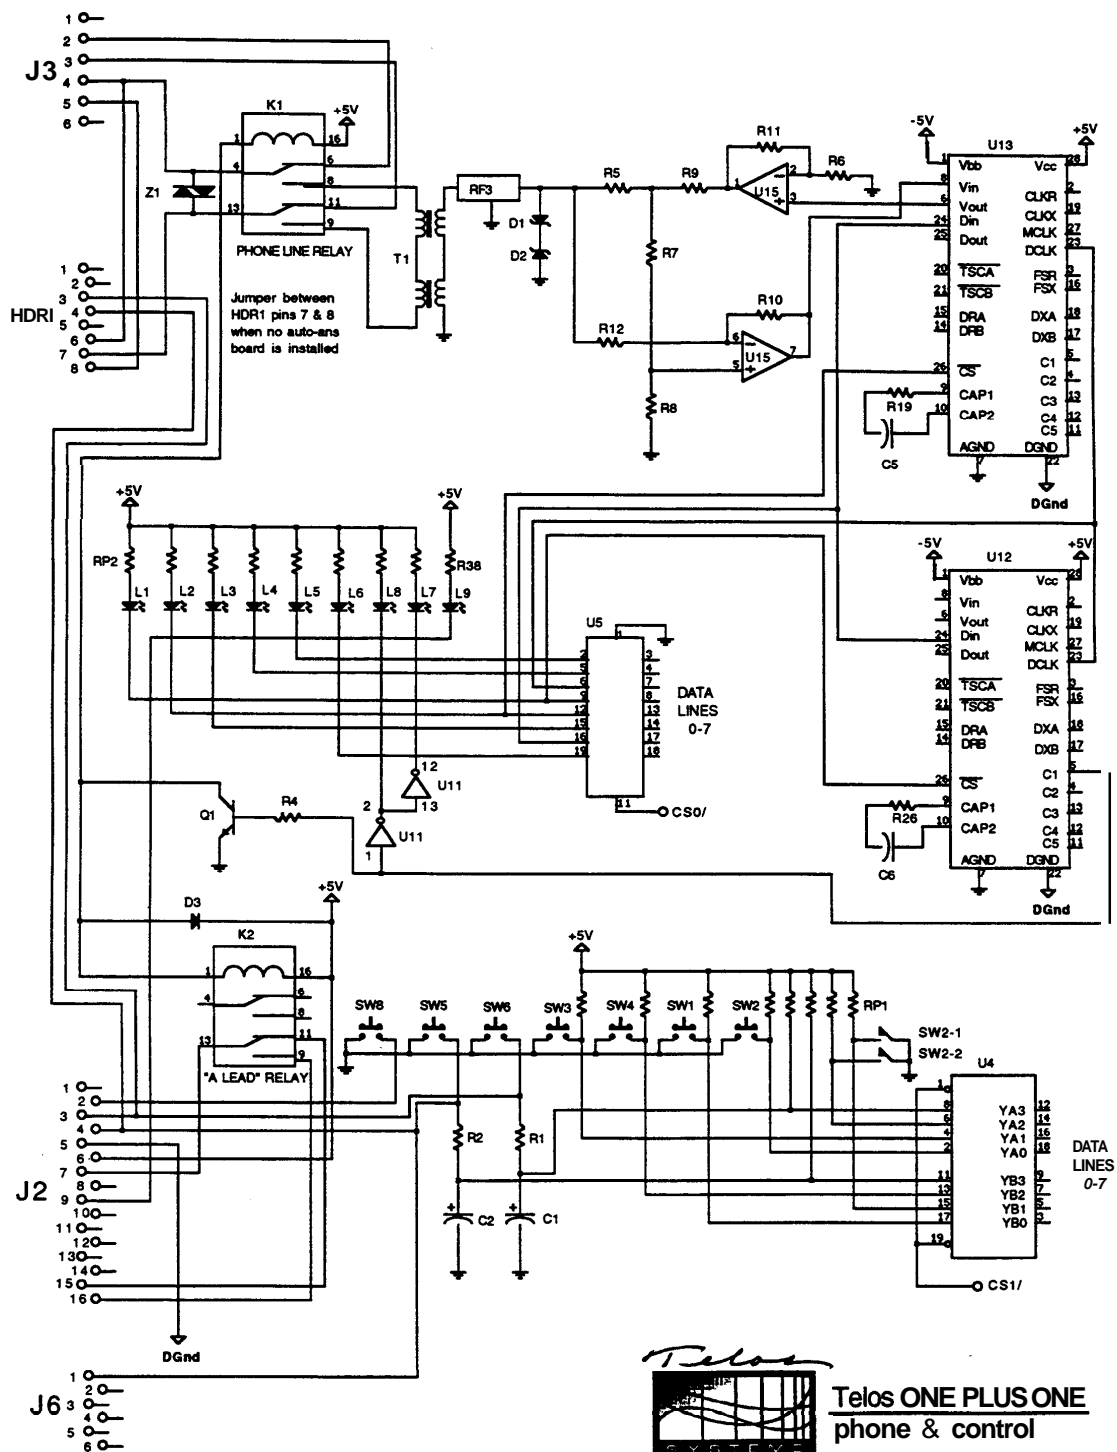

SECTION 6
APPENDIX

TELOS ONE HYBRID: ALTERNATE SOFTWARE VERSIONS

The Telos One is a "true" digital-signal-processing system. That means that most system characteristics are fixed by the software which is contained within ~~two~~ EPROM chips. This provides us with the opportunity to change the hybrid's audio operation to accommodate special or unique ~~circumstances~~ by merely swapping the EPROMs.

A number of special software versions have become ~~more-or-less~~ standard. These are described below. There are, in addition, a few more which have ~~been~~ developed for unusual applications.

If you think you need special software, either the versions listed below or something **really** different, please contact Telos.

Note: If we know or think that your hybrid is to be used for intercom interface applications, we automatically install version 4.X software.

In each case below, there ~~are~~ **two** components to the version number. The number before the decimal point is the series number and defines the basic characteristic, while the portion after the decimal point changes ~~as~~ improvements or minor changes are implemented.

1.X: Normal Telos ONE operation

This is the software normally shipped with Telos Ones. It implements the operating characteristics described earlier in ~~this~~ **manual**.

4.0: Bell Atlantic Teleconference Version

Has limiter on ~~send~~ audio instead of AGC. Symmetrical ducking with about 14 dB on each path. Best for making multi-line conference bridges.

4.x: "ABC-TV Version" - For Interfacing 4-Wire Intercoms

Same ~~as~~ **4.0** but provides 6 dB more send level. ~~Also~~, ducking modified somewhat - favors receive. Widely used with McCurdy, Clearcom and other 4-wire intercom systems. Permits multiple lines to be conferenced without feedback, etc. Telos has

considerable experience in **this** area. Please **call** with your special requests and **unusual** applications.

5.X: The "Dallas" Version.

Developed in response to the very bad phone line conditions which exist in **the Dallas/Fort Worth** and **Miami/Fort Lauderdale** areas. For some reason, these parts of the country have exceptionally bad phone service. Levels **vary** over a **30 - 40** dB range and line impedances are particularly difficult for the hybrid to accommodate. This version adds more ducking in both directions, increases the AGC action, lowers the receive expansion threshold, and alters the adaptive hybrid parameters to effect better trade-offs for bad phone lines.

Outside of **Dallas**, **this** software is for people who:

- 1) Prefer a more of "speakerphone" **switching** effect.
- 2) Prefer a more aggressive **AGC** action on the phone audio.
- 3) Need to accommodate very poor phone **lines** with widely varying levels.
- 4) Have **open** monitor speakers and **are** having **trouble** with feedback

When the phone line impedance is very complex. The Telos ONE's *analog* hybrid then leaks too much during *send* audio, causing the *digital* hybrid to halt adaption. Version 5.x **software** can tolerate more leakage, due to a change in **one** of the adaption parameters. Secondly, a "**see-saw**" ducking effect has been added. That is, the ducking **occurs** on the send path during receive and **on** the receive path during send. The level of the ducking is about 15 dB, yet it has a very fast recovery time and is biased more toward the receive side. The full-duplex operation is not affected, just the level **of** the ducking (about **6** dB with standard software). The expansion threshold level has been reduced **so** lower-level callers don't get expanded down. All **this**, along with Telos' digital pitch shifter and digital **AGC** helps the hybrid adapt better to poor phone **lines**.

6.X: "RTS Version"

This is the preferred version for connecting **RTS** or other 2-wire intercom system **to** the Telos **ONE** phone jack. Stays on continuously. A change in the adapt threshold allows send level to be increased with a resistor for **RTS** operation.

WARRANTY and Application Caution


The Telos One is warranted to **be** free from defects in material and workmanship for a period of **365** days. Written notice of claim must be received by seller within the warranty period. In the event of a defect during the warranty period, **if** customer returns the defective part **or** the Telos One to a place designated by the seller, transportation prepaid, seller at **its** option, will either repair **or** replace the part **or** the Telos One, and such action **by** seller shall **be** the full extent of seller's obligation hereunder. Seller will pay the transportation charges to return the part **or** unit to the customer. Of course, the warranty is void if the unit is subject to misuse, accident, neglect **or** damage.

No other warranties express **or** implied, all **of** which are specifically excluded, including, but not limited to, the warranties **of** merchantability **or** fitness for a particular purpose, shall **be** applicable to any equipment sold hereunder, and the foregoing shall constitute the sole right and remedy. In no event shall the seller **or** **its** agents be liable for incidental **or** consequential damages, or **for** loss, damage, **or** expense directly **or** indirectly arising from use of the products, or any inability to use them either separate or in combination with other equipment **or** materials, **or** from any other cause.

The Telos One Interface is intended to **be** used **with** **FCC** registered protective interface devices.

WE OFFER ...

- ◆ High Volume, low Cost Manufacturing.
- ◆ 90-260 VAC (continuous) Universal Input.
- ◆ Consistent On-Time Delivery.
- ◆ Adherence to Industry Standards.
- ◆ Extensive Engineering Capabilities.
- ◆ Rapid Turn-Around on Custom Products.
- ◆ Price, Delivery and Quality

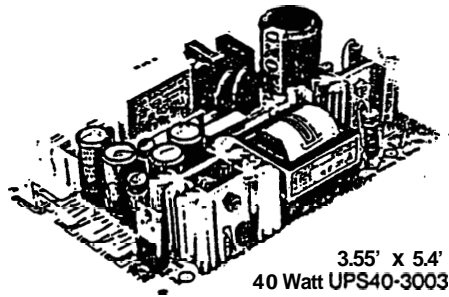

3.55" x 5.4"
40 Watt UPS40-3003

SINGLE OUTPUT MODELS

MODEL NUMBER	PWR	OUTPUT 1	DIMENSIONS (INCHES)	MOUNTING HOLES
UPS40-2051	40	5V @ 8.0A	3.00 x 5.00 x 1.25	4.55" x 2.55"
UPS40-2091	40	9V @ 4.4A	3.00 x 5.00 x 1.25	4.55" x 2.55"
UPS40-2121	40	12V @ 3.5A	3.00 x 5.00 x 1.25	4.55" x 2.55"
UPS40-2151	40	15V @ 2.5A	3.00 x 5.00 x 1.25	4.55" x 2.55"
UPS40-2241	40	24V @ 1.5A	3.00 x 5.00 x 1.25	4.55" x 2.55"
UPS65-1051	65	5V @ 13.0	3.50 x 6.00 x 1.54	4.80" x 3.15"
UPS65-1121	65	12V @ 5.5A	3.50 x 6.00 x 1.54	4.80" x 3.15"
UPS65-1151	65	15V @ 4.5A	3.50 x 6.00 x 1.54	4.80" x 3.15"
UPS65-1241	65	24V @ 2.8A	3.50 x 6.00 x 1.54	4.80" x 3.15"



E133148
UL1950



LR89164
1402C
LEVEL 3




A98290
IEC950




VDE EN60950
APPROVAL
PENDING ON
65 WATT MODEL

20 WATT THRU 50 WATT DUAL & TRIPLE OUTPUT MODELS

MODEL NUMBER	PWR	OUTPUT 1	OUTPUT 2 (Peak)	OUTPUT 3	DIMENSIONS (INCHES)	MOUNTING HOLES
UPS20-2002	20	5V @ 1.0A	12V @ 1.5A (3.0A)		3.00 x 5.00 x 1.20	4.55" x 2.55"
UPS20-5002	20	5V @ 1.0A	12V @ 1.6A (2.0A)		3.00 x 4.00 x 1.20	3.56" x 2.62"
UPS25-1002	25	5V @ 1.0A	12V @ 1.5A (3.0A)		2.00 x 8.00 x 1.00	6.60" x 1.60"
UPS30-4003	30	5V @ 1.5A	12V @ 1.5A (3.0A)	-12V @ 0.3A	5.12 x 2.76 x 1.30	4.72" x 2.36"
UPS30-5002	30	5V @ 2.1A	12V @ 1.8A (3.0A)		3.00 x 4.00 x 1.50	3.56" x 2.62"
UPS40-1002	40	5V @ 3.0A	12V @ 2.0A (4.5A)		2.00 x 7.00 x 1.20	6.60" x 1.60"
UPS40-2002	40	5V @ 3.0A	12V @ 2.0A (4.5A)		3.00 x 5.00 x 1.20	4.55" x 2.55"
UPS40-2003	40	5V @ 3.0A	12V @ 2W (4.5A)	-12V @ 0.3A	3.0 x 5.0W x 1.20	4.55" x 2.55"
UPS40-3003	40	5V @ 3.0A	12V @ 2.0A (4.5A)	-12V @ 0.3A	5.40 x 3.55 x 1.24	4.82" x 3.15"
UPS50-1002	50	5V @ 3.0A	12V @ 3.0A (5.0A)		2.00 x 7.00 x 1.57	6.60" x 1.60"
UPS51-2002	50	5V @ 4W	12V @ 3.0A (5.0A)		3.00 x 5.00 x 1.20	4.55" x 2.55"

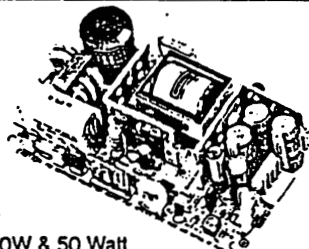

3" x 5"
20W, 40W & 50 Watt

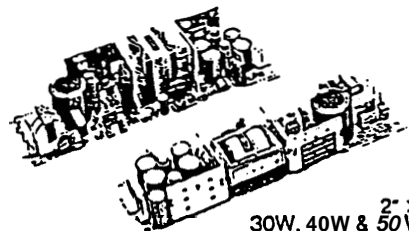

2" x 7"
30W, 40W & 50 Watt

Accessory PCB Module

DTMF-TO-ROTARY CONVERTER BOARD

Telos ONE plus ONE - DTMF-TO-ROTARY CONVERTER BOARD

DTMF-TO-ROTARY CONVERTER BOARD

PURPOSE

The DTMF-to-Rotary Dial converter board takes DTMF (dual tone-multifrequency signals, or touchtones®) and converts them into rotary dial (decadic) make/break pulses.

THEORY OF OPERATION

The phone line is passed through this board, which **has** a loop-current detector and a make/break relay. Another relay is used to take the hybrid off the **one** line during pulse dialing.

The **tones** are fed from the input of the hybrid (send) to a DTMF receiver chip, which, in turn, drives the pulse dialer IC. An LED on the board indicates on-hook, off-hook (OK to dial) and time out. The pulse dialer chip **is** buffered from the relays with **an** open-collector output device. Another signal is taken to the hybrid's ON pin to **turn** the hybrid on during **pulse dialing** and to hold the hybrid in the mute state. This prevents the "clicks and clunks" of the pulse dialer relay from being audible. The hybrid's telco line is fed into a phantom talk battery during **dialing**, to keep the "Super" Auto-answer line detection circuitry from releasing the line by turning the hybrid off.


There are two independent decoder circuits per card. Some ICs are shared by the **two** circuits, however.

When the DTMF-to-Rotary converter board is being used, the tones are received from the hybrid send audio. That means that the send gain trimmer affects **this** level and the LED meter indicates it. If the tones are too hot (input meter OVL LED **is** lit during the presence of tones), the input trimmer must be **turned** down or the tone level reduced externally. If the tones are being clipped, the decoder board may not properly recognize the tones.

Special Note Regarding Phone Lines

With the DTMF-to-Rotary converter board installed, the unit must be connected to a "pulse dial only" line. If the phone line **can** detect DTMF, the unit will not dial properly, because some of the


Telos ONE plus ONE - DTMF-TO-ROTARY CONVERTER BOARD

tone  make it to the central office equipment *before* the pulse dialer begins. Then the pulse dialer will *repeat* the last digit dialed.

Telos ONE plus ONE - DTMF-TO-ROTARY CONVERTER BOARD

PARTS LIST

<u>Designation</u>	<u>Description</u>	<u>Designation</u>	<u>Description</u>
U1,2	DTMF decoder (Teltone M-957)	C1,2	2.2 μ F @ 25V
U3,4	DTMF-to-pulse converter (Teltone M-969)	C3,4,5,6	
	270pF @ 1000		
U5,6	Optoisolator 4N33	C7,8	not stuffed
u7	hex inverter 74LS14	C9,10	not stuffed
U8	Quad NAND gate 74LS00	X1,2	3.58MHz crystal
U9	Octal open collector driver ULN2003	K1,2,3,4	
	DPDT relay		
R1,2	1M Ω 1/4W 5%	VR1	+5V regulator LM7805
R3,4	330R 1/4W 5%	BR1,2	bridge rectifier
R5,6,7,8	150 Ω 1/4W 5%	L1,2	green LED
R9,10	330R 2W 5%	J1,2	dual RJ11 jack
R11,12,13,14	75R 2W 5%	J3,4	6-pin 0.1" connector
R15,16,17,18	1M Ω 1/4W 5%	SU3,4	20-pin socket BU200Z
R19,20	47R 1/4W 5%	SU5,6	6-pin socket BU060Z
R21,22	150R 1/8W 5%	SU7,8	14-pin socket BU140Z
R23,24	910 Ω 1/4W 5%	SU9	16-pin socket BU160Z
R25,26	220R 1/4W 5%		

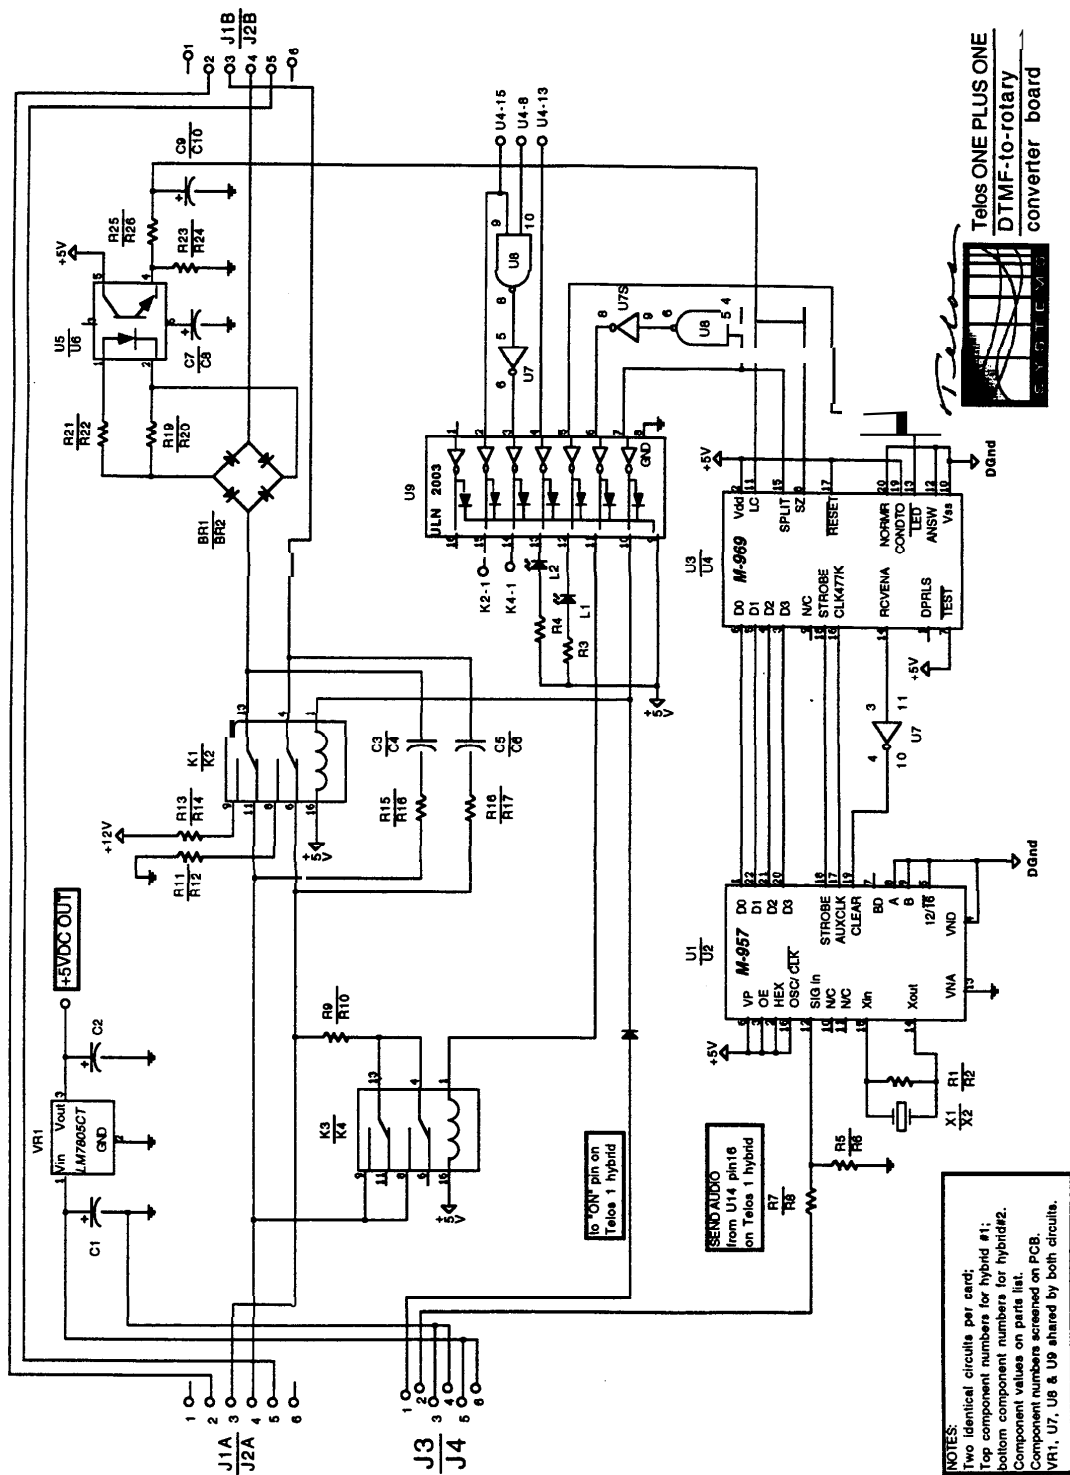

Telos
 Telos ONE PLUS ONE
 DTMF-to-rotary
 converter board



Accessory PCB Module

BASIC AUTO-ANSWER BOARD

Telco ONEplus ONE - BASIC AUTO ANSWER BOARD

BASIC AUTO-ANSWER BOARD

Purpose

The auto-answer board is used when automatic answering and hang-up of the Telos One hybrid is desired. The circuit **turns** the hybrid on in response to ringing voltage on the connected phone line, and **turns** the hybrid off when a break in loop current is detected. The loop current interruption, often referred to as **CPC**, or Calling Party Control, is present on most telephone lines. However, some central office equipment or PBXs may not provide it and other detection methods will have to be used in that ~~case~~

Installation

The board is installed by plugging it into the header connectors on the Telos One board. Remove ~~the small~~ jumper plugs on HDR1 first.

The auto-answer board should be removed and the jumpers replaced if use with other than Central Office-type lines with talk battery is expected, since the diodes in the loop detect section will cause severe audio distortion if not biased by talk battery.

Operation

Not much excitement here. With the board installed, the hybrid will automatically answer and hang-up.

Circuit Description

U1, R4, and C2 **form** the ring detect section. C2 blocks DC so that only the **AC ring** voltage will trigger U1. When U1's diode gets current, its transistor pulls HR1-2 low **turning** the hybrid on. C3 prevents false tripping.

The remaining components **form** the loop current detector. When loop current is present, U2's transistor conducts **and** C1 is discharged. When loop current **goes** away, C1 **charges** through the diode in **U3** thus causing a low at HR1-1 for the length **of** the R3/C1 time constant. Upon restoration of loop current, the capacitor discharges through R5 and D5. The C1/R5 time


constant prevents falsing during ~~initial~~ answer by preventing C1 discharge on brief periods of loop current presence.

Basic Auto-answer Board

PARTS LIST

<u>Desianation</u>	<u>Description</u>	<u>Desianation</u>	<u>Description</u>
U1,2,3	opto-isolator 4N33	R1	100n
D1,2,3,4	1N4004 dioide	R2	220Ω
D5	1N4148 diode	R3	2.2KΩ
C1	6.8μF @ 25V	R4	2.2KΩ
c 2	0.47μF @ 200V	R5	4.7MΩ
c 3	3.3μF @ 25V		

Telos ONE plus ONE - BASIC AUTO ANSWER BOARD

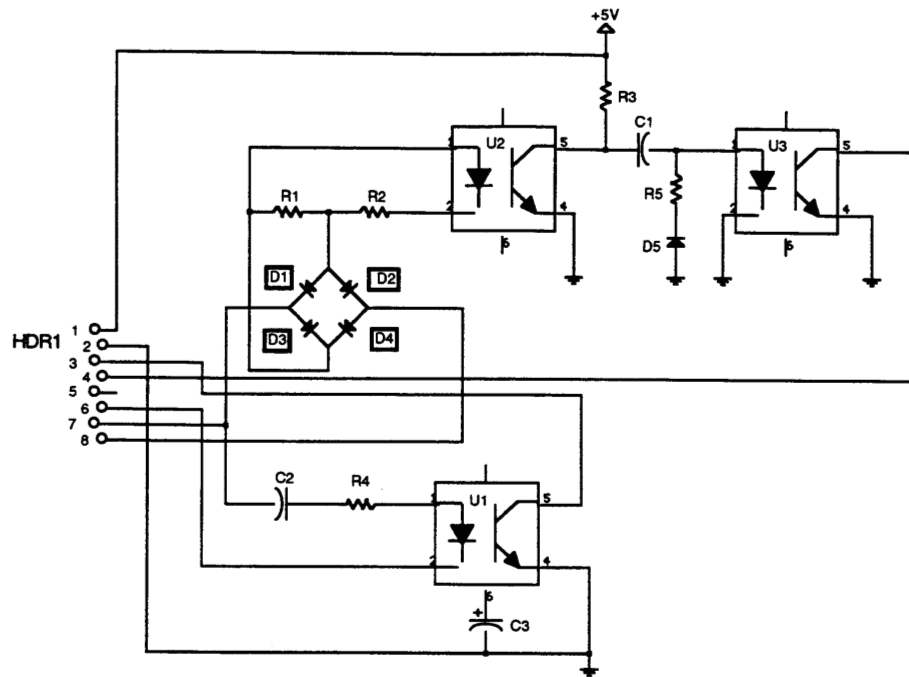

Telos basic AutoAns
Rev 3.1

Accessory PCB Module

"SUPER" AUTO-ANSWER BOARD

TelosONE plus ONE - SUPER AUTO ANSWER BOARD

INTRODUCTION

GENERAL DESCRIPTION

The "Super" Auto-Answer board is a plug-in PCB module for the Telos One which provides reliable auto-answer and disconnect as well as other functions:

- *Remotecontrol for seize, drop and auto functions
- Status indicators for off-hook condition and auto mode
- Open collector outputs from an integral DTMF decoder
- Selectable answer on first ring or after three rings
- Disconnect on drop or reversal of talk battery (CPC)
- Disconnect on dial tone detection (selectable enable/disable)
- Auto mode enabled by remote button or dip switch position

Since the unit's operation is controlled by a microprocessor, the functionality may be changed by reprogramming the EPROM-based processor. For instance, future versions may be configured with an I2C serial bus interconnect, so that multiple units could communicate with a master controller. The software-based control logic permits configuration for operation on non-standard (or non-USA) phone lines as well.

ANSWERING FUNCTION

The auto-answer board responds to the standard USA ringing signal of 90 VAC at 20 Hz. The system is protected from the false detection sometimes caused by dial-pulses on adjacent lines, or other causes, by a software function which counts AC cycles and integrates them over time.

DISCONNECT FUNCTION

Disconnect may result from any of the following:

- Loopcurrent interruption
- Loopcurrent reversal
- Detection of dial tone (selectable)

Loop-current interruption occurs on most telco lines when the calling party hangs up. It is sometimes referred to as CPC, or *Calling Party Control*, since the calling party controls your equipment when he hangs up. The CPC

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

interruption was probably never intentional, having **been** a by-product of early **mechanically-switched** relay-controlled exchanges. **thus**, some phone **lines** do not provide **this** function or they provide it **unreliably**. However, with the proliferation of answering **machines** which rely upon CPC, most central office equipment now **has** this capability designed in. In some **cases**, though, it is necessary to specifically request this feature from the phone company on a per-line basis.

Loop-current reversal, on the other hand, **has** long **been** a phone company signalling method. First used between the telco's **own** central offices, loop-reversal was later employed to communicate with some large premises PBX systems. **thus**, lines **which are** set up for for PBX **use**, or originate at central offices with large concentrations of business customers, sometimes **use** this method. (However, the preferred and more modern situation for PBX control **is** to use either "ground-start lines" or "**E&M** signalling." A digression from matters relevant here. Both are discussed in the *Telos Telephone Q&A* - which you should have, since it comes packed with every Telos hybrid.)

As mentioned above, while most exchanges do provide CPC, there are some that don't reliably provide it, or provide it after a variable time delay... and most PBXs don't generate it. For **this** reason, **this** "super" auto-answer board **has** a "failsafe" dial tone detector. Every (**USA**)telco central office eventually returns dial tone to its lines when the calling party **hangs** up. **thus**, we **use** the presence of dial tone to cause a **disconnect** when the loop-current detection methods fail.

The auto-answer board uses a sophisticated software-implemented statistical approach to ensure that the line is never inappropriately disconnected. **Four** tones **are** continuously monitored: 350, 440, 480, & 620 **Hz**. When **the** two tones (350 & 440 **Hz**) which comprise dial tone **are** detected **as** simultaneously present, a one-second detection "window" is opened. Only if, during **this** window, both dial tones are present for more **than** 80% of the time and both of the other tones are present for less **than** 20% of the time is a valid dial tone condition decided. In this way, false "talk-off" from noise, applause, or other spectrally-rich audio is prevented.

*Telso***ONE plus ONE** - SUPER AUTO ANSWER BOARD

REGARDING DETECTION OF DIAL AND DTMF TONES IN SYSTEMS WITH CONFERENCING CAPABILITY

The auto-answer board is connected **so** as to receive the hybrids separated telco *receive* audio signal. Were this not the case, and the detector was merely connected across the phone line, there would be **a** major problem when multiple lines are used together in a conference. Why? *Because the tones would be conveyed to each line in use (through the switching matrix) from every other line, causing all of the detectors to respond to the tones from all of the other lines as well as its own!* Fortunately, the **Telos One's** excellent trans-hybrid loss keeps **this** from happening. Aren't you glad?

TelbsONE plus ONE - SUPER AUTO ANSWER BOARD


INSTALLATION

Installation consists of removing a jumper plug from a header connector on the Telos One and plugging in the auto-answer PCB.

The auto-answer board should be removed and the jumpers replaced if use with other than Central' Office-type lines with talk battery is expected, since the diodes in the loop detect section will cause severe audio distortion if not biased by talk battery.

1) Remove the Telos One front panel by removing ~~the~~ **two** black screws on either end of the front panel. Pull the top **case** forward to remove it. Remove the **two similar** screws on the back panel. Hold the rear bezel and gently pull the rear panel and **main** PCB out of the bottom case.

2) **On** the bottom of the PCB, solder a **small** piece of wire from U14-4 to HDR1-5. (The header is numbered 1,3,5,7 on one side and 2,4,6,8 on the other.) *This modification need not be done on units with serial numbers greater than 08-100-00901 - Rev. C or later PCBs.* The jumper wire allows the auto-answer board to have access to the hybrid-separated telephone receive signal.

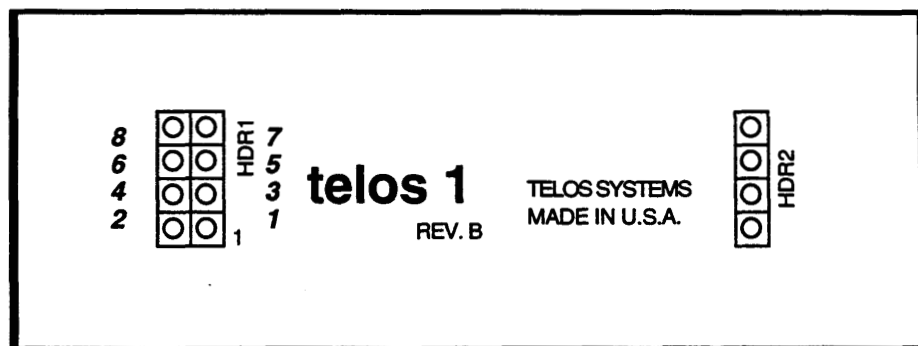

HDR1 & HDR2 locations and pinout

3) The auto answer board mounts on HDR1 and HDR2. First, remove the jumper plug which should be installed across HDR1-7 and HDR1-8. Line up the **two** headers **with** the **two** PCB connectors and push down on the board. Make sure both headers **are** picking up **all** the pins!

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

4) Replace rear panel with the new one, mount the DE15 remote connector, **and** plug the ribbon cable into the PCB socket.

5) Set the auto-answer dip switches for the desired options (described in the operation section next) before reassembling unit.

OPERATION

SOFTWARE VERSION AA V1.1

DIP SWITCH OPTIONS

Some user-selectable options are provided via a 4-position DIP switch located in one **corner** of the auto-answer PCB. **Functions** are **as** follows:

Dip #1: Auto mode permanent enable. Intended for when no remote control of auto enable/disable is available. When on, auto-answer mode is always enabled. The remote AUTO input **has** no effect and the remote Drop/Seize inputs **will not** disable the auto mode.

Dip #2: Future use.

Dip #3: Dial tone detect enable/disable. When on and the unit is in auto mode, will cause a disconnect when **dial** tone is present for \approx 1 second, or longer. When **this** switch **is** off, only an interruption or reversal of loop current will cause a disconnect: dial tone **will** have no effect.

Dip #4: The numbersf-rings selector. When on (**and** the system is in auto mode) the unit **will** answer on the third **ring**. Otherwise, the answer **occurs** on the first ring.

REMOTE CONTROL

Remote control of the hybrids ON/OFF **functions**, **as** well **as** the auto mode, are available on the rear panel DB15 connector. Remote buttons are momentary and ground-common. (That is, they are normally pulled high through a resistor and taken to ground to activate.) Refer to the connector pin-out table for assignments.

When the **SEIZE** input is brought to ground, the auto board **turns** the hybrid on and disables the auto mode (except if DIP #1 is on). When the **DROP** input is brought to ground the hybrid will **turn** off **and** disable the auto mode (again, except if DIP #1 is on). The auto mode is disabled upon press of either **of** these buttons **so** that the unit doesn't hang up **from** the dial tone that would be present on the line when the **unit** is activated in order to


TelosONE plus ONE - SUPER AUTO ANSWER BOARD

originate a call.

The AUTO input also requires a momentary pushbutton, but is made to be alternate action in operation. Each time the button is pressed, the auto mode will toggle to the opposite state. Power-up is to the "no auto" mode (unless DIP #1 is active).

The LINE STATUS output will be made low as long as the hybrid is active. An external pull-up resistor to the +5V pin is required to drive an LED or similar indicator, since this output is driven by an open collector device. Should someone press the hybrids front panel ON button, the LINE STATUS output will flash a few times before staying on. This feature is intended to alert anyone watching the remote panel that someone else has activated a unit locally. Neither the front panel ON or OFF button will affect the auto mode.

The AUTO MODE status output is also an open collector output. It is made low when the system is in the auto mode.

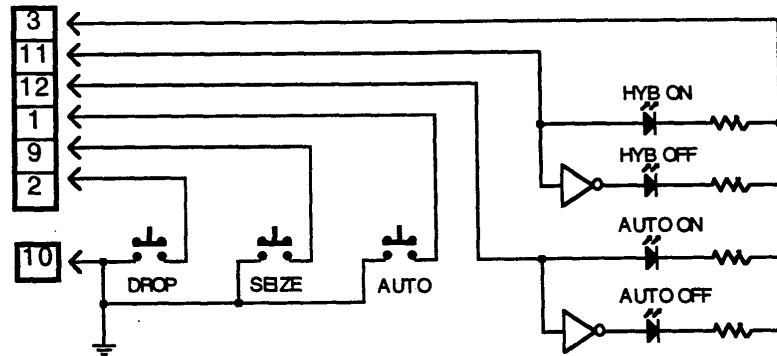


Schematic for remote control. Pin numbers are for the 15-pin D-connector. The inverter should be a 74LS14. The pull-up resistors' value depends on the type of LED used. Check the manufacturer's data sheets for details.

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

DTMF TONE DECODER

The auto-answer board brings out to the connector five signals from a DTMF (TouchTone®) decoder: four DTMF DATA bits and a DATA VALID signal. The tones are decoded and presented according to the chart. These outputs are pulled up (weakly) on the auto board and thus may be used as inputs to standard TTL and/or may be "wiredred" with other boards for special applications.

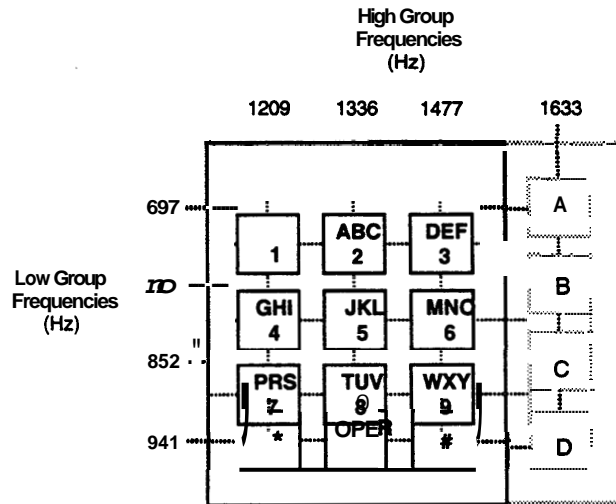

*Frequencies and Buttons for DTMF
Generation/Detection*

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

DB15 PINOUTS(REMOTE)	
1	AUTO control input
2	DROP control input
3	+5VDC
4	D8 DTMF output
5	D4 DTMF output
6	D2 DTMF output
7	D1 DTMF output
8	SCL
9	SEIZE control input
10	Ground
11	Line Mode output
12	Auto Mode output
13	DTMF Data Valid
14	n/c
15	SDA

DTMF OUTPUT CODES				
Digit	D8	D4	D2	D1
1	1	1	1	0
2	1	1	0	1
3	1	1	0	0
4	1	0	1	1
5	1	0	1	0
6	1	0	0	1
7	1	0	0	0
8	0	1	1	1
9	0	1	1	0
0	0	1	0	1
*	0	1	0	0
#	0	0	1	1
A	0	0	1	0
B	0	0	0	1
C	0	0	0	0
D	1	1	1	1

Charts showing the hexadecimal codes for the touchtone decoder and pinouts for the 75-pin remote control connector.

SOFTWARE VERSION AA V1.2

This version of software functions similarly to AA V1.1 with the following differences:

- 1) The SEIZE input no longer disables the **AUTO function** when pressed.
- 2) The SEIZE input can **also** be used as a MAINTAINED input. That is, if the SEIZE input pin is held LO (to ground) for more than about 2.5 seconds, the hybrid will turn on (obviously) but will **turn off** (release the line) when the SEIZE input returns to a logic HI (+5VDC).
- 3) The DROP input will not disable the **AUTO** function while the SEIZE input is held LO, but will **turn** the hybrid off still. If the SEIZE input is used for momentary action, however, the DROP input will disable the auto functions just like AA V1.1.

This means that the operator can still enable and disable the auto function from a momentary LO signal on the **AUTO** pin while the SEIZE input is being held **LO**. If the DROP input is brought LO while the SEIZE input is being held LO, the hybrid will **turn** off but the auto function cannot be toggled anymore **via** the **AUTO** input. The auto function will remain in the state it

Telos ONEplus ONE - SUPER AUTO ANSWER BOARD

was in when the DROP pin went LO. This ~~is~~ done to signal the operator that the device that initially turned the hybrid on via a ~~maintained closure has~~ not released the **SEIZE** input yet. The ON/OFF and **AUTO** outputs will still function normally. *All other functions* of AA V1.1 have been retained.

SOFTWARE VERSION AA V2.0

This software version is designed for ~~use~~ with multiline 1A2 key system telephones. It will turn the hybrid on whenever an active line button is pressed on the key phone and turn the hybrid off when the line button is popped up, either by hitting another button half way, pressing an unused button (i.e. no phone line connected for that button), **hanging** up the handset or placing a line on hold.

Circuit modifications: The **ring** detector optoisolator, **U3**, should be moved to the voltage detector circuit, **U4**. R2 should be **33K Ω** , C5 must be removed, and the DTMF receiver chip, U7, should not be **stuffed**. ~~Call~~ Telos if you'd like the **DTMF** decoder option restored to your unit.

Key phone modification: One key phone must be modified to get T/R audio from the selected line to the hybrid. Inside the phone, a RED and a **GREEN** wire **go from** the switch bank to the network under the touchtone pad, the RED wire to terminal **6**, the GREEN wire to terminal 8. Remove these wires from the terminal block and run them to the hybrid's **LINE** modular jack. Now take another pair of **wires** and run them from the hybrids **PHONE** modular jack **BACK TO THE TERMINAL BLOCK** pins **6 & 8**. Essentially, we're putting the hybrid **IN SERIES** with the phone line that has 'been selected. That is, when the hybrid is in its **OFF** mode the phone line is looped through the hybrid back to the phone's network. When the hybrid ~~turns~~ ON, a relay closes, moving the T/R from the phone and into the hybrid.

DIP SWITCH OPTIONS

DIP #1: When on, enables the **AUTO** function; when ~~off~~ the **AUTO** function can be toggled on & off via the **AUTO** button input provided on the connector, J7-1.

DIP #2: Not supported.

DIP #3: **Dial** tone detect enable/disable. When on and the unit is in auto mode, will cause a disconnect when dial tone is present for ≈ 1 second, or longer. Same as **V1.1**. **You** might want ~~this~~ option active if your talents tend to select inactive lines!

DIP #4: Was for number of **rings** selector. Disabled in software, since ~~this~~ pin is now looking for DC voltage to answer, not cycles of **AC ring** voltage.

Telos ONEplus ONE • SUPER AUTO ANSWER BOARD

All other remote control functions (remote seize, remote drop, line status, auto status, auto on/off) remain the same. It is recommended that the key phone handset be **OFF-HOOK** so the key phone's buttons flash at the correct rates. If the talent wants to release a line without taking another caller, he can hit the hook switch to pop the button **up!** If the phone must be **used** normally, the hybrid must be turned off manually. One way to do **this** is to rewire the disconnect button to function **as** the autoanswer board's DROP signal. (The disconnect button is an optional button on some key phones; it's **used** to disconnect a line without **having to pop** the button up.) If your phone doesn't have the disconnect button already, add a momentary button across pins J7-2 & J7-10 and mount it either on the phone or near the phone.

We recommend turning on **DIP #1** and then installing the board in your unit. Of course, you *can* take advantage of the other options by connecting some extra momentary switches and some **LED** indicators. This way the operators can toggle between **AUTO** and **NO AUTO**, turn the hybrid on and **off** manually and have indicators of the hybrids status **as** well. Refer to **this** manual's **OPERATION** section for a circuit you *can* build up that will do **this**.

If touchtones are needed to dial out and must be heard on the air, another touchtone pad should be fed into the hybrids mix-minus scheme. The touchtone pad in the key phone needs the -48V from the phone line to operate, so it would need its own power supply. Another scheme could use some **type** of relay circuit that would reconnect **ONLY** the touchtone pad in the key phone (**NOT** the network!) to the line selected **ONLY** while dialing. We don't want the tone pad hanging on the line all the time, because it will load down **the** line. Since the tone pad is **also** powered from the phone line, it will only be active while it is connected to the phone line through the relay. Some stations use prerecorded carts **with** tones on them, **so** for instance, the mayor's *unlisted* home phone doesn't **go** out on the air!

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

"SUPER" AUTO ANSWER/RELEASE ADDENDUM #1

SOFTWARE VERSION AA V3.1

This version of **software** is very similar to the AA V1.1 software, but is intended for use on the telephone system of France. Here are the major differences:

1) **Ring** detection is based on the French **ringing** frequency of 50Hz.

2) Dial tone release has been changed to differentiate between the various reorder tones applied on the French telephone network. First, the French phones **use only** a ~~M-H~~ tone (instead of the 440Hz + 350Hz used in the **US**). More precisely, a steady M H z tone will not turn the unit off. Rather, a 440Hz tone that is pulsed at a rate of 1/2 Hz $\pm 10\%$ (the French reorder tone) will turn the hybrid off. Moreover, a 440Hz tone that is on for 1.5 sec. and off for 3.5 sec. $\pm 10\%$ (another type of reorder tone) ~~will~~ turn the hybrid off, as well.

All DIP switch options are identical to AA V1.1. as well as all the I/O signals on the 15-pin connector, including remote on/off/auto, their respective indicator outputs, and the decoded **DTMF**.

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

"SUPER" AUTO ANSWER/RELEASE ADDENDUM #2a
(supercedes Addendum 2)

SOFTWARE VERSION v5.2

This version of software is intended for use on the Italian telephone system. The Italian phone system **uses** a non-standard reorder tone (425Hz) that is pulsed at a rate of **200 msec. on/ 200 msec. off. Ring** frequency is 50 Hz.

HARDWARE CONSIDERATIONS: In order to recognize this tone the hardware must be changed. First, the crystal frequency is changed to make the call progress detector chip detect **425Hz**. Because of the short duration of the tone, this chip has a difficult time detecting a valid tone. So, **an** extra op-amp section is added to the hardware to ensure a high enough level is presented to the chip's input. To avoid line release from music and other sources the talk-off portion of the code **has** been modified to detect **four** consecutive tone sequences. Should the levels not be consistently high enough, the unit may take more **than** four beeps to turn off. The DTMF decoder will not operate at all because its reference frequency **has** been changed (to accommodate the **call** progress detector chip).

SOFTWARE CONSIDERATIONS: This version of software can be used with the Telos DTMF-to-Rotary Dial converter board. When a DTMF tone is present on the **send** input of the hybrid, the converter board will hold the hybrid's "on" pin low. This is done so that the hybrids output is muted during pulse **dialing**. Furthermore, the Super Auto-answer boards software must not **try** to turn the hybrid off because of T/R reversal or loop drop, which could happen during pulse **dialing**. (See the schematic of the converter board for details.) This software version addresses this problem by looking at the "on" pin while in the "off-hook" mode and compensates for the pulse dialing by adding a time-out period after the "**on**" pin **has** been released. It then **goes** back to the current detector to reset its "when-to-turn-off" sequence.

AA v5.2 supports all DIP switch options (identical to **AA V1.1**.) as well as most all the I/O signals on the 15-pin connector, including remote on/off/auto, and their respective indicator outputs. The decoded DTMF outputs are disabled and should not be used.

Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

Super Auto-answer Board

PARTS LIST


<u>Designation</u>	<u>Description</u>
u1-4	Optoisolator 4N33
U5	Call Prog Detect SSI75T982-CP
u7	DTMF Decoder SSI75T204-IP
U8	Octal open coll. driver ULN2003
U9	Microprocessor 87C751-1N24
U10	Octal buffer 74LS244
RP1	10K Ω SIP 4306R-101-103
RP2	10K Ω SIP 4310R-101-103
R1	2.2K Ω 1/4W 5%
R2	47K Ω 1/4W 5%
R3	100K Ω 1/4W 5%
R4	910 Ω 1/4W 5%
R5,7	1.8K Ω 1/4W 5%
R6	47R 1/4W 5%
R8,10,13,14	10K Ω 1/4W 5%
R9,11	1K Ω 1/4W 5%
R12	8.2K Ω 1/4W 5%
R15,16,17	100R 1/4W 5%
R18	10MR 1/4W 5%
R19,20	1K Ω 1/4W 5%
C1	0.47 μ F mono
C2,3,6,7,8	2.2 μ F tant. 25V
C4	0.1 μ F mono
C5	0.33 μ F tant. 25V
C9:	10.0 μ F 025V
C10	0.0022 μ F mono
C11	1.0 μ F 025V
D1-5	diode 1N4004
D6	Zener diode 1N5246
D7,8,9	signal diode 1N4148
x1	3.58MHz crystal

<u>Designation</u>	<u>Description</u>
SU1-4	6-pin socket
SU5	22-pin socket (400mil)
SU6	8-pin socket
su7	14-pin socket
SU8	16-pin socket
SU9	24-pin socket (300mil)
SU10	20-pin socket
SW1	4-position DIP SW
	16-PIN RT ANGLE HEADER 0.1" spacing
	8-PIN FEMALE HEADER 0.1" spacing
	4-PIN FEMALE HEADER 0.1" spacing
	15-pin female FRC D-shell ass'y


NOTES:

- All sockets machined pin, selective gold
 - MPU must be programmed; available from Telos.
- Refer to text for software options.


Telos ONE plus ONE - SUPER AUTO ANSWER BOARD

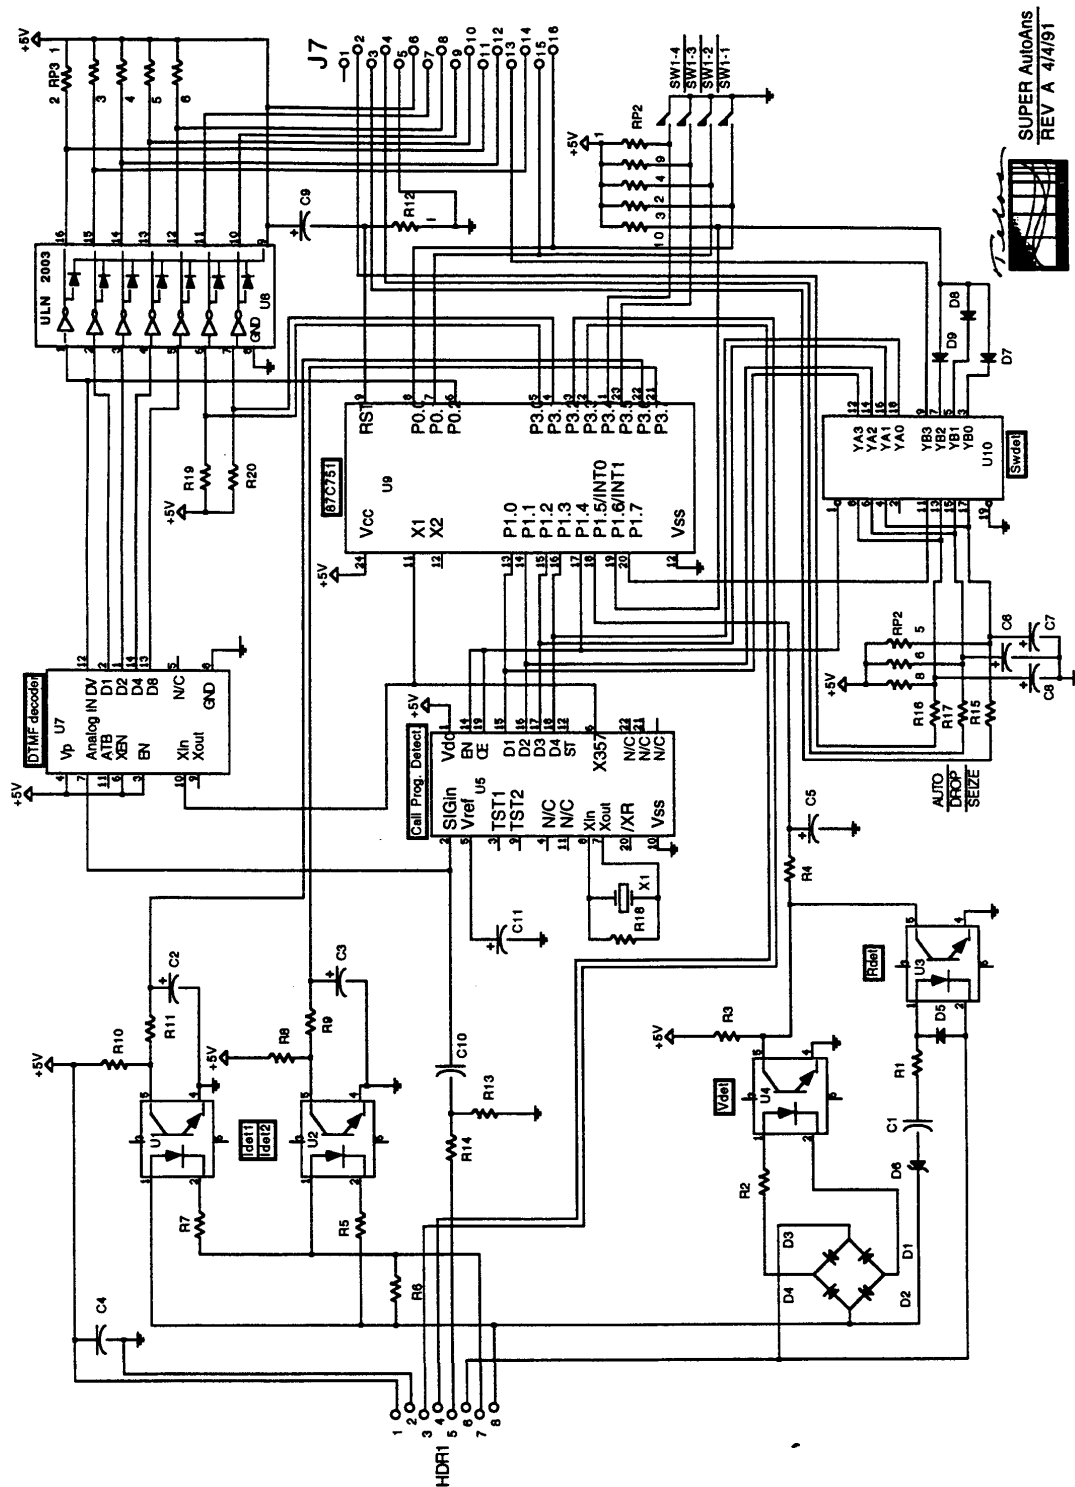

SUPER AUTOANS
REV A 4/4/91

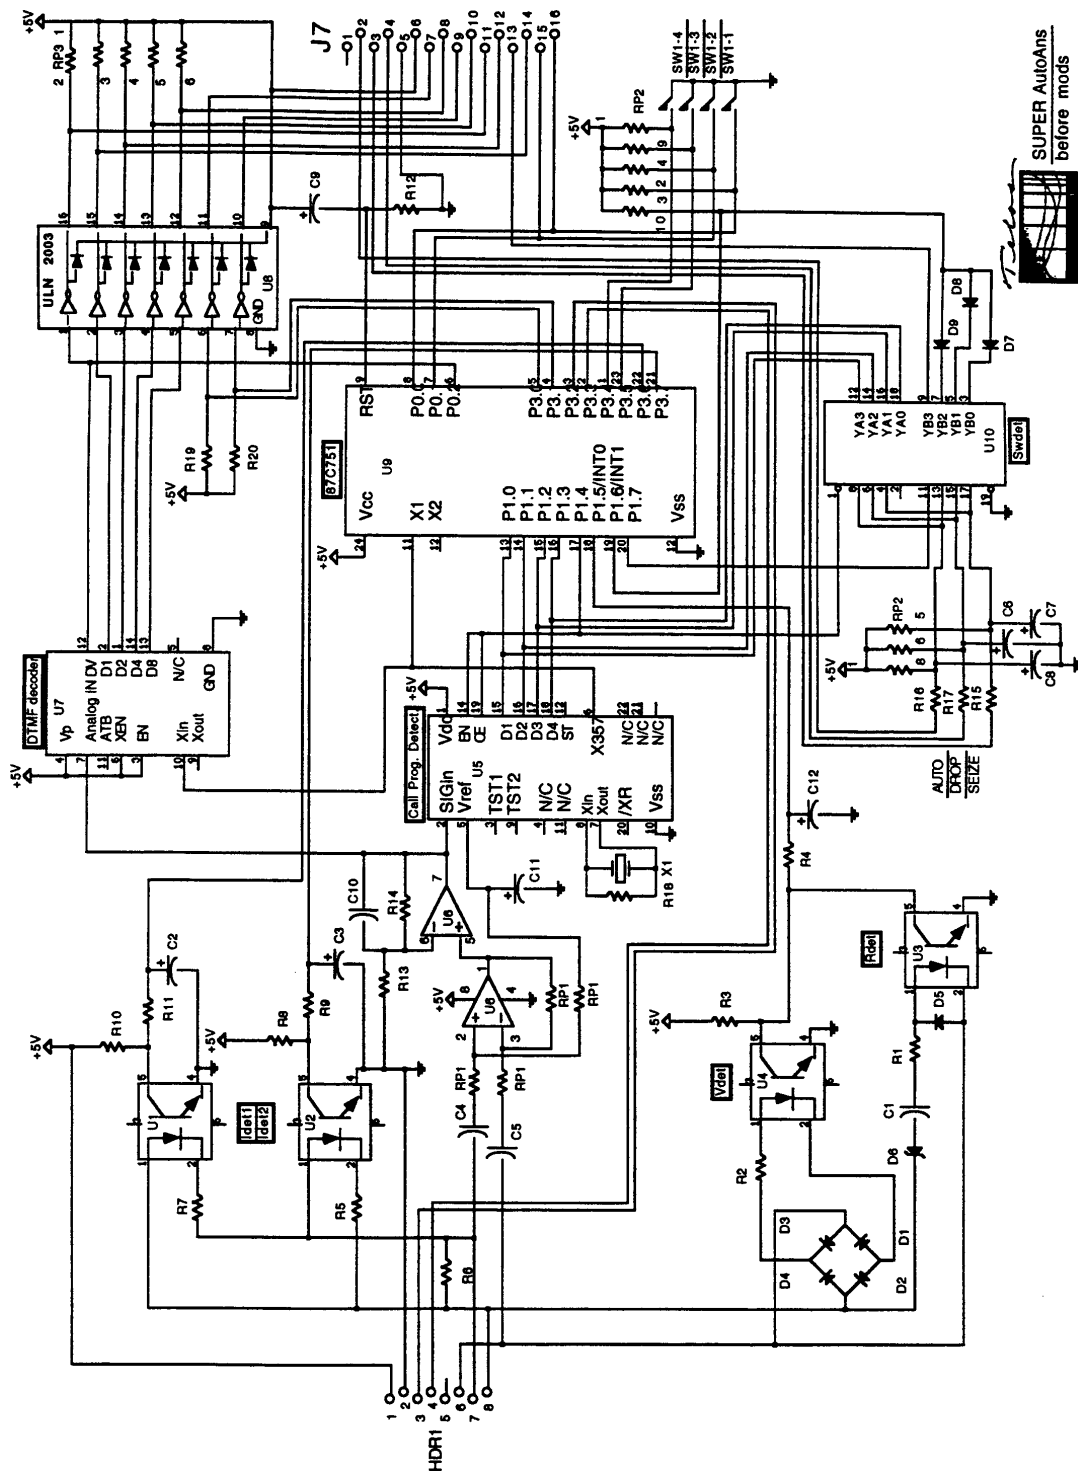

SUPER AutoAns
before mode

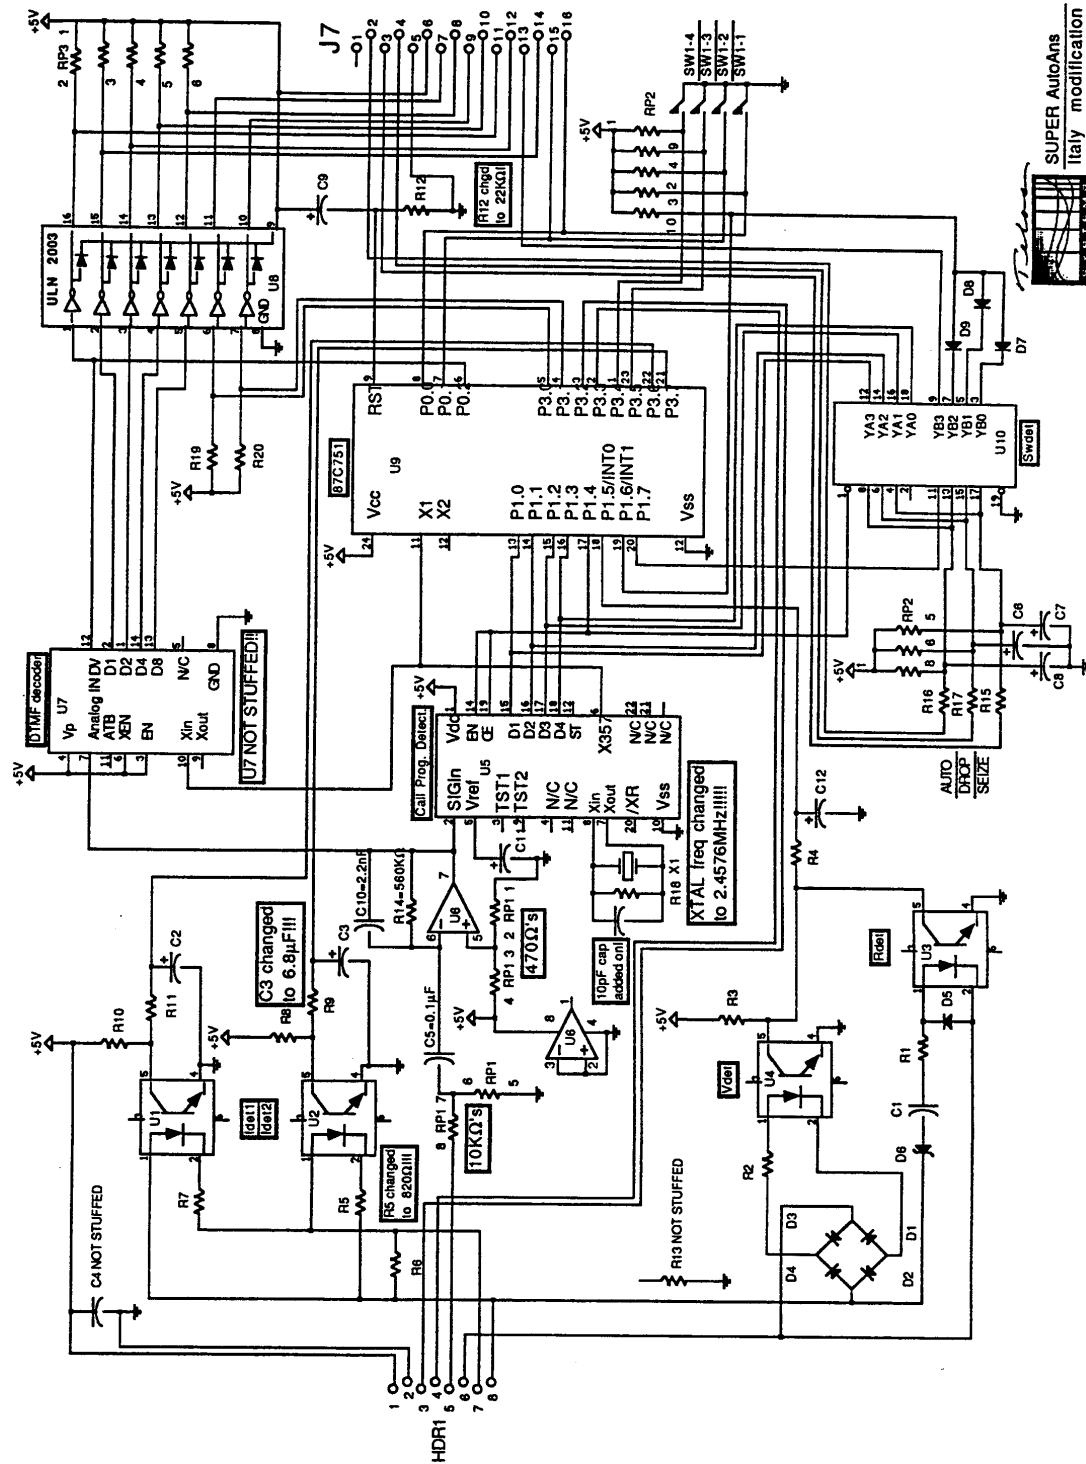

SUPER AutoAns
Italy modification



Tutorial

ELECTRONIC PHONE SYSTEMS

*Teb*s ONEplus ONE - ELECTRONIC PHONETUTORIAL

Electronic Phone Systems


This tutorial introduction to electronic phone systems may be helpful if you desire to connect a Telos hybrid to such systems.

The cable from the phone **sets** to the "common equipment" must convey:

- Power to operate the phone
- A two-way data path
- The speech audio path

The early electronic phones used a separate pair for each of the three functions, and thus required *six* wires. The AT&T Horizon was an example of **this** approach. Another is the popular Merlin system which **uses** four pairs.


The most common approach **used** in new designs is a two pair, four-wire scheme. In **this** scheme, the talk and data are each balanced and each use one of the **two** pairs. The power is "phantom" applied between the two pairs in a way similar to the method used for phantom powering condenser microphones in recording studios.

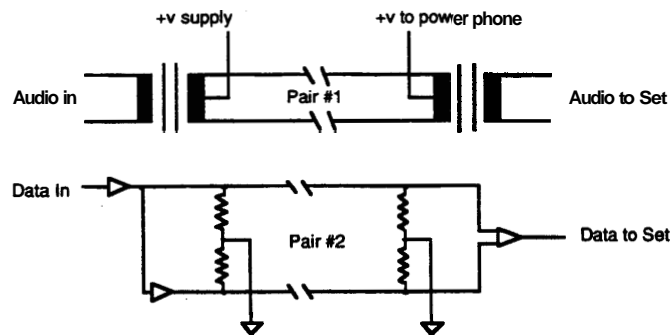

Electronic Phone Scheme Using Two Pairs - Note that this diagram shows data flow in only one direction for simplicity.

A transformer is generally used at each end of the audio pair so that the phantom power **may** be added. The data pair often **uses** resistors to obtain a "center tap" rather than transformers since the data signal has DC components that would not pass through a transformer.

Usually, in the two pair approach, the center two wires on the modular plug are the audio path.

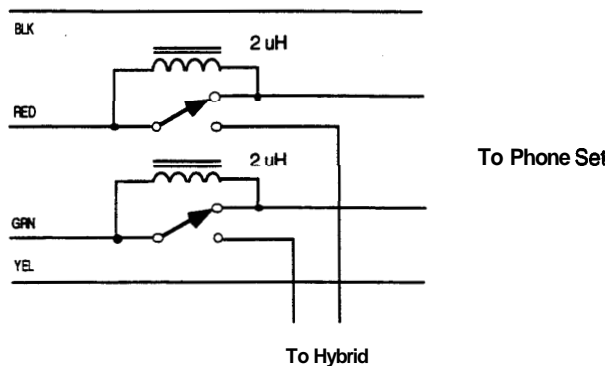

One method for interfacing to some electronic phones. The chokes pass the DC voltage to the phone set when the hybrid is active.

The Mitel "Superset" phones use a unique scheme that requires only one pair for all three functions. How do they do it? The data is amplitude shift modulated onto a 32 kHz carrier "over voice" and then the combined voice and data are AC coupled across the DC power voltage.

The most advanced systems use a pure digital bit stream for both voice and data. The phone set contains the CODEC for conversion to and from the analog and digital domains. The pure digital approach is used in the AT&T System 85 and the digital version of the NEC NEAX 2400 as well as in the new Northern Telecom Norstar system.

Since most electronic phone systems use an analog talk path, a hybrid can be connected to the system by inserting it in the analog path by breaking the connection from the phone switching equipment to the instrument. Usually, the talk audio is found on the center two wires of the line going to the phone. Looping this through the hybrid gets the audio connected.

The operator is responsible for turning the hybrid on and off upon initiation of each call. The hybrid's on and off remote may be

TelosONE plus ONE - ELECTRONIC PHONE TUTORIAL

connected to the console's on/off logic outputs to perform this function. This scheme works well for one-call-at-a-time situations as you would have in a newsroom or production studio or for occasional on-air use.

A problem remains, however, when calls need to be taken one after the other, as in a talk show situation. In most cases, the hybrid must be signalled each time a new line is selected so that adaption to the line can occur. It may be possible to derive an appropriate pulse from the phone by tacking-on an external circuit of some kind which would trigger the hybrid's remote on/off function. Remember too, the hybrid should be switched off or its input audio removed when no line is active. Otherwise, the hybrid will proceed to adjust itself to the high impedance presented to it and may take a few seconds to recover from this condition when a call is subsequently taken. Your kindly phone supplier may be able to help. If you have any luck along these lines, please let us know so that we can produce an application note for other users.

With phone systems that have a digital talk path, the situation with the on/off control is as above with the additional complication that you need to find a way to get at the converted-to-analog signal inside the phone set.

Perhaps some poking around with a scope or headphones may be useful in this endeavor. Again, maybe your phone provider company might help. Please let us know what you find!

A universal way to obtain an audio signal from any phone is to use an adapter which plugs into the handset jack. These should be available from your local telephone supplier. If you have problems finding an adapter locally, we may be able to help.