

# Professional Video Monitor

Interface Manual for Programmers

PVM-2541 PVM-1741

# **Table of Contents**

# Ethernet Overview 3 Connections 3 Communication Protocol 4 SDAP 4 SDCP 4 Command Block Format 5 SDAP Packets 5 SDCP Packets 6 VMC Command Description 8 Format of VMC Packets 8 Details of VMC Commands 9

# **Overview**

This unit can control the monitor using the commands described in this manual via the network (Ethernet). For example, the Input Select, Power On/Off, etc. can control from the external controller such as the PC.

#### On notation

This document uses the following notations:

- A hexadecimal number is indicated by an **h** after the number (10h = 0x10 = 16.) Otherwise, the number is a decimal.
- Character strings are enclosed by quotation marks ("").

# **Connections**

When you connect the unit to the network that uses the Ethernet, use the straight cable. When using a hub for network connection, use a hub with automatic cable type (straight or cross) detection feature (AUTO MDIX).

# Network ports used by the monitor (the FTP data port is not shown)

Service	Port	Factory	Change		
	number	setting	Service usage	Port number	
SDAP	53862	Auto start	No	No	
SDCP	53484	Auto start	No	No	
FTP	21	Auto start	No	No	

# Communication Protocol

You can control the monitor using the Simple Display Control Protocol (SDCP) and the Simple Display Advertisement Protocol (SDAP), which define the packet conventions and communication procedures for the commands.

SDCP is used to exchange monitor commands and statuses. You can obtain video settings and information, modify system settings including networking settings and obtain information using Video Monitor Control (VMC) packets superimposed on the SDCP protocol. The SDAP protocol periodically broadcasts the status of devices using UDP to check the connections.

For more information on the SDCP protocol, refer to section SDCP on page 4.

#### **SDAP**

The monitor provides the Status Advertisement Service. This service allows for the development of host applications that automatically find devices on the network. Monitors and controllers periodically broadcast device information over the network.

#### **Function**

The following table shows the device information that is periodically (at regular intervals) sent out to the network as broadcast packets:

#### Advertised information

Information	Description
Category	Category of the device (0Bh)
Device name	Name of the device
Serial number	Serial number of the device
Location	Location of the device
Community	Community name of the device
Power status	Power on/off status of the device

#### **Protocol definition**

The following table defines the SDAP protocol used to implement this advertisement service:

#### **Definition of the SDAP protocol**

Category	Description
Protocol name	SDAP (Simple Display Advertisement Protocol)
Transport type	UDP
Port number	53862
Broadcast interval	Monitor: 15 seconds Controller: 30 seconds

#### **SDCP**

This protocol provides a service for remotely controlling the monitor.

#### **Function**

This service responds to the control commands and requests for status and information sent from the host controller.

The unit provides four connection modes: Single connection, Peer to Peer connection, Group connection, and All connection. The Single connection and Peer to Peer connection modes send SDCP packets using TCP to identify a single monitor. The Group connection and All connection modes send SDCP packets using UDP broadcast function within the area network to identify more than one monitor. The controller can obtain status information from the monitor only if they are connected via TCP. Do not perform status sensing when connecting via UDP.

#### **Protocol definition**

The following table defines the SDCP protocol used to implement this service:

#### **Definition of the SDCP protocol**

Category	Description
Protocol name	SDCP (Simple Display Control Protocol)
Transport type	TCP and UDP
Port number	53484
TCP connection timeout	30 seconds

#### Considerations on communication

• Do not issue the next command from the controller until you receive the return data for the previous command from the monitor. Otherwise, the monitor cannot receive the next command and thus cannot respond to the controller nor issue an error code. Refer to "Wait time for return data" (on page 5) for information on the wait time between the controller issuing a command and the monitor responding with the return data.

- When a communication error occurs, the monitor discards the data it has received up to that point and waits for a new command.
- When an SDCP packet has a problem: Monitors are response-oriented. Sending return data after the communication takes place inside the monitor results in an error that delays the response. Therefore, the monitor returns an SDCP packet indicating that the command was successfully processed as soon as it receives a command, even if the data area of the SDCP packet has a problem. If the SDCP packet has a problem in areas other than the data area, an appropriate SDCP packet is returned. For status sensing, normal operations are also implemented as response-oriented operations. Therefore, the monitor returns some data even if non-existent data are status-sensed.
- When broadcasting cursor or knob operations are performed from the menu using UDP, make sure to have an interval of 50 milliseconds between each command (BKM-15R issues a command every 100 milliseconds.) Time-consuming operations such as the white balance adjustment require longer intervals. Commands received before the previous process finishes are placed in a queue, but subsequent commands are discarded once the queued commands reach a certain number.

#### Wait time for return data

The wait time for the host to receive return data from the monitor after it issued an SDCP packet is in the range of 4 to 8 milliseconds when using a 10base-T connection, assuming that no communication failure occurs.

## **Command Block Format**

#### **SDAP Packets**

This section describes the structure of SDAP packets. As shown in the following diagram, various information is bundled into a packet starting from the header. Each field is described in the subsequent paragraphs.

#### Structure of an SDAP packet

Header (4)	Communi	nity(4) Product Nam		Product Name (12) Serial No		Power Status (2)		Location (24)	
Connection IP (4)		Accepta	able IP-1 (4)	Acceptable	IP-2 (4)	Acce	ptable IP-3 (4)		
				Ассер	table IP-4 (4)	Error (2)	Region	(24)	Name (24)
						Group II	D (1)		Unit ID (1)

#### **Format**

SDAP packet version 4 includes all of the fields comprising version 3, which is used for the SONY SRX projector, plus Group ID and Unit ID.

#### Header

The Header uses four bytes: two bytes for the 16-bit ID and a byte each for the 8-bit Version and Category.

#### Structure of the SDAP header

Byte 0, 1	Byte 2	Byte 3
ID (2 bytes)	Version (1 byte)	Category (1 byte)
"DA"	04h	0Bh / 0Ch

ID: Fixed to "DA".

**Version:** Indicates the version number of the protocol. It is fixed to 04h (version 4.)

**Category:** Indicates the category number of the display device. For a monitor, it is fixed to 0Bh. For a monitor controller, it s fixed to 0Ch.

#### Community

Contains a 4-byte string indicating the community name specified for the device. It is set to "SONY".

#### **Device information**

**Product Name :** Name of the device (up to 12 characters.)

If the name is shorter than 12 characters, 00h is inserted to fill in the space.

**Serial No.:** Serial number of the device (hexadecimal value.)

**Location:** Location information for the device (up to 24 characters.)

If it is shorter than 24 characters, 00h is inserted to fill in the space.

Connection IP (SDAP Ver2.00): Indicates the IP address of the host to which the device is currently connected and from which the menu is operated (hexadecimal value). A value of 00h indicates that the device is not connected to any host.

Acceptable IP (SDAP Ver2.00): Contains the registered information for the host IP address that accepts a connection via SDCP (hexadecimal value). Information for four hosts is sent in a packet. A value of 00h indicates that no host is specified.

Error (SDAP Ver3.00): Indicates whether an error occurred: 0 if no error occurred, 1 if an error occurred. Region (SDAP Ver3.00): Contains regional information. If it is shorter than 24 characters, 00h is inserted to fill in the space.

Name (SDAP Ver3.00): Indicates the name of the projector. If it is shorter than 24 characters, 00h is inserted to fill in the space.

Group ID (SDAP Ver4.00): Indicates the group ID assigned to the monitor (1-byte hexadecimal value.)
Unit ID (SDAP Ver4.00): Indicates the unit ID assigned to the monitor (1-byte hexadecimal value.)

#### **SDCP Packets**

This section describes the structure of version 3 SDCP packets about only the fields used by the unit.

#### Structure of an SDCP packet

Header (2)	Community (4)	Group ID (1)	Unit ID (1)	Command (5)	Data (n)
	Community (4)	uroup id (1)	(ו) שו זוווט	Goillillalla (3)	Data (II)

#### **Format**

Version 3 includes all of the fields comprising version 2, which is used for SONY SRX projector, plus Group ID and Unit ID, with the Data length field changed to two bytes.

#### Header

The Header uses two bytes: a byte each for the 8-bit Version and Category.

#### Structure of the SDCP header

Byte 0	Byte 1
Version	Category
03h	0Bh

**Version:** Indicates the version number of the protocol. It is fixed to 03h (version 3.)

**Category:** Contains the category number for the monitor (0Bh). The unit checks the category number

and ignore the request if it is set to a number other than 0Bh.

#### Community

Contains a 4-byte case-sensitive alpha-numerical string indicating the community name. For the unit, it is set to "SONY". Community name must be four characters long. You can not specify a name shorter than four characters. Requests are processed only when this field matches the community name specified for the display device.

#### **Group ID**

Indicates the ID of the group with which the unit is registered. It is set to 0 for Single and Peer to Peer network connections and to 0xFF for All connections. If a number other than 0x00 or 0xFF is specified as the Group ID, the monitor with the specified Group ID accepts the command (the range of values for the Group ID is 1 to 99 depending on 7SEG for BKM-15R). The ID is a 1-byte hexadecimal value. When a Group ID is specified, broadcast communication with UDP is used. In this case, monitors do not return any response to the command.

#### **Unit ID**

Indicates a device-specific ID that is registered with the unit. It is set to 0 for Peer to Peer Network and Group connections and to 0xFF for All connections.

The ID is a 1-byte hexadecimal value. When a monitor receives an SDCP packet via TCP, it accepts the command only if the Unit ID specified in the packet (if specified) matches its Unit ID.

The Unit IDs for the monitors in the same subnet should be unique. The behavior of the monitors that have the same Unit ID depends on the configuration of the controller.

#### ID settings for various connection modes

Mode	Group ID	Unit ID
Peer to Peer	0	0
Single	0	1 to 99
Group	1 to 99	0
All	0xFF	0xFF

#### Command

The following table shows the format of request and response commands:

#### Format of the SDCP Command field

Byte 6	Byte 7, 8	Byte 9, 10
Request/response	Item No.	Data Length

#### Request

Specifies the command request from the host to the monitor.

#### **SDCP** request

Request	Description
SET (00h)	Specifies the command request. Status requests are also considered as commands.

#### Response

Returns the result to the request sent from the host.

#### **SDCP** response

Response	Description
NG (00h)	Indicates that the request was invalid or could not be completed.
OK (01h)	Indicates that the request was successfully completed.

#### Item no.

Defines the format of the information included in the Data field.

#### Item no.

Value	Description
B000h	Indicates a monitor command.
B001h	Indicates a monitor command for monitors with built-in controllers.

#### **Data length**

Specifies the length (n) of the subsequent Data field (a 2-byte hexadecimal value).

The maximum value that can be specified is 499 (01F3h).

#### **Example of normal communication**

Request — Item No— Length			——Data——
00h	Item No.	n	Set Data (n byte)

#### **Example of response**

#### **SDCP SET**

OK (01h) Item No.	n	Get Data (n byte)
-------------------	---	-------------------

#### **Example of error communication**

If there is an error in the request, or if the request results in an error, "NG" is returned as the response. In this case, the Item no. field contains the item number of the original request packet and the Error Code field contains a 1-byte category and a 1-byte error code. Refer to "SDCP error codes" (page 7) for the list of categories and error codes.

#### **Error response**

NG (00h)	Item No.	2	Error Code (16)
----------	----------	---	-----------------

#### Support for broadcast communication

The broadcast communication via UDP is supported for controlling more than one monitor from a single controller. In this configuration, monitors do not return any response to commands.

#### **SDCP error codes**

The following table lists the SDCP error codes (not all of the error codes are implemented.) For description of the errors, refer to the subsequent paragraphs.

#### **SDCP** error codes

Category	Error	Error Code
Communication Error (F0**h)	Check Sum Error	10h
	Other Communication Error	50h

#### **Communication Error**

This type of error indicates a communication error between the controller and the main control microcomputer of the display.


**Check Sum Error:** A check sum error occurred at the main control microcomputer.

**Other Communication Error:** Another type of communication error occurred.

# VMC Command Description

You can control the monitor settings using VMC packets superimposed on SDCP. A VMC packet is applied to the Data field of an SDCP packet to send commands to the monitor and receive its status.

SDCP



#### **Format of VMC Packets**

A VMC packet is comprised of combinations of strings. The Category field specifies the category of the command and the Command field contains the command string and its parameters. Both fields have variable length. A space is used as the separator between them:


"Category Command Parameter1 Parameter2" The termination code (0x00) for the strings is not sent. The command may not be correctly interpreted if a space is appended after a string. (You must configure the receiving device to accept strings with termination codes or spaces.)

# Communication sequence for the VMC packets

#### SDCP (TCP) communication sequence


The following diagram shows the SDCP (TCP) communication sequence.

The monitor returns the response to a command upon its reception. For a command that takes time to process, the execution continues even after the response is sent out. If the monitor receives the next command while executing the previous command, it places the next command in the queue. For a status request, the monitor returns the response only after the command result becomes ready to be sent and the status value is set.

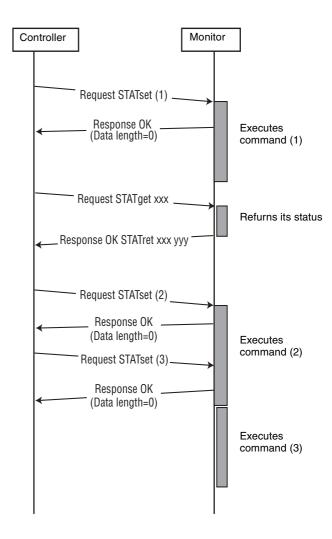

#### SDCP (UDP) communication sequence

The following diagram shows the communication sequence for ALL and Group-mode SDCP (UDP) communication:

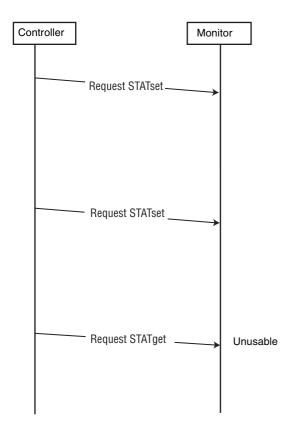

## **Details of VMC Commands**

#### **VMC** category

The following table lists the VMC command categories:

#### List of command categories


Category	Communication direction	Description
"STATset"	Controller to monitor	Sets the status of the monitor.
"STATget"	Controller to monitor	Requests the monitor to send its status back to the controller.
"STATret"	Monitor to controller	Response to "STATget".
"INFOknob"	Controller to monitor	Notifies the monitor the status of the rotary switch.
"INFObutton"	Controller to monitor	Transmits inputs from multipurpose buttons such as the numeric keypad and the cursor to the monitor.

### Command

Enter the setting value in [Value] (do not enter [ ].)

BUTON CONTROL   Button CONTROL   INFObutton MENUU   Display/non-display the menu.	Function	Command Name	Command	Send (Ethernet → Monitor)
INFOBUTION MENUDOWN INFOBUTION INFOBILITY INFOBUTION INFOBILITY IN	SDCP (Ethernet	Button CONTROL	INFObutton MENU	Display/non-display the menu.
Input Config STATset INPUTSEL CVBS Selects the composite input.  STATset INPUTSEL SD1 Selects the SD11 input.  STATset INPUTSEL SD1 Selects the SD12 input.  STATset INPUTSEL SD12 Selects the SD12 input.  STATset INPUTSEL HDMI Selects the HDMI input.  STATset WBSEL LOW Selects COLOR TEMP D65.  STATset WBSEL LOW Selects COLOR TEMP D93.  STATset WBSEL HIGH Selects COLOR TEMP D93.  STATset WBSEL USER Selects COLOR TEMP D93.  STATset WBSEL USER Selects COLOR TEMP D95.  STATSET STATSET STATSET VAIUE Sets the contrast level.  Adjustable range is 0 to 100.  STATSET APERTURE [Value] Sets the contrast level.  Adjustable range is 0 to 6.  STATSET STATSET PHASE [Value] Sets the brightness level.  Adjustable range is 0 to 100.  STATSET PHASE [Value] Sets the phase level.  Adjustable range is 0 to 100.  STATSET CHROMA [Value] Sets the volume level.  Adjustable range is 0 to 100.  STATSET VOLUME [Value] Sets the volume level.  Adjustable range is 0 to 100.  STATSET STATSET RESET Resets the setting to the factory setting.  STATSET STATSET SHIFTH [Value] Sets the Hashift.  Adjustable range varies according to the input signal (see page 13).  STATSET SHIFTV [Value] Sets the PMODE to INTER-FIELD.  STATSET MODE1 Sets I/P MODE to INTER-FIELD.  STATSET MODE2 Sets I/P MODE to INTER-FIELD.  SELECT SETS SET SET SET I/P MODE to INTER-FIELD.  STATSET NTSC0 Sets I/P MODE to INTER-FIELD.  SELECT NTSC SETS RGB RANGE to LIMITED.  STATSET ONLY I/PC Sets I/P MODE to INTER-FIELD.  STATSET NTSC0 Sets I/P MODE to INTER-FIELD.  STATSET NTSC0 Sets I/P MODE to INTER-FIELD.  STATSET NTSC0 Sets I/P MODE to INTER-FIELD.  SELECT NTSC0 SETS I/P MODE to INTER-FIELD.  STATSET NTSC0 Sets I/P MODE to INTE	Command) V0.2		INFObutton MENUUP	Moves the menu item upward.
Input Config  STATset INPUTSEL SDI SCHECTS the SDI1 input. STATset INPUTSEL SDI SCHECTS the SDI2 input. STATSET INPUTSEL SDI SCHECTS the SDI2 input. STATSET STATSET INPUTSEL HDMI SCHECTS COLOR TEMP D65. STATSET WBSEL HLOW SCHECTS COLOR TEMP D93. STATSET WBSEL HIGH SCHECTS COLOR TEMP D93. STATSET WBSEL USER SCHECTS COLOR TEMP USER.  Control Data  STATSET ONTRAST [Value] SCHECTS COLOR TEMP USER.  Control Data  STATSET APERTURE [Value] SCHECTS COLOR TEMP USER.  SCHECTS USER.  SCHECTS COLOR TEMP USER.  SCHECTS			INFObutton MENUDOWN	Moves the menu item downward.
STATset INPUTSEL SDI Selects the SDII input.  STATset INPUTSEL SDI2 Selects the SDI2 input.  STATset INPUTSEL SDI2 Selects the SDI2 input.  STATset INPUTSEL SDI2 Selects the SDI2 input.  STATset WBSEL LOW Selects COLOR TEMP D65.  STATset WBSEL LOW Selects COLOR TEMP D65.  STATset WBSEL HIGH Selects COLOR TEMP D93.  STATset WBSEL USER Selects COLOR TEMP D93.  STATset WBSEL USER Selects COLOR TEMP USER.  Control Data STATset CONTRAST [Value] Sets the contrast level.  Adjustable range is 0 to 100.  STATset APERTURE [Value] Sets the aperture level.  Adjustable range is 0 to 100.  STATset PHASE [Value] Sets the brightness level.  Adjustable range is 0 to 100.  STATset CHROMA [Value] Sets the chroma level.  Adjustable range is 0 to 100.  STATset VOLUME [Value] Sets the volume level.  Adjustable range is 0 to 100.  STATset SHIFTH [Value] Sets the H shift.  Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value] Sets the V shift.  Adjustable range varies according to the input signal (see page 13).  I/P Mode STATset MODE1 Sets I/P MODE to INTER-FIELD.  STATSet MODE2 Sets I/P MODE to LINE DOUBLER.  STATSet MODE3 Sets I/P MODE to LINE DOUBLER.  STATSET MODE3 Sets I/P MODE to LINE DOUBLER.  STATSET MODE3 Sets I/P MODE to LINE DOUBLER.  STATSET RGBRANGEFULL Sets RGB RANGE to ILIMITED.  STATSET RGBRANGEFULL Sets RGB RANGE to ILIMITED.			INFObutton MENUENT	Confirms the menu item.
STATset INPUTSEL SDI2   Selects the SDI2 input.		Input Config	STATset INPUTSEL CVBS	Selects the composite input.
STATset INPUTSEL HDMI   Selects the HDMI input.			STATset INPUTSEL SDI	Selects the SDI1 input.
STATSet WBSEL LOW Selects COLOR TEMP D65.  STATSet WBSEL HIGH Selects COLOR TEMP D93.  STATSet WBSEL USER Selects COLOR TEMP D93.  STATSet WBSEL USER Selects COLOR TEMP USER.  Selects COLOR TEMP D93.  Selects the chromate is 0 to 100.  SESTATSet level.  Adjustable range is 0 to 100.  Sets the polling is 0 to 100.  Selects the chroma level.  Adjustable range is 0 to 100.  Selects the volume level.  Adjustable range is 0 to 100.  Selects the volume level.  Adjustable range is 0 to 100.  Selects the selling to the factory selling.  Selects off the factory selling to the input signal (see page 13).  Selling the factory selling to the input signal (see page 13).  Selling the factory selling the factory selling to the input signal (see page 13).  Selling the factory selling the facto			STATset INPUTSEL SDI2	Selects the SDI2 input.
STATset WBSEL HIGH   Selects COLOR TEMP D93.     STATset WBSEL USER   Selects COLOR TEMP USER.     Control Data   STATset CONTRAST [Value]   Adjustable range is 0 to 100.     STATset APERTURE [Value]   Sets the contrast level.     Adjustable range is 0 to 6.     STATset BRIGHTNESS [Value]   Adjustable range is 0 to 6.     STATset BRIGHTNESS [Value]   Sets the pithintess level.     Adjustable range is 0 to 100.     STATset PHASE [Value]   Sets the chroma level.     Adjustable range is 0 to 100.     STATset CHROMA [Value]   Sets the chroma level.     Adjustable range is 0 to 100.     STATset VOLUME [Value]   Sets the volume level.     Adjustable range is 0 to 100.     STATset SHIFTH [Value]   Sets the setting to the factory setting.     STATset SHIFTH [Value]   Sets the shift.     Adjustable range varies according to the input signal (see page 13).     STATset SHIFTV [Value]   Sets the V shift.     Adjustable range varies according to the input signal (see page 13).     I/P Mode   STATset MODE0   Sets I/P MODE to INTER-FIELD.     STATset MODE1   Sets I/P MODE to INTER-FIELD.     STATset MODE2   Sets I/P MODE to INTRA-FIELD.     STATset MODE3   Sets I/P MODE to INTRA-FIELD.     STATset NTSCO   Sets the NTSC setup level to 0.     STATset NTSCT   Sets RGB RANGE to FULL.     STATset DVI PC   Sets RGB RANGE to LIMITED.     Sets RGB RANGE to LIMITE			STATset INPUTSEL HDMI	Selects the HDMI input.
STATset WBSEL USER   Selects COLOR TEMP USER.			STATset WBSEL LOW	Selects COLOR TEMP D65.
Control Data   STATset CONTRAST [Value]   Sets the contrast level. Adjustable range is 0 to 100.			STATset WBSEL HIGH	Selects COLOR TEMP D93.
Adjustable range is 0 to 100.  STATSet APERTURE [Value] Sets the aperture level. Adjustable range is 0 to 6.  STATSET BRIGHTNESS [Value] Sets the brightness level. Adjustable range is 0 to 100.  STATSET PHASE [Value] Sets the phase level. Adjustable range is 0 to 100.  STATSET CHROMA [Value] Sets the chroma level. Adjustable range is 0 to 100.  STATSET VOLUME [Value] Sets the volume level. Adjustable range is 0 to 100.  STATSET VOLUME [Value] Sets the volume level. Adjustable range is 0 to 100.  STATSET STATSET RESET Resets the setting to the factory setting.  STATSET SHIFTH [Value] Sets the H shift. Adjustable range varies according to the input signal (see page 13).  STATSET SHIFTV [Value] Sets the V shift. Adjustable range varies according to the input signal (see page 13).  I/P Mode STATSET MODE0 SETS I/P MODE to INTER-FIELD. STATSET MODE1 SETS I/P MODE to INTER-FIELD.  STATSET MODE3 Sets I/P MODE to INTER-FIELD.  SETATSET MODE3 Sets I/P MODE to INTER-FIELD.  STATSET MODE3 Sets I/P MODE to INTER-FIELD.  STATSET NTSCO Sets the NTSC setup level to 0. STATSET NTSCO SETS THE NTSC SETS SETS SETS SETS SETS SETS SETS S			STATset WBSEL USER	Selects COLOR TEMP USER.
Adjustable range is 0 to 6.  STATset BRIGHTNESS [Value] Sets the brightness level. Adjustable range is 0 to 100.  STATset PHASE [Value] Sets the phase level. Adjustable range is 0 to 100.  STATset CHROMA [Value] Sets the chroma level. Adjustable range is 0 to 100.  STATset VOLUME [Value] Sets the volume level. Adjustable range is 0 to 100.  Display Data  STATset RESET Resets the setting to the factory setting.  STATset SHIFTH [Value] Sets the H shift. Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value] Sets the V shift. Adjustable range varies according to the input signal (see page 13).  STATset MODE0 STATset MODE0 STATset MODE1 STATset MODE1 STATset MODE2 SETS I/P MODE to INTER-FIELD.  STATSET MODE3 Sets I/P MODE to LINE DOUBLER. STATSET MODE3 SETS I/P MODE to INTRA-FIELD.  STATSET NTSC0 Sets the NTSC setup level to 0.  STATSET NTSC75 Sets the NTSC setup level to 7.5.  STATSET RGBRANGEFULL STATSET RGBRANGE TO LIMITED.  STATSET DVI PC Sets the DVI signal format for HDMI input input input signal format for HDMI input input signal format for HDMI input signal format for HDMI input input signal format for HDMI input sig		Control Data	STATset CONTRAST [Value]	
Adjustable range is 0 to 100.  STATset PHASE [Value] Sets the phase level. Adjustable range is 0 to 100.  STATset CHROMA [Value] Sets the chroma level. Adjustable range is 0 to 100.  STATset VOLUME [Value] Sets the volume level. Adjustable range is 0 to 100.  Display Data STATset RESET Resets the setting to the factory setting.  STATset SHIFTH [Value] Sets the H shift. Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value] Sets the V shift. Adjustable range varies according to the input signal (see page 13).  STATset MODE0 STATset MODE1 STATSET MODE to INTER-FIELD.  STATSET MODE2 STATSET MODE Sets I/P MODE to INTER-FIELD.  STATSET MODE3 Sets I/P MODE to INTER-FIELD.  SETATSET MODE3 Sets I/P MODE to INTER-FIELD.  STATSET NTSC0 Sets the NTSC setup level to 0.  STATSET NTSC75 Sets the NTSC setup level to 7.5.  STATSET RGBRANGEFULL SETS RGB RANGE to FULL.  STATSET RGBRANGELIMITED Sets RGB RANGE to LIMITED.			STATset APERTURE [Value]	Adjustable range is 0 to 6.
Adjustable range is 0 to 100.  STATset CHROMA [Value] Sets the chroma level. Adjustable range is 0 to 100.  STATset VOLUME [Value] Sets the volume level. Adjustable range is 0 to 100.  Display Data STATset RESET Resets the setting to the factory setting.  STATset SHIFTH [Value] Sets the H shift. Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value] Sets the V shift. Adjustable range varies according to the input signal (see page 13).  I/P Mode STATset MODE0 STATset MODE0 STATset MODE1 Sets I/P MODE to INTER-FIELD.  STATset MODE2 Sets I/P MODE to LINE DOUBLER.  STATset MODE3 Sets I/P MODE to INTRA-FIELD.  Select Offset STATset NTSC0 Sets the NTSC setup level to 0.  STATset NTSC15 SETS SETS RGBRANGEFULL SETS RGB RANGE to FULL. STATSET RGBRANGELIMITED Sets RGB RANGE to LIMITED.			STATset BRIGHTNESS [Value]	Adjustable range is 0 to 100.
Adjustable range is 0 to 100.  STATset VOLUME [Value]  Display Data  STATset RESET  Resets the setting to the factory setting.  STATset SHIFTH [Value]  Stes the H shift.  Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value]  STATset SHIFTV [Value]  STATset MODE0  STATset MODE0  STATset MODE1  STATset MODE1  STATset MODE2  STATset MODE2  STATset MODE3  Sets I/P MODE to INTER-FIELD.  STATSET MODE3  Sets I/P MODE to INTRA-FIELD.  STATSET MODE3  Sets I/P MODE to INTRA-FIELD.  SETATSET MODE3  SETATSET MODE SETS I/P MODE to INTRA-FIELD.  SETATSET MODE3  SETATSET MODE SETS I/P MODE to INTRA-FIELD.  SETATSET MODE3  SETATSET MODE SETS I/P MODE TO INTRA-FIELD.  SETATSET MODE3  SETATSET MODE SETS I/P MODE TO INTRA-FIELD.  SETATSET MODE3  SETATSET MODE SETS I/P MODE TO INTRA-FIELD.  SETATSET MODE3  SETATSET MODE SETS THE NTSC SETS				Adjustable range is 0 to 100.
Adjustable range is 0 to 100.  Display Data  STATset RESET  Resets the setting to the factory setting.  STATset SHIFTH [Value]  Sets the H shift. Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value]  Sets the V shift. Adjustable range varies according to the input signal (see page 13).  I/P Mode  STATset MODE0  STATset MODE1  STATset MODE1  STATset MODE2  SESSI/P MODE to INTER-FIELD.  STATSET MODE3  Sets I/P MODE to LINE DOUBLER.  STATSET MODE3  Sets I/P MODE to INTRA-FIELD.  SESTATSET NTSC0  SETS I/P MODE to INTRA-FIELD.  STATSET NTSC1  SETS SETS SETS SETS SETS SETS SETS SET			STATset CHROMA [Value]	Adjustable range is 0 to 100.
STATset SHIFTH [Value]  Sets the H shift. Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value]  Sets the V shift. Adjustable range varies according to the input signal (see page 13).  I/P Mode  STATset MODE0  Sets I/P MODE to INTER-FIELD.  STATset MODE1  Sets I/P MODE to FIELD MERGE.  STATset MODE2  Sets I/P MODE to LINE DOUBLER.  STATset MODE3  Sets I/P MODE to INTRA-FIELD.  STATset NTSC0  Sets the NTSC setup level to 0.  STATset NTSC75  Sets the NTSC setup level to 7.5.  STATset RGBRANGEFULL  Sets RGB RANGE to FULL.  STATset RGBRANGELIMITED  Sets RGB RANGE to LIMITED.  STATset DVI PC  Sets the DVI signal format for HDMI input			STATset VOLUME [Value]	Adjustable range is 0 to 100.
Adjustable range varies according to the input signal (see page 13).  STATset SHIFTV [Value]  Sets the V shift. Adjustable range varies according to the input signal (see page 13).  I/P Mode  STATset MODE0  STATset MODE1  STATset MODE1  STATset MODE2  STATset MODE2  STATset MODE3  Sets I/P MODE to INTER-FIELD.  STATset MODE3  Sets I/P MODE to LINE DOUBLER.  STATset MODE3  Sets I/P MODE to INTRA-FIELD.  STATset NTSC0  Sets the NTSC setup level to 0.  STATset NTSC75  Sets the NTSC setup level to 7.5.  STATset RGBRANGEFULL  STATset RGBRANGELIMITED  Sets RGB RANGE to LIMITED.  STATset DVI PC  Sets the DVI signal format for HDMI input		Display Data	STATset RESET	Resets the setting to the factory setting.
Adjustable range varies according to the input signal (see page 13).  I/P Mode  STATset MODE0  STATset MODE1  Sets I/P MODE to INTER-FIELD.  STATset MODE2  Sets I/P MODE to LINE DOUBLER.  STATset MODE3  Sets I/P MODE to INTRA-FIELD.  STATset MODE3  Sets I/P MODE to INTRA-FIELD.  STATset NTSC0  Sets the NTSC setup level to 0.  STATset NTSC75  Sets the NTSC setup level to 7.5.  STATset RGBRANGEFULL  STATset RGBRANGE to FULL.  STATset RGBRANGELIMITED  Sets RGB RANGE to LIMITED.  STATset DVI PC  Sets the DVI signal format for HDMI input			STATset SHIFTH [Value]	Adjustable range varies according to the
I/P Mode  STATset MODE0  Sets I/P MODE to INTER-FIELD.  STATset MODE1  Sets I/P MODE to FIELD MERGE.  STATset MODE2  Sets I/P MODE to LINE DOUBLER.  STATset MODE3  Sets I/P MODE to INTRA-FIELD.  SETATSET NTSC0  SETS I/P MODE to INTRA-FIELD.  SETATSET NTSC0  SETS THE NTSC SET			STATset SHIFTV [Value]	Adjustable range varies according to the
STATset MODE2 Sets I/P MODE to LINE DOUBLER. STATset MODE3 Select Offset STATset NTSC0 Sets the NTSC setup level to 0. STATset NTSC75 Sets the NTSC setup level to 7.5. STATset RGBRANGEFULL STATset RGBRANGELIMITED Sets RGB RANGE to FULL. STATset DVI PC Sets the DVI signal format for HDMI input		I/P Mode	STATset MODE0	
STATset MODE2 Sets I/P MODE to LINE DOUBLER. STATset MODE3 Select Offset STATset NTSC0 Sets the NTSC setup level to 0. STATset NTSC75 Sets the NTSC setup level to 7.5. STATset RGBRANGEFULL STATset RGBRANGELIMITED Sets RGB RANGE to FULL. STATset DVI PC Sets the DVI signal format for HDMI input			STATset MODE1	Sets I/P MODE to FIELD MERGE.
STATset MODE3  Select Offset  STATset NTSC0  Sets the NTSC setup level to 0.  STATset NTSC75  Sets the NTSC setup level to 7.5.  STATset RGBRANGEFULL  STATset RGBRANGELIMITED  Sets RGB RANGE to FULL.  STATset DVI PC  Sets the DVI signal format for HDMI input				
STATset NTSC75 Sets the NTSC setup level to 7.5.  STATset RGBRANGEFULL Sets RGB RANGE to FULL.  STATset RGBRANGELIMITED Sets RGB RANGE to LIMITED.  STATset DVI PC Sets the DVI signal format for HDMI input				
STATset NTSC75 Sets the NTSC setup level to 7.5.  STATset RGBRANGEFULL Sets RGB RANGE to FULL.  STATset RGBRANGELIMITED Sets RGB RANGE to LIMITED.  STATset DVI PC Sets the DVI signal format for HDMI input		Select Offset	STATset NTSC0	Sets the NTSC setup level to 0.
STATset RGBRANGEFULL Sets RGB RANGE to FULL.  STATset RGBRANGELIMITED Sets RGB RANGE to LIMITED.  STATset DVI PC Sets the DVI signal format for HDMI input				
STATset RGBRANGELIMITED Sets RGB RANGE to LIMITED.  STATset DVI PC Sets the DVI signal format for HDMI input				
STATset DVI PC Sets the DVI signal format for HDMI input				
<u> </u>				Sets the DVI signal format for HDMI input
STATset DVI VIDEO  Sets the DVI signal format for HDMI input to VIDEO.			STATset DVI VIDEO	Sets the DVI signal format for HDMI input to VIDEO.
On Switch Function STATset KEYINHIBIT ON Sets KEY INHIBIT to ON.		On Switch Function	STATset KEYINHIBIT ON	Sets KEY INHIBIT to ON.
STATset TALLYGREEN ON Sets the tally green to ON.			STATset TALLYGREEN ON	Sets the tally green to ON.
STATset TALLYRED ON Sets the tally red to ON.			STATset TALLYRED ON	
STATset HVDELAY ON Sets the H/V delay function to ON.			STATset HVDELAY ON	Sets the H/V delay function to ON.
STATset BLUEONLY ON Sets BLUE ONLY to ON.			STATset BLUEONLY ON	Sets BLUE ONLY to ON.
STATset MONOCHR ON Sets MONO to ON.			STATset MONOCHR ON	Sets MONO to ON.
STATset FRONTPANELLEDS ON Sets the front panel LED to ON.			STATset FRONTPANELLEDS ON	Sets the front panel LED to ON.
STATset FORCEDTALLY ON Sets FORCED TALLY to ON.			STATset FORCEDTALLY ON	Sets FORCED TALLY to ON.
STATset SCREENSAVER ON Sets SCREEN SAVER to ON.				
STATset FLICKERFREE ON Sets FLICKER FREE to ON.			STATset FLICKERFREE ON	Sets FLICKER FREE to ON.

Function	Command Name	Command	Send (Ethernet → Monitor)
	Off Switch Function	STATset KEYINHIBIT OFF	Sets KEY INHIBIT to OFF.
		STATset TALLYGREEN OFF	Sets the tally green to OFF.
		STATset TALLYRED OFF	Sets the tally red to OFF.
		STATset HVDELAY OFF	Sets the H/V delay function to OFF.
		STATset BLUEONLY OFF	Sets BLUE ONLY to OFF.
		STATset MONOCHR OFF	Sets MONO to OFF.
		STATset FRONTPANELLEDS OFF	Sets the front panel LED to OFF.
		STATset FORCEDTALLY OFF	Sets FORCED TALLY to OFF.
		STATset SCREENSAVER OFF	Sets SCREEN SAVER to OFF.
		STATset FLICKERFREE OFF	Sets FLICKER FREE to OFF.
	Select Display	STATset ENGLISH	Sets the menu language to English.
		STATset GERMAN	Sets the menu language to German.
		STATset FRENCH	Sets the menu language to French.
		STATset ITALIAN	Sets the menu language to Italian.
		STATset SPANISH	Sets the menu language to Spanish.
		STATset JAPANESE	Sets the menu language to Japanese.
		STATset CHINESE	Sets the menu language to Chinese.
		STATset FMTDISPAUTO	Sets FORMAT DISPLAY to Auto.
		STATset FMTDISPOFF	Sets FORMAT DISPLAY to OFF.
	Select Menu	STATset CSCOFF	Sets COLOR SPACE (ChromaTru) to OFF.
	Scient Went	STATset CSCEBU	Sets COLOR SPACE (ChromaTru) to EBU
		STATset CSCSMPTE	Sets COLOR SPACE (ChromaTru) to SMPTE-C.
		STATset CSCITU	Sets COLOR SPACE (ChromaTru) to ITU-709.
		STATset AUTOCHOFF	Sets AUTO CHROMA/PHASE to OFF.
		STATset AUTOCHON	Sets AUTO CHROMA/PHASE to ON.
		STATset AUTOADJ	Starts the auto adjustment of AUTO CHROMA/PHASE.
		STATset GAMMA22	Sets the gamma 2.2.
		STATset GAMMA24	Sets the gamma 2.4.
		STATset GAMMACRT	Sets the gamma CRT.
	Scan Aspect	STATset SCANMODE NORMAL	Sets the SCAN size to NORMAL.
	1	STATset SCANMODE OVER	Sets the SCAN size to OVER.
		STATset SCANMODE NATIVE	Sets the SCAN size to NATIVE.
		STATset ASPECT 4BY3	Sets the aspect ratio to 4:3.
		STATset ASPECT 16BY9	Sets the aspect ratio to 16:9.
	Multi Display	STATset MULTIDISP DISABLE	Sets the WFM/ALM (waveform monitor and audio level meter) display to OFF.
		STATset MULTIDISP ENABLE	Sets the WFM/ALM (waveform monitor and audio level meter) display to ON.
		STATset MULTIDISP VIDEO_WAVE	Sets WFM/ALM SELECT to WFM (waveform monitor).
		STATset MULTIDISP AUDIO_WAVE	Sets WFM/ALM SELECT to ALM (audio level meter).
		STATset MULTIDISP POSITION1	Sets the position of the WFM/ALM display to 1.
		STATset MULTIDISP POSITION2	Sets the position of the WFM/ALM display to 2.
		STATset MULTIDISP POSITION3	Sets the position of the WFM/ALM display to 3.
		STATset MULTIDISP POSITION4	Sets the position of the WFM/ALM display to 4.
	Marker	STATset MARKER OFF	Sets the marker to OFF.

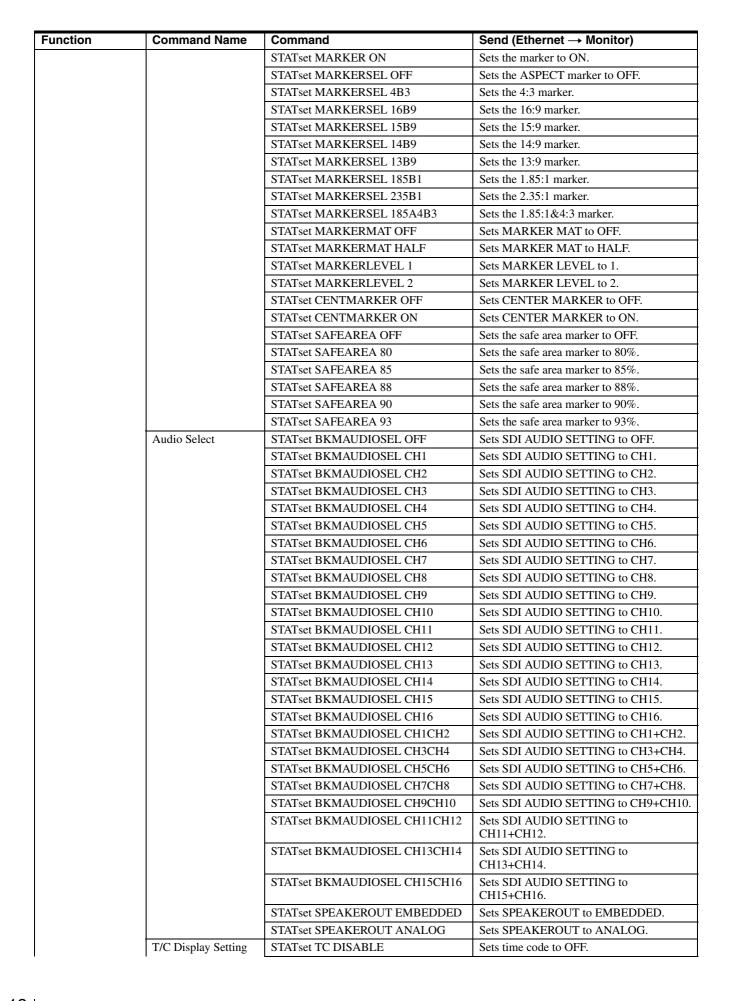

Function	Command Name	Command	Send (Ethernet → Monitor)
		STATset TC ENABLE	Sets time code to ON.
		STATset TC VITC	Sets the format of time code to VITC.
		STATset TC LTC	Sets the format of time code to LTC.
		STATset TC POSITION1	Sets the position of time code to 1.
		STATset TC POSITION2	Sets the position of time code to 2.

## Maximum and minimum values of SHIFT H and SHIFT V

Input signal	Н	٧
PAL	-24 to +24	-3 to +3
NTSC	-21 to +21	-3 to +3
575/50I	-21 to +21	-3 to +3
480/60I	-20 to +20	-2 to +2
576/50P	-21 to +21	-7 to +7
480/60P	-20 to +20	-6 to +6
640 × 480/60P	-24 to +24	-6 to +6
1080/24PsF	-124 to +124	-3 to +3
1080/25PsF	-108 to +108	-3 to +3
1080/24P	-124 to +124	-6 to +6
1080/25P	-108 to +108	-6 to +6
1080/30P	-42 to +42	-6 to +6
1080/50I	-108 to +108	-3 to +3
1080/60I	-42 to +42	-3 to +3
720/50P	-105 to +105	-4 to +4
720/60P	-55 to +55	-4 to +4
1080/50P	-108 to +108	-6 to +6
1080/60P	-42 to +42	-6 to +6
1080/30PsF	-42 to +42	-3 to +3
720/24P	-299 to +299	-4 to +4
720/30P	-299 to +299	-4 to +4
720/25P	-299 to +299	-4 to +4
		1

http://www.sony.net/