




MKS-8011 (MENU PANEL)

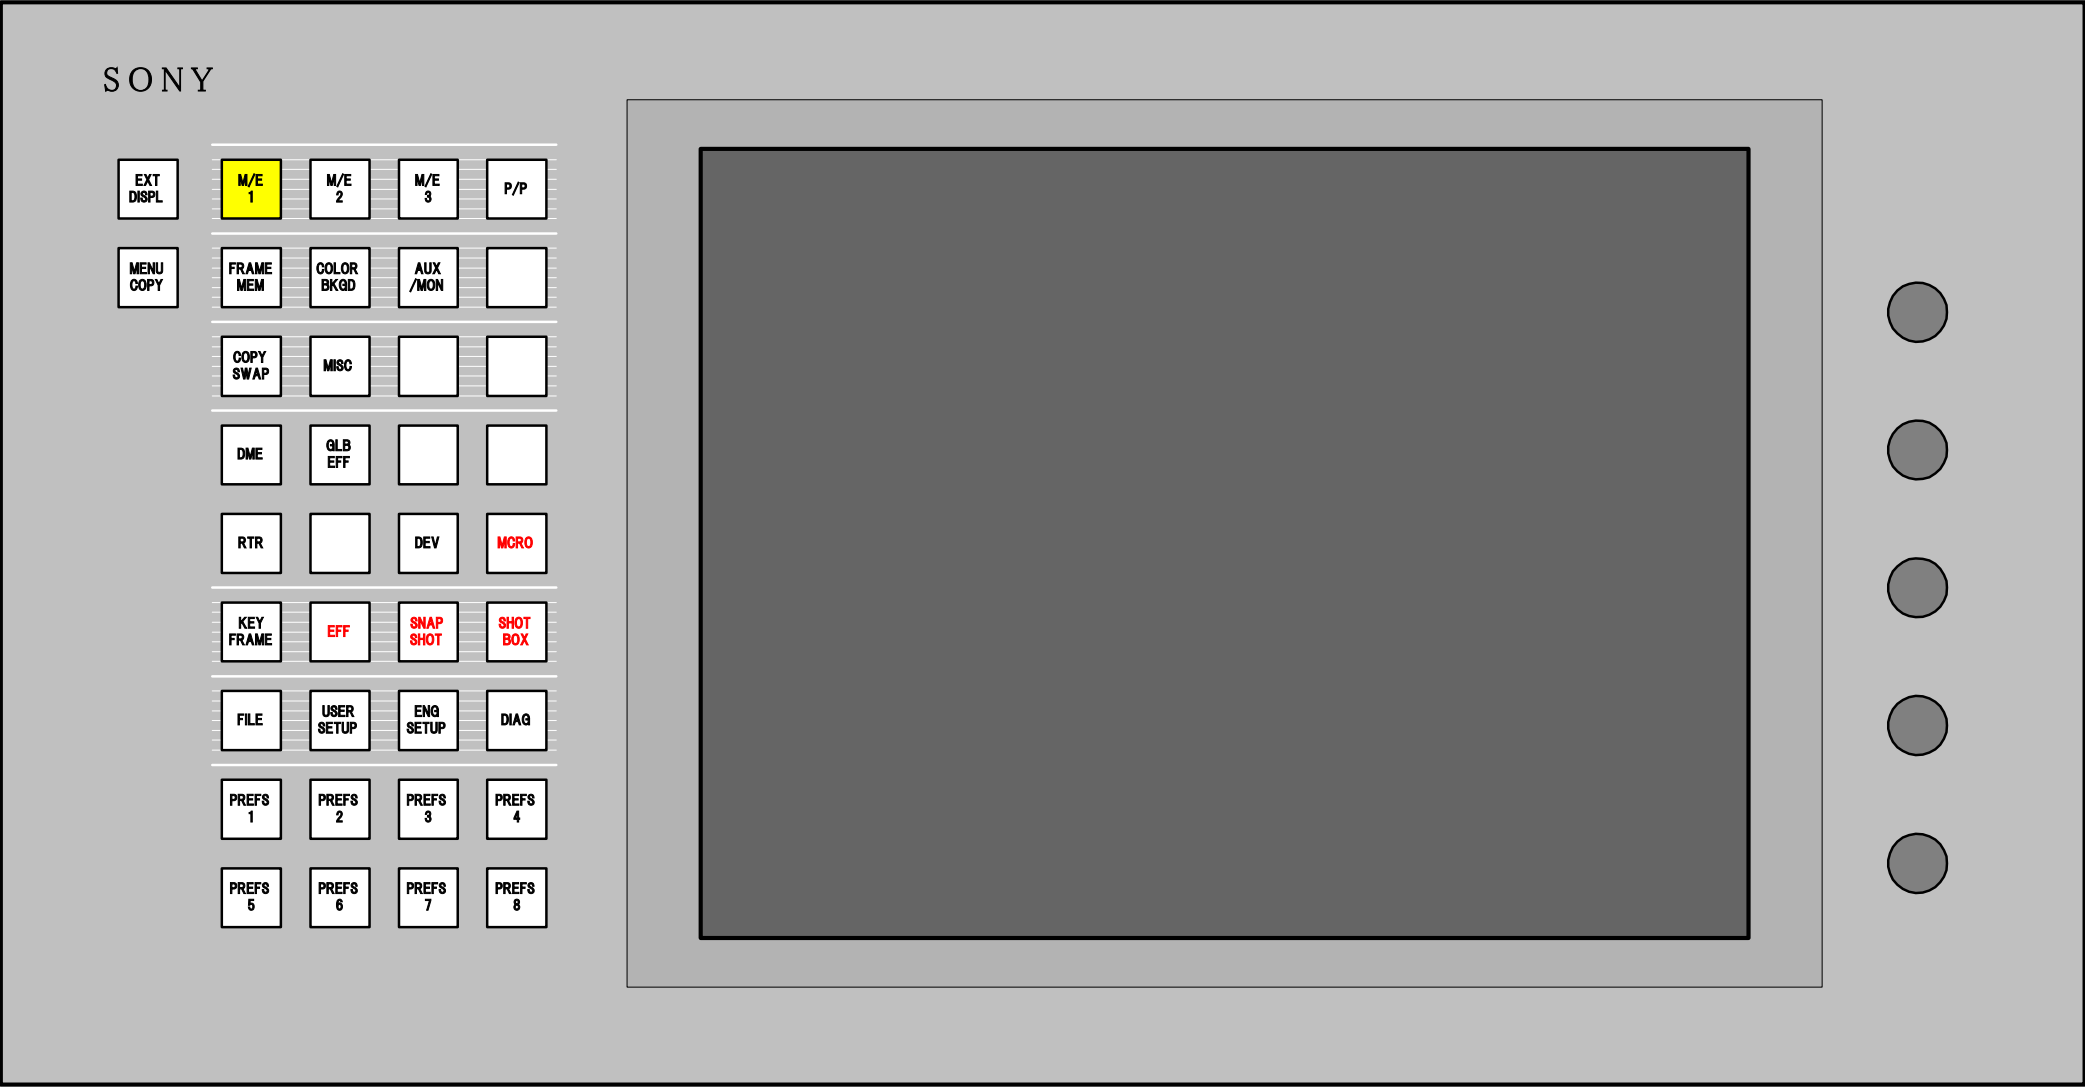


MKS-8013/8014 (32/24 AUX BUS MODULE)

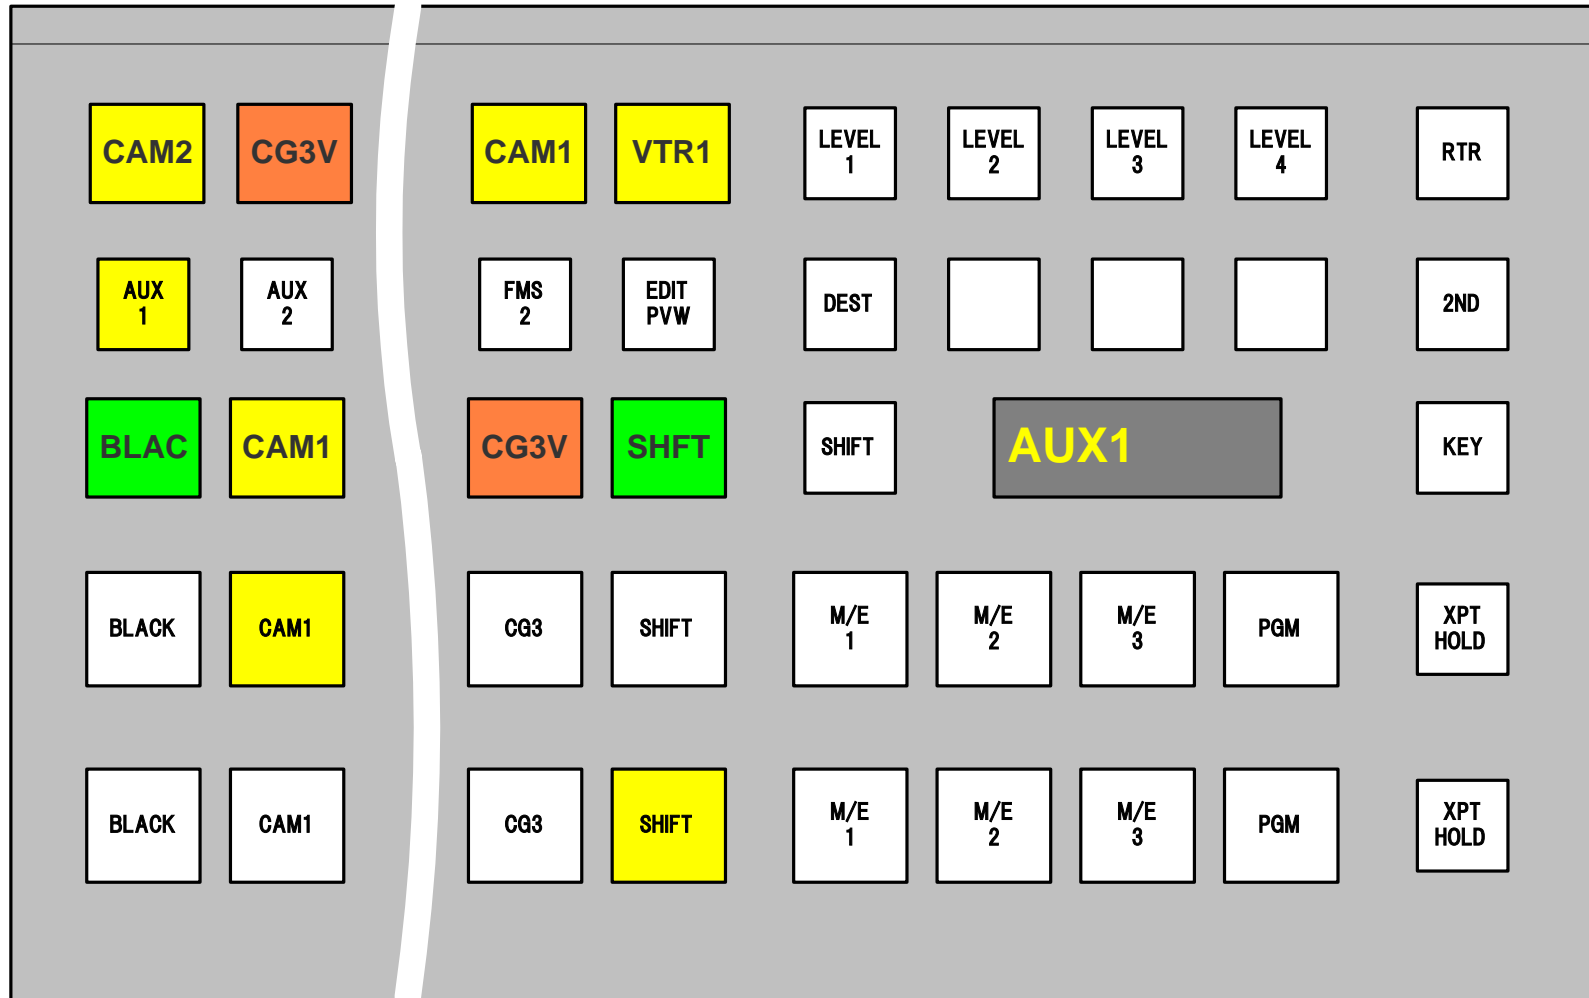


MKS-8017/8018 (32/24 XPT MODULE)

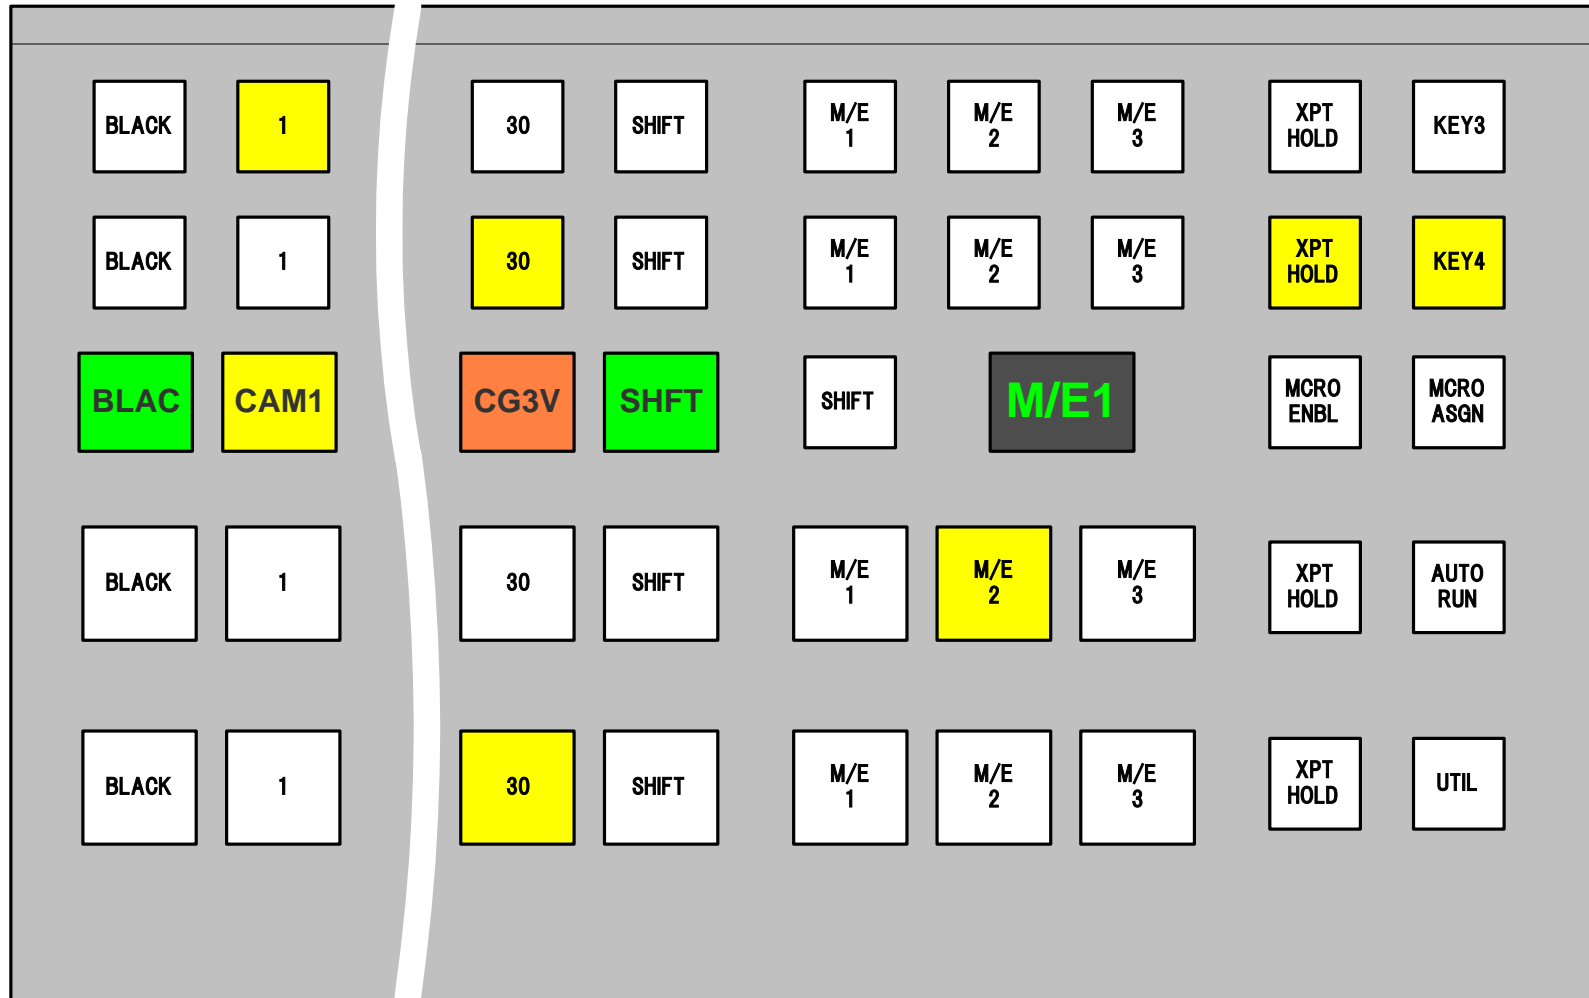


MKS-8020 (STANDARD TRANSITION MODULE)

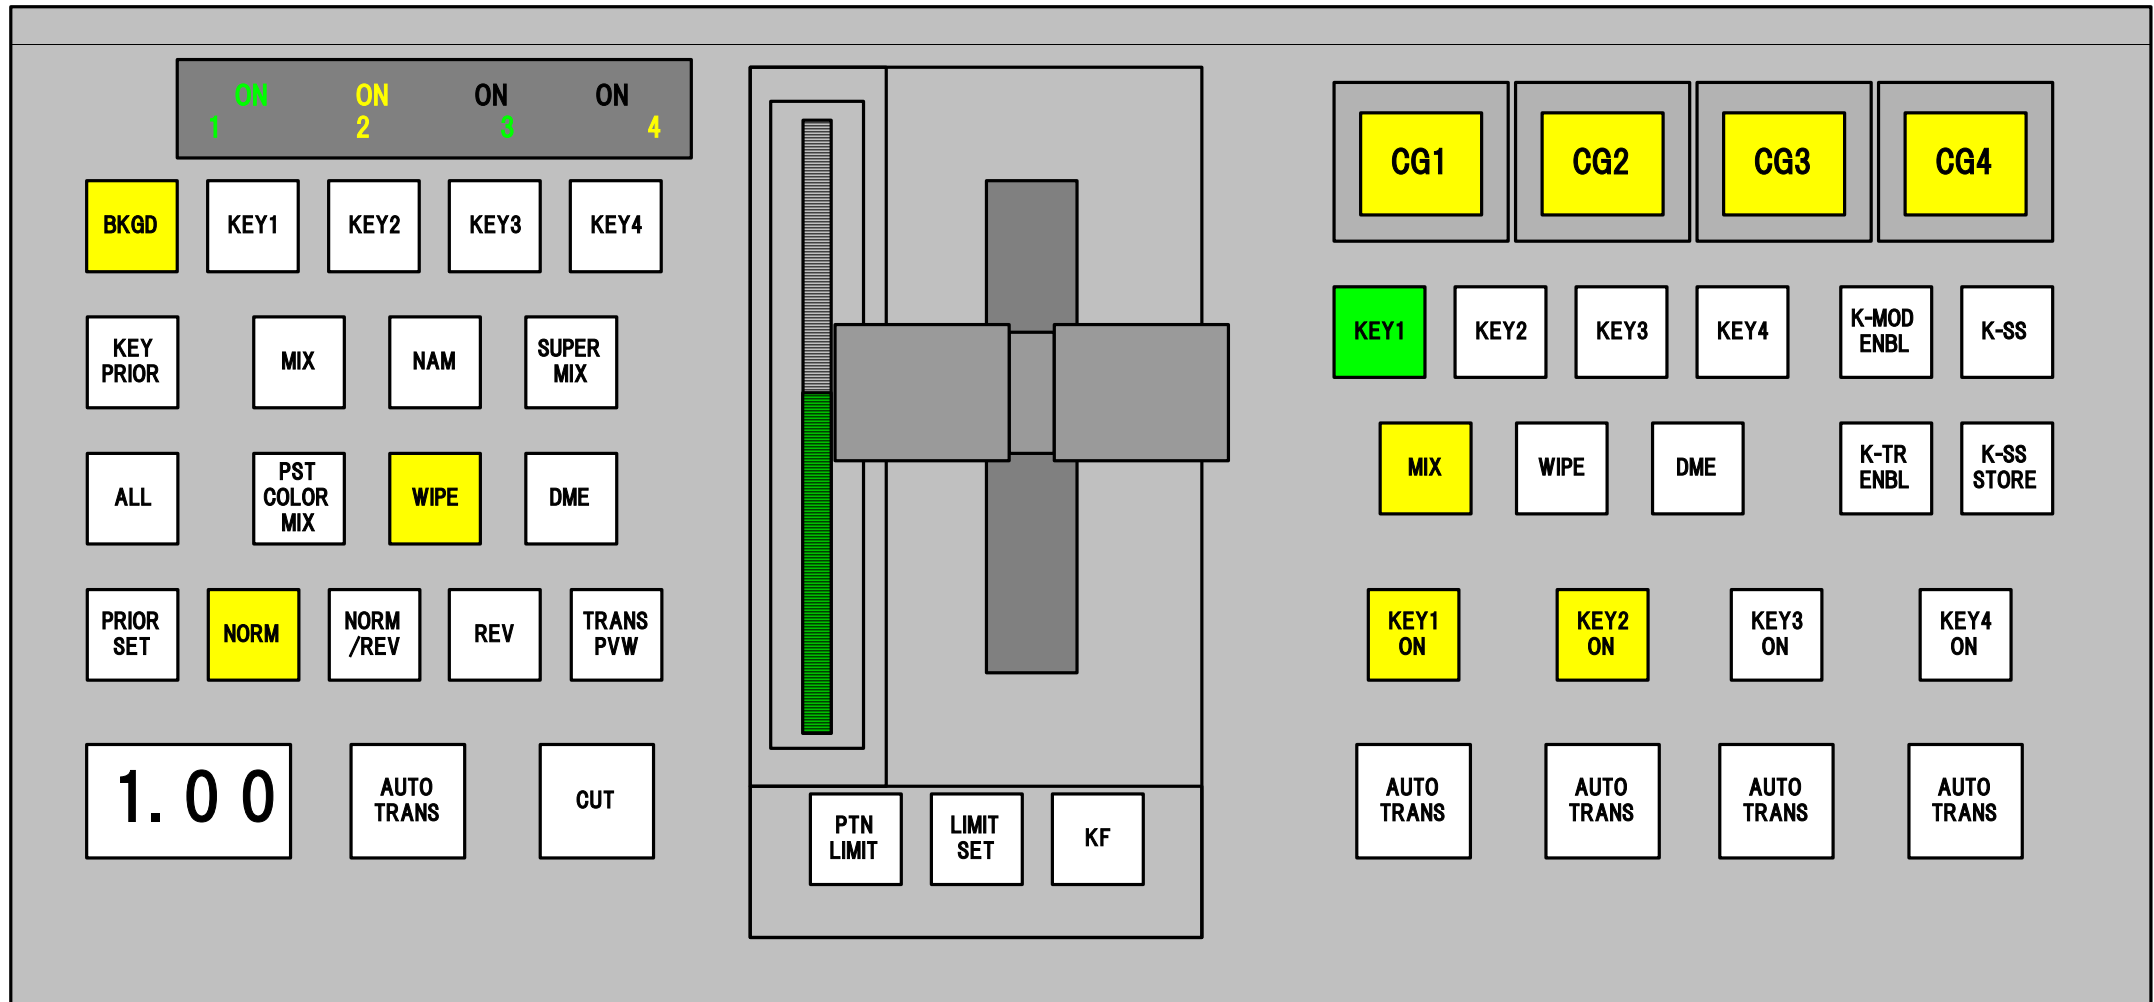


MKS-8021 (SIMPLE TRANSITION RIGHT MODULE)

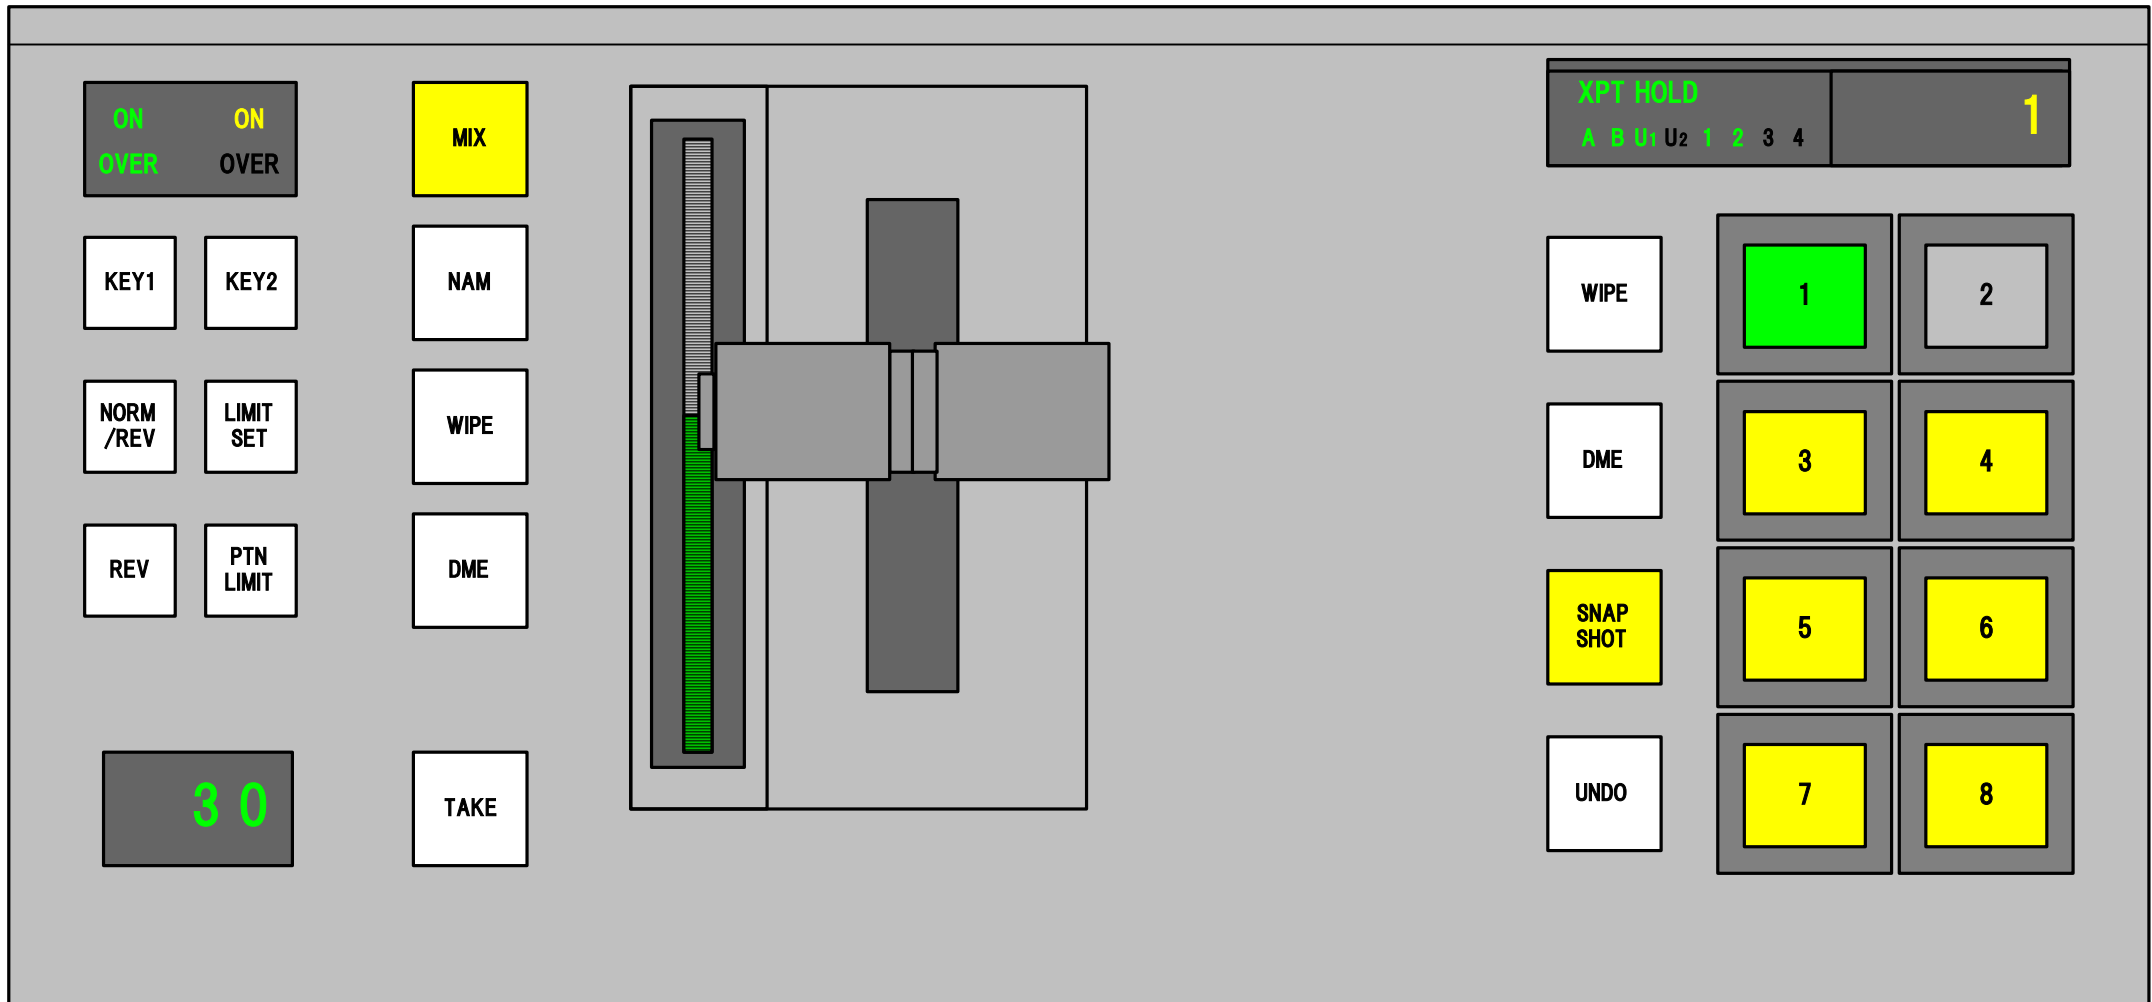


MKS-8022 (SIMPLE TRANSITION LEFT MODULE)

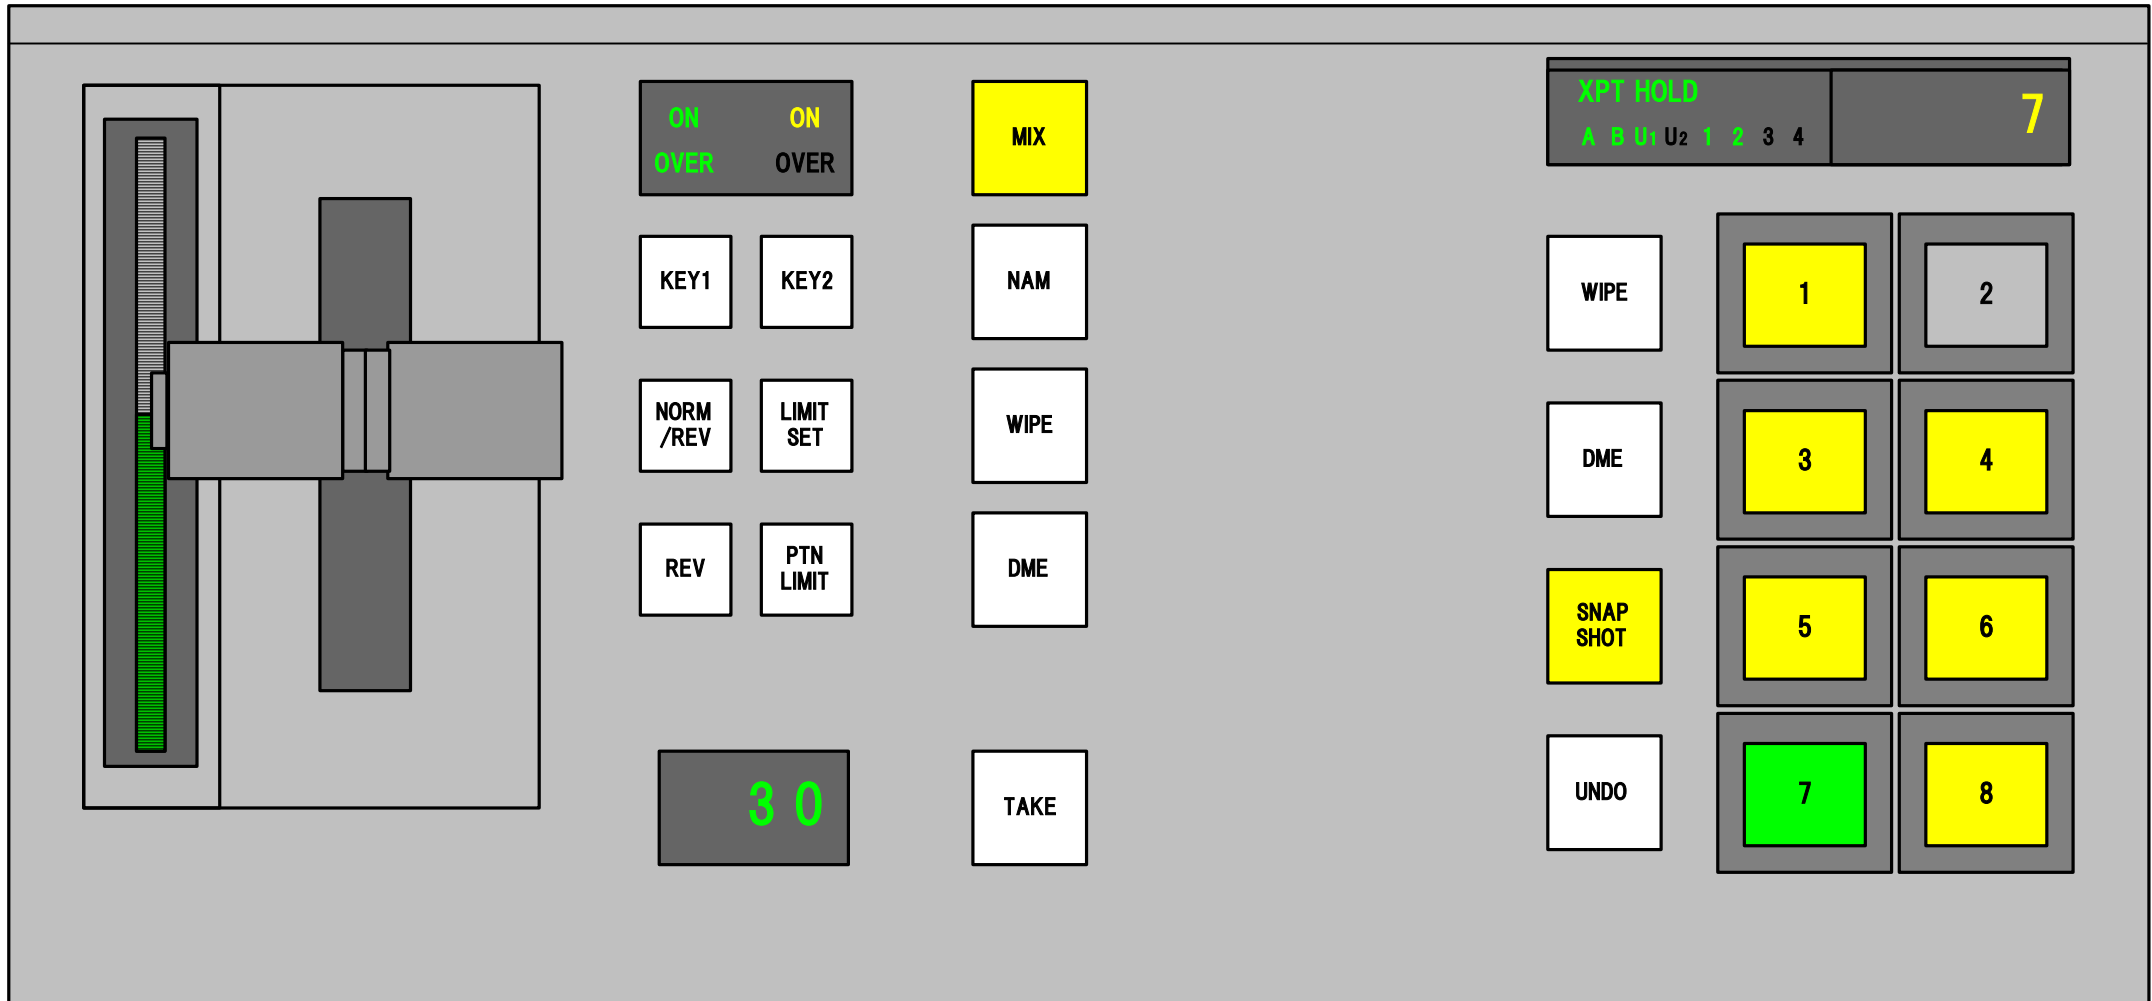


MKS-8023 (COMPACT KEY TRANSITION MODULE)

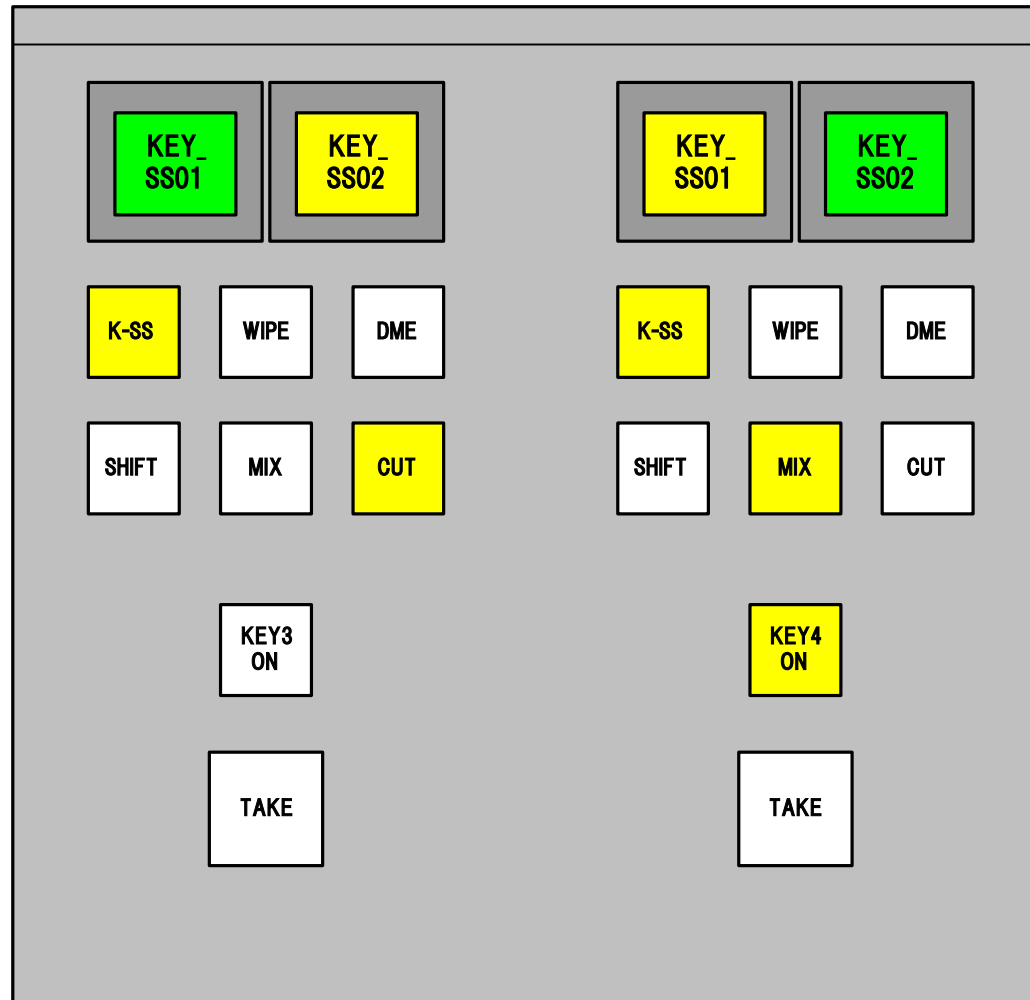


MKS-8024 (FLEXI PAD MODULE)

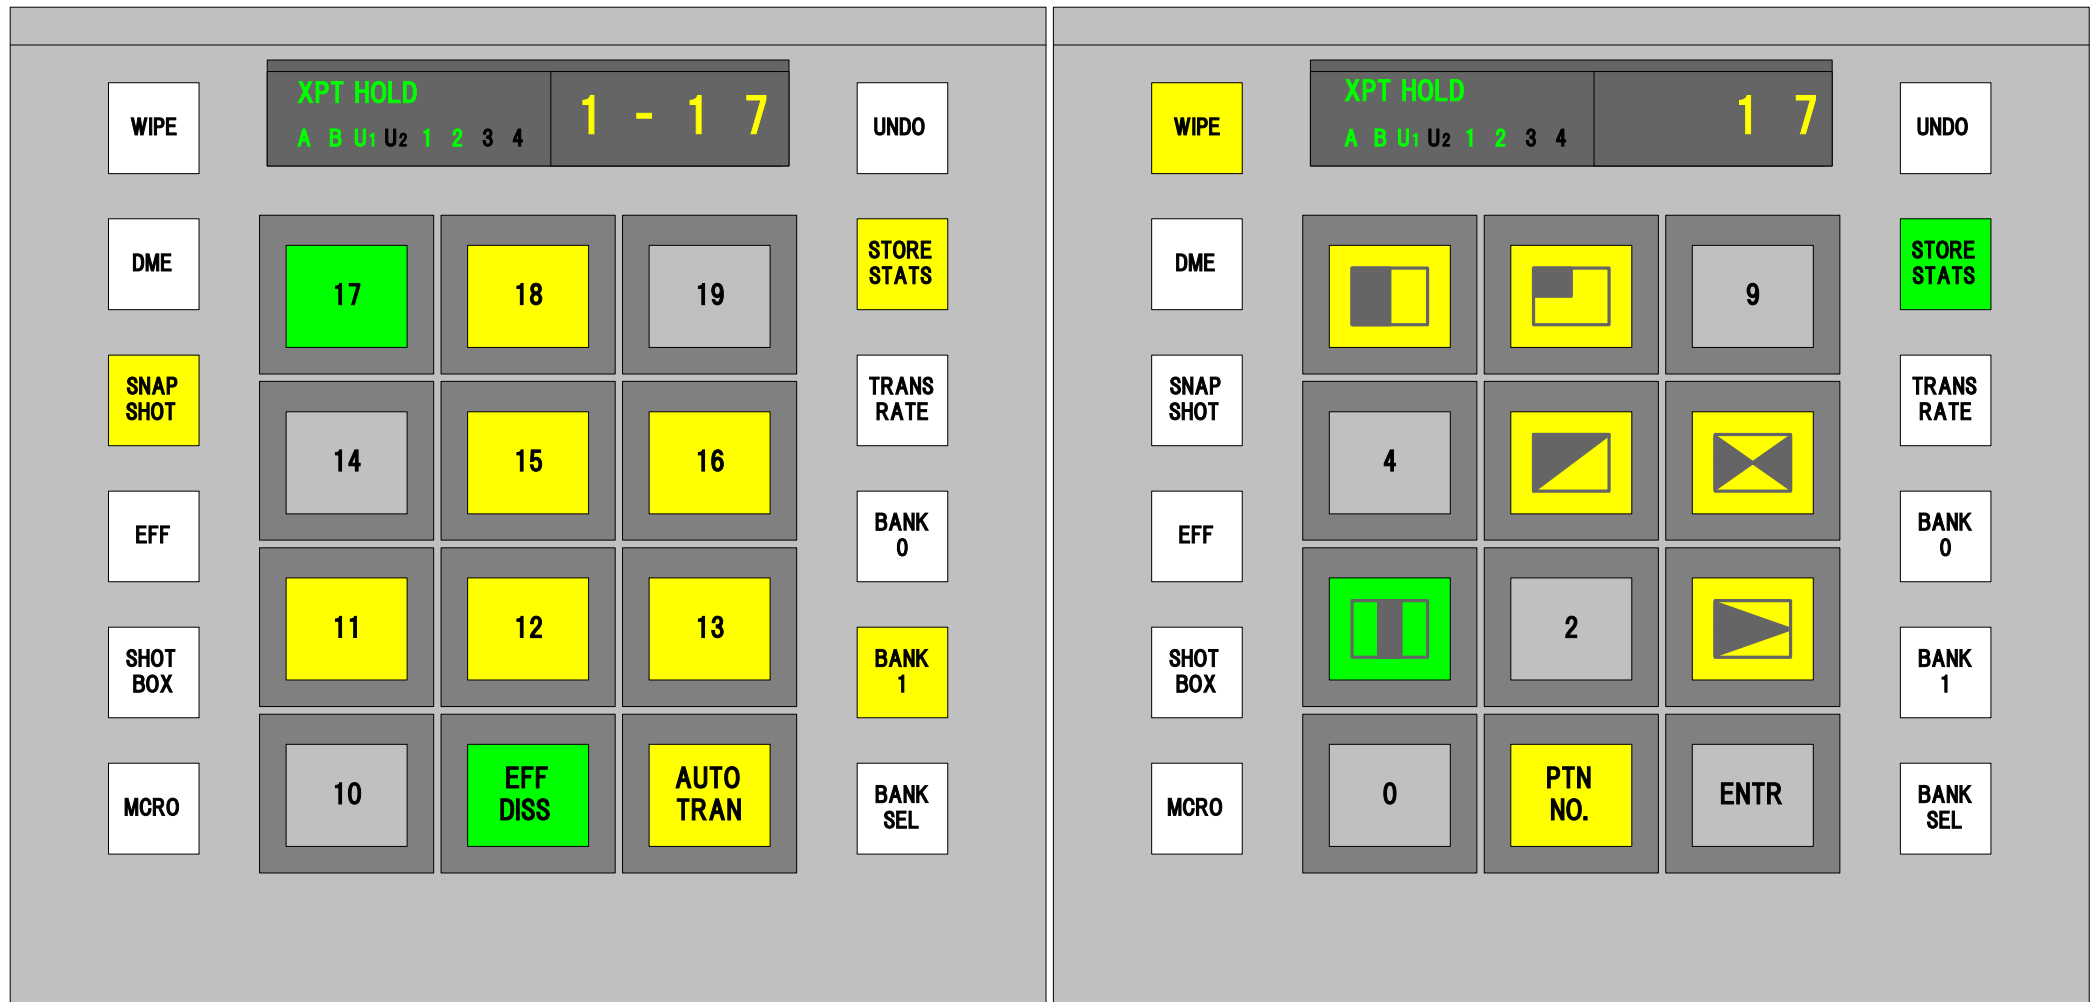


MKS-8024 (FLEXI PAD MODULE) (MODE2)

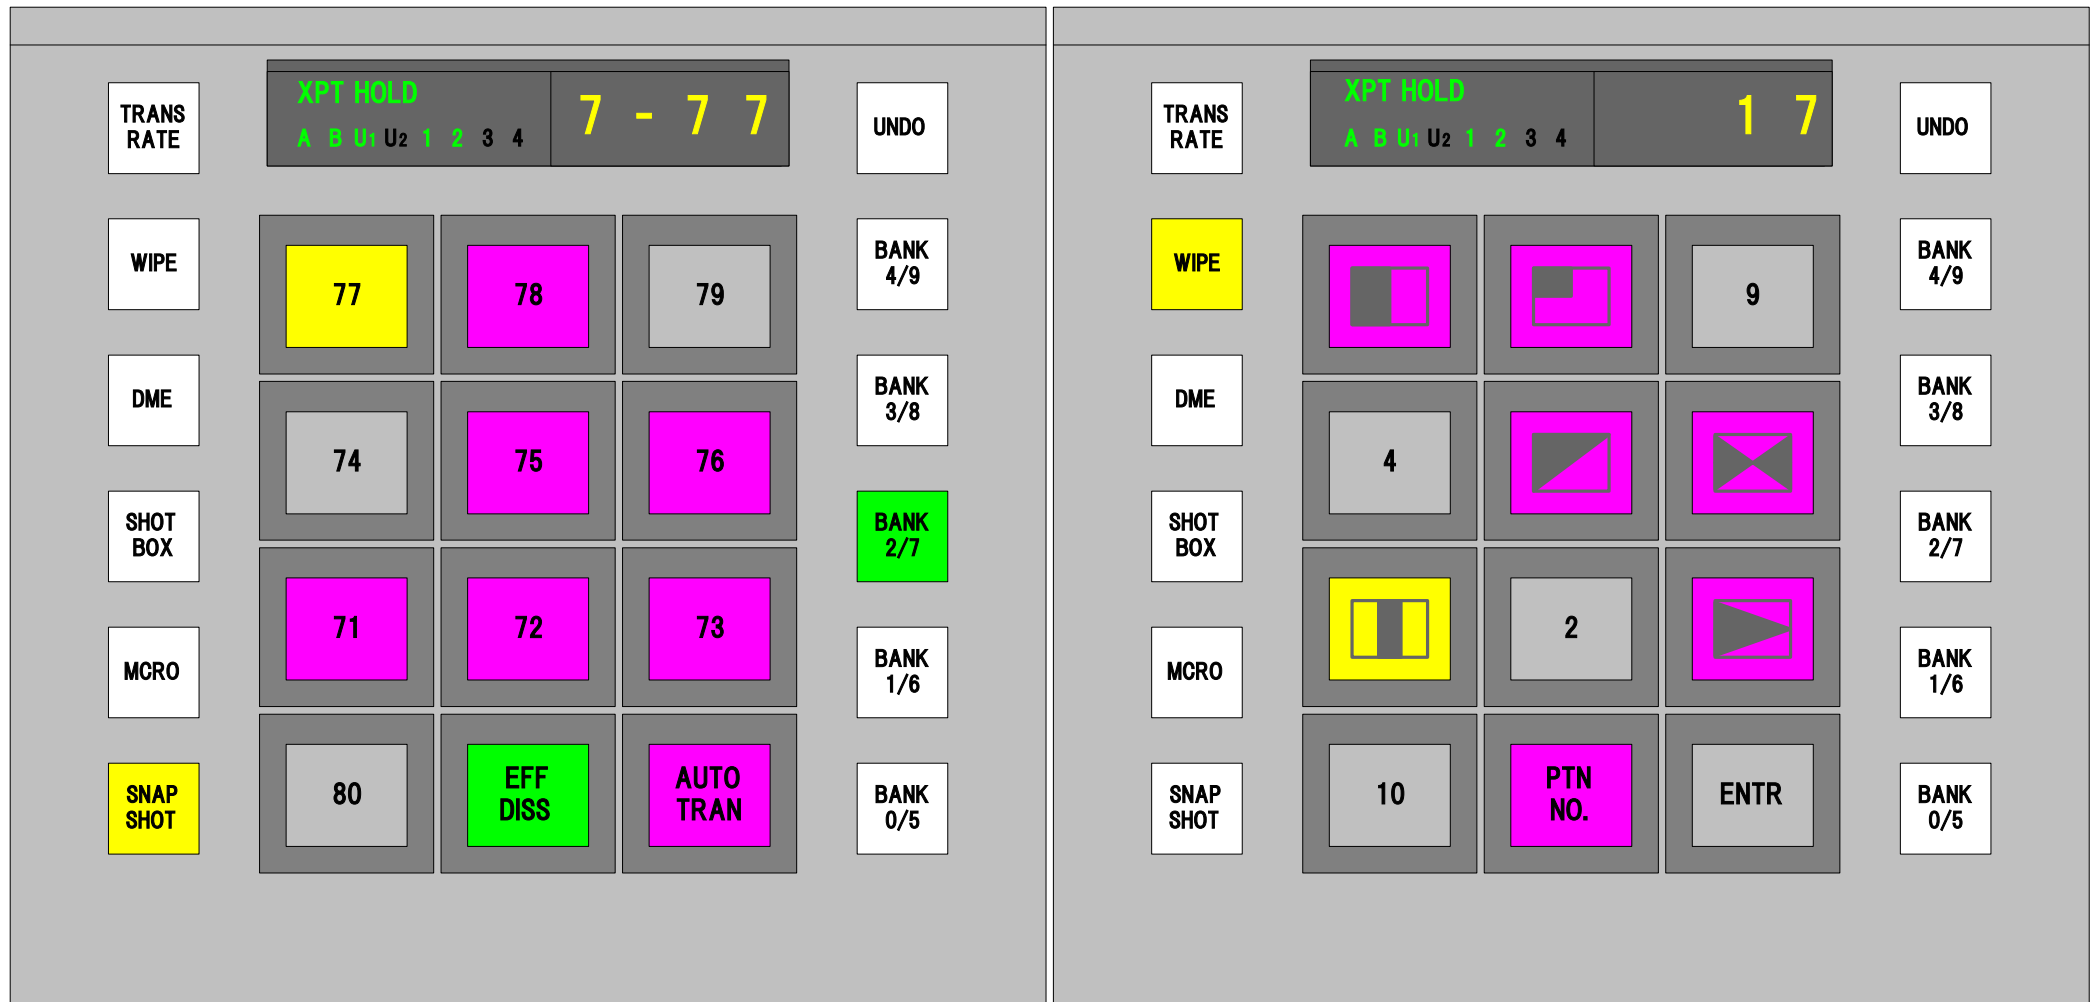


MKS-8025 (MEMORY CARD/USB MODULE)

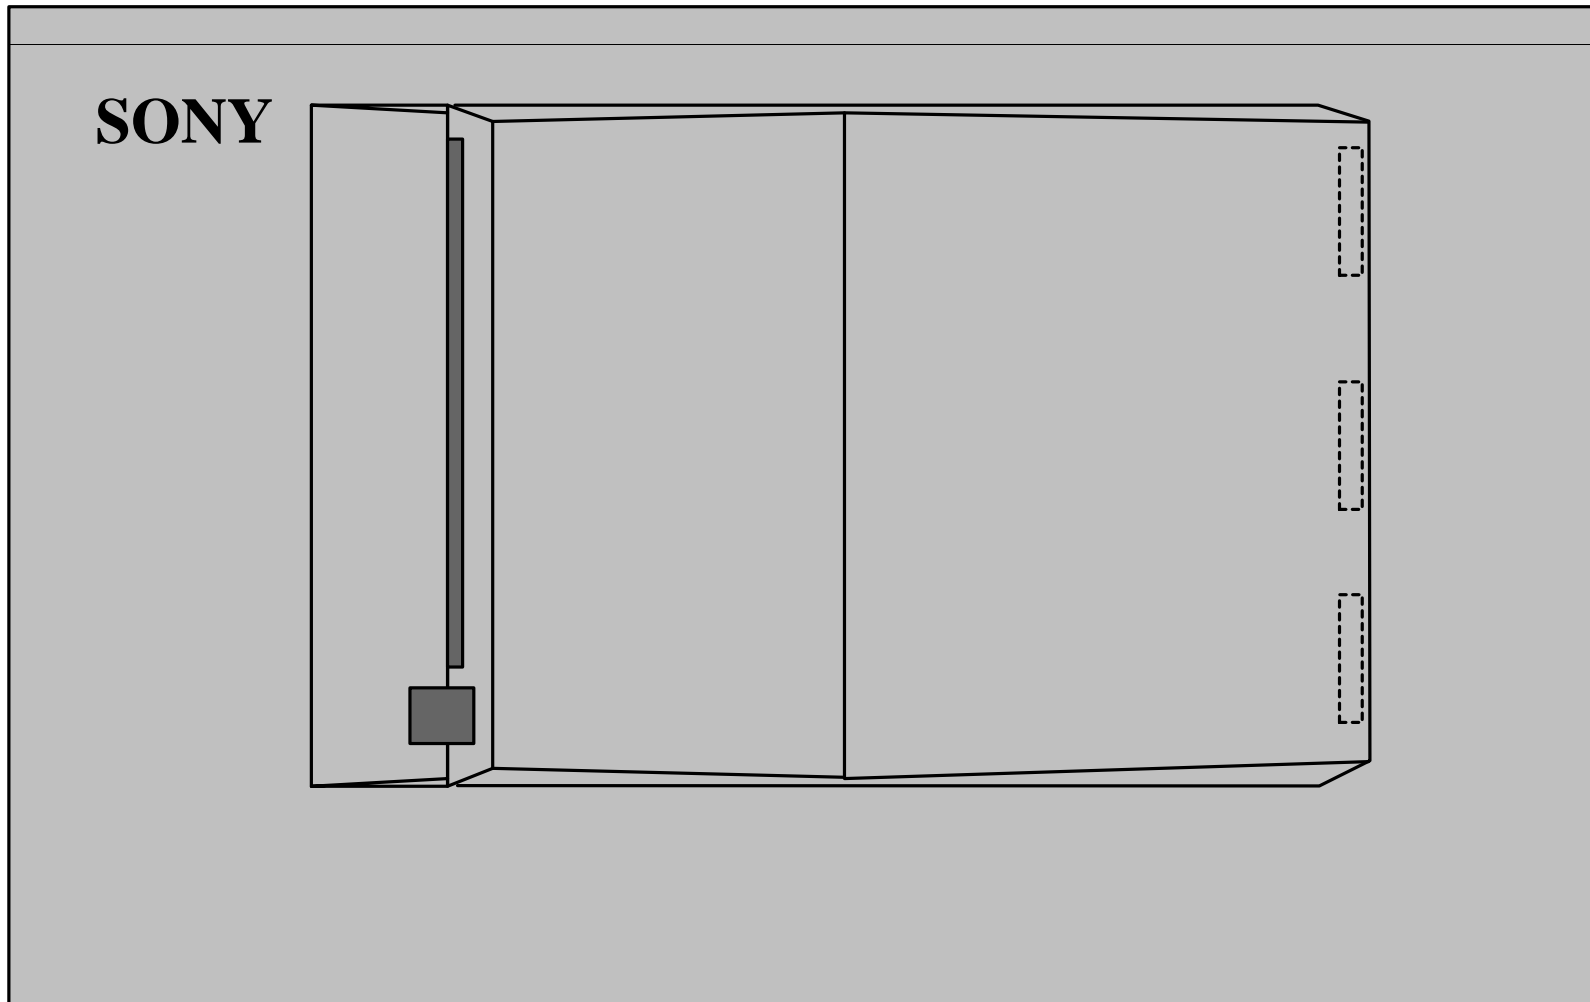


MKS-8026 (10 KEY PAD MODULE)

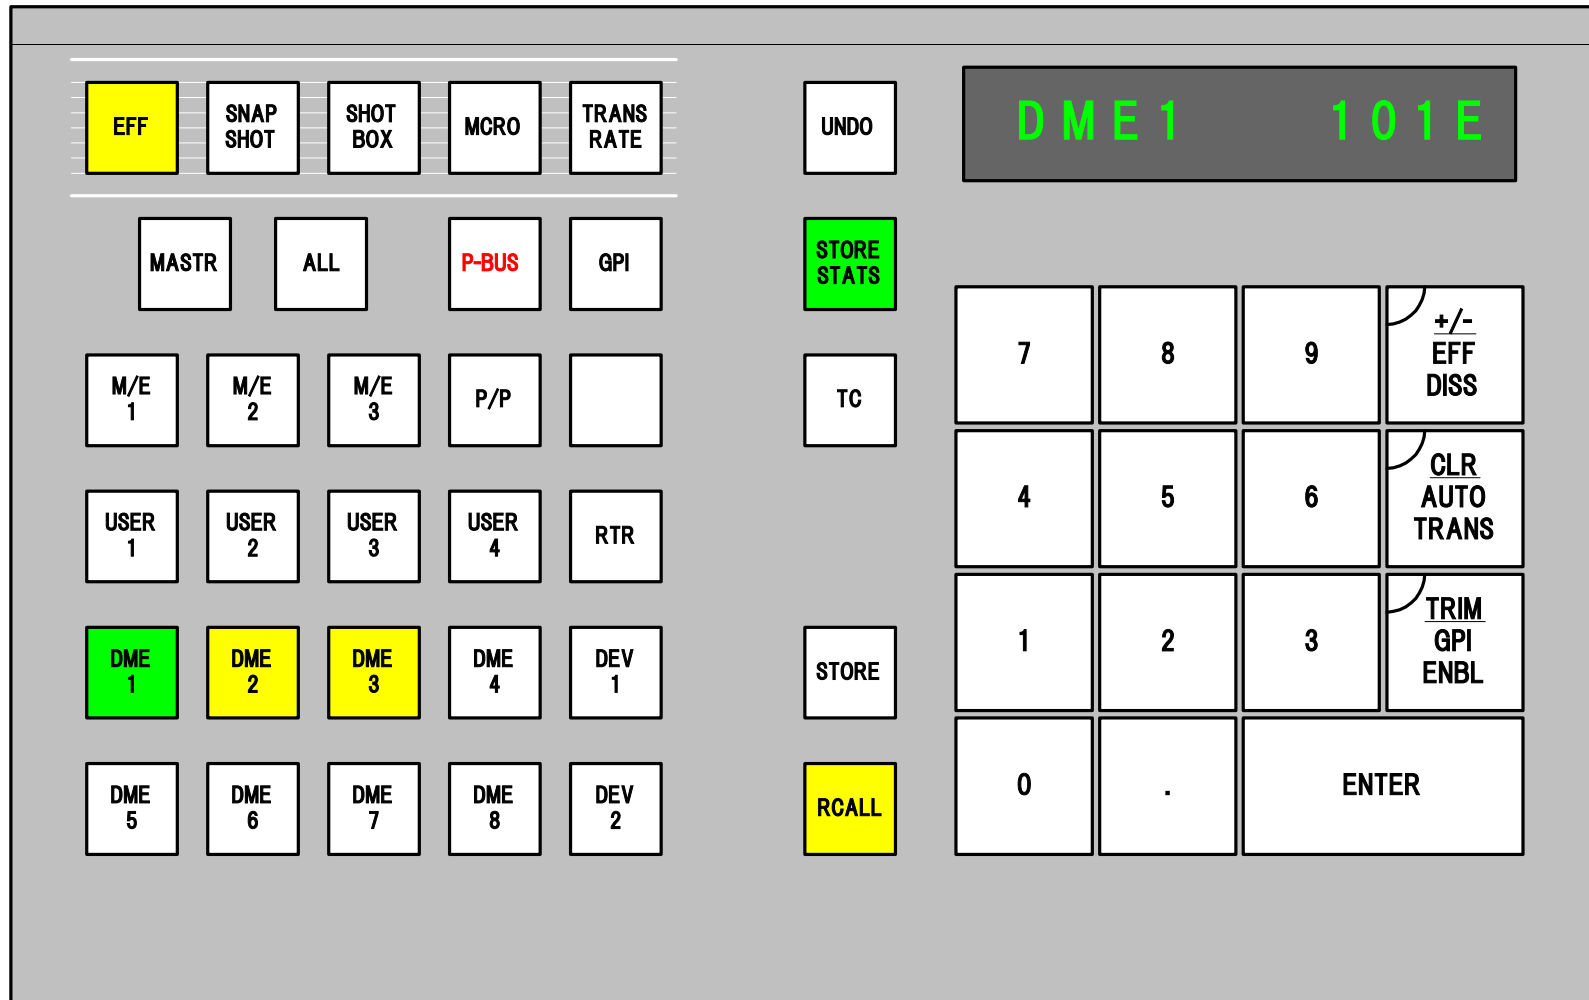


MKS-8030 (KEY FRAME MODULE)

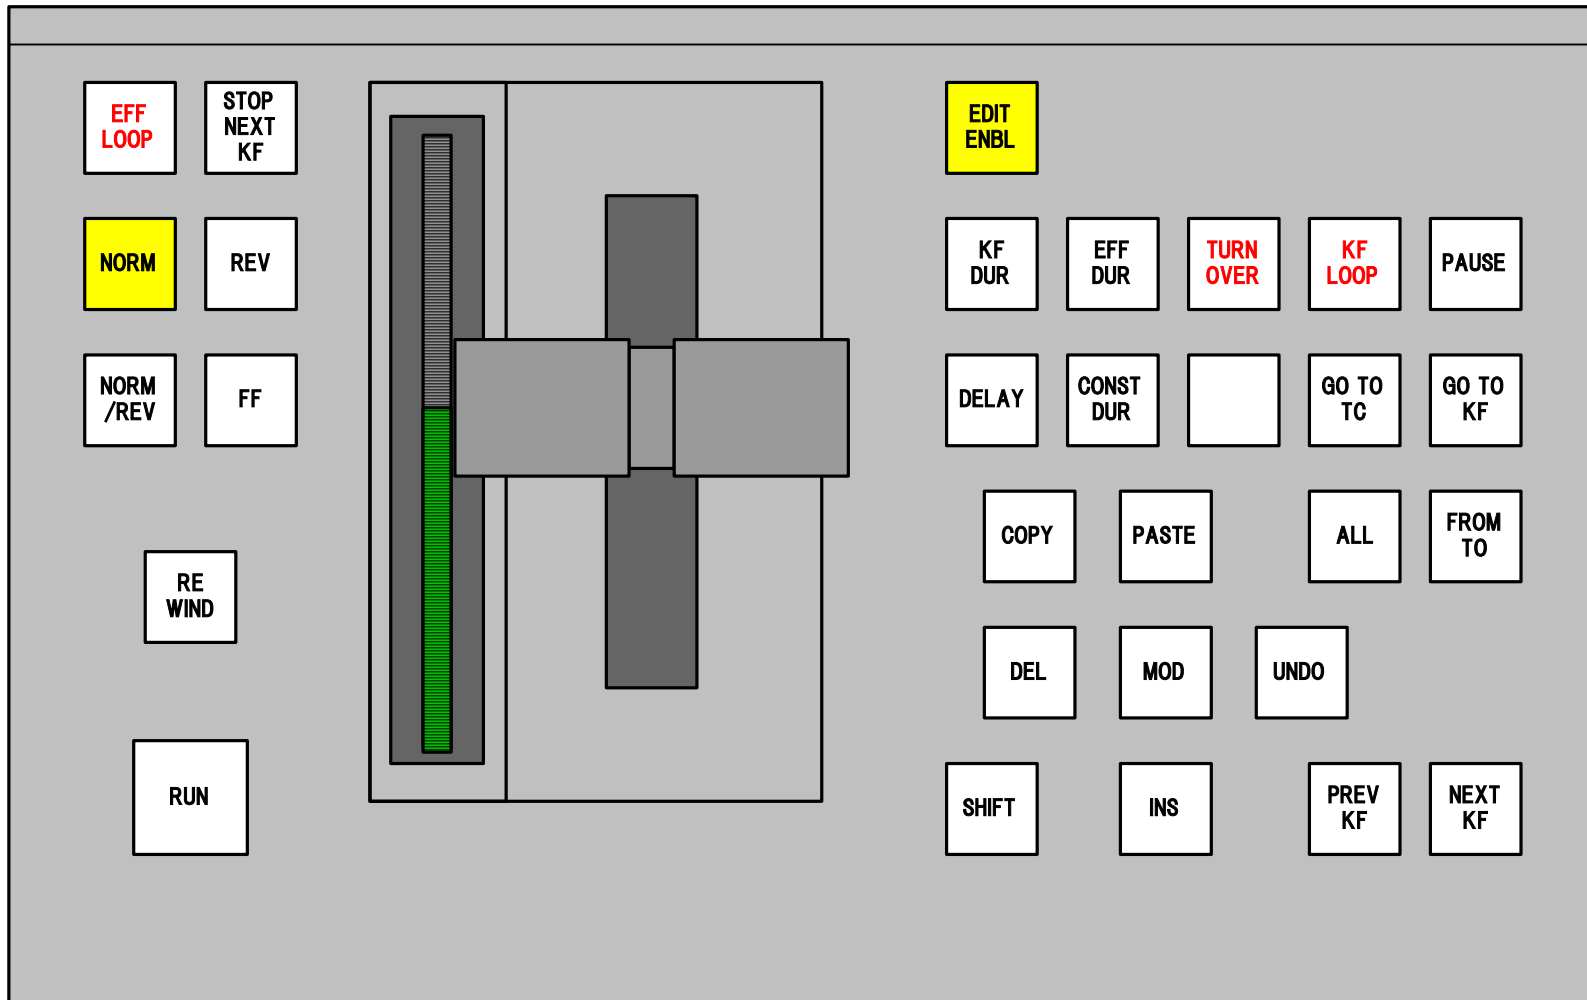


MKS-8031TB (TRACK BALL MODULE)

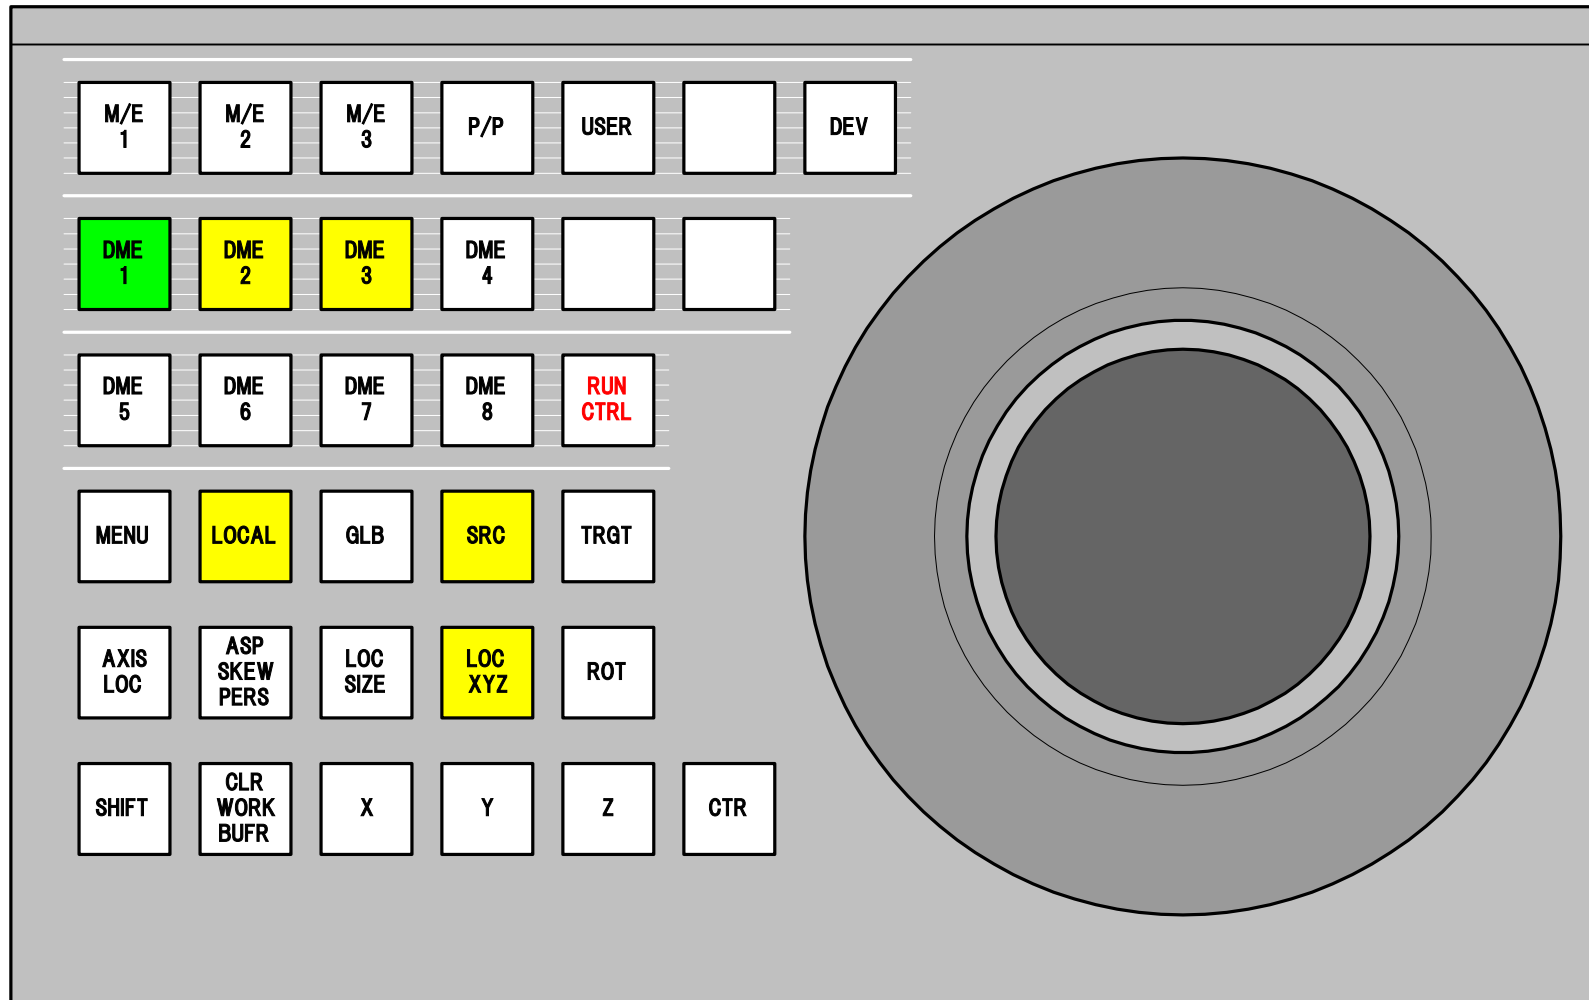


MKS-8031JS (JOY STICK MODULE)

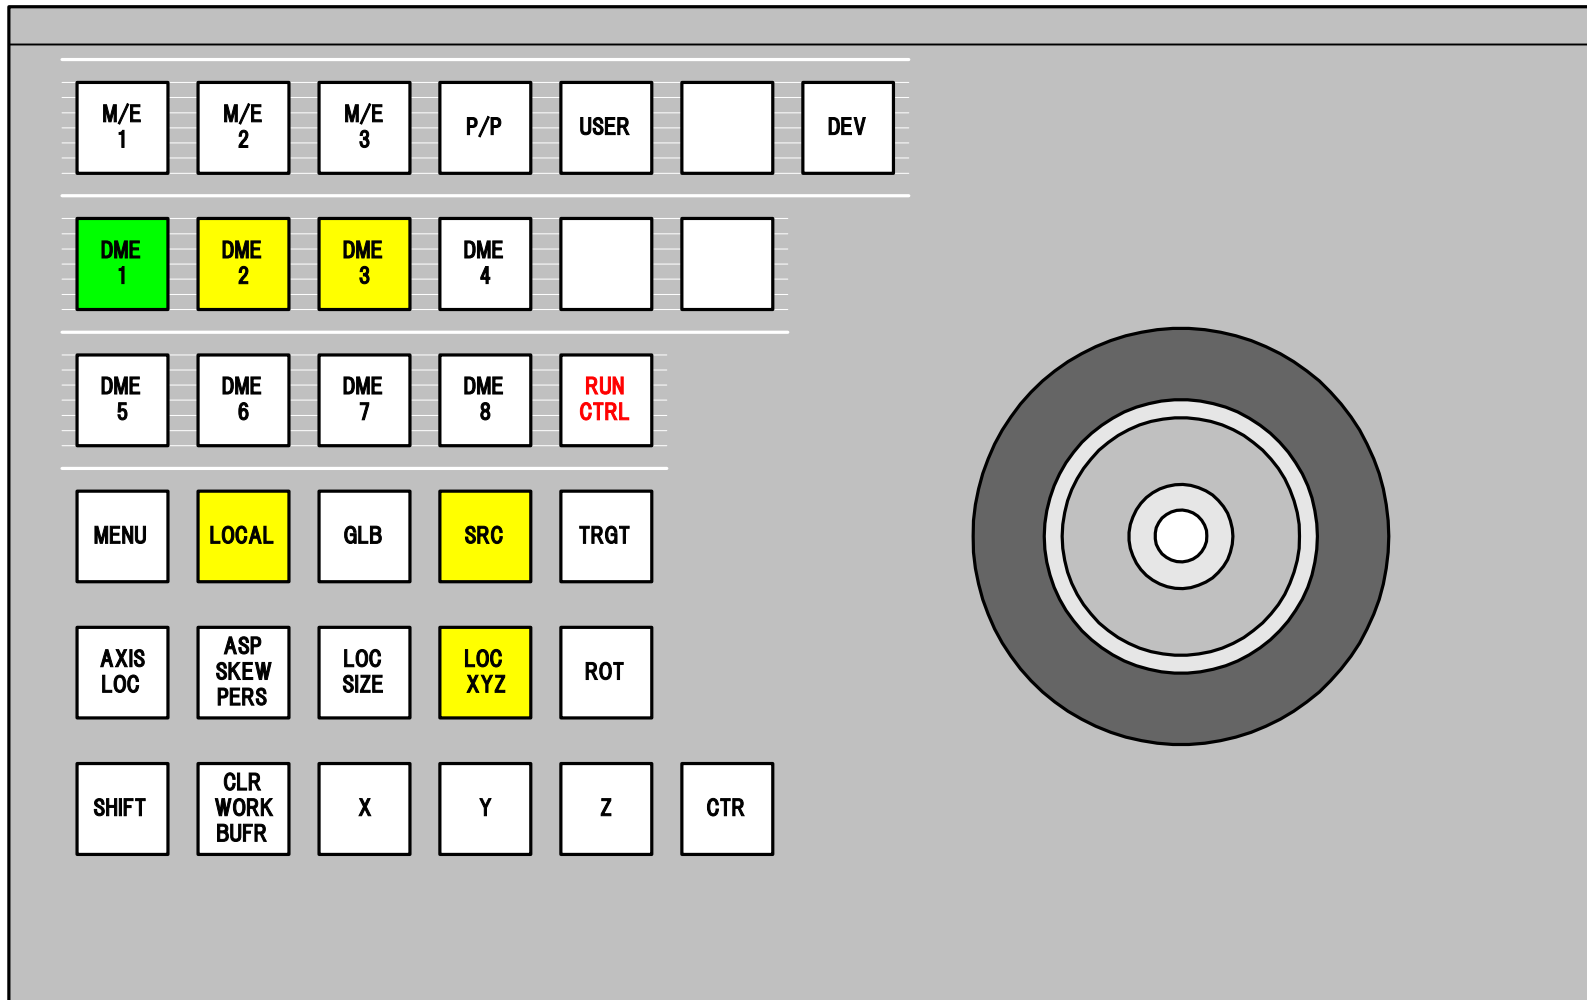


MKS-8032 (DSK FADER MODULE)

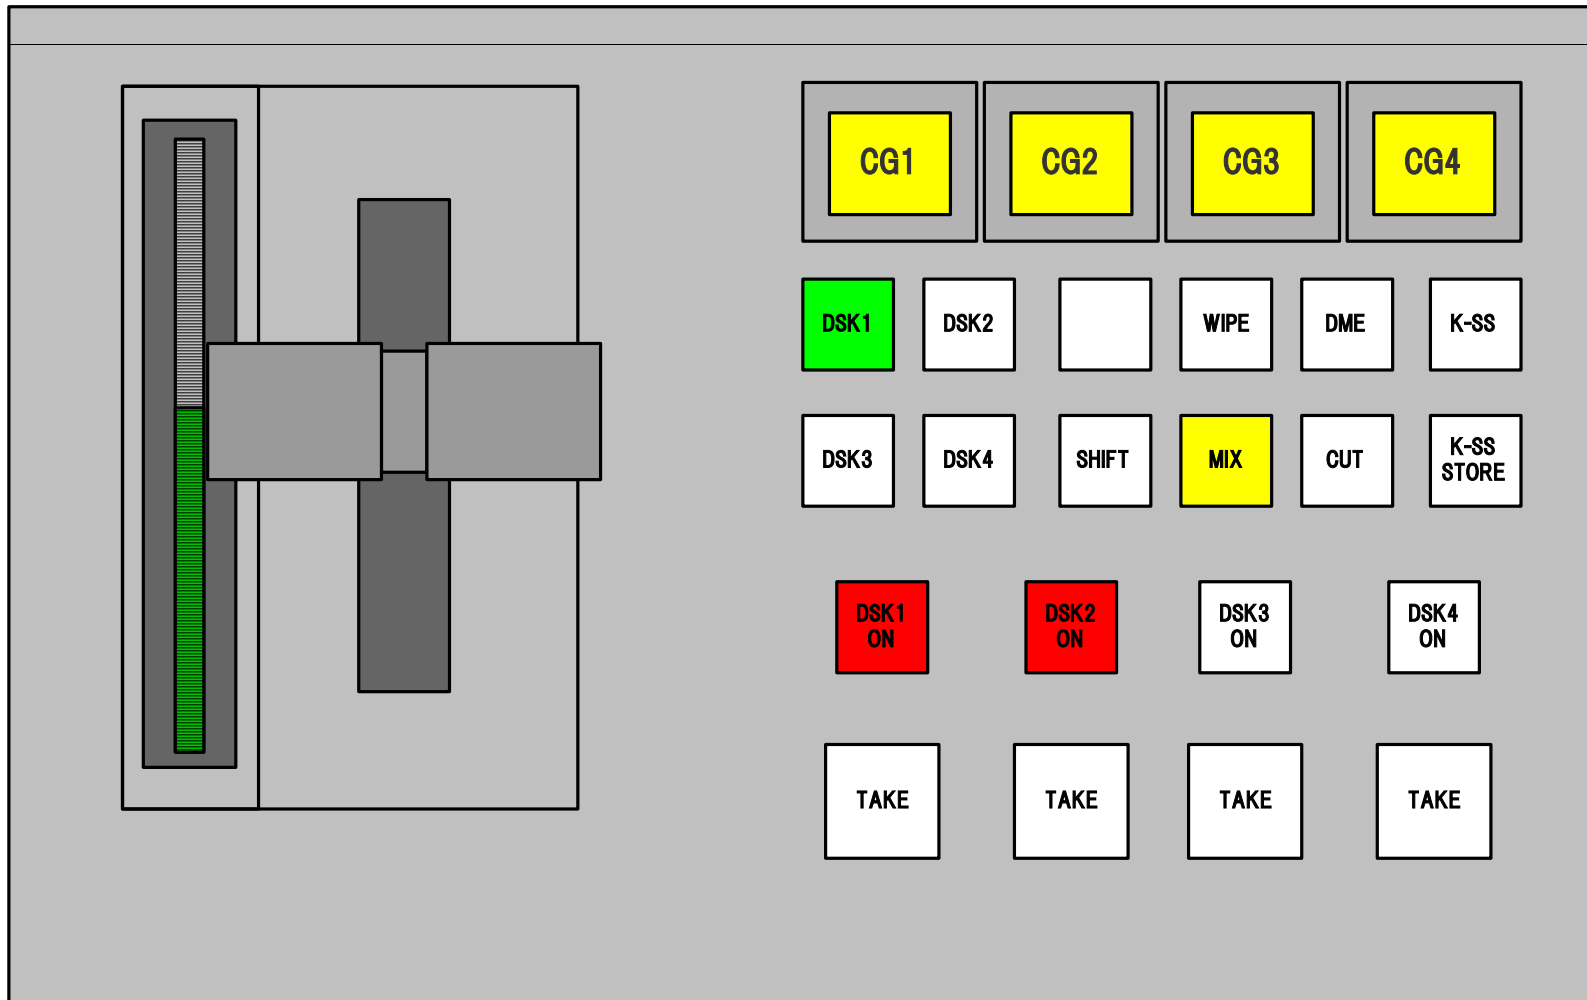

MKS-8033 (UTILITY/SHOTBOX MODULE)

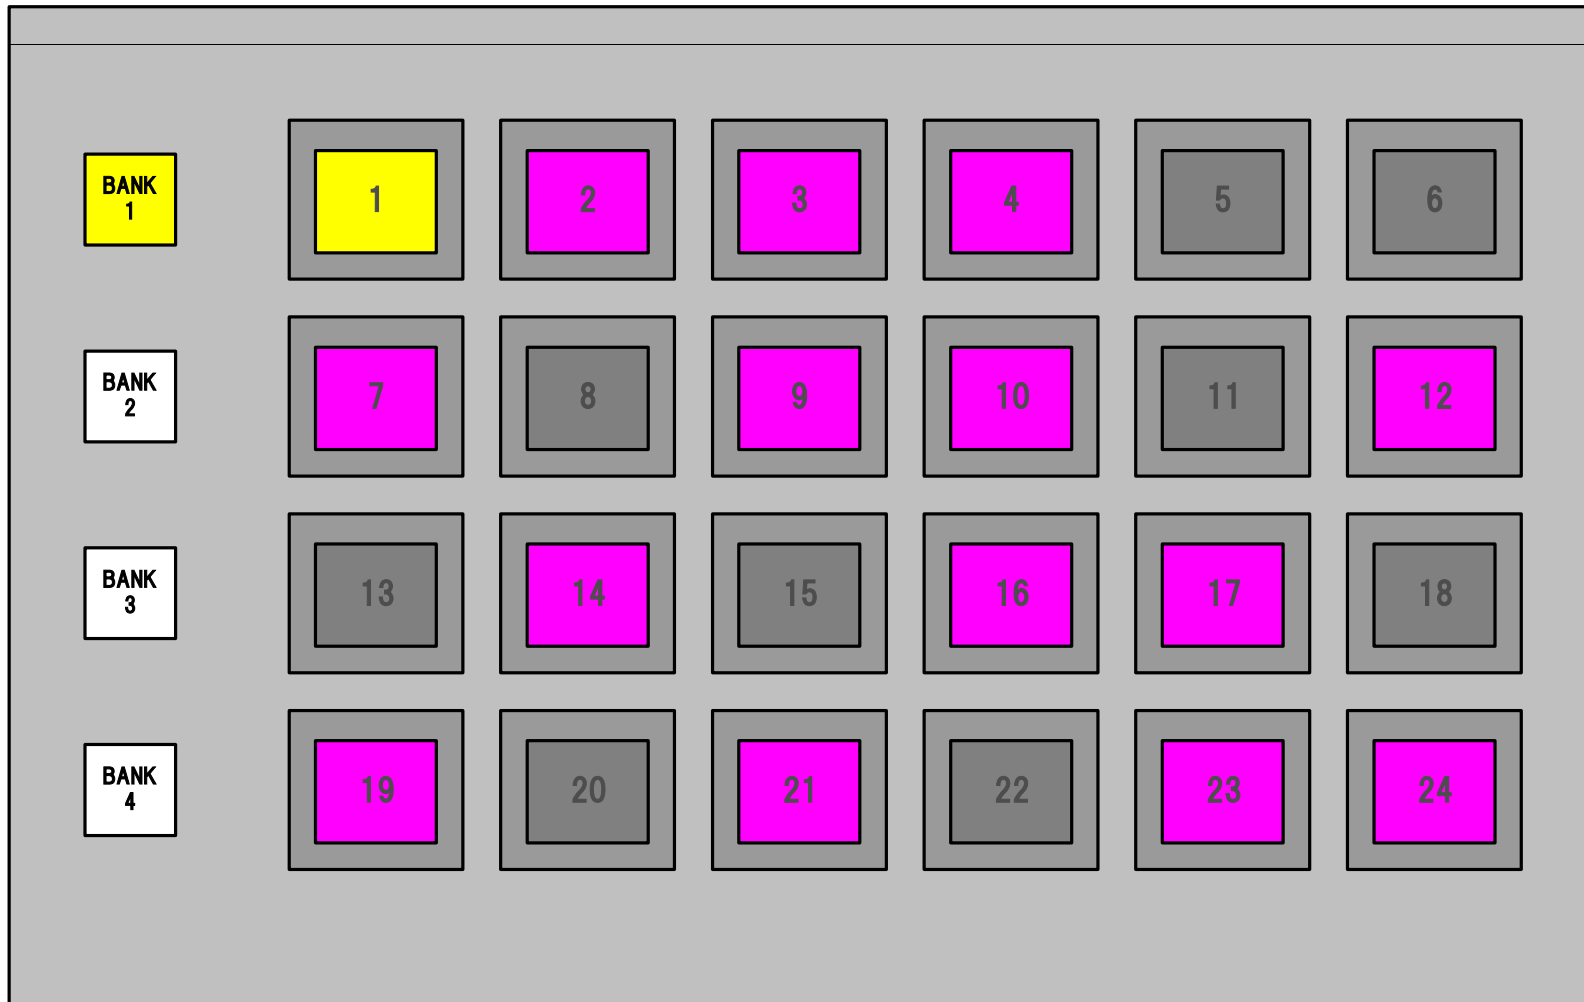

MKS-8034FB (FTB MODULE) & MKS-8034DK (DSK/FTB MODULE)

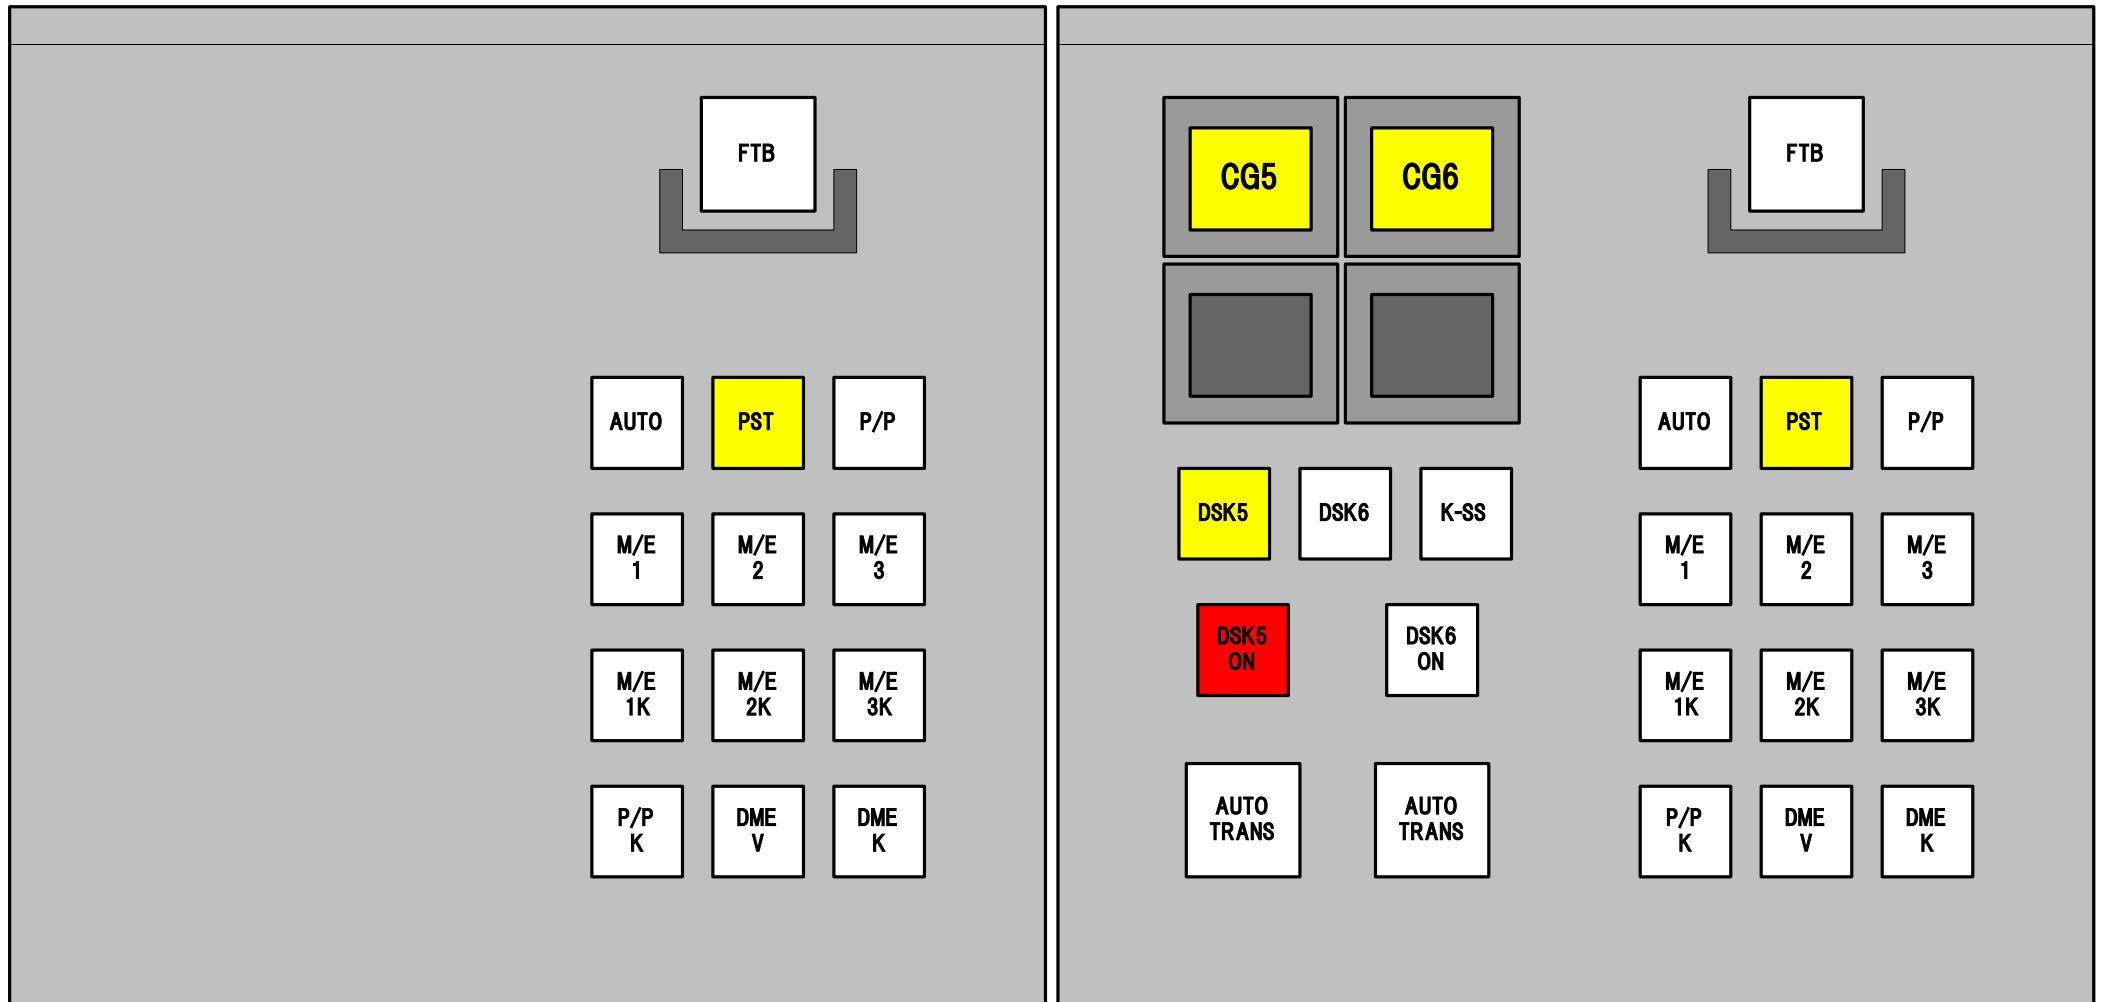

MKS-8035 (KEY CONTROL MODULE)

