Quick Installation Guide

AMX™

Switching System

The following instructions will help you to connect your AMX switching system.

For more detailed information, please consult your installer/user guide.

To install the AMX switch and the AMX5130 user station

Initial setup

Place your AMX switch and AMX5130 user station in the desired locations. Rack mounting brackets for the AMX switch are included for easy rack installation.

1 Connecting power

Power down your systems. Attach one end of each appropriate power cord to your AMX switch and to your AMX5130 user station. Plug the other end of each cord into an appropriate AC wall outlet.

2 Connecting to the LAN

Insert one end of a UTP cable attached to your LAN into the network port on the back of the AMX switch.
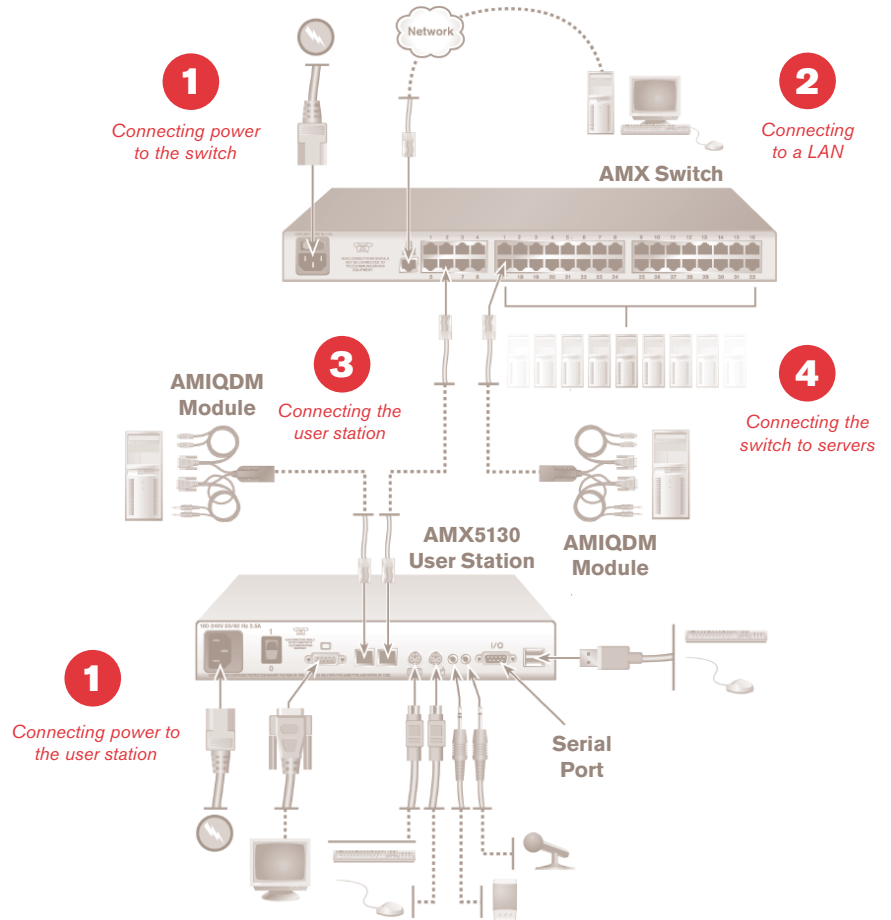
3 Connecting the AMX5130 user station to the AMX switch

Insert one end of a UTP cable attached to the user station into a numbered user port on the AMX switch for each user in your system.

4 Connecting the AMX switch to a server

Insert one end of a UTP cable into one of the numbered server ports on the switch, and fasten the opposite end into the RJ-45 port on an

1 *Connecting power to the switch*

2 *Connecting to a LAN*

AMX Switch

AMIQDM Module

3 *Connecting the user station*

4 *Connecting the switch to servers*

AMX5130 User Station

AMIQDM Module

1 *Connecting power to the user station*

Serial Port

AMIQDM (dual port/multimedia) module. Plug the AMIQDM module connectors into the appropriately labeled ports on your server for each computer to be connected to your AMX switch.

NOTE: *AMIQDM-PS2, AMIQDM-USB and AMIQDM-VSN modules are available.*

To Contact Avocent Technical Support   CALL (888) 793-8763   VISIT www.avocent.com/support   DOWNLOAD www.avocent.com

Quick Installation Guide

AMX™

Switching System

The following instructions will help you to connect your AMX switching system. For more detailed information, please consult your installer/user guide.

To install the AMX switch and the AMX5130 user station (continued)

5 **Connecting the user station to a local CPU**

Insert one end of a UTP cable into one of the RJ-45 ports on the back of the AMX5130 user station. Fasten the opposite end into the RJ-45 port on an AMIQDM module.

6 **Connecting the keyboard, monitor and mouse**

Connect the monitor to the VGA connector on the back of the AMX5130 user station. Plug your keyboard, monitor and mouse cables into the appropriately labeled PS/2 or USB connectors on the back of the AMX5130 user station.

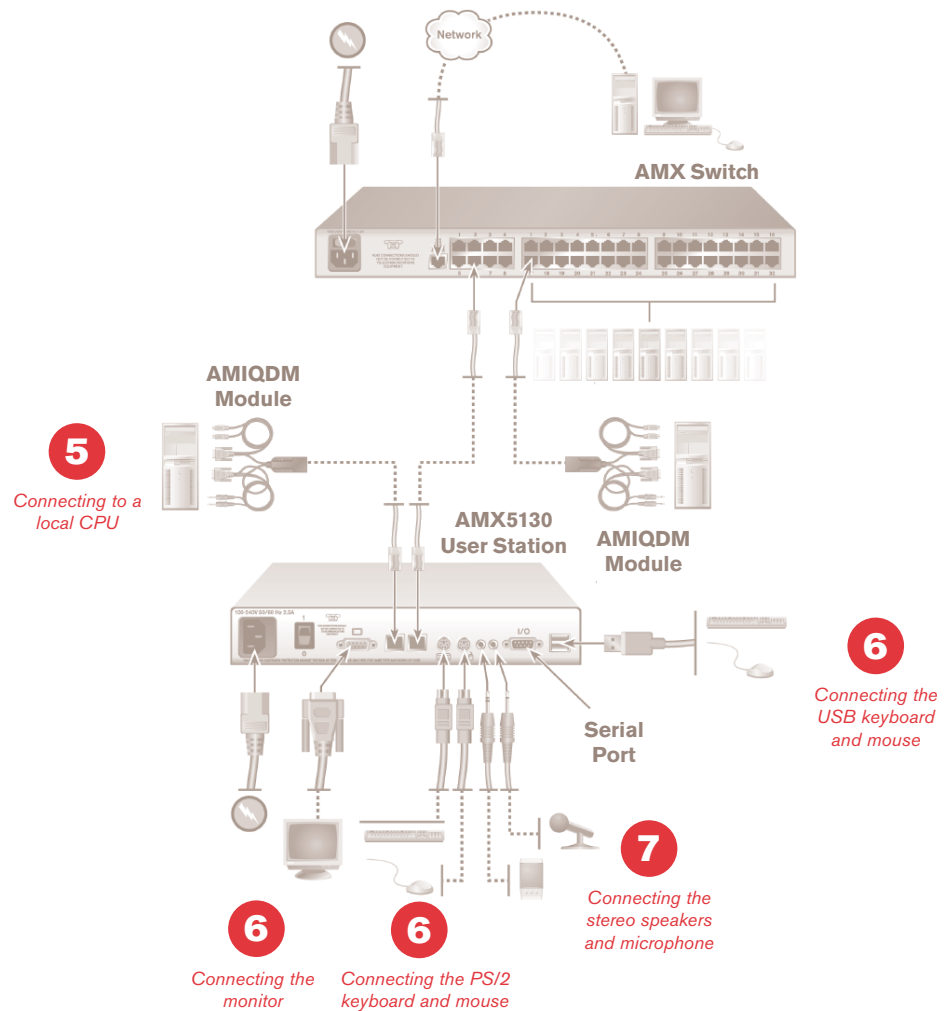**7** **Connecting the stereo speakers and microphone**

Plug your stereo speakers/headphones in the appropriately labeled connectors on the back of the AMX5130 user station.

NOTE: *The AMX5130 user station supports the connection of local serial devices.*

8 **Powering up**

Power up your AMX switching system.

AMX Switch

AMIQDM Module

5 Connecting to a local CPU

AMX5130 User Station

AMIQDM Module

6 Connecting the USB keyboard and mouse

Serial Port

7 Connecting the stereo speakers and microphone

6 Connecting the monitor

6 Connecting the PS/2 keyboard and mouse

For additional information

For further information on AMX hardware connection, software setup and security configuration, please refer to the installer/user guide included with the appliance. Visit http://www.avocent.com for the latest AMX switch updates.

To Contact Avocent Technical Support   **CALL** (888) 793-8763   **VISIT** www.avocent.com/support   **DOWNLOAD** www.avocent.com

590-487-501A