Model 370
Intercom Beltpack

Configuration Guide

This Configuration Guide is applicable for the following serial numbers: M370-00251 and later with application firmware 2.1 and later and Dante firmware 1.1 (Ultimo 2.2.3.1) and later
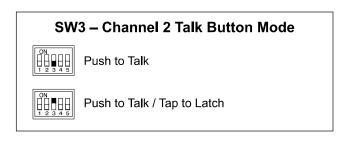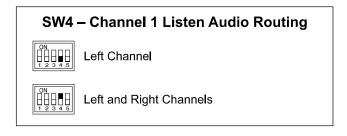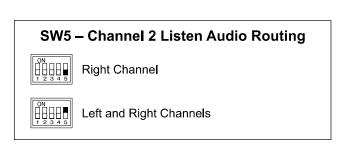
SW1 – Mic Preamp Gain

[DIP switch ON, positions 1-5] 40 dB

[DIP switch ON, positions 1-5] 46 dB

SW2 – Channel 1 Talk Button Mode

[DIP switch ON, positions 1-5] Push to Talk

[DIP switch ON, positions 1-5] Push to Talk / Tap to Latch

SW3 – Channel 2 Talk Button Mode

[DIP switch ON, positions 1-5] Push to Talk

[DIP switch ON, positions 1-5] Push to Talk / Tap to Latch

SW4 – Channel 1 Listen Audio Routing

[DIP switch ON, positions 1-5] Left Channel

[DIP switch ON, positions 1-5] Left and Right Channels

SW5 – Channel 2 Listen Audio Routing

[DIP switch ON, positions 1-5] Right Channel

[DIP switch ON, positions 1-5] Left and Right Channels

Headset Connector Pinout

XLR5F

1 >——— MIC IN – / SHIELD

2 >——— MIC IN +

3 >——— PHONES COM

4 >——— PHONES OUT LEFT / CH 1

5 >——— PHONES OUT RIGHT / CH 2