



NV8576 Uncrating Instructions

1

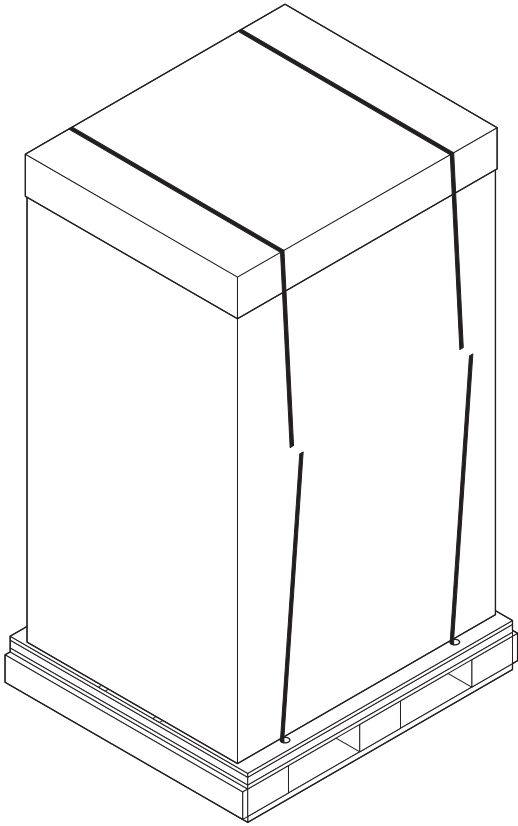


1. Remove straps.

2

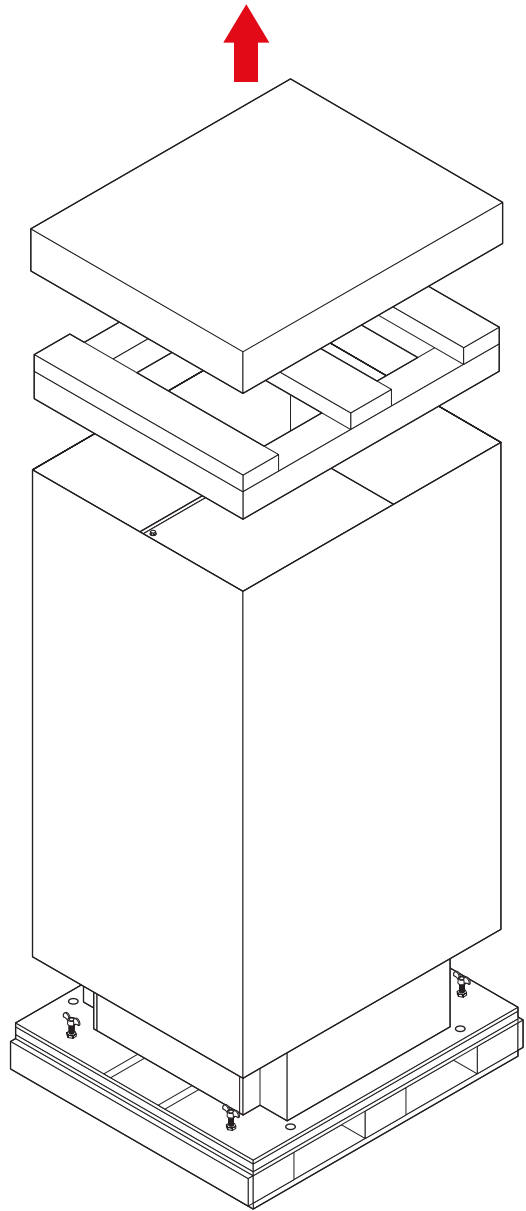


2. Lift and remove cardboard and padding.

3

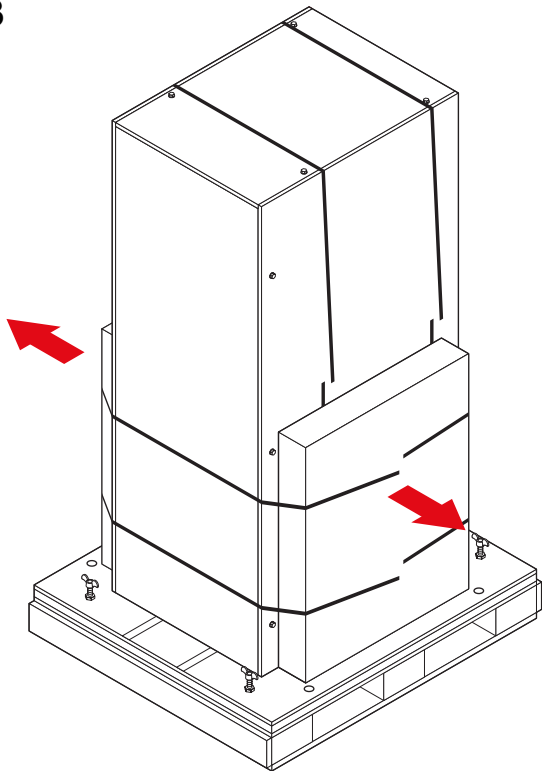


3. Remove straps and remove kit box(es).

4

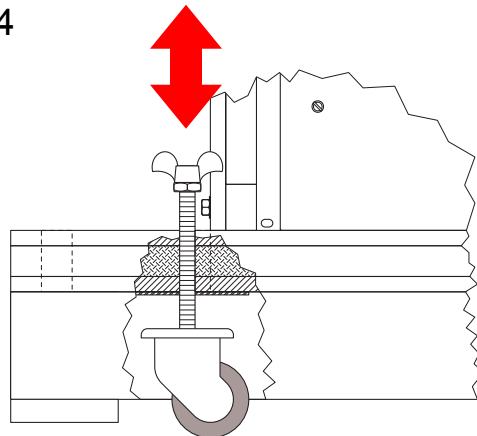


4. Optionally, lower wheels.

5

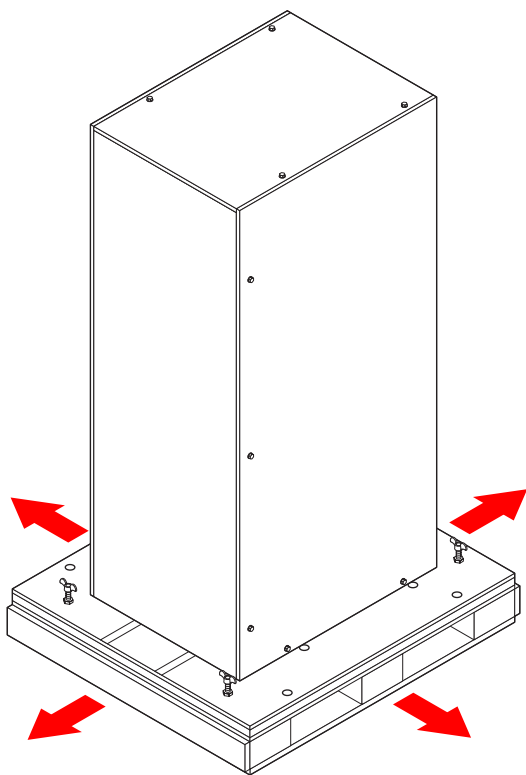


5. With wheels down, you can roll the unit on a level floor.

6

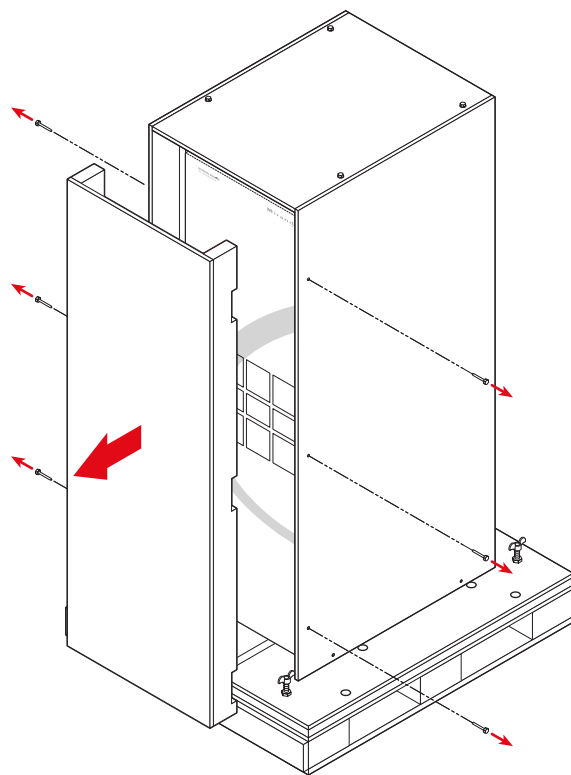


6. Remove (6) screws and remove front panel.

7

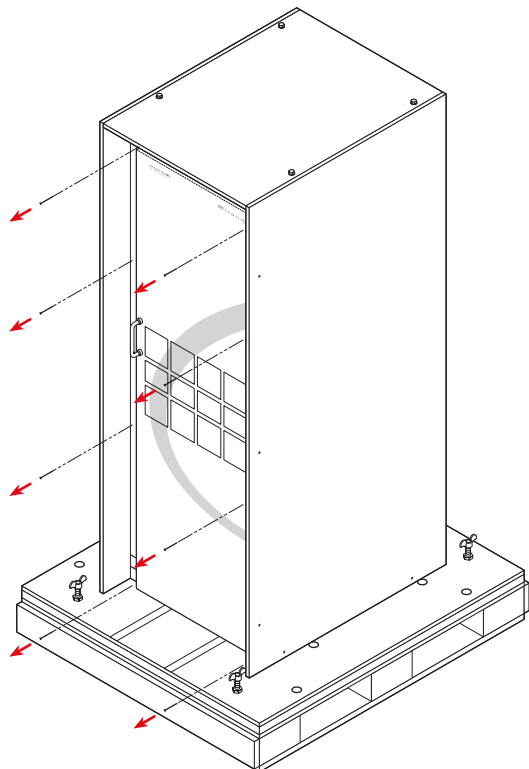


7. Remove screws holding the router to the crate.


8

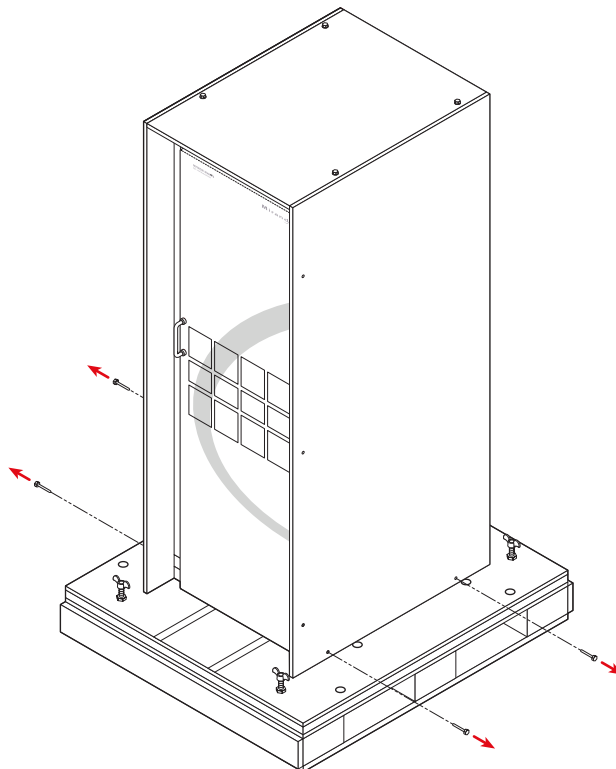


8. Remove (4) screws.

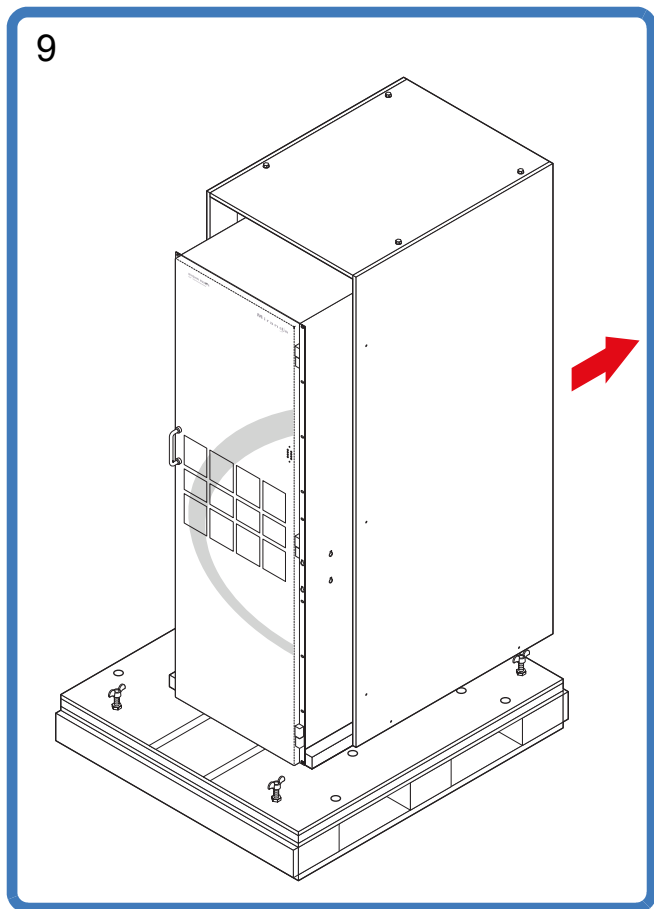

9. Slide housing back and off the base.

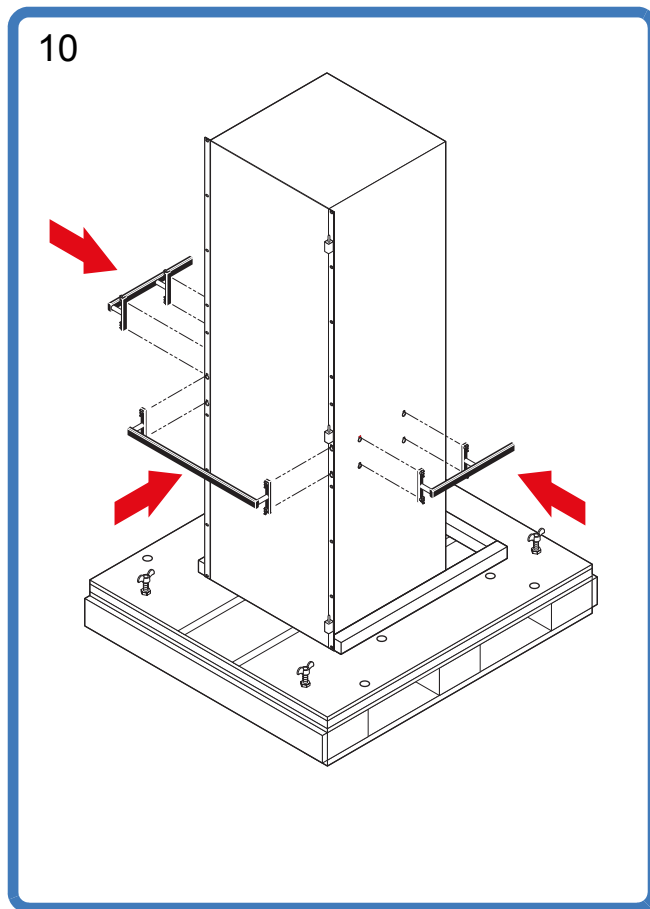

10. Remove door. Attach handles.

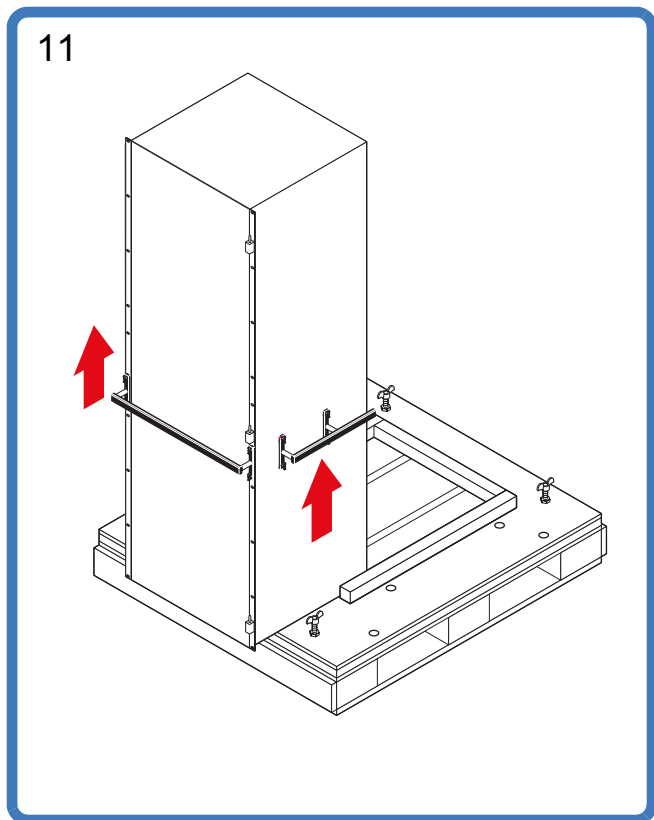

11. Lift and slide router off base.



Miranda Technologies, Inc.
3499 Douglas B. Floreani
Montreal, Quebec
Canada H4S 2C6

