



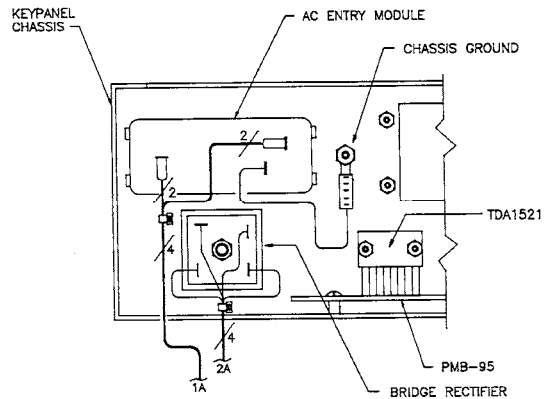


DETAIL-A

NOTE 1: USE PPS-95 ASSEMBLY

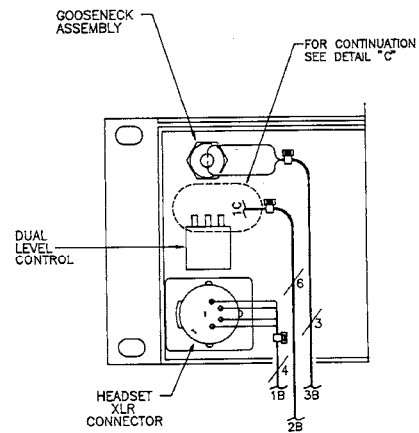


DETAIL-B

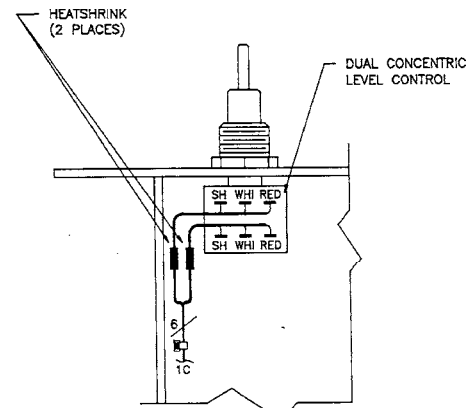

DETAIL-C

NOTE 3: FORWARD SECTION OF POTENTIOMETER CONNECTED TO P2 PINS 1,2,3
REAR SECTION OF POTENTIOMETER CONNECTED TO P2 PINS 4,5,6

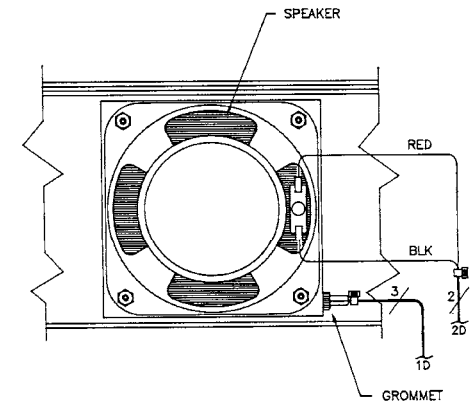

DETAIL-D

NOTE 5: USE DKP-3 ASSEMBLY

P1 WIRING	
1	RED
2	GRAY
3	YELLOW
4	BLUE
5	GREEN

P9 WIRING	
1	RED
2	BLACK

P2 WIRING	
1	RED
2	WHITE
3	SHIELD
4	RED
5	WHITE
6	SHIELD



P14,15 WIRING	
1	BROWN
2	RED
3	ORANGE
4	YELLOW
5	GREEN
6	BLUE
7	VIOLET
8	GRAY
9	WHITE
10	BLACK

P12 WIRING	
1	BROWN
2	RED
3	ORANGE
4	YELLOW
5	GREEN
6	BLUE
7	VIOLET
8	GRAY
9	WHITE
10	BLACK

P13 WIRING	
1	BLACK
2	WHI/RED
3	BROWN
4	RED
5	ORANGE
6	YELLOW
7	GREEN
8	BLUE
9	VIOLET
10	GRAY
11	WHITE

P16 WIRING	
1	GRAY
2	RED
3	WHITE

NOTE 2: PRE-ASSEMBLED PPS-95 ASSEMBLY

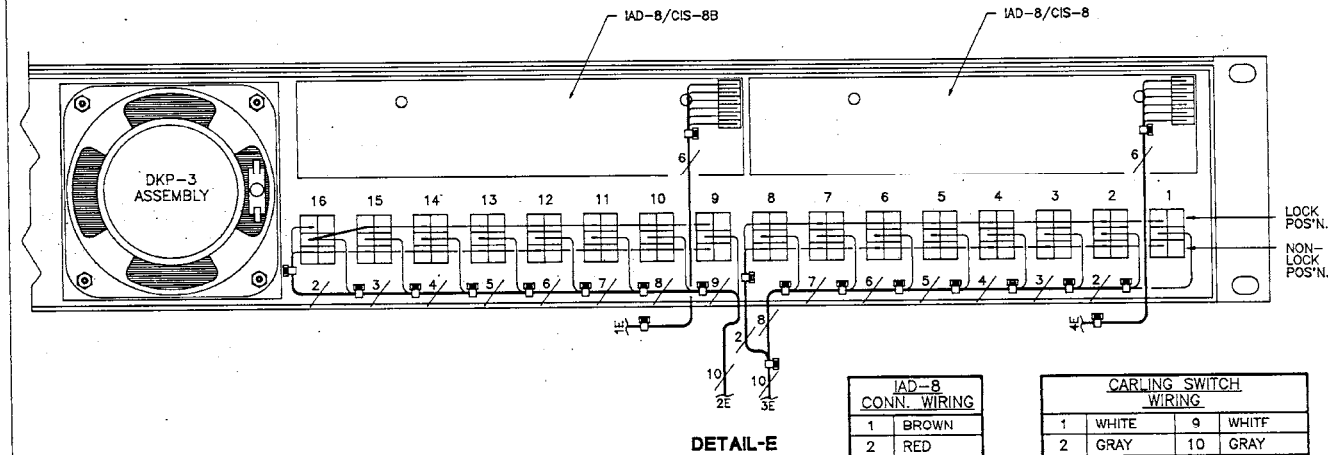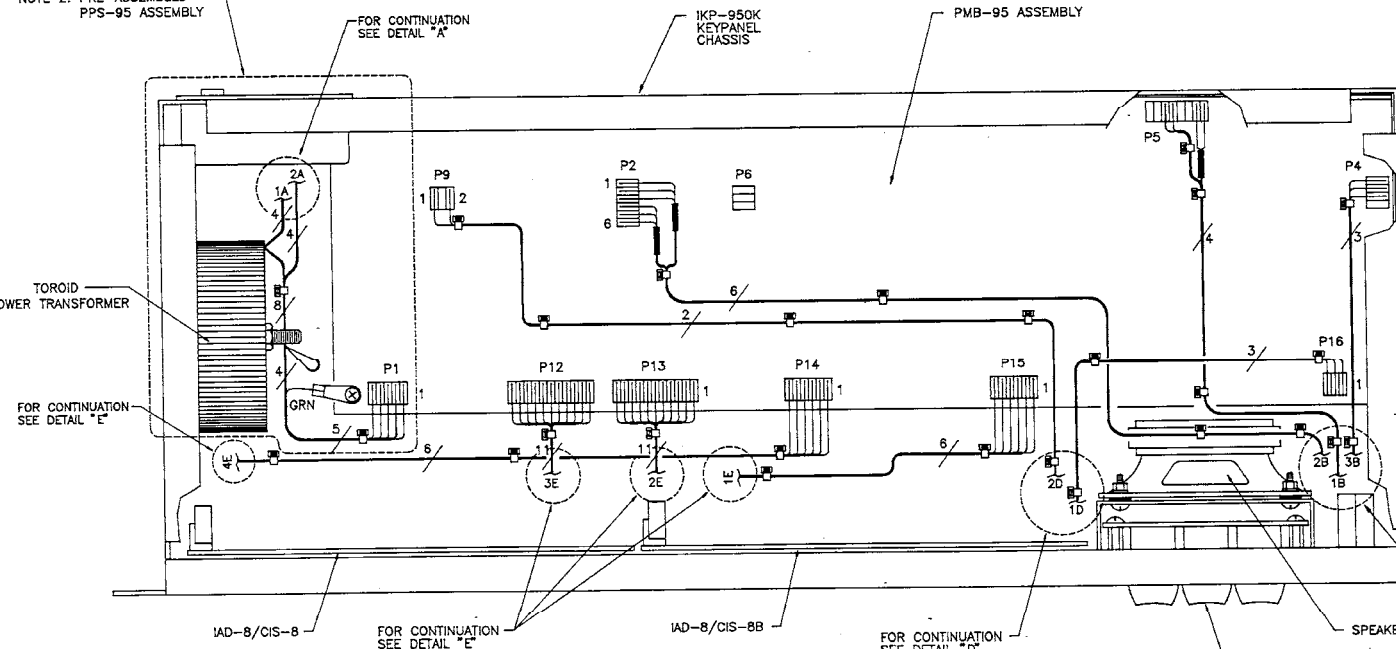

NOTE 4: ENSURE CORRECT ORIENTATION OF LOCK/NON-LOCK POSITIONS OF CARLING SWITCHES 1-15. CARLING SWITCH POSITION NO.16 IS NON-LOCK/NON-LOCK.

IAD-8 CONN. WIRING	
1	BROWN
2	RED
3	ORANGE
4	YELLOW
5	GREEN
6	BLUE

<u>CARLING SWITCH</u>			
<u>WIRING</u>			
1	WHITE	9	WHITE
2	GRAY	10	GRAY
3	VIOLET	11	VIOLET
4	BLU	12	BLU
5	GREEN	13	GREEN
6	YELLOW	14	YELLOW
7	ORANGE	15	ORANGE
8	RED	16	BROWN

NOTE 6: USE PRE-ASSEMBLED IKP-950K ASSEMBLY AND ADD:

- (1) PRE-ASSEMBLED DKP-3 ASSEMBLY
- (2) IAD-8 ASSEMBLY (QTY. 2)
- (3) CIS-8 ASSEMBLY
- (4) CIS-8B ASSEMBLY
- (5) INTERCONNECT CABLES FOR ITEMS 2, 3, AND 4 ABOVE
- (6) OVERLAY COMPLETE WITH SWITCHES AND WIRING HARNESS