


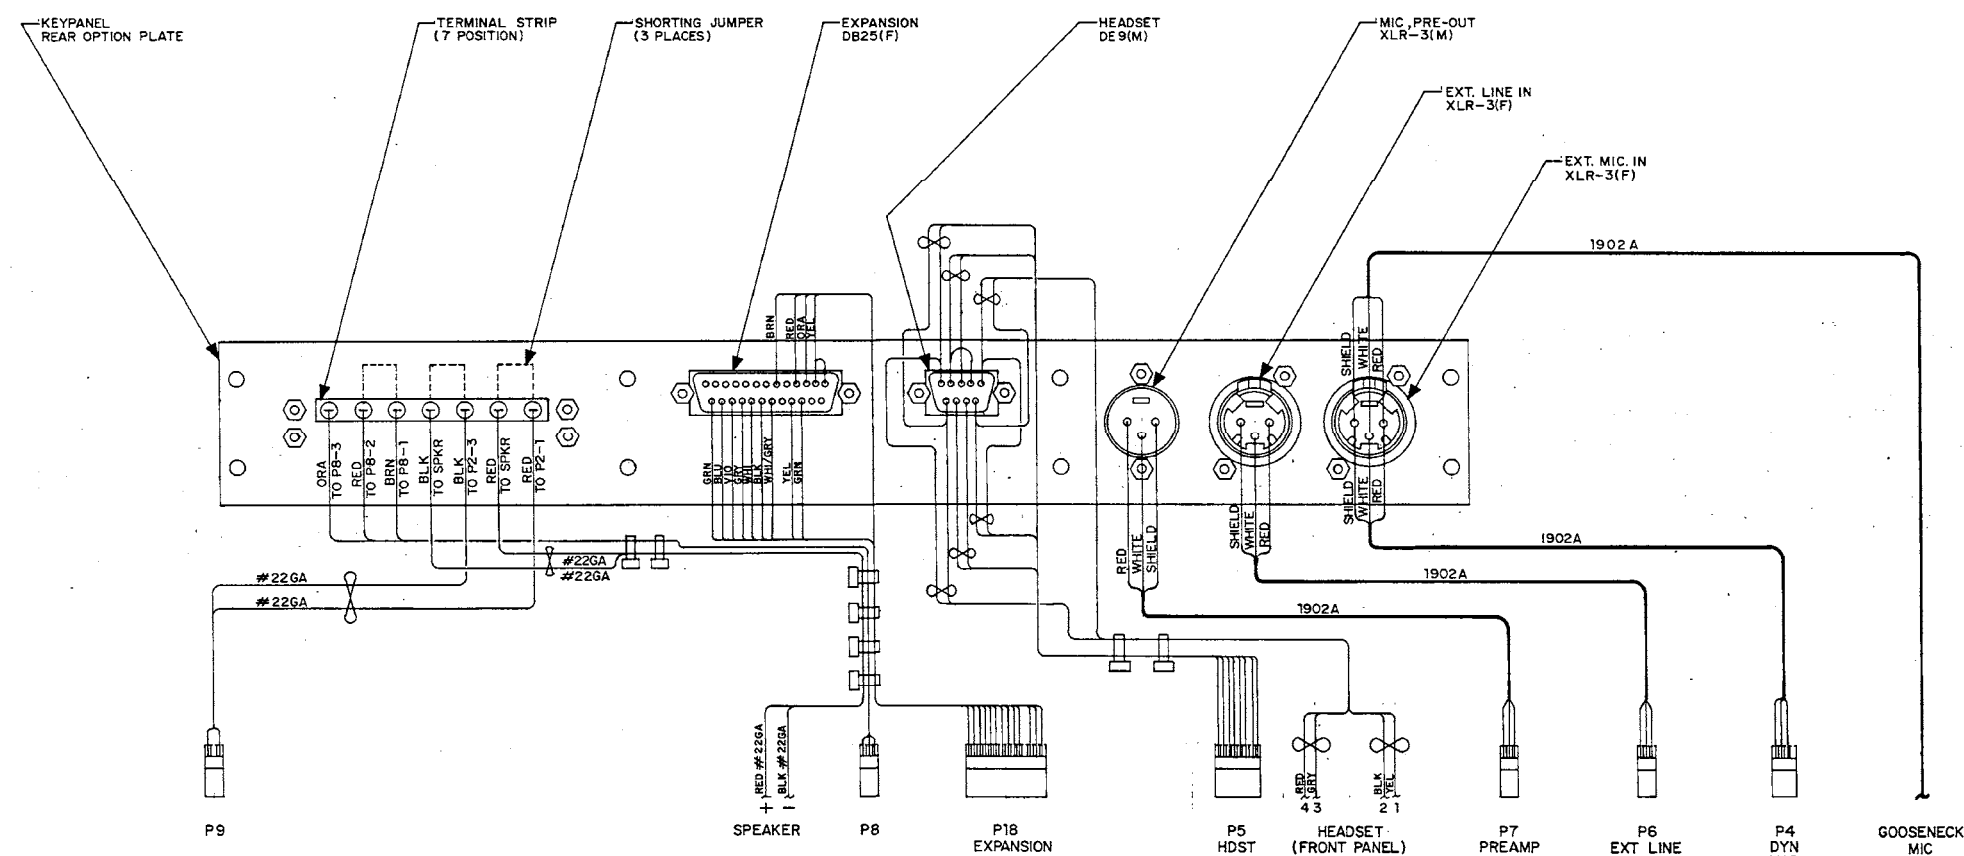

NOTES: 1. AFTER SOLDERING AND HEAT SHRINKING, APPLY CABLE TIE AROUND EACH XLR CONNECTOR TO SUPPORT 1902 WIRE HARNESS.
 2. ALL WIRING No. 24GA STRANDED EXCEPT WHERE INDICATED. SYMBOL INDICATES TWISTED PAIR.
 3. ALL CONNECTIONS TO HAVE HEATSHRINK APPLIED AFTER SOLDERING.

P9 SPEAKER		
PIN No.	COLOR	
1	RED	
2	N/C	
3	BLK	

P8 TERM. STRIP		
PIN No.	COLOR	
1	BRN	
2	RED	
3	ORA	

P18 EXPANSION		
PIN No.	COLOR	DEST.
1	BRN	8
2	RED	10
3	ORA	11
4	N/C	—
5	YEL	12,13
6	GRN	14
7	BLU	15
8	VIO	16
9	GRY	17
10	WHI	18
11	BLK	19
12	WH/GY	20
13	GRN	23
14	YEL	22

P5 HEADSET DE9		
PIN No.	COLOR	DEST.
1	BRN	7
2	GRY	8
3	RED	9
4	GRY	5
5	ORA	3
6	GRY	4,2
7	YEL	6
8	BLK	1

HEADSET (FRONT PANEL) XLR-3		
PIN No.	COLOR	DEST.
1	YEL	6
2	BLK	1
3	GRY	9
4	RED	5

P7 PREAMP OUT		
PIN No.	COLOR	
1	SHIELD	
2	RED	
3	WHI	

P6 EXT LINE IN		
PIN No.	COLOR	
1	SHIELD	
2	RED	
3	WHI	

P4 DYN MIC		
PIN No.	COLOR	
1	SHIELD	
2	RED	
3	WHI	
4	N/C	

ORIGINAL DRAFT	P.C.	5-FEB-91	1
DESCRIPTION		DATE	REV
McCURDY RADIO INDUSTRIES			
KP96-RC			
WIRING HARNESS DIAGRAM			
DRN	DATE	REV	DRN
M. BUDZIAK	5-FEB-91		
54085	5-FEB-91		
		D	KP96-RC/8-3