




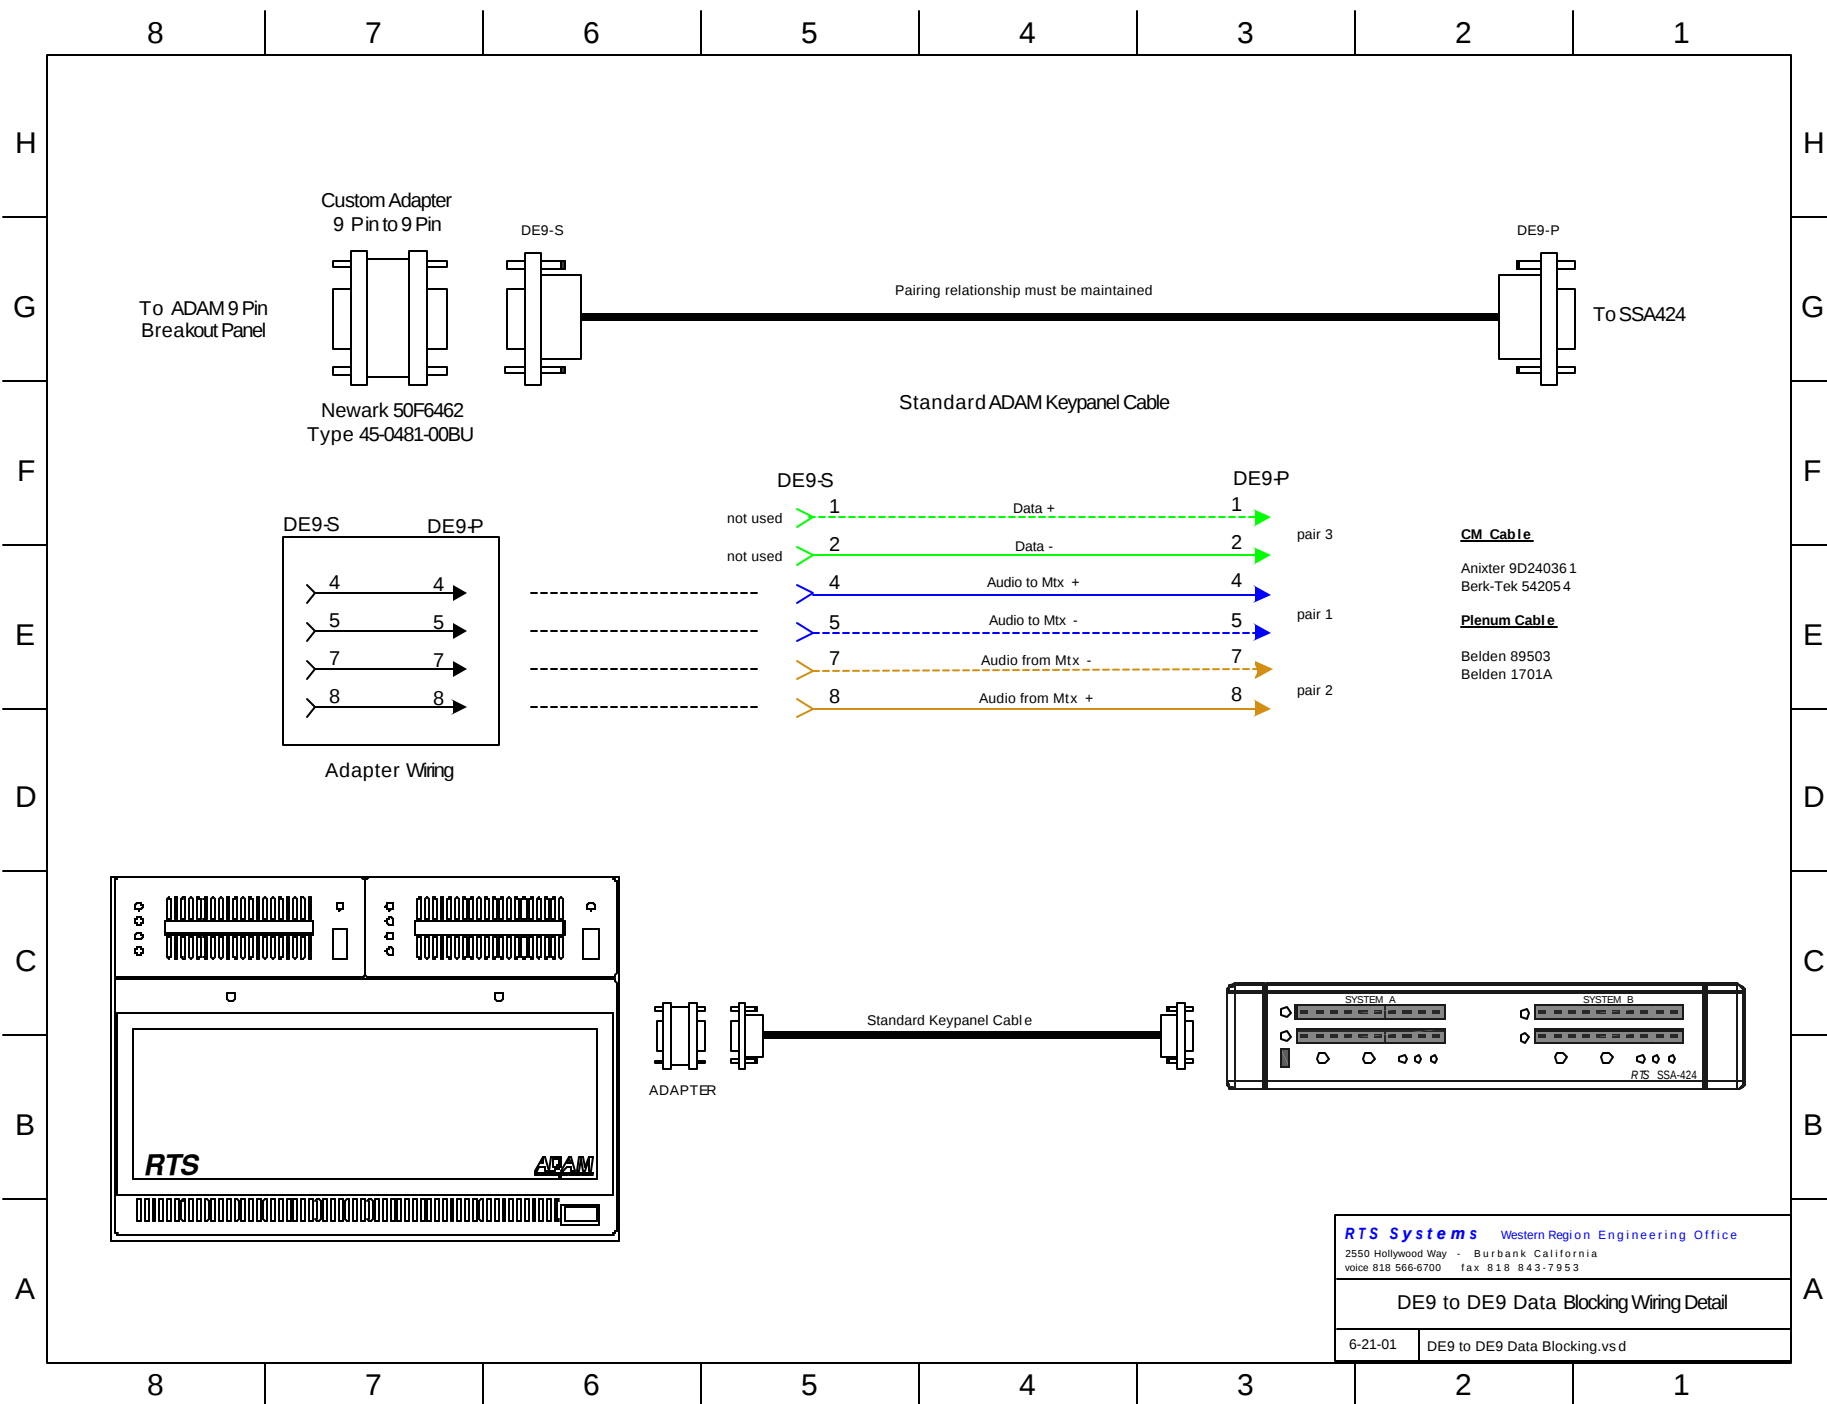

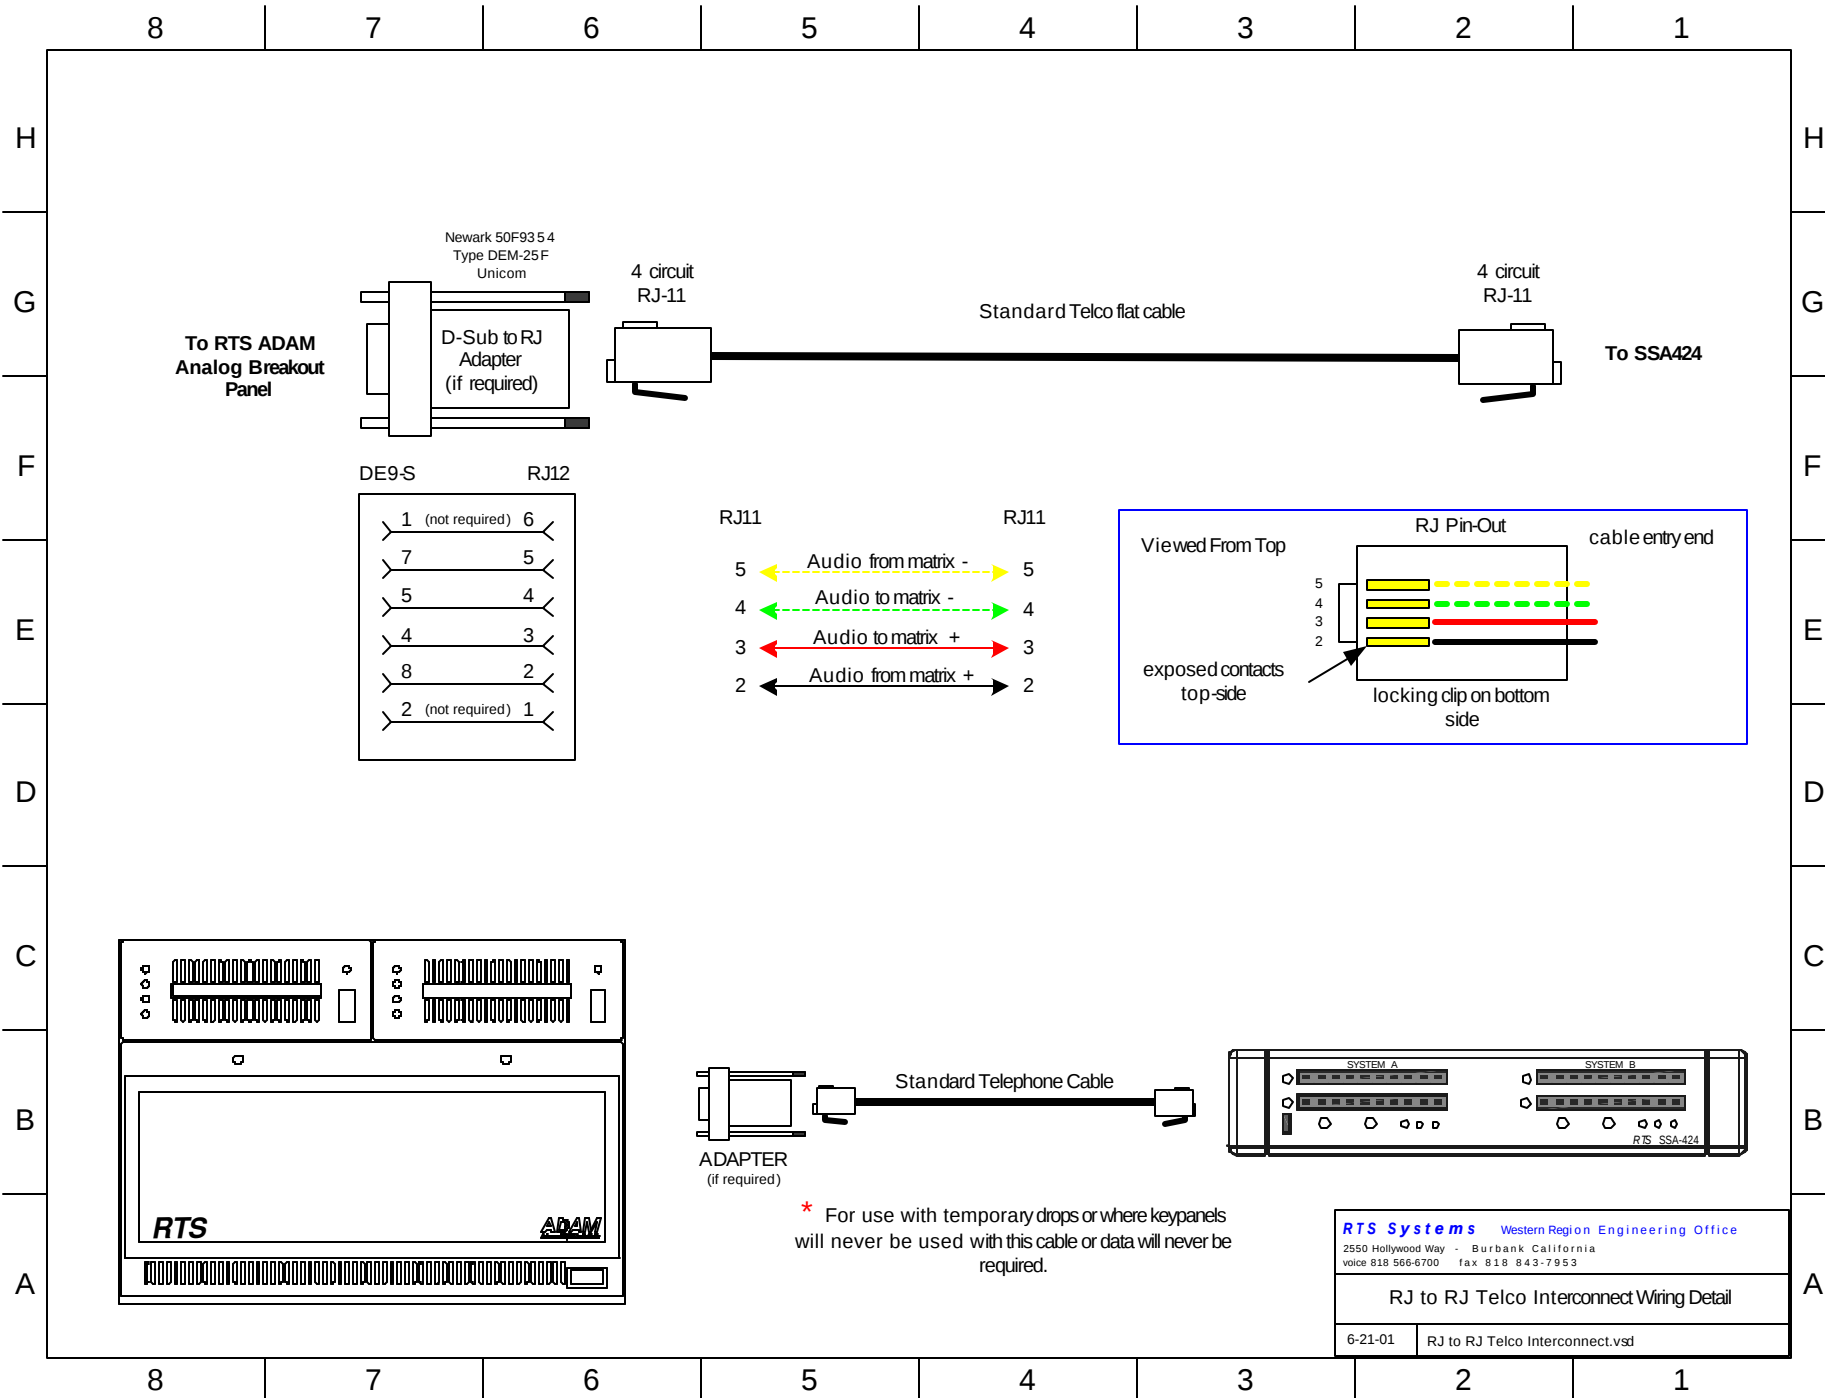

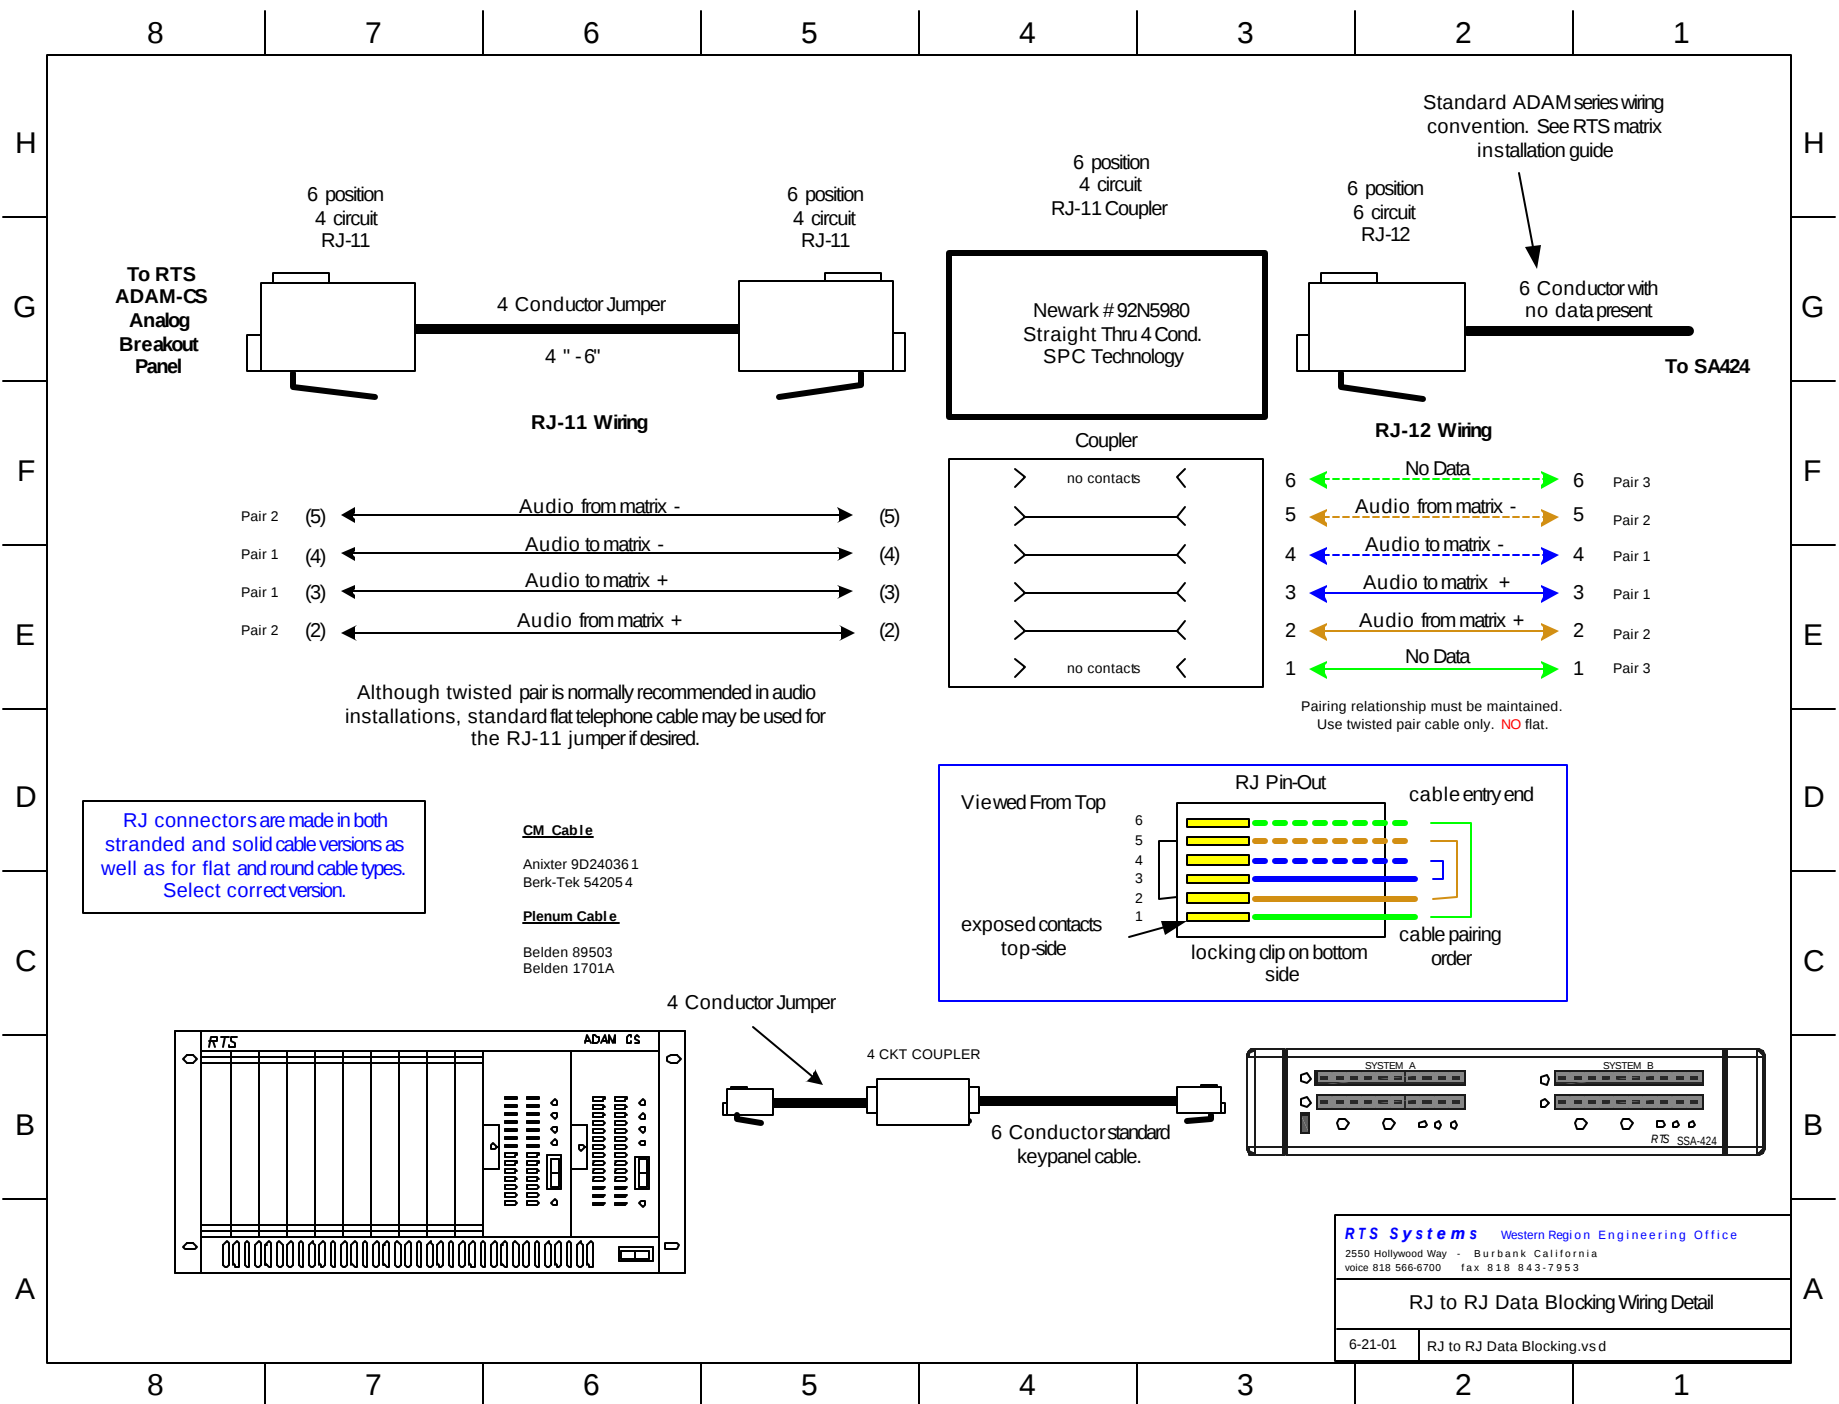

8 7 6 5 4 3 2 1

H

G

F

E



D

C

B


A

To RTS ADAM
Analog Breakout
Panel


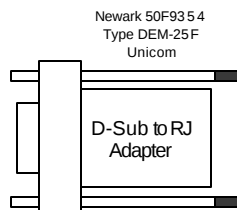


Standard ADAMseries wiring
convention. See RTS matrix
installation guide

Pairing relationship must be maintained

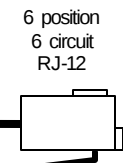

To SSA424

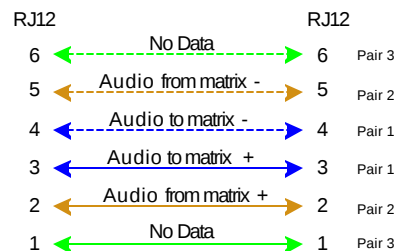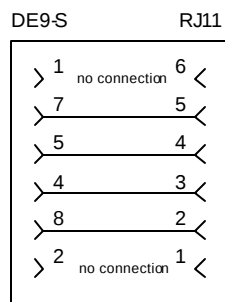





CM Cable

Anixter 9D240361
Berk-Tek 542054

Plenum Cable

Belden 89503
Belden 1701A

Use twisted pair cable only, **NO** flat
cable.
RJ connectors are made for both
stranded and solid conductors as
well as for both round and flat
cable. Select proper type.

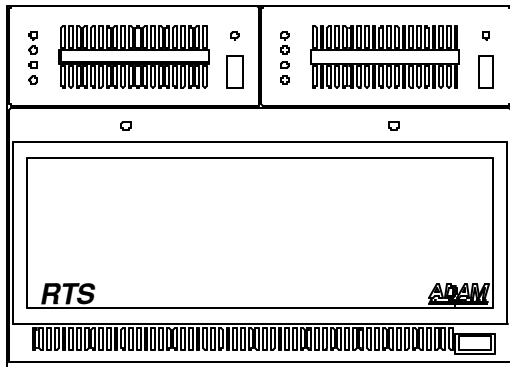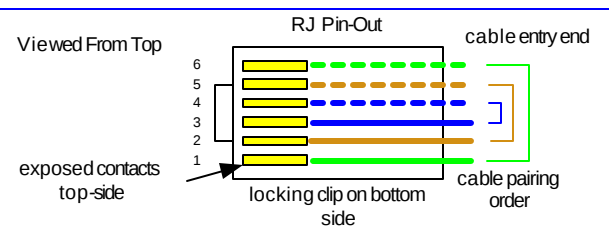

RTS Systems Western Region Engineering Office
2550 Hollywood Way - Burbank California
voice 818 566-6700 fax 818 843-7953

DE9 to RJ12 Data Blocking Wiring Detail

6-21-01 DE9 to RJ12 Data Blocking.vsd

8 7 6 5 4 3 2 1