


# WOHLER SUM8

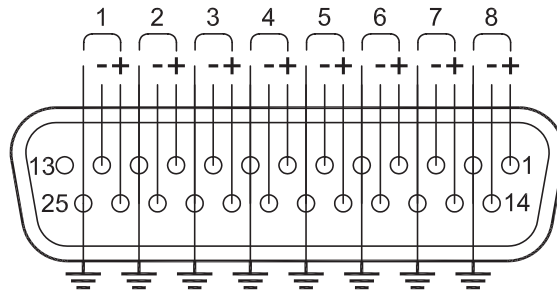

## Analog Connector

\* Use a male DB25 connector while installing the Wohler