

INSTALLATION MANUAL Issue 5

Calrec Audio Ltd Nutclough Mill Hebden Bridge West Yorkshire HX7 8EZ England UK

Tel: +44 (0) 1422 842159 Fax: +44 (0) 1422 845244 E-mail: enquiries@calrec.com Website: www.calrec.com





© 2004 Calrec Audio Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying & scanning, for any purpose other than for use by the registered purchaser, without the prior written consent of Calrec Audio Ltd.

Whilst the Company take the utmost care in ensuring that all details in the publication are correct at the time of publication, we are constantly striving for improvement and therefore reserve the right to alter specifications & equipment without notice.

This publication is for International usage.

Please observe the following:-

After Sales Modifications.

Modifications to this equipment by any party other than Calrec Audio Limited may invalidate EMC and safety features designed into this equipment. Calrec Audio Limited can not be liable for any legal proceedings or problems that may arise relating to such modifications.

If in doubt, please contact Calrec Audio Limited for guidance prior to commencing any such work.

ESD (Static) Handling Procedures.

In its completed form, this equipment has been designed to have a high level of immunity to static discharges. However, when handling individual boards and modules, many highly static sensitive parts are exposed. In order to protect these devices from damage and to protect your warranty, please observe static handling procedures, for example, use an appropriately grounded antistatic wrist band. Calrec will supply an electrostatic cord and wrist strap with all of it's digital products.

All modules and cards should be returned to Calrec Audio Limited in anti-static wrapping. Calrec Audio Limited can supply these items upon request, should you require assistance.

This applies particularly to digital products due to the types of devices and very small geometries used in their fabrication, analogue parts can however still be affected.



CONTENTS

IMPORTANT HEALTH AND SAFETY INFORMATION	4
OVERVIEW	
SYSTEM OVERVIEW	
TYPICAL DIGITAL SYSTEM DIAGRAM	7
EQUIPMENT LIST	8
CONSOLE DIMENSIONS	
CONSOLE PLAN DIMENSIONS	10
FRONT ELEVATION DIMENSIONS	
END ELEVATION DIMENSIONS	
EQUIPMENT INSTALLATION INFORMATION	
TYPICAL RACK LAYOUT	14
RACK SPECIFICATIONS	
BULK PSU	
MULTI-RAIL PSU	
PSU MONITORING AND DISTRIBUTION UNIT	
PC	
ENVIRONMENTAL CONSIDERATIONS	
EARTHING	
AC (MAINS) POWER	20
WIRING AND CABLING INFORMATION	
TYPICAL CONSOLE & RACK WIRING DIAGRAM	22
CABLE RUN SCHEDULE	23
SPECIFICATION FOR 36W SCSI STYLE CABLES	24
MAXIMUM CABLE LENGTHS	24
EXTERNAL CONNECTIONS TO CONSOLE	
SYNCHRONISATION	26
AUDIO INPUTS & OUTPUTS	
INTERFACE CONNECTOR PANELS	
RELAY AND OPTO ISOLATOR CONNECTIONS	
CONNECTOR PIN OUT INFORMATION	
DIGITAL INPUTS - BNC INTERFACE	32
DIGITAL OUTPUTS - BNC INTERFACE	
DIGITAL INPUTS - XLR INTERFACE	
DIGITAL OUTPUTS - XLR INTERFACE	
ANALOGUE MIC/LINE INPUTS (FOR MIC/LINE OR LINE ADC CARDS) - STYLE 1	
ANALOGUE MIC/LINE INPUTS (FOR MIC/LINE OR LINE ADC CARDS) - STYLE 2	
ANALOGUE LINE ONLY INPUTS (FOR LINE ADC CARDS ONLY) - STYLE 1	
ANALOGUE LINE ONLY INPUTS (FOR LINE ADC CARDS ONLY) - STYLE 2	39
ANALOGUE LINE OUTPUTS (FOR DAC CARDS ONLY) - STYLE 1	
ANALOGUE LINE OUTPUTS (FOR DAC CARDS ONLY) - STYLE 2	
RELAYS & OPTO ISOLATOR CONNECTIONS	42
PLANNING THE USE AND LABELLING OF I-O	
INPUT/OUTPUT PORT LABELLING	44
SUITABLE LABELS	45
INPUT/OUTPUT LABELLING SHEETS	46-59



IMPORTANT HEALTH AND SAFETY INFORMATION

- This equipment must be EARTHED.
- Only suitably trained personnel should service this equipment.
- Please read and take note of all warning and informative labels.
- Before starting any servicing operation, this equipment must be isolated from the AC supply (mains).
- Fuses should only be replaced with ones of the same type and rating as that indicated.
- Operate only in a clean, dry and pollutant-free environment.
- Do not operate in an explosive atmosphere.
- Do not allow any liquid or solid objects to enter the equipment. Should this accidentally occur then immediately switch off the unit and contact your service agent.
- Do not allow ventilation slots to be blocked.
- Do not leave the equipment powered up with the dust cover fitted.
- The rack mounting parts of this equipment must be fitted into an enclosure which complies with local regulations.

Cleaning

For cleaning the front panels of the equipment we recommend anti-static screen cleaner sprayed onto a soft cloth to dampen it only.

Explanation of Warning Symbols

The triangular warning symbols below contain a black symbol on a yellow background, surrounded by a black border.



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of dangerous voltages and energy levels within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock or injury.



The exclamation mark within an equilateral triangle is intended to prompt the user to refer to important operating or maintenance (servicing) instructions in the documentation supplied with the product.

Power Supply Blanking Plates (ZN4849-3 and ZN6020)

If you are in receipt of a ZN4849-3 or ZN6020 power supply unit please do not remove the blanking plates which are fitted to the unused output connectors. The maximum potential between the terminals exceeds 60 volts, the blanking plates are fitted to avoid the risk of electric shock.




OVERVIEW



SYSTEM OVERVIEW

- v Available in 3 frame sizes, 32 fader, 48 fader or 64 fader.
- v 120 equivalent channels (Up to 48 stereo plus 24 mono channels or 60 stereo channels).
- v Desk operates independently of PC.
- v Independent DSP operation ensures audio continuity even during PC or control reset.
- v Console & racks boot from power on in less than 20 seconds.
- v Full control system reset in less than 15 seconds.
- v Last settings fully restored on power-up or re-set.
- v Automatic change over to hot spares for PSU's, Control cards and DSP cards.
- v Hot plugging of every card and module.
- v Hot plugged cards initialise upon insertion.

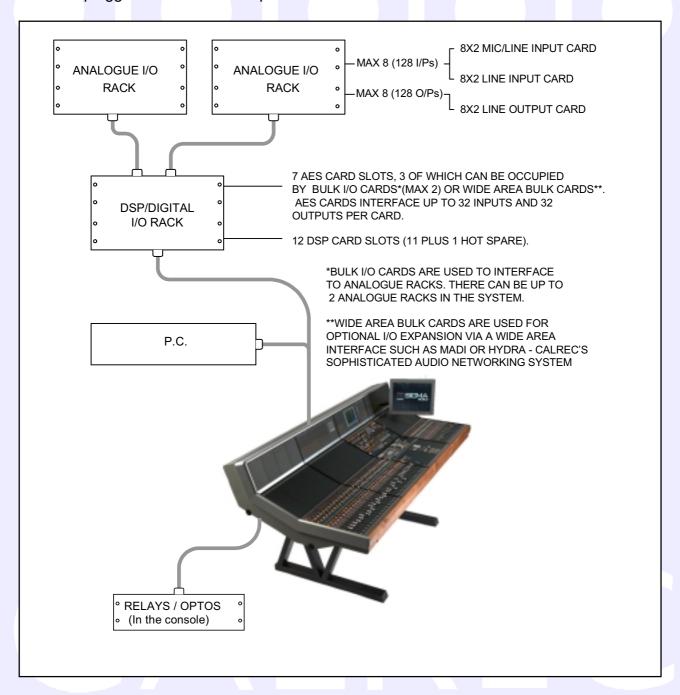


TYPICAL DIGITAL

S

SYS

TEM

DIAGRAM

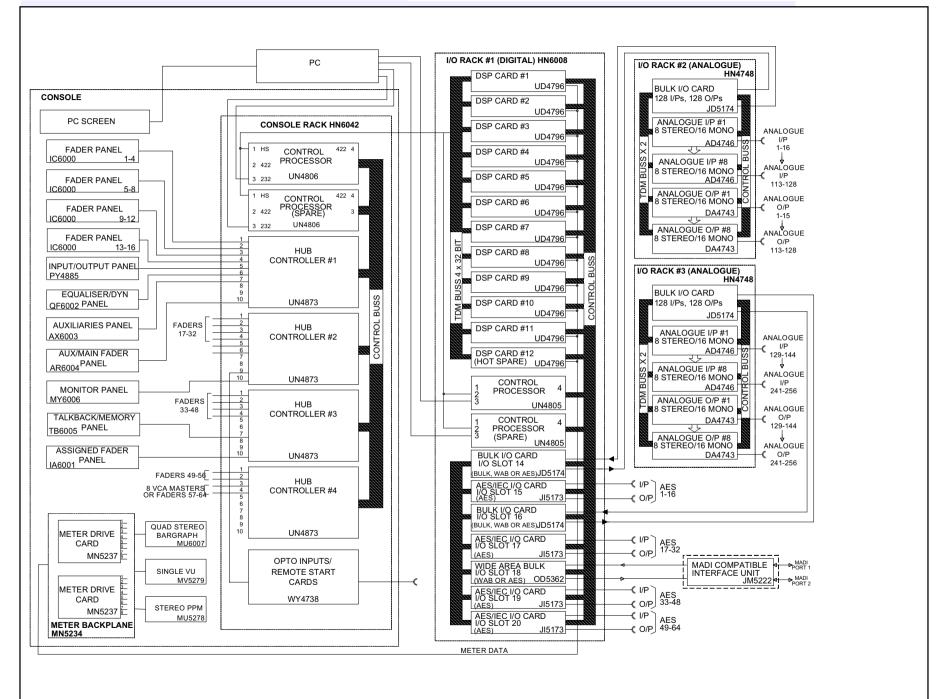





EQUIPMENT LIST

Depending on the options purchased, you should expect to receive the following:

1 Control Surface

As specified in the quotation, and including:

- v 1 Console Processor (2 if the hot spare option has been purchased)
- v 2-4 Relay/Opto cards, in line with the quotation.

1 DSP/Digital I-0 rack

- v 1 Rack Control Processor (2 if the hot spare option has been purchased)
- v Up to 12 DSP cards (11 plus hot spare), in line with the quotation
- v One Bulk I/O card per Analogue I/O Rack in the system
- v One Wide Area Bulk I/O card for each optional I/O expansion interface, such as MADI or Hydra (if purchased)

1 or 2 Analogue I-O racks

- v 1 Bulk I/O card to interface to the DSP/Digital I/O Rack
- v Up to 8 Mic/Line or Line Input cards, in line with the quotation
- v Up to 8 Line Output cards, in line with the quotation

1 Bulk PSU rack

v Up to 3 Bulk PSU modules (dependant on size of console and it's distance from the DSP/Digital I/O Rack, and whether a hot spare is required)

A number of Multi-Rail PSU's

v 1 Multi-Rail PSU is required for systems with just one Analogue I/O rack, 2 are required for systems with two Analogue I/O racks, plus 1 or more hot spares if required.

A number of Fan Trays

1 Fan Tray will be supplied for each Rack in the system. The Fan Trays are to be positioned above each rack.

1 PSU monitor unit

1 PC


1 Set of system cables



CONSOLE DIMENSIONS




CONSOLE PLAN DIMENSIONS

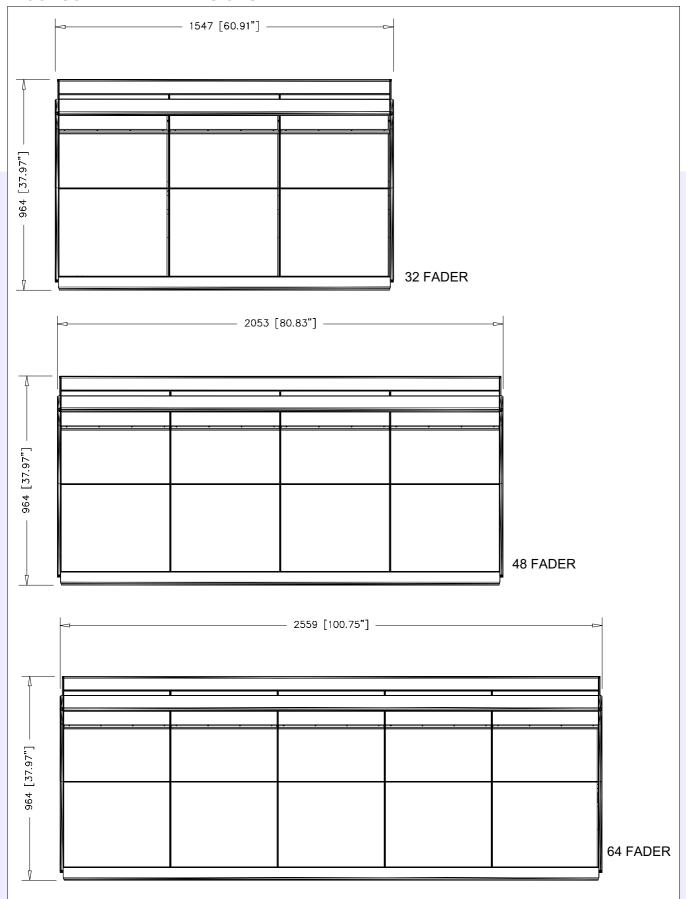




FRONT ELEVATION DIMENSIONS

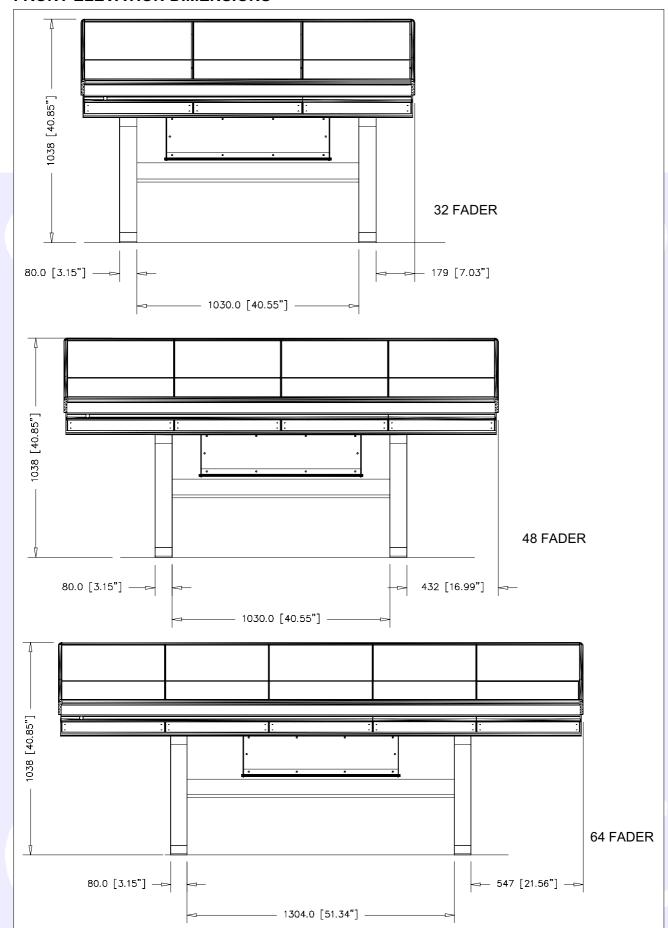



END ELEVATION DIMENSIONS

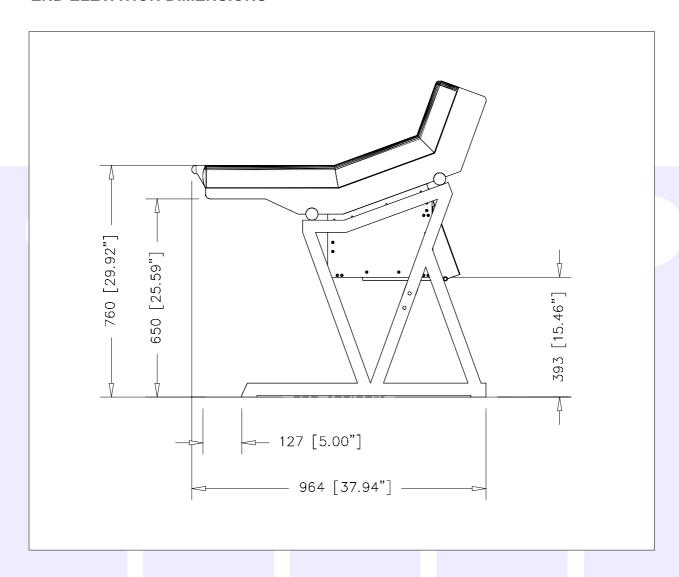

The end elevation dimensions are the same for all 3 frame sizes.


The control surface can be seperated from the stand (shaded) for access to the installation's premises. The control surface sections can also be split apart if required.



EQUIPMENT INSTALLATION INFORMATION



TYPICAL RACK LAYOUT

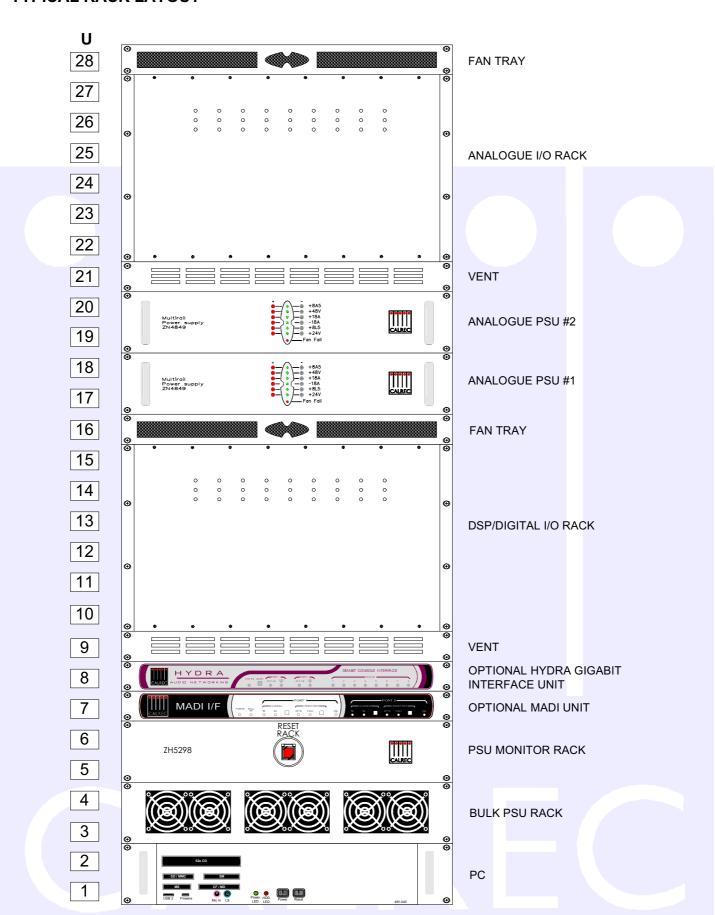



RACK SPECIFICATIONS

The company recommends that all equipment over 8Kg (17.5 lbs) in weight, or over 150mm (6 inches) deep is mounted into equipment bays which offer mechanical supports under each of the units. This will allow units to be supported as they slide forward during removal for maintenance purposes.



Equipment can be mounted in separate enclosures. Please refer to the cable lengths table before planning this. The PSU monitor rack can be mounted on the rear of the equipment bay if desired.

Each audio rack (DSP/Digital I/O, and Analogue) is supplied with a 1U low noise fan tray which should be positioned immediately above the rack. The fan tray incorporates a baffle such that warm air is sucked up out of the rack and out through the rear of the fan tray. A vent in the front of the fan tray allows ambient air to enter. The baffle deflects this air up into the rack above. The bottom rack should have a 1U vent beneath it to allow ambient air to enter. It should also not be positioned above any equipment producing significant heat.


Items	Height	Approx depth (incl. mating cons)		Approx weight		Approx Power Output (W)	Approx AC Power (VA)
		inches	mm	lbs	kgs	(full load)	(full loàd) ´
DSP/Digital I/O Rack (fully populated)	6U	18.9	480	38.4	17.4	1	-
Analogue I/O Rack (fully populated)	6U	18.1	460	26	11.8	ı	-
Bulk PSU rack * with one PSU	2U	18.5	470	17.4	7.9	1000	1250
Extra PSU for Bulk rack	-	-	-	7.3	3.3	1000	1250
Analogue racks PSU *	2U	18.1	460	22.1	10.0	460	660
Power for Hot spare (any type)	-	-	1	1	1	No extra	Less than 5% extra
Fan Tray	1U	19.7	500	6.6	3.0	-	-
PSU Monitor box	1U	6.7	170	4.4	2.0	-	-
PC*	2U	23.7	600	27	12.2	-	400

^{*} These units have handles protruding approx. 1.3" (32mm) from the surface of the front panel.



BULK PSU

All PSU's are rack mounting and are separate from the units they power, except for the PC which has its PSU built in. Diode feeding allows supplies of the same type to be parallelled together.

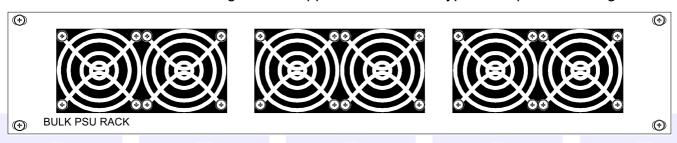

The Bulk PSU Rack is a 2U rack which can hold up to three identical plug-in PSU's. The rack has separate AC power inputs and DC outputs for each of the three PSU's. Any one PSU can be removed from the rack without disturbing the operation of the others in the rack. The rack is fan cooled with fans mounted in the front of each PSU. The warm air is directed out of the rear of the rack. The console control surface and DSP/Digital I/O Rack are powered as one unit from one of these 2U racks. Depending on the console size and the distance between console and rack, one or two PSU's are required. An optional second or third PSU, in the rack, can act as a hot spare.

Mounting Instructions

This power system should be mounted by means of the side brackets, each of which has two mounting holes. The power system rack should always be mounted in a horizontal position. The rear mounting brackets should be used when no support is provided under the rack assembly. The rack should not be supported by front flanges alone. The rear mounting brackets fix to the rear of the studio equipment bay. Extensions of the rack sides slot into these rear supports, allowing the Bulk PSU rack to be removed without removing the support.

Cooling

Each of the plug-in power modules has it's own cooling fan. To ensure proper cooling, the power system requires a minimum clearance of two inches (50mm) from the fans and rear air outlets, and also any walls or other surfaces.


Input Power Connections

Three 3-wire safety AC outlet sockets should be located near the power system and should be easily accessible. Each line cord will provide mains power to one of the power supply modules. The AC line cord is the mains disconnect for each module. The AC line cords should have an IEC320 connector to plug into the rear of the power system chassis. Each line cord <u>MUST</u> be suitably rated and <u>FUSED</u> (or have an equivalently rated circuit breaker). For 230V mains, the rating is10A for the line cords and breakers. For 115V mains, the rating is 15A, (line cords are known as SVT or SJT type).

Do not remove the ground conductor. The ground conductor is connected to safety ground to minimize electrical shock hazard and ensure low EMI (electromagnetic interference). The grounding lug, located on the rear panel, is abonding for connection of the chassis to other system chassis assemblies. Safety grounding is provided via ground connections in the line cord entry receptacles.



MULTI-RAIL PSU

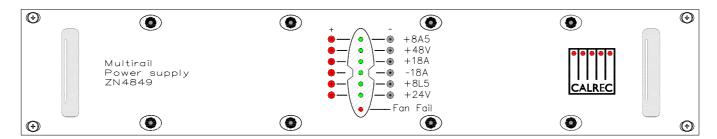


Analogue racks use a 2U Multi-Rail PSU. The number required will depend on the type of installation. Generally, one Multi-Rail PSU is required for one analogue rack, and two for two fully populated analogue racks. An additional Multi-Rail PSU can serve as the hot spare for several racks, provided they are housed together. If the Racks are housed in different locations, each may require a hot spare. This will depend on the cable lengths involved.

The Multi-Rail PSU is also fan cooled but uses a very low noise fan, drawing air from side to side through the unit, instead of in from the front, to further minimise noise. Multi-Rail PSU's are fitted with rear flanges to allow the rear of the unit to be bolted to the studio equipment bay.

All hot spare PSU's are optional.

PSU MONITORING AND DISTRIBUTION UNIT

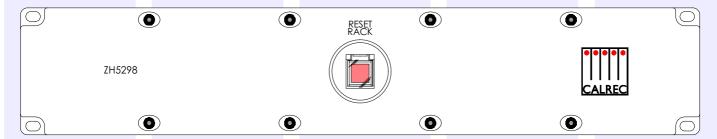

The Power Monitoring and Distribution rack monitors the power supplies for failures, and ensures "hot" changeover to the spare should there develop a fault.

The Reset button reboots the racks only, the control surface is unaffected.

PLEASE NOTE: Resetting the racks will result in a brief audio interruption.


Mounting Instructions

This unit should be secured into the front of the bay by the two standard fixing holes in each of the two 2RU front angles. The unit/s should always be mounted in a horizontal position. It is recommended that the rack is not be supported by the front flanges alone.




PC

Front

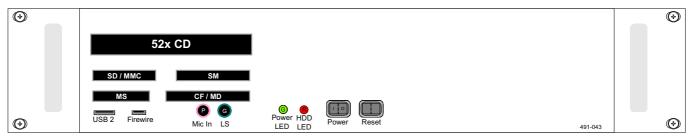

Rear

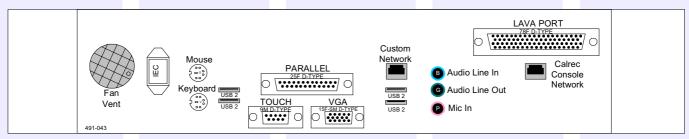

PC Specification

Operating System: Windows 2000 SP4

CPU: Intel Celeron Processor (min 2 GHz)

RAM: 256 MB DDR ROM

HDD: 40GB CD ROM: 52 x

Network Ports: 2 x 10/100

Card Slots: Compact Flash/Microdrive, SmartMedia, Memory Stick, Secure Digital/

Multimedia Card.

USB 2 Ports: 4 (rear), 1 (front)

Firewire Port: 1 (front)

Additional hardware: Lava Octopus 8 port Serial card

Additional software: PC Anywhere

Weight: 12.2 Kg (27 lbs)

Dimensions: 2U x 500mm (19¾ ins) x 19" (rackmount) " (inc rear cons): 2U x 600mm (23¾ ins) x 19" (rackmount)

Mounting Instructions

The PC should be mounted by means of the side brackets, each of which has two mounting holes. The PC rack should always be mounted in a horizontal position. The sliders should be used when no support is provided under the PC assembly. The PCshould not be supported by front flanges alone. Failure to follow these instructions may invalidate the warranty.



Modem Connections

Calrec Digital consoles are not supplied with a modem. This is to allow for the provision of a second ethernet port, which is needed for the optional Hydra Audio Networking system. USB connectors are provided on both the front & the rear of the PC for the customer to add an external modem. A modem will need to be in place for the console to be remotely accessed by Calrec Support Engineers to aid software upgrades and diagnostic work. Therefore, it is strongly recommended that a telephone line is connected during the console integration period. The PC is protected from unauthorised External Access as the user has to activate the dial up facility on the PC before this is possible. This will ensure that connections are not made at inappropriate times or without the user's knowledge and consent. Should you have any queries regarding the type of modem required, please contact either your Calrec Project or Support Engineer.

Network Ports

A network port is provided to enable the user to connect to their own LAN. Calrec will not be responsible for the configuration of this port or for any performance issues arising from its use. A second Ethernet port is provided to enable the PC to be connected to a Calrec Hydra Audio Network, which is an option which can either be purchased with the console or in the future.

File Backup

A number of flash card slots are provided on the front of the PC for file backup. In addition, backup could also be to a customer's LAN or to a USB device which can be plugged into the front or rear of the PC.

Software Supplied

An OEM PC Operating System license is supplied with each console, and the operating system software is pre-installed. The Sigma 100 console software is supplied on a CD-ROM, to be installed when the desk is set up at it's destination.

3rd Party Software

Calrec recommends that the PC is regarded as an integral control device for the console, and not as a general purpose PC. If 3rd party software is installed on the PC, care must always be taken to ensure that it does not interfere with the normal performance of the PC. The installation of inappropriate software on the PC may invalidate the console warranty.

RS422/RS232 ROCKET PORT INTERFACE PANEL

ROCKET PORTS

PORT 0 PORT 1 PORT 2 PORT 3 PORT 4 PORT 5 PORT 6 PORT 7

RASSW RASSW RASSW RASSW RASSW RASSW

Rear

Mounting Instructions

This unit/s should be secured into the rear of the bay by the two standard fixing holes in each of the two 1RU front angles.



ENVIRONMENTAL CONSIDERATIONS

Temperature Range:

Operating 0°C to +30°C (32°F to +86°F) in the immediate environment.

Non-operating -20°C to +60°C (-4°F to +140°F).

Relative humidity:

Operating 25% to 80% non condensing. Non-operating 0% to 90% non condensing.

Altitude:

Operating up to 2,000 metres (6562 feet). (This is the limit to which the safety tests are valid). Non-operating up to 15,000 metres (49213 feet).

EARTHING

The Control Surface, DSP/Digital I-O and Analogue I-O racks are provided with Chassis Earth studs. These must be connected to a common earth buss before any AC power is applied to the system.

The system Power Supplies and PC are earthed via their AC power inlets.

AC (MAINS) POWER

AC (Mains) Power inlets are IEC type.

Each PSU in the Bulk PSU racks has one inlet.

Each Analogue I/O PSU has one inlet.

The PC has one inlet.

20

There is one inlet on the rear of the control surface, for any AC powered equipment which needs to be housed within it.


The whole system must be powered from the same phase of the AC power supply. All modules, cards and cables are designed to permit Hot Plugging.



WIRING AND CABLING INFORMATION



TYPICAL CONSOLE & RACK WIRING DIAGRAM

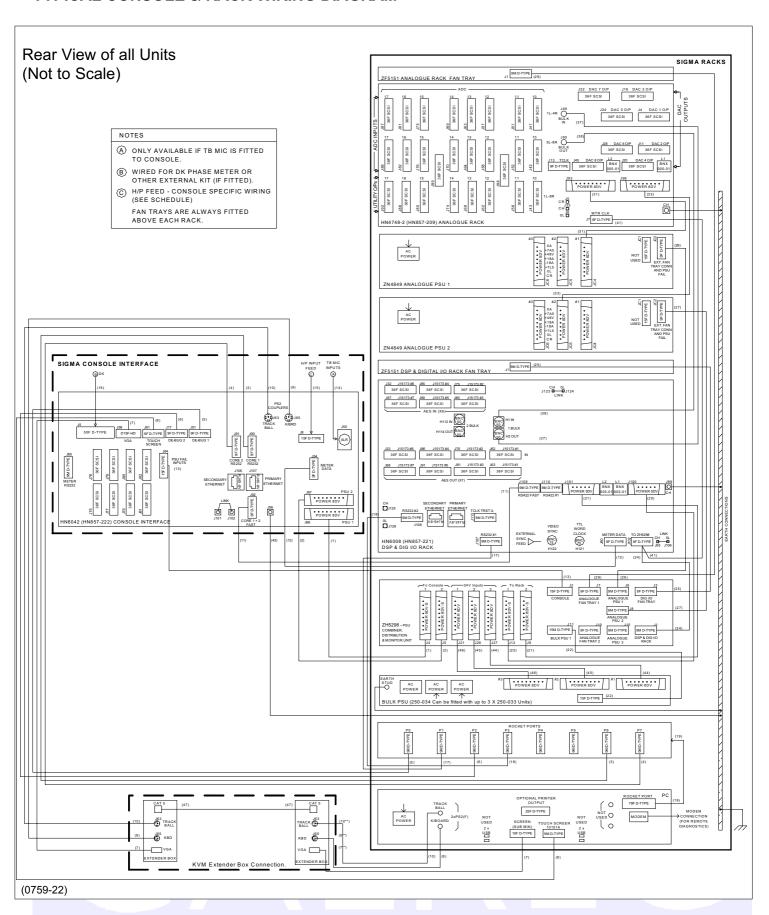



CABLE RUN SCHEDULE

CABLE No	CABLE TYPE	FROM	CONNECTOR	CON TYPE	то	CONNECTOR	CON TYPE	CIRCUIT	NOTE
1	8C2.5 (310-372)	ZH5298	Desk 1	8way D(M)	HN6042	J66	8way D(F)	Console DC pwr 1	CONSOLE
2	8C2.5 (310-372)	ZH5298	Desk 2	8way D(M)	HN6042	J67	8way D(F)	Console DC pwr 2	CONSOLE
3	BEL5 8135 (310-377)	PC	PORT#6	9way D(F)	HN6042	J90	9way D(F)	Console RS232-1	CONSOLE
4	BEL5 8135 (310-377)	PC	PORT#7	9way D(F)	HN6042	J91	9way D(F)	Console RS232-2	CONSOLE
5	BEL5 8135 (310-377)	PC	PORT#0	9way D(F)	HN6042	J51	9way D(M)	Console debug 1	CONSOLE
6	BEL5 8135 (310-377)	PC	PORT#2	9way D(F)	HN6042	J17	9way D(M)	Console debug 2	CONSOLE
7	(491-020/1) VGA	PC	SCREEN	15way HD D M)	HN6042	J58	15way HD D(M)	Console screen	CONSOLE
7	(491-020/1) VGA	PC	SCREEN	15way HD D(M)	Screen Repeater	Screen	15way HD D(M)	Console screen	CONSOLE
7A	(491-020/1) VGA	Screen Repeater	SCREEN	15way HD D(M)	HN6042	J58	15way HD D(M)	Console screen	CONSOLE
8	BEL5 9505 (310-379)	PC	10101A	9way D(F)	HN6042	J61	9way D(M)	C.Touch Screen	CONSOLE
9	(491-022/3) PS2	PC	KBD	PS2	HN6042	J65	PS2	Console keyboard	CONSOLE
9	(491-022/3) PS2	PC	KBD	PS2	Screen Repeater	KBD	PS2	Console keyboard	CONSOLE
9A	(491-022/3) PS2	Screen Repeater	KBD	PS2	HN6042	J65	PS2	Console keyboard	CONSOLE
10	(491-022/3) PS2	PC	MOUSE	PS2	HN6042	J63	PS2	Console trackball	CONSOLE
10	(491-022/3) PS2	PC	MOUSE	PS2	Screen Repeater	MOUSE	PS2	Console keyboard	CONSOLE
10A	(491-022/3) PS2	Screen Repeater	MOUSE	PS2	HN6042	J63	PS2	Console trackball	CONSOLE
11	BEL5 9505 (310-379)	HN6008	J109	9way D(F)	HN6042	J92	9way D(M)	C.RS422 FAST	CONSOLE
12	BEL5 9505 (310-379)	HN6008	J50	9way D(M)	HN6042	J54	9way D(F)	C.Meter Data	CONSOLE
13	DMP10 (310-366)	ZH5298	CONSOLE	15way D(M)	HN6042	J64	15way D(M)	Console PSU fail	CONSOLE
14	PSF4/1 (310-140)	HN4748	???	SCSI36	HN6042	J51	XLR 3(F)	C.TB mic out	CONSOLE
15	BEL5 9505 (310-379)	HN4748	???	SCSI36	HN6042	J18	25way D(M)	Console H/P in	CONSOLE
16	DMP10 (310-366)	HN4748/ HN6008	???	SCSI36	HN6042	J52	50way D(M)	C.Phase Mtr In	CONSOLE
17	BEL5 8135 (310-377)	HN6008	J107	9way D(F)	PC	PORT#1	9way D(F)	VO_DSP RS232-1	PC
18	BEL5 8135 (310-377)	HN6008	J108	9way D(F)	PC	PORT#3	9way D(F)	VO_DSP RS232-2	PC
19	Supplied	Bay PC	PORTS 1-8	8x9way D(M)	PC	Rocket Port	78way HD D(F)	Rocket Port Lead	PC
20	4C2.5 (310-371)	ZH5298	Rack 1	8way D(M)	HN6008	J100	5way D(F)	Digi rack supply 1	I/O_DSP
21	4C2.5 (310-371)	ZH5298	Rack 2	8way D(M)	HN6008	J101	5way D(F)	Digi rack supply 2	VO_DSP
22	BEL5 9505 (310-379)	Bulk PSU	D1	15way D(M)	ZH5298	Bulk PSU	15way D(F)	Racks PSU mon	Pwr Mon
24	BEL2 9502 (310-380)	HN6008	J102	9way D(M)	ZH5298	Digital Rack	9way D(F)	I/O_DSP fan pwr	Pwr Mon
25	BEL2 9502 (310-380)	ZF5151 VO	D1	9way D (F)	ZH5298	Digital Fan	9way D (M)	VO_DSP fan pwr/fail mon	Pwr Mon
26 *	BEL2 9502 (310-380)	ZN4849 No.1	EXT FAN	9way D(M)	ZH5298	Analogue PSU 1	9way D(F)	A1 fan pwr/PSU fail	Pwr Mon
27 *	BEL2 9502 (310-380)	ZN4849 No.2	EXT FAN	9way D(M)	ZH5298	Analogue PSU 2	9way D(F)	A2 fan pwr/PSU fail	Pwr Mon
28 *	BEL2 9502 (310-380)	ZN4849 No.3	EXT FAN	9way D(M)	ZH5298	Analogue PSU 3	9way D(F)	A3 fan pwr/PSU fail	Pwr Mon
29 *	BEL2 9502 (310-380)	ZF5151 An1	D1	9way D F)	ZH5298	Analogue FAN 1	9way D(M)	A1 fan pwr/fail ind	Pwr Mon
30 *	BEL2 9502 (310-380)	ZF5151 An2	D1	9way D(F)	ZH5298	Analogue FAN 2	9way D(M)	A2 fan pwr/fail ind	Pwr Mon
31 *	8C1.5 (310-373)	ZN4849 No.1	O/P 1	8way D(M)	HN4748 No.1	J93	8way D(F)	Analogue PSU 1/1	Analogue Rack 1
32 *	8C1.5 (310-373)	ZN4849 No.2	O/P 1	8way D(M)	HN4748 No.2	J93	8way D(F)	Analogue PSU 2/1	Analogue Rack 2
33 *	8C1.5 (310-373)	ZN4849 No.2	O/P 2	8way D(M)	HN4748 No.1	J96	8way D(F)	Analogue PSU 2/2	Analogue Rack 1
34 *	8C1.5 (310-373)	ZN4849 No.3	O/P 2	8way D(M)	HN4748 No.2	J96	8way D(F)	Analogue PSU 3/2	Analogue Rack 2
35 *	8C1.5 (310-373)	ZN4849 No.2	O/P 2	8way D(M)	HN4748 No.2	J96	8way D(M)	Analogue PSU 1/2	Analogue Rack 2
36 *	8C1.5 (310-373)	ZN4849 No.3	O/P 2	8way D(M)	HN4748 No.1	J96	8way D(F)	Analogue PSU 1/2	Analogue Rack 1
37 *	(312-083) SMB50-1m	HN6008	H114	SMB	HN4748 No.1	J49	SMB	Bulk Link in 1	Analogue Rack 1
38 *	(312-083) SMB50-1m	HN6008	H112	SMB	HN4748No.1	J50	SMB	Bulk Link out 1	Analogue Rack 1
39 *	COAX 50 Ohm (310-374)	HN6008	H2	SMB 50 (P)	HN4748 No.2	J49	SMB 50(P)	Bulk Link in 2	Analogue Rack 2
40 *	COAX 50 Ohm (310-374)	HN6008	H1	SMB 50(P)	HN4748 No.2	J50	SMB 50(P)	Bulk Link Out 2	Analogue Rack 2
41	BEL2 9502 (310-380)	HN6008	J102	9way D(M)	HN4748 No.1	J7	9way D(M)	Analogue Reset	Analogue Rack 1
42	BEL2 9502 (310-380)	HN4748 No.1	J7	9way D(M)	HN4748 No.2	J7	9way D(M)	Analogue Reset	Analogue Rack 2
43	GRNYEL 6 (310-333)	Eqpt Bay			Console			System Earth	CONSOLE
44	8C2.5 (310-372)	Bulk PSU 1	1	8way D(M)	ZH5298	VP 1	8way D(F)	Bulk Output 1	PWR
45	8C2.5 (310-372)	Bulk PSU 2	1	8way D(M)	ZH5298	VP 2	8way D(F)	Bulk Output 2	PWR
46	8C2.5 (310-372)	Bulk PSU 3	1	8way D(M)	ZH5298	VP 3	8way D(F)	Bulk Output 3	PWR
40									

^{*} Note: (regarding cables 26 - 42)
on 2 analogue rack / 3 PSU systems fit cable nos 26 - 34, 37 - 42
on 2 analogue rack / 2 PSU systems fit cable nos 26, 27, 29 - 33, 35, 37 - 42
on 1 analogue rack / 2 PSU systems fit cable nos 26, 27, 29, 31, 33, 37, 38, 41
on 1 analogue rack / 1 PSU systems fit cable nos 26, 29, 31, 37, 38, 41




MAXIMUM CABLE LENGTHS

Cables from	То	Maximum length		
Cables from	10	feet	metres	
Control surface	Control Surface Bulk PSU's	100.0	30.0	
Control surface	PC	500.0	150.0	
Control surface *	DSP/Digital I/O rack *	100.0	30.0	
PC	DSP/Digital I/O rack	100.0	30.0	
DSP/Digital I/O Rack	Racks Bulk PSU's	100.0	30.0	
DSP/Digital I/O Rack	Analogue I/O Rack	33.0	10.0	
Analogue I/O Rack	Multi-Rail PSU	33.0	10.0	
Multi-Rail PSU	Other Multi-Rail PSU's	1.3	0.4	
MADI Unit	Digital I/O rack	16.5	5	
Hydra Unit	Digital I/O Rack	49.5	15	

Extenders can be supplied to provide console data connections up to 150 metres (500 feet) at an additional cost.

SPECIFICATION FOR 36W SCSI STYLE CABLES

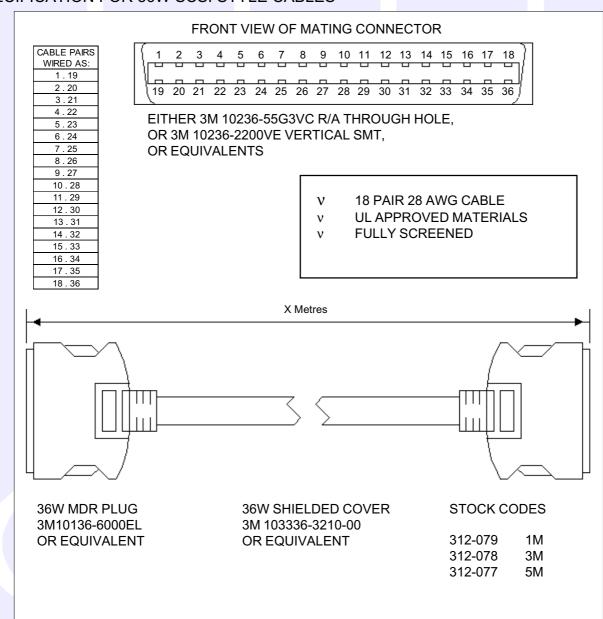




EXTERNAL CONNECTIONS TO CONSOLE



SYNCHRONISATION

The system can be pre-set with up to five external sync sources, plus internal, such that if the 1st source fails, it will automatically switch to the 2nd, and so on. Please note that the facility for locking to external AES sources is restricted to the first six inputs of each AES card in the console. One of the external sources can be Video, (PAL or NTSC). TTL Wordclock is another possible external source. Synchronisation inputs for Video Sync (PAL or NTSC) and TTL Wordclock are provided on the rear of the DSP/Digital I-O rack, on 75Ω BNC connectors.

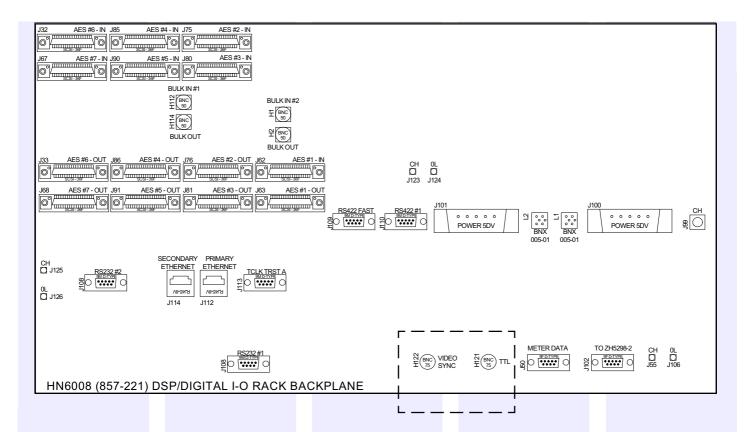

When using a digital input or wordclock as a source, the system will tolerate a variation of up to +/- 100 Hz in the frequency of the source. The console may also be synchronised from its internal crystal oscillator (48 kHz).


It is strongly recommended that all items of digital equipment connected digitally, to the Sigma 100 are synchronised to the same sync signal.

If the Sigma 100 internal sync is to be the master, other digital equipment should be synchronised to the digital outputs of the console.




AUDIO INPUTS & OUTPUTS

All Digital inputs and outputs are provided on 36 way female SCSI connectors on the rear of the DSP/Digital I-O rack (16 AES pairs of inputs or outputs per connector).

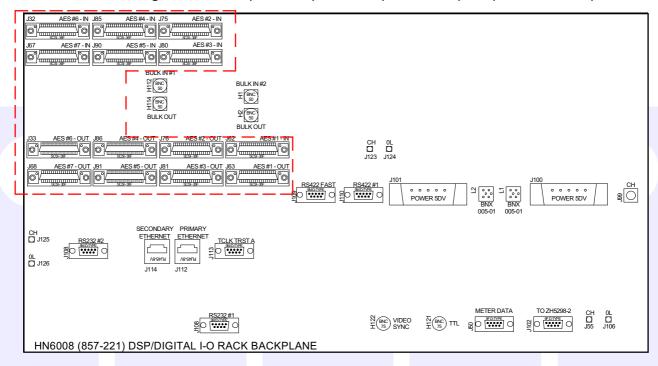

All Analogue inputs and outputs (including Mic/Line inputs) are provided on 36 way, female SCSI connectors on the rear of the Analogue I/O racks (4 pairs of inputs or 8 pairs of outputs per connector).

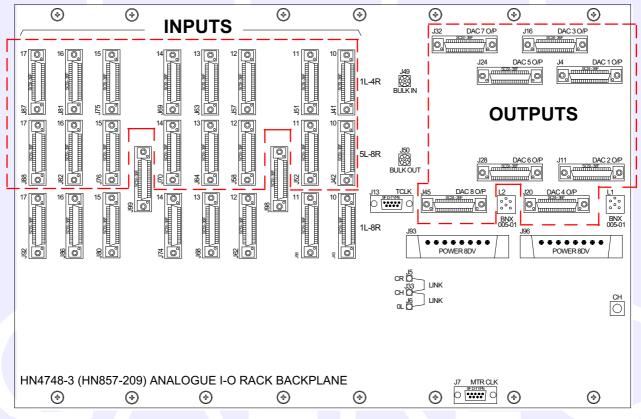




INTERFACE CONNECTOR PANELS

Customers may connect directly to the Sigma 100 using 36 way SCSI mating connectors. Optionally, for Digital & Analogue I/O, break out connector panels and cabling can be provided. Please note that interface panels must be fitted within 1m (3.2ft) of the backplane they connect to.

v For Digital I/O, either XLR (16 male or female, on a 1U panel) or BNC (32 on a 1U panel).

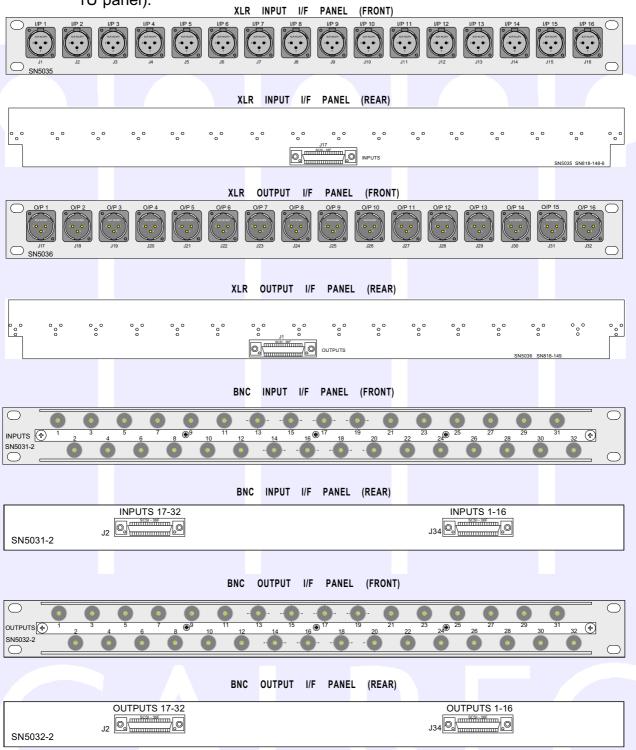




v For Analogue I/O, 8 or 12 way EDAC connector 2U panels are available in one of the following styles:

	Style 1	Style 2
Mic/Line or Line I/P's	4 pairs per EDAC	6 pairs per EDAC
Line only I/P's	8 pairs per EDAC	6 pairs per EDAC
Line O/P's	8 pairs per EDAC	6 pairs per EDAC

The choice of style will depend on the installation requirements. Limiting factors to be considered are:

- v The number of connections available in the external cabling
- v Restricted amount of interface space available within 1m(3.2ft) of the backplane.

The different styles are achieved using different interface cards which attach to the rear of the 2U panels to provide different combinations of SCSI connectors per varicon (Except in the case of Mic/Line inputs where a custom cable is provided).

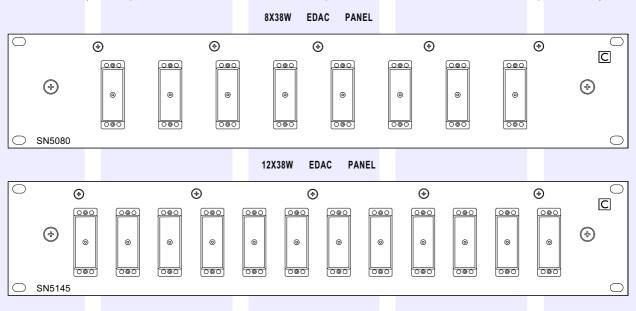





RELAY AND OPTO ISOLATOR CONNECTIONS

Connections to the Relays & Opto Isolators are provided on 36 way female SCSI connectors on the rear of the Console. Up to 4 cards can be fitted, each of which can provide up to 16 Relay isolated outputs and 8 Opto isolated inputs.

* Note that on Relay/Opto card 1, relays 1 - 4 are not available, as they are used for TX, RX, PSU Fail and APFL facilities.

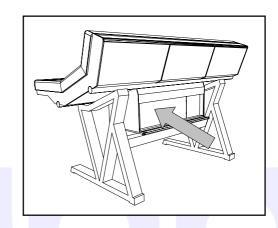

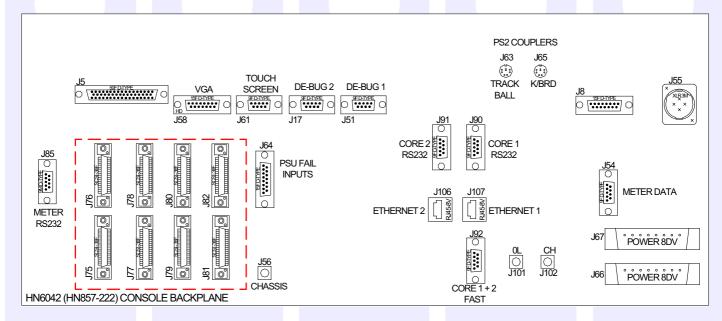




CONNECTOR PIN OUT INFORMATION




DIGITAL INPUTS - BNC INTERFACE

7 AES card slots exist within the DSP/Digital I/O Rack, which house AES digital I/O cards, each providing 16 AES inputs and 16 AES outputs. Each analogue rack in the system requires a bulk card in one of these slots. Similarly, if I/O expansion is incorporated in the system (such as MADI or Hydra Networking), then a wide area bulk card must occupy one of these slots.

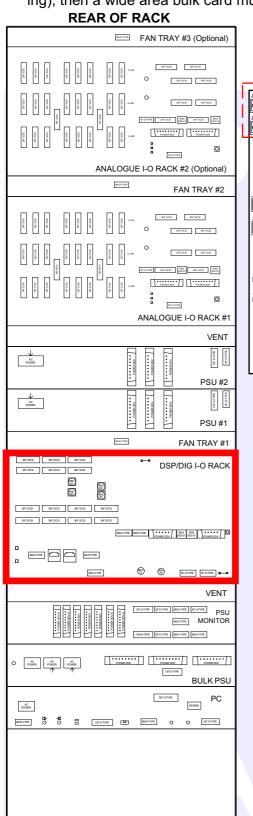

The diagram below shows how the Digital Inputs (connectors shown within dotted border) are connected to BNC Input Interface panels via SCSI cabling. For clarity, input connections from just 2 AES cards to an interface panel are shown here.

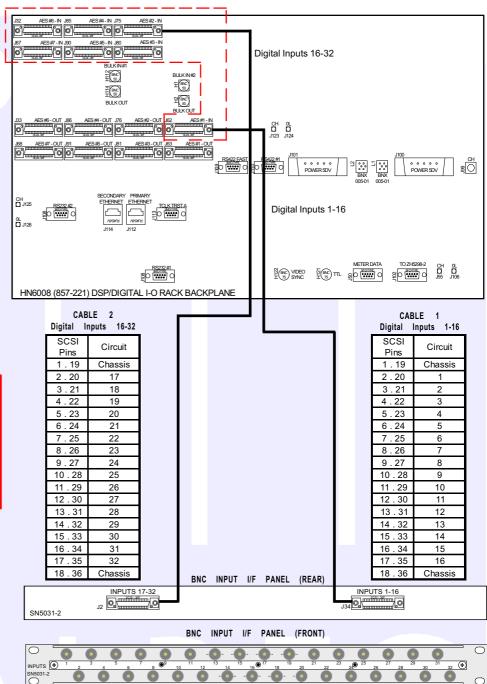


The BNC Input Interface panels must be located within 1m (3.2ft) of the DSP/Digital I-O Backplane. Each panel can interface 32 digital inputs. Therefore if all digital inputs are used, 3 panels would be

needed.




DIGITAL OUTPUTS - BNC INTERFACE

7 AES card slots exist within the DSP/Digital I/O Rack, which house AES digital I/O cards, each providing 16 AES inputs and 16 AES outputs. Each analogue rack in the system requires a bulk card in one of these slots. Similarly, if I/O expansion is incorporated in the system (such as MADI or Hydra Networking), then a wide area bulk card must occupy one of these slots.

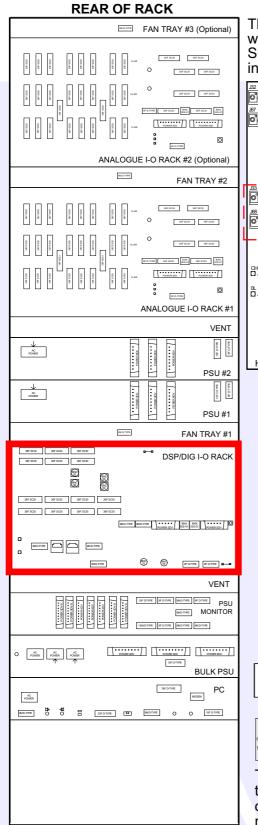

The diagram below shows how the Digital Outputs (connectors shown within dotted border) are connected to BNC Output Interface panels via SCSI cabling. For clarity, output connections from just 2 AES cards to an interface panel are shown here.

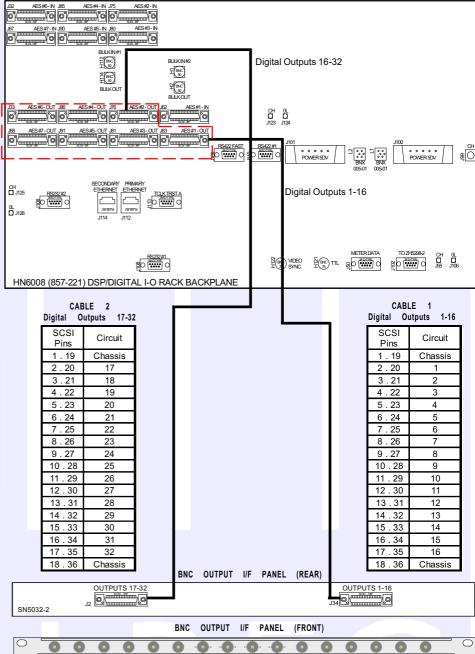


The BNC Output Interface panels must be located within 1m (3.2ft) of the DSP/Digital I-O Backplane. Each panel can interface 32 digital outputs. Therefore if all digital outputs are used, 3 panels would be needed.




DIGITAL INPUTS - XLR INTERFACE

7 AES card slots exist within the DSP/Digital I/O Rack, which house AES digital I/O cards, each providing 16 AES inputs and 16 AES outputs. Each analogue rack in the system requires a bulk card in one of these slots. Similarly, if I/O expansion is incorporated in the system (such as MADI or Hydra Networking), then a wide area bulk card must occupy one of these slots.



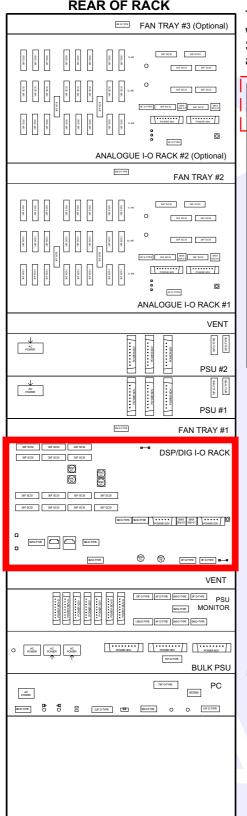

The diagram below shows how the Digital Inputs (connectors shown within dotted border) are connected to XLR Input Interface panels via SCSI cabling. For clarity, input connections from just one AES card to an interface panel are shown here.

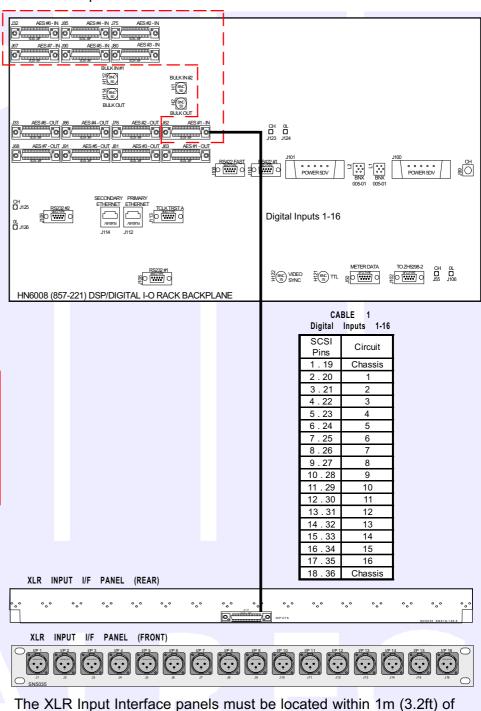


the DSP/Digital I-O Backplane. Each panel can interface 16 digital inputs. Therefore if all digital inputs are used, 6 panels would be

needed.




DIGITAL OUTPUTS - XLR INTERFACE

7 AES card slots exist within the DSP/Digital I/O Rack, which house AES digital I/O cards, each providing 16 AES inputs and 16 AES outputs. Each analogue rack in the system requires a bulk card in one of these slots. Similarly, if I/O expansion is incorporated in the system (such as MADI or Hydra Networking), then a wide area bulk card must occupy one of these slots.

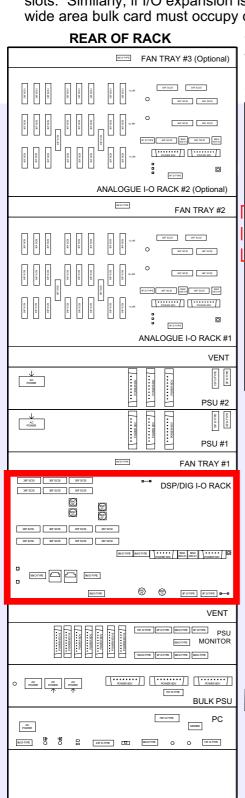

The diagram below shows how the Digital Outputs (connectors shown within dotted border) are connected to XLR Output Interface panels via SCSI cabling. For clarity, output connections from just one AES card to an interface panel are shown here.

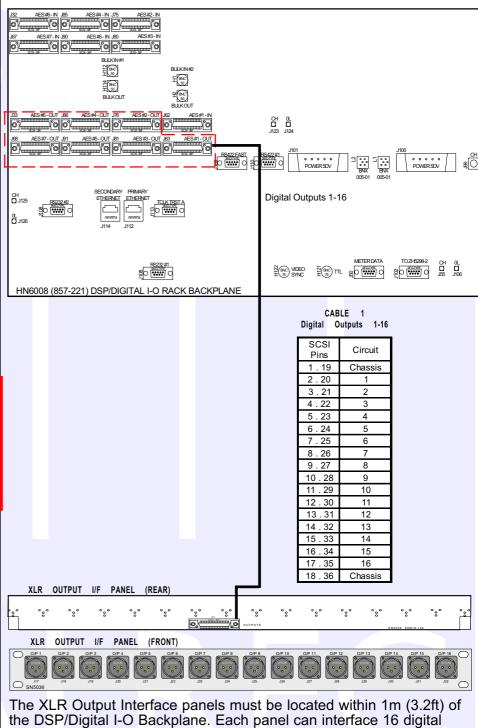


outputs. Therefore if all digital outputs are used, 6 panels would be

needed



ANALOGUE MIC/LINE INPUTS (FOR MIC/LINE OR LINE ADC CARDS) - STYLE 1

Up to 8 Mic/Line or Line Cards can be fitted into the Analogue I-O Rack each providing 8 stereo inputs. There are 4 stereo Inputs on each of the Mic/Line Input connectors (shown within dotted border).

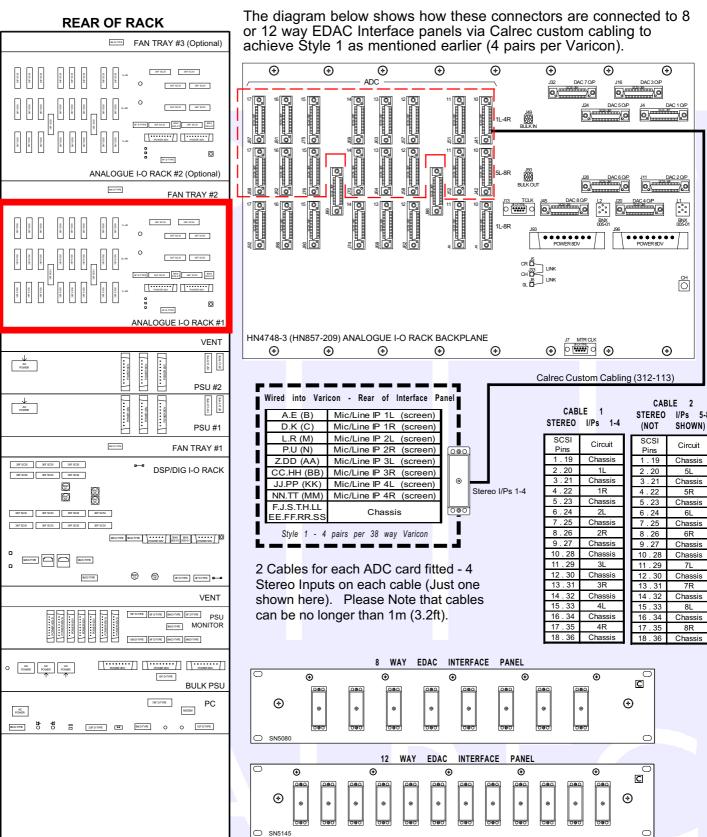



CH

CABLE 2

Circuit

Chassis

Chassis

Chassis

Chassis

Chassis

8L

Chassis

8R

Chassis

STEREO

2 . 20

3.21

4.22

5.23

6.24

8.26

9.27

10.28

11.29 12 . 30

14 . 32

15.33

16 . 34


18 . 36

C

C


ANALOGUE MIC/LINE INPUTS (FOR MIC/LINE OR LINE ADC CARDS) - STYLE 2

Up to 8 Mic/Line or Line Cards can be fitted into the Analogue I-O Rack each providing 8 stereo inputs. There are 4 stereo Inputs on each of the Mic/Line Input connectors (shown within dotted border).

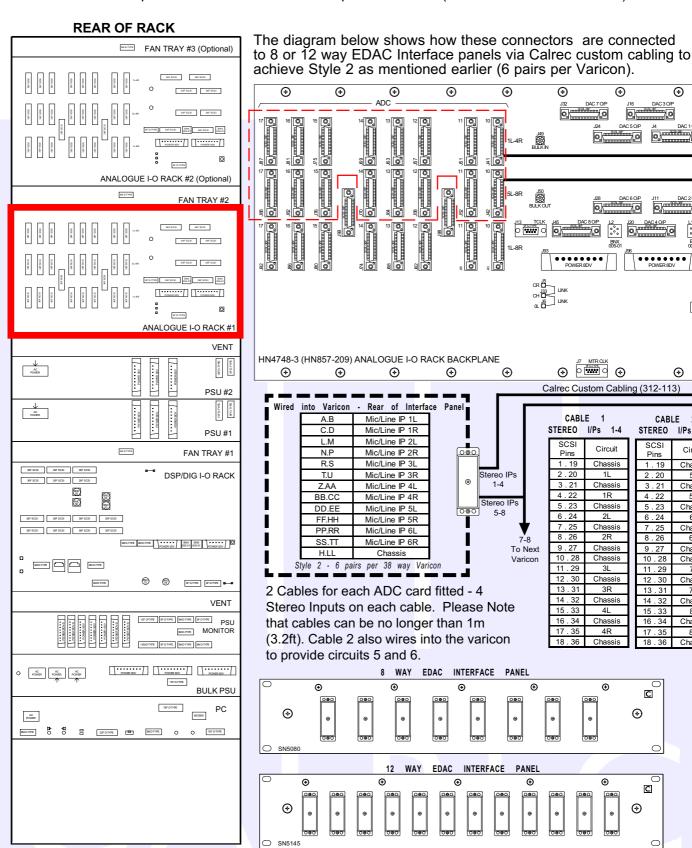




ANALOGUE LINE ONLY INPUTS (FOR LINE ADC CARDS ONLY) - STYLE 1

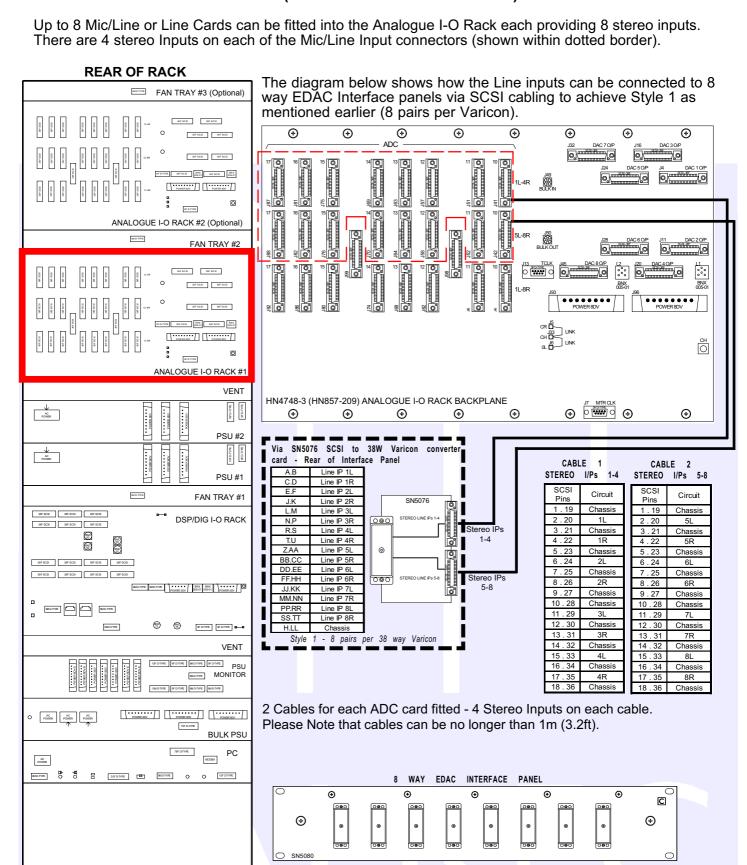



ANALOGUE LINE ONLY INPUTS (FOR LINE ADC CARDS ONLY) - STYLE 2


Up to 8 Mic/Line or Line Cards can be fitted into the Analogue I-O Rack each providing 8 stereo inputs. There are 4 stereo Inputs on each of the Mic/Line Input connectors (shown within dotted border).

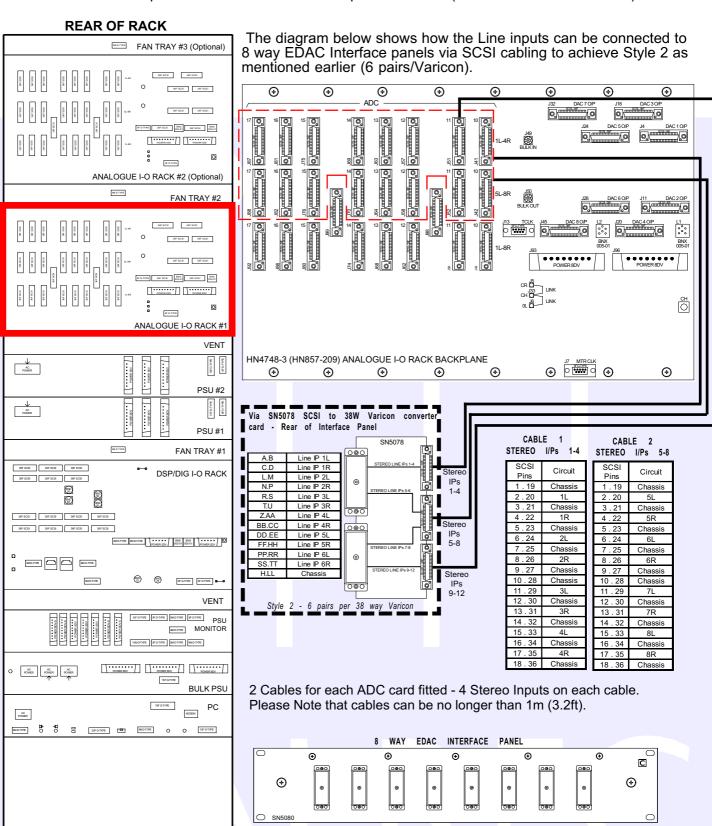



ANALOGUE LINE OUTPUTS (FOR DAC CARDS ONLY) - STYLE 1

Up to 8 DAC Cards can be fitted into the Analogue I-O Rack providing 8 stereo outputs on each of the Line

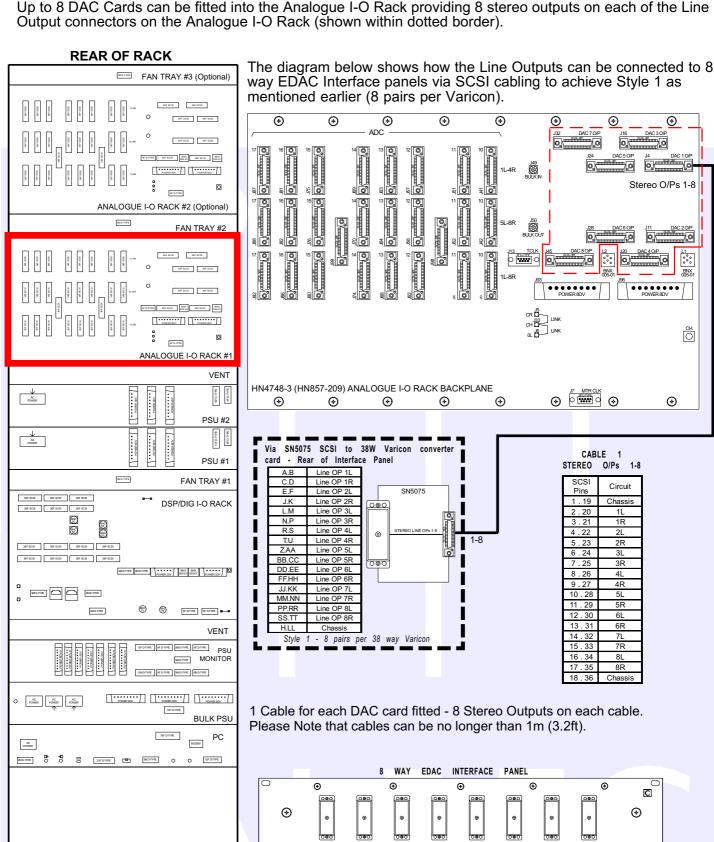




ANALOGUE LINE OUTPUTS (FOR DAC CARDS ONLY) - STYLE 2

Up to 8 DAC Cards can be fitted into the Analogue I-O Rack. Each card provides 8 stereo outputs on each of the Line Output connectors on the Analogue I-O Rack (shown within dotted border).




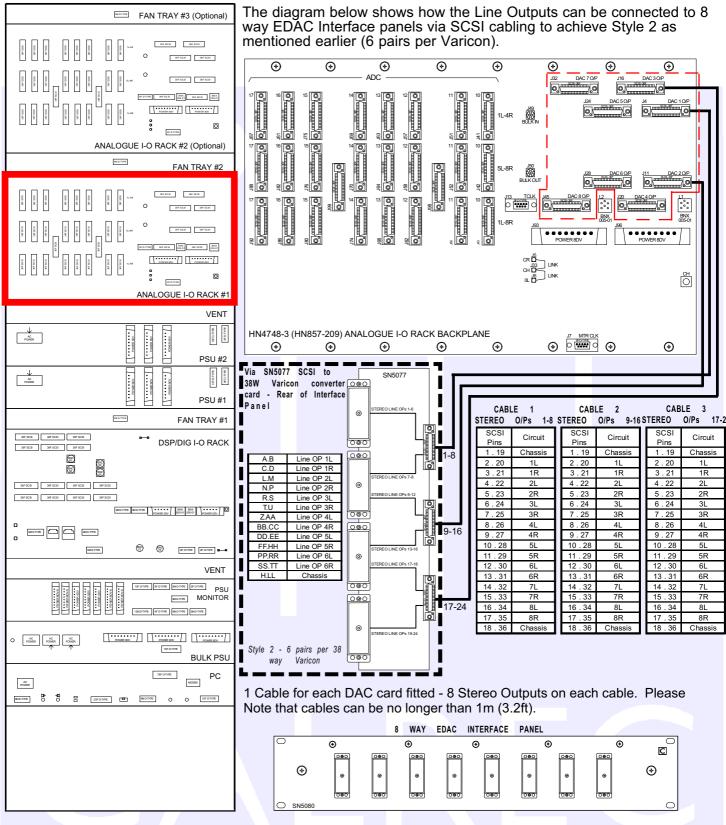




RELAYS & OPTO ISOLATOR CONNECTIONS

Connections to the Relays & Opto Isolators are provided on 36 way female SCSI connectors on the rear of the Console. Up to 4 cards can be fitted.

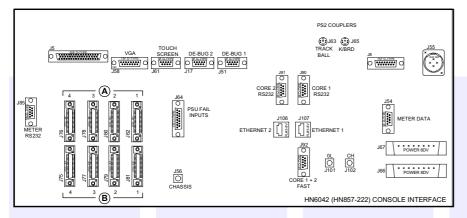

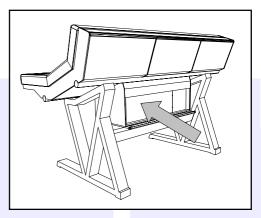

A

=
_
_

SCSI (conn 1 of 2)					
Pins	Circuit				
1 . 19	5V				
2.20	Opto 1				
3 . 21	Opto 2				
4 . 22	Opto 3				
5 . 23	Opto 4				
6	* Relay 1 No				
24	Nm				
7	Com				
25	* Relay 2				
8	Nm				
26	Com				
9	* Relay 3				
27	Nm				
10 .	Com				
28	* Relay 4				
11	Nm				
29	Com				
12	Relay 5				
30	Nm				
13	Com				
31	Relay 6				
14	Nm				
32	Com				
15	Relay 7				
33	Nm				
16	Com				
34	Relay 8				
17	Nm				
35	Com				
18 . 36	0V				

SCSI (conn 2 of 2)				
Pins	Circuit			
1 . 19	5V			
2 . 20	Opto 5			
3 . 21	Opto 6			
4 . 22	Opto 7			
5 . 23	Opto 8			
6	Relay 9			
24	Nm			
7	Com			
25	Relay 10			
8	Nm			
26	Com			
9	Relay 11			
27	Nm			
10 .	Com			
28	Relay 12			
11	Nm			
29	Com			
12	Relay 13			
30	Nm			
13	Com			
31	Relay 14			
14	Nm			
32	Com			
15	Relay 15			
33	Nm			
16	Com			
34	Relay 16			
17	Nm			
35	Com			
18 . 36	OV			

^{*} Note that on Relay/Opto card 1, relays 1 - 4 are not available



PLANNING THE USE AND LABELLING OF I-O

CALREC

Sigma 100



INPUT/OUTPUT PORT LABELLING

The system allows the user to pre-define labels for all the I/O, using their own preferred names and numbers.

The only rules imposed on this are that:

- The I/O is labelled in pairs.
- The label must be no more than six characters.
- The same label cannot be used more than once (but an input can have the same label as an output).

I/O is labelled in pairs to make it easier to use with any type of signal; Mono, Stereo or Surround. In addition to this, Digital I/O is wired in pairs and it makes sense to deal with all the I/O in the same way.

The input port label is used as the default name for the channel input and will be shown on the display above the fader.

The system automatically adds a left (L) and right ($_{R}$) suffix to the label to distinguish the two halves of the pair, or an L R suffix when the pair is used together.

The pairs can be used either for two mono signals, or a stereo signal, or parts of a surround signal.

One exception to these rules is allowed:

This is for I/O which is dedicated to mono signals only (phone lines, mono reverbs, mono distribution feeds, etc). This I/O can be marked as being mono in which case the two halves of the pair have separate labels and the '& R suffixes are not applied.

Note that I/O marked in this way cannot be connected in pairs to stereo paths from the I/O Matrix panel on the control surface.

A Stereo channel input can only be connected to the L - R of a pair of ports, or to one mono port in which case the mono signal will be fed to both L & R of the channel.

A Stereo channel direct output can only be connected to the L - R of a pair of ports.

A Mono channel input or direct output can be connected to any of: The L or R of a pair of ports, or any mono port.

Mono ports should therefore be considered as unusual. If there is any doubt as to the use of ports, they should be treated as a pair.



SUITABLE LABELS

Generally, I/O Ports should be labelled with the name which appears at the other end of the cable, which is connected to the port.

Ideally, the port will be connected directly to a device (Mic splitter box, Video Tape Recorder, Echo unit, Transmission Control Suite, etc).

Alternatively, some I/O may be wired to a patch. This will be done, for example, to allow for hired devices to be connected and may also be done to aid maintenance and operator familiarity with analogue consoles.

When planning the use and labelling of I/O, you should also bear in mind that the Sigma 100 includes an internal electronic Input Patch and Output Patch. These allow ports to be used for different purposes on different shows and also, the patch connections are stored with the snapshot memories.



Digital Inputs - DSP/Digital I-O Rack

Cara Cr									
Input	(or	1st o	abel of 2 n	for L	R pai) 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Input	(or	L 1st o	abel of 2 n	for L	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		



Digital Inputs - DSP/Digital I-O Rack

Card Slot No..... SCSI Connector No.....

Card Oil	101 110 303						or Connector	110	
Input	Label for LR pair (or 1st of 2 mono) 6 characters							Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Input	(or	L 1st o	abel of 2 n	for L	R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		



Digital Inputs - DSP/Digital I-O Rack

Card Slot No	SCSI Connector No
--------------	-------------------

Input	(or	L 1st	abel of 2 n	for L	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Input	(or	L 1st o	_abel	for L	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		



Digital Outputs - DSP/Digital I-O Rack

Card Slot No St					• • • •	•		or Corniector i	NO
Output	Label for LR pair (or 1st of 2 mono) 6 characters							Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Output	Label for LR pair (or 1st of 2 mono) 6 characters				r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)	
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		



Digital Outputs - DSP/Digital I-O Rack

Card Slot No	SCSI Connector No
--------------	-------------------

Output	Label for LR pair (or 1st of 2 mono) 6 characters					r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Output	Label for LR pair (or 1st of 2 mono) 6 characters						ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		



Digital Outputs - DSP/Digital I-O Rack

Card Slot No...... SCSI Connector No......

Ouru Or	3 0101 110 00				•			110	
Output	Label for LR pair (or 1st of 2 mono) 6 characters					r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							LR		
10L + 10R							LR		
11L + 11R							LR		
12L + 12R							LR		
13L + 13R							LR		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Output	Label for LR pair (or 1st of 2 mono) 6 characters							Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							LR		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							LR		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		



Analogue Inputs - Analogue I-O Rack 1

Card S	lot No		 	 SC	SI	and		
Connector Number	Input	(or	_abel of 2 n			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		

Card S	Card Slot No								nnectors	and
Connector Number	Input	10)			for L		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							LR		
	7L + 7R							L R		
	8L + 8R							0		

Card S	lot No		 		SC	SI	Сс	nnectors	and
Connector Number	Input	10)		for L nono)			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		

						ĸ		
Card S	lot No		 	 SC	SI	Сс	nnectors	and
Connector Number	Input	(01	Label of 2 n			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		



Analogue Inputs - Analogue I-O Rack 1

Card S	lot No		 		SC	SI	Co	nnectors	and
Connector Number	Input	10)		for L			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L		

Ca	ard S	lot No		 	<u> </u>	SC	SI	Cc	nnectors	and
	nnector lumber	Input	(or			R pai 6 ch	ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
		1L + 1R						L R		
		2L + 2R						L R		
		3L + 3R						L R		
		4L + 4R						L R		
		5L + 5R						L R		
		6L + 6R						L R		
		7L + 7R						L R		
		8L + 8R						L R		

Card S	lot No		 	 SC	SI	Co	onnectors	and
Connector Number	Input	10)		R pai		ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		

							ĸ		
Card S	ot No		 		SC	CSI	Сс	nnectors	and
Connector Number	Input	(01		for L		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		



Analogue Inputs - Analogue I-O Rack 2 (if fitted)

Card S	lot No		 		SC	SI	Сс	nnectors	and
Connector Number	Input	(or		for L nono)			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		

Card S	lot No		 <u>.</u>		SC	SI	Co	nnectors	and
Connector Number	Input	10)		for L nono)			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		

Card S	lot No		 		SC	SI	Сс	nnectors	and
Connector Number	Input	no)		for L nono)		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		

	8L + 8R					R		
Card S	lot No		 	 SC	SI	Сс	nnectors	and
Connector Number	Input	(or	_abel of 2 n		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		



Analogue Inputs - Analogue I-O Rack 2 (if fitted)

Card S	lot No		 	 SC	SI	Сс	nnectors	and
Connector Number	Input	(or		R pai		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		

Ca	ard S	lot No		 	<u> </u>	SC	SI	Cc	nnectors	and
	nnector lumber	Input	(or			R pai 6 ch	ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
		1L + 1R						L R		
		2L + 2R						L R		
		3L + 3R						L R		
		4L + 4R						L R		
		5L + 5R						L R		
		6L + 6R						L R		
		7L + 7R						L R		
		8L + 8R						L R		

						_			
Card S	lot No		 		SC	SI	Co	nnectors	and
Connector Number	Input	(or		for L nono)			ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		

							- 11		
Card S	lot No		 		SC	SI	Сс	nnectors	and
Connector Number	Input	(or		for L			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		



Analogue Outputs - Analogue I-O Rack 1

Card Clat Na	CCCI Compostor No
Card Slot 190	SCSI Connector No

Output	(or		for L	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Card Slot No...... SCSI Connector No

Ouru O	iot i	10		• • • • •	• • • • • •			7.01 140
Output	(or 1	Labe	l for L mono)			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		

Card Slot No...... SCSI Connector No

Output	(or		for L		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Output	(or		for L	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		



Analogue Outputs - Analogue I-O Rack 1

Card Slot No	SCSI Connector No

oura o			 	 		3.01 1.0
Output	(or 1st	Label of 2 n		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R				L R		
2L + 2R				L R		
3L + 3R				L R		
4L + 4R				L R		
5L + 5R				L R		
6L + 6R				L R		
7L + 7R				L R		
8L + 8R				L R		

Card Slot No...... SCSI Connector No

Ouru O	iOt	140	 	• • • • •	• • • • • •		CONTROL	
Output	(or		for L nono)		r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		

Card Slot No...... SCSI Connector No

Output	(or		R pai) 6 ch	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R				L R		
2L + 2R				L R		
3L + 3R				L R		
4L + 4R				L R		
5L + 5R				L R		
6L + 6R				L R		
7L + 7R				L R		
8L + 8R				L R		

Output	(or		for L	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		



Analogue Outputs - Analogue I-O Rack 2 (if fitted)

0 10111	00010 1 11
Card Slot No	SCSI Connector No
Calu Sidi No	2021 COHECIOL NO

Caru 5	ΙΟι	110	 • • • • •		• • • • •	JUI 140		
Output	(or			R pai) 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R					·	L R		

Card Slot No...... SCSI Connector No

Output	(or		R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Card Slot No..... SCSI Connector No

Output	(or	_abel of 2 n		r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Output	(or		for L	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		



Analogue Outputs - Analogue I-O Rack 2 (if fitted)

Card Slot No	SCSI Connector No

	Sala Sist Homen Soci Somiotor Homen												
Output	(or			for L nono)			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)				
1L + 1R							L R						
2L + 2R							L R						
3L + 3R							L R						
4L + 4R							L R						
5L + 5R							L R						
6L + 6R							L R						
7L + 7R							L R						
8L + 8R							L R						

Card Slot No...... SCSI Connector No

Output	(or		for L nono)	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Card Slot No..... SCSI Connector No

Output	(or		for L		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Output	(or		for L	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		




Notes





Notes



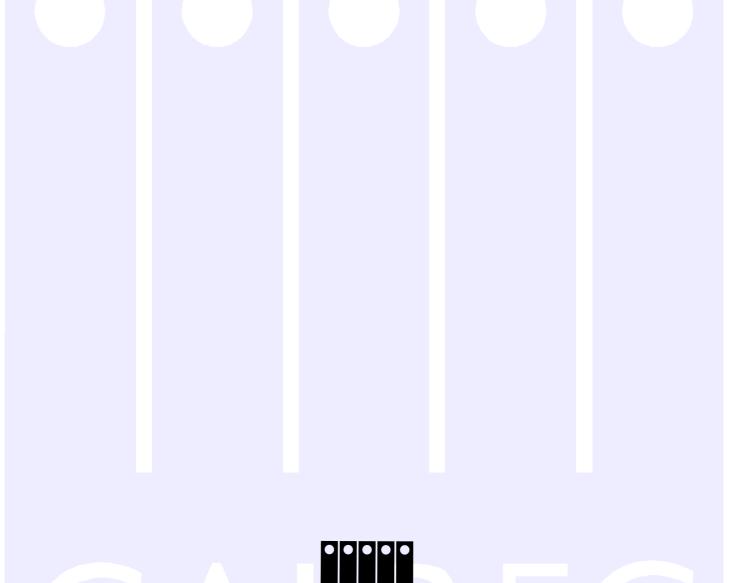



Calrec Audio Ltd. reserve the right to change specifications without notice. E. & O. E. Sigma 100 is a trademark of Calrec Audio Ltd. All other trademarks acknowledged.