

Additional information for new intercom system

TOP menu

TOP MENU	
VF	: ▶
CUSTOM SW	: ▶
■ OTHERS	: ▶

Item	Description
VF	Change screen to VF main menu items display.
CUSTOM SW	Change screen to CUSTOM SW main menu items display
OTHERS	Change screen to OTHERS main menu items display

OTHERS menu


■ OTHERS MENU	
INCOM	
INCOM1	: ▶
INCOM2	: ▶
INCOM HEAR	: CA REAR

Item	Setting	Initial setting	Description
INCOM1	—	—	Press the MENU SEL knob to move INCOM1 menu.
INCOM2	—	—	Press the MENU SEL knob to move INCOM2 menu.
INCOM HEAR	CA REAR, PD+ENG	CA REAR	CA REAR: PD or ENG listening lines are selected by line select switches on rear panel of camera adaptor. (See the bottom diagram.) PD+ENG: Both PD and ENG listening lines are mixed.

INCOM1 / INCOM2 menu

■ INCOM1 : ◀	
INCOM : L+R	
PGM1	: L
PGM2	: R
SIDE TONE : 64	

Item	Setting	Initial setting	Description
INCOM	L, R, L+R, ---	L+R	Intercom listening lines selected by INCOM HEAR menu can be assigned to left ear(L), right ear(R), both ears(L+R), or muted(---).
PGM1	L, R, L+R, ---	L+R	PGM1 listening lines can be assigned to left ear(L), right ear(R), both ears(L+R), or muted(---).
PGM2	L, R, L+R, ---	L+R	PGM2 listening lines can be assigned to left ear(L), right ear(R), both ears(L+R), or muted(---).
SIDE TONE	0 to 127	64	Feedback volume of own talking.

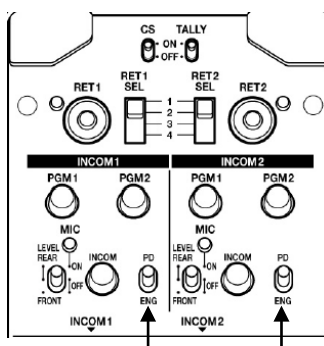

Line select switch for INCOM1

Line select switch for INCOM2

Rear panel view of camera adaptor