

## Data Sheet

Userpanel 10

Rev. 2005-11-16


<b>I</b>	
Userpanel Faderstreifen Fader	

#### 961/91

#### • Note

This datasheet contains particulars about indicators, power consumption, dimensions and weight.

### **Panel Front View**

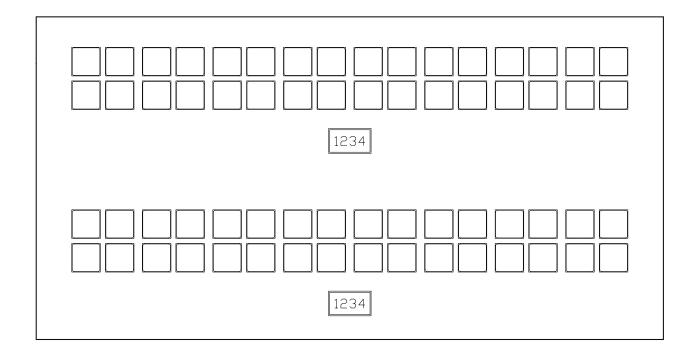

#### Copyright/Disclaimer

All rights reserved. Permission to reprint or electronically reproduce any document or graphic in whole or in part for any reason is expressly prohibited, unless prior written consent is obtained from the Lawo AG.

All trademarks and registered trademarks belong to their respective owners. It cannot be guaranteed that all product names, products, trademarks, requisitions, regulations, guidelines, specifications and norms are free from trade mark rights of third parties.

All entries in this document have been thoroughly checked, however no guarantee for correctness can be given. Lawo AG cannot be held responsible for any misleading or incorrect information provided throughout this manual.

Lawo AG reserves the right to change specifications at any time without notice

© Lawo AG, November 2005



## **Related Products**

Product	Description	Name	
Control System	Controls Consol Surface	960/01	
PSU	Power Supply for Consol Surface	960/04	

### General

Parameter	Conditions	Min.	Тур.	Max.	Unit
Cooling requirement					
Power dissipation	12V		13.2		W
Mechanical data					
Height			144		mm
Width			280		mm
Depth	incl. knobs		70		mm
Weight			1190		g

# **Power Supply**

Parameter	Conditions		Min.	Тур.	Max.	Unit
Operating supply voltage	DC		10.8	12	13.2	V
Nominal supply current	12V			1100		mA
Nominal power consumption	12V			13.2		W

### Indicators

Indicator	Function	Status	Condition		
Left Side	Left Side				
H1	LCA	static red / Off	LCA not booted / normal operation		
H2	LCA	green	not used		
H3	LCA	yellow	not used		
H4	USB Controller	red	not used		
H5	USB Controller	yellow blinking	Data transmision USB		
H6	USB Controller	green blinking	normal operation		
H7	USB HUB	yellow	intern port not used		
H8	USB HUB	static green	intern port Connection established, normal operation		
H9	USB HUB	yellow	extern port not used		
H10	USB HUB	static green	extern port Connection established, normal operation		
H11	USB HUB	yellow	extern port not used		
H12	USB HUB	static green	extern port Connection established, normal operation		

# Further particulars/explanatory notes

### • Power Consumption

All particulars are typical and can increase in worst case.



# **Panel Back View**

