


Internal Link circuit for control inputs

Control and Audio Connections via the DB15 Control/Status Connector

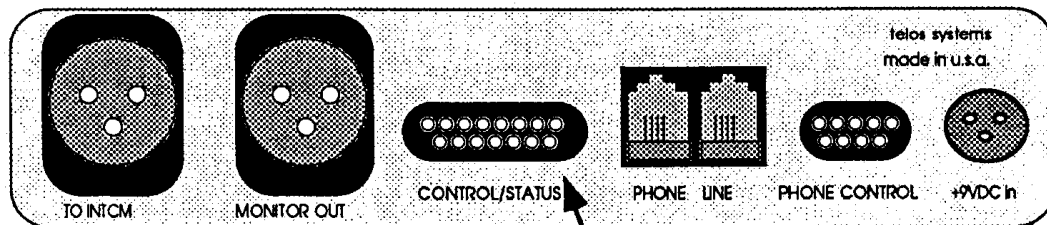

"CONTROL/STATUS" Female DB15 Connector (J2)

1	"AUTO-ANSWER" status OUT (active low)
9	"CALL" status OUT (active low)
2	"OFF" status OUT (active low)
10	"ON" status OUT (active low)
3	Momentary "ON" OUT (low going pulse)
11	Momentary "OFF" OUT (low going pulse)
7	"ON/OFF" INPUT ("ON"= low, "OFF"=high)
8	"TELOS" 4-wire com IN (unbalanced audio IN)
15	"TELOS" 4-wire com OUT (unbalanced audio OUT)
4	+5VDC
12	+5VDC
5	Ground
6	Ground
13	Ground
14	N/C

Status & control outputs

The status outputs (J2-1,2,9,10) are open collector transistors which make connection to ground when active. Maximum output current is 300ma. The Link also provides two open collector outputs