SONY

HD CAMERA CONTROL UNIT

HDCU1000
HDCU1080
HDCU1500

SD ENCODER UNIT
HKCU1001

MULTI INTERFACE UNIT
HKCU1003

SDI OUTPUT EXPANSION UNIT
HKCU1005

Digital HDVS

MAINTENANCE MANUAL
1st Edition (Revised 1)
Serial No. 10001 and Higher : HDCU1000 (UC)
Serial No. 30001 and Higher : HDCU1000 (J)
Serial No. 40001 and Higher : HDCU1000 (CE)
Serial No. 50001 and Higher : HDCU1080 (CN)
Serial No. 10001 and Higher : HDCU1500 (SY)
Serial No. 30001 and Higher : HDCU1500 (J)

⚠警告

このマニュアルは，サービス専用です。
お客様が，このマニュアルに記載された設置や保守，点検，修理などを行うと感電や火災，人身事故につながることがあります。
危険をさけるため，サービストレーニングを受けた技術者のみご使用ください。

⚠ WARNING

This manual is intended for qualified service personnel only.
To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

⚠ WARNUNG

Die Anleitung ist nur für qualifiziertes Fachpersonal bestimmt.
Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Um die Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei Wartungsarbeiten strikt die Angaben in der Anleitung zu befolgen. Andere als die angegeben Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung dazu besitzen.

⚠ AVERTISSEMENT

Ce manual est destiné uniquement aux personnes compétentes en charge de l'entretien. Afin de réduire les risques de décharge électrique, d'incendie ou de blessure n'effectuer que les réparations indiquées dans le mode d'emploi à moins d'être qualifié pour en effectuer d'autres. Pour toute réparation faire appel à une personne compétente uniquement.

Laser Diode Properties
Wavelength : 1310 ±40 nm
Emission duration : Pulse Modulation
Laser output power : 141^{+37}_{-29} µW

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION

The use of optical instruments with this product will increase eye hazard.

CLASS 1 LASER PRODUCT
LASER KLASSE 1 PRODUKT
LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

This camera control unit is classified as a CLASS 1 LASER PRODUCT.

安全のために，周辺機器を接続する際は，過大電圧を持つ可能性があるコネクタを以下のポートに接続しないでください。
：Ethernetコネクター
上記のポートについては本書の指示に従ってください。

For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to the following port(s).
: Ethernet connector
Follow the instructions for the above port(s).

Attention-when the product is installed in Rack:

1. **Prevention against overloading of branch circuit**
   When this product is installed in a rack and is supplied power from an outlet on the rack, please make sure that the rack does not overload the supply circuit.

2. **Providing protective earth**
   When this product is installed in a rack and is supplied power from an outlet on the rack, please confirm that the outlet is provided with a suitable protective earth connection.

3. **Internal air ambient temperature of the rack**
   When this product is installed in a rack, please make sure that the internal air ambient temperature of the rack is within the specified limit of this product.


4. **Prevention against achieving hazardous condition due to uneven mechanical loading**
   When this product is installed in a rack, please make sure that the rack does not achieve hazardous condition due to uneven mechanical loading.

5. **Install the equipment while taking the operating temperature of the equipment into consideration**
   For the operating temperature of the equipment, refer to the specifications of the Operation Manual.

For the customers in the Netherlands
Voor de klanten in Nederland

Hoe u de batterijen moet verwijderen, leest u in de tekst van deze handleiding.

Gooi de batterij niet weg maar lever deze in als klein chemisch afval (KCA).



Für Kunden in Deutschland

Entsorgungshinweis: Bitte werfen Sie nur entladene Batterien in die Sammelboxen beim Handel oder den Kommunen. Entladen sind Batterien in der Regel dann, wenn das Gerät abschaltet und signalisiert “Batterie leer” oder nach längerer Gebrauchsdauer der Batterien “nicht mehr einwandfrei funktioniert”. Um sicherzugehen, kleben Sie die Batteriepole z.B. mit einem Klebestreifen ab oder geben Sie die Batterien einzeln in einen Plastikbeutel.

注意

指定以外の電池に交換すると，破裂する危険があります。
使用済の電池は，説明書に従って処理してください。

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.
Dispose of used batteries according to the manufacturer's instructions.

Vorsicht!

Explosionsgefahr bei unsachgemäßem Austausch der Batterie.

Ersatz nur durch denselben oder einen vom Hersteller empfohlenen ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.
Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

ADVARSEL

Lithiumbatteri - Eksplosjonsfare.
Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten.
Brukt batteri returneres apparatleverandøren.

VARNING

Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en likvärdig typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt gällande föreskrifter.

VAROITUS

Paristo voi räjähtää jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.
Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

Table of Contents

Manual Structure

Purpose of this manual ..... 5 (E)
Related manuals ..... 5 (E)

1. Service Overview

1-1. Service Information ..... 1-1 (E)
1-1-1. Tools ..... 1-1 (E)
1-1-2. Cautions when Replacing the Lithium Battery ..... 1-1 (E)
1-2. Notes for Replacing Parts ..... 1-2 (E)
1-2-1. Notes for Replacing the Flexible Card Wire ..... 1-2 (E)
1-2-2. Notes for Replacing the Board ..... 1-3 (E)
1-2-3. Notes for Replacing the Connector on the Board ..... 1-3 (E)
1-2-4. Notes for HDCU1080 ..... 1-3 (E)
1-3. Connecting/Disconnecting the Flexible Card Wire ..... 1-4 (E)
1-4. Writing and Rewriting the PLD Internal Data ..... 1-5 (E)
1-5. Circuit Protection Parts ..... 1-6 (E)
1-6. Circuit Description ..... 1-7 (E)
1-6-1. HDCU1000/1080/1500 Common ..... 1-7 (E)
1-6-2. HDCU1000/1080 ..... 1-8 (E)
1-6-3. HDCU1500 ..... 1-8 (E)
1-6-4. HKCU1001 ..... 1-8 (E)
1-6-5. HKCU1003 ..... 1-9 (E)
1-6-6. HKCU1005 ..... 1-9 (E)
1-7. Notes on Repair Parts ..... 1-10 (E)
1-8. Unleaded Solder ..... 1-10 (E)

2. Replacement of Main Parts

2-1. Replacing the Main Parts (HDCU1000/1080) ..... 2-1 (E)
2-1-1. Replacing the Switching Regulator (HDCU1000/1080) ..... 2-1 (E)
2-1-2. Replacing the DC Fan (HDCU1000/1080) .... 2-3 (E)
2-1-3. Replacing the Fuse (HDCU1000/1080) ..... 2-4 (E)
2-1-4. Removing the Rear Panel (HDCU1000/1080) ..... 2-5 (E)
2-1-5. Replacing the SDP-12 Board (HDCU1000/1080) ..... 2-5 (E)
2-1-6. Replacing the MB-1071 Board (HDCU1000/1080) ..... 2-6 (E)
2-1-7. Replacing the CNB-21 Board (HDCU1000/1080) ..... 2-7 (E)
2-2. Replacing the Main Parts (HDCU1500) ..... 2-8 (E)
2-2-1. Replacing the Power Supply Unit (HDCU1500) ..... 2-8 (E)
2-2-2. Replacing the DC Fan (HDCU1500) ..... 2-9 (E)
2-2-3. Replacing the Front Panel (HDCU1500) ..... 2-10 (E)
2-2-4. Removing the Rear Panel (HDCU1500) ..... 2-10 (E)
2-2-5. Replacing the MB-1072 Board (HCDU1500) ..... 2-11 (E)
2-2-6. Replacing the CNB-22 Board (HDCU1500) ..... 2-12 (E)
2-2-7. Replacing the SDP-12 Board (HDCU1500) ..... 2-12 (E)

3. Electrical Alignment

3-1. Preparation ..... 3-1 (E)
3-1-1. Required Equipment ..... 3-1 (E)
3-1-2. Notes on Adjustments ..... 3-1 (E)
3-1-3. Connection of Equipment ..... 3-2 (E)
3-1-4. Initialization Settings ..... 3-3 (E)
3-2. Audio System Adjustment ..... 3-4 (E)
3-2-1. Microphone Level Adjustment ..... 3-4 (E)
3-2-2. RTS Intercom Adjustment ..... 3-5 (E)
3-3. Video and Reference Signal System Adjustment .... 3-6 (E)
3-3-1. 27 MHz VCO Free-run Adjustment ..... 3-6 (E)
3-3-2. Clock (74 MHz) Duty Adjustment ..... 3-6 (E)
3-3-3. Prompter Level 1/2 Adjustment ..... 3-7 (E)
3-4. Video Signal System Adjustment (Front board) ..... 3-7 (E)
3-4-1. SD-SDI Input VCO Free-run Adjustment ..... 3-7 (E)
3-4-2. STAIR CASE Adjustment ..... 3-8 (E)
3-5. SD Signal System Adjustment ..... 3-8 (E)
3-5-1. VBS Output Level Adjustment ..... 3-8 (E)
3-5-2. PIX Output Level Adjustment ..... 3-9 (E)
3-5-3. WF Output Level Adjustment ..... 3-9 (E)
3-5-4. GRB Output Level Adjustment ..... 3-10 (E)
3-5-5. Y/R-Y/B-Y Output Level Adjustment ..... 3-11 (E)

4. Spare Parts

4-1. Notes on Repair Parts 4-1
4-2. Exploded Views 4-2
4-3. Electrical Parts List 4-12
4-4. Packing Materials & Supplied Accessories 4-142
4-5. Optional Fixtures List 4-142

5. Semiconductor Pin Assignments

6. Block Diagrams

Overall (HDCU1000) 6-2, 6-3
ADO-10 ..... 6-2, 6-3, 6-4, 6-5, 6-6, 6-7
CN-2672 ..... 6-2, 6-3, 6-4, 6-5
CN-2673 ..... 6-2, 6-3, 6-4, 6-5
CN-2674 ..... 6-2, 6-3, 6-4, 6-5, 6-16
CN-2700 ..... 6-2, 6-3, 6-4, 6-5
CN-2718 ..... 6-2, 6-3, 6-4, 6-5
CN-2805 ..... 6-2, 6-3, 6-4, 6-5
CNB-21 ..... 6-2, 6-3, 6-4, 6-5
MB-1071 ..... 6-2, 6-3, 6-4, 6-5
Overall (HDCU1080) 6-4, 6-5
DU-390 ..... 6-4, 6-5
Overall (HDCU1500) 6-6, 6-7
CN-2675 ..... 6-6, 6-7, 6-17
CN-2676 ..... 6-6, 6-7
CN-2677 ..... 6-6, 6-7
CN-2678 ..... 6-6, 6-7
CNB-22 ..... 6-6, 6-7
MB-1072 ..... 6-6, 6-7
AT-167 6-8
AU-302 6-10
AU-303 6-10
AVP-6 6-11
DRX-5 6-12
DTX-5 6-13
EN-159A 6-14
EN-159B 6-14
HIF-25 6-15
HIF-26 6-15
HIF-27 6-15
SDI-85 6-15
SDI-86 6-16
SDI-87 6-17
SDP-12 6-18
VDA-64A 6-19
VDA-64B 6-19
VDA-64C 6-19
VIF-34B 6-20
VIF-34 6-20

7. Schematic Diagrams

ADO-10 7-2
AT-167 7-3
AU-302 7-13
AU-303 7-15
AVP-6 7-17
CN-2672 7-25
CN-2673 7-26
CN-2674 7-26
CN-2675 7-27
CN-2676 7-28
CN-2677 7-28
CN-2678 7-29
CN-2700 7-29
CN-2718 7-29
CN-2805 7-29
CNB-21 7-30
CNB-22 7-32
DRX-5 7-33
DTX-5 7-44
DU-390 7-51
EN-159A 7-53
EN-159B 7-61
HIF-25 7-69
HIF-26 7-70
HIF-27 7-71
MB-1071 7-72
MB-1072 7-76
SDI-85 7-79
SDI-86 7-80
SDI-87 7-81
SDP-12 7-83
VDA-64A 7-94
VDA-64B 7-95
VDA-64C 7-96
VIF-34B 7-97
VIF-34 7-101
Frame Wiring (HDCU1000) 7-104
Frame Wiring (HDCU1080) 7-106
Frame Wiring (HDCU1500) 7-108

8. Board Layouts

AT-167 8-2
ADO-10 8-3
AU-302 8-3
AU-303 8-3
AVP-6 8-4
CN-2672 8-5
CN-2673 8-5
CN-2674 8-5
CN-2675 8-5
CN-2676 8-5
CN-2677 8-5
CN-2678 8-5
CN-2700 8-6
CN-2718 8-6
CN-2805 8-6
CNB-21 8-6
DRX-5 8-7
DTX-5 8-8
EN-159A 8-9
EN-159B 8-9
CNB-22 8-10
HIF-25 8-10
HIF-26 8-11
HIF-27 8-11
DU-390 8-12
MB-1071 8-12
MB-1072 8-13
SDI-85 8-13
SDI-86 8-14
SDI-87 8-14
SDP-12 8-15
VDA-64A 8-16
VDA-64B 8-16
VDA-64C 8-16
VIF-34B 8-16
VIF-34 8-16

Manual Structure

Purpose of this manual

This manual is the maintenance manual of the following models :

HD Camera Control Unit	HDCU1000/HDCU1080/HDCU1500
SD Encoder Unit	HKCU1001
Multi Interface Unit	HKCU1003
SDI Output Expansion Unit	HKCU1005

This manual intended for use by trained system and service engineers describes (service overview and the circuit overview, the main part replacements, electrical alignment, parts list, semiconductor pin assignments, block diagrams, schematic diagrams, board layouts.) required for parts-level service.

Related manuals

Beside this Installation Manual, the following manuals are available for the unit.

- **Operation Manual (Supplied with HDCU1000/1500)**
  This manual describes how to operate the HDCU1000/1500.

- **Operation Manual (Supplied with HDCU1080)**
  This manual describes how to operate the HDCU1080.

- **Installation Manual (Available on request)**
  This manual is intended for use by trained system and service engineers, and describes the information regarding the installation of the unit and the information that premises the service based on components replacement.
  For obtaining, contact your local Sony Sales Office/Service Center.
  Part number : 9-968-207-0X

- **“Semiconductor Pin Assignments” CD-ROM (Available on request)**
  This “Semiconductor Pin Assignments” CD-ROM allows you to search for semiconductors used in Broadcast and Professional equipment.
  This manual contains a complete list of semiconductors and their ID Nos., and thus should be used together with the CD-ROM.
  Part number: 9-968-546-XX

Section 1
Service Overview

1-1. Service Information

1-1-1. Tools

Sony P/N	Name
A-1153-700-A	Extension board EX-982*1
A-1153-701-A	Extension board EX-983*2
A-1153-715-A	Extension board EX-984*3
J-6480-010-A	Alignment sleeve*4
	Remover HC-001
J-7120-140-A	PLD download tool*5
–	Cotton swab*6

*1 : Extension board for front plug-in board
*2 : Extension board for rear plug-in board
*3 : Extension board for SDP-12 board
*4 : For female optical connector
*5 : PLD data download cable
*6 : Commercially available
For cleaning optical contact block (4 mm or less in diameter)

1-1-2. Cautions when Replacing the Lithium Battery

The lithium battery is installed on the AT-167 board. This lithium battery is used to back up the real-time clock (RTC). RTC stops operating when the battery life expires. Replace the battery and reset DATE/TIME on the C12 DATE page in the configuration menu. (refer to Installation Manual Section 3 “Menu Settings”.)

AT-167 board/CR2032: Sony part number (1-528-174-11)

CAUTION

Ensure that the battery is installed with + and – poles connected to the correct terminals. An incorrect connection may cause an explosion or leakage of fluid.

1-2. Notes for Replacing Parts

There are two kinds of types (gold and silver) in the parts below used in this unit.
- Flexible card wires
- Boards
- Connectors on the board (for flexible card wires)

When replacing the parts above, be sure to follow the instructions described in "1-2-1. Notes for Replacing the Flexible Card Wire", "1-2-2. Notes for Replacing the Board", and "1-2-3. Notes for Replacing the Connector on the Board".
Be sure to use the specified parts. Using un-specified parts causes the change in the characteristics of this unit and the unit does not work properly.
Spare parts are listed in the spare parts list of "Spare Parts" Section. In the spare parts list, (GOLD) or (SILVER) is put after each part name to distinguish two kinds of types (gold and silver).

1-2-1. Notes for Replacing the Flexible Card Wire

When replacing the flexible card wires listed below, confirm the conductive (terminal) part color of the flexible card wires and follow the procedure below.

1. Replace the flexible card wire with a flexible card wire whose conductive part is gold when the conductive part of a flexible card wire is gold.
   Note
   For the board on which a connector whose contact surface is gold is used, "G" is put after the board name by silk-screen printing or a "G" seal is attached to the empty space on the board. Example: AU-303G

2. Replace the flexible card wire with a flexible card wire whose conductive part is silver when the conductive part of a flexible card wire is silver. In this case, silk "G" or a "G" seal is not put on the board name.

When the conductive part is gold (HDCU1000)

Board	Flexible card wire		Board
	Pin	Gold : Parts No.	
CNB-21G	50	1-831-087-11	ADO-10G
CNB-21G	50	1-831-087-11	VIF-34G
CNB-21G	50	1-831-087-11	VIF-34G
CNB-21G	50	1-831-664-11	CN-2672G
CN-2805G	15	1-831-666-11	CN-2672G
SDI-86G	15	1-831-666-11	CN-2674G

When the conductive part is silver (HDCU1000)

Board	Flexible card wire		Board
	Pin	Silver : Parts No.	
CNB-21	50	1-830-799-11	ADO-10
CNB-21	50	1-830-799-11	VIF-34
CNB-21	50	1-830-799-11	VIF-34
CNB-21	50	1-830-798-11	CN-2672
CN-2805	15	1-830-801-11	CN-2672
SDI-86	15	1-830-801-11	CN-2674

When the conductive part is gold (HDCU1500)


Board	Flexible card wire		Board
	Pin	Gold : Parts No.	
AU-303G	45	1-831-665-11	MB-1072G
CNB-22G	50	1-831-087-11	ADO-10G
CNB-22G	50	1-831-087-11	VIF-34BG
CNB-22G	50	1-831-664-11	CN-2675G
CN-2677G	15	1-831-666-11	CN-2675G
SDI-87G	15	1-831-666-11	CN-2675G

When the conductive part is silver (HDCU1500)

Board	Flexible card wire		Board
	Pin	Silver : Parts No.	
AU-303	45	1-830-800-11	MB-1072
CNB-22	50	1-830-799-11	ADO-10
CNB-22	50	1-830-799-11	VIF-34B
CNB-22	50	1-830-798-11	CN-2675
CN-2677	15	1-830-801-11	CN-2675
SDI-87	15	1-830-801-11	CN-2675

1-2-2. Notes for Replacing the Board

Replace the board with a board of the same number as the spare part number of the board to be removed when replacing a board.
Example: A spare part number is put on the board.

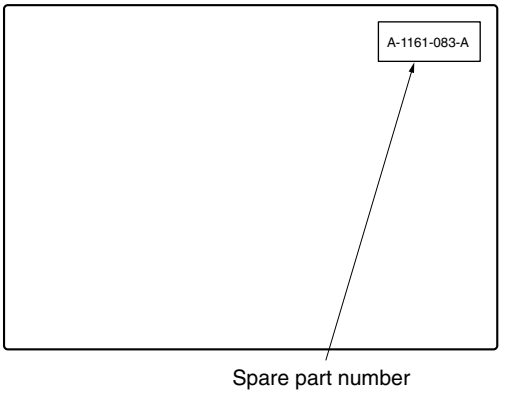

A spare part number is put on side A or B of the board by silk-screen printing or a spare part code label (spare part number) is attached on side A or B.

1-2-3. Notes for Replacing the Connector on the Board

There are two types of connectors for the flexible card wire mounted on the board used in this unit. Distinguish them in the procedure below when replacing these connectors.

1. The contact surface of the connector used for a board is gold when the conductive part of a flexible card wire is gold.
   In a spare parts list, (GOLD) is put after the part name.
2. The contact surface of the connector used for a board is silver when the conductive part of a flexible card wire is silver.
   In a spare parts list, (SILVER) is put after the part name.

1-2-4. Notes for HDCU1080

The conductive part of the flexible card wires used in the HDCU1080 is gold only.
If the flexible card wires need to be replaced, use the parts listed below.
Also, for the board on which a connector whose contact surface is gold is used, “G” is put after the board name by silk-screen printing or a “G” seal is attached to the empty space on the board. Example: AU-303G

When the conductive part is gold (HDCU1080)

Board	Flexible card wire		Board
	Pin	Gold : Parts No.	
CNB-21G	50	1-831-087-11	ADO-10G
CNB-21G	50	1-831-087-11	VIF-34G
CNB-21G	50	1-831-087-11	VIF-34G
CNB-21G	50	1-831-664-11	CN-2672G
CN-2805G	15	1-831-666-11	CN-2672G
SDI-86G	15	1-831-666-11	CN-2674G

1-3. Connecting/Disconnecting the Flexible Card Wire

The flexible card wires are used to connect between the following boards. Life of flexile card wire will be significantly shortened if it is bent. Be very careful not to bend the flexible card wire.
Three types of different-shaped connectors are used in HDCU1000/1080/1500. (Type A to type C)
Because the direction of the flexible card wire is different depending on the shape of the connector, be careful when connecting the flexible card wire.

Disconnecting

1. Turn off the power.
2. Slide or raise the portion A in the direction of the arrow to unlock and pull out the flexible card wire.

Connecting


Notes

- Do not insert the flexible card wire sideways.
- Confirm that there is no stain or dust on the contact surface of the flexible card wire.

1. Slide or raise the portion A in the direction of the arrow and securely insert the flexible card wire into the deep end of the connector.
2. Return the portion A to its original position and lock the connector.

Note

When connecting the flexible card wire, check the connector shape, and great care should be taken for the direction of the contact surface or isolation surface (blue).
(Refer to illustration of the type A to type C.)

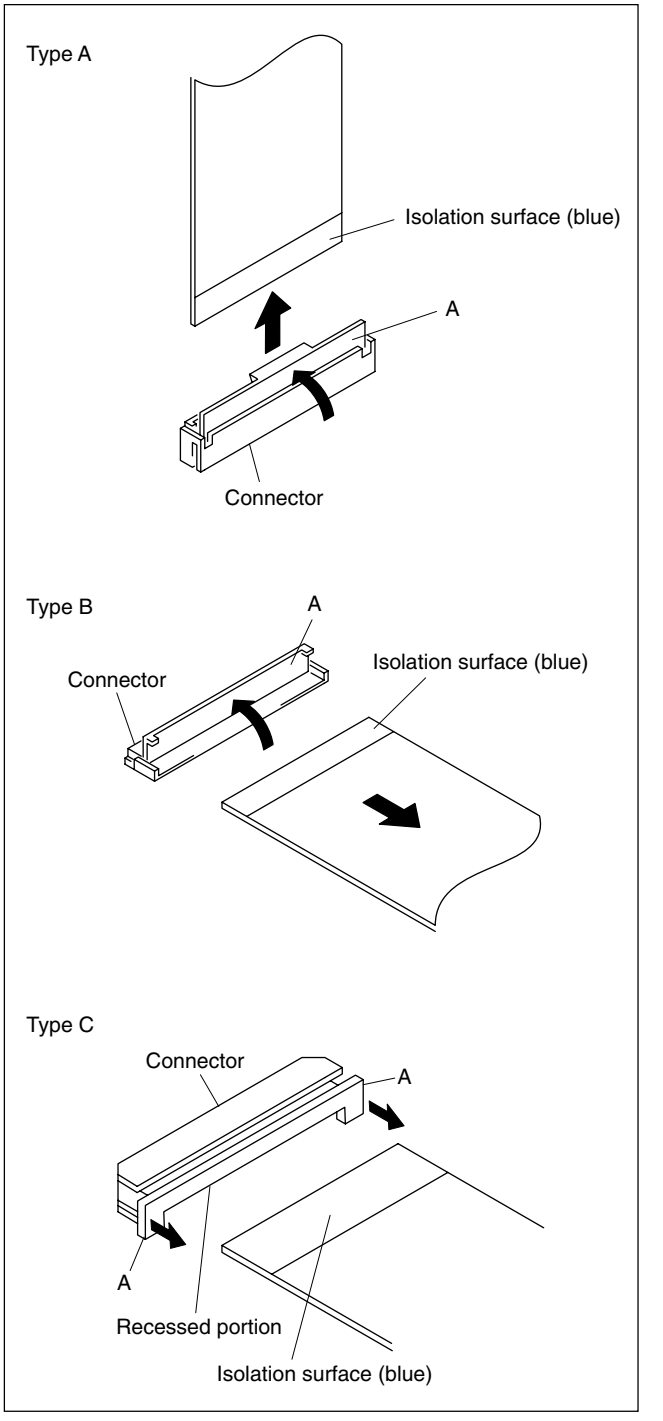

1-4. Writing and Rewriting the PLD Internal Data

HDCU1000/1080/1500 uses the PLD (Programmable Logic Device) that supports the e-Production (EPR) system to write and rewrite the internal data.
If the parts listed below needs to be replaced or if PLD needs to be upgraded, contact your local Sony Sales Office/Service Center.

Note

The part number of PLD (or ROM for PLD) in which data is not written yet, is shown in " Spare Parts".
Therefore, if part replacement is required, write the data by the following procedure.
In the case of the PLD type that runs on the program stored in external ROM, the PLD has only to be replaced and data needs not to be written only if the specific PLD is defective.

e-Production system has the advantages shown below.

- To write/rewrite the PLD internal data:
  1. The standard fixture (cable) can be used.
  2. The standard software (PLD Download Tool) can be used.
- The PLD internal data is controlled in the Sony Database Server under the name Project file (E_xxx_xxx_xx_xx).
- The printed circuit board is equipped with the standard connector (EPR connector) to write the PLD internal data. The indication "EPR" is shown on the printed circuit board.

Corresponding PLDs

Board name PLD/ROM	EPR connector	Project file No.
AT-167 IC601*1, IC603	CN601	E_000_001_93_xx
AVP-6 IC302, IC310*2	CN3	E_000_001_94_xx
DTX-5 IC401, IC505*3, IC506*3	CN501	E_000_001_95_xx
DRX-5 IC211, IC213*4, IC214*4, IC215*4	CN3	E_000_001_96_xx
SDP-12*7 IC208, IC409, IC416*5	CN402	E_000_001_97_xx
EN-159A/159B (HKCU1001/1003) IC210, IC501, IC502*6, IC504*6	CN501	E_000_001_98_xx

*1 : IC601/AT-167 is a ROM for IC603/AT-167.
*2 : IC310/AVP-6 is a ROM for IC302/AVP-6.
*3 : IC505, IC506/DTX-5 is a ROM for IC401/DTX-5.
*4 : IC213, IC214, IC215/DRX-5 is a ROM for IC211/DRX-5.
*5 : IC416/SDP-12 is a ROM for IC208, IC409/SDP-12.
*6 : IC502, IC504/EN-159A/159B is a ROM for IC210, IC501/EN-159A/159B.
*7 : The data in the PLD of the SDP-12 board can also be written or rewritten via the AVP-6 board. Turn on switch S4-8 on the AVP-6 board.

Note

After having written or rewritten the data in the PLD of the SDP-12 board via the AVP-6 board, turn off switch S4-8 on the AVP-6 board.

Equipment required

- PLD download tool (Sony part number : J-7120-140-A)
  The cable to connect PC to HDCU1000/1080/1500.
- PC
  A PC having parallel port.
  A PC in which the PLD Download Tool software is already installed.
  For the applicable OS and the operating environment, refer to "Download Tool Operating Instruction for Device Programming".

Data writing procedure

Data writing procedure in the PLD (or ROM for PLD) is outlined below.
For details of data writing procedure, refer to "Download Tool Operating Instruction for Device Programming", which is available in the same site where the PLD Download Tool software is available.

Step 1 Prepare the Project file.

Note

Download the Project file from the Sony Database Server.

Step 2 Turn off the power of HDCU1000/1080/1500. Connect the PC parallel port to the EPR connector of the target board using the PLD download tool (cable).

Step 3 Turn on the power of HDCU1000/1080/1500. Start the PLD Download Tool software and read the Project file.

Step 4 Program the PLD (or ROM for PLD) with the PLD Download Tool software.

Step 5 Upon completion of programming, check that error message is not displayed. Turn off the power of HDCU1000/1080/1500 and back on.

1-5. Circuit Protection Parts

Thermistors

HDCU1000/1080/1500 is provided with positive thermistors for power circuit. If an overcurrent flows in a positive thermistor or it heats up to a certain degree with the increase of the ambient temperature, its internal resistance increases sharply to limit the current flowing in the circuit. When a thermistor is activated, turn off the power and check the circuit of the unit. After the cause of the problem is removed and the device cools down, turn on the power again. The unit will work normally. It takes about one minute for the device to cool down.

Borad name	Ref. No.	Address	Sony P/N
AT-167	THP1	H1 (A side)	⚠ 1-533-817-21
	THP2	H1 (A side)	⚠ 1-533-817-21
	THP3	C1 (A side)	⚠ 1-804-458-21
	THP4	C2 (A side)	⚠ 1-804-458-21
	THP101	C3 (A side)	⚠ 1-803-353-21
AVP-6	THP100	H4 (A side)	⚠ 1-803-615-21
	THP101	H4 (A side)	⚠ 1-803-615-21
	THP102	H2 (A side)	⚠ 1-804-616-21
	THP103	H2 (A side)	⚠ 1-804-458-21
	THP104	H3 (A side)	⚠ 1-804-616-21
	THP105	H3 (A side)	⚠ 1-804-616-21
	THP106	H2 (A side)	⚠ 1-804-616-21
DRX-5	THP1	G1 (A side)	⚠ 1-533-817-21
	THP2	G1 (A side)	⚠ 1-533-817-21
	THP3	H1 (A side)	⚠ 1-533-817-21
	THP4	H1 (A side)	⚠ 1-533-817-21
	THP5	D4 (A side)	⚠ 1-533-817-21
	THP6	D1 (A side)	⚠ 1-533-817-21
	THP7	B4 (A side)	⚠ 1-533-817-21
DTX-5	THP101	B1 (A side)	⚠ 1-533-817-21
	THP102	E1 (A side)	⚠ 1-533-817-21
	THP103	E1 (A side)	⚠ 1-533-817-21
	THP104	D1 (A side)	⚠ 1-533-817-21
	THP105	D1 (A side)	⚠ 1-533-817-21
	THP106	C1 (A side)	⚠ 1-533-817-21
VIF-34/34B	THP1	A2 (B side)	⚠ 1-804-458-21
	THP2	A2 (B side)	⚠ 1-804-458-21
	THP3	C1 (B side)	⚠ 1-803-615-21
	THP4	A2 (B side)	⚠ 1-803-615-21
	THP5	A2 (B side)	⚠ 1-803-615-21
	THP6	A1 (A side)	⚠ 1-804-458-21
EN-159A/ 159B	THP101	B4 (A side)	⚠ 1-533-817-21
	THP102	C4 (A side)	⚠ 1-533-817-21
	THP103	H4 (A side)	⚠ 1-533-817-21
	THP104	J1 (A side)	⚠ 1-533-817-21
	THP105	H5 (A side)	⚠ 1-533-817-21
	THP106	H4 (A side)	⚠ 1-803-615-11
	THP107	H4 (A side)	⚠ 1-803-615-11

1-6. Circuit Description

1-6-1. HDCU1000/1080/1500 Common

Front Boards

AT-167 board

The AT-167 board has the built-in microprocessor (SH2-DSP). It controls various circuit boards inside the HDCU1000/1080/1500 and the power supply. It also performs the system setup including a camera.
The board performs command communication with a camera, and with RCP, MSU, or CNU.
Also, it enables Ethernet connection by the Ethernet controller with the built-in microprocessor.
In addition, when the optional remote control unit (RM-B750) is installed in the front panel of the HDCU1500, it performs the command communication with the RM-B750.
It has the built-in signal generator circuit generating HD and SD. This signal generator circuit establishes gen-lock with external (main) reference and also gen-lock between HD and SD. It controls phase of all video signal outputs.
It has the sync output of one channel enabling to switch between the HD ternary value sync signal and the SD sync signal.

AVP-6 board

The AVP-6 board processes the audio signal, tally, and trunk line. It has the following functions.

- D/A-converts and outputs the MIC signals supplied from the camera in digital format.
- A/D converts the intercom signals (ENG/PROD/PGM/Front-Intercom) input to the HDCU1000/1080/1500.
- Inputs the intercom signals sent from the camera in digital format and the A/D-converted audio signals of the HDCU1000/1080/1500 to the digital mix IC, and performs line selection, mixing, and volume control.
- D/A converts the signals processed at the digital mix IC, and outputs it to external circuits.
- R/G tally signal I/F
- Trunk line (RS-232C/422A) I/F

DTX-5 board

The DTX-5 board processes the return signals and the prompter signals.
This board can handle the HD-SDI/SD-SDI/VBS signals as return signals, and convert them to the specified signals and send them back to the camera.

- Phase adjustment is performed on the HD-SDI signal.
- The SD-SDI signal is up-converted to the pseudo-HD signal and its signal phase is adjusted.
- The VBS signal is converted to the digital signal equivalent to the SD-Digital-Component signal, and processed in the same way as the SD-SDI signal. The signal also has the Frame conversion function and performs reverse conversion (from 60 i to 24 PsF) according to the main-line system.

The signal input as a prompter is A/D-converted, embedded to the return signal and then sent to the camera.

DRX-5 board

The DRX-5 board processes the main-line signals from the camera.

- Phase adjustment and re-clocking using line memory
- Frame conversion (2-3 Pull Down) function as necessary
- Down-conversion function as necessary
- Has the built-in HD/SD signal color bar generator and supports multiple formats
- Matches the MIC signal from the camera to the delay of the video signal, and then multiplexes it to the SDI signal.
- Analog character output

Rear boards

SDP-12 board

The SDP-12 board processes the main-line signals sent from the camera and the return signals to the camera. The board converts the main-line light serial signal sent from the camera from light to electricity and from the serial to parallel signal.
Then, it separates the digital audio signal and the commands multiplexed to the main line, and sends the main-line video signal to the DRX-5 board, the digital audio signal to the AVP-6 board, and commands to the AT-167 board.
Also, the return video signal is sent from the DTX-5 board, the digital audio signal from the AVP-6 board, and commands from the AT-167 board. The board then multiplexes the digital audio signal and the commands to the return video signal. The return signal is then converted from the parallel to serial signal, and electricity to light, and sent to the camera as the light serial signal.

VIF-34 board

I/F board that connects each connector on the rear panel

- I/F of MIC REMOTE, WFM REMOTE, and I/O PORT of the D-Sub 15 pin connector
- SYNC output, CHARACTER output
- Retains serial numbers in EEPROM.

ADO-10 board

Relay board between the AVP-6 board and the rear panel connector

- INCOM/MIC/PGM
- TRUNK LINE
- AES/EBU

1-6-2. HDCU1000/1080

Front Board

AU-302 board

The AU-302 board is an interface to the front INCOM connector, and has the intercom control switch and indicators.

Rear boards

HIF-25 board

The HIF-25 board has the co-axial connector for outputting the HD/SD-SDI signals to external devices.
The board outputs two systems of the main-line system HD/SD-SDI signal sent from the DRX-5 board, and outputs two systems of the monitor-system HD/SD-SDI signal.

SDI-85 board

The SDI-85 board inputs the return signals of HD-SDI from external devices.
The board has four systems of the return input of the HD-SDI signal, which are selected and then sent to the DTX-5 board.

SDI-86 board

The SDI-86 board mainly inputs the return signals of SD-SDI from external devices and the composite analog return signals.
The board has four systems of the return input of the SD-SDI signal, which are selected and then sent to the DTX-5 board. Apart from that, it has four systems of the return input of the composite analog signal from the CN-2674 board, which are selected and then sent to the DTX-5 board. It also has two systems of the amplifier for the prompter signal from the CN-2674 board that is amplified and then sent to the DTX-5 board.

1-6-3. HDCU1500

Front board

AU-303 board

The AU-303 board is an interface to the front INCOM connector, and has the intercom control switch, indicators, and power supply switch.
Also, when using the optional remote control unit (RM-B750) by connecting it to the front panel of the HDCU1500, the AU-303 board functions as the interface with the RM-B750.

Rear boards

HIF-27 board

The HIF-27 board has the co-axial connector for outputting the HD/SD-SDI signals to external devices.
It outputs two systems of the main-line system HD/SD-SDI signals sent from the DRX-5 board, and outputs one system of the monitor-system HD/SD-SDI signals.

SDI-87 board

The SDI-87 board mainly inputs the return signals from external devices.
The board has the three systems of return input that can connect the HD-SDI signal, the SD-SDI signal, and the composite analog signal, specifies format for each system, selects the system and then sends it to the DTX-5 board. Also, it has two systems of amplifier for the prompter signal from the CN-2675 board that amplifies the signal and the signal is sent to the DTX-5 board.

1-6-4. HKCU1001

The HKCU1001 only supports the basic functions of VBS_OUT, PIX_OUT, and WFM_OUT.

Front board

EN-159A board

The EN-159A board receives 8:4:4 component digital signal from the front side (DRX-5 board), and outputs the main-line system SD analog composite signals (VBS, PIX, and WFM signals). The board is equipped with the external synchronous circuit of the reference SC (sub carrier) of SD, and the composite signal whose external SC is locked can be output. There also is a through-path of the 8:4:4 component digital signal to the rear part (EN-159B board).

Rear board

VDA-64A board

The VDA-64A board outputs the SD analog signals (VBS, PIX, and WFM signals) to external devices.

1-6-5. HKCU1003

In addition to the functions of the HKCU1001, the HKCU1003 supports full functions including COMPONENT_OUT, and SUB_REF.

Front board

EN-159B board

In addition to the functions of the EN-159A board, the EN-159B board receives the 8:4:4 component digital signal from the front side (DRX-5 board or EN-159A board), and outputs the SD analog component signal. Also, it outputs the panel display signals (analog R, G, B signals and V, H timing signals) when the RM-B750 is installed to the front side of the HDCU1500.

Other than that, the board is equipped with the synchronous circuit of the sub reference signal, and the output of the staircase signal for the WFM sequential display.

Rear boards

VDA-64A board

Same as the HKCU1001.

Insert this board to the rear side of the slot that has the EN-159B board inserted in its front side. The VDA-64A and 64B boards cannot be inserted simultaneously.

VDA-64B board

The VDA-64B board is used to output the SD analog signals (PIX, WFM signals), and to input or output Frame_Reference to external devices.

Insert this board to the rear side of the slot that has the EN-159B board inserted in its front side. The VDA-64A and 64B boards cannot be inserted simultaneously.

VDA-64C board

The VDA-64C board outputs the SD analog signals (VBS, component signals) to external devices.

Insert this board into the slot next (signal downstream) to the one whose front side has the EN-159B board. The front side of the slot should not have any board inserted.

1-6-6. HKCU1005

Front boards

DRX-5 board

Same as the DRX-5 board common to HDCU1000/1080/1500.

HIF-26 board

The HIF-26 board has the co-axial connector for outputting the HD/SD-SDI signals to external devices.

It outputs two systems of the main-line system HD/SD-SDI signals sent from the DRX-5 board in the optional slot, and outputs two systems of the monitor-system HD/SD-SDI signals.

1-7. Notes on Repair Parts

1. Safety Related Components Warning

WARNING

Components marked ⚠ are critical to safe operation. Therefore, specified parts should be used in the case of replacement.

2. Standardization of Parts

Some repair parts supplied by Sony differ from those used for the unit. These are because of parts commonality and improvement.
Parts list has the present standardized repair parts.

3. Stock of Parts

Parts marked with "o" at SP (Supply Code) column of the spare parts list may not be stocked. Therefore, the delivery date will be delayed.

4. Harness

Harnesses with no part number are not registered as spare parts.

1-8. Unleaded Solder

Boards requiring use of unleaded solder are printed with a lead free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

: LEAD FREE MARK

Notes

- Be sure to use the unleaded solder for the printed circuit board printed with the lead free mark.
- The unleaded solder melts at a temperature about 40 °C higher than the ordinary solder, therefore, it is recommended to use the soldering iron having a temperature regulator.
- The ordinary soldering iron can be used but the iron tip has to be applied to the solder joint for a slightly longer time. The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful.

Section 2
Replacement of Main Parts

2-1. Replacing the Main Parts (HDCU1000/1080)

Be sure to perform the following operation when replacing or removing the main parts.

• Turn off the main power and disconnect the plug from the outlet.

Note

Wait for at least three minutes before starting replacement, because even after turning off the power, a high voltage remains in the machine that could cause electric shock.

2-1-1. Replacing the Switching Regulator (HDCU1000/1080)

WARNING

The components marked ⚠ are critical to safe operation. If you replace with parts other than the specified ones, a fire or electric shock may result from that.

CAUTION

When repairing or replacing the power supply block, set the voltage. If the voltage is set incorrectly, a fire or electric shock may result from that.


- When repairing or replacing the power supply block, set to the same power supply voltage as that of repair work bench.
- When delivering to the user, adjust the power supply voltage to suit the user.

Gently remove or attach the switching regulator holding it by hand.
Otherwise, the switching regulator may fall, causing an injury.


Replacement Part

Part : Switching regulator
Part No. : ⚠ 1-468-945-11


1. Remove the front panel.
2. Remove the four screws and remove the flexible card wire from the connector J8.
3. Remove the PS panel assembly.

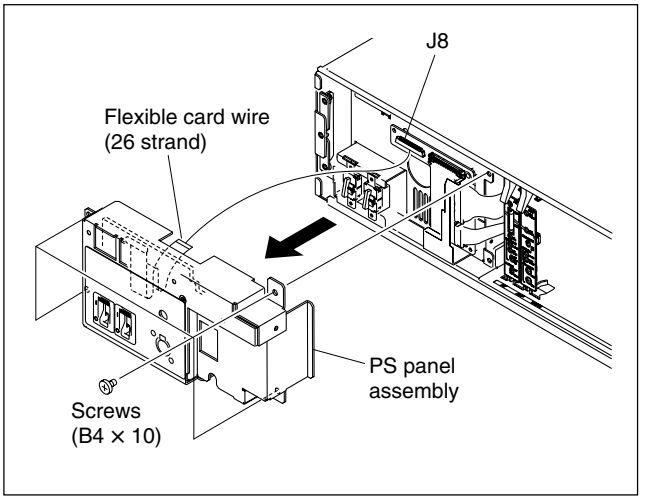

4. Disconnect the harnesses from the switching regulator board connectors J5, J6, and J7.
5. Remove the switching regulator from HDCU1000/1080 in the direction of the arrow.

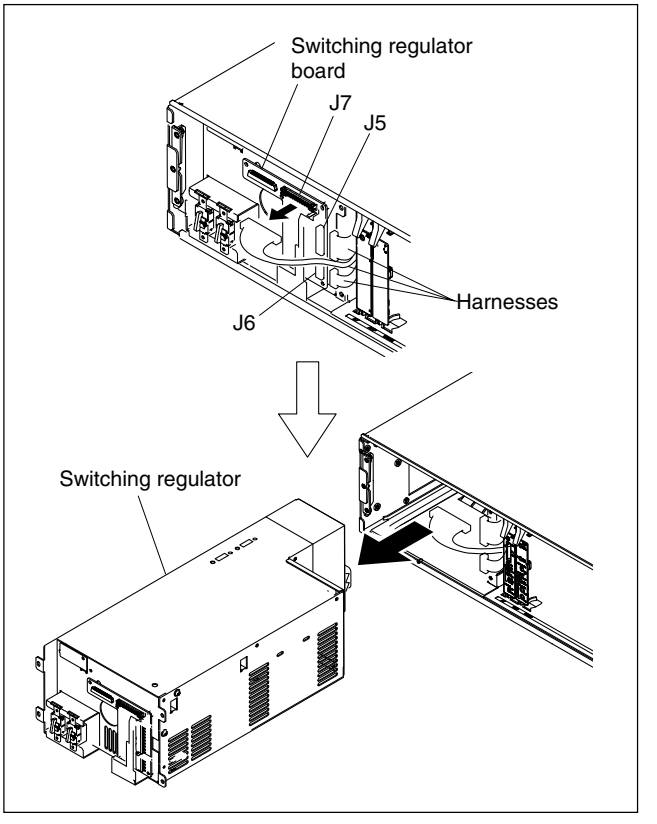

6. Set the two voltage selectors on the new switching regulator to the settings shown in the diagram.

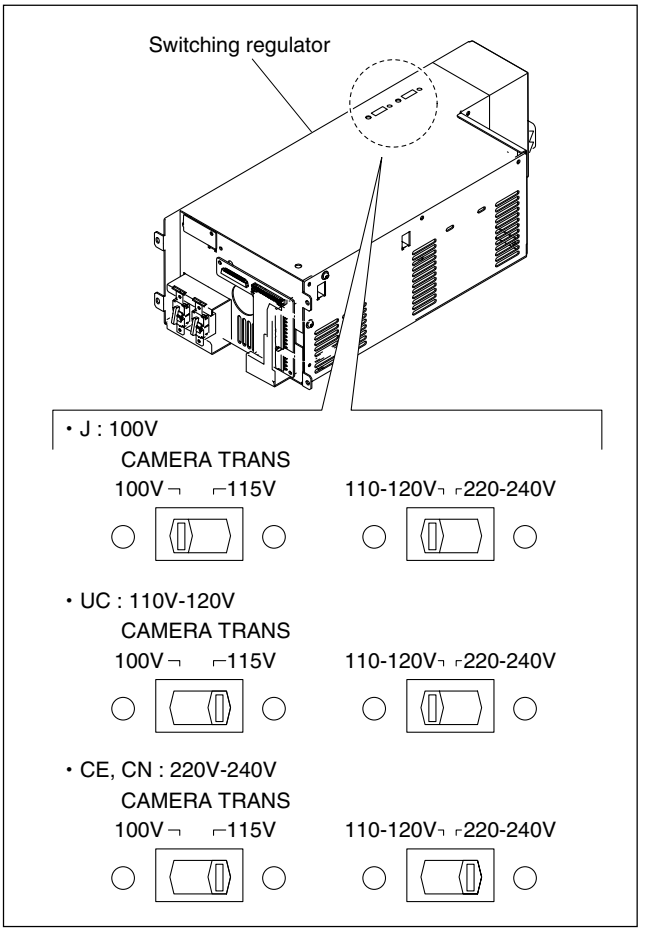

7. Install the new switching regulator in the reverse order.


2-1-2. Replacing the DC Fan (HDCU1000/1080)

CAUTION


If the fan is defective, the temperature inside HDCU1000/1080 will rise. Touching the inside of the unit in this state may cause a burn.
Replace the parts after turning off the power and cooling the inside.

The fans that are used in the rear panel of HDCU1000/1080 are recommended replacement parts.
The lifespan of these fans is about 30,000 hours, which means that the fans can be used for about three and a half years if the power is on all the time, so as a guideline the fans should be replaced every three and a half years.

1. Turn off the main power and disconnect the plug from the outlet.
2. Remove the switching regulator.
   (Refer to Section 2-1-1.)
3. Remove the six screws and remove the cover.
4. Remove the harness from the wire clamp.
5. Disconnect the harness from the connector J19.
6. Remove the four screws and remove the fan portion.

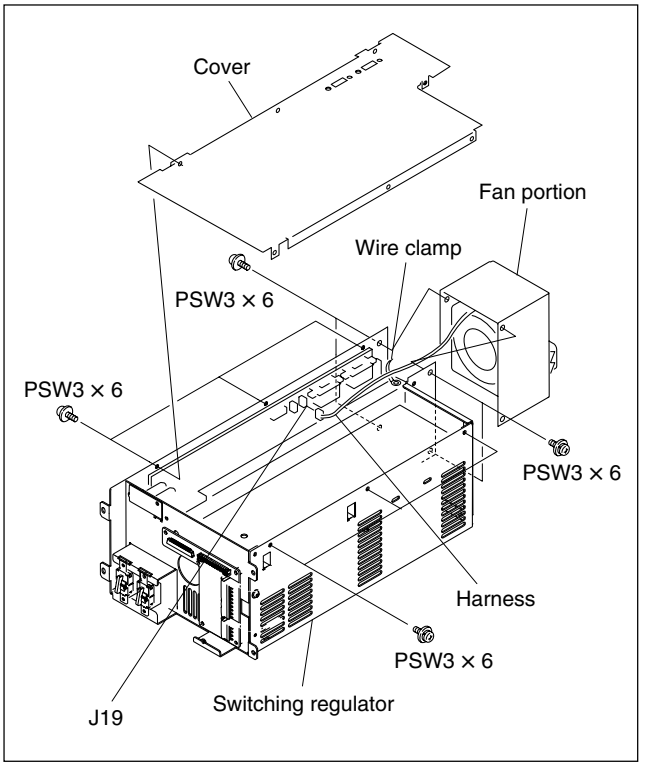

7. Remove the three screws and remove the fan bracket.
8. Remove the DC fan and mesh from the fan cover.

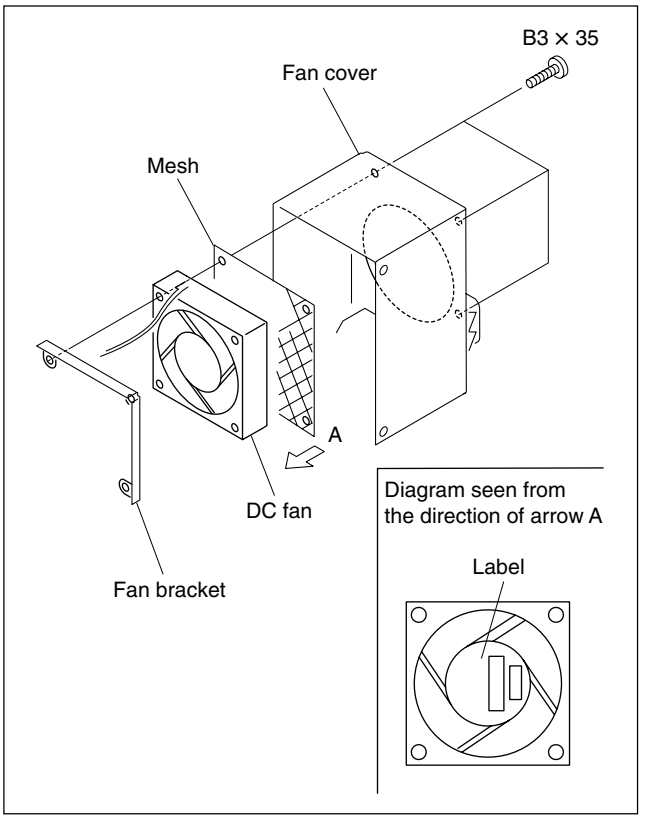

9. Install the DC fan in the reverse order.

Note

Install the DC fan in the direction shown in the diagram above.

2-1-3. Replacing the Fuse (HDCU1000/1080)

WARNING

The components marked ⚠ are critical to safe operation. If you replace with parts other than the specified ones, a fire or electric shock may result from that.

Replacement Part

MAIN fuse


Part : Fuse (6.3 A, 250 V)
Part No. : ⚠ 1-576-233-11

CAMERA fuse

For UC
100 to 120 V
Part : Fuse (6.3 A, 250 V)
Part No. : ⚠ 1-576-233-11
For CE, CN
220 to 240 V
Part : Fuse (4 A, 250 V)
Part No. : ⚠ 1-576-231-11

Replacement Procedure


1. Remove the PS panel assembly. (Refer to Section 2-1-1.)
2. Insert a flat-blabe screwdriver into the groove of the fuse holder, and rotate it in the direction of arrow A (by about 90°) to unlock. (Fig. 1)
3. Remove the fuse with the fuse holder. (Fig. 2)
4. Remove the fuse from the fuse holder. (Fig. 3)

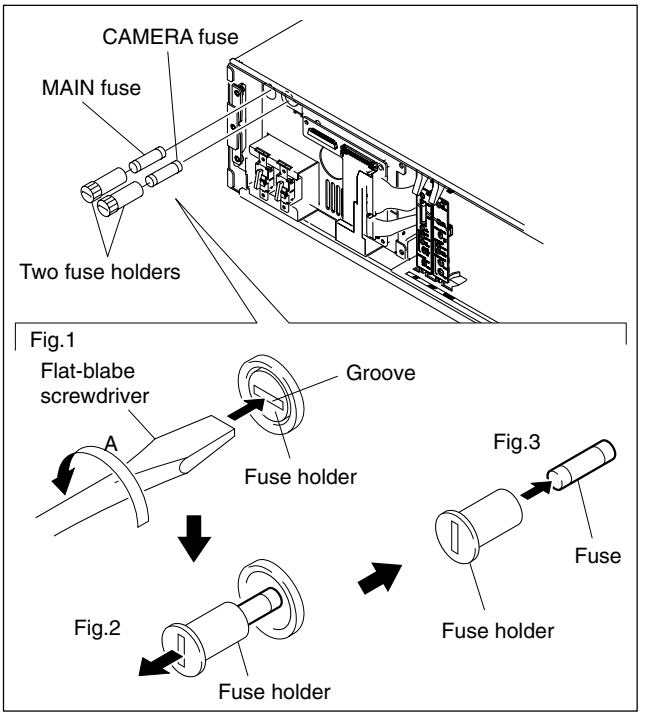

5. Attach the fuse in the reverse order.


Note

A spring is already attached in the fuse holder. When attaching a new fuse, rotate the flat-blabe screwdriver in the direction of arrow C (by about 90°) while pressing it in the direction of arrow B to lock the fuse holder.

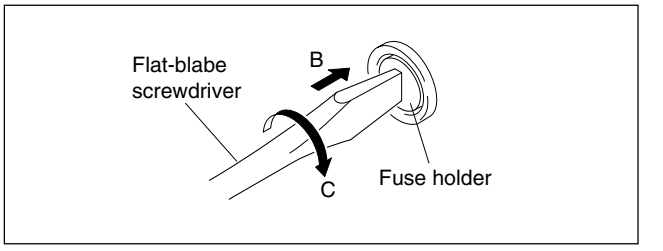


2-1-4. Removing the Rear Panel (HDCU1000/1080)

1. Remove the upper cover.
2. Disconnect the harness from the connector CN104 on the SDP-12 board.
3. Remove the eleven screws.

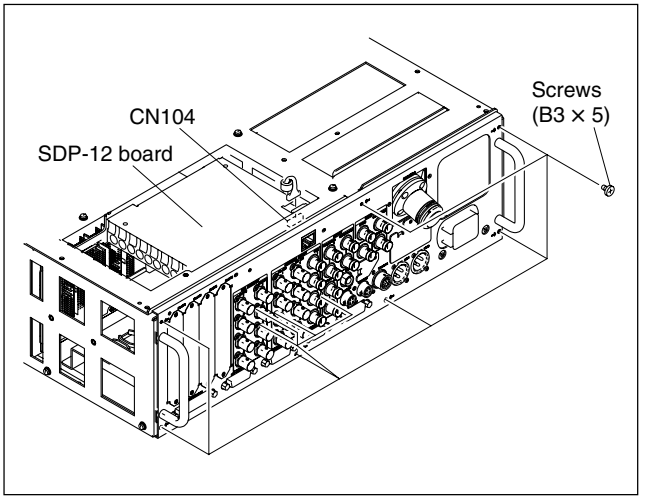


4. Disconnect the harness from connector CN1 on the CN-2718 board.
5. Remove the rear panel in the direction of the arrow.
6. Disconnect the harness B from connector CN15 on the CN-2672 board.
7. Disconnect the flexible card wire from the connector CN6 on the CBN-21 board.

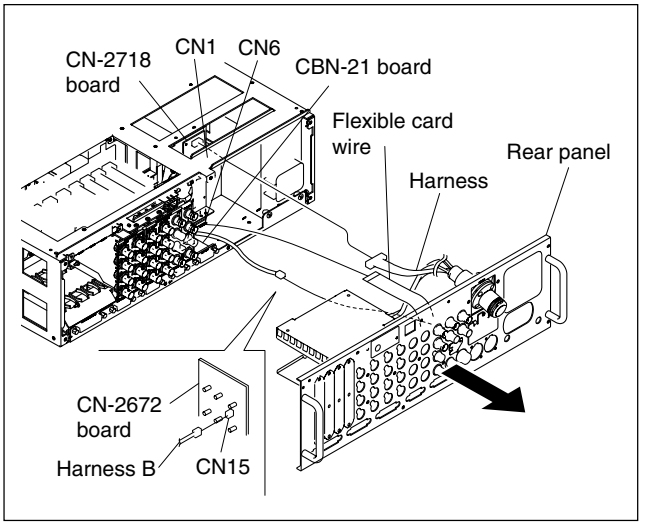

8. Install the rear panel in the reverse order.

2-1-5. Replacing the SDP-12 Board (HDCU1000/1080)

1. Remove the rear panel. (Refer to Section 2-1-4.)
2. Remove the five screws, and remove the cover and the harness guide.
3. Remove the two hexagonal bolts.

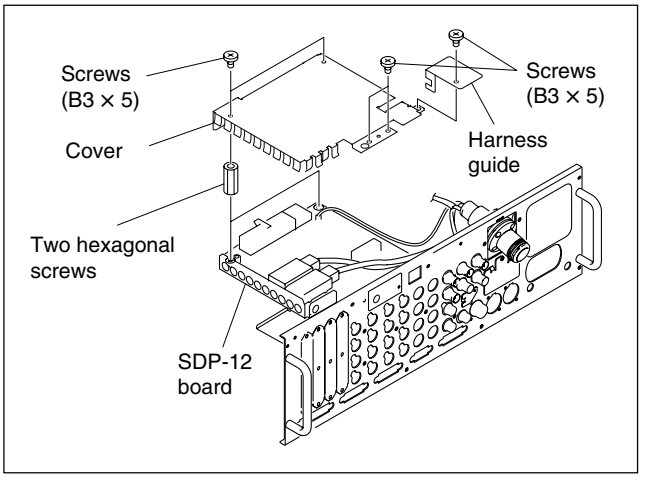


4. Disconnect the harness from the connector CN103 on the SDP-12 board.
5. Disconnect the optical cables from the connectors CP201 and CP401 on the SDP-12 board.

Note

When disconnecting the optical cables, disconnect the cables holding the blue portion of the plug.

6. Remove the two screws and remove the SDP-12 board.

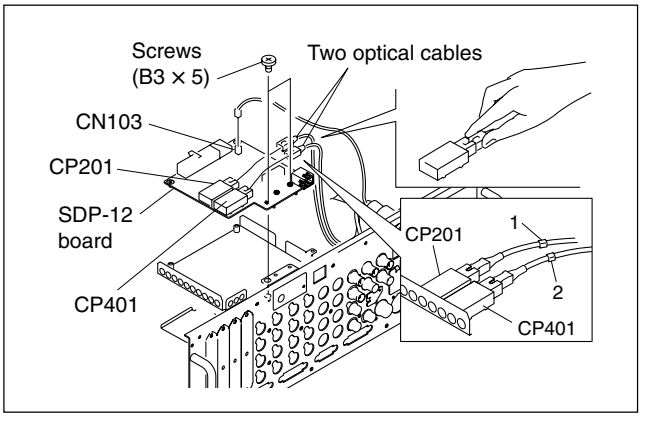


7. Reinstall the SDP-12 board by reversing the steps of removal.

Notes


- When connecting the optical cables, push them in the connectors until a click sound is heard.
- Connect optical cable 1 to the connector CP201, and optical cable 2 to the connector CP401. If they are connected to incorrect positions, the signal will not be output.

2-1-6. Replacing the MB-1071 Board (HDCU1000/1080)


1. Remove the rear panel. (Refer to Section 2-1-4.)
2. HDCU1000:
   Pull out the two HIF-25 boards, the SDI-85 board, the SDI-86 board, and the CN-2674 board in the direction of the arrow.
   HDCU1080:
   Pull out a HIF-25 board, the SDI-85 board, the SDI-86 board, and the CN-2674 board in the direction of the arrow.

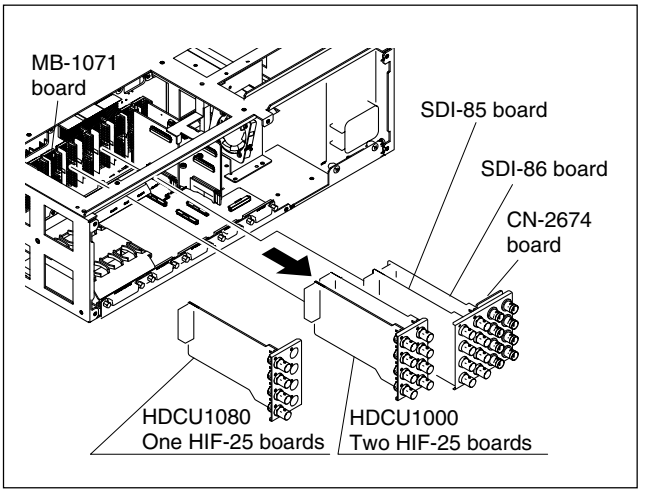


3. Remove the screw securing the VIF stopper.
4. Disconnect the two flexible card wires from connectors CN8 and CN9 on the CNB-21 board, and pull out the VIF-34 board in the direction of the arrow.
5. Disconnect the flexible card wire from the connector CN7 on the CNB-21 board, and pull out the ADO-10 board in the direction of the arrow.

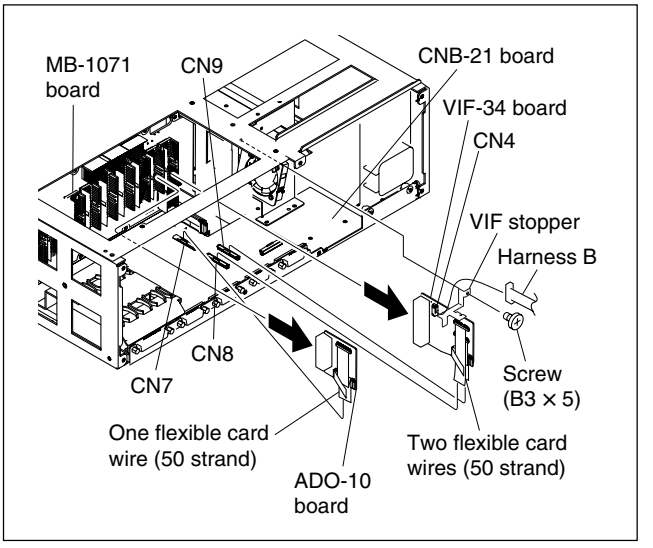

6. Pull the lever in the direction of the arrow and remove all the plug-in boards.

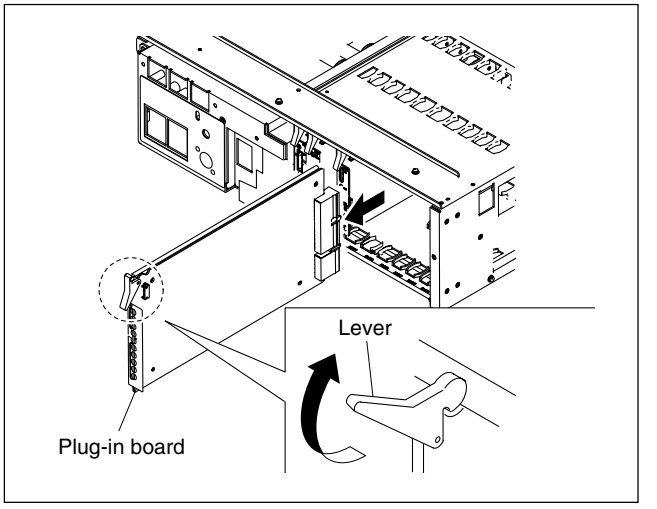


7. Remove the three screws and remove the rear board fixing plate.

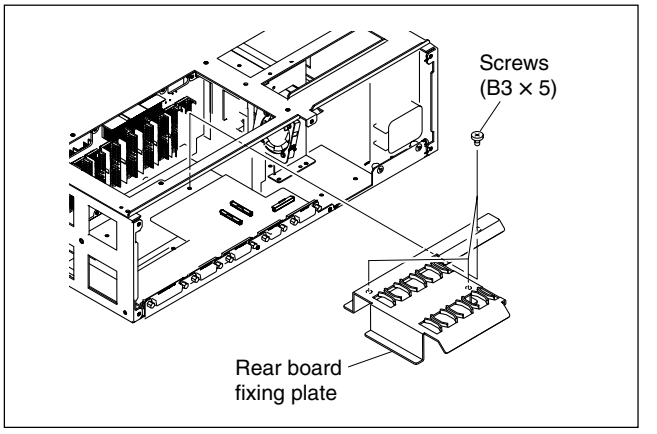


8. Remove the switching regulator.
   (Refer to Section 2-1-1.)

9. Remove the four nylon rivets, and remove the harness guide in the direction of the arrow.
10. Disconnect the harnesses from the connectors CN31 and CN32 on the MB-1071 board.

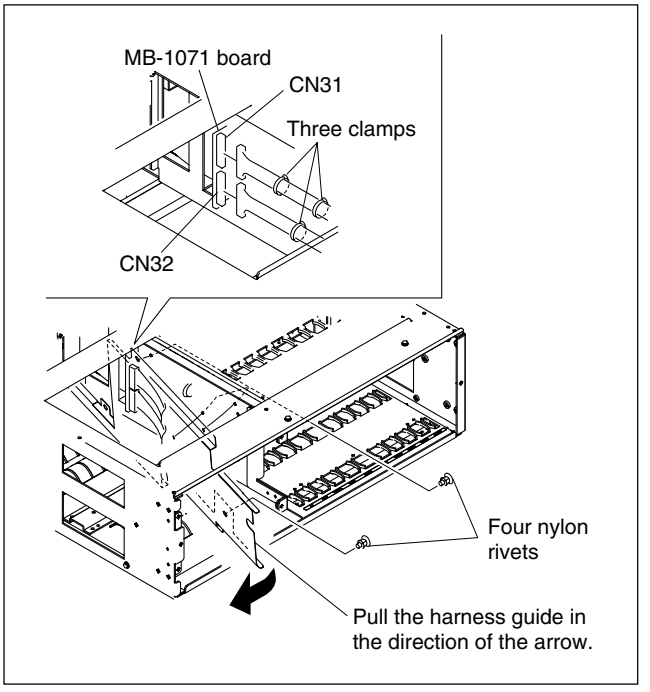


11. Remove the eight screws and remove the MB-1071 board.

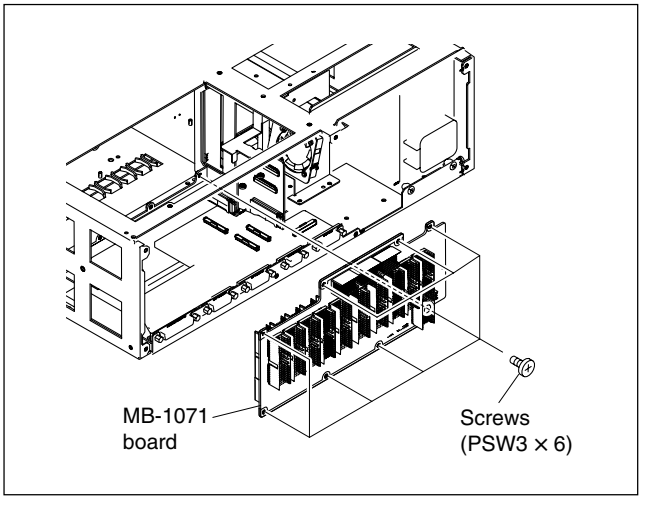

12. Install the MB-1071 board in the reverse order.

2-1-7. Replacing the CNB-21 Board (HDCU1000/1080)

1. Remove the VIF-34 board and ADO-10 board. (Refer to Section 2-1-6.)
2. Remove the three screws and remove the rear board fixing plate.
3. Remove the ten hexagonal screws and remove the CNB-21 board.

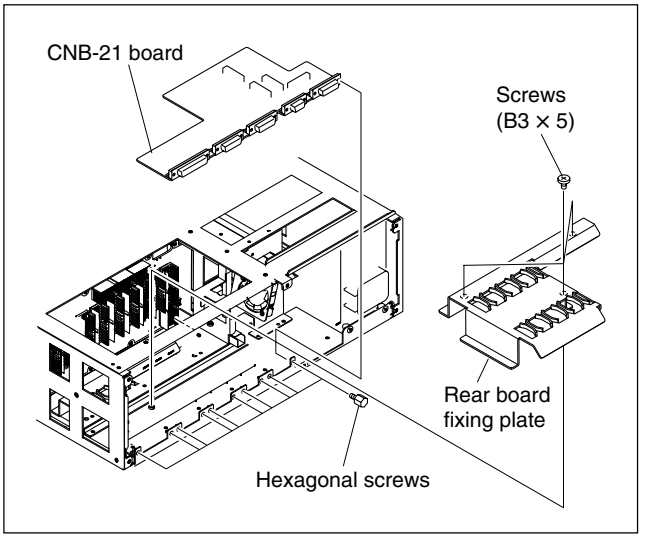

4. Install the CNB-21 board in the reverse order.

2-2. Replacing the Main Parts (HDCU1500)

Be sure to perform the following operation when replacing or removing the main parts.

- Turn off the main power and disconnect the plug from the outlet.

Note

Wait for at least three minutes before starting replacement, because even after turning off the power, a high voltage remains in the machine that could cause electric shock.

2-2-1. Replacing the Power Supply Unit (HDCU1500)

WARNING

The components marked ⚠ are critical to safe operation. If you replace with parts other than the specified ones, a fire or electric shock may result from that.

CAUTION

When repairing or replacing the power supply, set the voltage. If the voltage is set incorrectly, a fire or electric shock may result from that.


- When repairing or replacing the power supply, set to the same power supply voltage as that of repair work bench.
- When delivering to the user, adjust the power supply voltage to suit the user.

Gently remove or attach the power supply unit holding it by hand.
Otherwise, the power supply unit may fall, causing an injury.


Replacement Part

Part : Power supply unit
Part No. : ⚠1-468-935-11

1. Remove the nine screws and remove the cover.

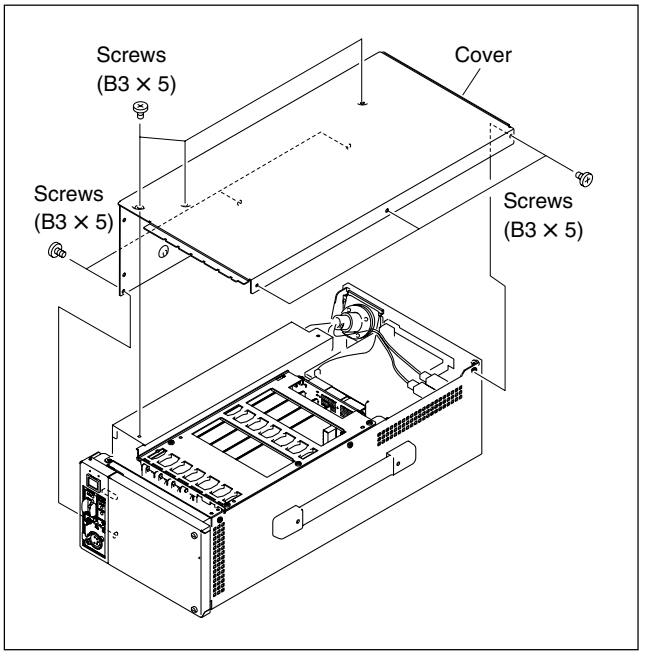

2. Remove the two screws and remove the harness from the two connectors on the power supply unit.
3. Remove the power supply unit in the direction of the arrow.

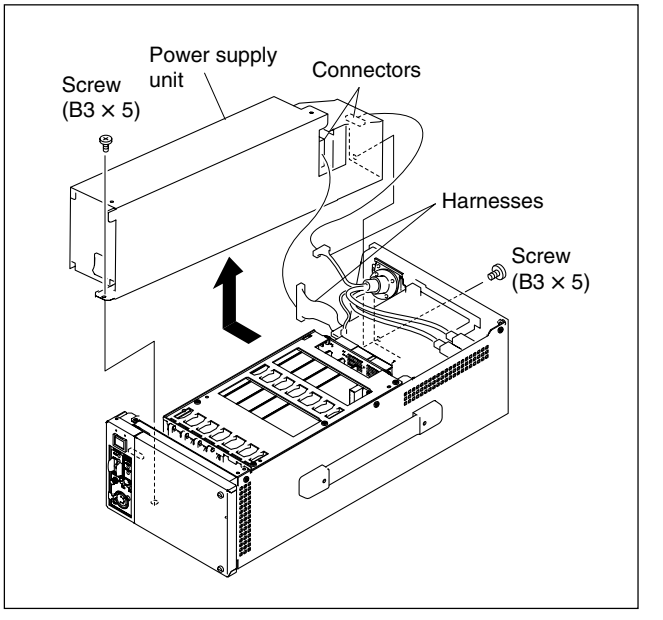

4. Install the power supply unit in the reverse order.


2-2-2. Replacing the DC Fan (HDCU1500)

CAUTION


If the fan is defective, the temperature inside HDCU1500 will rise. Touching the inside of the unit in this state may cause a burn.
Replace the parts after turning off the power and cooling the inside.

The fans that are used in the rear panel of the unit are recommended replacement parts.
The lifespan of these fans is about 30,000 hours, which means that the fans can be used for about three and a half years if the power is on all the time, so as a guideline the fans should be replaced every three and a half years.

1. Turn off the main power and disconnect the plug from the outlet.
2. Remove the power supply unit.
   (Refer to Section 2-2-1.)
3. Remove the three screws and remove the fan from the power supply unit.
4. Disconnect the harness for the fan from the connector J4.

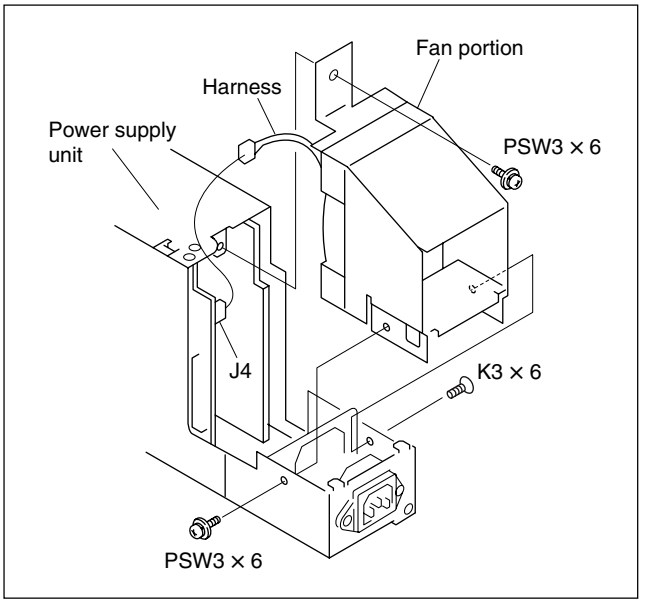

5. Remove the three screws and remove cover 2.
6. Remove the DC fan from cover 2.

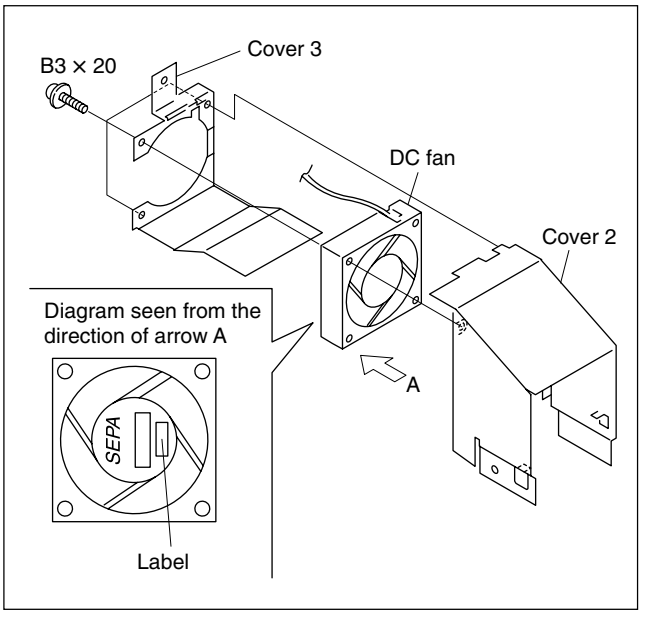


7. Install the DC fan in the reverse order.

Note

Install the new DC fan in the direction shown in the diagram above.

2-2-3. Replacing the Front Panel (HDCU1500)


1. Remove the cover. (Refer to Section 2-2-1.)
2. Loosen the two coin screws.
3. Remove the step shaft and remove the front panel, nylon washer from the income panel as shown in the figure below.

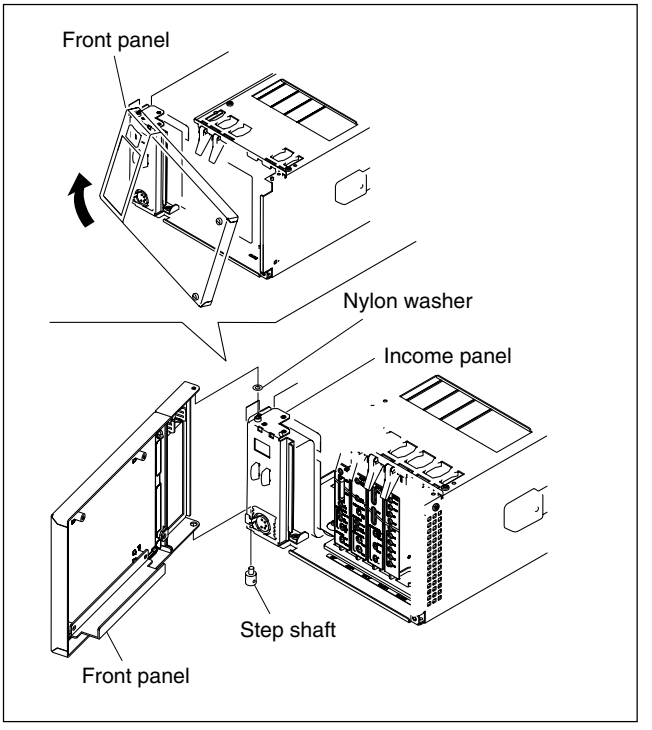

4. Install the front panel in the reverse order.


2-2-4. Removing the Rear Panel (HDCU1500)

1. Remove the cover. (Refer to Section 2-2-1.)
2. Disconnect the harness from the connector CN104 on the SDP-12 board.
3. Disconnect the harness from the power supply unit.
4. Remove the eight screws and the rear panel.

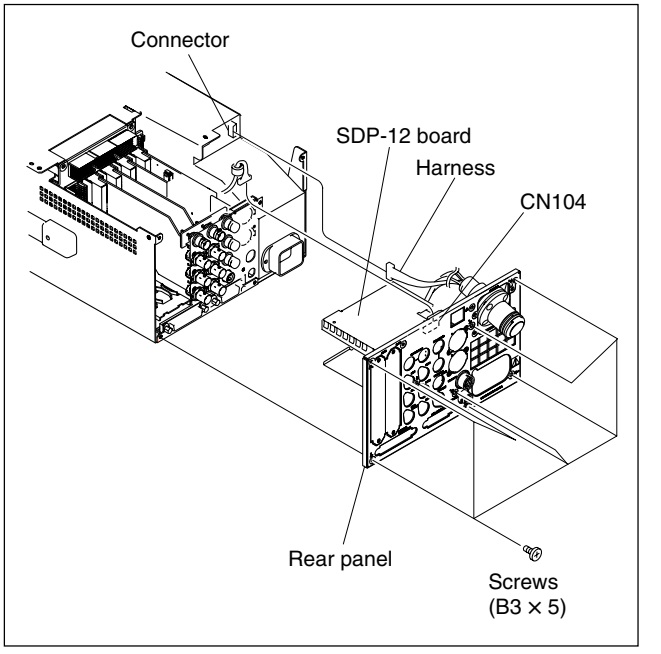


2-2-5. Replacing the MB-1072 Board (HCDU1500)


1. Remove the rear panel. (Refer to Section 2-2-4.)
2. Pull the lever in the direction of the arrow. Remove the plug-in board.

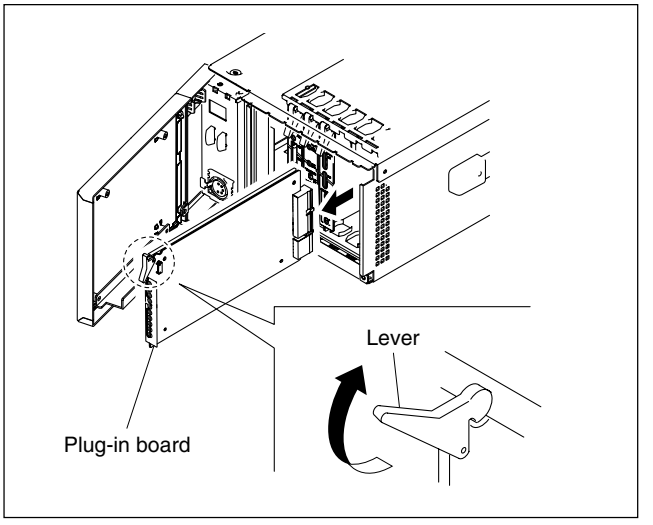


3. Remove the two screws of the VIF stopper securing the rear board block.
4. Disconnect the harness B from the connector CN15 on the CN-2672 board.
5. Disconnect the flexible card wire from connector CN3 on the CNB-22 board, and pull out the HIF-27 board, the SDI-87 board, and the CN-2676 board in the direction of the arrow.

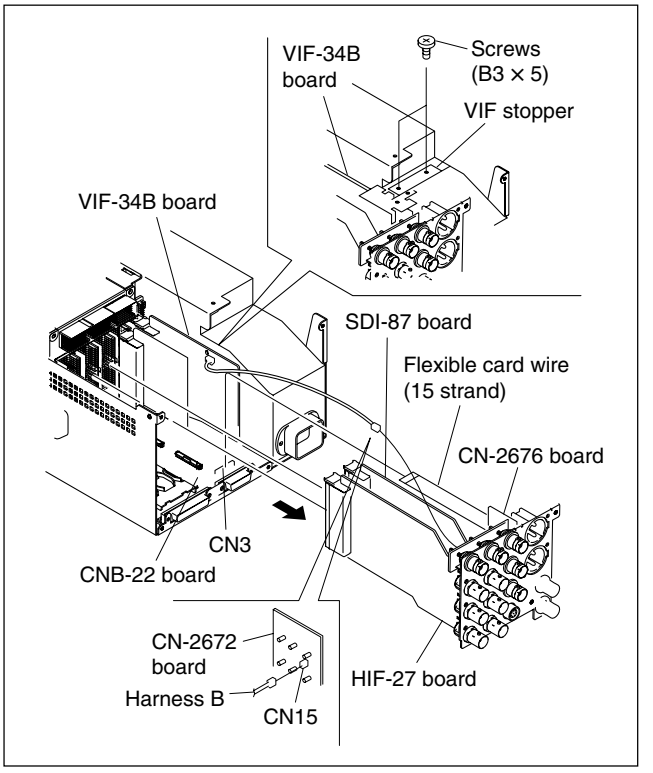

6. Disconnect the harness from the connectors CN4 and CN101 on the VIF-34B board.
7. Disconnect the flexible card wire from the connector CN5 on the CNB-22 board, and pull out the VIF-34B board in the direction of the arrow.
8. Disconnect the flexible card wire from the connector CN4 on the CNB-22 board, and pull out the ADO-10 board in the direction of the arrow.

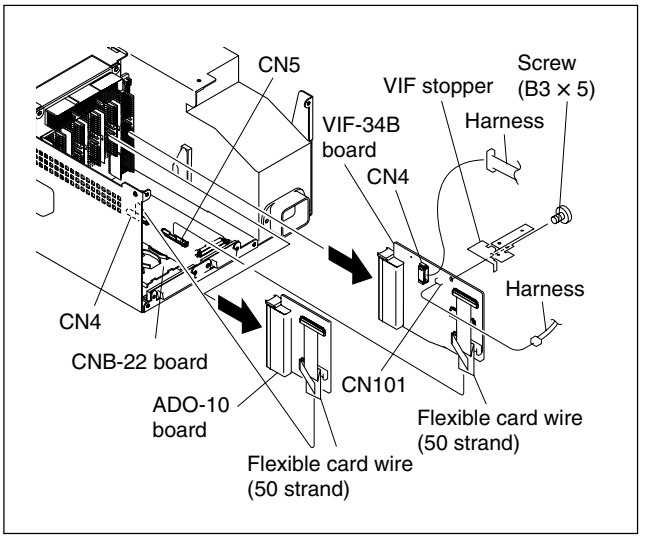


9. Disconnect the harness from the connector CN1 on the MB-1072 board.
10. Remove the four screws and remove the MB-1072 board.

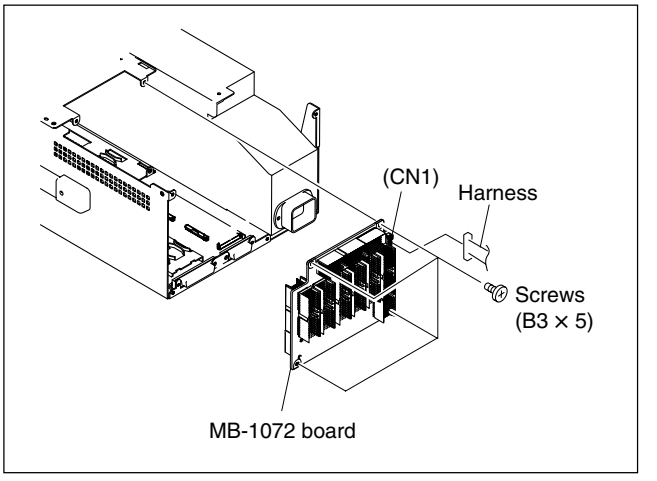


11. Install the MB-1072 board in the reverse order.

2-2-6. Replacing the CNB-22 Board (HDCU1500)

1. Replace the CNB-22 board after removing the VIF-34B board and the ADO-10 board.
   (Refer to Section 2-2-5.)
2. Remove the two screws and remove the rear board fixing plate.

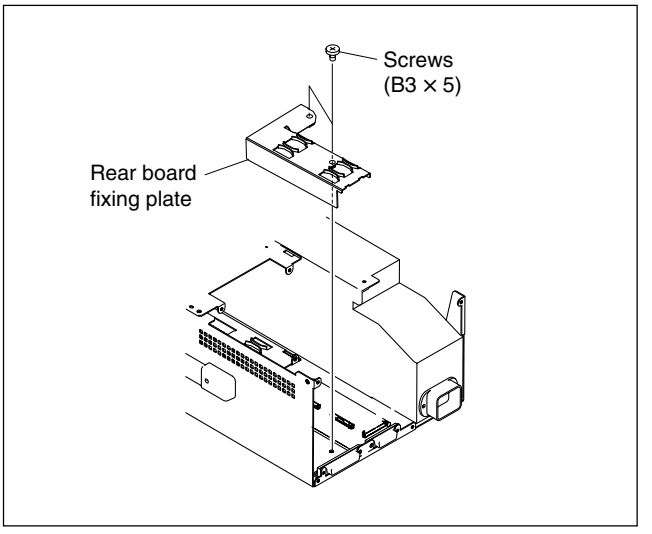


3. Remove the four hexagonal screws and remove the CNB-22 board in the direction of the arrow.

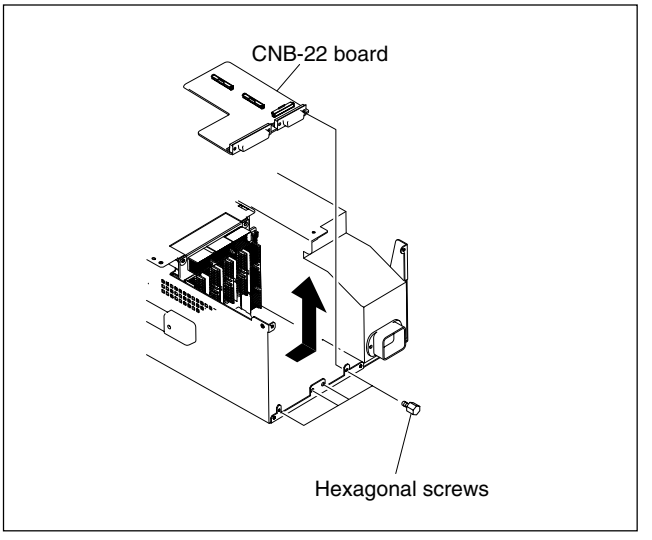

2-2-7. Replacing the SDP-12 Board (HDCU1500)

1. Remove the rear panel (Refer to Section 2-2-4).
2. Remove the five screws, and remove the cover and the harness guide.
3. Remove the two hexagonal bolts.

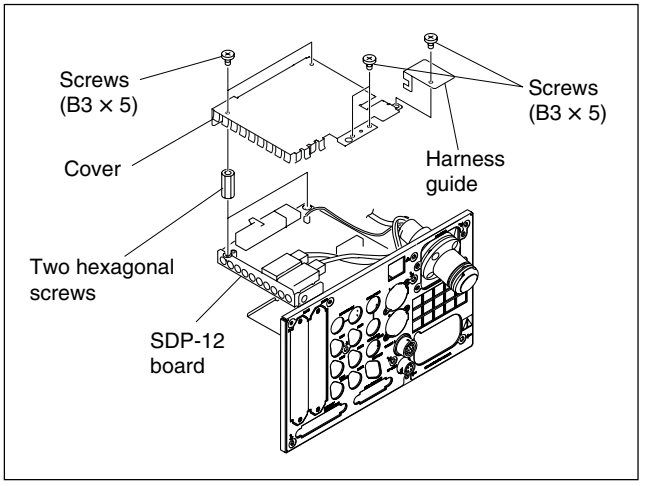


4. Disconnect the harness from the connector CN103 on the SDP-12 board.
5. Disconnect the optical cables from the connectors CP201 and CP401 on the SDP-12 board.

   Note

   When disconnecting the optical cables, disconnect the cables holding the blue portion of the plug.

6. Remove the two screws and remove the SDP-12 board.

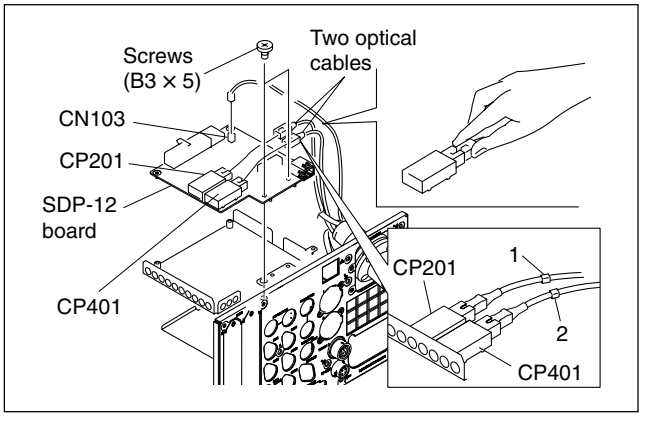

7. Reinstall the SDP-12 board by reversing the steps of removal.

   Notes

   - When connecting the optical cables, push them in the connectors until a click sound is heard.
   - Connect optical cable 1 to the connector CP201, and optical cable 2 to the connector CP401. If they are connected to incorrect positions, the signal will not be output.

Section 3
Electrical Alignment

3-1. Preparation

3-1-1. Required Equipment

Measures

- Digital oscilloscope (300 MHz or higher)
  Tektronix TDS460A or equivalent
- SD waveform/Vector monitor
  Tektronix 1780R or equivalent (for NTSC)
  Tektronix 1781R or equivalent (for PAL)
- SD signal generator
  Tektronix TSG170A or equivalent (for NTSC)
  Tektronix TSG271 or equivalent (for PAL)
- Audio oscillator
  Tektronix SG-5010 or equivalent
- Frequency counter
  Advantest TR5821AK or equivalent

Related equipment

- HDVS color video camera
  HDC1000/1080/1500/1580
- Master setup unit
  MSU-900/950

Tools

- Front extension board EX-982
  (Sony P/N : A-1153-700-A)
- Rear extension board EX-983
  (Sony P/N : A-1153-701-A)
- Extension board EX-984
  (for SDP-12 board extension)
  (Sony P/N : A-1153-715-A)

3-1-2. Notes on Adjustments


- Make sure all the measures have already been calibrated.
- Make sure “3-1-4. Initialization Settings” have already been finished.
- Make sure the adjustment of the HDC1500/1580 has already been finished.
- Types of the color bars to be output from the built-in SG:

Signal format	Y	C
HD-SDI	100 %	100 %
SD-SDI (D1)	100 %	75 %
SD-Component-analog (HKCU1001)	100 %	75 %
SD-Composite-analog (HKCU1001)	75 %	75 % (SMPTE)
SD-Composite-analog (HKCU1001)	100 %	75 % (EBU)


- To adjust HDCU1000/1080/1500, extend each plug-in board. Before pulling out the boards, be sure to turn off the main power.
- Before starting adjustment, warm up for about 10 minutes.
- Before using the MSU-900/950, check the version of the ROM. For details, refer to Section 1-1, “Checking the ROM and Software Version” of the separate Installation Manual for HDCU1000/1080/1500.

3-1-3. Connection of Equipment

Adjusting the HDCU1000/1080/1500

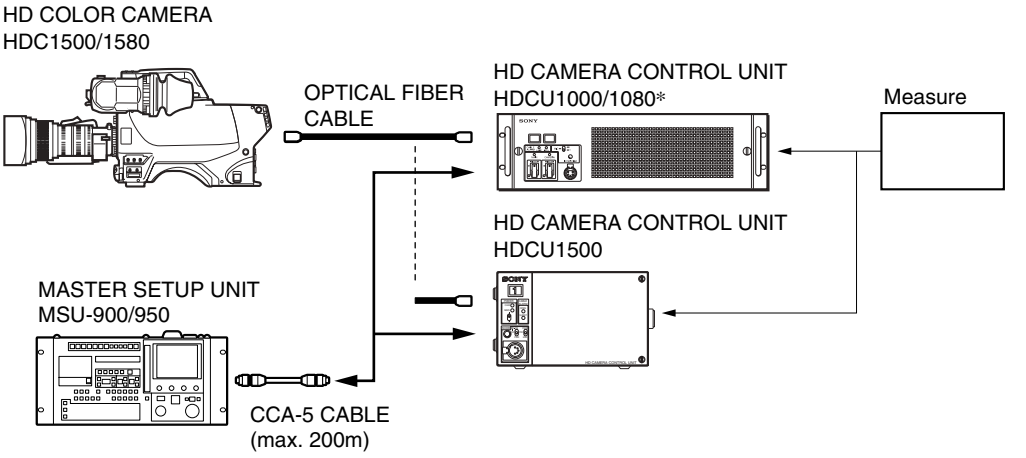

Adjusting the HKCU1001/1003

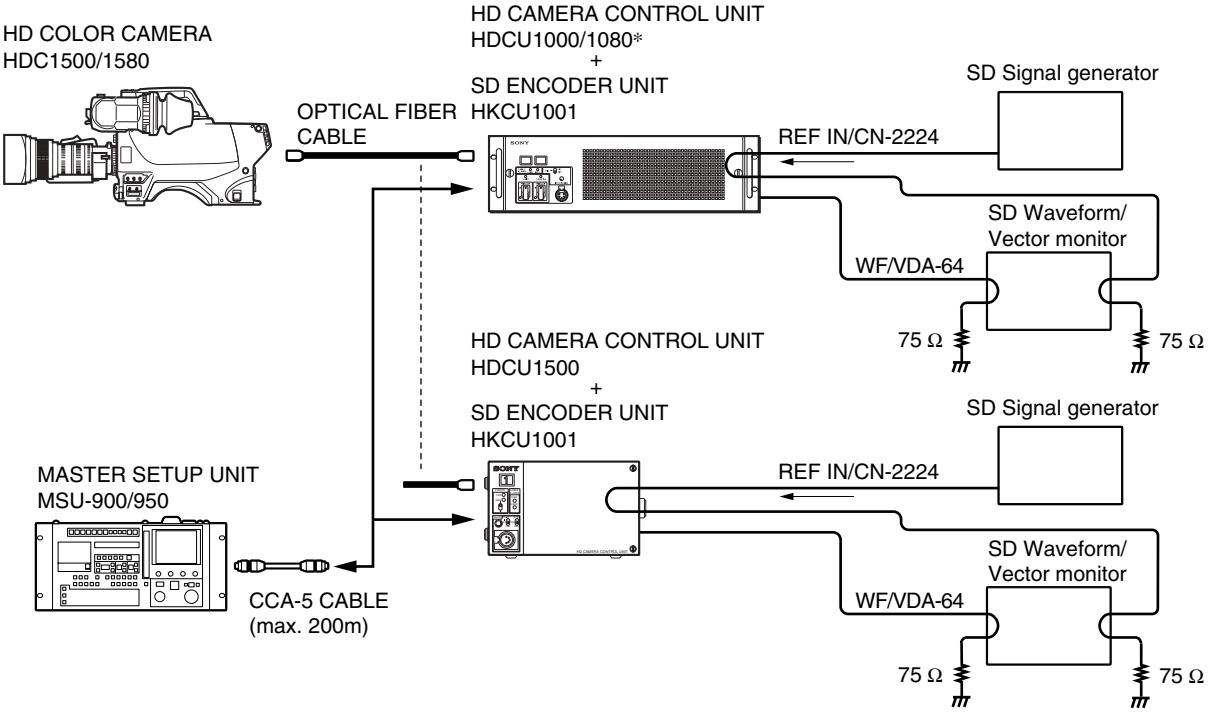

Note

*: Adjust the HDCU1080 in combination with the HDCU1000 and the HDC1580.

3-1-4. Initialization Settings

HDCU1000/1080/1500

Note

When changing the switch settings from the customer's setting positions, it is recommended to write down the customer's setting positions in the following table. After completing the adjustment, be sure to return the switches to the customer's setting positions.

Board	Switch	Setting during adjustment	Customer setting
AU-302	S2	PROD	
	S4	CARBON	
AU-303	S3	PROD	
	S5	CARBON	
AVP-6	S500	0 dB	
	S501	0 dB	
	S600	RTS	
	S601	RTS	
	S602	RTS	
	S603	RTS	

Set the switches other than the above to the state when shipped from the factory.
For details of the switch settings, refer to Section 1-7, "On-board Indicator/ Switch/Volume Functions" of the separate Installation Maual.

When using the MSU-900:

- Power supply and signal selector block
  - ALL button → OFF (Dark)
  - CAM PW button → ON (Lit)
  - TEST1 button → OFF (Dark)
  - TEST2 button → OFF (Dark)
  - BARS button → OFF (Dark)
  - CLOSE button → ON (Lit)

- Camera/CCU circuit ON/OFF block
  - DETAIL OFF button → OFF (Lit)
  - KNEE OFF button → ON (Dark)
  - AUTO KNEE button → OFF (Dark)
  - MATRIX OFF button → OFF (Lit)

- AUTO SETUP block
  - LEVEL button → OFF (Dark)
  - WHITE button → OFF (Dark)
  - BLACK button → OFF (Dark)

- Others
  - GAMMA OFF button → OFF (Dark)
  - MASTER GAIN selector button → 0

When using the MSU-950:

- Power supply and signal selector block
  - ALL button → OFF (Dark)
  - CAM PW button → ON (Lit)
  - TEST button → OFF (Dark)
  - BARS button → OFF (Dark)
  - CLOSE button → ON (Lit)

- AUTO SETUP block
  - LEVEL button → OFF (Dark)
  - WHITE button → OFF (Dark)
  - BLACK button → OFF (Dark)

- Others
  - GAMMA OFF* → ON (Not highlighted)
  - MASTER GAIN* → 0 (0 dB)

* : Press the function button and select it on the function menu display.

3-2. Audio System Adjustment

3-2-1. Microphone Level Adjustment

Measures : Oscilloscope, Audio oscillator

Note


This adjustment is described on the premise that the output impedance of the audio oscillator is 600 Ω.

Preparation


- To be extended : AVP-6 board (front side)
- To be extended : AU-298 board (camera side)
- Set CHU MIC GAIN CH1 on page "C04" of the configuration menu to 20 dB.
- Set CHU MIC GAIN CH2 on page "C04" of the configuration menu to 20 dB.
- S500 (F-3)/AVP-6 board → 0 dBu
- S501 (F-3)/AVP-6 board → 0 dBu
- Set the rear microphone on the camera side to MIC for both audio 1 and 2.

Adjustment Procedure

1. MIC1 level adjustment
   Input a sine wave of 1 kHz, 220 mV p-p (−20 dBu) from the audio oscillator to 185-pin (X), 183-pin (Y) and 181-pin (G) of the extension board (camera side).

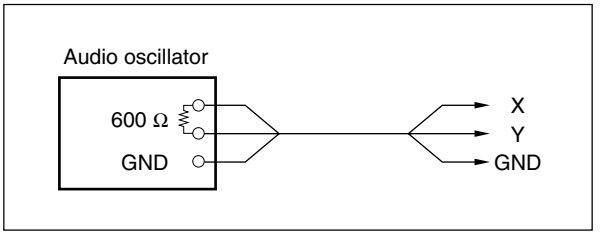


2. Measuring point : TP502 (G-3)/AVP-6 board
   Adjusting point : ⊘RV500 (F-3)/AVP-6 board
   Specifications : A = 1100 ±50 mV p-p

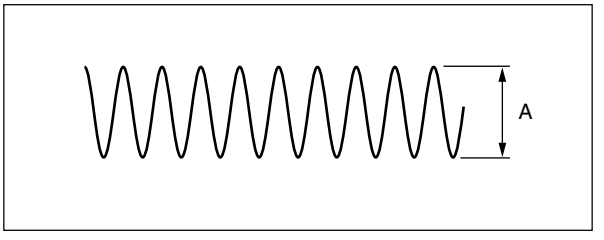


3. Remove the cable that is connected in step 1.

4. MIC2 level adjustment
   Input a sine wave of 1 kHz, 220 mV p-p (−20 dBu) from the audio oscillator to 155-pin (X), 153-pin (Y) and 151-pin (G) of the extension board (camera side).

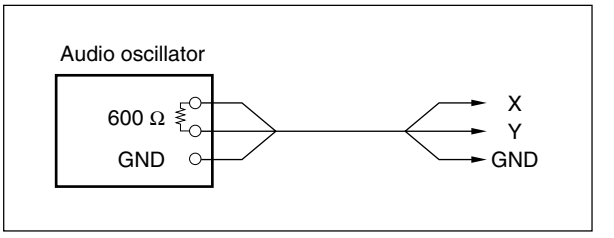


5. Measuring point : TP503 (G-3)/AVP-6 board
   Adjusting point : ⊘RV501 (F-3)/AVP-6 board
   Specifications : B = 1100 ±50 mV p-p

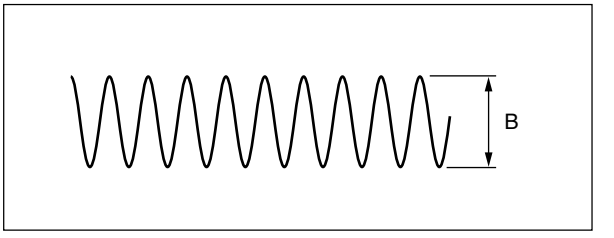

Setting after Adjustment

S500 (F-3), S501 (F-3)/AVP-6 board → Return to the original setting.

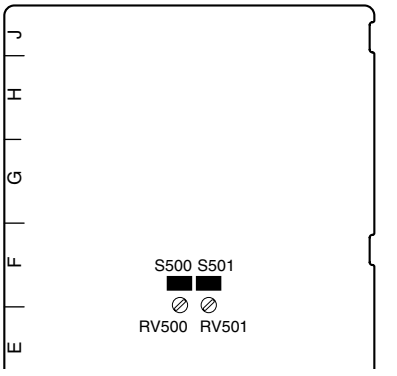

AVP-6 board (A side)

3-2-2. RTS Intercom Adjustment


Measures : Oscilloscope, Audio oscillator

Note

- This adjustment is described on the premise that the output impedance of the audio oscillator is 600 Ω.
- When the intercom system is the RTS system, perform this adjustment.


Preparation

- To be extended : AVP-6 board (front side)
- S4/AU-302 board → CARBON
- S5/AU-303 board → CARBON
- S602 (C-3)/AVP-6 board → RTS
- S600 (E-4)/AVP-6 board → RTS
- S603 (C-4)/AVP-6 board → RTS
- S601 (E-4)/AVP-6 board → RTS

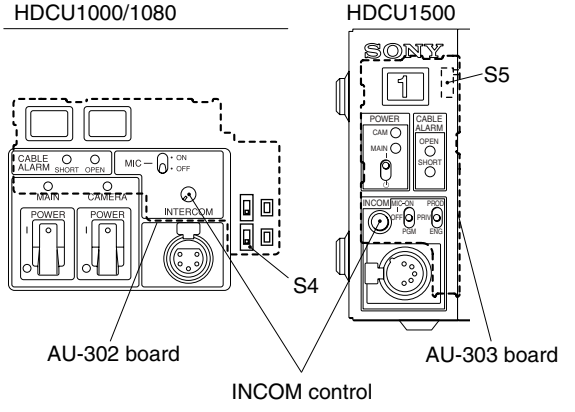


Adjustment Procedure (PROD CANCEL)

1. • S2 (INCOM SELECT)/AU-302 board (HDCU1000/1080) panel side → PROD
   • S3 (INCOM SELECT)/AU-303 board (HDCU1500) panel side → PROD
2. Connect a resistance of 200 Ω between a8-pin (CN-1 side) and C8-pin of the extension board.
3. Input a sine wave of 1 kHz, 220 mV p-p (−20 dBu) from the audio oscillator to 2-pin (X), 1-pin (Y) and 3-pin (G) of the INCOM connector on the HDCU front panel.

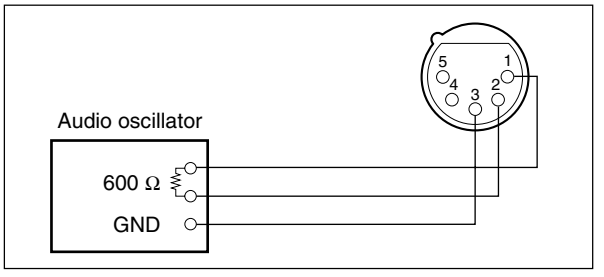


4. PROD CANCEL adjustment
   Measuring point : TP600 (B-4)/AVP-6 board
   Adjusting point : ◓RV600 (PROD 2WIRE CANCEL)/AVP-6 board panel side
   Specifications : A = Minimize

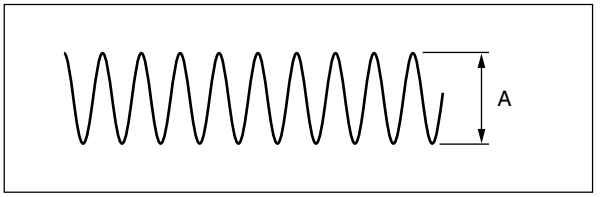


Adjustment Procedure (ENG CANCEL)

1. • S2 (INCOM SELECT)/AU-302 board (HDCU1000/1080) panel side → ENG
   • S3 (INCOM SELECT)/AU-303 board (HDCU1500) panel side → ENG
2. Connect a resistance of 200 Ω between a7-pin (CN-4 side) and C7-pin of the extension board.
3. Input a sine wave of 1 kHz, 220 mV p-p (−20 dBu) from the audio oscillator to 2-pin (X), 1-pin (Y) and 3-pin (G) of the INCOM connector on the HDCU front panel.

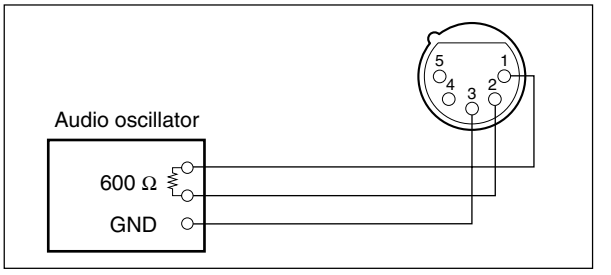

4. Measuring point : TP601 (B-4)/AVP-6 board
   Adjusting point : ◓RV601 (ENG 2WIRE CANCEL)/AVP-6 board panel side
   Specifications : B = Minimize

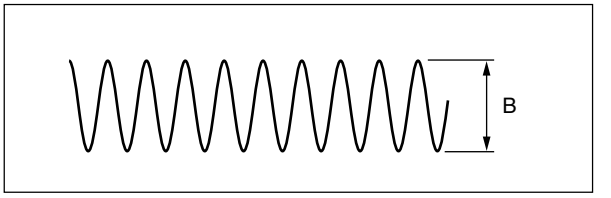

Setting after Adjustment

After adjustment is completed, return the switches to the original setting.


3-3. Video and Reference Signal System Adjustment

3-3-1. 27 MHz VCO Free-run Adjustment

Measure : Frequency counter, Oscilloscope

Preparation

- To be extended : AT-167 board (front side)
- Remove the cable connected to the REFERENCE IN connector on the HDCU rear panel.
- S401 (REFERENCE)/AT-167 board panel side → SD
- Connect the measure as shown in the following figure.
- After turning on the power, wait for 10 minutes at least and start adjustment.

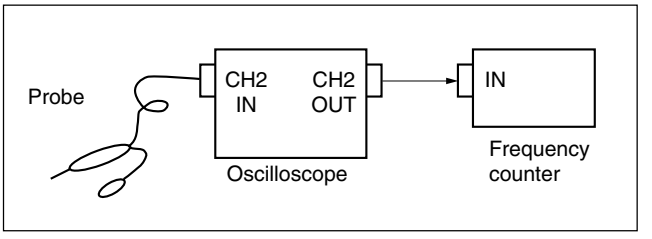

Adjustment Procedure

Measuring point : TP704 (F-4)/AT-167 board
Adjusting point : ⊘RV701 (F-2)/AT-167 board
Specifications : 27,000,000 ±10 Hz

Setting after Adjustment


After finishing the adjustment, return the switches to the original configuration. Reconnect the disconnected cables.


3-3-2. Clock (74 MHz) Duty Adjustment

Measure : Oscilloscope (20 MHz BWLimit: ON)

Adjustment Procedure

Measuring point : TP714 (H-1)/AT-167 board
Adjusting point : ⊘RV702 (G-1)/AT-167 board
Specifications : C = 1.60 ±0.04 Vdc

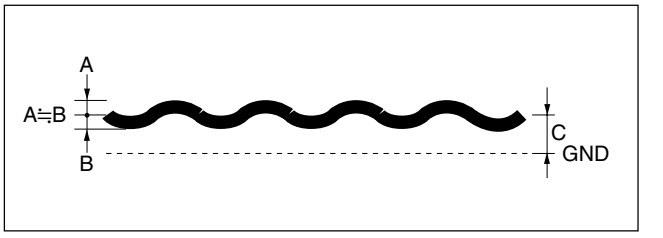

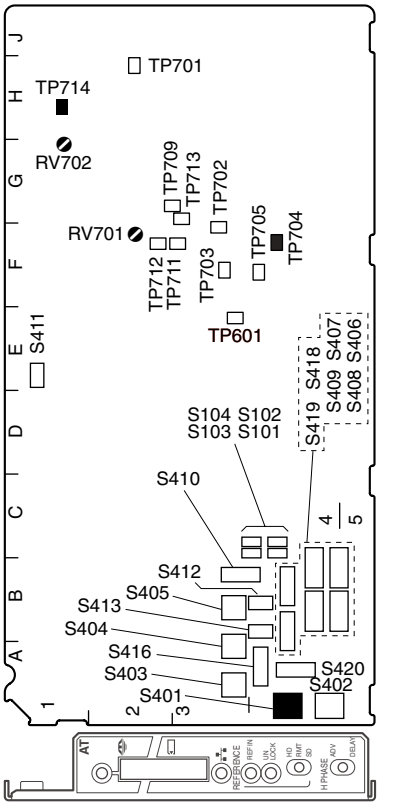

AT-167 board (A side and panel side)

3-3-3. Prompter Level 1/2 Adjustment

Measures : SD waveform monitor (NTSC or PAL)
SD signal generator (NTSC or PAL)


Preparation


Connect the SD signal generator (for NTSC : SMPTE color bar/for PAL : EBU color bar) to the PROMPTER IN connector on the HDCU rear panel.

Adjustment Procedure

1. PROMPTER 1 level adjustment
   Measuring point : PROMPTER 1 connector/CAMERA side
   Adjusting point : ◓RV301 (G-1)/DTX-5 board
   Specifications : A = 140 ±1 IRE
   (terminated at 75 Ω) (for NTSC)
   A = 1000 ±7 mV p-p
   (terminated at 75 Ω) (for PAL)

2. PROMPTER 2 level adjustment
   Measuring point : PROMPTER 2 connector/CAMERA side
   Adjusting point : ◓RV701 (G-2)/DTX-5 board
   Specifications : A = 140 ±1 IRE
   (terminated at 75 Ω) (for NTSC)
   A = 1000 ±7 mV p-p
   (terminated at 75 Ω) (for PAL)

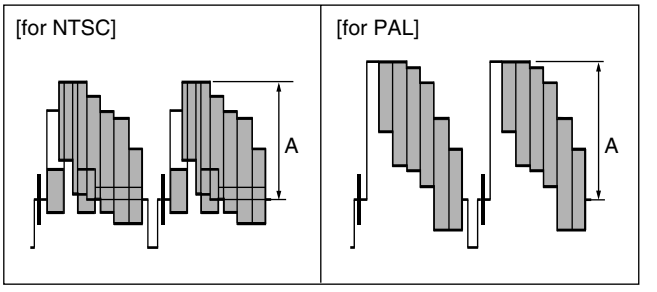

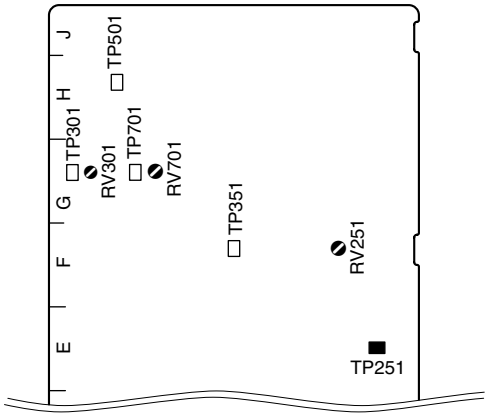

DTX-5 board (A side)

3-4. Video Signal System Adjustment (Front board)

3-4-1. SD-SDI Input VCO Free-run Adjustment


Measure : Frequency counter, Oscilloscope

Note

After replacing IC251 on the DTX-5 board only, perform this adjustment.

Preparation

- To be extended : DTX-5 board (front side)
- For the HDCU1000, disconnect the cables connected to the HD SDI1 connector on the HDCU rear panel, and the SD SDI1 connector on the HDCU rear panel
- For the HDCU1500, disconnect the cable connected to the RET1 connector on the HDCU rear panel.
- Connect the measure as shown in the following figure.
- After turning on the power, wait for 10 minutes at least and start adjustment.

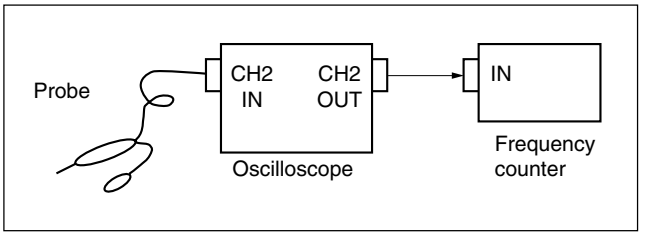

Adjustment Procedure

1. Measuring point : TP251 (E-4)/DTX-5 board
   Adjusting point : ◓RV251 (F-4)/DTX-5 board
   Specifications : 27.0 ±0.2 MHz

Note

After finishing the adjustment and waiting for 10 minutes at least, confirm that each specification is met.
If the specifications are not met, perform the adjustment again.

Setting after Adjustment

After finishing the adjustment, reconnect the disconnected cables.

3-4-2. STAIR CASE Adjustment

Measure : Oscilloscope

Note


Perform temporarily this adjustment after repairing. When the system is set up, perform the adjustment again according to the characteristic of the waveform monitor.

Preparation

To be extended : EN-159A/159B board (front side)

Adjustment Procedure

Measuring point : TP305 (E-3)/EN-159A/159B board
Adjusting point : ⊘RV302 (E-4)/EN-159A/159B board
⊘RV301 (E-4)/EN-159A/159B board
Specifications : A = 3.0 ±0.5 V p-p (⊘RV302)
B = 0 ±0.5 V dc (⊘RV301)

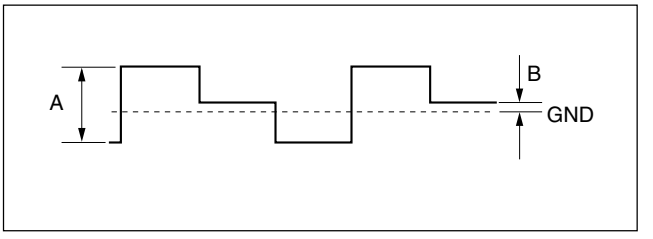

Settings after Adjustment

After finishing the adjustment, return the switches to the original setting.

3-5. SD Signal System Adjustment

3-5-1. VBS Output Level Adjustment

Measures : SD waveform monitor (NTSC or PAL)

Note


The adjustment can be performed using VBS on page "C08" of the configuration menu (Fine-adjustment can be performed when used as a system.)


Preparation

To be extended : EN-159A/159B board (front side)

Adjustment Procedure

1. Video level adjustment
   Measuring point : VBS OUT connector/VDA-64A board
   Adjusting point : ⊘RV303 (F-3)/EN-159A/159B board
   Specifications : A = 100 ±1 IRE
   (terminated at 75 Ω) (for NTSC)
   A = 700 ±7 mV
   (terminated at 75 Ω) (for PAL)

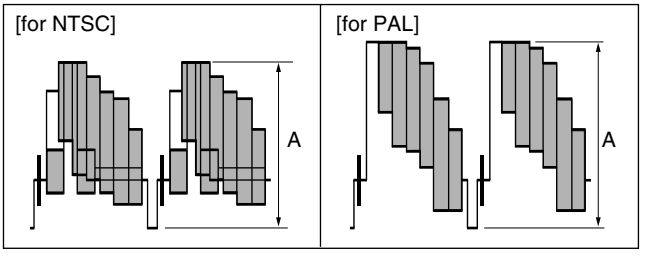

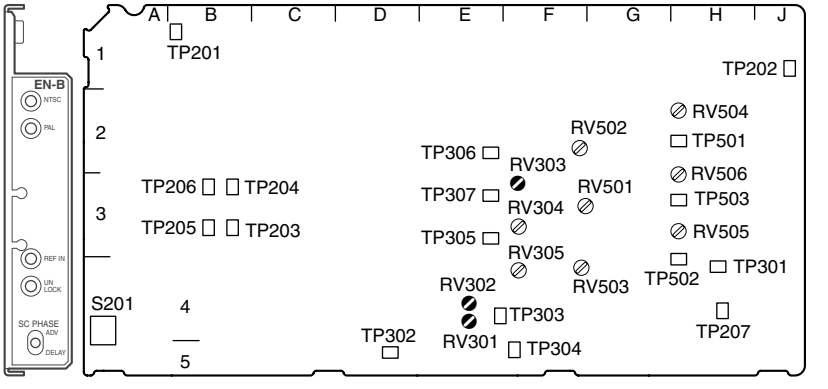

EN-159A/159B board (A side and panel side)

3-5-2. PIX Output Level Adjustment

Measures : SD waveform monitor (NTSC or PAL)

Note


The adjustment can be performed using PIX on page "C08" of the configuration menu. (Fine-adjustment can be performed when used as a system.)

Preparation

To be extended : EN-159A/159B board (front side)

Adjustment Procedure

1. Video level adjustment
   Measuring point : PIX OUT connector/VDA-64A board
   Adjusting point : ⊘RV304 (F-3)/EN-159A/159B board
   Specifications : A = 100 ±1 IRE
   (terminated at 75 Ω) (for NTSC)
   A = 700 ±7 mV
   (terminated at 75 Ω) (for PAL)

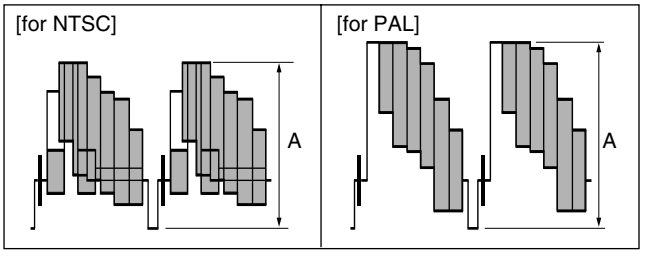

3-5-3. WF Output Level Adjustment

Measures : SD waveform monitor (NTSC or PAL)

Note


The adjustment can be performed using WFM on page "C08" of the configuration menu. (Fine-adjustment can be performed when used as a system.)


Preparation

To be extended : EN-159A/159B board (front side)

Adjustment Procedure

1. Video level adjustment
   Measuring point : WF OUT connector/VDA-64A board
   Adjusting point : ⊘RV305 (F-4)/EN-159A/159B board
   Specifications : A = 100 ±1 IRE
   (terminated at 75 Ω) (for NTSC)
   A = 700 ±7 mV
   (terminated at 75 Ω) (for PAL)

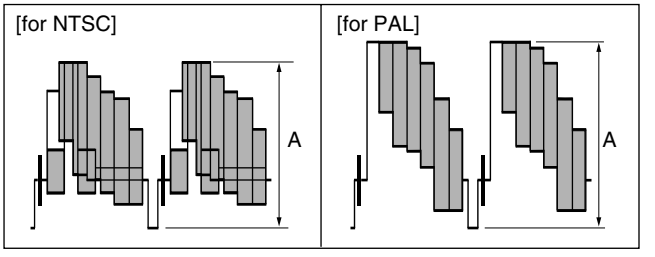

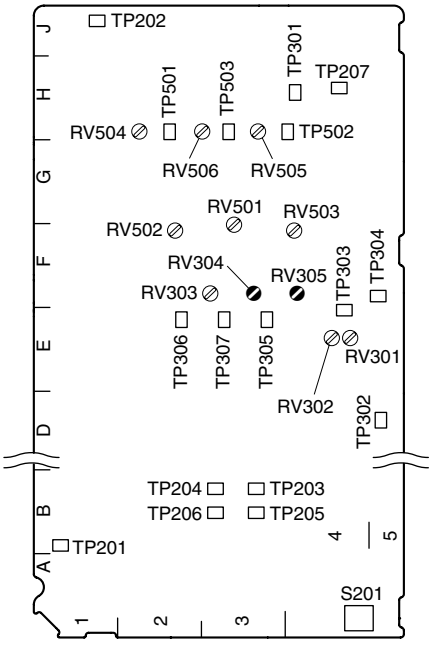

EN-159A/159B board (A side)

3-5-4. GRB Output Level Adjustment

Measure : SD waveform monitor (NTSC or PAL)

Note

The adjustment can be performed using G/Y LEVEL, B/B-Y LEVEL, or R/R-Y LEVEL on page “C09” of the configuration menu. (Fine-adjustment can be performed when used as a system.)

Preparation


- To be extended : EN-159B board (front side)
- Select RGB in the OUTPUT FORMAT on page “S03” of the system operation menu.

  Note


  This menu appears when the EN-159B board and the VDA-64C board are inserted.

Adjustment Procedure


1. G signal level adjustment
   Measuring point : G/Y connector/VDA-64C board
   Adjusting point : ◓RV506 (COMPONENT G/Y LEVEL)/EN-159B board
   Specifications : A = 700 ±5 mV p-p (terminated at 75 Ω) (100% color bar)

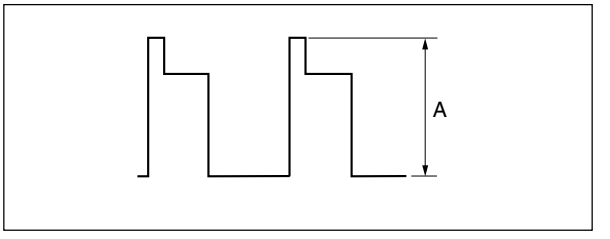


2. R signal level adjustment
   Measuring point : R/R-Y connector/VDA-64C board
   Adjusting point : ◓RV504 (COMPONENT R/R-Y LEVEL)/EN-159B board
   Specifications : B = 700 ±5 mV p-p (terminated at 75 Ω) (100% color bar)

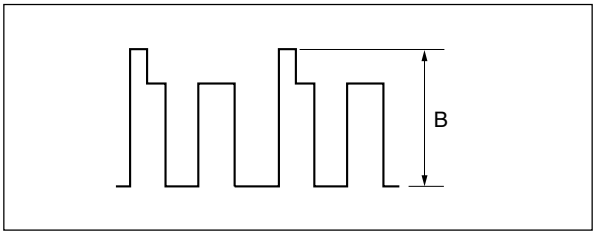

3. B signal level adjustment
   Measuring point : B/B-Y connector/VDA-64C board
   Adjusting point : ◓RV505 (COMPONENT B/B-Y LEVEL)/EN-159B board
   Specifications : C = 700 ±5 mV p-p (terminated at 75 Ω) (100% color bar)

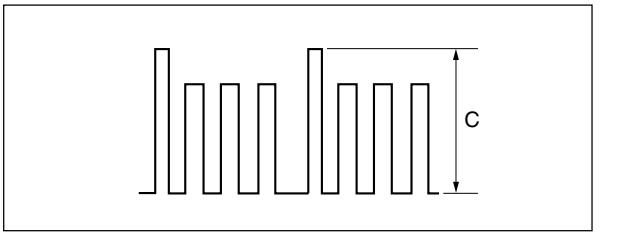

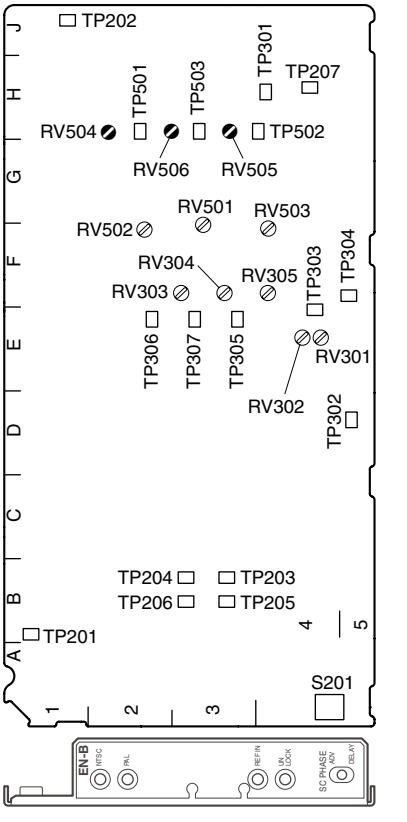

EN-159B board (A side and panel side)

3-5-5. Y/R-Y/B-Y Output Level Adjustment

Measure : SD waveform monitor (NTSC)

Note

The GRB output level adjustment (section 3-5-4) should be completed.

Preparation


- To be extended : EN-159B board (front side)
- Select ON/OFF using SETUP on page “C07” of the configuration menu.
- Select YCD in the OUTPUT FORMAT on page “S03” of the system operation menu.

Adjustment Procedure


1. Y signal level adjustment

   Note


   Perform this adjustment only when SETUP on page “C07” of the configuration menu is set to ON.
   Measuring point : G/Y connector/VDA-64C board
   Adjusting point : ◓RV501 (F-3)/EN-159B board
   Specifications : A =714 mV ±5 mV (terminated at 75 Ω) (100% (Y) color bar)

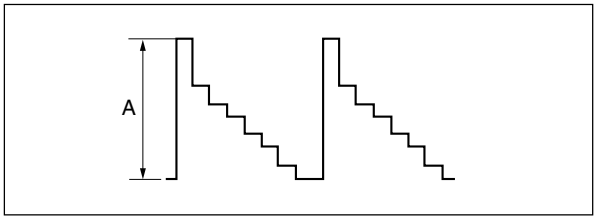


2. R-Y signal level adjustment
   Measuring point : R/R-Y connector/VDA-64C board
   Adjusting point : ◓RV502 (F-2)/EN-159B board
   Specifications : B = 756 ±5 mV (SET UP : OFF) (terminated at 75 Ω)
   B = 700 ±5 mV (SET UP : ON) (terminated at 75 Ω)

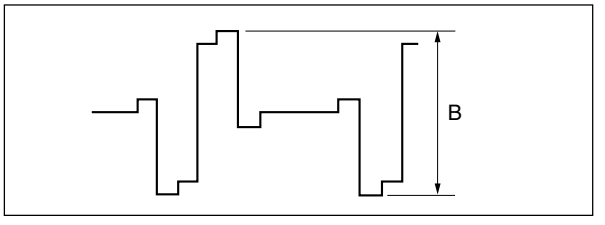

3. B-Y signal level adjustment
   Measuring point : B/B-Y connector/VDA-64C board
   Adjusting point : ◓RV503 (F-4)/EN-159B board
   Specifications : C = 756 ±5 mV (SET UP : OFF) (terminated at 75 Ω)
   C = 700 ±5 mV (SET UP : ON) (terminated at 75 Ω)

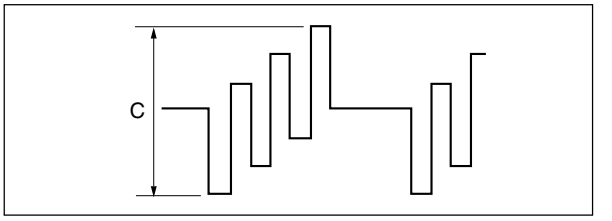

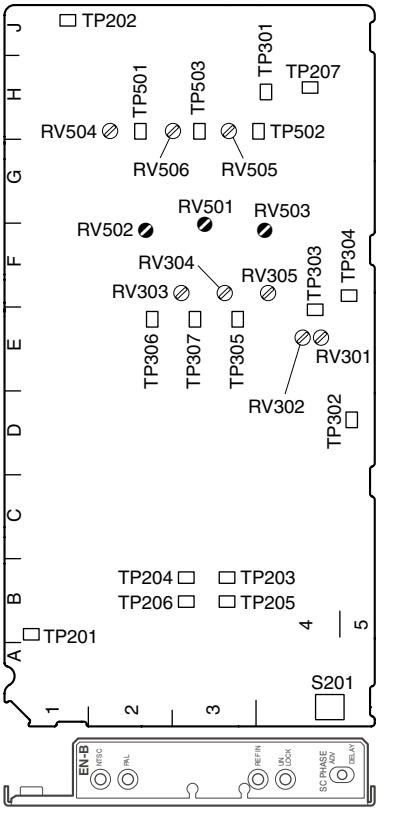

EN-159B board (A side and panel side)

Section 4
Spare Parts

4-1. Notes on Repair Parts

1. Safety Related Components Warning

WARNING

Components marked ⚠ are critical to safe operation. Therefore, specified parts should be used in the case of replacement.

2. Standardization of Parts

Some repair parts supplied by Sony differ from those used for the unit. These are because of parts commonality and improvement.
Parts list has the present standardized repair parts.

3. Stock of Parts

Parts marked with “o” at SP (Supply Code) column of the spare parts list may not be stocked. Therefore, the delivery date will be delayed.

4. Harness

Harnesses with no part number are not registered as spare parts.

4-1. 補修部品注意事項

1. 安全重要部品

⚠警告

⚠印のついた部品は安全性を維持するために重要な部品です。したがって，交換する時は必ず指定の部品を使ってください。

2. 部品の共通化

ソニーから供給する補修用部品は，セットに使われているものと異なることがあります。
これは部品の共通化，改良等によるものです。
部品表には現時点での共通化された補修用部品が記載されています。


3. 部品の在庫

部品表のSP (Supply code) 欄に“o”で示される部品は在庫していないことがあり，納期が長くなることがあります。


4. ハーネス

部品番号が記載されていないハーネスは，サービス部品として登録されていません。

4-2. Exploded Views

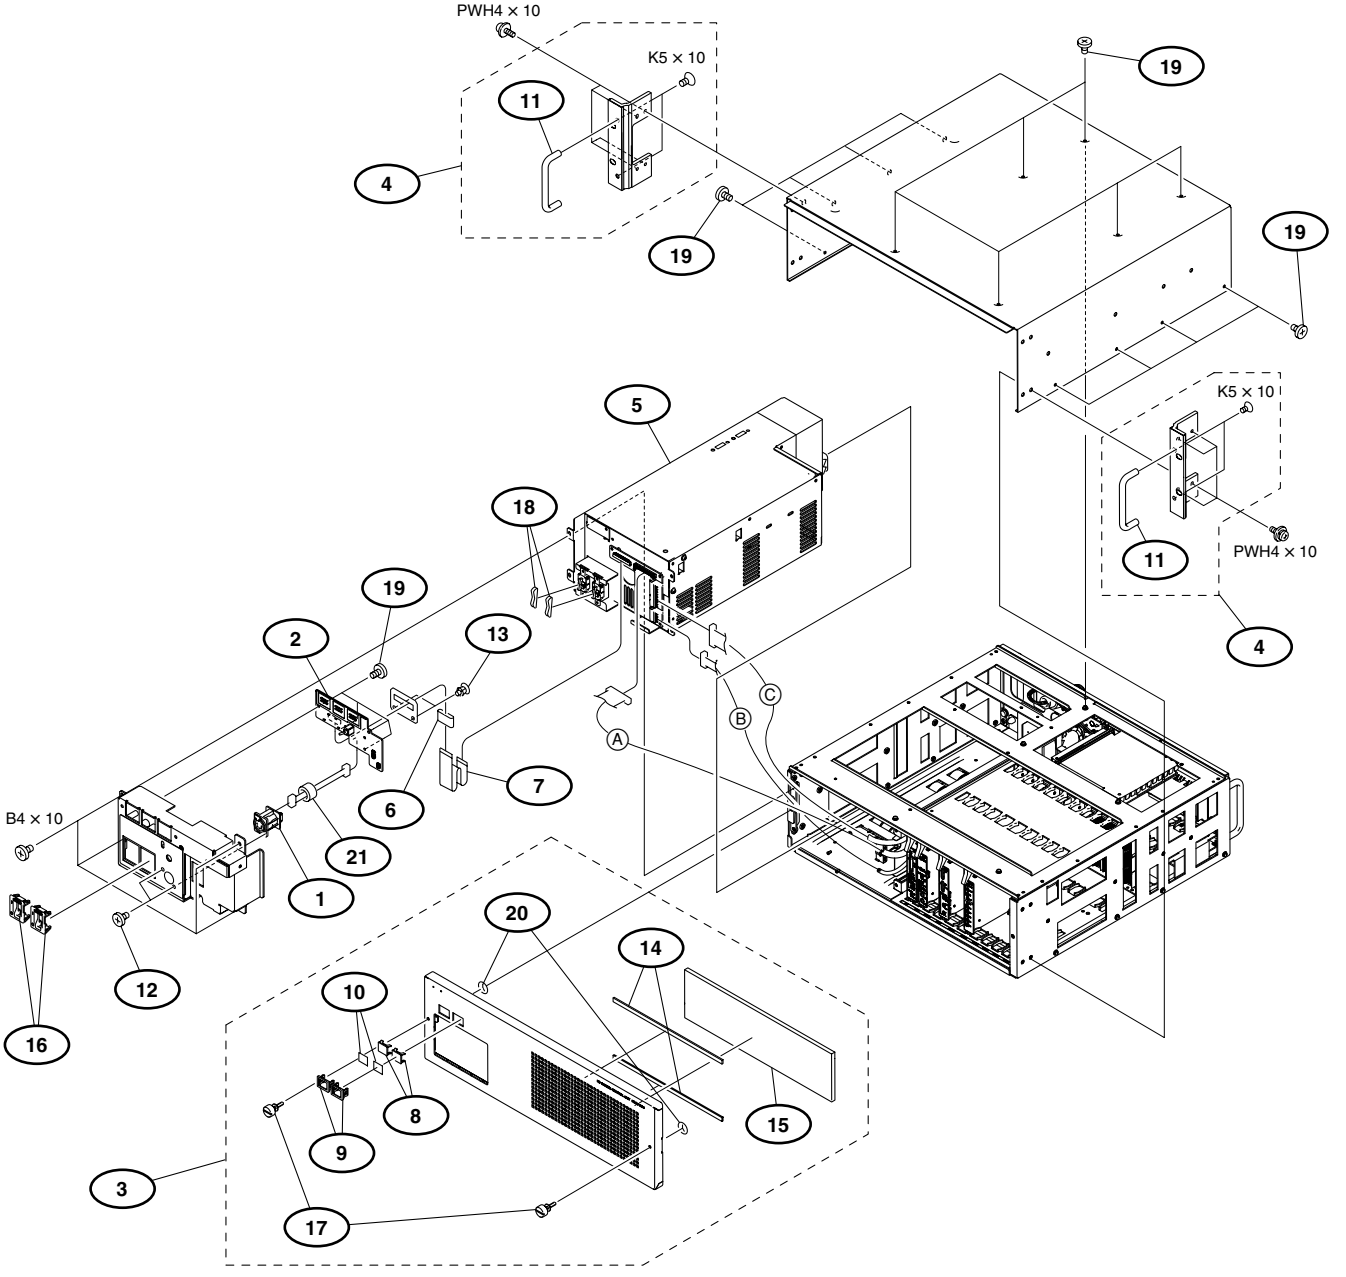


No.	Part No.	SP	Description
1	A-1129-236-A	s	MOUNTED CIRCUIT BOARD, CN-2700
2	A-1129-307-A	s	MOUNTED CIRCUIT BOARD, AU-302
3	A-1129-464-A	s	FRONT PANEL ASSY (for HDCU1000)
	A-1194-778-A	s	FRONT PANEL ASSY (CN) (for HDCU1080)
4	X-2127-218-3	o	ANGLE (3U) ASSY, RACK
5	⚠ 1-468-945-11	s	REGULATOR, SWITCHING
6	1-500-418-11	s	CORE
7	1-831-657-11	s	CABLE, FLEXIBLE FLAT (26 CORE)
8	2-139-192-01	s	FRAME, INDICATOR WINDOW
9	2-139-193-02	s	WINDOW INDICATOR
10	2-249-353-00	s	COVER, LAMP
11	2-378-801-01	s	HANDLE
12	3-165-162-01	s	SCREW (+P 2.6X5) (TYPE 1) (ST)
13	3-531-576-21	s	RIVET, NYLON
14	3-602-574-01	o	TAPE2, ADHENSIVE
15	3-628-958-01	o	FILTER
16	3-681-054-01	o	POWER SW GUARD
17	3-687-887-01	s	SCREW (M 4X20) (COPPER)
18	3-688-814-01	s	CAP, SWITCH
19	3-725-295-21	s	SCREW, (+) (B3)
20	3-650-537-00	o	WASHER (PLA)
21	1-543-751-11	o	CORE (TROIDAL)
	7-682-275-09	s	SCREW +K 5X10
	7-682-562-04	s	SCREW +B 4X10
	7-682-904-21	s	SCREW +PWH 4X10

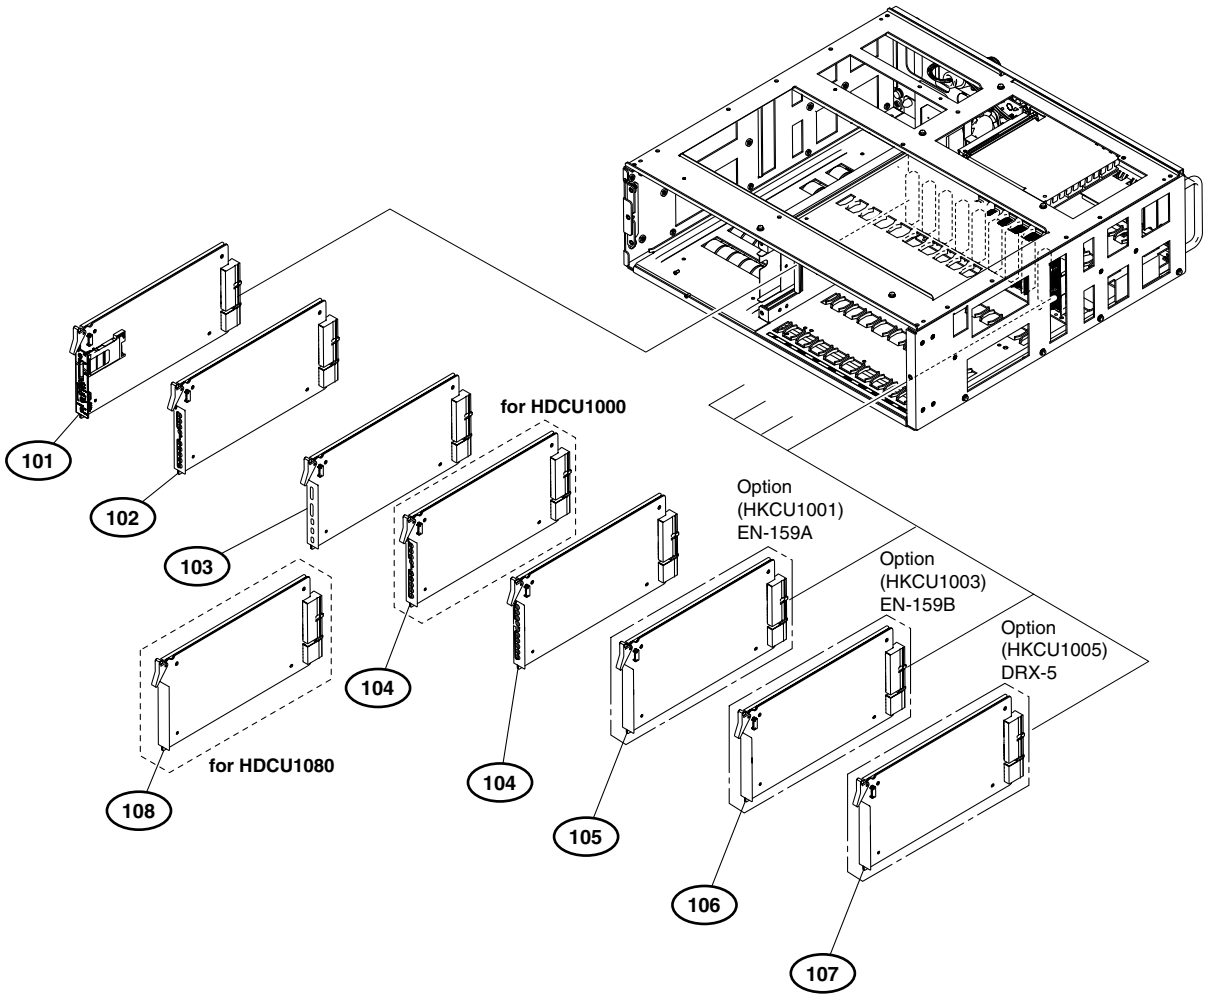

No.	Part No.	SP	Description
101	A-1129-299-A	s	MOUNTED CIRCUIT BOARD, AT-167
102	A-1129-300-A	s	MOUNTED CIRCUIT BOARD, AVP-6
103	A-1129-301-A	s	MOUNTED CIRCUIT BOARD, DTX-5
104	A-1129-302-A	s	MOUNTED CIRCUIT BOARD, DRX-5
105	A-1132-789-A	s	MOUNTED CIRCUIT BOARD, EN-159A (HKCU1001) (OPTION)
106	A-1132-790-A	s	MOUNTED CIRCUIT BOARD, EN-159B (HKCU1003) (OPTION)
107	A-1129-302-A	s	MOUNTED CIRCUIT BOARD, DRX-5 (HKCU1005) (OPTION)
108	A-1179-817-A	s	MOUNTED CIRCUIT BOARD, DU-390 (for HDCU1080)


Rear Panel (HDCU1000/1080)

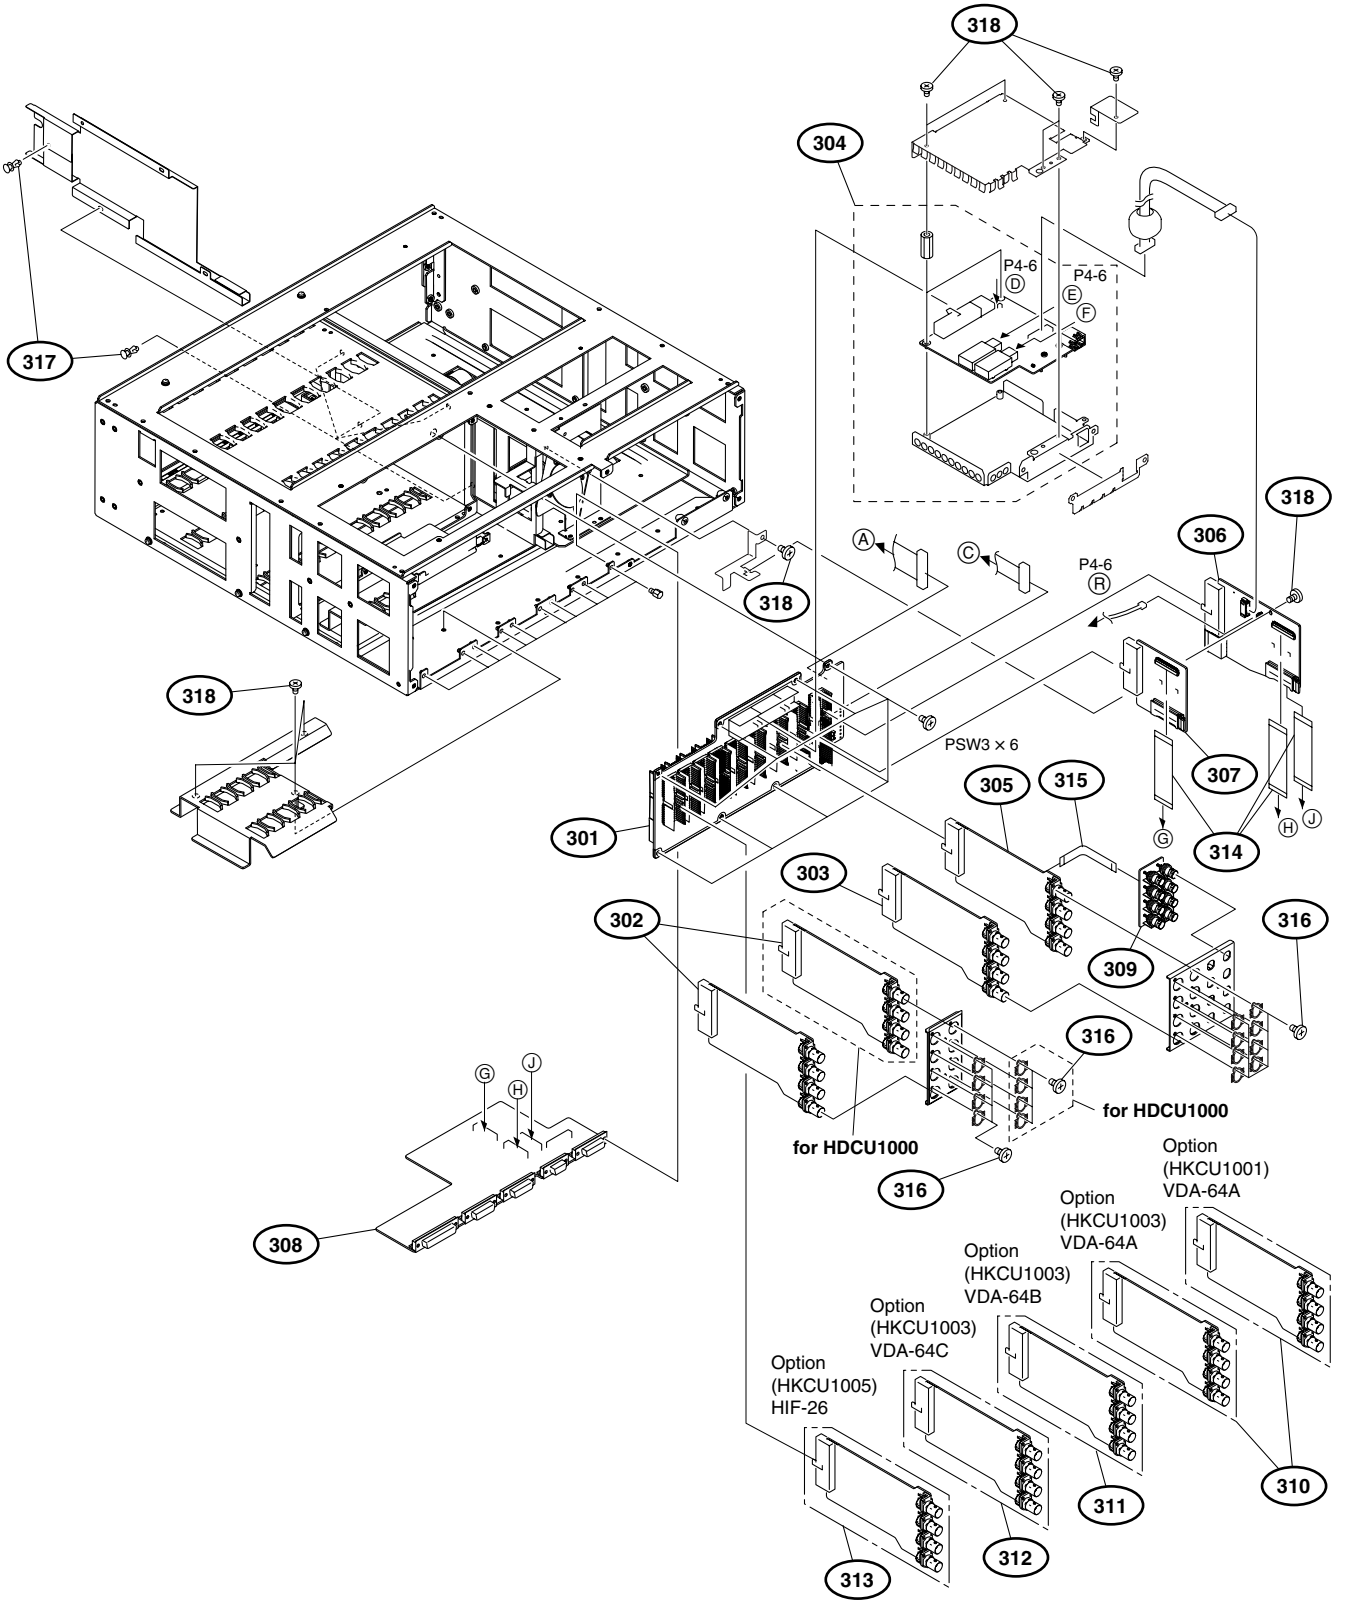

No.	Part No.	SP	Description
301	A-1129-220-A	s	MOUNTED CIRCUIT BOARD, MB-1071
302	A-1129-304-A	s	MOUNTED CIRCUIT BOARD, HIF-25
303	A-1129-305-A	s	MOUNTED CIRCUIT BOARD, SDI-85
304	A-1129-303-B	s	MOUNTED CIRCUIT BOARD, SDP-12 (for HDCU1000)
	A-1184-046-A	s	MOUNTED CIRCUIT BOARD, SDP-12C (for HDCU1080)
305	＊A-1161-074-A	s	MOUNTED CIRCUIT BOARD, SDI-86G (GOLD)
	＊A-1129-306-A	s	MOUNTED CIRCUIT BOARD, SDI-86 (SILVER)
306	＊A-1161-076-A	s	MOUNTED CIRCUIT BOARD, VIF-34G (GOLD)
	＊A-1129-229-A	s	MOUNTED CIRCUIT BOARD, VIF-34 (SILVER)
307	＊A-1161-078-A	s	MOUNTED CIRCUIT BOARD, ADO-10G (GOLD)
	＊A-1129-230-A	s	MOUNTED CIRCUIT BOARD, ADO-10 (SILVER)
308	＊A-1161-080-A	s	MOUNTED CIRCUIT BOARD, CNB-21G (GOLD)
	＊A-1129-235-A	s	MOUNTED CIRCUIT BOARD, CNB-21 (SILVER)
309	＊A-1161-082-A	s	MOUNTED CIRCUIT BOARD, CN-2674G (GOLD)
	＊A-1129-233-A	s	MOUNTED CIRCUIT BOARD, CN-2674 (SILVER)
310	A-1132-791-A	s	MOUNTED CIRCUIT BOARD, VDA-64A (HKCU1001/HKCU1003) (OPTION)
311	A-1132-792-A	s	MOUNTED CIRCUIT BOARD, VDA-64B (HKCU1003) (OPTION)
312	A-1132-793-A	s	MOUNTED CIRCUIT BOARD, VDA-64C (HKCU1003) (OPTION)
313	A-1132-794-A	s	MOUNTED CIRCUIT BOARD, HIF-26 (HKCU1005) (OPTION)
314	＊1-831-087-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (GOLD)
	＊1-830-799-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (SILVER)
315	＊1-831-666-11	s	CABLE, FLEXIBLE FLAT (15 CORE) (GOLD)
	＊1-830-801-11	s	CABLE, FLEXIBLE FLAT (15 CORE) (SILVER)
316	3-364-941-01	s	SCREW (+B) (2.6X5), NYLOK
317	3-531-576-21	s	RIVET, NYLON
318	3-725-295-21	s	SCREW, (+) (B3)
	7-682-947-01	s	SCREW +PSW 3X6


＊:「1−2. 部品交換時の注意事項」を参照してください。
＊ : Refer to Section 1-2, "Note for Replacing Parts".

Rear Panel Section (HDCU1000/1080)

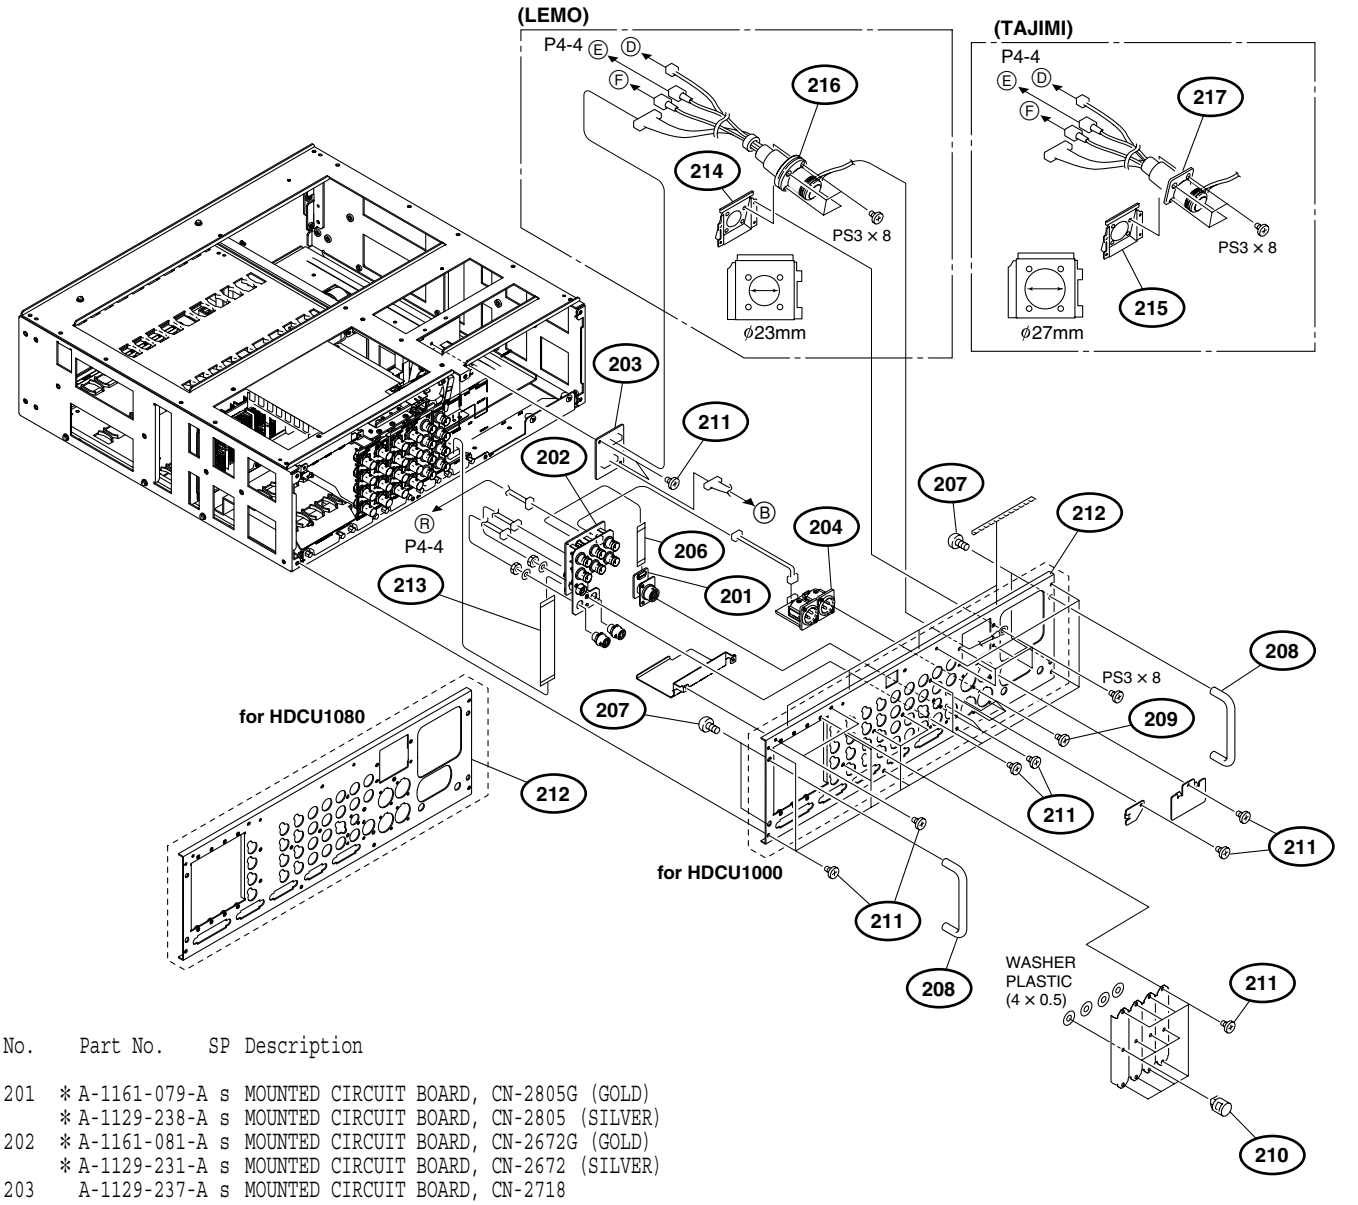


No.	Part No.	SP	Description
201	＊A-1161-079-A	s	MOUNTED CIRCUIT BOARD, CN-2805G (GOLD)
	＊A-1129-238-A	s	MOUNTED CIRCUIT BOARD, CN-2805 (SILVER)
202	＊A-1161-081-A	s	MOUNTED CIRCUIT BOARD, CN-2672G (GOLD)
	＊A-1129-231-A	s	MOUNTED CIRCUIT BOARD, CN-2672 (SILVER)
203	A-1129-237-A	s	MOUNTED CIRCUIT BOARD, CN-2718
204	A-1129-232-A	s	MOUNTED CIRCUIT BOARD, CN-2673
206	＊1-831-666-11	s	CABLE, FLEXIBLE FLAT (15 CORE) (GOLD)
	＊1-830-801-11	s	CABLE, FLEXIBLE FLAT (15 CORE) (SILVER)
207	2-148-622-01	s	SCREW (+P 5X8)
208	2-378-801-01	s	HANDLE
209	3-165-162-01	s	SCREW (+P 2.6X5) (TYPE 1) (ST)
210	3-682-057-11	s	SPACER (SMALL)
211	3-725-295-21	s	SCREW, (+) (B3)
212	3-872-832-02	s	REAR PANEL (for HDCU1000)
	3-872-832-21	s	REAR PANEL (for HDCU1080)
213	＊1-831-664-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (GOLD)
	＊1-830-798-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (SILVER)
214	3-872-863-02	s	FIBER CN HOLDER (ø23) (LEMO)
215	3-986-571-01	s	FIBER CN HOLDER (ø27) (TAJIMI)
216	⚠ 1-830-747-11	s	CABLE ASSEMBLY, ENCAPSULAT (F) (LEMO)
217	⚠ 1-830-749-11	s	OPTICAL MULTI CABLE ASSEMBLY (TAJIMI)
	7-623-925-11	s	WASHER PLASTIC (4X0.5)
	7-682-648-09	s	SCREW +PS 3X8

＊:「1-2. 部品交換時の注意事項」を参照してください。
＊ : Refer to Section 1-2, "Note for Replacing Parts".

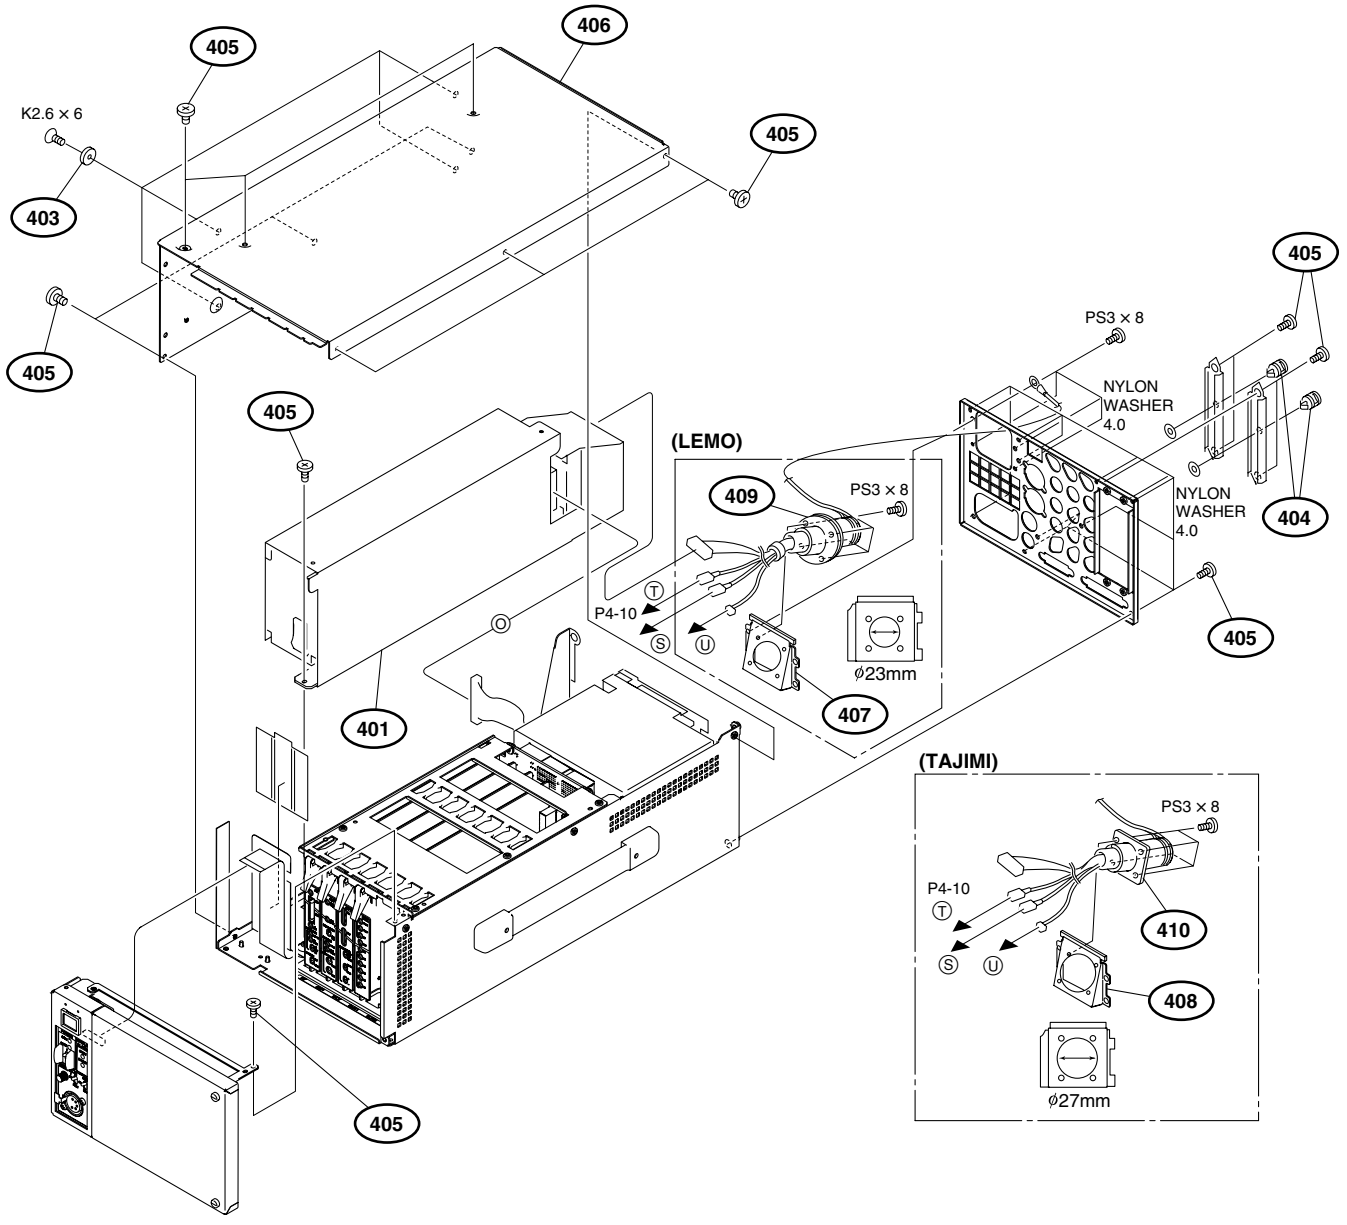


No.	Part No.	SP	Description
401	⚠ 1-468-935-11	s	POWER UNIT
403	2-382-110-00	o	LEG (PLA)
404	3-682-057-11	s	SPACER (SMALL)
405	3-725-295-21	s	SCREW, (+) (B3)
406	3-872-856-02	s	COVER
407	3-872-863-02	s	FIBER CN HOLDER (ø23) (LEMO)
408	3-986-571-01	s	FIBER CN HOLDER (ø27) (TAJIMI)
409	⚠ 1-830-747-11	s	CABLE ASSEMBLY, ENCAPSULAT (F) (LEMO)
410	⚠ 1-830-749-11	s	OPTICAL MULTI CABLE ASSEMBLY (TAJIMI)
	7-621-592-00	s	SCREW +K 2.6X6
	7-623-925-11	s	WASHER PLASTIC (4X0.5)
	7-682-648-09	s	SCREW +PS 3X8

Front Panel (HDCU1500)

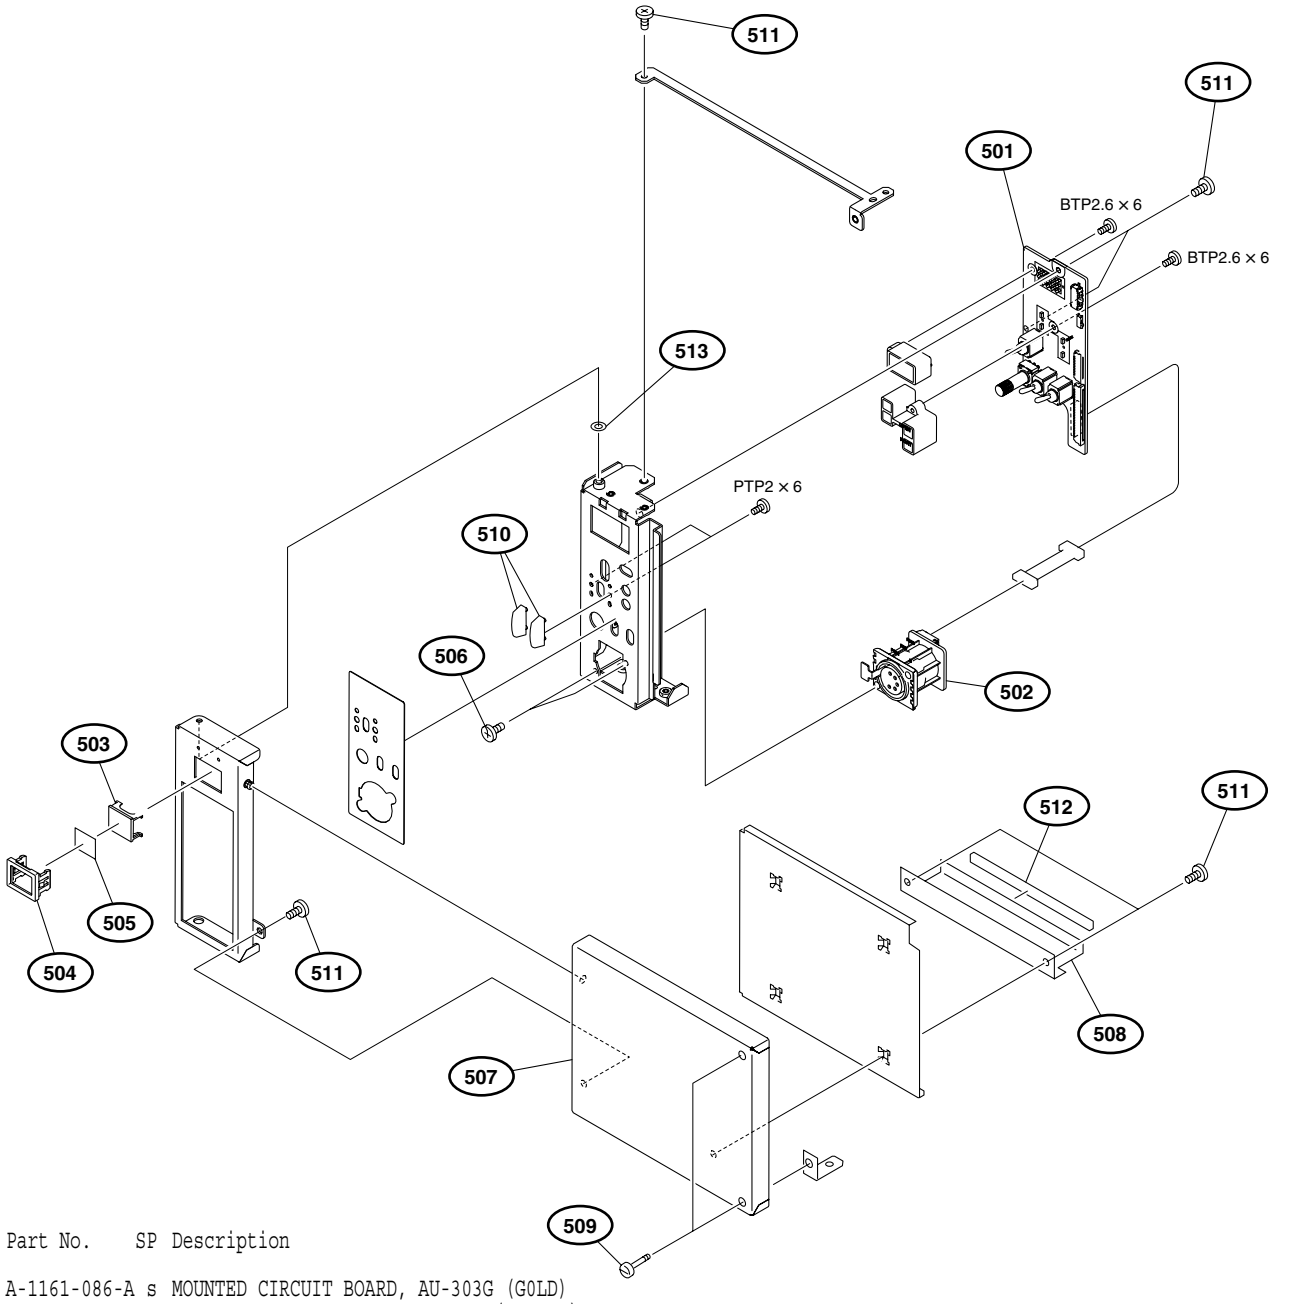

No.	Part No.	SP	Description
501	＊A-1161-086-A	s	MOUNTED CIRCUIT BOARD, AU-303G (G0LD)
	＊A-1129-310-A	s	MOUNTED CIRCUIT BOARD, AU-303 (SILVER)
502	A-1129-286-A	s	MOUNTED CIRCUIT BOARD, CN-2678
503	2-139-192-01	s	FRAME, INDICATOR WINDOW
504	2-139-193-02	s	WINDOW INDICATOR
505	2-249-353-00	s	COVER,LAMP
506	3-165-162-01	s	SCREW(+P 2.6X5)(TYPE 1) (ST)
507	3-677-461-11	s	FRONT PANEL
508	3-677-488-01	s	PWB STOPPER
509	3-697-760-01	o	SCREW,COIN
510	3-717-380-01	o	GUARD, REC
511	3-725-295-21	s	SCREW, (+) (B3)
512	9-911-844-99	o	SHEET, SPONGE
513	3-701-439-21	s	WASHER PLASTIC (3.1X0.5)
	7-685-104-19	s	SCREW +PTP 2X6
	7-685-533-14	s	SCREW +BTP 2.6X6


＊:「1-2. 部品交換時の注意事項」を参照してください。
＊ : Refer to Section 1-2, "Note for Replacing Parts".

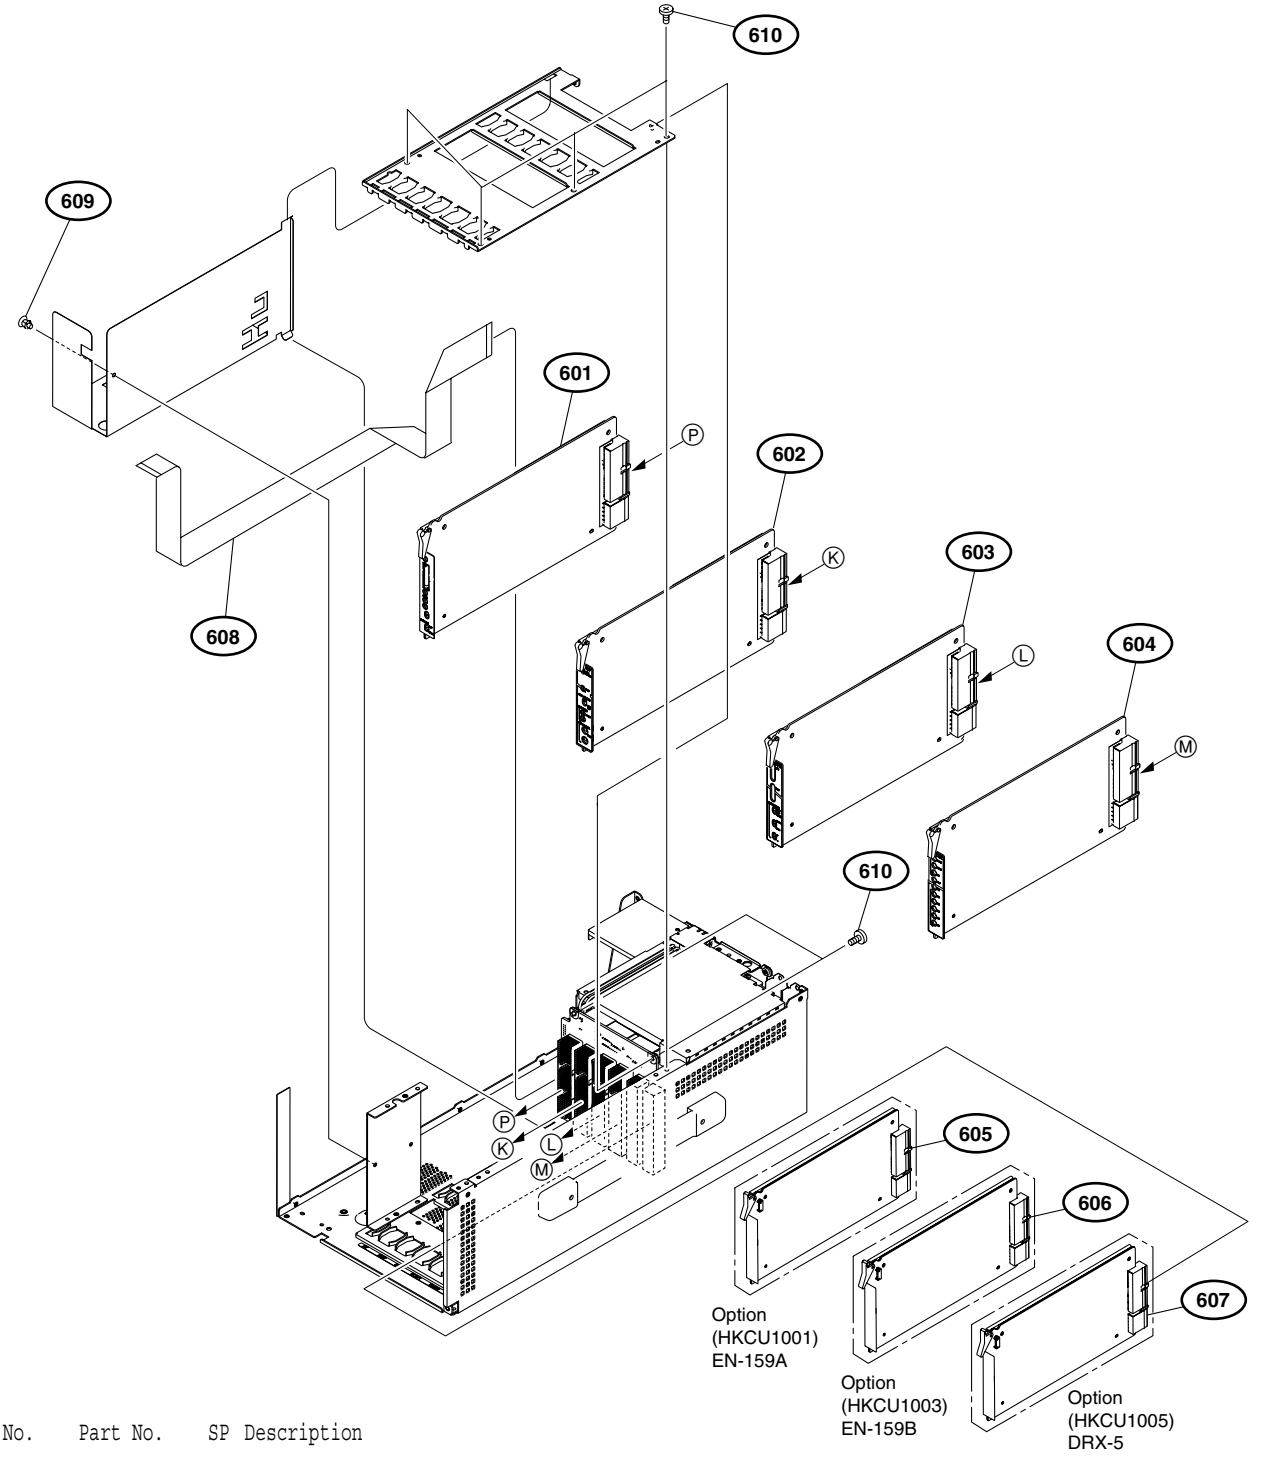

No.	Part No.	SP	Description
601	A-1129-299-A	s	MOUNTED CIRCUIT BOARD, AT-167
602	A-1129-300-A	s	MOUNTED CIRCUIT BOARD, AVP-6
603	A-1129-301-A	s	MOUNTED CIRCUIT BOARD, DTX-5
604	A-1129-302-A	s	MOUNTED CIRCUIT BOARD, DRX-5
605	A-1132-789-A	s	MOUNTED CIRCUIT BOARD, EN-159A (HKCU1001) (OPTION)
606	A-1132-790-A	s	MOUNTED CIRCUIT BOARD, EN-159B (HKCU1003) (OPTION)
607	A-1129-302-A	s	MOUNTED CIRCUIT BOARD, DRX-5 (HKCU1005) (OPTION)
608	＊1-831-665-11	s	CABLE, FLEXIBLE FLAT (45 CORE) (GOLD)
	＊1-830-800-11	s	CABLE, FLEXIBLE FLAT (45 CORE) (SIVER)
609	3-531-576-01	s	RIVET, NYLON
610	3-725-295-21	s	SCREW, (+) (B3)

＊:「1-2. 部品交換時の注意事項」を参照してください。
＊ : Refer to Section 1-2, "Note for Replacing Parts".

Rear Panel (HDCU1500)

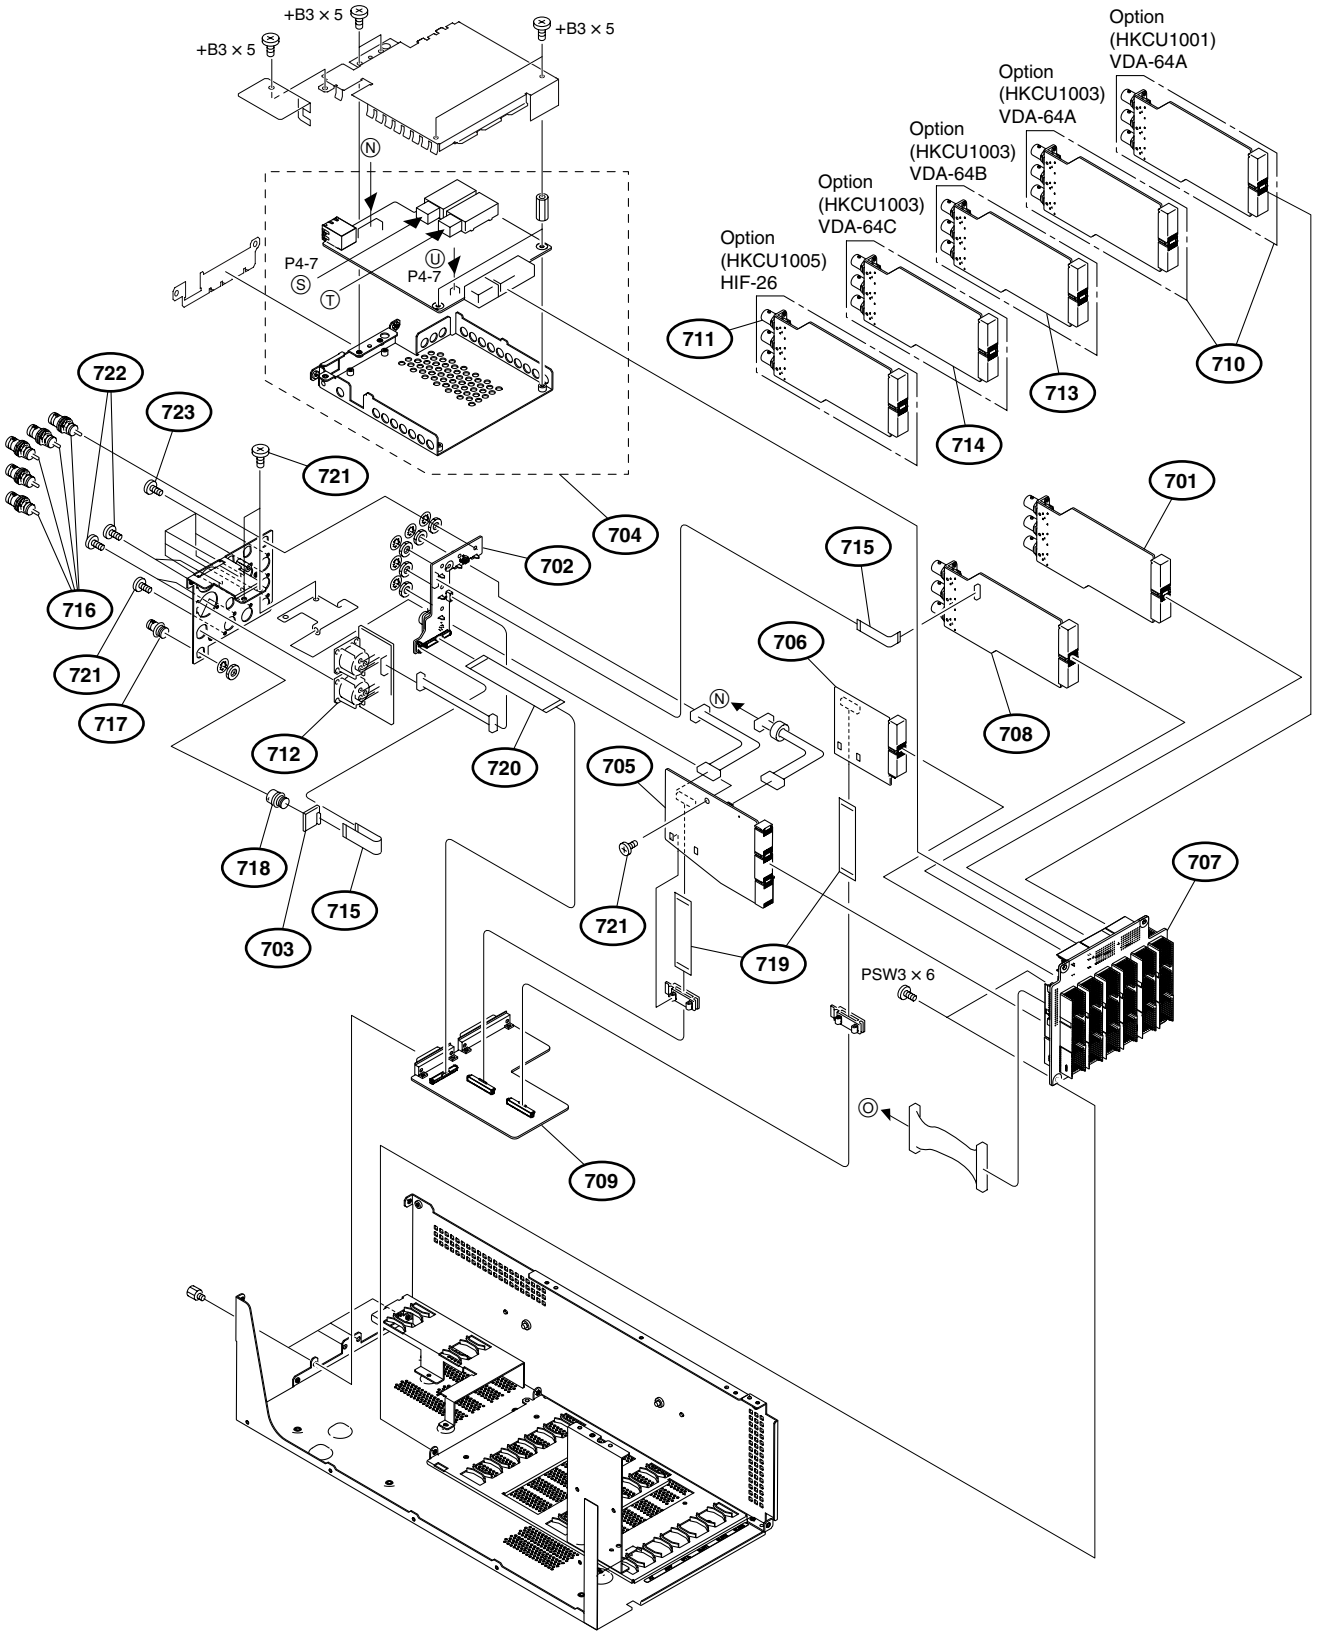

No.	Part No.	SP	Description
701	A-1129-308-A	s	MOUNTED CIRCUIT BOARD, HIF-27
702	＊A-1161-089-A	s	MOUNTED CIRCUIT BOARD, CN-2675G (GOLD)
	＊A-1129-283-A	s	MOUNTED CIRCUIT BOARD, CN-2675 (SILVER)
703	＊A-1161-090-A	s	MOUNTED CIRCUIT BOARD, CN-2677G (GOLD)
	＊A-1129-285-A	s	MOUNTED CIRCUIT BOARD, CN-2677 (SILVER)
704	A-1129-303-B	s	MOUNTED CIRCUIT BOARD, SDP-12
705	＊A-1161-077-A	s	MOUNTED CIRCUIT BOARD, VIF-34BG (GOLD)
	＊A-1151-870-A	s	MOUNTED CIRCUIT BOARD, VIF-34B (SILVER)
706	＊A-1161-078-A	s	MOUNTED CIRCUIT BOARD, ADO-10G (GOLD)
	＊A-1129-230-A	s	MOUNTED CIRCUIT BOARD, ADO-10 (SILVER)
707	＊A-1161-083-A	s	MOUNTED CIRCUIT BOARD, MB-1072G (GOLD)
	＊A-1129-279-A	s	MOUNTED CIRCUIT BOARD, MB-1072 (SILVER)
708	＊A-1161-084-A	s	MOUNTED CIRCUIT BOARD, SDI-87G (GOLD)
	＊A-1129-309-A	s	MOUNTED CIRCUIT BOARD, SDI-87 (SILVER)
709	＊A-1161-088-A	s	MOUNTED CIRCUIT BOARD, CNB-22G (GOLD)
	＊A-1129-287-A	s	MOUNTED CIRCUIT BOARD, CNB-22 (SILVER)
710	A-1132-791-A	s	MOUNTED CIRCUIT BOARD, VDA-64A (HKCU1001/HKCU1003) (OPTION)
711	A-1132-794-A	s	MOUNTED CIRCUIT BOARD, HIF-26(HKCU1005) (OPTION)
712	A-1129-284-A	s	MOUNTED CIRCUIT BOARD, CN-2676
713	A-1132-792-A	s	MOUNTED CIRCUIT BOARD, VDA-64B (HKCU1003) (OPTION)
714	A-1132-793-A	s	MOUNTED CIRCUIT BOARD, VDA-64C (HKCU1003) (OPTION)
715	＊1-831-666-11	s	CABLE, FLEXIBLE FLAT (15 CORE) (GOLD)
	＊1-830-801-11	s	CABLE, FLEXIBLE FLAT (15 CORE) (SILVER)
716	1-561-336-00	s	CONNECTOR,COAXIAL
717	1-766-696-11	o	CONNECTOR, ROUND TYPE 8P
718	1-819-262-11	s	CONNECTOR, ROUND TYPE 12P
719	＊1-831-087-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (GOLD)
	＊1-830-799-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (SILVER)
720	＊1-831-664-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (GOLD)
	＊1-830-798-11	s	CABLE, FLEXIBLE FLAT (50 CORE) (SILVER)
721	3-725-295-21	s	SCREW, (+) (B3)
722	3-165-162-01	s	SCREW (+P 2.6X5) (TYPE 1) (ST)
723	3-364-941-01	s	SCREW (+B) (2.6X5), NYLOK
	7-682-947-01	s	SCREW +PSW 3X6

＊:「1−2. 部品交換時の注意事項」を参照してください。
＊ : Refer to Section 1-2, "Note for Replacing Parts".

4-3. Electrical Parts List

ADO-10/10G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-078-A	s	MOUNTED CIRCUIT BOARD, ADO-10G (GOLD)
1pc	A-1129-230-A	s	MOUNTED CIRCUIT BOARD, ADO-10 (SILVER)
CN2	1-778-451-31	s	CONNECTOR, FFC/FPC(ZIF) AN 50P (GOLD)
	1-778-451-21	o	CONNECTOR, FPC (50P) (SILVER)

AT-167 BOARD (suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-299-A	s	MOUNTED CIRCUIT BOARD, AT-167
1pc	1-528-174-11	s	BATTERY, LITHIUM (CR2032 TYPE)
4pcs	7-682-947-01	s	SCREW +PSW 3X6
BT101	1-756-076-21	s	HOLDER, LITHIUM BATTERY
C1	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C2	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C3	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C4	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C5	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C6	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C7	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C8	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C9	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C10	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C11	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C12	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C13	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C14	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C15	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C16	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C18	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C19	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C20	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C21	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C22	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C23	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C24	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C25	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C26	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C28	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C29	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C30	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C31	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C33	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C34	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C35	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C37	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C38	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C39	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C41	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C101	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C102	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C103	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C104	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C105	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C107	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C108	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C109	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C110	1-104-905-11	s	CAP, DOUBLE LAYERS 0.22F
C111	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C112	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C113	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C115	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C117	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C118	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C119	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C120	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C121	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C122	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C123	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C124	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C125	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C126	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C127	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C128	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C129	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C130	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C131	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C132	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C133	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C134	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C135	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C136	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C137	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C138	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C139	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C140	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C141	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C142	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C143	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C144	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C145	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C146	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C147	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C148	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C149	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C150	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C151	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C152	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C153	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C154	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C155	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C156	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C157	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C158	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C159	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C160	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C161	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C162	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C163	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C164	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C165	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C166	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C167	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C168	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C169	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C170	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C171	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C172	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C173	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C174	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C175	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C176	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C177	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C178	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C179	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C180	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C181	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C182	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C183	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C184	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C185	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C186	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C187	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C188	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C189	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C190	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C191	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C192	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C193	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C194	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C195	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C301	1-164-862-81	s	CAP, CHIP CERAMIC 33PF CH 1005
C302	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C303	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C304	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C305	1-164-862-81	s	CAP, CHIP CERAMIC 33PF CH 1005
C306	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C307	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C308	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C309	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C310	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C311	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C312	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C313	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C314	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C315	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C316	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C317	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C318	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C319	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C320	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C321	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C323	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C324	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C325	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C326	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C327	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C328	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C329	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C330	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C331	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C332	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C333	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C334	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C335	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C336	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C337	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C338	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C339	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C340	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C341	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C342	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C343	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C344	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C401	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C402	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C403	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C404	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C407	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C408	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C409	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C410	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C413	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C414	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C415	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C416	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C417	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C418	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C419	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C601	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C602	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C605	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C606	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C607	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C608	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C609	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C610	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C611	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C612	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C613	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C614	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C615	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C616	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C617	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C618	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C619	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C620	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C621	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C622	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C623	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C624	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C625	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C626	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C627	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C628	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C629	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C630	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C631	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C632	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C701	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C702	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C703	1-164-866-81	s	CAP, CHIP CERAMIC 47PF CH 1005
C704	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C705	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C706	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C708	1-164-858-81	s	CAP, CHIP CERAMIC 22PF CH 1005
C709	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C710	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C711	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C712	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C713	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C716	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C717	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C718	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C719	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C720	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C721	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C722	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C723	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C724	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C725	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C726	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C727	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C728	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C729	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C730	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C731	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C732	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C733	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C734	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C735	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C736	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C738	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C739	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C740	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C741	1-164-882-81	s	CAP,CHIP CERAMIC 220PF CH 1005
C742	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C743	1-164-882-81	s	CAP,CHIP CERAMIC 220PF CH 1005
C744	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C745	1-125-891-91	s	CAP, CHIP CERAMIC0.47MF B 1608
C746	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C747	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C748	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C749	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C750	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C751	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C752	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C753	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C754	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C755	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C756	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C757	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C758	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C759	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C760	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C761	1-164-878-81	s	CAP,CHIP CERAMIC 150PF CH 1005
C762	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C763	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C764	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C765	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C766	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C767	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C768	1-127-956-21	s	CAP, CHIP FILM 0.1MF (3225)
C769	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C770	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C771	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C772	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C773	1-127-956-21	s	CAP, CHIP FILM 0.1MF (3225)
C774	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C775	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C776	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C777	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C778	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C779	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C780	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C781	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C782	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C783	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C784	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C785	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C786	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C787	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C789	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C790	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C791	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C792	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C793	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C796	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C798	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C799	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C801	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C802	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C803	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C804	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C805	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C806	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C807	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C808	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C809	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C810	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C811	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C812	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C813	1-125-891-91	s	CAP, CHIP CERAMIC0.47MF B 1608
C814	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C815	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C816	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C817	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C818	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C819	1-164-858-81	s	CAP, CHIP CERAMIC 22PF CH 1005
C820	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C821	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C822	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C823	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C827	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C829	1-164-878-81	s	CAP,CHIP CERAMIC 150PF CH 1005
C830	1-126-391-21	s	CAP, CHIP ELECT 47MF (5X5.7)
C831	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C833	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C834	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C835	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C836	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C837	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C840	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C841	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C842	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C843	1-127-956-21	s	CAP, CHIP FILM 0.1MF (3225)
C844	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C845	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C846	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C847	1-127-956-21	s	CAP, CHIP FILM 0.1MF (3225)
C848	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C849	1-127-956-21	s	CAP, CHIP FILM 0.1MF (3225)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C850	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C851	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C852	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C853	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C854	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C855	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C856	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C857	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C858	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C859	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C860	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C861	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C862	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C863	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C864	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C865	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C866	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C867	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C868	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C870	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C871	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C873	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C874	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C875	1-164-845-81	s	CAP, CHIP CERAMIC 5PF CH 1005
C876	1-164-845-81	s	CAP, CHIP CERAMIC 5PF CH 1005
CN103	1-794-917-11	s	CONNECTOR, MEMORY STICK
CN104	1-793-093-91	o	CONNECTOR, BOARD TO BOARD 60P
CN301	1-580-057-21	s	PIN, CONNECTOR (SMD) 4P
CN601	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D4	8-719-074-31	s	DIODE CL-196YG-CD-T
D101	8-719-820-42	s	DIODE 1SS302-TE85L
D102	8-719-070-20	s	DIODE RB706F-40
D103	8-719-820-42	s	DIODE 1SS302-TE85L
D104	8-719-820-42	s	DIODE 1SS302-TE85L
D105	8-719-820-42	s	DIODE 1SS302-TE85L
D106	8-719-820-42	s	DIODE 1SS302-TE85L
D107	8-719-820-42	s	DIODE 1SS302-TE85L
D401	8-719-024-81	s	DIODE 1SS300-TE85L
D402	8-719-024-81	s	DIODE 1SS300-TE85L
D403	8-719-024-81	s	DIODE 1SS300-TE85L
D404	8-719-024-81	s	DIODE 1SS300-TE85L
D405	8-719-024-81	s	DIODE 1SS300-TE85L
D406	8-719-024-81	s	DIODE 1SS300-TE85L
D407	8-719-024-81	s	DIODE 1SS300-TE85L
D408	8-719-024-81	s	DIODE 1SS300-TE85L
D409	8-719-074-31	s	DIODE CL-196YG-CD-T
D410	8-719-077-09	s	DIODE CL-196HR-CD-T
D411	8-719-027-83	s	DIODE CL-155UR/G-DT
D412	8-719-027-83	s	DIODE CL-155UR/G-DT
D416	8-719-024-81	s	DIODE 1SS300-TE85L
D417	8-719-024-81	s	DIODE 1SS300-TE85L
D418	8-719-024-81	s	DIODE 1SS300-TE85L
D419	8-719-024-81	s	DIODE 1SS300-TE85L
D420	8-719-024-81	s	DIODE 1SS300-TE85L
D421	8-719-024-81	s	DIODE 1SS300-TE85L
D422	8-719-024-81	s	DIODE 1SS300-TE85L
D423	8-719-024-81	s	DIODE 1SS300-TE85L

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
D425	8-719-024-81	s	DIODE 1SS300-TE85L
D427	8-719-024-81	s	DIODE 1SS300-TE85L
D428	8-719-024-81	s	DIODE 1SS300-TE85L
D429	8-719-024-81	s	DIODE 1SS300-TE85L
D701	8-719-820-42	s	DIODE 1SS302-TE85L
D702	8-719-024-81	s	DIODE 1SS300-TE85L
D703	8-719-820-42	s	DIODE 1SS302-TE85L
D704	8-719-820-42	s	DIODE 1SS302-TE85L
D705	8-719-820-42	s	DIODE 1SS302-TE85L
D706	8-719-820-42	s	DIODE 1SS302-TE85L
D707	8-719-820-42	s	DIODE 1SS302-TE85L
D708	8-719-820-42	s	DIODE 1SS302-TE85L
D709	8-719-070-20	s	DIODE RB706F-40
E1	1-535-877-22	s	CHIP, CHECKER
E2	1-535-877-22	s	CHIP, CHECKER
E4	1-535-877-22	s	CHIP, CHECKER
FB701	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB702	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB703	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB704	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
IC1	6-704-976-01	s	IC ADR381ARTZ-REEL7
IC2	6-700-655-01	s	IC LT1963ES8#TR
IC3	8-759-327-01	s	IC NJM062V(TE2)
IC4	8-759-327-01	s	IC NJM062V(TE2)
IC6	8-759-338-95	s	IC NJM2903V(TE2)
IC101	8-759-678-06	s	IC CAT24WC02WI-TE13
IC102	8-759-523-01	s	IC TC74HC4052AFT(EL)
IC103	8-759-363-26	s	IC RN5VD28AA-TL-FA
IC104	8-759-669-71	s	IC PCF8591T/2
IC105	8-759-648-04	s	IC RTC-4574JE
IC106	8-759-669-44	s	IC SN74LVC74APWR-12
IC107	6-703-461-11	s	IC CY2309ZXC-1HT
IC108	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)
IC110	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC111	8-759-669-42	s	IC SN74LVC138APWR-12
IC112	8-759-669-42	s	IC SN74LVC138APWR-12
IC113	8-759-669-42	s	IC SN74LVC138APWR-12
IC114	8-759-669-68	s	IC SN74CBT3253PWR-12
IC116	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC118	8-759-557-85	s	IC NC7SZ32P5X
IC119	6-705-721-01	s	IC MT48LC8M16A2P-75-Y15WTR
IC120	6-705-721-01	s	IC MT48LC8M16A2P-75-Y15WTR
IC121	8-759-669-42	s	IC SN74LVC138APWR-12
IC122	6-704-988-01	s	IC FM18L08-70-STR
IC123	6-704-988-01	s	IC FM18L08-70-STR
IC124	8-759-543-64	s	IC NC7SZ08P5X
IC125	8-759-669-44	s	IC SN74LVC74APWR-12
IC126	8-759-557-84	s	IC NC7SZ04P5X
IC127	8-759-557-84	s	IC NC7SZ04P5X
IC128	8-759-543-64	s	IC NC7SZ08P5X
IC129	8-759-584-32	s	IC MB86189PFV-G-BND-ER-E1
IC130	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC131	8-759-327-01	s	IC NJM062V(TE2)
IC132	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC133	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)
IC134	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)
IC135	6-706-483-01	s	IC TC7SH02FU(T5RSOYJF)
IC136	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
IC137	8-759-472-43	s	IC 74VHC245MTCX
IC138	8-759-472-43	s	IC 74VHC245MTCX
IC139	8-759-472-43	s	IC 74VHC245MTCX
IC140	8-759-472-43	s	IC 74VHC245MTCX
IC141	8-759-679-55	s	IC SN74LVC08APWR
IC142	8-759-679-55	s	IC SN74LVC08APWR
IC143	8-759-679-55	s	IC SN74LVC08APWR
IC144	8-759-327-01	s	IC NJM062V(TE2)
IC145	8-759-669-66	s	IC TLC272CPWR-12
IC146	8-759-543-64	s	IC NC7SZ08P5X
IC147	8-759-543-64	s	IC NC7SZ08P5X
IC148	8-759-543-64	s	IC NC7SZ08P5X
IC149	8-759-679-55	s	IC SN74LVC08APWR
IC150	8-759-543-64	s	IC NC7SZ08P5X
IC151	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC301	8-759-594-17	o	IC CXD9093R
IC302	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC303	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC304	8-759-594-17	o	IC CXD9093R
IC305	6-702-691-01	s	IC BCM5221A4KPT
IC306	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC307	8-759-471-91	s	IC 74VHC04MTCX
IC308	8-759-092-83	s	IC SN75158PSR
IC309	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC401	8-752-392-03	s	IC CXD1095BR
IC402	6-706-357-01	s	IC LTC1664IGN#TR
IC403	8-759-662-38	s	IC 74VHCT08AMTCX
IC406	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC407	8-752-392-03	s	IC CXD1095BR
IC408	8-759-472-43	s	IC 74VHC245MTCX
IC409	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC410	8-759-471-96	s	IC 74VHC08MTCX
IC411	8-759-471-96	s	IC 74VHC08MTCX
IC602	8-759-363-26	s	IC RN5VD28AA-TL-FA
IC607	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC701	8-759-561-46	s	IC AD8014ARTZ-REEL7
IC702	8-759-327-14	s	IC TL712CPSR
IC703	8-759-327-14	s	IC TL712CPSR
IC704	8-759-327-14	s	IC TL712CPSR
IC705	8-759-344-12	s	IC GS4981CTAE3
IC706	8-759-669-41	s	IC SN74LVC125APWR-12
IC707	8-759-662-38	s	IC 74VHCT08AMTCX
IC708	8-759-485-24	s	IC MC74HC4046ADTR2
IC709	8-759-184-65	s	IC TC4W66FU(TE12R)
IC710	8-759-564-49	s	IC TC7W53FU(TE12R)
IC711	8-759-564-49	s	IC TC7W53FU(TE12R)
IC712	8-759-675-47	s	IC SN74LVC04APWR
IC713	8-759-675-47	s	IC SN74LVC04APWR
IC715	8-759-675-47	s	IC SN74LVC04APWR
IC717	6-700-804-01	s	IC SN74LVC574APWR
IC718	8-759-564-49	s	IC TC7W53FU(TE12R)
IC719	8-759-344-12	s	IC GS4981CTAE3
IC720	8-759-327-14	s	IC TL712CPSR
IC722	8-759-485-24	s	IC MC74HC4046ADTR2
IC723	8-759-564-49	s	IC TC7W53FU(TE12R)
IC724	8-759-564-49	s	IC TC7W53FU(TE12R)
IC726	6-700-804-01	s	IC SN74LVC574APWR
IC727	8-759-471-91	s	IC 74VHC04MTCX
IC728	8-759-561-46	s	IC AD8014ARTZ-REEL7

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
IC729	8-759-669-41	s	IC SN74LVC125APWR-12
IC730	8-759-675-47	s	IC SN74LVC04APWR
IC732	8-759-669-66	s	IC TLC272CPWR-12
IC733	8-759-669-66	s	IC TLC272CPWR-12
IC734	8-759-669-66	s	IC TLC272CPWR-12
IC735	8-759-669-66	s	IC TLC272CPWR-12
IC736	8-759-669-66	s	IC TLC272CPWR-12
IC737	8-759-669-66	s	IC TLC272CPWR-12
IC738	8-759-669-66	s	IC TLC272CPWR-12
IC739	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC740	8-759-669-41	s	IC SN74LVC125APWR-12
IC741	8-759-663-35	s	IC 74VHC4053MTCX
IC742	8-759-663-35	s	IC 74VHC4053MTCX
IC743	8-759-523-04	s	IC TC74HC4538AFT(EL)
IC744	6-706-476-01	s	IC TC7SET04FU(T5RSOJF)
IC745	6-706-476-01	s	IC TC7SET04FU(T5RSOJF)
IC746	6-706-489-01	s	IC TC7SH32FU(T5RSOYJF)
IC747	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC748	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC749	8-759-523-04	s	IC TC74HC4538AFT(EL)
IC750	8-759-669-41	s	IC SN74LVC125APWR-12
IC751	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC752	6-706-489-01	s	IC TC7SH32FU(T5RSOYJF)
IC753	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC755	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC756	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC757	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC758	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC759	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC760	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC761	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC762	8-759-592-42	s	IC TC7SZ00FU(TE85R)
L1	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L101	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L102	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L103	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L104	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L105	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L106	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L107	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L108	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L109	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L110	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L111	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L113	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L114	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L301	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L302	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L303	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L304	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L305	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L401	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L601	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L602	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L701	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L702	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L703	1-414-396-41	s	INDUCTOR (SMD) 4.7UH
L704	1-414-398-41	s	INDUCTOR (SMD) 10.0UH

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
L705	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L706	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L707	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L708	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L709	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L710	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L711	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L712	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L713	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L714	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L715	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L716	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L717	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L718	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L719	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L720	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L724	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L725	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L726	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L727	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L728	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L729	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L730	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L733	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L734	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L735	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L736	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L737	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L738	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L739	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L740	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L741	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L742	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L743	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
PH1	8-749-011-37	s	PHOTO COUPLER TLP181(BL-TPR)
PH301	8-749-014-35	s	IC HCPL-0630-500
PH302	8-749-014-35	s	IC HCPL-0630-500
Q1	8-729-035-99	s	TRANSISTOR 2SA1615-Z-E2
Q2	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q3	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q4	8-729-209-77	s	TRANSISTOR 2SC2873Y-TE12L
Q5	8-729-047-32	s	TRANSISTOR SI4425DY-T1
Q6	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q101	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q102	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q301	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q401	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q402	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q403	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q404	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q405	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q406	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q407	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q408	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q409	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q410	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q411	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q412	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
Q413	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q414	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q415	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q416	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q417	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q418	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q419	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q701	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q702	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q703	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q704	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q705	8-729-142-11	s	TRANSISTOR 2SA1226-T1E3E4
Q706	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q707	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q708	8-729-142-11	s	TRANSISTOR 2SA1226-T1E3E4
Q709	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q710	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
R1	1-208-863-81	s	RES, CHIP 100 (1005)
R2	1-208-875-81	s	RES, CHIP 330 (1005)
R3	1-208-863-81	s	RES, CHIP 100 (1005)
R4	1-208-919-81	s	RES, CHIP 22K (1005)
R5	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R6	1-208-871-81	s	RES, CHIP 220 (1005)
R7	1-208-871-81	s	RES, CHIP 220 (1005)
R8	1-208-871-81	s	RES, CHIP 220 (1005)
R9	1-208-911-81	s	RES, CHIP 10K (1005)
R10	1-208-911-81	s	RES, CHIP 10K (1005)
R11	1-208-923-81	s	RES, CHIP 33K (1005)
R12	1-208-923-81	s	RES, CHIP 33K (1005)
R13	1-208-923-81	s	RES, CHIP 33K (1005)
R14	1-208-923-81	s	RES, CHIP 33K (1005)
R15	1-208-927-81	s	RES, CHIP 47K (1005)
R16	1-208-911-81	s	RES, CHIP 10K (1005)
R17	1-208-911-81	s	RES, CHIP 10K (1005)
R18	1-208-919-81	s	RES, CHIP 22K (1005)
R19	1-208-907-81	s	RES, CHIP 6.8K (1005)
R20	1-208-923-81	s	RES, CHIP 33K (1005)
R22	1-208-931-81	s	RES, CHIP 68K (1005)
R23	1-208-931-81	s	RES, CHIP 68K (1005)
R33	1-208-927-81	s	RES, CHIP 47K (1005)
R34	1-208-915-81	s	RES, CHIP 15K (1005)
R35	1-208-915-81	s	RES, CHIP 15K (1005)
R36	1-208-919-81	s	RES, CHIP 22K (1005)
R41	1-208-887-81	s	RES, CHIP 1.0K (1005)
R43	1-208-927-81	s	RES, CHIP 47K (1005)
R44	1-208-935-81	s	RES, CHIP 100K (1005)
R48	1-208-895-81	s	RES, CHIP 2.2K (1005)
R49	1-208-911-81	s	RES, CHIP 10K (1005)
R50	1-208-919-81	s	RES, CHIP 22K (1005)
R51	1-208-911-81	s	RES, CHIP 10K (1005)
R101	1-220-870-81	s	RES, CHIP 10 (1005)
R102	1-208-911-81	s	RES, CHIP 10K (1005)
R103	1-208-911-81	s	RES, CHIP 10K (1005)
R104	1-208-887-81	s	RES, CHIP 1.0K (1005)
R105	1-208-915-81	s	RES, CHIP 15K (1005)
R106	1-208-863-81	s	RES, CHIP 100 (1005)
R107	1-208-863-81	s	RES, CHIP 100 (1005)
R108	1-208-887-81	s	RES, CHIP 1.0K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R109	1-208-863-81	s	RES, CHIP 100 (1005)
R110	1-208-935-81	s	RES, CHIP 100K (1005)
R111	1-208-911-81	s	RES, CHIP 10K (1005)
R112	1-208-911-81	s	RES, CHIP 10K (1005)
R113	1-208-855-81	s	RES, CHIP 47 (1005)
R115	1-220-870-81	s	RES, CHIP 10 (1005)
R116	1-220-870-81	s	RES, CHIP 10 (1005)
R117	1-220-870-81	s	RES, CHIP 10 (1005)
R118	1-220-870-81	s	RES, CHIP 10 (1005)
R119	1-208-855-81	s	RES, CHIP 47 (1005)
R120	1-208-855-81	s	RES, CHIP 47 (1005)
R121	1-208-911-81	s	RES, CHIP 10K (1005)
R122	1-208-887-81	s	RES, CHIP 1.0K (1005)
R123	1-208-895-81	s	RES, CHIP 2.2K (1005)
R124	1-208-895-81	s	RES, CHIP 2.2K (1005)
R125	1-208-895-81	s	RES, CHIP 2.2K (1005)
R128	1-208-863-81	s	RES, CHIP 100 (1005)
R129	1-208-863-81	s	RES, CHIP 100 (1005)
R130	1-208-887-81	s	RES, CHIP 1.0K (1005)
R131	1-208-935-81	s	RES, CHIP 100K (1005)
R132	1-208-935-81	s	RES, CHIP 100K (1005)
R133	1-208-935-81	s	RES, CHIP 100K (1005)
R134	1-208-935-81	s	RES, CHIP 100K (1005)
R135	1-208-911-81	s	RES, CHIP 10K (1005)
R136	1-208-911-81	s	RES, CHIP 10K (1005)
R137	1-208-863-81	s	RES, CHIP 100 (1005)
R139	1-208-887-81	s	RES, CHIP 1.0K (1005)
R140	1-208-911-81	s	RES, CHIP 10K (1005)
R142	1-208-935-81	s	RES, CHIP 100K (1005)
R144	1-208-887-81	s	RES, CHIP 1.0K (1005)
R147	1-208-863-81	s	RES, CHIP 100 (1005)
R148	1-208-911-81	s	RES, CHIP 10K (1005)
R150	1-208-911-81	s	RES, CHIP 10K (1005)
R151	1-208-855-81	s	RES, CHIP 47 (1005)
R152	1-208-855-81	s	RES, CHIP 47 (1005)
R153	1-208-855-81	s	RES, CHIP 47 (1005)
R154	1-208-855-81	s	RES, CHIP 47 (1005)
R155	1-208-855-81	s	RES, CHIP 47 (1005)
R156	1-208-855-81	s	RES, CHIP 47 (1005)
R157	1-208-855-81	s	RES, CHIP 47 (1005)
R158	1-208-911-81	s	RES, CHIP 10K (1005)
R159	1-208-911-81	s	RES, CHIP 10K (1005)
R160	1-208-911-81	s	RES, CHIP 10K (1005)
R161	1-208-863-81	s	RES, CHIP 100 (1005)
R162	1-208-863-81	s	RES, CHIP 100 (1005)
R163	1-208-863-81	s	RES, CHIP 100 (1005)
R164	1-208-863-81	s	RES, CHIP 100 (1005)
R165	1-208-863-81	s	RES, CHIP 100 (1005)
R166	1-208-863-81	s	RES, CHIP 100 (1005)
R167	1-208-935-81	s	RES, CHIP 100K (1005)
R168	1-208-911-81	s	RES, CHIP 10K (1005)
R169	1-208-911-81	s	RES, CHIP 10K (1005)
R170	1-208-911-81	s	RES, CHIP 10K (1005)
R171	1-208-911-81	s	RES, CHIP 10K (1005)
R172	1-208-911-81	s	RES, CHIP 10K (1005)
R173	1-220-878-81	s	RES, CHIP 22 (1005)
R174	1-208-911-81	s	RES, CHIP 10K (1005)
R175	1-208-911-81	s	RES, CHIP 10K (1005)
R176	1-208-911-81	s	RES, CHIP 10K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R177	1-208-911-81	s	RES, CHIP 10K (1005)
R178	1-208-911-81	s	RES, CHIP 10K (1005)
R179	1-220-878-81	s	RES, CHIP 22 (1005)
R180	1-220-878-81	s	RES, CHIP 22 (1005)
R181	1-208-855-81	s	RES, CHIP 47 (1005)
R182	1-208-855-81	s	RES, CHIP 47 (1005)
R183	1-208-855-81	s	RES, CHIP 47 (1005)
R184	1-208-855-81	s	RES, CHIP 47 (1005)
R185	1-208-855-81	s	RES, CHIP 47 (1005)
R186	1-208-863-81	s	RES, CHIP 100 (1005)
R187	1-208-911-81	s	RES, CHIP 10K (1005)
R188	1-208-935-81	s	RES, CHIP 100K (1005)
R189	1-208-863-81	s	RES, CHIP 100 (1005)
R190	1-208-935-81	s	RES, CHIP 100K (1005)
R191	1-208-935-81	s	RES, CHIP 100K (1005)
R192	1-208-855-81	s	RES, CHIP 47 (1005)
R193	1-208-855-81	s	RES, CHIP 47 (1005)
R194	1-220-870-81	s	RES, CHIP 10 (1005)
R195	1-208-935-81	s	RES, CHIP 100K (1005)
R196	1-208-911-81	s	RES, CHIP 10K (1005)
R197	1-208-911-81	s	RES, CHIP 10K (1005)
R198	1-208-911-81	s	RES, CHIP 10K (1005)
R199	1-208-911-81	s	RES, CHIP 10K (1005)
R200	1-208-911-81	s	RES, CHIP 10K (1005)
R201	1-208-935-81	s	RES, CHIP 100K (1005)
R202	1-208-911-81	s	RES, CHIP 10K (1005)
R203	1-208-911-81	s	RES, CHIP 10K (1005)
R204	1-208-911-81	s	RES, CHIP 10K (1005)
R205	1-208-935-81	s	RES, CHIP 100K (1005)
R206	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R207	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R209	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R210	1-208-911-81	s	RES, CHIP 10K (1005)
R211	1-208-911-81	s	RES, CHIP 10K (1005)
R212	1-220-870-81	s	RES, CHIP 10 (1005)
R213	1-208-935-81	s	RES, CHIP 100K (1005)
R214	1-208-911-81	s	RES, CHIP 10K (1005)
R215	1-208-887-81	s	RES, CHIP 1.0K (1005)
R216	1-220-878-81	s	RES, CHIP 22 (1005)
R217	1-220-878-81	s	RES, CHIP 22 (1005)
R218	1-220-878-81	s	RES, CHIP 22 (1005)
R219	1-220-878-81	s	RES, CHIP 22 (1005)
R220	1-220-878-81	s	RES, CHIP 22 (1005)
R221	1-220-878-81	s	RES, CHIP 22 (1005)
R222	1-208-935-81	s	RES, CHIP 100K (1005)
R223	1-208-935-81	s	RES, CHIP 100K (1005)
R224	1-208-935-81	s	RES, CHIP 100K (1005)
R225	1-208-935-81	s	RES, CHIP 100K (1005)
R227	1-208-927-81	s	RES, CHIP 47K (1005)
R228	1-208-927-81	s	RES, CHIP 47K (1005)
R229	1-208-919-81	s	RES, CHIP 22K (1005)
R230	1-208-911-81	s	RES, CHIP 10K (1005)
R231	1-208-899-81	s	RES, CHIP 3.3K (1005)
R232	1-208-863-81	s	RES, CHIP 100 (1005)
R233	1-208-855-81	s	RES, CHIP 47 (1005)
R234	1-208-863-81	s	RES, CHIP 100 (1005)
R235	1-208-935-81	s	RES, CHIP 100K (1005)
R236	1-208-935-81	s	RES, CHIP 100K (1005)
R237	1-218-990-81	s	CONDUCTOR, CHIP (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R240	1-220-870-81	s	RES, CHIP 10 (1005)
R241	1-220-870-81	s	RES, CHIP 10 (1005)
R242	1-208-855-81	s	RES, CHIP 47 (1005)
R243	1-208-855-81	s	RES, CHIP 47 (1005)
R245	1-220-870-81	s	RES, CHIP 10 (1005)
R246	1-208-863-81	s	RES, CHIP 100 (1005)
R247	1-208-887-81	s	RES, CHIP 1.0K (1005)
R301	1-208-863-81	s	RES, CHIP 100 (1005)
R302	1-208-863-81	s	RES, CHIP 100 (1005)
R303	1-208-871-81	s	RES, CHIP 220 (1005)
R304	1-208-907-81	s	RES, CHIP 6.8K (1005)
R305	1-208-911-81	s	RES, CHIP 10K (1005)
R306	1-208-907-81	s	RES, CHIP 6.8K (1005)
R307	1-208-863-81	s	RES, CHIP 100 (1005)
R308	1-220-870-81	s	RES, CHIP 10 (1005)
R309	1-220-870-81	s	RES, CHIP 10 (1005)
R310	1-220-882-81	s	RES, CHIP 33 (1005)
R311	1-208-911-81	s	RES, CHIP 10K (1005)
R312	1-208-907-81	s	RES, CHIP 6.8K (1005)
R313	1-208-907-81	s	RES, CHIP 6.8K (1005)
R314	1-220-870-81	s	RES, CHIP 10 (1005)
R315	1-208-895-81	s	RES, CHIP 2.2K (1005)
R316	1-208-911-81	s	RES, CHIP 10K (1005)
R317	1-208-911-81	s	RES, CHIP 10K (1005)
R318	1-208-911-81	s	RES, CHIP 10K (1005)
R319	1-208-911-81	s	RES, CHIP 10K (1005)
R320	1-208-911-81	s	RES, CHIP 10K (1005)
R321	1-208-887-81	s	RES, CHIP 1.0K (1005)
R322	1-208-887-81	s	RES, CHIP 1.0K (1005)
R323	1-208-887-81	s	RES, CHIP 1.0K (1005)
R324	1-208-887-81	s	RES, CHIP 1.0K (1005)
R325	1-208-911-81	s	RES, CHIP 10K (1005)
R326	1-208-911-81	s	RES, CHIP 10K (1005)
R327	1-208-911-81	s	RES, CHIP 10K (1005)
R328	1-208-871-81	s	RES, CHIP 220 (1005)
R329	1-208-911-81	s	RES, CHIP 10K (1005)
R330	1-208-911-81	s	RES, CHIP 10K (1005)
R331	1-208-927-81	s	RES, CHIP 47K (1005)
R332	1-208-895-81	s	RES, CHIP 2.2K (1005)
R333	1-208-887-81	s	RES, CHIP 1.0K (1005)
R334	1-208-927-81	s	RES, CHIP 47K (1005)
R335	1-208-871-81	s	RES, CHIP 220 (1005)
R337	1-208-911-81	s	RES, CHIP 10K (1005)
R338	1-208-911-81	s	RES, CHIP 10K (1005)
R339	1-208-911-81	s	RES, CHIP 10K (1005)
R340	1-208-911-81	s	RES, CHIP 10K (1005)
R341	1-208-887-81	s	RES, CHIP 1.0K (1005)
R342	1-208-887-81	s	RES, CHIP 1.0K (1005)
R343	1-208-887-81	s	RES, CHIP 1.0K (1005)
R344	1-208-911-81	s	RES, CHIP 10K (1005)
R345	1-208-911-81	s	RES, CHIP 10K (1005)
R346	1-208-911-81	s	RES, CHIP 10K (1005)
R347	1-220-878-81	s	RES, CHIP 22 (1005)
R348	1-208-903-81	s	RES, CHIP 4.7K (1005)
R349	1-208-887-81	s	RES, CHIP 1.0K (1005)
R350	1-208-871-81	s	RES, CHIP 220 (1005)
R351	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R352	1-220-882-81	s	RES, CHIP 33 (1005)
R353	1-220-882-81	s	RES, CHIP 33 (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R354	1-208-863-81	s	RES, CHIP 100 (1005)
R355	1-208-863-81	s	RES, CHIP 100 (1005)
R356	1-208-863-81	s	RES, CHIP 100 (1005)
R357	1-208-863-81	s	RES, CHIP 100 (1005)
R358	1-208-863-81	s	RES, CHIP 100 (1005)
R359	1-208-863-81	s	RES, CHIP 100 (1005)
R360	1-208-863-81	s	RES, CHIP 100 (1005)
R361	1-208-863-81	s	RES, CHIP 100 (1005)
R362	1-208-891-81	s	RES, CHIP 1.5K (1005)
R363	1-208-903-81	s	RES, CHIP 4.7K (1005)
R364	1-220-870-81	s	RES, CHIP 10 (1005)
R401	1-208-935-81	s	RES, CHIP 100K (1005)
R402	1-208-935-81	s	RES, CHIP 100K (1005)
R403	1-208-935-81	s	RES, CHIP 100K (1005)
R404	1-208-935-81	s	RES, CHIP 100K (1005)
R405	1-220-870-81	s	RES, CHIP 10 (1005)
R406	1-208-927-81	s	RES, CHIP 47K (1005)
R407	1-208-927-81	s	RES, CHIP 47K (1005)
R408	1-208-927-81	s	RES, CHIP 47K (1005)
R409	1-208-927-81	s	RES, CHIP 47K (1005)
R410	1-208-919-81	s	RES, CHIP 22K (1005)
R411	1-208-919-81	s	RES, CHIP 22K (1005)
R412	1-208-919-81	s	RES, CHIP 22K (1005)
R413	1-208-919-81	s	RES, CHIP 22K (1005)
R414	1-208-887-81	s	RES, CHIP 1.0K (1005)
R415	1-208-911-81	s	RES, CHIP 10K (1005)
R416	1-208-895-81	s	RES, CHIP 2.2K (1005)
R417	1-208-895-81	s	RES, CHIP 2.2K (1005)
R418	1-208-895-81	s	RES, CHIP 2.2K (1005)
R419	1-208-895-81	s	RES, CHIP 2.2K (1005)
R420	1-208-919-81	s	RES, CHIP 22K (1005)
R421	1-208-919-81	s	RES, CHIP 22K (1005)
R422	1-208-927-81	s	RES, CHIP 47K (1005)
R423	1-208-927-81	s	RES, CHIP 47K (1005)
R424	1-208-863-81	s	RES, CHIP 100 (1005)
R425	1-208-863-81	s	RES, CHIP 100 (1005)
R426	1-208-863-81	s	RES, CHIP 100 (1005)
R427	1-208-863-81	s	RES, CHIP 100 (1005)
R430	1-208-863-81	s	RES, CHIP 100 (1005)
R431	1-208-863-81	s	RES, CHIP 100 (1005)
R432	1-208-887-81	s	RES, CHIP 1.0K (1005)
R433	1-208-863-81	s	RES, CHIP 100 (1005)
R434	1-208-863-81	s	RES, CHIP 100 (1005)
R435	1-208-863-81	s	RES, CHIP 100 (1005)
R436	1-208-863-81	s	RES, CHIP 100 (1005)
R437	1-208-863-81	s	RES, CHIP 100 (1005)
R438	1-208-863-81	s	RES, CHIP 100 (1005)
R440	1-208-927-81	s	RES, CHIP 47K (1005)
R441	1-208-927-81	s	RES, CHIP 47K (1005)
R442	1-208-927-81	s	RES, CHIP 47K (1005)
R445	1-208-863-81	s	RES, CHIP 100 (1005)
R446	1-208-863-81	s	RES, CHIP 100 (1005)
R447	1-208-863-81	s	RES, CHIP 100 (1005)
R448	1-220-870-81	s	RES, CHIP 10 (1005)
R449	1-220-870-81	s	RES, CHIP 10 (1005)
R450	1-208-919-81	s	RES, CHIP 22K (1005)
R451	1-208-911-81	s	RES, CHIP 10K (1005)
R452	1-220-870-81	s	RES, CHIP 10 (1005)
R453	1-208-887-81	s	RES, CHIP 1.0K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R454	1-208-927-81	s	RES, CHIP 47K (1005)
R455	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R456	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R457	1-208-927-81	s	RES, CHIP 47K (1005)
R458	1-208-927-81	s	RES, CHIP 47K (1005)
R459	1-208-911-81	s	RES, CHIP 10K (1005)
R460	1-208-911-81	s	RES, CHIP 10K (1005)
R461	1-208-911-81	s	RES, CHIP 10K (1005)
R462	1-208-911-81	s	RES, CHIP 10K (1005)
R463	1-208-927-81	s	RES, CHIP 47K (1005)
R464	1-208-935-81	s	RES, CHIP 100K (1005)
R467	1-208-863-81	s	RES, CHIP 100 (1005)
R468	1-208-863-81	s	RES, CHIP 100 (1005)
R469	1-208-863-81	s	RES, CHIP 100 (1005)
R470	1-208-863-81	s	RES, CHIP 100 (1005)
R471	1-208-903-81	s	RES, CHIP 4.7K (1005)
R472	1-208-923-81	s	RES, CHIP 33K (1005)
R473	1-208-903-81	s	RES, CHIP 4.7K (1005)
R474	1-208-935-81	s	RES, CHIP 100K (1005)
R476	1-208-903-81	s	RES, CHIP 4.7K (1005)
R477	1-208-903-81	s	RES, CHIP 4.7K (1005)
R478	1-208-911-81	s	RES, CHIP 10K (1005)
R479	1-208-911-81	s	RES, CHIP 10K (1005)
R480	1-208-927-81	s	RES, CHIP 47K (1005)
R481	1-208-935-81	s	RES, CHIP 100K (1005)
R482	1-208-871-81	s	RES, CHIP 220 (1005)
R483	1-208-875-81	s	RES, CHIP 330 (1005)
R484	1-208-875-81	s	RES, CHIP 330 (1005)
R485	1-208-863-81	s	RES, CHIP 100 (1005)
R486	1-208-871-81	s	RES, CHIP 220 (1005)
R487	1-208-935-81	s	RES, CHIP 100K (1005)
R488	1-208-863-81	s	RES, CHIP 100 (1005)
R489	1-208-863-81	s	RES, CHIP 100 (1005)
R490	1-208-863-81	s	RES, CHIP 100 (1005)
R492	1-208-887-81	s	RES, CHIP 1.0K (1005)
R493	1-208-887-81	s	RES, CHIP 1.0K (1005)
R494	1-208-887-81	s	RES, CHIP 1.0K (1005)
R495	1-208-887-81	s	RES, CHIP 1.0K (1005)
R496	1-208-887-81	s	RES, CHIP 1.0K (1005)
R497	1-208-935-81	s	RES, CHIP 100K (1005)
R498	1-208-935-81	s	RES, CHIP 100K (1005)
R499	1-208-935-81	s	RES, CHIP 100K (1005)
R500	1-208-935-81	s	RES, CHIP 100K (1005)
R501	1-208-935-81	s	RES, CHIP 100K (1005)
R502	1-208-935-81	s	RES, CHIP 100K (1005)
R503	1-208-887-81	s	RES, CHIP 1.0K (1005)
R504	1-208-887-81	s	RES, CHIP 1.0K (1005)
R505	1-208-887-81	s	RES, CHIP 1.0K (1005)
R506	1-208-935-81	s	RES, CHIP 100K (1005)
R507	1-208-935-81	s	RES, CHIP 100K (1005)
R508	1-208-935-81	s	RES, CHIP 100K (1005)
R509	1-208-863-81	s	RES, CHIP 100 (1005)
R510	1-208-927-81	s	RES, CHIP 47K (1005)
R511	1-208-927-81	s	RES, CHIP 47K (1005)
R512	1-208-863-81	s	RES, CHIP 100 (1005)
R513	1-208-927-81	s	RES, CHIP 47K (1005)
R514	1-208-935-81	s	RES, CHIP 100K (1005)
R515	1-208-927-81	s	RES, CHIP 47K (1005)
R516	1-208-919-81	s	RES, CHIP 22K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R517	1-208-923-81	s	RES, CHIP 33K (1005)
R518	1-208-911-81	s	RES, CHIP 10K (1005)
R519	1-208-919-81	s	RES, CHIP 22K (1005)
R520	1-208-911-81	s	RES, CHIP 10K (1005)
R521	1-208-927-81	s	RES, CHIP 47K (1005)
R522	1-208-919-81	s	RES, CHIP 22K (1005)
R601	1-208-911-81	s	RES, CHIP 10K (1005)
R602	1-208-911-81	s	RES, CHIP 10K (1005)
R603	1-208-887-81	s	RES, CHIP 1.0K (1005)
R604	1-208-863-81	s	RES, CHIP 100 (1005)
R605	1-208-863-81	s	RES, CHIP 100 (1005)
R606	1-208-911-81	s	RES, CHIP 10K (1005)
R607	1-208-911-81	s	RES, CHIP 10K (1005)
R608	1-208-927-81	s	RES, CHIP 47K (1005)
R609	1-208-911-81	s	RES, CHIP 10K (1005)
R610	1-208-855-81	s	RES, CHIP 47 (1005)
R611	1-208-855-81	s	RES, CHIP 47 (1005)
R614	1-220-870-81	s	RES, CHIP 10 (1005)
R615	1-208-911-81	s	RES, CHIP 10K (1005)
R617	1-208-911-81	s	RES, CHIP 10K (1005)
R618	1-208-863-81	s	RES, CHIP 100 (1005)
R619	1-208-863-81	s	RES, CHIP 100 (1005)
R620	1-208-863-81	s	RES, CHIP 100 (1005)
R621	1-208-863-81	s	RES, CHIP 100 (1005)
R622	1-208-863-81	s	RES, CHIP 100 (1005)
R623	1-208-863-81	s	RES, CHIP 100 (1005)
R624	1-208-863-81	s	RES, CHIP 100 (1005)
R625	1-208-863-81	s	RES, CHIP 100 (1005)
R626	1-208-863-81	s	RES, CHIP 100 (1005)
R627	1-208-863-81	s	RES, CHIP 100 (1005)
R628	1-208-863-81	s	RES, CHIP 100 (1005)
R629	1-208-863-81	s	RES, CHIP 100 (1005)
R630	1-220-870-81	s	RES, CHIP 10 (1005)
R631	1-208-895-81	s	RES, CHIP 2.2K (1005)
R633	1-208-863-81	s	RES, CHIP 100 (1005)
R700	1-208-883-81	s	RES, CHIP 680 (1005)
R701	1-208-875-81	s	RES, CHIP 330 (1005)
R702	1-208-887-81	s	RES, CHIP 1.0K (1005)
R703	1-208-879-81	s	RES, CHIP 470 (1005)
R704	1-208-863-81	s	RES, CHIP 100 (1005)
R705	1-208-863-81	s	RES, CHIP 100 (1005)
R706	1-208-863-81	s	RES, CHIP 100 (1005)
R707	1-208-891-81	s	RES, CHIP 1.5K (1005)
R709	1-208-903-81	s	RES, CHIP 4.7K (1005)
R710	1-208-927-81	s	RES, CHIP 47K (1005)
R711	1-208-863-81	s	RES, CHIP 100 (1005)
R712	1-208-863-81	s	RES, CHIP 100 (1005)
R713	1-208-863-81	s	RES, CHIP 100 (1005)
R714	1-208-895-81	s	RES, CHIP 2.2K (1005)
R715	1-208-887-81	s	RES, CHIP 1.0K (1005)
R716	1-208-919-81	s	RES, CHIP 22K (1005)
R717	1-208-855-81	s	RES, CHIP 47 (1005)
R718	1-208-855-81	s	RES, CHIP 47 (1005)
R719	1-208-871-81	s	RES, CHIP 220 (1005)
R720	1-208-863-81	s	RES, CHIP 100 (1005)
R721	1-208-863-81	s	RES, CHIP 100 (1005)
R722	1-208-895-81	s	RES, CHIP 2.2K (1005)
R723	1-208-895-81	s	RES, CHIP 2.2K (1005)
R724	1-208-915-81	s	RES, CHIP 15K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R725	1-208-887-81	s	RES, CHIP 1.0K (1005)
R726	1-220-870-81	s	RES, CHIP 10 (1005)
R727	1-208-855-81	s	RES, CHIP 47 (1005)
R729	1-208-863-81	s	RES, CHIP 100 (1005)
R730	1-208-879-81	s	RES, CHIP 470 (1005)
R731	1-220-870-81	s	RES, CHIP 10 (1005)
R732	1-220-870-81	s	RES, CHIP 10 (1005)
R733	1-208-895-81	s	RES, CHIP 2.2K (1005)
R734	1-220-870-81	s	RES, CHIP 10 (1005)
R735	1-220-870-81	s	RES, CHIP 10 (1005)
R736	1-208-863-81	s	RES, CHIP 100 (1005)
R737	1-208-875-81	s	RES, CHIP 330 (1005)
R738	1-208-871-81	s	RES, CHIP 220 (1005)
R739	1-208-915-81	s	RES, CHIP 15K (1005)
R740	1-220-870-81	s	RES, CHIP 10 (1005)
R741	1-208-903-81	s	RES, CHIP 4.7K (1005)
R742	1-220-870-81	s	RES, CHIP 10 (1005)
R743	1-208-903-81	s	RES, CHIP 4.7K (1005)
R744	1-208-863-81	s	RES, CHIP 100 (1005)
R745	1-208-899-81	s	RES, CHIP 3.3K (1005)
R746	1-208-911-81	s	RES, CHIP 10K (1005)
R747	1-208-879-81	s	RES, CHIP 470 (1005)
R748	1-208-911-81	s	RES, CHIP 10K (1005)
R749	1-208-863-81	s	RES, CHIP 100 (1005)
R750	1-208-879-81	s	RES, CHIP 470 (1005)
R751	1-208-903-81	s	RES, CHIP 4.7K (1005)
R752	1-208-911-81	s	RES, CHIP 10K (1005)
R753	1-208-919-81	s	RES, CHIP 22K (1005)
R754	1-208-903-81	s	RES, CHIP 4.7K (1005)
R755	1-208-855-81	s	RES, CHIP 47 (1005)
R756	1-208-895-81	s	RES, CHIP 2.2K (1005)
R757	1-208-911-81	s	RES, CHIP 10K (1005)
R758	1-208-919-81	s	RES, CHIP 22K (1005)
R759	1-208-915-81	s	RES, CHIP 15K (1005)
R760	1-208-879-81	s	RES, CHIP 470 (1005)
R761	1-208-879-81	s	RES, CHIP 470 (1005)
R762	1-208-919-81	s	RES, CHIP 22K (1005)
R763	1-208-947-81	s	RES, CHIP 330K (1005)
R764	1-208-955-81	s	RES, CHIP 680K (1005)
R765	1-208-899-81	s	RES, CHIP 3.3K (1005)
R766	1-208-911-81	s	RES, CHIP 10K (1005)
R767	1-208-863-81	s	RES, CHIP 100 (1005)
R768	1-208-863-81	s	RES, CHIP 100 (1005)
R769	1-208-911-81	s	RES, CHIP 10K (1005)
R770	1-208-863-81	s	RES, CHIP 100 (1005)
R771	1-208-903-81	s	RES, CHIP 4.7K (1005)
R772	1-208-863-81	s	RES, CHIP 100 (1005)
R773	1-208-863-81	s	RES, CHIP 100 (1005)
R774	1-208-903-81	s	RES, CHIP 4.7K (1005)
R775	1-208-863-81	s	RES, CHIP 100 (1005)
R776	1-208-863-81	s	RES, CHIP 100 (1005)
R777	1-208-895-81	s	RES, CHIP 2.2K (1005)
R778	1-208-863-81	s	RES, CHIP 100 (1005)
R779	1-208-855-81	s	RES, CHIP 47 (1005)
R780	1-208-935-81	s	RES, CHIP 100K (1005)
R781	1-208-863-81	s	RES, CHIP 100 (1005)
R782	1-208-863-81	s	RES, CHIP 100 (1005)
R783	1-208-855-81	s	RES, CHIP 47 (1005)
R784	1-208-863-81	s	RES, CHIP 100 (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R785	1-208-863-81	s	RES, CHIP 100 (1005)
R786	1-208-863-81	s	RES, CHIP 100 (1005)
R787	1-208-863-81	s	RES, CHIP 100 (1005)
R788	1-208-903-81	s	RES, CHIP 4.7K (1005)
R789	1-208-903-81	s	RES, CHIP 4.7K (1005)
R790	1-208-863-81	s	RES, CHIP 100 (1005)
R791	1-208-863-81	s	RES, CHIP 100 (1005)
R792	1-208-863-81	s	RES, CHIP 100 (1005)
R793	1-208-955-81	s	RES, CHIP 680K (1005)
R794	1-208-863-81	s	RES, CHIP 100 (1005)
R795	1-208-919-81	s	RES, CHIP 22K (1005)
R796	1-208-911-81	s	RES, CHIP 10K (1005)
R797	1-208-895-81	s	RES, CHIP 2.2K (1005)
R798	1-208-903-81	s	RES, CHIP 4.7K (1005)
R799	1-208-919-81	s	RES, CHIP 22K (1005)
R800	1-208-895-81	s	RES, CHIP 2.2K (1005)
R801	1-208-863-81	s	RES, CHIP 100 (1005)
R802	1-208-863-81	s	RES, CHIP 100 (1005)
R803	1-208-927-81	s	RES, CHIP 47K (1005)
R804	1-208-927-81	s	RES, CHIP 47K (1005)
R805	1-208-855-81	s	RES, CHIP 47 (1005)
R806	1-208-887-81	s	RES, CHIP 1.0K (1005)
R807	1-208-903-81	s	RES, CHIP 4.7K (1005)
R808	1-208-911-81	s	RES, CHIP 10K (1005)
R809	1-208-911-81	s	RES, CHIP 10K (1005)
R810	1-208-895-81	s	RES, CHIP 2.2K (1005)
R811	1-244-161-81	s	RES, CHIP 2.2 (1005)
R812	1-244-161-81	s	RES, CHIP 2.2 (1005)
R813	1-244-161-81	s	RES, CHIP 2.2 (1005)
R814	1-244-161-81	s	RES, CHIP 2.2 (1005)
R815	1-208-919-81	s	RES, CHIP 22K (1005)
R816	1-220-870-81	s	RES, CHIP 10 (1005)
R817	1-208-907-81	s	RES, CHIP 6.8K (1005)
R818	1-244-161-81	s	RES, CHIP 2.2 (1005)
R819	1-208-863-81	s	RES, CHIP 100 (1005)
R820	1-220-870-81	s	RES, CHIP 10 (1005)
R821	1-220-870-81	s	RES, CHIP 10 (1005)
R822	1-208-955-81	s	RES, CHIP 680K (1005)
R823	1-208-939-81	s	RES, CHIP 150K (1005)
R824	1-208-951-81	s	RES, CHIP 470K (1005)
R825	1-220-870-81	s	RES, CHIP 10 (1005)
R826	1-208-935-81	s	RES, CHIP 100K (1005)
R827	1-208-895-81	s	RES, CHIP 2.2K (1005)
R828	1-208-863-81	s	RES, CHIP 100 (1005)
R829	1-208-895-81	s	RES, CHIP 2.2K (1005)
R830	1-208-895-81	s	RES, CHIP 2.2K (1005)
R831	1-220-870-81	s	RES, CHIP 10 (1005)
R832	1-220-870-81	s	RES, CHIP 10 (1005)
R833	1-208-887-81	s	RES, CHIP 1.0K (1005)
R834	1-208-895-81	s	RES, CHIP 2.2K (1005)
R835	1-244-161-81	s	RES, CHIP 2.2 (1005)
R836	1-244-161-81	s	RES, CHIP 2.2 (1005)
R837	1-244-161-81	s	RES, CHIP 2.2 (1005)
R839	1-208-855-81	s	RES, CHIP 47 (1005)
R840	1-208-863-81	s	RES, CHIP 100 (1005)
R841	1-208-903-81	s	RES, CHIP 4.7K (1005)
R842	1-208-855-81	s	RES, CHIP 47 (1005)
R843	1-208-855-81	s	RES, CHIP 47 (1005)
R844	1-208-899-81	s	RES, CHIP 3.3K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R845	1-208-919-81	s	RES, CHIP 22K (1005)
R846	1-208-863-81	s	RES, CHIP 100 (1005)
R847	1-208-895-81	s	RES, CHIP 2.2K (1005)
R848	1-208-911-81	s	RES, CHIP 10K (1005)
R851	1-208-919-81	s	RES, CHIP 22K (1005)
R852	1-208-915-81	s	RES, CHIP 15K (1005)
R853	1-208-911-81	s	RES, CHIP 10K (1005)
R854	1-208-863-81	s	RES, CHIP 100 (1005)
R855	1-208-919-81	s	RES, CHIP 22K (1005)
R856	1-208-947-81	s	RES, CHIP 330K (1005)
R857	1-208-855-81	s	RES, CHIP 47 (1005)
R858	1-208-903-81	s	RES, CHIP 4.7K (1005)
R859	1-208-855-81	s	RES, CHIP 47 (1005)
R861	1-208-863-81	s	RES, CHIP 100 (1005)
R862	1-208-863-81	s	RES, CHIP 100 (1005)
R863	1-208-899-81	s	RES, CHIP 3.3K (1005)
R864	1-208-911-81	s	RES, CHIP 10K (1005)
R865	1-208-863-81	s	RES, CHIP 100 (1005)
R866	1-208-911-81	s	RES, CHIP 10K (1005)
R867	1-208-863-81	s	RES, CHIP 100 (1005)
R868	1-208-911-81	s	RES, CHIP 10K (1005)
R869	1-208-863-81	s	RES, CHIP 100 (1005)
R870	1-208-903-81	s	RES, CHIP 4.7K (1005)
R871	1-208-907-81	s	RES, CHIP 6.8K (1005)
R872	1-208-887-81	s	RES, CHIP 1.0K (1005)
R879	1-208-903-81	s	RES, CHIP 4.7K (1005)
R880	1-208-863-81	s	RES, CHIP 100 (1005)
R883	1-208-863-81	s	RES, CHIP 100 (1005)
R885	1-208-863-81	s	RES, CHIP 100 (1005)
R887	1-208-863-81	s	RES, CHIP 100 (1005)
R888	1-208-863-81	s	RES, CHIP 100 (1005)
R889	1-208-863-81	s	RES, CHIP 100 (1005)
R890	1-208-863-81	s	RES, CHIP 100 (1005)
R891	1-208-863-81	s	RES, CHIP 100 (1005)
R893	1-208-863-81	s	RES, CHIP 100 (1005)
R894	1-208-863-81	s	RES, CHIP 100 (1005)
R897	1-208-863-81	s	RES, CHIP 100 (1005)
R900	1-208-903-81	s	RES, CHIP 4.7K (1005)
R902	1-208-903-81	s	RES, CHIP 4.7K (1005)
R903	1-208-911-81	s	RES, CHIP 10K (1005)
R904	1-208-911-81	s	RES, CHIP 10K (1005)
R905	1-208-911-81	s	RES, CHIP 10K (1005)
R906	1-208-895-81	s	RES, CHIP 2.2K (1005)
R907	1-208-895-81	s	RES, CHIP 2.2K (1005)
R908	1-208-923-81	s	RES, CHIP 33K (1005)
R909	1-208-895-81	s	RES, CHIP 2.2K (1005)
R910	1-220-870-81	s	RES, CHIP 10 (1005)
R911	1-208-895-81	s	RES, CHIP 2.2K (1005)
R912	1-208-927-81	s	RES, CHIP 47K (1005)
R913	1-208-927-81	s	RES, CHIP 47K (1005)
R914	1-208-887-81	s	RES, CHIP 1.0K (1005)
R915	1-220-870-81	s	RES, CHIP 10 (1005)
R916	1-220-870-81	s	RES, CHIP 10 (1005)
R917	1-220-870-81	s	RES, CHIP 10 (1005)
R918	1-208-903-81	s	RES, CHIP 4.7K (1005)
R919	1-208-911-81	s	RES, CHIP 10K (1005)
R920	1-208-911-81	s	RES, CHIP 10K (1005)
R921	1-208-903-81	s	RES, CHIP 4.7K (1005)
R922	1-208-935-81	s	RES, CHIP 100K (1005)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R923	1-244-161-81	s	RES, CHIP 2.2 (1005)
R924	1-208-891-81	s	RES, CHIP 1.5K (1005)
R925	1-208-891-81	s	RES, CHIP 1.5K (1005)
R926	1-208-891-81	s	RES, CHIP 1.5K (1005)
R927	1-208-911-81	s	RES, CHIP 10K (1005)
R928	1-208-903-81	s	RES, CHIP 4.7K (1005)
R929	1-244-161-81	s	RES, CHIP 2.2 (1005)
R930	1-244-161-81	s	RES, CHIP 2.2 (1005)
R931	1-244-161-81	s	RES, CHIP 2.2 (1005)
R932	1-208-935-81	s	RES, CHIP 100K (1005)
R933	1-244-161-81	s	RES, CHIP 2.2 (1005)
R934	1-208-871-81	s	RES, CHIP 220 (1005)
R935	1-208-871-81	s	RES, CHIP 220 (1005)
R936	1-208-863-81	s	RES, CHIP 100 (1005)
R937	1-208-863-81	s	RES, CHIP 100 (1005)
R938	1-208-911-81	s	RES, CHIP 10K (1005)
R939	1-208-915-81	s	RES, CHIP 15K (1005)
R940	1-208-887-81	s	RES, CHIP 1.0K (1005)
R941	1-208-899-81	s	RES, CHIP 3.3K (1005)
R942	1-208-919-81	s	RES, CHIP 22K (1005)
R943	1-208-887-81	s	RES, CHIP 1.0K (1005)
R944	1-208-899-81	s	RES, CHIP 3.3K (1005)
R945	1-208-919-81	s	RES, CHIP 22K (1005)
R946	1-208-871-81	s	RES, CHIP 220 (1005)
R947	1-208-863-81	s	RES, CHIP 100 (1005)
R948	1-208-895-81	s	RES, CHIP 2.2K (1005)
R950	1-208-875-81	s	RES, CHIP 330 (1005)
R954	1-208-863-81	s	RES, CHIP 100 (1005)
R958	1-208-867-81	s	RES, CHIP 150 (1005)
R959	1-208-887-81	s	RES, CHIP 1.0K (1005)
R960	1-208-867-81	s	RES, CHIP 150 (1005)
R961	1-208-887-81	s	RES, CHIP 1.0K (1005)
R962	1-220-870-81	s	RES, CHIP 10 (1005)
R963	1-220-870-81	s	RES, CHIP 10 (1005)
R964	1-220-870-81	s	RES, CHIP 10 (1005)
R965	1-220-870-81	s	RES, CHIP 10 (1005)
R966	1-220-870-81	s	RES, CHIP 10 (1005)
R967	1-220-870-81	s	RES, CHIP 10 (1005)
R969	1-208-863-81	s	RES, CHIP 100 (1005)
R970	1-208-863-81	s	RES, CHIP 100 (1005)
R972	1-208-855-81	s	RES, CHIP 47 (1005)
R973	1-208-855-81	s	RES, CHIP 47 (1005)
RB101	1-233-810-21	s	RES, NETWORK 100K (3216)
RB102	1-233-810-21	s	RES, NETWORK 100K (3216)
RB103	1-233-810-21	s	RES, NETWORK 100K (3216)
RB104	1-233-810-21	s	RES, NETWORK 100K (3216)
RB105	1-233-810-21	s	RES, NETWORK 100K (3216)
RB106	1-233-810-21	s	RES, NETWORK 100K (3216)
RB107	1-233-810-21	s	RES, NETWORK 100K (3216)
RB108	1-233-810-21	s	RES, NETWORK 100K (3216)
RB109	1-233-810-21	s	RES, NETWORK 100K (3216)
RB110	1-233-810-21	s	RES, NETWORK 100K (3216)
RB111	1-233-810-21	s	RES, NETWORK 100K (3216)
RB112	1-233-810-21	s	RES, NETWORK 100K (3216)
RB113	1-233-810-21	s	RES, NETWORK 100K (3216)
RB114	1-233-810-21	s	RES, NETWORK 100K (3216)
RB115	1-233-810-21	s	RES, NETWORK 100K (3216)
RB116	1-233-810-21	s	RES, NETWORK 100K (3216)

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
RB117	1-233-810-21	s	RES, NETWORK 100K (3216)
RB118	1-233-810-21	s	RES, NETWORK 100K (3216)
RB119	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB120	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB121	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB123	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB124	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB125	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB126	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB401	1-233-810-21	s	RES, NETWORK 100K (3216)
RB402	1-233-810-21	s	RES, NETWORK 100K (3216)
RB403	1-233-810-21	s	RES, NETWORK 100K (3216)
RB404	1-233-810-21	s	RES, NETWORK 100K (3216)
RB405	1-233-810-21	s	RES, NETWORK 100K (3216)
RB406	1-233-810-21	s	RES, NETWORK 100K (3216)
RB407	1-233-810-21	s	RES, NETWORK 100K (3216)
RB420	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB421	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB422	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB423	1-233-810-21	s	RES, NETWORK 100K (3216)
RB424	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB425	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB426	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB427	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB428	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB429	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB430	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB431	1-233-412-21	s	RES, CHIP NETWORK 1.0K (3216)
RB701	1-233-576-21	s	RES, CHIP NETWORK 100 (3216)
RB703	1-233-576-21	s	RES, CHIP NETWORK 100 (3216)
RB709	1-233-574-21	s	RES, CHIP NETWORK 10 (3216)
RB710	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB714	1-233-574-21	s	RES, CHIP NETWORK 10 (3216)
RB715	1-233-574-21	s	RES, CHIP NETWORK 10 (3216)
RB716	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RB717	1-233-423-21	s	RES, CHIP NETWORK 47 (3216)
RV701	1-225-791-21	s	RES, ADJ, CERMET 5K
RV702	1-225-793-21	s	RES, ADJ, CERMET 20K
S101	1-771-709-41	s	SWITCH, SLIDE
S102	1-771-709-41	s	SWITCH, SLIDE
S103	1-771-709-41	s	SWITCH, SLIDE
S104	1-771-709-41	s	SWITCH, SLIDE
S401	1-762-118-21	s	SWITCH, TOGGLE
S402	1-762-120-21	s	SWITCH, TOGGLE
S403	1-572-658-21	s	SWITCH, ROTARY
S404	1-572-658-21	s	SWITCH, ROTARY
S405	1-572-658-21	s	SWITCH, ROTARY
S406	1-692-271-41	s	SWITCH, SLIDE
S407	1-692-271-41	s	SWITCH, SLIDE
S408	1-692-271-41	s	SWITCH, SLIDE
S409	1-692-271-41	s	SWITCH, SLIDE
S410	1-762-217-31	s	SWITCH, SLIDE
S411	1-570-711-33	s	SWITCH, SLIDE
S412	1-570-711-33	s	SWITCH, SLIDE
S413	1-570-711-33	s	SWITCH, SLIDE
S416	1-762-217-31	s	SWITCH, SLIDE
S418	1-762-217-31	s	SWITCH, SLIDE
S419	1-762-217-31	s	SWITCH, SLIDE

(AT-167 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
S420	1-762-217-31	s	SWITCH, SLIDE
THP1 ⚠	1-533-817-21	s	THERMISTOR
THP2 ⚠	1-533-817-21	s	THERMISTOR
THP3 ⚠	1-804-458-21	s	THERMISTOR, POSITIVE
THP4 ⚠	1-804-458-21	s	THERMISTOR, POSITIVE
THP101 ⚠	1-803-353-21	s	THERMISTOR, POSITIVE
TP601	1-535-877-22	s	CHIP, CHECKER
TP701	1-535-877-22	s	CHIP, CHECKER
TP702	1-535-877-22	s	CHIP, CHECKER
TP703	1-535-877-22	s	CHIP, CHECKER
TP704	1-535-877-22	s	CHIP, CHECKER
TP705	1-535-877-22	s	CHIP, CHECKER
TP709	1-535-877-22	s	CHIP, CHECKER
TP711	1-535-877-22	s	CHIP, CHECKER
TP712	1-535-877-22	s	CHIP, CHECKER
TP713	1-535-877-22	s	CHIP, CHECKER
TP714	1-535-877-22	s	CHIP, CHECKER
X301	1-813-007-21	s	OSCILLATOR, CRYSTAL (SMD)
X302	1-795-177-21	s	OSCILLATOR, CRYSTAL
X701	1-813-212-11	s	OSCILLATOR, CRYSTAL
X702	1-795-671-12	s	OSCILLATOR, CRYSTAL (VCXO)3.3V
X703	1-795-670-12	s	OSCILLATOR, CRYSTAL (VCXO)3.3V

AT-167 BOARD (suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-299-A	s	MOUNTED CIRCUIT BOARD, AT-167
4pcs	7-682-947-01	s	SCREW +PSW 3X6
BT101	1-756-076-21	s	HOLDER, LITHIUM BATTERY
C1	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C2	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C3	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C4	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C5	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C6	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C7	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C8	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C9	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C10	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C11	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C12	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C13	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C14	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C15	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C16	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C18	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C19	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C20	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C21	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C22	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C23	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C24	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C25	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C26	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C28	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C29	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C30	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C31	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C33	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C34	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C35	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C37	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C38	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C39	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C41	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C101	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C102	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C103	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C104	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C105	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C106	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C107	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C108	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C109	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C110	1-104-905-11	s	CAPACITOR DOUBLE LAYERS 0.22F
C111	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C112	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C113	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C115	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C117	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C118	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C119	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C120	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C121	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C122	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C123	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C124	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C125	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C126	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C127	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C128	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C129	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C130	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C131	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C132	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C133	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C134	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C135	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C136	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C137	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C138	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C139	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C140	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C141	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C142	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C143	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C144	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C145	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C146	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C147	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C148	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C149	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C150	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C151	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C152	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C153	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C154	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C155	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C156	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C157	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C158	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C159	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C160	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C161	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C162	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C163	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C164	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C165	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C166	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C167	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C168	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C169	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C170	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C171	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C172	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C173	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C174	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C175	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C176	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C177	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C178	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C179	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C180	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C181	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C182	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C183	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C184	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C185	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C186	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C187	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C188	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C189	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C190	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C191	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C192	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C193	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C194	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C195	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C301	1-164-862-11	s	CAPACITOR,CHIP CERAMIC 33PF/50
C302	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C303	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C304	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C305	1-164-862-11	s	CAPACITOR,CHIP CERAMIC 33PF/50
C306	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C307	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C308	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C309	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C310	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C311	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C312	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C313	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C314	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C315	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C316	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C317	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C318	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C319	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C320	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C321	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C323	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C324	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C325	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C326	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C327	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C328	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C329	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C330	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C331	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C332	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C333	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C334	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C335	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C336	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C337	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C338	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C339	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C340	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C341	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C342	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C343	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C344	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C401	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C402	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C403	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C404	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C407	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C408	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C409	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C410	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C413	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C414	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C415	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C416	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C417	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C418	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C419	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C601	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C602	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C605	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C606	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C607	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C608	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C609	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C610	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C611	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C612	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C613	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C614	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C615	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C616	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C617	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C618	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C619	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C620	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C621	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C622	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C623	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C624	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C625	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C626	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C627	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C628	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C629	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C630	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C631	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C632	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C701	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C702	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C703	1-164-866-11	s	CAPACITOR,CHIP CERAMIC 47PF/50
C704	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C705	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C706	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C708	1-164-858-11	s	CAPACITOR,CERAMIC 22PF/50V
C709	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C710	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C711	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C712	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C713	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C716	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C717	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C718	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C719	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C720	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C721	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C722	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C723	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C724	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C725	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C726	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C727	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C728	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C729	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C730	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C731	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C732	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C733	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C734	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C735	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C736	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C738	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C739	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C740	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C741	1-164-882-11	s	CAPACITOR,CERAMIC 220PF/16V CH
C742	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C743	1-164-882-11	s	CAPACITOR,CERAMIC 220PF/16V CH
C744	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C745	1-125-891-11	s	CAPACITOR CERAMIC 0.47MF/10V
C746	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C747	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C748	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C749	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C750	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C751	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C752	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C753	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C754	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C755	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C756	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C757	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C758	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C759	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C760	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C761	1-164-878-11	s	CAPACITOR, CHIP CERAMIC 150PF
C762	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C763	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C764	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C765	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C766	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C767	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C768	1-127-956-11	s	CAPACITOR,CHIP FILM 0.1MF
C769	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C770	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C771	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C772	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C773	1-127-956-11	s	CAPACITOR,CHIP FILM 0.1MF
C774	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C775	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C776	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C777	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C778	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C779	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C780	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C781	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C782	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C783	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C784	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C785	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C786	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C787	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C789	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C790	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C791	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C792	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C793	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C796	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C798	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C799	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C801	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C802	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C803	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C804	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C805	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C806	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C807	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C808	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C809	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C810	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C811	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C812	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C813	1-125-891-11	s	CAPACITOR CERAMIC 0.47MF/10V
C814	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C815	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C816	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C817	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C818	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C819	1-164-858-11	s	CAPACITOR,CERAMIC 22PF/50V
C820	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C821	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C822	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C823	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C827	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C829	1-164-878-11	s	CAPACITOR, CHIP CERAMIC 150PF
C830	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C831	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C833	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C834	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C835	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C836	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C837	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C840	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C841	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C842	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C843	1-127-956-11	s	CAPACITOR,CHIP FILM 0.1MF
C844	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C845	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C846	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C847	1-127-956-11	s	CAPACITOR,CHIP FILM 0.1MF
C848	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C849	1-127-956-11	s	CAPACITOR,CHIP FILM 0.1MF

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C850	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C851	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C852	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C853	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C854	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C855	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C856	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C857	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C858	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C859	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C860	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C861	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C862	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C863	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C864	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C865	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C866	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C867	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C868	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C870	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C871	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C873	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C874	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C875	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C876	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
CN101	1-785-553-11	o	CONNECTOR, BOARD TO BOARD 120P
CN102	1-764-094-21	o	PIN, CONNECTOR (PC BOARD) 9P
CN103	1-794-917-11	s	CONNECTOR, MEMORY STICK
CN104	1-793-093-11	o	CONNECTOR, BOARD TO BOARD 60P
CN301	1-580-057-11	s	PIN,CONNECTOR 4P
CN601	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D4	8-719-063-83	s	LED SML-510MWT86
D101	8-719-820-41	s	DIODE 1SS302
D102	8-719-070-20	s	DIODE RB706F-40
D103	8-719-820-41	s	DIODE 1SS302
D104	8-719-820-41	s	DIODE 1SS302
D105	8-719-820-41	s	DIODE 1SS302
D106	8-719-820-41	s	DIODE 1SS302
D107	8-719-820-41	s	DIODE 1SS302
D401	8-719-024-81	s	DIODE 1SS300-TE85L
D402	8-719-024-81	s	DIODE 1SS300-TE85L
D403	8-719-024-81	s	DIODE 1SS300-TE85L
D404	8-719-024-81	s	DIODE 1SS300-TE85L
D405	8-719-024-81	s	DIODE 1SS300-TE85L
D406	8-719-024-81	s	DIODE 1SS300-TE85L
D407	8-719-024-81	s	DIODE 1SS300-TE85L
D408	8-719-024-81	s	DIODE 1SS300-TE85L
D409	8-719-063-83	s	LED SML-510MWT86
D410	8-719-077-09	s	DIODE CL-196HR-CD-T
D411	8-719-027-84	s	LED CL-155UR/G-D
D412	8-719-027-84	s	LED CL-155UR/G-D
D416	8-719-024-81	s	DIODE 1SS300-TE85L
D417	8-719-024-81	s	DIODE 1SS300-TE85L
D418	8-719-024-81	s	DIODE 1SS300-TE85L
D419	8-719-024-81	s	DIODE 1SS300-TE85L
D420	8-719-024-81	s	DIODE 1SS300-TE85L

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
D421	8-719-024-81	s	DIODE 1SS300-TE85L
D422	8-719-024-81	s	DIODE 1SS300-TE85L
D423	8-719-024-81	s	DIODE 1SS300-TE85L
D425	8-719-024-81	s	DIODE 1SS300-TE85L
D427	8-719-024-81	s	DIODE 1SS300-TE85L
D428	8-719-024-81	s	DIODE 1SS300-TE85L
D429	8-719-024-81	s	DIODE 1SS300-TE85L
D701	8-719-820-41	s	DIODE 1SS302
D702	8-719-024-81	s	DIODE 1SS300-TE85L
D703	8-719-820-41	s	DIODE 1SS302
D704	8-719-820-41	s	DIODE 1SS302
D705	8-719-820-41	s	DIODE 1SS302
D706	8-719-820-41	s	DIODE 1SS302
D707	8-719-820-41	s	DIODE 1SS302
D708	8-719-820-41	s	DIODE 1SS302
D709	8-719-070-20	s	DIODE RB706F-40
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E4	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB701	1-469-094-21	s	FERRITE, EMI (SMD)
FB702	1-469-094-21	s	FERRITE, EMI (SMD)
FB703	1-469-094-21	s	FERRITE, EMI (SMD)
FB704	1-469-094-21	s	FERRITE, EMI (SMD)
IC1	6-704-976-01	s	IC ADR381ART-REEL7
IC2	6-700-655-01	s	IC LT1963ES8#TR
IC3	8-759-327-01	s	IC NJM062V-TE2
IC4	8-759-327-01	s	IC NJM062V-TE2
IC6	8-759-338-95	s	IC NJM2903V (TE2)
IC101	8-759-678-06	s	IC CAT24WC02WI-TE13
IC102	8-759-833-99	s	IC MC74HC4052ADTR2
IC103	8-759-363-26	s	IC RN5VD28AA-TL
IC104	8-759-669-71	s	IC PCF8591T/2
IC105	8-759-648-04	s	IC RTC4574JE-TP
IC106	8-759-669-44	s	IC SN74LVC74APWR-12
IC107	6-703-461-11	s	IC CY2309ZC-1HT
IC108	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)
IC110	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC111	8-759-669-42	s	IC SN74LVC138APWR-12
IC112	8-759-669-42	s	IC SN74LVC138APWR-12
IC113	8-759-669-42	s	IC SN74LVC138APWR-12
IC114	8-759-669-68	s	IC SN74CBT3253PWR-12
IC116	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC118	8-759-557-85	s	IC NC7SZ32P5X
IC119	6-705-721-01	s	IC MT48LC8M16A2P-75-Y15WTR
IC120	6-705-721-01	s	IC MT48LC8M16A2P-75-Y15WTR
IC121	8-759-669-42	s	IC SN74LVC138APWR-12
IC122	6-704-988-01	s	IC FM18L08-70-STR
IC123	6-704-988-01	s	IC FM18L08-70-STR
IC124	8-759-599-93	s	IC NC7SZ08P5
IC125	8-759-669-44	s	IC SN74LVC74APWR-12
IC126	8-759-557-84	s	IC NC7SZ04P5X
IC127	8-759-557-84	s	IC NC7SZ04P5X
IC128	8-759-599-93	s	IC NC7SZ08P5
IC129	8-759-584-32	s	IC MB86189PFV-G-BND-ER
IC130	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC131	8-759-327-01	s	IC NJM062V-TE2
IC132	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC133	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
IC134	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)
IC135	6-706-483-01	s	IC TC7SH02FU(T5RSOYJF)
IC136	6-706-488-01	s	IC TC7SH14FU(T5RSOYJF)
IC137	8-759-472-43	s	IC 74VHC245MTCX
IC138	8-759-472-43	s	IC 74VHC245MTCX
IC139	8-759-472-43	s	IC 74VHC245MTCX
IC140	8-759-472-43	s	IC 74VHC245MTCX
IC141	8-759-679-55	s	IC SN74LVC08APWR
IC142	8-759-679-55	s	IC SN74LVC08APWR
IC143	8-759-679-55	s	IC SN74LVC08APWR
IC144	8-759-327-01	s	IC NJM062V-TE2
IC145	8-759-669-66	s	IC TLC272CPWR
IC146	8-759-599-93	s	IC NC7SZ08P5
IC147	8-759-599-93	s	IC NC7SZ08P5
IC148	8-759-599-93	s	IC NC7SZ08P5
IC149	8-759-679-55	s	IC SN74LVC08APWR
IC150	8-759-599-93	s	IC NC7SZ08P5
IC151	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC301	8-759-594-17	o	IC CXD9093R
IC302	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC303	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC304	8-759-594-17	o	IC CXD9093R
IC305	6-702-691-01	s	IC BCM5221A4KPT
IC306	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC307	8-759-471-91	s	IC 74VHC04MTCX
IC308	8-759-092-81	s	IC SN75158PS
IC401	8-752-392-03	s	IC CXD1095BR
IC402	6-706-357-01	s	IC LTC1664IGN#TR
IC403	8-759-662-38	s	IC 74VHCT08AMTCX
IC406	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC407	8-752-392-03	s	IC CXD1095BR
IC408	8-759-472-43	s	IC 74VHC245MTCX
IC409	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC410	8-759-471-96	s	IC 74VHC08MTCX
IC411	8-759-471-96	s	IC 74VHC08MTCX
IC602	8-759-363-26	s	IC RN5VD28AA-TL
IC607	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC701	8-759-561-46	s	IC AD8014ART-REEL7
IC702	8-759-980-44	s	IC TL712CPS
IC703	8-759-980-44	s	IC TL712CPS
IC704	8-759-980-44	s	IC TL712CPS
IC705	8-759-344-12	s	IC GS4981CTAE3
IC706	8-759-669-41	s	IC SN74LVC125APWR-12
IC707	8-759-662-38	s	IC 74VHCT08AMTCX
IC708	8-759-485-24	s	IC MC74HC4046ADT (R2)
IC709	8-759-184-64	s	IC TC4W66FU
IC710	8-759-564-49	s	IC TC7W53FU-TE12R
IC711	8-759-564-49	s	IC TC7W53FU-TE12R
IC712	8-759-675-47	s	IC SN74LVC04APWR
IC713	8-759-675-47	s	IC SN74LVC04APWR
IC715	8-759-675-47	s	IC SN74LVC04APWR
IC717	6-700-804-01	s	IC SN74LVC574APWR
IC718	8-759-564-49	s	IC TC7W53FU-TE12R
IC719	8-759-344-12	s	IC GS4981CTAE3
IC720	8-759-980-44	s	IC TL712CPS
IC722	8-759-485-24	s	IC MC74HC4046ADT (R2)
IC723	8-759-564-49	s	IC TC7W53FU-TE12R
IC724	8-759-564-49	s	IC TC7W53FU-TE12R
IC726	6-700-804-01	s	IC SN74LVC574APWR

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
IC727	8-759-471-91	s	IC 74VHC04MTCX
IC728	8-759-561-46	s	IC AD8014ART-REEL7
IC729	8-759-669-41	s	IC SN74LVC125APWR-12
IC730	8-759-675-47	s	IC SN74LVC04APWR
IC732	8-759-669-66	s	IC TLC272CPWR
IC733	8-759-669-66	s	IC TLC272CPWR
IC734	8-759-669-66	s	IC TLC272CPWR
IC735	8-759-669-66	s	IC TLC272CPWR
IC736	8-759-669-66	s	IC TLC272CPWR
IC737	8-759-669-66	s	IC TLC272CPWR
IC738	8-759-669-66	s	IC TLC272CPWR
IC739	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC740	8-759-669-41	s	IC SN74LVC125APWR-12
IC741	8-759-663-35	s	IC 74VHC4053MTCX
IC742	8-759-663-35	s	IC 74VHC4053MTCX
IC743	8-759-523-04	s	IC TC74HC4538AFT
IC744	6-706-476-01	s	IC TC7SET04FU(T5RSOJF)
IC745	6-706-476-01	s	IC TC7SET04FU(T5RSOJF)
IC746	6-706-489-01	s	IC TC7SH32FU(T5RSOYJF)
IC747	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC748	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC749	8-759-523-04	s	IC TC74HC4538AFT
IC750	8-759-669-41	s	IC SN74LVC125APWR-12
IC751	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC752	6-706-489-01	s	IC TC7SH32FU(T5RSOYJF)
IC753	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC755	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC756	8-759-531-92	s	IC TC7WH04FU(TE12R)
IC757	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC758	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC759	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC760	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC761	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC762	8-759-592-42	s	IC TC7SZ00FU(TE85R)
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-414-398-11	s	INDUCTOR (SMD) 10UH
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
L107	1-414-398-11	s	INDUCTOR (SMD) 10UH
L108	1-414-398-11	s	INDUCTOR (SMD) 10UH
L109	1-414-398-11	s	INDUCTOR (SMD) 10UH
L110	1-414-398-11	s	INDUCTOR (SMD) 10UH
L111	1-414-398-11	s	INDUCTOR (SMD) 10UH
L113	1-414-398-11	s	INDUCTOR (SMD) 10UH
L114	1-414-398-11	s	INDUCTOR (SMD) 10UH
L301	1-414-398-11	s	INDUCTOR (SMD) 10UH
L302	1-414-398-11	s	INDUCTOR (SMD) 10UH
L303	1-414-398-11	s	INDUCTOR (SMD) 10UH
L304	1-414-398-11	s	INDUCTOR (SMD) 10UH
L305	1-414-398-11	s	INDUCTOR (SMD) 10UH
L401	1-414-398-11	s	INDUCTOR (SMD) 10UH
L601	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L602	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L701	1-414-398-11	s	INDUCTOR (SMD) 10UH
L702	1-414-398-11	s	INDUCTOR (SMD) 10UH
L703	1-412-056-11	s	INDUCTOR 4.7UH (3225)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
L704	1-414-398-11	s	INDUCTOR (SMD) 10UH
L705	1-414-398-11	s	INDUCTOR (SMD) 10UH
L706	1-414-398-11	s	INDUCTOR (SMD) 10UH
L707	1-414-398-11	s	INDUCTOR (SMD) 10UH
L708	1-414-398-11	s	INDUCTOR (SMD) 10UH
L709	1-414-398-11	s	INDUCTOR (SMD) 10UH
L710	1-414-398-11	s	INDUCTOR (SMD) 10UH
L711	1-414-398-11	s	INDUCTOR (SMD) 10UH
L712	1-414-398-11	s	INDUCTOR (SMD) 10UH
L713	1-414-398-11	s	INDUCTOR (SMD) 10UH
L714	1-414-398-11	s	INDUCTOR (SMD) 10UH
L715	1-414-398-11	s	INDUCTOR (SMD) 10UH
L716	1-414-398-11	s	INDUCTOR (SMD) 10UH
L717	1-414-398-11	s	INDUCTOR (SMD) 10UH
L718	1-414-398-11	s	INDUCTOR (SMD) 10UH
L719	1-414-398-11	s	INDUCTOR (SMD) 10UH
L720	1-414-398-11	s	INDUCTOR (SMD) 10UH
L724	1-414-398-11	s	INDUCTOR (SMD) 10UH
L725	1-414-398-11	s	INDUCTOR (SMD) 10UH
L726	1-414-398-11	s	INDUCTOR (SMD) 10UH
L727	1-414-398-11	s	INDUCTOR (SMD) 10UH
L728	1-414-398-11	s	INDUCTOR (SMD) 10UH
L729	1-414-398-11	s	INDUCTOR (SMD) 10UH
L730	1-414-398-11	s	INDUCTOR (SMD) 10UH
L733	1-414-398-11	s	INDUCTOR (SMD) 10UH
L734	1-414-398-11	s	INDUCTOR (SMD) 10UH
L735	1-414-398-11	s	INDUCTOR (SMD) 10UH
L736	1-414-398-11	s	INDUCTOR (SMD) 10UH
L737	1-414-398-11	s	INDUCTOR (SMD) 10UH
L738	1-414-398-11	s	INDUCTOR (SMD) 10UH
L739	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L740	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L741	1-414-398-11	s	INDUCTOR (SMD) 10UH
L742	1-414-398-11	s	INDUCTOR (SMD) 10UH
L743	1-414-398-11	s	INDUCTOR (SMD) 10UH
PH1	8-749-011-37	s	PHOTO COUPLER TLP181 (BC-TPR)
PH301	8-749-014-35	s	IC HCPL-0630-500
PH302	8-749-014-35	s	IC HCPL-0630-500
Q1	8-729-032-74	s	TRANSISTOR 2SA1615-Z-K
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q4	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q5	8-729-047-32	s	TRANSISTOR SI4425DY-T1
Q6	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-927-99	s	TRANSISTOR 2SC4617R
Q102	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q301	8-729-927-99	s	TRANSISTOR 2SC4617R
Q401	8-729-927-99	s	TRANSISTOR 2SC4617R
Q402	8-729-927-99	s	TRANSISTOR 2SC4617R
Q403	8-729-927-99	s	TRANSISTOR 2SC4617R
Q404	8-729-927-99	s	TRANSISTOR 2SC4617R
Q405	8-729-927-99	s	TRANSISTOR 2SC4617R
Q406	8-729-927-99	s	TRANSISTOR 2SC4617R
Q407	8-729-927-99	s	TRANSISTOR 2SC4617R
Q408	8-729-928-19	s	TRANSISTOR 2SA1774R
Q409	8-729-928-19	s	TRANSISTOR 2SA1774R
Q410	8-729-928-19	s	TRANSISTOR 2SA1774R
Q411	8-729-928-19	s	TRANSISTOR 2SA1774R

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
Q412	8-729-927-99	s	TRANSISTOR 2SC4617R
Q413	8-729-927-99	s	TRANSISTOR 2SC4617R
Q414	8-729-928-19	s	TRANSISTOR 2SA1774R
Q415	8-729-927-99	s	TRANSISTOR 2SC4617R
Q416	8-729-928-19	s	TRANSISTOR 2SA1774R
Q417	8-729-928-19	s	TRANSISTOR 2SA1774R
Q418	8-729-927-99	s	TRANSISTOR 2SC4617R
Q419	8-729-928-19	s	TRANSISTOR 2SA1774R
Q701	8-729-927-99	s	TRANSISTOR 2SC4617R
Q702	8-729-927-99	s	TRANSISTOR 2SC4617R
Q703	8-729-928-19	s	TRANSISTOR 2SA1774R
Q704	8-729-927-99	s	TRANSISTOR 2SC4617R
Q705	8-729-122-63	s	TRANSISTOR 2SA1226-E4
Q706	8-729-928-19	s	TRANSISTOR 2SA1774R
Q707	8-729-927-99	s	TRANSISTOR 2SC4617R
Q708	8-729-122-63	s	TRANSISTOR 2SA1226-E4
Q709	8-729-928-19	s	TRANSISTOR 2SA1774R
Q710	8-729-928-19	s	TRANSISTOR 2SA1774R
R1	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R2	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R3	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R4	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R5	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R6	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R7	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R8	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R9	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R10	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R11	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R12	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R13	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R14	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R15	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R16	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R17	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R18	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R19	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R20	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R22	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R23	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R33	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R34	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R35	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R36	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R41	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R43	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R44	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R48	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R49	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R50	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R51	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R101	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R102	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R103	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R104	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R105	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R106	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R107	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R108	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R109	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R110	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R111	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R112	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R113	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R115	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R116	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R117	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R118	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R119	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R120	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R121	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R122	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R123	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R124	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R125	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R128	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R129	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R130	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R131	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R132	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R133	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R134	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R135	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R136	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R137	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R139	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R140	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R142	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R144	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R147	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R148	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R150	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R151	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R152	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R153	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R154	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R155	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R156	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R157	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R158	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R159	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R160	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R161	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R162	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R163	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R164	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R165	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R166	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R167	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R168	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R169	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R170	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R171	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R172	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R173	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R174	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R175	1-208-911-11	s	RESISTOR, CHIP 10K (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R176	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R177	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R178	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R179	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R180	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R181	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R182	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R183	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R184	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R185	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R186	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R187	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R188	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R189	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R190	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R191	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R192	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R193	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R194	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R195	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R196	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R197	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R198	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R199	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R200	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R201	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R202	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R203	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R204	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R205	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R206	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R207	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R209	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R210	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R211	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R212	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R213	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R214	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R215	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R216	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R217	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R218	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R219	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R220	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R221	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R222	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R223	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R224	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R225	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R227	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R228	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R229	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R230	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R231	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R232	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R233	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R234	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R235	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R236	1-208-935-11	s	RESISTOR, CHIP 100K (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R237	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R240	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R241	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R242	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R243	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R245	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R246	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R247	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R301	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R302	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R303	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R304	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R305	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R306	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R307	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R308	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R309	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R310	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R311	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R312	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R313	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R314	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R315	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R316	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R317	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R318	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R319	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R320	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R321	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R322	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R323	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R324	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R325	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R326	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R327	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R328	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R329	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R330	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R331	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R332	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R333	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R334	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R335	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R336	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R337	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R338	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R339	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R340	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R341	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R342	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R343	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R344	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R345	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R346	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R347	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R348	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R349	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R350	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R351	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R352	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R353	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R354	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R355	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R356	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R357	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R358	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R359	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R360	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R361	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R362	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R363	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R364	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R401	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R402	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R403	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R404	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R405	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R406	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R407	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R408	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R409	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R410	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R411	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R412	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R413	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R414	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R415	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R416	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R417	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R418	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R419	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R420	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R421	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R422	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R423	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R424	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R425	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R426	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R427	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R430	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R431	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R432	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R433	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R434	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R435	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R436	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R437	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R438	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R439	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R440	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R441	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R442	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R445	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R446	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R447	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R448	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R449	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R450	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R451	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R452	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R453	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R454	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R455	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R456	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R457	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R458	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R459	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R460	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R461	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R462	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R463	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R465	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R467	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R468	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R469	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R470	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R471	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R472	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R473	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R474	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R476	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R477	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R478	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R479	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R480	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R481	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R482	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R483	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R484	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R485	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R486	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R487	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R488	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R489	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R490	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R492	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R493	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R494	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R495	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R496	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R497	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R498	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R499	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R500	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R501	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R502	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R503	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R504	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R505	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R506	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R507	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R508	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R509	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R510	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R511	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R512	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R513	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R514	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R515	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R516	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R517	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R518	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R519	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R520	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R521	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R522	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R601	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R602	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R603	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R604	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R605	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R606	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R607	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R608	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R609	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R610	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R611	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R614	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R615	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R617	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R618	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R619	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R620	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R621	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R622	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R623	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R624	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R625	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R626	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R627	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R628	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R629	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R630	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R631	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R633	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R700	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R701	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R702	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R703	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R704	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R705	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R706	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R707	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R709	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R710	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R711	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R712	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R713	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R714	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R715	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R716	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R717	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R718	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R719	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R720	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R721	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R722	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R723	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R724	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R725	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R726	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R727	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R728	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R729	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R730	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R731	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R732	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R733	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R734	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R735	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R736	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R737	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R738	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R739	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R740	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R741	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R742	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R743	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R744	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R745	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R746	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R747	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R748	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R749	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R750	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R751	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R752	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R753	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R754	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R755	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R756	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R757	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R758	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R759	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R760	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R761	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R762	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R763	1-208-947-11	s	RESISTOR CHIP 330K 1/16W(1005)
R764	1-208-955-11	s	RESISTOR CHIP 680K
R765	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R766	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R767	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R768	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R769	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R770	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R771	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R772	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R773	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R774	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R775	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R776	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R777	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R778	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R779	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R780	1-208-935-11	s	RESISTOR, CHIP 100K (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R781	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R782	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R783	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R784	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R785	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R786	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R787	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R788	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R789	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R790	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R791	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R792	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R793	1-208-955-11	s	RESISTOR CHIP 680K
R794	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R795	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R796	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R797	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R798	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R799	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R800	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R801	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R802	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R803	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R804	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R805	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R806	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R807	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R808	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R809	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R810	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R811	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R812	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R813	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R814	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R815	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R816	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R817	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R818	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R819	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R820	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R821	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R822	1-208-955-11	s	RESISTOR CHIP 680K
R823	1-208-939-11	s	RESISTOR, CHIP 150K (1005)
R824	1-218-985-11	s	RESISTOR CHIP 470K 1/16W(1005)
R825	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R826	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R827	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R828	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R829	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R830	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R831	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R832	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R833	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R834	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R835	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R836	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R837	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R839	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R840	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R841	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R842	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R843	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R844	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R845	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R846	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R847	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R848	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R851	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R852	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R853	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R854	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R855	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R856	1-208-947-11	s	RESISTOR CHIP 330K 1/16W(1005)
R857	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R858	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R859	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R861	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R862	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R863	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R864	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R865	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R866	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R867	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R868	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R869	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R870	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R871	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R872	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R879	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R880	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R883	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R885	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R887	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R888	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R889	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R890	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R891	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R893	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R894	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R897	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R900	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R902	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R903	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R904	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R905	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R906	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R907	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R908	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R909	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R910	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R911	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R912	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R913	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R914	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R915	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R916	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R917	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R918	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R919	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R920	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R921	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R922	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R923	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R924	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R925	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R926	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R927	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R928	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R929	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R930	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R931	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R932	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R933	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R934	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R935	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R936	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R937	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R938	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R939	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R940	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R941	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R942	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R943	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R944	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R945	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R946	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R947	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R948	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R950	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R954	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R958	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R959	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R960	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R961	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R962	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R963	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R964	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R965	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R966	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R967	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R969	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R970	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R972	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R973	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
RB101	1-233-810-21	s	RES, NETWORK 100K (3216)
RB102	1-233-810-21	s	RES, NETWORK 100K (3216)
RB103	1-233-810-21	s	RES, NETWORK 100K (3216)
RB104	1-233-810-21	s	RES, NETWORK 100K (3216)
RB105	1-233-810-21	s	RES, NETWORK 100K (3216)
RB106	1-233-810-21	s	RES, NETWORK 100K (3216)
RB107	1-233-810-21	s	RES, NETWORK 100K (3216)
RB108	1-233-810-21	s	RES, NETWORK 100K (3216)
RB109	1-233-810-21	s	RES, NETWORK 100K (3216)
RB110	1-233-810-21	s	RES, NETWORK 100K (3216)
RB111	1-233-810-21	s	RES, NETWORK 100K (3216)
RB112	1-233-810-21	s	RES, NETWORK 100K (3216)

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
RB113	1-233-810-21	s	RES, NETWORK 100K (3216)
RB114	1-233-810-21	s	RES, NETWORK 100K (3216)
RB115	1-233-810-21	s	RES, NETWORK 100K (3216)
RB116	1-233-810-21	s	RES, NETWORK 100K (3216)
RB117	1-233-810-21	s	RES, NETWORK 100K (3216)
RB118	1-233-810-21	s	RES, NETWORK 100K (3216)
RB119	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB120	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB121	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB123	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB124	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB125	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB126	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB401	1-233-810-21	s	RES, NETWORK 100K (3216)
RB402	1-233-810-21	s	RES, NETWORK 100K (3216)
RB403	1-233-810-21	s	RES, NETWORK 100K (3216)
RB404	1-233-810-21	s	RES, NETWORK 100K (3216)
RB405	1-233-810-21	s	RES, NETWORK 100K (3216)
RB406	1-233-810-21	s	RES, NETWORK 100K (3216)
RB407	1-233-810-21	s	RES, NETWORK 100K (3216)
RB420	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB421	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB422	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB423	1-233-810-21	s	RES, NETWORK 100K (3216)
RB424	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB425	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB426	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB427	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB428	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB429	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB430	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB431	1-233-412-11	s	RESISTOR,CHIP NETWORK 1K
RB701	1-233-576-11	s	RESISTOR,CHIP NETWORK 100
RB703	1-233-576-11	s	RESISTOR,CHIP NETWORK 100
RB709	1-233-574-11	s	RESISTOR,CHIP NETWORK 10
RB710	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB714	1-233-574-11	s	RESISTOR,CHIP NETWORK 10
RB715	1-233-574-11	s	RESISTOR,CHIP NETWORK 10
RB716	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RB717	1-239-409-11	s	RESISTOR NETWORK 47 (3216)
RV701	1-225-791-21	s	RES, ADJ, CERMET 5K
RV702	1-225-793-11	s	RES, ADJ, CERMET 20K
S101	1-771-709-31	s	SWITCH, SLIDE
S102	1-771-709-31	s	SWITCH, SLIDE
S103	1-771-709-31	s	SWITCH, SLIDE
S104	1-771-709-31	s	SWITCH, SLIDE
S401	1-762-118-21	s	SWITCH, TOGGLE
S402	1-762-120-11	s	SWITCH, TOGGLE
S403	1-572-658-21	s	SWITCH,ROTARY
S404	1-572-658-21	s	SWITCH,ROTARY
S405	1-572-658-21	s	SWITCH,ROTARY
S406	1-692-271-31	s	SWITCH, SLIDE
S407	1-692-271-31	s	SWITCH, SLIDE
S408	1-692-271-31	s	SWITCH, SLIDE
S409	1-692-271-31	s	SWITCH, SLIDE
S410	1-762-217-31	s	SWITCH, SLIDE
S411	1-570-711-11	s	SWITCH,SLIDE
S412	1-570-711-11	s	SWITCH,SLIDE

(AT-167 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
S413	1-570-711-11	s	SWITCH,SLIDE
S416	1-762-217-31	s	SWITCH, SLIDE
S418	1-762-217-31	s	SWITCH, SLIDE
S419	1-762-217-31	s	SWITCH, SLIDE
S420	1-762-217-31	s	SWITCH, SLIDE
THP1	⚠ 1-533-817-21	s	THERMISTOR
THP2	⚠ 1-533-817-21	s	THERMISTOR
THP3	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE
THP4	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE
THP101	⚠ 1-803-353-21	s	THERMISTOR, POSITIVE
TP601	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP701	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP702	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP703	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP704	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP705	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP709	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP711	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP712	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP713	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP714	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
X301	1-813-007-21	s	OSCILLATOR, CRYSTAL (SMD)
X302	1-795-177-21	s	OSCILLATOR, CRYSTAL
X701	1-813-212-11	s	OSCILLATOR, CRYSTAL
X702	1-795-671-12	s	OSCILLATOR, CRYSTAL
X703	1-795-670-12	s	OSCILLATOR, CRYSTAL

AU-302 BOARD (suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-307-A	s	MOUNTED CIRCUIT BOARD, AU-302
C1	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C2	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C3	1-128-416-21	s	CAP, CHIP ELECT 100MF
C4	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C5	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C6	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C7	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C8	1-115-153-21	s	CAP, ELECT 4.7MF
C9	1-115-153-21	s	CAP, ELECT 4.7MF
C10	1-164-227-91	s	CAP,CERAMIC 22000PF B 1608
C11	1-127-715-91	s	CAP,CHIP CERAMIC 0.22MF B 1608
C12	1-164-260-91	s	CAP,CHIP CERAMIC 47PF RH(1608)
C13	1-107-823-91	s	CAP, CERAMIC 470000PF B (2012)
C14	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C15	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C16	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C17	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C18	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C21	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
CN1	1-766-198-51	s	CONNECTOR, FPC 26P
CN2	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
D1	6-501-358-01	s	DIODE CL-197HG5-CD-T
D2	6-501-358-01	s	DIODE CL-197HG5-CD-T
D3	8-719-077-09	s	DIODE CL-196HR-CD-T
D4	8-719-077-09	s	DIODE CL-196HR-CD-T
D5	8-719-077-09	s	DIODE CL-196HR-CD-T
D6	8-719-077-09	s	DIODE CL-196HR-CD-T
D9	8-719-077-09	s	DIODE CL-196HR-CD-T
D10	8-719-077-09	s	DIODE CL-196HR-CD-T
D11	6-501-358-01	s	DIODE CL-197HG5-CD-T
D12	6-501-358-01	s	DIODE CL-197HG5-CD-T
D15	6-501-358-01	s	DIODE CL-197HG5-CD-T
D16	6-501-358-01	s	DIODE CL-197HG5-CD-T
D17	8-719-064-41	s	DIODE CL-191Y-CD-T
D18	8-719-064-41	s	DIODE CL-191Y-CD-T
D19	8-719-064-41	s	DIODE CL-191Y-CD-T
D20	8-719-064-41	s	DIODE CL-191Y-CD-T
D21	8-719-064-41	s	DIODE CL-191Y-CD-T
D22	8-719-064-41	s	DIODE CL-191Y-CD-T
D23	8-719-024-81	s	DIODE 1SS300-TE85L
IC1	8-759-278-58	s	IC NJM4558V-TE2
JC1	1-218-990-81	s	CONDUCTOR, CHIP (1005)
L1	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L2	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L3	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L4	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L5	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L6	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L7	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
R1	1-208-863-81	s	RES, CHIP 100 (1005)
R2	1-208-887-81	s	RES, CHIP 1.0K (1005)
R4	1-208-863-81	s	RES, CHIP 100 (1005)
R5	1-208-887-81	s	RES, CHIP 1.0K (1005)
R6	1-208-863-81	s	RES, CHIP 100 (1005)

(AU-302 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R7	1-208-887-81	s	RES, CHIP 1.0K (1005)
R8	1-208-887-81	s	RES, CHIP 1.0K (1005)
R10	1-208-863-81	s	RES, CHIP 100 (1005)
R11	1-208-911-81	s	RES, CHIP 10K (1005)
R12	1-208-919-81	s	RES, CHIP 22K (1005)
R13	1-208-855-81	s	RES, CHIP 47 (1005)
R14	1-208-855-81	s	RES, CHIP 47 (1005)
R15	1-208-919-81	s	RES, CHIP 22K (1005)
R16	1-208-855-81	s	RES, CHIP 47 (1005)
R17	1-208-855-81	s	RES, CHIP 47 (1005)
R18	1-208-935-81	s	RES, CHIP 100K (1005)
R19	1-208-935-81	s	RES, CHIP 100K (1005)
R20	1-208-895-81	s	RES, CHIP 2.2K (1005)
R21	1-208-891-81	s	RES, CHIP 1.5K (1005)
R22	1-208-911-81	s	RES, CHIP 10K (1005)
R23	1-208-895-81	s	RES, CHIP 2.2K (1005)
R24	1-208-891-81	s	RES, CHIP 1.5K (1005)
R25	1-220-878-81	s	RES, CHIP 22 (1005)
R26	1-208-943-81	s	RES, CHIP 220K (1005)
R27	1-208-919-81	s	RES, CHIP 22K (1005)
R28	1-208-895-81	s	RES, CHIP 2.2K (1005)
R29	1-208-895-81	s	RES, CHIP 2.2K (1005)
R30	1-208-943-81	s	RES, CHIP 220K (1005)
R31	1-208-863-81	s	RES, CHIP 100 (1005)
R32	1-208-935-81	s	RES, CHIP 100K (1005)
R33	1-208-943-81	s	RES, CHIP 220K (1005)
R34	1-208-943-81	s	RES, CHIP 220K (1005)
RV1	1-238-255-21	s	RES, VAR, CARBON 10K
S1	1-762-122-11	s	SWITCH, TOGGLE
S2	1-762-217-31	s	SWITCH, SLIDE
S3	1-570-711-33	s	SWITCH, SLIDE
S4	1-762-217-31	s	SWITCH, SLIDE
S5	1-570-711-33	s	SWITCH, SLIDE

AU-302 BOARD (suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-307-A	s	MOUNTED CIRCUIT BOARD, AU-302
C1	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C2	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C3	1-128-416-11	s	CAPACITOR ELECT 100MF/16V(105C
C4	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C5	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C6	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C7	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C8	1-115-153-11	s	CAPACITOR,ELECT 4.7MF/16V(BP)
C9	1-115-153-11	s	CAPACITOR,ELECT 4.7MF/16V(BP)
C10	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C11	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C12	1-164-315-11	s	CAPACITOR,CERAMIC 470PF/50V CH
C13	1-107-823-11	s	CAPACITOR,CERAMIC 0.47MF/16V
C14	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C15	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C16	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C17	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C18	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C21	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
CN1	1-766-198-51	s	CONNECTOR, FPC 26P
CN2	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
D1	6-500-276-01	s	DIODE CL-191G1-C-T
D2	6-500-276-01	s	DIODE CL-191G1-C-T
D3	8-719-077-09	s	DIODE CL-196HR-CD-T
D4	8-719-077-09	s	DIODE CL-196HR-CD-T
D5	8-719-077-09	s	DIODE CL-196HR-CD-T
D6	8-719-077-09	s	DIODE CL-196HR-CD-T
D9	8-719-077-09	s	DIODE CL-196HR-CD-T
D10	8-719-077-09	s	DIODE CL-196HR-CD-T
D11	6-500-276-01	s	DIODE CL-191G1-C-T
D12	6-500-276-01	s	DIODE CL-191G1-C-T
D15	6-500-276-01	s	DIODE CL-191G1-C-T
D16	6-500-276-01	s	DIODE CL-191G1-C-T
D17	8-719-064-41	s	DIODE CL-191Y-CD-T
D18	8-719-064-41	s	DIODE CL-191Y-CD-T
D19	8-719-064-41	s	DIODE CL-191Y-CD-T
D20	8-719-064-41	s	DIODE CL-191Y-CD-T
D21	8-719-064-41	s	DIODE CL-191Y-CD-T
D22	8-719-064-41	s	DIODE CL-191Y-CD-T
D23	8-719-024-81	s	DIODE 1SS300-TE85L
IC1	8-759-278-58	s	IC NJM4558V (TE2)
JC1	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
L1	1-414-404-11	s	INDUCTOR (SMD) 100UH
L2	1-414-404-11	s	INDUCTOR (SMD) 100UH
L3	1-414-404-11	s	INDUCTOR (SMD) 100UH
L4	1-414-404-11	s	INDUCTOR (SMD) 100UH
L5	1-414-404-11	s	INDUCTOR (SMD) 100UH
L6	1-414-404-11	s	INDUCTOR (SMD) 100UH
L7	1-414-404-11	s	INDUCTOR (SMD) 100UH
R1	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R2	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R4	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R5	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R6	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(AU-302 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R7	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R8	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R10	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R11	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R12	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R13	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R14	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R15	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R16	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R17	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R18	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R19	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R20	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R21	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R22	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R23	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R24	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R25	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R26	1-208-943-11	s	RESISTOR CHIP 220K
R27	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R28	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R29	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R30	1-208-943-11	s	RESISTOR CHIP 220K
R31	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R32	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R33	1-208-943-11	s	RESISTOR CHIP 220K
R34	1-208-943-11	s	RESISTOR CHIP 220K
RV1	1-238-255-21	s	RESISTOR,VAR,CARBON 10K
S1	1-762-122-11	s	SWITCH, TOGGLE
S2	1-762-217-31	s	SWITCH, SLIDE
S3	1-570-711-11	s	SWITCH,SLIDE
S4	1-762-217-31	s	SWITCH, SLIDE
S5	1-570-711-11	s	SWITCH,SLIDE

AU-303G BOARD (suffix 21)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-086-A	s	MOUNTED CIRCUIT BOARD, AU-303G
C3	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C4	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C5	1-128-416-21	s	CAP, CHIP ELECT 100MF
C6	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C7	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C8	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C9	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C10	1-115-153-21	s	CAP, ELECT 4.7MF
C11	1-115-153-21	s	CAP, ELECT 4.7MF
C12	1-164-227-91	s	CAP,CERAMIC 22000PF B 1608
C13	1-127-715-91	s	CAP,CHIP CERAMIC 0.22MF B 1608
C14	1-164-260-91	s	CAP,CHIP CERAMIC 47PF RH(1608)
C15	1-107-823-91	s	CAP, CERAMIC 470000PF B (2012)
C16	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C21	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C22	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C23	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C24	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C25	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C26	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C27	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C28	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C29	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C30	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
CN1	1-778-534-31	s	CONNECTOR, FFC/FPC(ZIF) ST 45P
CN2	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
CN3	1-766-767-51	s	CONNECTOR, FPC 12P
CN4	1-764-441-51	s	CONNECTOR, FPC 30P
D1	8-719-064-41	s	DIODE CL-191Y-CD-T
D2	6-501-358-01	s	DIODE CL-197HG5-CD-T
D3	8-719-077-09	s	DIODE CL-196HR-CD-T
D4	6-501-358-01	s	DIODE CL-197HG5-CD-T
D5	6-501-358-01	s	DIODE CL-197HG5-CD-T
D6	8-719-077-09	s	DIODE CL-196HR-CD-T
D7	8-719-077-09	s	DIODE CL-196HR-CD-T
D8	8-719-064-41	s	DIODE CL-191Y-CD-T
D9	8-719-064-41	s	DIODE CL-191Y-CD-T
D10	6-501-358-01	s	DIODE CL-197HG5-CD-T
D11	6-501-358-01	s	DIODE CL-197HG5-CD-T
D12	8-719-077-09	s	DIODE CL-196HR-CD-T
D13	8-719-077-09	s	DIODE CL-196HR-CD-T
D14	8-719-064-41	s	DIODE CL-191Y-CD-T
D15	8-719-064-41	s	DIODE CL-191Y-CD-T
D16	8-719-024-81	s	DIODE 1SS300-TE85L
D17	6-501-358-01	s	DIODE CL-197HG5-CD-T
D18	6-501-358-01	s	DIODE CL-197HG5-CD-T
D19	8-719-077-09	s	DIODE CL-196HR-CD-T
D20	8-719-077-09	s	DIODE CL-196HR-CD-T
IC1	8-759-278-58	s	IC NJM4558V-TE2
JC3	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC4	1-218-990-81	s	CONDUCTOR, CHIP (1005)
L1	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L2	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L3	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L4	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L5	1-414-404-41	s	INDUCTOR (SMD) 100.0UH

(AU-303G BOARD suffix 21)

Ref. No. or Q'ty	Part No.	SP	Description
L6	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
L7	1-414-404-41	s	INDUCTOR (SMD) 100.0UH
R1	1-208-887-81	s	RES, CHIP 1.0K (1005)
R2	1-208-887-81	s	RES, CHIP 1.0K (1005)
R3	1-208-887-81	s	RES, CHIP 1.0K (1005)
R4	1-208-887-81	s	RES, CHIP 1.0K (1005)
R5	1-208-875-81	s	RES, CHIP 330 (1005)
R6	1-208-875-81	s	RES, CHIP 330 (1005)
R7	1-208-911-81	s	RES, CHIP 10K (1005)
R8	1-208-919-81	s	RES, CHIP 22K (1005)
R9	1-208-875-81	s	RES, CHIP 330 (1005)
R10	1-208-919-81	s	RES, CHIP 22K (1005)
R11	1-208-863-81	s	RES, CHIP 100 (1005)
R12	1-208-863-81	s	RES, CHIP 100 (1005)
R13	1-208-863-81	s	RES, CHIP 100 (1005)
R14	1-208-863-81	s	RES, CHIP 100 (1005)
R15	1-208-855-81	s	RES, CHIP 47 (1005)
R16	1-208-863-81	s	RES, CHIP 100 (1005)
R17	1-208-935-81	s	RES, CHIP 100K (1005)
R18	1-208-935-81	s	RES, CHIP 100K (1005)
R19	1-208-895-81	s	RES, CHIP 2.2K (1005)
R20	1-208-891-81	s	RES, CHIP 1.5K (1005)
R21	1-208-911-81	s	RES, CHIP 10K (1005)
R22	1-208-895-81	s	RES, CHIP 2.2K (1005)
R23	1-208-891-81	s	RES, CHIP 1.5K (1005)
R24	1-208-895-81	s	RES, CHIP 2.2K (1005)
R25	1-220-878-81	s	RES, CHIP 22 (1005)
R26	1-208-943-81	s	RES, CHIP 220K (1005)
R27	1-208-919-81	s	RES, CHIP 22K (1005)
R28	1-208-895-81	s	RES, CHIP 2.2K (1005)
R29	1-208-943-81	s	RES, CHIP 220K (1005)
R30	1-208-863-81	s	RES, CHIP 100 (1005)
R31	1-208-935-81	s	RES, CHIP 100K (1005)
R32	1-208-943-81	s	RES, CHIP 220K (1005)
R33	1-208-943-81	s	RES, CHIP 220K (1005)
R34	1-208-863-81	s	RES, CHIP 100 (1005)
RV1	1-238-255-21	s	RES, VAR, CARBON 10K
S2	1-762-122-11	s	SWITCH, TOGGLE
S3	1-762-123-11	s	SWITCH, TOGGLE
S4	1-762-123-11	s	SWITCH, TOGGLE
S5	1-786-333-21	s	SWITCH, SLIDE (SMD)
S6	1-571-275-41	s	SWITCH, SLIDE

AU-303/303G BOARD (suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-086-A	s	MOUNTED CIRCUIT BOARD, AU-303G (GOLD)
1pc	A-1129-310-A	s	MOUNTED CIRCUIT BOARD, AU-303 (SILVER)
C3	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C4	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C5	1-128-416-11	s	CAPACITOR ELECT 100MF/16V(105C
C6	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C7	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C8	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C9	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C10	1-115-153-11	s	CAPACITOR,ELECT 4.7MF/16V(BP)
C11	1-115-153-11	s	CAPACITOR,ELECT 4.7MF/16V(BP)
C12	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C13	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C14	1-164-315-11	s	CAPACITOR,CERAMIC 470PF/50V CH
C15	1-107-823-11	s	CAPACITOR,CERAMIC 0.47MF/16V
C16	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C21	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C22	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C23	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C24	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C25	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C26	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C27	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C28	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C29	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C30	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
CN1	1-778-534-31	s	CONNECTOR, FFC/FPC(ZIF) ST 45P (GOLD)
	1-778-534-21	o	CONNECTOR, FFC (ZIF) 45P (SILVER)
CN2	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
CN3	1-766-767-51	s	CONNECTOR, FPC 12P
CN4	1-764-441-51	s	CONNECTOR, FPC 30P
D1	8-719-064-41	s	DIODE CL-191Y-CD-T
D2	6-500-276-01	s	DIODE CL-191G1-C-T
D3	8-719-077-09	s	DIODE CL-196HR-CD-T
D4	6-500-276-01	s	DIODE CL-191G1-C-T
D5	6-500-276-01	s	DIODE CL-191G1-C-T
D6	8-719-077-09	s	DIODE CL-196HR-CD-T
D7	8-719-077-09	s	DIODE CL-196HR-CD-T
D8	8-719-064-41	s	DIODE CL-191Y-CD-T
D9	8-719-064-41	s	DIODE CL-191Y-CD-T
D10	6-500-276-01	s	DIODE CL-191G1-C-T
D11	6-500-276-01	s	DIODE CL-191G1-C-T
D12	8-719-077-09	s	DIODE CL-196HR-CD-T
D13	8-719-077-09	s	DIODE CL-196HR-CD-T
D14	8-719-064-41	s	DIODE CL-191Y-CD-T
D15	8-719-064-41	s	DIODE CL-191Y-CD-T
D16	8-719-024-81	s	DIODE 1SS300-TE85L
D17	6-500-276-01	s	DIODE CL-191G1-C-T
D18	6-500-276-01	s	DIODE CL-191G1-C-T
D19	8-719-077-09	s	DIODE CL-196HR-CD-T
D20	8-719-077-09	s	DIODE CL-196HR-CD-T
IC1	8-759-278-58	s	IC NJM4558V (TE2)
JC3	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC4	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)

(AU-303/303G BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
L1	1-414-404-11	s	INDUCTOR (SMD) 100UH
L2	1-414-404-11	s	INDUCTOR (SMD) 100UH
L3	1-414-404-11	s	INDUCTOR (SMD) 100UH
L4	1-414-404-11	s	INDUCTOR (SMD) 100UH
L5	1-414-404-11	s	INDUCTOR (SMD) 100UH
L6	1-414-404-11	s	INDUCTOR (SMD) 100UH
L7	1-414-404-11	s	INDUCTOR (SMD) 100UH
R1	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R2	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R3	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R4	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R5	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R6	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R7	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R8	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R9	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R10	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R11	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R12	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R13	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R14	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R15	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R16	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R17	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R18	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R19	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R20	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R21	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R22	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R23	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R24	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R25	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R26	1-208-943-11	s	RESISTOR CHIP 220K
R27	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R28	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R29	1-208-943-11	s	RESISTOR CHIP 220K
R30	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R31	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R32	1-208-943-11	s	RESISTOR CHIP 220K
R33	1-208-943-11	s	RESISTOR CHIP 220K
R34	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
RV1	1-238-255-21	s	RESISTOR,VAR,CARBON 10K
S2	1-762-122-11	s	SWITCH, TOGGLE
S3	1-762-123-11	s	SWITCH, TOGGLE
S4	1-762-123-11	s	SWITCH, TOGGLE
S5	1-786-333-21	s	SWITCH, SLIDE (SMD)
S6	1-571-275-31	s	SWITCH,SLIDE (1-1-2)

AVP-6 BOARD (suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-300-A	s	MOUNTED CIRCUIT BOARD, AVP-6
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C100	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C101	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C102	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C103	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C104	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C105	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C106	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C107	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C108	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C109	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C110	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C111	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C112	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C113	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C114	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C115	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C116	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C117	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C118	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C119	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C120	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C121	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C123	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C124	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C125	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C126	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C127	1-126-396-21	s	CAP, CHIP ELECT 47MF (6.3X5.7)
C129	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C130	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C131	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C132	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C133	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C134	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C135	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C136	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C137	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C138	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C139	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C140	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C141	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C143	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C144	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C145	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C146	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C147	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C148	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C149	1-164-936-81	s	CAP, CHIP CERAMIC 680PF B 1005
C150	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C151	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C152	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C153	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C154	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C155	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C156	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C157	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C158	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C159	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C160	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C161	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C162	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C163	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C164	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C165	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C166	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C167	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C168	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C169	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C170	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C171	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C172	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C173	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C174	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C175	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C176	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C177	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C178	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C179	1-107-826-91	s	CAP, CHIP CERAMIC 100000PF B
C200	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C201	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C202	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C203	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C204	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C205	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C206	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C207	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C208	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C300	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C301	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C302	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C303	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C304	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C305	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C306	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C307	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C308	1-164-858-81	s	CAP, CHIP CERAMIC 22PF CH 1005
C309	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C310	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C311	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C312	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C313	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C314	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C315	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C316	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C317	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C318	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C319	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C320	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C321	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C322	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C323	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C324	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C325	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C326	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C327	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C328	1-165-989-91	s	CAP, CERAMIC 10MF (2012)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C329	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C330	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C331	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C332	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C333	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C334	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C335	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C336	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C337	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C338	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C339	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C340	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C341	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C342	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C343	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C344	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C345	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C346	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C347	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C348	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C349	1-164-854-81	s	CAP, CHIP CERAMIC 15PF CH 1005
C350	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C351	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C352	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C353	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C354	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C355	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C356	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C357	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C358	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C359	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C360	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C361	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C362	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C363	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C364	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C365	1-164-854-81	s	CAP, CHIP CERAMIC 15PF CH 1005
C366	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C367	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C368	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C369	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C400	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C402	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C403	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C404	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C405	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C406	1-165-884-91	s	CAP, CERAMIC 2.2MF (1608)
C407	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C408	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C409	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C410	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C411	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C412	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C413	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C414	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C415	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C416	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C417	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C418	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C419	1-165-884-91	s	CAP, CERAMIC 2.2MF (1608)
C420	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C421	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C422	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C425	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C426	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C428	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C429	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C430	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C431	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C432	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C433	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C434	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C435	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C436	1-164-315-91	s	CAP, CERAMIC 470PF CH (1608)
C438	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C439	1-162-964-91	s	CAP,CHIP CERAMIC 1000PF B 1608
C440	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C441	1-107-781-21	s	CAP, ELECT 47MF
C443	1-107-781-21	s	CAP, ELECT 47MF
C445	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C446	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C447	1-117-142-21	s	CAP, ELECT 0.22MF
C448	1-107-781-21	s	CAP, ELECT 47MF
C450	1-117-142-21	s	CAP, ELECT 0.22MF
C451	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C453	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C454	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C455	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C456	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C502	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C503	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C504	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C505	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C506	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C507	1-165-884-91	s	CAP, CERAMIC 2.2MF (1608)
C508	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C509	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C510	1-165-884-91	s	CAP, CERAMIC 2.2MF (1608)
C511	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C512	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C513	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C514	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C515	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C516	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C517	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C518	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C519	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C520	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C521	1-164-858-81	s	CAP, CHIP CERAMIC 22PF CH 1005
C522	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C523	1-164-858-81	s	CAP, CHIP CERAMIC 22PF CH 1005
C524	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C525	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C526	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C527	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C528	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C529	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C530	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C531	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C532	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C533	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C534	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C535	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C536	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C538	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C539	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C541	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C542	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C543	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C546	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C547	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C552	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C553	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C554	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C555	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C600	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C601	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C602	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C603	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C604	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C605	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C606	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C607	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C608	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C609	1-165-884-91	s	CAP, CERAMIC 2.2MF (1608)
C610	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C611	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C612	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C613	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C614	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C615	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C616	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C617	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C618	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C619	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C620	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C621	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C622	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C623	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C624	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C625	1-100-505-91	s	CAP, CERAMIC 0.1MF C (1005)
C626	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C627	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C628	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C629	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C630	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C631	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C632	1-107-781-21	s	CAP, ELECT 47MF
C633	1-107-781-21	s	CAP, ELECT 47MF
C634	1-107-781-21	s	CAP, ELECT 47MF
C635	1-107-781-21	s	CAP, ELECT 47MF
C636	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C637	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C640	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C641	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C642	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)
C643	1-126-395-21	s	CAP, CHIP ELECT 22MF (5X5.7)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C644	1-128-407-21	s	CAP, ELECT 47MF 8X10
C645	1-128-407-21	s	CAP, ELECT 47MF 8X10
C646	1-128-407-21	s	CAP, ELECT 47MF 8X10
C647	1-128-407-21	s	CAP, ELECT 47MF 8X10
C648	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C649	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C650	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C651	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C652	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C653	1-164-935-81	s	CAP, CHIP CERAMIC 470PF B 1005
C654	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C655	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C656	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C700	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C701	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C702	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C703	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C704	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C705	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C706	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C707	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C708	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C709	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C710	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C711	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C712	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C713	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C714	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C715	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C716	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C717	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C718	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C719	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C720	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C721	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C722	1-100-581-81	s	CAP,CHIP CERAMIC0.0047MF B1005
C723	1-164-940-81	s	CAP,CHIP CERAMIC 3300PF B 1005
C724	1-164-940-81	s	CAP,CHIP CERAMIC 3300PF B 1005
C725	1-164-940-81	s	CAP,CHIP CERAMIC 3300PF B 1005
C726	1-164-940-81	s	CAP,CHIP CERAMIC 3300PF B 1005
C727	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C728	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
CN3	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D100	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D101	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D102	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D103	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D104	8-719-074-31	s	DIODE CL-196YG-CD-T
D105	8-719-074-31	s	DIODE CL-196YG-CD-T
D106	8-719-074-31	s	DIODE CL-196YG-CD-T
D107	8-719-064-41	s	DIODE CL-191Y-CD-T
D400	8-719-421-28	s	DIODE MA728-TX
D401	8-719-421-28	s	DIODE MA728-TX
D402	8-719-421-28	s	DIODE MA728-TX
D403	8-719-421-28	s	DIODE MA728-TX
D404	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D405	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D406	8-719-421-28	s	DIODE MA728-TX

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
D407	8-719-421-28	s	DIODE MA728-TX
D408	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D409	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D410	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D411	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D500	8-719-421-28	s	DIODE MA728-TX
D501	8-719-421-28	s	DIODE MA728-TX
D502	8-719-421-28	s	DIODE MA728-TX
D503	8-719-421-28	s	DIODE MA728-TX
D504	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D505	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D506	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D507	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D600	8-719-421-28	s	DIODE MA728-TX
D601	8-719-421-28	s	DIODE MA728-TX
D602	8-719-421-28	s	DIODE MA728-TX
D603	8-719-421-28	s	DIODE MA728-TX
D604	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D605	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D606	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D607	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D700	8-719-024-81	s	DIODE 1SS300-TE85L
D701	8-719-024-81	s	DIODE 1SS300-TE85L
D702	8-719-024-81	s	DIODE 1SS300-TE85L
D703	8-719-024-83	s	DIODE 1SS301-TE85L
D704	8-719-024-83	s	DIODE 1SS301-TE85L
D705	8-719-024-83	s	DIODE 1SS301-TE85L
D706	8-719-017-05	s	DIODE 02DZ5.1-TPH3
D707	8-719-017-05	s	DIODE 02DZ5.1-TPH3
D708	8-719-017-05	s	DIODE 02DZ5.1-TPH3
D709	8-719-024-83	s	DIODE 1SS301-TE85L
D710	8-719-024-83	s	DIODE 1SS301-TE85L
D711	8-719-024-83	s	DIODE 1SS301-TE85L
D712	8-719-024-81	s	DIODE 1SS300-TE85L
D713	8-719-024-81	s	DIODE 1SS300-TE85L
D714	8-719-024-81	s	DIODE 1SS300-TE85L
D715	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D716	8-719-024-81	s	DIODE 1SS300-TE85L
D717	8-719-024-81	s	DIODE 1SS300-TE85L
D718	8-719-024-83	s	DIODE 1SS301-TE85L
D719	8-719-024-83	s	DIODE 1SS301-TE85L
D720	8-719-016-84	s	DIODE 02DZ2.0-TPH3
E1	1-535-877-22	s	CHIP, CHECKER
E2	1-535-877-22	s	CHIP, CHECKER
E3	1-535-877-22	s	CHIP, CHECKER
E4	1-535-877-22	s	CHIP, CHECKER
FB100	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB101	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
IC100	8-759-327-01	s	IC NJM062V(TE2)
IC101	8-759-327-01	s	IC NJM062V(TE2)
IC102	8-759-338-95	s	IC NJM2903V(TE2)
IC103	8-759-338-95	s	IC NJM2903V(TE2)
IC104	6-701-572-01	s	IC TPS54610PWPR
IC105	8-759-327-01	s	IC NJM062V(TE2)
IC106	6-704-976-01	s	IC ADR381ARTZ-REEL7
IC107	8-759-471-96	s	IC 74VHC08MTCX
IC108	8-759-648-61	s	IC LTC1387CG
IC109	8-759-648-61	s	IC LTC1387CG

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
IC200	8-759-392-77	s	IC SN74LVC245APWR
IC201	8-759-392-77	s	IC SN74LVC245APWR
IC202	8-759-392-77	s	IC SN74LVC245APWR
IC203	8-759-472-18	s	IC 74VHC138MTCX
IC204	8-759-363-26	s	IC RN5VD28AA-TL-FA
IC205	6-706-489-01	s	IC TC7SH32FU(T5RSOYJF)
IC206	8-752-392-03	s	IC CXD1095BR
IC207	8-759-471-96	s	IC 74VHC08MTCX
IC300	6-704-463-01	s	IC CY7C1021CV33-15ZXCT
IC301	8-759-485-24	s	IC MC74HC4046ADTR2
IC303	8-759-669-66	s	IC TLC272CPWR-12
IC304	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC305	8-759-471-96	s	IC 74VHC08MTCX
IC308	8-759-392-77	s	IC SN74LVC245APWR
IC309	8-759-392-77	s	IC SN74LVC245APWR
IC311	8-759-561-46	s	IC AD8014ARTZ-REEL7
IC312	8-759-392-77	s	IC SN74LVC245APWR
IC313	8-759-392-77	s	IC SN74LVC245APWR
IC314	8-759-392-77	s	IC SN74LVC245APWR
IC315	8-759-392-77	s	IC SN74LVC245APWR
IC316	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC317	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC318	8-759-524-27	s	IC TC74VHC244FT(EL)
IC319	8-759-441-31	s	IC MC14053BDTR2
IC320	8-759-561-46	s	IC AD8014ARTZ-REEL7
IC321	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC401	6-700-563-01	s	IC AK4552VT-E2
IC402	6-700-563-01	s	IC AK4552VT-E2
IC403	8-759-278-58	s	IC NJM4558V-TE2
IC404	8-759-441-31	s	IC MC14053BDTR2
IC405	8-759-278-58	s	IC NJM4558V-TE2
IC406	8-759-422-21	s	IC NJM4580V(TE2)
IC407	8-759-422-21	s	IC NJM4580V(TE2)
IC409	8-759-278-58	s	IC NJM4558V-TE2
IC410	8-759-278-58	s	IC NJM4558V-TE2
IC500	6-700-563-01	s	IC AK4552VT-E2
IC501	6-700-563-01	s	IC AK4552VT-E2
IC502	8-759-278-58	s	IC NJM4558V-TE2
IC503	8-759-278-58	s	IC NJM4558V-TE2
IC504	8-759-278-58	s	IC NJM4558V-TE2
IC505	8-759-422-21	s	IC NJM4580V(TE2)
IC506	8-759-422-21	s	IC NJM4580V(TE2)
IC507	8-759-278-58	s	IC NJM4558V-TE2
IC508	8-759-278-58	s	IC NJM4558V-TE2
IC600	6-700-563-01	s	IC AK4552VT-E2
IC601	8-759-278-58	s	IC NJM4558V-TE2
IC602	8-759-278-58	s	IC NJM4558V-TE2
IC603	8-759-278-58	s	IC NJM4558V-TE2
IC604	8-759-278-58	s	IC NJM4558V-TE2
IC605	8-759-441-31	s	IC MC14053BDTR2
IC606	8-759-441-31	s	IC MC14053BDTR2
IC607	8-759-422-21	s	IC NJM4580V(TE2)
IC608	8-759-422-21	s	IC NJM4580V(TE2)
IC609	8-759-278-58	s	IC NJM4558V-TE2
IC610	8-759-278-58	s	IC NJM4558V-TE2
IC611	8-759-422-21	s	IC NJM4580V(TE2)
IC612	8-759-422-21	s	IC NJM4580V(TE2)
IC613	8-759-278-58	s	IC NJM4558V-TE2
IC614	8-759-278-58	s	IC NJM4558V-TE2

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
IC701	8-759-653-03	s	IC NJM78M05DL1A-TE1
IC702	8-759-653-03	s	IC NJM78M05DL1A-TE1
IC703	8-759-653-03	s	IC NJM78M05DL1A-TE1
JC100	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC201	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC500	1-216-864-91	s	CONDUCTOR, CHIP (1608)
JC503	1-216-864-91	s	CONDUCTOR, CHIP (1608)
JC504	1-216-864-91	s	CONDUCTOR, CHIP (1608)
JC507	1-216-864-91	s	CONDUCTOR, CHIP (1608)
JC700	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC701	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC702	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC703	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC704	1-218-990-81	s	CONDUCTOR, CHIP (1005)
L100	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L101	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L102	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L103	1-416-344-21	s	COIL, CHOKE 10UH
L104	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L105	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L106	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L300	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L301	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L302	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L303	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L304	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L305	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L306	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L307	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L400	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L401	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L402	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L403	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L500	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L501	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L604	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L605	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
L606	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
L607	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
L608	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
L700	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
L701	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
L702	1-414-400-41	s	INDUCTOR (SMD) 22.0UH
PH700	8-749-014-35	s	IC HCPL-0630-500
PH701	8-749-014-35	s	IC HCPL-0630-500
Q1	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q100	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q101	8-729-209-77	s	TRANSISTOR 2SC2873Y-TE12L
Q102	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q103	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q104	8-729-209-77	s	TRANSISTOR 2SC2873Y-TE12L
Q105	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q106	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q107	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q108	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q109	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q110	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
Q600	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q601	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q602	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q603	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q604	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q605	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q606	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q607	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q608	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q609	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q610	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q611	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q700	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q701	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q702	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q703	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q704	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q705	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q706	8-729-141-76	s	TRANSISTOR 2SD596T1-DV345
Q707	8-729-141-76	s	TRANSISTOR 2SD596T1-DV345
Q710	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q711	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q712	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q713	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q714	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q715	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q716	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
R100	1-208-879-81	s	RES, CHIP 470 (1005)
R101	1-208-879-81	s	RES, CHIP 470 (1005)
R102	1-208-871-81	s	RES, CHIP 220 (1005)
R103	1-208-871-81	s	RES, CHIP 220 (1005)
R104	1-208-931-81	s	RES, CHIP 68K (1005)
R105	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R106	1-208-927-81	s	RES, CHIP 47K (1005)
R107	1-208-923-81	s	RES, CHIP 33K (1005)
R108	1-208-923-81	s	RES, CHIP 33K (1005)
R109	1-208-931-81	s	RES, CHIP 68K (1005)
R110	1-208-935-81	s	RES, CHIP 100K (1005)
R111	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R113	1-208-927-81	s	RES, CHIP 47K (1005)
R114	1-208-915-81	s	RES, CHIP 15K (1005)
R115	1-208-935-81	s	RES, CHIP 100K (1005)
R116	1-208-935-81	s	RES, CHIP 100K (1005)
R117	1-208-863-81	s	RES, CHIP 100 (1005)
R118	1-208-879-81	s	RES, CHIP 470 (1005)
R119	1-208-931-81	s	RES, CHIP 68K (1005)
R120	1-208-931-81	s	RES, CHIP 68K (1005)
R121	1-208-871-81	s	RES, CHIP 220 (1005)
R122	1-208-923-81	s	RES, CHIP 33K (1005)
R123	1-208-923-81	s	RES, CHIP 33K (1005)
R124	1-208-891-81	s	RES, CHIP 1.5K (1005)
R125	1-208-919-81	s	RES, CHIP 22K (1005)
R126	1-208-907-81	s	RES, CHIP 6.8K (1005)
R127	1-208-923-81	s	RES, CHIP 33K (1005)
R128	1-208-863-81	s	RES, CHIP 100 (1005)
R129	1-208-911-81	s	RES, CHIP 10K (1005)
R130	1-208-911-81	s	RES, CHIP 10K (1005)
R131	1-208-903-81	s	RES, CHIP 4.7K (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R132	1-208-927-81	s	RES, CHIP 47K (1005)
R133	1-208-915-81	s	RES, CHIP 15K (1005)
R134	1-208-915-81	s	RES, CHIP 15K (1005)
R135	1-220-870-81	s	RES, CHIP 10 (1005)
R136	1-220-870-81	s	RES, CHIP 10 (1005)
R137	1-220-870-81	s	RES, CHIP 10 (1005)
R138	1-220-870-81	s	RES, CHIP 10 (1005)
R139	1-208-919-81	s	RES, CHIP 22K (1005)
R141	1-208-927-81	s	RES, CHIP 47K (1005)
R144	1-208-887-81	s	RES, CHIP 1.0K (1005)
R146	1-208-927-81	s	RES, CHIP 47K (1005)
R147	1-208-927-81	s	RES, CHIP 47K (1005)
R148	1-208-911-81	s	RES, CHIP 10K (1005)
R149	1-208-911-81	s	RES, CHIP 10K (1005)
R150	1-208-887-81	s	RES, CHIP 1.0K (1005)
R151	1-208-927-81	s	RES, CHIP 47K (1005)
R152	1-208-887-81	s	RES, CHIP 1.0K (1005)
R154	1-208-911-81	s	RES, CHIP 10K (1005)
R155	1-208-919-81	s	RES, CHIP 22K (1005)
R156	1-208-935-81	s	RES, CHIP 100K (1005)
R157	1-208-927-81	s	RES, CHIP 47K (1005)
R159	1-208-887-81	s	RES, CHIP 1.0K (1005)
R160	1-220-870-81	s	RES, CHIP 10 (1005)
R161	1-220-870-81	s	RES, CHIP 10 (1005)
R162	1-220-870-81	s	RES, CHIP 10 (1005)
R163	1-220-870-81	s	RES, CHIP 10 (1005)
R164	1-208-895-81	s	RES, CHIP 2.2K (1005)
R165	1-208-911-81	s	RES, CHIP 10K (1005)
R166	1-208-911-81	s	RES, CHIP 10K (1005)
R167	1-208-911-81	s	RES, CHIP 10K (1005)
R200	1-208-863-81	s	RES, CHIP 100 (1005)
R201	1-208-863-81	s	RES, CHIP 100 (1005)
R202	1-208-935-81	s	RES, CHIP 100K (1005)
R203	1-208-935-81	s	RES, CHIP 100K (1005)
R204	1-208-863-81	s	RES, CHIP 100 (1005)
R205	1-208-935-81	s	RES, CHIP 100K (1005)
R206	1-208-935-81	s	RES, CHIP 100K (1005)
R207	1-208-863-81	s	RES, CHIP 100 (1005)
R209	1-208-935-81	s	RES, CHIP 100K (1005)
R210	1-208-935-81	s	RES, CHIP 100K (1005)
R211	1-208-935-81	s	RES, CHIP 100K (1005)
R212	1-208-935-81	s	RES, CHIP 100K (1005)
R217	1-208-863-81	s	RES, CHIP 100 (1005)
R219	1-208-927-81	s	RES, CHIP 47K (1005)
R220	1-208-935-81	s	RES, CHIP 100K (1005)
R222	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R223	1-208-935-81	s	RES, CHIP 100K (1005)
R224	1-208-935-81	s	RES, CHIP 100K (1005)
R300	1-208-935-81	s	RES, CHIP 100K (1005)
R301	1-208-903-81	s	RES, CHIP 4.7K (1005)
R302	1-208-903-81	s	RES, CHIP 4.7K (1005)
R303	1-208-887-81	s	RES, CHIP 1.0K (1005)
R304	1-208-923-81	s	RES, CHIP 33K (1005)
R305	1-208-919-81	s	RES, CHIP 22K (1005)
R306	1-208-919-81	s	RES, CHIP 22K (1005)
R307	1-220-870-81	s	RES, CHIP 10 (1005)
R308	1-220-870-81	s	RES, CHIP 10 (1005)
R309	1-208-927-81	s	RES, CHIP 47K (1005)
R310	1-208-863-81	s	RES, CHIP 100 (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R311	1-208-959-81	s	RES, CHIP 1M (1005)
R312	1-220-870-81	s	RES, CHIP 10 (1005)
R313	1-208-863-81	s	RES, CHIP 100 (1005)
R314	1-208-863-81	s	RES, CHIP 100 (1005)
R315	1-208-863-81	s	RES, CHIP 100 (1005)
R316	1-208-863-81	s	RES, CHIP 100 (1005)
R317	1-208-935-81	s	RES, CHIP 100K (1005)
R318	1-208-935-81	s	RES, CHIP 100K (1005)
R319	1-208-863-81	s	RES, CHIP 100 (1005)
R320	1-208-863-81	s	RES, CHIP 100 (1005)
R321	1-208-911-81	s	RES, CHIP 10K (1005)
R322	1-208-911-81	s	RES, CHIP 10K (1005)
R323	1-208-887-81	s	RES, CHIP 1.0K (1005)
R324	1-208-863-81	s	RES, CHIP 100 (1005)
R325	1-208-863-81	s	RES, CHIP 100 (1005)
R326	1-208-863-81	s	RES, CHIP 100 (1005)
R327	1-208-895-81	s	RES, CHIP 2.2K (1005)
R328	1-208-887-81	s	RES, CHIP 1.0K (1005)
R329	1-208-863-81	s	RES, CHIP 100 (1005)
R330	1-208-911-81	s	RES, CHIP 10K (1005)
R331	1-208-911-81	s	RES, CHIP 10K (1005)
R332	1-208-887-81	s	RES, CHIP 1.0K (1005)
R333	1-208-887-81	s	RES, CHIP 1.0K (1005)
R334	1-208-887-81	s	RES, CHIP 1.0K (1005)
R335	1-208-860-81	s	RES, CHIP 75 (1005)
R336	1-208-911-81	s	RES, CHIP 10K (1005)
R337	1-208-911-81	s	RES, CHIP 10K (1005)
R338	1-208-887-81	s	RES, CHIP 1.0K (1005)
R339	1-208-911-81	s	RES, CHIP 10K (1005)
R340	1-208-911-81	s	RES, CHIP 10K (1005)
R341	1-208-863-81	s	RES, CHIP 100 (1005)
R342	1-208-863-81	s	RES, CHIP 100 (1005)
R343	1-208-863-81	s	RES, CHIP 100 (1005)
R344	1-208-863-81	s	RES, CHIP 100 (1005)
R345	1-220-870-81	s	RES, CHIP 10 (1005)
R346	1-208-895-81	s	RES, CHIP 2.2K (1005)
R347	1-208-863-81	s	RES, CHIP 100 (1005)
R348	1-208-863-81	s	RES, CHIP 100 (1005)
R349	1-208-863-81	s	RES, CHIP 100 (1005)
R350	1-208-863-81	s	RES, CHIP 100 (1005)
R351	1-220-870-81	s	RES, CHIP 10 (1005)
R352	1-208-863-81	s	RES, CHIP 100 (1005)
R353	1-208-863-81	s	RES, CHIP 100 (1005)
R354	1-208-863-81	s	RES, CHIP 100 (1005)
R355	1-208-863-81	s	RES, CHIP 100 (1005)
R356	1-208-863-81	s	RES, CHIP 100 (1005)
R357	1-208-863-81	s	RES, CHIP 100 (1005)
R358	1-208-863-81	s	RES, CHIP 100 (1005)
R359	1-208-863-81	s	RES, CHIP 100 (1005)
R360	1-208-911-81	s	RES, CHIP 10K (1005)
R361	1-208-887-81	s	RES, CHIP 1.0K (1005)
R362	1-208-895-81	s	RES, CHIP 2.2K (1005)
R363	1-208-887-81	s	RES, CHIP 1.0K (1005)
R364	1-208-863-81	s	RES, CHIP 100 (1005)
R365	1-208-887-81	s	RES, CHIP 1.0K (1005)
R366	1-208-887-81	s	RES, CHIP 1.0K (1005)
R367	1-208-860-81	s	RES, CHIP 75 (1005)
R401	1-208-863-81	s	RES, CHIP 100 (1005)
R402	1-208-863-81	s	RES, CHIP 100 (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R403	1-220-870-81	s	RES, CHIP 10 (1005)
R404	1-208-863-81	s	RES, CHIP 100 (1005)
R405	1-208-863-81	s	RES, CHIP 100 (1005)
R406	1-208-919-81	s	RES, CHIP 22K (1005)
R407	1-220-870-81	s	RES, CHIP 10 (1005)
R408	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R409	1-208-915-81	s	RES, CHIP 15K (1005)
R410	1-208-863-81	s	RES, CHIP 100 (1005)
R411	1-208-863-81	s	RES, CHIP 100 (1005)
R412	1-208-915-81	s	RES, CHIP 15K (1005)
R413	1-208-919-81	s	RES, CHIP 22K (1005)
R414	1-208-919-81	s	RES, CHIP 22K (1005)
R415	1-208-915-81	s	RES, CHIP 15K (1005)
R416	1-208-863-81	s	RES, CHIP 100 (1005)
R417	1-208-919-81	s	RES, CHIP 22K (1005)
R418	1-208-911-81	s	RES, CHIP 10K (1005)
R419	1-208-911-81	s	RES, CHIP 10K (1005)
R420	1-208-863-81	s	RES, CHIP 100 (1005)
R421	1-208-863-81	s	RES, CHIP 100 (1005)
R422	1-208-863-81	s	RES, CHIP 100 (1005)
R423	1-208-947-81	s	RES, CHIP 330K (1005)
R424	1-208-947-81	s	RES, CHIP 330K (1005)
R425	1-208-887-81	s	RES, CHIP 1.0K (1005)
R426	1-208-903-81	s	RES, CHIP 4.7K (1005)
R429	1-208-911-81	s	RES, CHIP 10K (1005)
R430	1-220-870-81	s	RES, CHIP 10 (1005)
R431	1-220-870-81	s	RES, CHIP 10 (1005)
R434	1-208-919-81	s	RES, CHIP 22K (1005)
R435	1-208-935-81	s	RES, CHIP 100K (1005)
R436	1-216-801-91	s	RES, CHIP 22 (1608)
R438	1-216-801-91	s	RES, CHIP 22 (1608)
R440	1-208-919-81	s	RES, CHIP 22K (1005)
R441	1-208-915-81	s	RES, CHIP 15K (1005)
R442	1-208-935-81	s	RES, CHIP 100K (1005)
R443	1-208-915-81	s	RES, CHIP 15K (1005)
R444	1-208-891-81	s	RES, CHIP 1.5K (1005)
R445	1-208-905-81	s	RES, CHIP 5.6K (1005)
R446	1-208-919-81	s	RES, CHIP 22K (1005)
R447	1-208-935-81	s	RES, CHIP 100K (1005)
R448	1-208-935-81	s	RES, CHIP 100K (1005)
R449	1-208-935-81	s	RES, CHIP 100K (1005)
R450	1-208-935-81	s	RES, CHIP 100K (1005)
R451	1-208-863-81	s	RES, CHIP 100 (1005)
R452	1-208-919-81	s	RES, CHIP 22K (1005)
R453	1-208-919-81	s	RES, CHIP 22K (1005)
R454	1-208-919-81	s	RES, CHIP 22K (1005)
R455	1-208-915-81	s	RES, CHIP 15K (1005)
R456	1-208-915-81	s	RES, CHIP 15K (1005)
R457	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R458	1-208-915-81	s	RES, CHIP 15K (1005)
R459	1-208-863-81	s	RES, CHIP 100 (1005)
R460	1-208-895-81	s	RES, CHIP 2.2K (1005)
R462	1-208-863-81	s	RES, CHIP 100 (1005)
R463	1-208-887-81	s	RES, CHIP 1.0K (1005)
R464	1-208-887-81	s	RES, CHIP 1.0K (1005)
R465	1-208-887-81	s	RES, CHIP 1.0K (1005)
R466	1-208-935-81	s	RES, CHIP 100K (1005)
R467	1-208-935-81	s	RES, CHIP 100K (1005)
R468	1-208-903-81	s	RES, CHIP 4.7K (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R469	1-208-911-81	s	RES, CHIP 10K (1005)
R470	1-216-801-91	s	RES, CHIP 22 (1608)
R472	1-216-801-91	s	RES, CHIP 22 (1608)
R500	1-208-863-81	s	RES, CHIP 100 (1005)
R501	1-208-863-81	s	RES, CHIP 100 (1005)
R502	1-208-863-81	s	RES, CHIP 100 (1005)
R503	1-220-870-81	s	RES, CHIP 10 (1005)
R504	1-208-863-81	s	RES, CHIP 100 (1005)
R505	1-220-870-81	s	RES, CHIP 10 (1005)
R506	1-208-911-81	s	RES, CHIP 10K (1005)
R507	1-208-911-81	s	RES, CHIP 10K (1005)
R508	1-208-911-81	s	RES, CHIP 10K (1005)
R509	1-208-911-81	s	RES, CHIP 10K (1005)
R510	1-208-911-81	s	RES, CHIP 10K (1005)
R511	1-208-911-81	s	RES, CHIP 10K (1005)
R512	1-208-911-81	s	RES, CHIP 10K (1005)
R513	1-208-935-81	s	RES, CHIP 100K (1005)
R514	1-208-919-81	s	RES, CHIP 22K (1005)
R515	1-208-919-81	s	RES, CHIP 22K (1005)
R516	1-208-911-81	s	RES, CHIP 10K (1005)
R517	1-208-935-81	s	RES, CHIP 100K (1005)
R518	1-208-899-81	s	RES, CHIP 3.3K (1005)
R519	1-208-919-81	s	RES, CHIP 22K (1005)
R520	1-208-863-81	s	RES, CHIP 100 (1005)
R521	1-208-863-81	s	RES, CHIP 100 (1005)
R522	1-208-899-81	s	RES, CHIP 3.3K (1005)
R523	1-208-919-81	s	RES, CHIP 22K (1005)
R524	1-220-870-81	s	RES, CHIP 10 (1005)
R525	1-220-870-81	s	RES, CHIP 10 (1005)
R526	1-220-870-81	s	RES, CHIP 10 (1005)
R527	1-220-870-81	s	RES, CHIP 10 (1005)
R528	1-208-919-81	s	RES, CHIP 22K (1005)
R529	1-208-919-81	s	RES, CHIP 22K (1005)
R530	1-208-919-81	s	RES, CHIP 22K (1005)
R531	1-208-919-81	s	RES, CHIP 22K (1005)
R532	1-208-911-81	s	RES, CHIP 10K (1005)
R533	1-208-935-81	s	RES, CHIP 100K (1005)
R534	1-208-911-81	s	RES, CHIP 10K (1005)
R535	1-208-935-81	s	RES, CHIP 100K (1005)
R536	1-208-919-81	s	RES, CHIP 22K (1005)
R537	1-208-919-81	s	RES, CHIP 22K (1005)
R538	1-208-935-81	s	RES, CHIP 100K (1005)
R539	1-208-935-81	s	RES, CHIP 100K (1005)
R540	1-208-911-81	s	RES, CHIP 10K (1005)
R541	1-208-911-81	s	RES, CHIP 10K (1005)
R542	1-208-935-81	s	RES, CHIP 100K (1005)
R543	1-208-911-81	s	RES, CHIP 10K (1005)
R544	1-208-935-81	s	RES, CHIP 100K (1005)
R545	1-208-911-81	s	RES, CHIP 10K (1005)
R546	1-208-911-81	s	RES, CHIP 10K (1005)
R547	1-208-935-81	s	RES, CHIP 100K (1005)
R548	1-208-911-81	s	RES, CHIP 10K (1005)
R549	1-208-935-81	s	RES, CHIP 100K (1005)
R550	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R551	1-208-887-81	s	RES, CHIP 1.0K (1005)
R552	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R553	1-208-887-81	s	RES, CHIP 1.0K (1005)
R554	1-216-813-91	s	RES, CHIP 220 (1608)
R556	1-216-813-91	s	RES, CHIP 220 (1608)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R558	1-208-887-81	s	RES, CHIP 1.0K (1005)
R559	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R560	1-208-887-81	s	RES, CHIP 1.0K (1005)
R561	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R562	1-216-813-91	s	RES, CHIP 220 (1608)
R564	1-216-813-91	s	RES, CHIP 220 (1608)
R566	1-208-935-81	s	RES, CHIP 100K (1005)
R567	1-208-935-81	s	RES, CHIP 100K (1005)
R568	1-208-911-81	s	RES, CHIP 10K (1005)
R569	1-208-911-81	s	RES, CHIP 10K (1005)
R570	1-208-935-81	s	RES, CHIP 100K (1005)
R571	1-208-911-81	s	RES, CHIP 10K (1005)
R572	1-208-911-81	s	RES, CHIP 10K (1005)
R573	1-208-935-81	s	RES, CHIP 100K (1005)
R580	1-208-919-81	s	RES, CHIP 22K (1005)
R581	1-208-919-81	s	RES, CHIP 22K (1005)
R582	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R583	1-208-911-81	s	RES, CHIP 10K (1005)
R584	1-208-911-81	s	RES, CHIP 10K (1005)
R585	1-208-863-81	s	RES, CHIP 100 (1005)
R586	1-208-919-81	s	RES, CHIP 22K (1005)
R587	1-208-919-81	s	RES, CHIP 22K (1005)
R588	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R589	1-208-911-81	s	RES, CHIP 10K (1005)
R590	1-208-911-81	s	RES, CHIP 10K (1005)
R591	1-208-863-81	s	RES, CHIP 100 (1005)
R594	1-216-813-91	s	RES, CHIP 220 (1608)
R596	1-216-813-91	s	RES, CHIP 220 (1608)
R598	1-216-813-91	s	RES, CHIP 220 (1608)
R599	1-216-813-91	s	RES, CHIP 220 (1608)
R600	1-208-863-81	s	RES, CHIP 100 (1005)
R601	1-208-863-81	s	RES, CHIP 100 (1005)
R602	1-220-870-81	s	RES, CHIP 10 (1005)
R603	1-208-915-81	s	RES, CHIP 15K (1005)
R604	1-208-915-81	s	RES, CHIP 15K (1005)
R605	1-208-915-81	s	RES, CHIP 15K (1005)
R606	1-208-915-81	s	RES, CHIP 15K (1005)
R607	1-208-919-81	s	RES, CHIP 22K (1005)
R608	1-208-919-81	s	RES, CHIP 22K (1005)
R609	1-208-863-81	s	RES, CHIP 100 (1005)
R610	1-208-919-81	s	RES, CHIP 22K (1005)
R611	1-208-919-81	s	RES, CHIP 22K (1005)
R612	1-208-863-81	s	RES, CHIP 100 (1005)
R613	1-208-919-81	s	RES, CHIP 22K (1005)
R614	1-208-919-81	s	RES, CHIP 22K (1005)
R615	1-208-863-81	s	RES, CHIP 100 (1005)
R616	1-208-863-81	s	RES, CHIP 100 (1005)
R617	1-208-919-81	s	RES, CHIP 22K (1005)
R618	1-208-919-81	s	RES, CHIP 22K (1005)
R619	1-208-919-81	s	RES, CHIP 22K (1005)
R620	1-208-919-81	s	RES, CHIP 22K (1005)
R621	1-208-927-81	s	RES, CHIP 47K (1005)
R622	1-208-927-81	s	RES, CHIP 47K (1005)
R623	1-208-919-81	s	RES, CHIP 22K (1005)
R624	1-208-919-81	s	RES, CHIP 22K (1005)
R625	1-208-911-81	s	RES, CHIP 10K (1005)
R626	1-208-911-81	s	RES, CHIP 10K (1005)
R627	1-208-911-81	s	RES, CHIP 10K (1005)
R628	1-208-911-81	s	RES, CHIP 10K (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R629	1-208-903-81	s	RES, CHIP 4.7K (1005)
R630	1-208-903-81	s	RES, CHIP 4.7K (1005)
R631	1-208-903-81	s	RES, CHIP 4.7K (1005)
R632	1-208-903-81	s	RES, CHIP 4.7K (1005)
R633	1-208-911-81	s	RES, CHIP 10K (1005)
R634	1-208-911-81	s	RES, CHIP 10K (1005)
R635	1-208-923-81	s	RES, CHIP 33K (1005)
R636	1-208-923-81	s	RES, CHIP 33K (1005)
R637	1-208-919-81	s	RES, CHIP 22K (1005)
R638	1-208-863-81	s	RES, CHIP 100 (1005)
R639	1-208-919-81	s	RES, CHIP 22K (1005)
R640	1-208-863-81	s	RES, CHIP 100 (1005)
R641	1-208-923-81	s	RES, CHIP 33K (1005)
R642	1-208-923-81	s	RES, CHIP 33K (1005)
R643	1-208-919-81	s	RES, CHIP 22K (1005)
R644	1-208-919-81	s	RES, CHIP 22K (1005)
R645	1-208-911-81	s	RES, CHIP 10K (1005)
R646	1-208-919-81	s	RES, CHIP 22K (1005)
R647	1-208-919-81	s	RES, CHIP 22K (1005)
R648	1-208-911-81	s	RES, CHIP 10K (1005)
R649	1-208-919-81	s	RES, CHIP 22K (1005)
R650	1-208-919-81	s	RES, CHIP 22K (1005)
R651	1-208-863-81	s	RES, CHIP 100 (1005)
R652	1-208-911-81	s	RES, CHIP 10K (1005)
R653	1-208-863-81	s	RES, CHIP 100 (1005)
R654	1-208-935-81	s	RES, CHIP 100K (1005)
R655	1-208-935-81	s	RES, CHIP 100K (1005)
R656	1-208-911-81	s	RES, CHIP 10K (1005)
R657	1-208-911-81	s	RES, CHIP 10K (1005)
R658	1-208-935-81	s	RES, CHIP 100K (1005)
R659	1-208-935-81	s	RES, CHIP 100K (1005)
R660	1-208-919-81	s	RES, CHIP 22K (1005)
R661	1-208-911-81	s	RES, CHIP 10K (1005)
R662	1-208-911-81	s	RES, CHIP 10K (1005)
R663	1-208-911-81	s	RES, CHIP 10K (1005)
R664	1-208-919-81	s	RES, CHIP 22K (1005)
R665	1-208-863-81	s	RES, CHIP 100 (1005)
R666	1-208-911-81	s	RES, CHIP 10K (1005)
R667	1-208-911-81	s	RES, CHIP 10K (1005)
R668	1-208-863-81	s	RES, CHIP 100 (1005)
R669	1-208-911-81	s	RES, CHIP 10K (1005)
R670	1-208-911-81	s	RES, CHIP 10K (1005)
R671	1-208-927-81	s	RES, CHIP 47K (1005)
R672	1-208-911-81	s	RES, CHIP 10K (1005)
R673	1-208-911-81	s	RES, CHIP 10K (1005)
R674	1-208-927-81	s	RES, CHIP 47K (1005)
R675	1-208-911-81	s	RES, CHIP 10K (1005)
R676	1-208-911-81	s	RES, CHIP 10K (1005)
R677	1-208-911-81	s	RES, CHIP 10K (1005)
R678	1-208-911-81	s	RES, CHIP 10K (1005)
R679	1-208-927-81	s	RES, CHIP 47K (1005)
R680	1-208-927-81	s	RES, CHIP 47K (1005)
R681	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R682	1-216-813-91	s	RES, CHIP 220 (1608)
R683	1-216-813-91	s	RES, CHIP 220 (1608)
R684	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R685	1-216-813-91	s	RES, CHIP 220 (1608)
R686	1-216-813-91	s	RES, CHIP 220 (1608)
R687	1-208-933-81	s	RES, CHIP 82K (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R688	1-208-933-81	s	RES, CHIP 82K (1005)
R689	1-208-891-81	s	RES, CHIP 1.5K (1005)
R690	1-208-891-81	s	RES, CHIP 1.5K (1005)
R691	1-208-911-81	s	RES, CHIP 10K (1005)
R692	1-208-903-81	s	RES, CHIP 4.7K (1005)
R693	1-208-911-81	s	RES, CHIP 10K (1005)
R694	1-208-903-81	s	RES, CHIP 4.7K (1005)
R695	1-208-919-81	s	RES, CHIP 22K (1005)
R696	1-208-919-81	s	RES, CHIP 22K (1005)
R697	1-208-919-81	s	RES, CHIP 22K (1005)
R698	1-208-919-81	s	RES, CHIP 22K (1005)
R699	1-208-911-81	s	RES, CHIP 10K (1005)
R700	1-208-911-81	s	RES, CHIP 10K (1005)
R701	1-208-911-81	s	RES, CHIP 10K (1005)
R702	1-208-911-81	s	RES, CHIP 10K (1005)
R703	1-208-895-81	s	RES, CHIP 2.2K (1005)
R704	1-208-895-81	s	RES, CHIP 2.2K (1005)
R705	1-208-895-81	s	RES, CHIP 2.2K (1005)
R706	1-208-895-81	s	RES, CHIP 2.2K (1005)
R707	1-208-927-81	s	RES, CHIP 47K (1005)
R708	1-208-927-81	s	RES, CHIP 47K (1005)
R709	1-208-919-81	s	RES, CHIP 22K (1005)
R710	1-208-919-81	s	RES, CHIP 22K (1005)
R711	1-208-911-81	s	RES, CHIP 10K (1005)
R712	1-208-911-81	s	RES, CHIP 10K (1005)
R713	1-208-911-81	s	RES, CHIP 10K (1005)
R714	1-208-911-81	s	RES, CHIP 10K (1005)
R715	1-208-903-81	s	RES, CHIP 4.7K (1005)
R716	1-208-903-81	s	RES, CHIP 4.7K (1005)
R717	1-208-903-81	s	RES, CHIP 4.7K (1005)
R718	1-208-903-81	s	RES, CHIP 4.7K (1005)
R719	1-208-919-81	s	RES, CHIP 22K (1005)
R720	1-208-919-81	s	RES, CHIP 22K (1005)
R721	1-208-919-81	s	RES, CHIP 22K (1005)
R722	1-208-919-81	s	RES, CHIP 22K (1005)
R723	1-208-919-81	s	RES, CHIP 22K (1005)
R724	1-208-919-81	s	RES, CHIP 22K (1005)
R725	1-208-861-81	s	RES, CHIP 82 (1005)
R726	1-208-919-81	s	RES, CHIP 22K (1005)
R727	1-208-861-81	s	RES, CHIP 82 (1005)
R728	1-208-919-81	s	RES, CHIP 22K (1005)
R729	1-220-870-81	s	RES, CHIP 10 (1005)
R730	1-220-870-81	s	RES, CHIP 10 (1005)
R731	1-220-870-81	s	RES, CHIP 10 (1005)
R732	1-220-870-81	s	RES, CHIP 10 (1005)
R733	1-208-935-81	s	RES, CHIP 100K (1005)
R734	1-208-935-81	s	RES, CHIP 100K (1005)
R735	1-208-935-81	s	RES, CHIP 100K (1005)
R736	1-208-935-81	s	RES, CHIP 100K (1005)
R737	1-208-919-81	s	RES, CHIP 22K (1005)
R738	1-208-919-81	s	RES, CHIP 22K (1005)
R739	1-208-887-81	s	RES, CHIP 1.0K (1005)
R740	1-208-915-81	s	RES, CHIP 15K (1005)
R741	1-208-915-81	s	RES, CHIP 15K (1005)
R742	1-208-863-81	s	RES, CHIP 100 (1005)
R743	1-208-919-81	s	RES, CHIP 22K (1005)
R744	1-208-919-81	s	RES, CHIP 22K (1005)
R745	1-208-887-81	s	RES, CHIP 1.0K (1005)
R746	1-208-915-81	s	RES, CHIP 15K (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R747	1-208-915-81	s	RES, CHIP 15K (1005)
R748	1-208-863-81	s	RES, CHIP 100 (1005)
R749	1-208-923-81	s	RES, CHIP 33K (1005)
R750	1-208-923-81	s	RES, CHIP 33K (1005)
R751	1-208-887-81	s	RES, CHIP 1.0K (1005)
R752	1-208-887-81	s	RES, CHIP 1.0K (1005)
R753	1-208-887-81	s	RES, CHIP 1.0K (1005)
R754	1-208-899-81	s	RES, CHIP 3.3K (1005)
R755	1-208-899-81	s	RES, CHIP 3.3K (1005)
R756	1-208-899-81	s	RES, CHIP 3.3K (1005)
R757	1-208-915-81	s	RES, CHIP 15K (1005)
R758	1-208-915-81	s	RES, CHIP 15K (1005)
R759	1-208-915-81	s	RES, CHIP 15K (1005)
R760	1-208-887-81	s	RES, CHIP 1.0K (1005)
R761	1-208-895-81	s	RES, CHIP 2.2K (1005)
R762	1-208-927-81	s	RES, CHIP 47K (1005)
R763	1-208-887-81	s	RES, CHIP 1.0K (1005)
R764	1-208-895-81	s	RES, CHIP 2.2K (1005)
R765	1-208-927-81	s	RES, CHIP 47K (1005)
R766	1-208-887-81	s	RES, CHIP 1.0K (1005)
R767	1-208-895-81	s	RES, CHIP 2.2K (1005)
R768	1-208-927-81	s	RES, CHIP 47K (1005)
R769	1-208-915-81	s	RES, CHIP 15K (1005)
R770	1-208-915-81	s	RES, CHIP 15K (1005)
R771	1-208-915-81	s	RES, CHIP 15K (1005)
R772	1-208-887-81	s	RES, CHIP 1.0K (1005)
R773	1-208-887-81	s	RES, CHIP 1.0K (1005)
R774	1-208-887-81	s	RES, CHIP 1.0K (1005)
R775	1-208-927-81	s	RES, CHIP 47K (1005)
R776	1-208-927-81	s	RES, CHIP 47K (1005)
R777	1-208-927-81	s	RES, CHIP 47K (1005)
R778	1-208-903-81	s	RES, CHIP 4.7K (1005)
R779	1-208-911-81	s	RES, CHIP 10K (1005)
R780	1-208-911-81	s	RES, CHIP 10K (1005)
R781	1-208-903-81	s	RES, CHIP 4.7K (1005)
R782	1-208-911-81	s	RES, CHIP 10K (1005)
R783	1-208-911-81	s	RES, CHIP 10K (1005)
R784	1-208-903-81	s	RES, CHIP 4.7K (1005)
R785	1-208-911-81	s	RES, CHIP 10K (1005)
R786	1-208-855-81	s	RES, CHIP 47 (1005)
R787	1-208-855-81	s	RES, CHIP 47 (1005)
R788	1-208-903-81	s	RES, CHIP 4.7K (1005)
R789	1-208-903-81	s	RES, CHIP 4.7K (1005)
R790	1-208-903-81	s	RES, CHIP 4.7K (1005)
R791	1-208-911-81	s	RES, CHIP 10K (1005)
R792	1-208-911-81	s	RES, CHIP 10K (1005)
R793	1-208-911-81	s	RES, CHIP 10K (1005)
R794	1-208-911-81	s	RES, CHIP 10K (1005)
R795	1-208-923-81	s	RES, CHIP 33K (1005)
R796	1-208-923-81	s	RES, CHIP 33K (1005)
R797	1-208-887-81	s	RES, CHIP 1.0K (1005)
R798	1-208-887-81	s	RES, CHIP 1.0K (1005)
R799	1-208-887-81	s	RES, CHIP 1.0K (1005)
R800	1-208-887-81	s	RES, CHIP 1.0K (1005)
R801	1-208-887-81	s	RES, CHIP 1.0K (1005)
R802	1-208-923-81	s	RES, CHIP 33K (1005)
R803	1-208-923-81	s	RES, CHIP 33K (1005)
R804	1-208-887-81	s	RES, CHIP 1.0K (1005)
R805	1-208-887-81	s	RES, CHIP 1.0K (1005)

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R806	1-208-903-81	s	RES, CHIP 4.7K (1005)
R807	1-208-911-81	s	RES, CHIP 10K (1005)
R808	1-244-161-81	s	RES, CHIP 2.2 (1005)
R809	1-244-161-81	s	RES, CHIP 2.2 (1005)
R810	1-244-161-81	s	RES, CHIP 2.2 (1005)
R999	1-208-863-81	s	RES, CHIP 100 (1005)
R1003	1-216-813-91	s	RES, CHIP 220 (1608)
R1004	1-216-813-91	s	RES, CHIP 220 (1608)
R1005	1-216-813-91	s	RES, CHIP 220 (1608)
R1006	1-216-813-91	s	RES, CHIP 220 (1608)
RB102	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB103	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB104	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB105	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB200	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB201	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB202	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB203	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB204	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB205	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB206	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB207	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB208	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB209	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB210	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB211	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB212	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB213	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB214	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB215	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB216	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB217	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB218	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB219	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB300	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB301	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB302	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB303	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB304	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB305	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB306	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB307	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB308	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB309	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB310	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB311	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB312	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB313	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB314	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB315	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB316	1-234-375-21	s	RES, NETWORK 1K (1005X4)
RB400	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB501	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB502	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB601	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RV500	1-225-793-21	s	RES, ADJ, CERMET 20K
RV501	1-225-793-21	s	RES, ADJ, CERMET 20K
RV600	1-241-264-41	s	RES, ADJ, CERMET 10K
RV601	1-241-264-41	s	RES, ADJ, CERMET 10K

(AVP-6 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
S1	1-762-775-21	s	SWITCH, TOGGLE
S4	1-692-271-41	s	SWITCH, SLIDE
S11	1-570-711-33	s	SWITCH, SLIDE
S12	1-570-711-33	s	SWITCH, SLIDE
S21	1-570-711-33	s	SWITCH, SLIDE
S22	1-570-711-33	s	SWITCH, SLIDE
S31	1-570-711-33	s	SWITCH, SLIDE
S32	1-570-711-33	s	SWITCH, SLIDE
S500	1-570-711-33	s	SWITCH, SLIDE
S501	1-570-711-33	s	SWITCH, SLIDE
S502	1-570-711-33	s	SWITCH, SLIDE
S503	1-570-711-33	s	SWITCH, SLIDE
S600	1-570-711-33	s	SWITCH, SLIDE
S601	1-570-711-33	s	SWITCH, SLIDE
S602	1-570-711-33	s	SWITCH, SLIDE
S603	1-570-711-33	s	SWITCH, SLIDE
T700	1-443-158-11	s	TRANSFORMER, DC-DC CONVERTER
T701	1-443-158-11	s	TRANSFORMER, DC-DC CONVERTER
THP100 ⚠	1-803-615-21	s	THERMISTOR, POSITIVE
THP101 ⚠	1-803-615-21	s	THERMISTOR, POSITIVE
THP102 ⚠	1-804-616-21	s	THERMISTOR, POSITIVE
THP103 ⚠	1-804-458-21	s	THERMISTOR, POSITIVE
THP104 ⚠	1-804-616-21	s	THERMISTOR, POSITIVE
THP105 ⚠	1-804-616-21	s	THERMISTOR, POSITIVE
THP106 ⚠	1-804-616-21	s	THERMISTOR, POSITIVE
TP300	1-535-877-22	s	CHIP, CHECKER
TP301	1-535-877-22	s	CHIP, CHECKER
TP302	1-535-877-22	s	CHIP, CHECKER
TP400	1-535-877-22	s	CHIP, CHECKER
TP401	1-535-877-22	s	CHIP, CHECKER
TP402	1-535-877-22	s	CHIP, CHECKER
TP403	1-535-877-22	s	CHIP, CHECKER
TP404	1-535-877-22	s	CHIP, CHECKER
TP405	1-535-877-22	s	CHIP, CHECKER
TP500	1-535-877-22	s	CHIP, CHECKER
TP501	1-535-877-22	s	CHIP, CHECKER
TP502	1-535-877-22	s	CHIP, CHECKER
TP503	1-535-877-22	s	CHIP, CHECKER
TP504	1-535-877-22	s	CHIP, CHECKER
TP505	1-535-877-22	s	CHIP, CHECKER
TP600	1-535-877-22	s	CHIP, CHECKER
TP601	1-535-877-22	s	CHIP, CHECKER
X300	1-813-253-12	s	OSCILLATOR, CRYSTAL (VCXO) 5V

AVP-6 BOARD (suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-300-A	s	MOUNTED CIRCUIT BOARD, AVP-6
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C100	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C101	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C102	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C103	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C104	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C105	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C106	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C107	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C108	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C109	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C110	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C111	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C112	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C113	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C114	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C115	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C116	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C117	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C118	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C119	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C120	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C121	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C123	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C124	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C125	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C126	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C127	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C129	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C130	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C131	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C132	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C133	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C134	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C135	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C136	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C137	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C138	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C139	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C140	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C141	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C143	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C144	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C145	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C146	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C147	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C148	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C149	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C150	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C151	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C152	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C153	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C154	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C155	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C156	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C157	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C158	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C159	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C160	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C161	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C162	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C163	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C164	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C165	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C166	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C167	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C168	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C169	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C170	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C171	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C172	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C173	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C174	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C175	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C176	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C177	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C178	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C179	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C200	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C201	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C202	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C203	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C204	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C205	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C206	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C207	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C208	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C300	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C301	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C302	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C303	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C304	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C305	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C306	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C307	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C308	1-164-858-11	s	CAPACITOR,CERAMIC 22PF/50V
C309	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C310	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C311	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C312	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C313	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C314	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C315	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C316	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C317	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C318	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C319	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C320	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C321	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C322	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C323	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C324	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C325	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C326	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C327	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C328	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C329	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C330	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C331	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C332	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C333	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C334	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C335	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C336	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C337	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C338	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C339	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C340	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C341	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C342	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C343	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C344	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C345	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C346	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C347	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C348	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C349	1-164-854-11	s	CAPACITOR,CHIP CERAMIC 15PF/50
C350	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C351	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C352	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C353	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C354	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C355	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C356	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C357	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C358	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C359	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C360	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C361	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C362	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C363	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C364	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C365	1-164-854-11	s	CAPACITOR,CHIP CERAMIC 15PF/50
C366	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C367	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C368	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C369	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C400	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C402	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C403	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C404	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C405	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C406	1-165-884-91	s	CAPACITOR, CERAMIC 2.2MF(1608)
C407	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C408	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C409	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C410	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C411	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C412	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C413	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C414	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C415	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C416	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C417	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C418	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C419	1-165-884-91	s	CAPACITOR, CERAMIC 2.2MF(1608)
C420	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C421	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C422	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C425	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C426	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C428	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C429	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C430	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C431	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C432	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C433	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C434	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C435	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C436	1-164-315-11	s	CAPACITOR,CERAMIC 470PF/50V CH
C438	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C439	1-162-966-11	s	CAPACITOR,CERAMIC 2200PF/50V B
C440	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C441	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C443	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C445	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C446	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C447	1-117-142-21	s	CAPACITOR, ELECT 0.22MF
C448	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C450	1-117-142-21	s	CAPACITOR, ELECT 0.22MF
C451	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C453	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C454	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C455	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C456	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C502	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C503	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C504	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C505	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C506	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C507	1-165-884-91	s	CAPACITOR, CERAMIC 2.2MF(1608)
C508	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C509	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C510	1-165-884-91	s	CAPACITOR, CERAMIC 2.2MF(1608)
C511	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C512	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C513	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C514	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C515	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C516	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C517	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C518	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C519	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C520	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C521	1-164-858-11	s	CAPACITOR,CERAMIC 22PF/50V
C522	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C523	1-164-858-11	s	CAPACITOR,CERAMIC 22PF/50V
C524	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C525	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C526	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C527	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C528	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C529	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C530	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C531	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C532	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C533	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C534	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C535	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C536	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C538	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C539	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C541	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C542	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C543	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C546	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C547	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C552	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C553	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C554	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C555	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C600	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C601	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C602	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C603	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C604	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C605	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C606	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C607	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C608	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C609	1-165-884-91	s	CAPACITOR, CERAMIC 2.2MF(1608)
C610	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C611	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C612	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C613	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C614	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C615	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C616	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C617	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C618	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C619	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C620	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C621	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C622	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C623	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C624	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C625	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C626	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C627	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C628	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C629	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C630	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C631	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C632	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C633	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C634	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C635	1-107-781-11	s	CAPACITOR,ELECT 47MF/16V(BP)
C636	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C637	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C640	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C641	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C642	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)
C643	1-126-395-11	s	CAPACITOR,ELECT 22MF/16V(CHIP)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C644	1-165-467-21	s	CAPACITOR ELECT 47MF 63V
C645	1-165-467-21	s	CAPACITOR ELECT 47MF 63V
C646	1-165-467-21	s	CAPACITOR ELECT 47MF 63V
C647	1-165-467-21	s	CAPACITOR ELECT 47MF 63V
C648	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C649	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C650	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C651	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C652	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C653	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C654	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C655	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C656	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C700	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C701	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C702	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C703	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C704	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C705	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C706	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C707	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C708	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C709	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C710	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C711	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C712	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C713	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C714	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C715	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C716	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C717	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C718	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C719	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C720	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C721	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C722	1-100-581-81	s	CHIP CERAMIC0.0047MF B1005
C723	1-164-940-11	s	CAPACITOR,CHIP CERAMIC 3300/16
C724	1-164-940-11	s	CAPACITOR,CHIP CERAMIC 3300/16
C725	1-164-940-11	s	CAPACITOR,CHIP CERAMIC 3300/16
C726	1-164-940-11	s	CAPACITOR,CHIP CERAMIC 3300/16
C727	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
CN3	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D100	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D101	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D102	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D103	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D104	8-719-063-83	s	LED SML-510MWT86
D105	8-719-063-83	s	LED SML-510MWT86
D106	8-719-063-83	s	LED SML-510MWT86
D107	8-719-064-41	s	DIODE CL-191Y-CD-T
D400	8-719-421-27	s	DIODE MA728
D401	8-719-421-27	s	DIODE MA728
D402	8-719-421-27	s	DIODE MA728
D403	8-719-421-27	s	DIODE MA728
D404	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D405	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D406	8-719-421-27	s	DIODE MA728

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
D407	8-719-421-27	s	DIODE MA728
D408	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D409	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D410	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D411	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D500	8-719-421-27	s	DIODE MA728
D501	8-719-421-27	s	DIODE MA728
D502	8-719-421-27	s	DIODE MA728
D503	8-719-421-27	s	DIODE MA728
D504	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D505	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D506	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D507	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D600	8-719-421-27	s	DIODE MA728
D601	8-719-421-27	s	DIODE MA728
D602	8-719-421-27	s	DIODE MA728
D603	8-719-421-27	s	DIODE MA728
D604	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D605	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D606	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D607	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D700	8-719-024-81	s	DIODE 1SS300-TE85L
D701	8-719-024-81	s	DIODE 1SS300-TE85L
D702	8-719-024-81	s	DIODE 1SS300-TE85L
D703	8-719-801-78	s	DIODE 1SS184
D704	8-719-801-78	s	DIODE 1SS184
D705	8-719-801-78	s	DIODE 1SS184
D706	8-719-420-90	s	DIODE MA8051-M
D707	8-719-420-90	s	DIODE MA8051-M
D708	8-719-420-90	s	DIODE MA8051-M
D709	8-719-801-78	s	DIODE 1SS184
D710	8-719-801-78	s	DIODE 1SS184
D711	8-719-801-78	s	DIODE 1SS184
D712	8-719-024-81	s	DIODE 1SS300-TE85L
D713	8-719-024-81	s	DIODE 1SS300-TE85L
D714	8-719-024-81	s	DIODE 1SS300-TE85L
D715	8-719-016-84	s	DIODE 02DZ2.0-TPH3
D716	8-719-024-81	s	DIODE 1SS300-TE85L
D717	8-719-024-81	s	DIODE 1SS300-TE85L
D718	8-719-801-78	s	DIODE 1SS184
D719	8-719-801-78	s	DIODE 1SS184
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E3	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E4	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB100	1-469-094-21	s	FERRITE, EMI (SMD)
FB101	1-469-094-21	s	FERRITE, EMI (SMD)
IC100	8-759-327-01	s	IC NJM062V-TE2
IC101	8-759-327-01	s	IC NJM062V-TE2
IC102	8-759-338-95	s	IC NJM2903V (TE2)
IC103	8-759-338-95	s	IC NJM2903V (TE2)
IC104	6-701-572-01	s	IC TPS54610PWPR
IC105	8-759-327-01	s	IC NJM062V-TE2
IC106	6-704-976-01	s	IC ADR381ART-REEL7
IC107	8-759-471-96	s	IC 74VHC08MTCX
IC108	8-759-648-61	s	IC LTC1387CG
IC109	8-759-648-61	s	IC LTC1387CG

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
IC200	8-759-392-77	s	IC SN74LVC245APW (E20)
IC201	8-759-392-77	s	IC SN74LVC245APW (E20)
IC202	8-759-392-77	s	IC SN74LVC245APW (E20)
IC203	8-759-472-18	s	IC 74VHC138MTCX
IC204	8-759-363-26	s	IC RN5VD28AA-TL
IC205	6-706-489-01	s	IC TC7SH32FU(T5RSOYJF)
IC206	8-752-392-03	s	IC CXD1095BR
IC207	8-759-471-96	s	IC 74VHC08MTCX
IC300	6-704-463-01	s	IC CY7C1021CV33-15ZXCT
IC301	8-759-485-24	s	IC MC74HC4046ADT (R2)
IC303	8-759-669-66	s	IC TLC272CPWR
IC304	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC305	8-759-471-96	s	IC 74VHC08MTCX
IC308	8-759-392-77	s	IC SN74LVC245APW (E20)
IC309	8-759-392-77	s	IC SN74LVC245APW (E20)
IC311	8-759-561-46	s	IC AD8014ART-REEL7
IC312	8-759-392-77	s	IC SN74LVC245APW (E20)
IC313	8-759-392-77	s	IC SN74LVC245APW (E20)
IC314	8-759-392-77	s	IC SN74LVC245APW (E20)
IC315	8-759-392-77	s	IC SN74LVC245APW (E20)
IC316	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC317	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC318	8-759-524-27	s	IC TC74VHC244FT(EL)
IC319	8-759-441-31	s	IC MC14053BDTR2
IC320	8-759-561-46	s	IC AD8014ART-REEL7
IC321	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC401	6-700-563-01	s	IC AK4552VT-E2
IC402	6-700-563-01	s	IC AK4552VT-E2
IC403	8-759-278-58	s	IC NJM4558V (TE2)
IC404	8-759-441-31	s	IC MC14053BDTR2
IC405	8-759-278-58	s	IC NJM4558V (TE2)
IC406	8-759-422-21	s	IC NJM4580VTE2
IC407	8-759-422-21	s	IC NJM4580VTE2
IC409	8-759-278-58	s	IC NJM4558V (TE2)
IC410	8-759-278-58	s	IC NJM4558V (TE2)
IC500	6-700-563-01	s	IC AK4552VT-E2
IC501	6-700-563-01	s	IC AK4552VT-E2
IC502	8-759-278-58	s	IC NJM4558V (TE2)
IC503	8-759-278-58	s	IC NJM4558V (TE2)
IC504	8-759-278-58	s	IC NJM4558V (TE2)
IC505	8-759-422-21	s	IC NJM4580VTE2
IC506	8-759-422-21	s	IC NJM4580VTE2
IC507	8-759-278-58	s	IC NJM4558V (TE2)
IC508	8-759-278-58	s	IC NJM4558V (TE2)
IC600	6-700-563-01	s	IC AK4552VT-E2
IC601	8-759-278-58	s	IC NJM4558V (TE2)
IC602	8-759-278-58	s	IC NJM4558V (TE2)
IC603	8-759-278-58	s	IC NJM4558V (TE2)
IC604	8-759-278-58	s	IC NJM4558V (TE2)
IC605	8-759-441-31	s	IC MC14053BDTR2
IC606	8-759-441-31	s	IC MC14053BDTR2
IC607	8-759-422-21	s	IC NJM4580VTE2
IC608	8-759-422-21	s	IC NJM4580VTE2
IC609	8-759-278-58	s	IC NJM4558V (TE2)
IC610	8-759-278-58	s	IC NJM4558V (TE2)
IC611	8-759-422-21	s	IC NJM4580VTE2
IC612	8-759-422-21	s	IC NJM4580VTE2
IC613	8-759-278-58	s	IC NJM4558V (TE2)
IC614	8-759-278-58	s	IC NJM4558V (TE2)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
IC701	8-759-052-52	s	IC L78M05T-FA
IC702	8-759-052-52	s	IC L78M05T-FA
IC703	8-759-052-52	s	IC L78M05T-FA
JC100	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC201	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC500	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC503	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC504	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC507	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC700	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC701	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC702	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC703	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC704	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
L100	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-416-344-11	s	COIL, CHOKE 10UH
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
L300	1-414-398-11	s	INDUCTOR (SMD) 10UH
L301	1-414-398-11	s	INDUCTOR (SMD) 10UH
L302	1-414-398-11	s	INDUCTOR (SMD) 10UH
L303	1-414-398-11	s	INDUCTOR (SMD) 10UH
L304	1-414-398-11	s	INDUCTOR (SMD) 10UH
L305	1-414-398-11	s	INDUCTOR (SMD) 10UH
L306	1-414-398-11	s	INDUCTOR (SMD) 10UH
L307	1-414-398-11	s	INDUCTOR (SMD) 10UH
L400	1-414-398-11	s	INDUCTOR (SMD) 10UH
L401	1-414-398-11	s	INDUCTOR (SMD) 10UH
L402	1-414-398-11	s	INDUCTOR (SMD) 10UH
L403	1-414-398-11	s	INDUCTOR (SMD) 10UH
L500	1-414-398-11	s	INDUCTOR (SMD) 10UH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L604	1-414-398-11	s	INDUCTOR (SMD) 10UH
L605	1-414-400-11	s	INDUCTOR, 22UH
L606	1-414-400-11	s	INDUCTOR, 22UH
L607	1-414-400-11	s	INDUCTOR, 22UH
L608	1-414-400-11	s	INDUCTOR, 22UH
L700	1-414-400-11	s	INDUCTOR, 22UH
L701	1-414-400-11	s	INDUCTOR, 22UH
PH700	8-749-014-35	s	IC HCPL-0630-500
PH701	8-749-014-35	s	IC HCPL-0630-500
Q1	8-729-927-99	s	TRANSISTOR 2SC4617R
Q100	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q101	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q102	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q103	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q104	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q105	8-729-927-99	s	TRANSISTOR 2SC4617R
Q106	8-729-927-99	s	TRANSISTOR 2SC4617R
Q107	8-729-927-99	s	TRANSISTOR 2SC4617R
Q108	8-729-927-99	s	TRANSISTOR 2SC4617R
Q109	8-729-927-99	s	TRANSISTOR 2SC4617R
Q110	8-729-927-99	s	TRANSISTOR 2SC4617R
Q600	8-729-927-99	s	TRANSISTOR 2SC4617R

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
Q601	8-729-927-99	s	TRANSISTOR 2SC4617R
Q602	8-729-928-19	s	TRANSISTOR 2SA1774R
Q603	8-729-927-99	s	TRANSISTOR 2SC4617R
Q604	8-729-928-19	s	TRANSISTOR 2SA1774R
Q605	8-729-927-99	s	TRANSISTOR 2SC4617R
Q606	8-729-927-99	s	TRANSISTOR 2SC4617R
Q607	8-729-927-99	s	TRANSISTOR 2SC4617R
Q608	8-729-928-19	s	TRANSISTOR 2SA1774R
Q609	8-729-927-99	s	TRANSISTOR 2SC4617R
Q610	8-729-928-19	s	TRANSISTOR 2SA1774R
Q611	8-729-927-99	s	TRANSISTOR 2SC4617R
Q700	8-729-927-99	s	TRANSISTOR 2SC4617R
Q701	8-729-927-99	s	TRANSISTOR 2SC4617R
Q702	8-729-927-99	s	TRANSISTOR 2SC4617R
Q703	8-729-927-99	s	TRANSISTOR 2SC4617R
Q704	8-729-927-99	s	TRANSISTOR 2SC4617R
Q705	8-729-927-99	s	TRANSISTOR 2SC4617R
Q706	8-729-141-75	s	TRANSISTOR 2SD596DV345
Q707	8-729-141-75	s	TRANSISTOR 2SD596DV345
Q710	8-729-927-99	s	TRANSISTOR 2SC4617R
Q711	8-729-927-99	s	TRANSISTOR 2SC4617R
Q712	8-729-927-99	s	TRANSISTOR 2SC4617R
Q713	8-729-928-19	s	TRANSISTOR 2SA1774R
Q714	8-729-928-19	s	TRANSISTOR 2SA1774R
Q715	8-729-928-19	s	TRANSISTOR 2SA1774R
Q716	8-729-927-99	s	TRANSISTOR 2SC4617R
R100	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R101	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R102	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R103	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R104	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R105	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R106	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R107	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R108	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R109	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R110	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R111	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R113	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R114	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R115	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R116	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R117	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R118	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R119	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R120	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R121	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R122	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R123	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R124	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R125	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R126	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R127	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R128	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R129	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R130	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R131	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R132	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R133	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R134	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R135	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R136	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R137	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R138	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R139	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R141	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R144	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R146	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R147	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R148	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R149	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R150	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R151	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R152	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R154	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R155	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R156	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R157	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R159	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R160	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R161	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R162	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R163	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R164	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R165	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R166	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R167	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R200	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R201	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R202	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R203	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R204	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R205	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R206	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R207	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R209	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R210	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R211	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R212	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R217	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R219	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R220	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R222	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R223	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R224	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R300	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R301	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R302	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R303	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R304	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R305	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R306	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R307	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R308	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R309	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R310	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R311	1-218-989-11	s	RESISTOR,CHIP 1M 1/16W (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R312	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R313	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R314	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R315	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R316	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R317	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R318	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R319	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R320	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R321	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R322	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R323	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R324	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R325	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R326	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R327	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R328	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R329	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R330	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R331	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R332	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R333	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R334	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R335	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R336	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R337	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R338	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R339	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R340	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R341	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R342	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R343	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R344	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R345	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R346	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R347	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R348	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R349	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R350	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R351	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R352	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R353	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R354	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R355	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R356	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R357	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R358	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R359	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R360	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R361	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R362	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R363	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R364	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R365	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R366	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R367	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R401	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R402	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R403	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R404	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R405	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R406	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R407	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R408	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R409	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R410	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R411	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R412	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R413	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R414	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R415	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R416	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R417	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R418	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R419	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R420	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R421	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R422	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R423	1-208-947-11	s	RESISTOR CHIP 330K 1/16W(1005)
R424	1-208-947-11	s	RESISTOR CHIP 330K 1/16W(1005)
R425	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R426	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R429	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R430	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R431	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R434	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R435	1-208-943-11	s	RESISTOR CHIP 220K
R436	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R438	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R440	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R441	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R442	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R443	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R444	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R445	1-208-905-11	s	RESISTOR, CHIP 5.6K (1005)
R446	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R447	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R448	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R449	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R450	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R451	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R452	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R453	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R454	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R455	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R456	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R457	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R458	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R459	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R460	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R462	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R463	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R464	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R465	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R466	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R467	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R468	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R469	1-208-911-11	s	RESISTOR, CHIP 10K (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R500	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R501	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R502	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R503	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R504	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R505	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R506	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R507	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R508	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R509	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R510	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R511	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R512	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R513	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R514	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R515	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R516	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R517	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R518	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R519	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R520	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R521	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R522	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R523	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R524	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R525	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R526	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R527	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R528	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R529	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R530	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R531	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R532	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R533	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R534	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R535	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R536	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R537	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R538	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R539	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R540	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R541	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R542	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R543	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R544	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R545	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R546	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R547	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R548	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R549	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R550	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R551	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R552	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R553	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R554	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R556	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R558	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R559	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R560	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R561	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R562	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R564	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R566	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R567	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R568	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R569	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R570	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R571	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R572	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R573	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R580	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R581	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R582	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R583	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R584	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R585	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R586	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R587	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R588	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R589	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R590	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R591	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R600	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R601	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R602	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R603	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R604	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R605	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R606	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R607	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R608	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R609	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R610	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R611	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R612	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R613	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R614	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R615	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R616	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R617	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R618	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R619	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R620	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R621	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R622	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R623	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R624	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R625	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R626	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R627	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R628	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R629	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R630	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R631	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R632	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R633	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R634	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R635	1-208-923-11	s	RESISTOR, CHIP 33K (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R636	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R637	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R638	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R639	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R640	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R641	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R642	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R643	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R644	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R645	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R646	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R647	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R648	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R649	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R650	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R651	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R652	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R653	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R654	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R655	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R656	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R657	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R658	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R659	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R660	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R661	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R662	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R663	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R664	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R665	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R666	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R667	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R668	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R669	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R670	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R671	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R672	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R673	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R674	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R675	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R676	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R677	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R678	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R679	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R680	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R681	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R682	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R683	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R684	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R685	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R686	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R687	1-208-933-11	s	RESISTOR CHIP 82K
R688	1-208-933-11	s	RESISTOR CHIP 82K
R689	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R690	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R691	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R692	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R693	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R694	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R695	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R696	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R697	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R698	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R699	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R700	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R701	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R702	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R703	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R704	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R705	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R706	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R707	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R708	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R709	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R710	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R711	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R712	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R713	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R714	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R715	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R716	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R717	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R718	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R719	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R720	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R721	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R722	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R723	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R724	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R725	1-208-861-81	s	RESISTOR,CHIP 82 (1005)
R726	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R727	1-208-861-81	s	RESISTOR,CHIP 82 (1005)
R728	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R729	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R730	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R731	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R732	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R733	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R734	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R735	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R736	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R737	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R738	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R739	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R740	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R741	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R742	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R743	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R744	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R745	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R746	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R747	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R748	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R749	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R750	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R751	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R752	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R753	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R754	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R755	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R756	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R757	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R758	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R759	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R760	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R761	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R762	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R763	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R764	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R765	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R766	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R767	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R768	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R769	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R770	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R771	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R772	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R773	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R774	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R775	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R776	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R777	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R778	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R779	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R780	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R781	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R782	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R783	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R784	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R785	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R786	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R787	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R788	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R789	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R790	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R791	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R792	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R793	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R794	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R795	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R796	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R797	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R798	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R799	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R800	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R801	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R802	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R803	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R804	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R805	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R806	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R807	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R808	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R809	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R810	1-244-161-11	s	RESISTOR, CHIP 2.2(1005)
R999	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
RB102	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB103	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB104	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB105	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB200	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB201	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB202	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB203	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB204	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB205	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB206	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB207	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB208	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB209	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB210	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB211	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB212	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB213	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB214	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB215	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB216	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB217	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB218	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB219	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB300	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB301	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB302	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB303	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB304	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB305	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB306	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB307	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB308	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB309	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB310	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB311	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB312	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB313	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB314	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB315	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB316	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB400	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB501	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB502	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB601	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RV500	1-225-793-11	s	RES, ADJ, CERMET 20K
RV501	1-225-793-11	s	RES, ADJ, CERMET 20K
RV600	1-241-264-11	s	RESISTOR ADJ 10K (CERMET)
RV601	1-241-264-11	s	RESISTOR ADJ 10K (CERMET)
S1	1-762-775-11	s	SWITCH, TOGGLE
S4	1-692-271-31	s	SWITCH, SLIDE
S11	1-570-711-11	s	SWITCH,SLIDE
S12	1-570-711-11	s	SWITCH,SLIDE
S21	1-570-711-11	s	SWITCH,SLIDE
S22	1-570-711-11	s	SWITCH,SLIDE
S31	1-570-711-11	s	SWITCH,SLIDE
S32	1-570-711-11	s	SWITCH,SLIDE
S500	1-570-711-11	s	SWITCH,SLIDE
S501	1-570-711-11	s	SWITCH,SLIDE

(AVP-6 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
S502	1-570-711-11	s	SWITCH,SLIDE
S503	1-570-711-11	s	SWITCH,SLIDE
S600	1-570-711-11	s	SWITCH,SLIDE
S601	1-570-711-11	s	SWITCH,SLIDE
S602	1-570-711-11	s	SWITCH,SLIDE
S603	1-570-711-11	s	SWITCH,SLIDE
T700	1-443-158-11	s	TRANSFORMER, DC-DC CONVERTER
T701	1-443-158-11	s	TRANSFORMER, DC-DC CONVERTER
THP100 ⚠	1-803-615-11	s	THERMISTOR, POSITIVE
THP101 ⚠	1-803-615-11	s	THERMISTOR, POSITIVE
THP102 ⚠	1-804-616-11	s	THERMISTOR, POSITIVE
THP103 ⚠	1-804-458-21	s	THERMISTOR, POSITIVE
THP104 ⚠	1-804-616-11	s	THERMISTOR, POSITIVE
THP105 ⚠	1-804-616-11	s	THERMISTOR, POSITIVE
THP106 ⚠	1-804-616-11	s	THERMISTOR, POSITIVE
TP300	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP301	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP302	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP400	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP401	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP402	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP403	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP404	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP405	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP500	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP501	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP502	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP503	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP504	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP505	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP600	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP601	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
X300	1-813-253-12	s	OSCILLATOR, CRYSTAL

CN-2672/2672G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-081-A	s	MOUNTED CIRCUIT BOARD, CN-2672G (GOLD)
1pc	A-1129-231-A	s	MOUNTED CIRCUIT BOARD, CN-2672 (SILVER)
2pcs	3-165-162-01	s	SCREW(+P2.6X5)(TYPE 1) (ST)
1pc	3-725-295-21	s	SCREW, (+) (B3)
C1	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C2	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C3	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C4	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
CN1	1-561-336-00	s	CONNECTOR,COAXIAL
CN2	1-561-336-00	s	CONNECTOR,COAXIAL
CN3	1-561-336-00	s	CONNECTOR,COAXIAL
CN4	1-561-336-00	s	CONNECTOR,COAXIAL
CN5	1-561-336-00	s	CONNECTOR,COAXIAL
CN6	1-561-336-00	s	CONNECTOR,COAXIAL
CN7	1-766-696-11	o	CONNECTOR, ROUND TYPE 8P
CN9	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
CN10	1-764-079-21	s	PIN, CONNECTOR (PC BOARD) 4P
CN11	1-764-079-21	s	PIN, CONNECTOR (PC BOARD) 4P
CN12	1-785-125-11	o	CONNECTOR 6P
CN13	1-785-125-11	o	CONNECTOR 6P
CN14	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P(GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN15	1-695-480-21	o	PIN, CONNECTOR (PC BOARD) 2P
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)
FL6	1-239-897-12	s	FILTER, EMI (SMD)
FL7	1-239-897-12	s	FILTER, EMI (SMD)
FL8	1-239-897-12	s	FILTER, EMI (SMD)
FL9	1-239-897-12	s	FILTER, EMI (SMD)
FL10	1-239-897-12	s	FILTER, EMI (SMD)
FL11	1-239-897-12	s	FILTER, EMI (SMD)
FL12	1-239-897-12	s	FILTER, EMI (SMD)
JC1	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R2	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)

CN-2673 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-232-A	s	MOUNTED CIRCUIT BOARD, CN-2673
CN1	1-568-005-11	s	CONNECTOR,XLR TYPE 3P
CN2	1-568-005-11	s	CONNECTOR,XLR TYPE 3P
CN3	1-785-125-11	o	CONNECTOR 6P
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)
FL6	1-239-897-12	s	FILTER, EMI (SMD)
JC2	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC3	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC5	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC7	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC8	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC10	1-216-864-11	s	CONDUCTOR, CHIP (1608)

CN-2674/2674G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-082-A	s	MOUNTED CIRCUIT BOARD, CN-2674G (GOLD)
1pc	A-1129-233-A	s	MOUNTED CIRCUIT BOARD, CN-2674 (SILVER)
1pc	3-725-295-21	s	SCREW, (+) (B3)
CN1	1-561-336-00	s	CONNECTOR,COAXIAL
CN2	1-561-336-00	s	CONNECTOR,COAXIAL
CN3	1-561-336-00	s	CONNECTOR,COAXIAL
CN4	1-561-336-00	s	CONNECTOR,COAXIAL
CN5	1-561-336-00	s	CONNECTOR,COAXIAL
CN6	1-561-336-00	s	CONNECTOR,COAXIAL
CN7	1-561-336-00	s	CONNECTOR,COAXIAL
CN8	1-561-336-00	s	CONNECTOR,COAXIAL
CN9	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
R1	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R2	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)

CN-2675/2675G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-089-A	s	MOUNTED CIRCUIT BOARD, CN-2675G (GOLD)
1pc	A-1129-283-A	s	MOUNTED CIRCUIT BOARD, CN-2675 (SILVER)
C1	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C2	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
CN7	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
CN8	1-764-079-21	s	PIN, CONNECTOR (PC BOARD) 4P
CN9	1-785-125-11	o	CONNECTOR 6P
CN10	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
CN11	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN12	1-695-480-21	o	PIN, CONNECTOR (PC BOARD) 2P
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)
FL6	1-239-897-12	s	FILTER, EMI (SMD)
JC1	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC3	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R2	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)

CN-2676 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-284-A	s	MOUNTED CIRCUIT BOARD, CN-2676
CN1	1-568-005-11	s	CONNECTOR,XLR TYPE 3P
CN2	1-568-005-11	s	CONNECTOR,XLR TYPE 3P
CN3	1-770-623-21	s	PIN, CONNECTOR 6P
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)
FL6	1-239-897-12	s	FILTER, EMI (SMD)
JC2	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC3	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC5	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC7	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC8	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC10	1-216-864-11	s	CONDUCTOR, CHIP (1608)

CN-2677/2677G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-090-A	s	MOUNTED CIRCUIT BOARD, CN-2677G (GOLD)
1pc	A-1129-285-A	s	MOUNTED CIRCUIT BOARD, CN-2677 (SILVER)
C1	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C2	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C3	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
CN2	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)
FL6	1-239-897-12	s	FILTER, EMI (SMD)
FL7	1-239-897-12	s	FILTER, EMI (SMD)
FL8	1-239-897-12	s	FILTER, EMI (SMD)

CN-2678 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-286-A	s	MOUNTED CIRCUIT BOARD, CN-2678
CN1	1-784-602-11	s	CONNECTOR, XLR (RECEPTACLE) 5P
CN2	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)

CN-2700 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-236-A	s	MOUNTED CIRCUIT BOARD, CN-2700
CN1	1-784-602-11	s	CONNECTOR, XLR (RECEPTACLE) 5P
CN2	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)

CN-2718 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-237-A	s	MOUNTED CIRCUIT BOARD, CN-2718
CN1	1-691-291-11	o	PIN,CONNECTOR(PC BOARD)5P
CN2	1-691-291-11	o	PIN,CONNECTOR(PC BOARD)5P

CN-2805/2805G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-079-A	s	MOUNTED CIRCUIT BOARD, CN-2805G (GOLD)
1pc	A-1129-238-A	s	MOUNTED CIRCUIT BOARD, CN-2805 (SILVER)
C1	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C2	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C3	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
CN1	1-819-262-11	s	CONNECTOR, ROUND TYPE 12P
CN2	1-785-840-31	s	CONNECTOR, FFC/FPC(ZIF) AN 15P (GOLD)
	1-785-840-21	s	CONNECTOR, FFC (ZIF) 15P (SILVER)
FL1	1-239-897-12	s	FILTER, EMI (SMD)
FL2	1-239-897-12	s	FILTER, EMI (SMD)
FL3	1-239-897-12	s	FILTER, EMI (SMD)
FL4	1-239-897-12	s	FILTER, EMI (SMD)
FL5	1-239-897-12	s	FILTER, EMI (SMD)
FL6	1-239-897-12	s	FILTER, EMI (SMD)
FL7	1-239-897-12	s	FILTER, EMI (SMD)
FL8	1-239-897-12	s	FILTER, EMI (SMD)

CNB-21/21G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-080-A	s	MOUNTED CIRCUIT BOARD, CNB-21G (GOLD)
1pc	A-1129-235-A	s	MOUNTED CIRCUIT BOARD, CNB-21 (SILVER)
10pcs	7-682-545-09	s	SCREW +B3X4
C101	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C102	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C103	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C104	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C105	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C106	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C107	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C108	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C109	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C110	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C111	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C112	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C113	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C114	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C115	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C116	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C117	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C118	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C119	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C120	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C121	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C122	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C123	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C124	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C125	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C126	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C127	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C128	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C129	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C130	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C131	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C132	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C133	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C134	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C135	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C136	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C201	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C202	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C203	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C204	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C205	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C206	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C207	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C208	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C209	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C210	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C211	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C212	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C213	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C214	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C215	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C216	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C217	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C218	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C219	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF

(CNB-21/21G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C220	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C221	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C222	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C223	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C224	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C225	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C226	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C227	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C228	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
CN1	1-794-400-11	s	CONNECTOR, D SUB (SMD) 25P
CN2	1-794-399-11	s	CONNECTOR, D SUB (SMD) 15P
CN3	1-794-399-11	s	CONNECTOR, D SUB (SMD) 15P
CN4	1-794-398-11	s	CONNECTOR, D SUB (SMD) 9P
CN5	1-794-399-11	s	CONNECTOR, D SUB (SMD) 15P
CN6	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN7	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN8	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN9	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
FL101	1-239-896-12	s	FILTER, EMI (SMD)
FL102	1-239-896-12	s	FILTER, EMI (SMD)
FL103	1-239-896-12	s	FILTER, EMI (SMD)
FL104	1-239-896-12	s	FILTER, EMI (SMD)
FL105	1-239-896-12	s	FILTER, EMI (SMD)
FL106	1-239-896-12	s	FILTER, EMI (SMD)
FL107	1-239-896-12	s	FILTER, EMI (SMD)
FL108	1-239-896-12	s	FILTER, EMI (SMD)
FL109	1-239-896-12	s	FILTER, EMI (SMD)
FL110	1-239-896-12	s	FILTER, EMI (SMD)
JC1	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC3	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC5	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC6	1-216-864-11	s	CONDUCTOR, CHIP (1608)

CNB-22/22G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-088-A	s	MOUNTED CIRCUIT BOARD, CNB-22G (GOLD)
1pc	A-1129-287-A	s	MOUNTED CIRCUIT BOARD, CNB-22 (SILVER)
4pcs	7-682-545-09	s	SCREW +B3X4
C1	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C2	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C3	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C4	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C5	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C6	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C7	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C8	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C9	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C10	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C11	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C12	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C13	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C14	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C15	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C16	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C17	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C18	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C19	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C20	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C21	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C22	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C23	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C24	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C25	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C26	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C27	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C28	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C29	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C30	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C31	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C32	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C33	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C34	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C35	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C36	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
CN1	1-794-400-11	s	CONNECTOR, D SUB (SMD) 25P
CN2	1-794-399-11	s	CONNECTOR, D SUB (SMD) 15P
CN3	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN4	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
CN5	1-778-652-31	s	CONNECTOR, FFC (ZIF) 50P (GOLD)
	1-778-652-21	s	CONNECTOR, FFC (ZIF) 50P (SILVER)
FL1	1-239-896-12	s	FILTER, EMI (SMD)
FL2	1-239-896-12	s	FILTER, EMI (SMD)
JC1	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC3	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC5	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC6	1-216-864-11	s	CONDUCTOR, CHIP (1608)

DRX-5 BOARD (suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
2pcs	A-1129-302-A	s	MOUNTED CIRCUIT BOARD, DRX-5
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C1	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C2	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C3	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C4	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C5	1-128-589-21	s	CAP, CHIP ELECT 47MF
C6	1-128-589-21	s	CAP, CHIP ELECT 47MF
C13	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C14	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C17	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C18	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C19	1-100-352-91	s	CAP, CERAMIC 1MF C (1608)
C20	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C21	1-100-352-91	s	CAP, CERAMIC 1MF C (1608)
C22	1-100-352-91	s	CAP, CERAMIC 1MF C (1608)
C23	1-100-352-91	s	CAP, CERAMIC 1MF C (1608)
C24	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C25	1-164-874-81	s	CAP,CHIP CERAMIC 100PF CH 1005
C26	1-100-352-91	s	CAP, CERAMIC 1MF C (1608)
C27	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C28	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C29	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C30	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C31	1-128-589-21	s	CAP, CHIP ELECT 47MF
C32	1-128-589-21	s	CAP, CHIP ELECT 47MF
C33	1-128-589-21	s	CAP, CHIP ELECT 47MF
C34	1-128-589-21	s	CAP, CHIP ELECT 47MF
C35	1-128-589-21	s	CAP, CHIP ELECT 47MF
C36	1-128-589-21	s	CAP, CHIP ELECT 47MF
C37	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C38	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C39	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3225
C40	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C41	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C42	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C43	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C44	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C45	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C46	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C47	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C48	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C49	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C50	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C51	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C52	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C53	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C54	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C55	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C56	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C57	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C58	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C59	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C60	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C61	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C62	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C63	1-112-015-91	s	CAP, CHIP CERAMIC 47MF B 3225
C64	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C65	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C66	1-164-936-81	s	CAP, CHIP CERAMIC 680PF B 1005
C67	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C68	1-164-936-81	s	CAP, CHIP CERAMIC 680PF B 1005
C69	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C70	1-164-936-81	s	CAP, CHIP CERAMIC 680PF B 1005
C71	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C72	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C73	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C80	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C81	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C82	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C83	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C84	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C85	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C86	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C87	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C88	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C89	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C90	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C91	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C92	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C93	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C94	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C101	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C103	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C105	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C106	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C107	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C108	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C109	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C110	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C111	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C112	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C113	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C114	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C116	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C117	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C118	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C119	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C120	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C121	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C122	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C123	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C124	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C125	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C126	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C127	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C128	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C129	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C130	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C133	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C134	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C151	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C153	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C155	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C156	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C157	1-127-573-91	s	CAP, CHIP CERAMIC 1MF B (2012)
C158	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C159	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C160	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C161	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C162	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C163	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C164	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C166	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C167	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C168	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C169	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C170	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C171	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C172	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C173	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C174	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C175	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C176	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C177	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C178	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C179	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C180	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C183	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C184	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C201	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C202	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C203	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C204	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C205	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C206	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C207	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C208	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C209	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C210	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C211	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C212	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C213	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C214	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C215	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C216	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C217	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C218	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C219	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C251	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C310	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C401	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C402	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C403	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C404	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C405	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C406	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C407	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C408	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C409	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C410	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C411	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C412	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C413	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C414	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C415	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C416	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C417	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C418	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C419	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C420	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C421	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C422	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C423	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C424	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C425	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C426	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C427	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C428	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C429	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C430	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C450	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C451	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C452	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C453	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C454	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C455	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C456	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C457	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C458	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C459	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C460	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C461	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C462	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C463	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C464	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C465	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C466	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C467	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C468	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C469	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C470	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C471	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C472	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C473	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C478	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C479	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C501	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C504	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C505	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C507	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C508	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C509	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C510	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C511	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C512	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C513	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C514	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C515	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C517	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C518	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C519	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C520	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C521	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C522	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C523	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C601	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C602	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C603	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C604	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C605	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C606	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C607	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C608	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C609	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C610	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C611	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C612	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C613	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C614	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C615	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C616	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C617	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C618	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C619	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C620	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C621	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C622	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C623	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C624	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C625	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C626	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C627	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C628	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C629	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C630	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C631	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C632	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C701	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C702	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C703	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C704	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C705	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C706	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C707	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C708	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C709	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C710	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C711	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C712	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C713	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C714	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C715	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C716	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C717	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C718	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C719	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C720	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C721	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C722	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C723	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C724	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C725	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C726	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C727	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C728	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C729	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C730	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C731	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C732	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C733	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C734	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C735	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C736	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C737	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C738	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C739	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C740	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C741	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C742	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C743	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C744	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C745	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C746	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C747	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C748	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C749	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C750	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C751	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C752	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C753	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C754	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C755	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C756	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C757	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C758	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C759	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C802	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C803	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C804	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C805	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C806	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C821	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C822	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C823	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C824	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C825	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C826	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C901	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C911	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C912	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C913	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C914	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C915	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C916	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C917	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C918	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C919	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C920	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C921	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C922	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C923	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C924	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C925	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C926	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C927	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C928	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C929	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C930	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C931	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
CN3	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D3	8-719-074-31	s	DIODE CL-196YG-CD-T
D201	8-719-074-31	s	DIODE CL-196YG-CD-T
D202	8-719-074-31	s	DIODE CL-196YG-CD-T
D203	8-719-074-31	s	DIODE CL-196YG-CD-T
D204	8-719-064-41	s	DIODE CL-191Y-CD-T
D205	8-719-064-41	s	DIODE CL-191Y-CD-T
D206	8-719-074-31	s	DIODE CL-196YG-CD-T
D207	8-719-074-31	s	DIODE CL-196YG-CD-T
D208	8-719-074-31	s	DIODE CL-196YG-CD-T
D209	8-719-074-31	s	DIODE CL-196YG-CD-T
D210	8-719-074-31	s	DIODE CL-196YG-CD-T
E1	1-535-877-22	s	CHIP, CHECKER
E2	1-535-877-22	s	CHIP, CHECKER
E3	1-535-877-22	s	CHIP, CHECKER
E4	1-535-877-22	s	CHIP, CHECKER
FB1	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB2	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB3	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB4	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB5	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB6	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB101	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB102	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB103	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB104	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB105	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB106	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB107	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB108	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB109	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB151	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB152	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB153	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB154	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB155	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB156	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB157	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB158	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB159	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB501	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB502	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB801	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB802	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FL501	1-233-891-21	s	FILTER, LOW PASS
IC1	8-759-327-01	s	IC NJM062V(TE2)
IC2	6-704-976-01	s	IC ADR381ARTZ-REEL7

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
IC3	8-759-327-01	s	IC NJM062V(TE2)
IC4	6-701-572-01	s	IC TPS54610PWPR
IC5	6-701-572-01	s	IC TPS54610PWPR
IC6	6-701-572-01	s	IC TPS54610PWPR
IC7	8-759-338-95	s	IC NJM2903V(TE2)
IC80	6-700-655-01	s	IC LT1963ES8#TR
IC81	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC101	6-703-693-01	s	IC GS1532-CFE3
IC151	6-703-693-01	s	IC GS1532-CFE3
IC201	8-759-472-43	s	IC 74VHC245MTCX
IC202	8-759-472-43	s	IC 74VHC245MTCX
IC203	8-759-472-43	s	IC 74VHC245MTCX
IC205	8-752-392-03	s	IC CXD1095BR
IC206	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC207	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC208	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC210	8-759-363-26	s	IC RN5VD28AA-TL-FA
IC216	8-759-472-39	s	IC 74VHC244MTCX
IC217	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC218	8-759-679-55	s	IC SN74LVC08APWR
IC219	8-759-523-96	s	IC TC74VHC86FT(EL)
IC402	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC403	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC404	6-700-804-01	s	IC SN74LVC574APWR
IC405	6-700-804-01	s	IC SN74LVC574APWR
IC406	6-700-804-01	s	IC SN74LVC574APWR
IC407	6-700-804-01	s	IC SN74LVC574APWR
IC408	6-700-804-01	s	IC SN74LVC574APWR
IC409	6-700-804-01	s	IC SN74LVC574APWR
IC411	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC452	6-704-463-01	s	IC CY7C1021CV33-15ZXCT
IC453	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC454	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC455	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC502	6-706-471-01	s	IC THS5661AIPWR
IC504	8-759-561-46	s	IC AD8014ARTZ-REEL7
IC505	6-700-804-01	s	IC SN74LVC574APWR
IC506	6-700-804-01	s	IC SN74LVC574APWR
IC507	6-700-804-01	s	IC SN74LVC574APWR
IC510	8-759-675-47	s	IC SN74LVC04APWR
IC513	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC514	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC515	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC601	6-709-435-01	s	IC IS42S32200C1-6TL-TR
IC602	6-709-435-01	s	IC IS42S32200C1-6TL-TR
IC603	6-709-435-01	s	IC IS42S32200C1-6TL-TR
IC604	6-709-435-01	s	IC IS42S32200C1-6TL-TR
IC701	6-702-787-01	s	IC UPD6467GR-525-E2
IC702	6-702-787-01	s	IC UPD6467GR-525-E2
IC703	6-702-787-01	s	IC UPD6467GR-525-E2
IC803	6-708-538-01	s	IC CDCVF2510APWR
IC809	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC810	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC811	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC812	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC813	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC814	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC901	8-759-472-43	s	IC 74VHC245MTCX

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
JC1	1-218-990-81	s	CONDUCTOR, CHIP (1005)
L1	1-416-344-21	s	COIL, CHOKE 10UH
L2	1-416-344-21	s	COIL, CHOKE 10UH
L3	1-416-344-21	s	COIL, CHOKE 10UH
L4	1-416-344-21	s	COIL, CHOKE 10UH
L5	1-416-344-21	s	COIL, CHOKE 10UH
L6	1-416-344-21	s	COIL, CHOKE 10UH
L80	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L201	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L202	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L203	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L401	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L402	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L403	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L450	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L451	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L452	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L501	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L502	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L503	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L504	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L505	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L601	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L602	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L603	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L604	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L701	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L702	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L703	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L704	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L705	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L911	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L912	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L913	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
Q1	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q3	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q4	8-729-209-73	s	TRANSISTOR 2SA1213Y-TE12L
Q5	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q6	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q7	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q202	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q203	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q204	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q205	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q206	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q207	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q208	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q209	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q210	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q211	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
R1	1-208-871-81	s	RES, CHIP 220 (1005)
R2	1-208-871-81	s	RES, CHIP 220 (1005)
R3	1-208-863-81	s	RES, CHIP 100 (1005)
R4	1-208-863-81	s	RES, CHIP 100 (1005)
R5	1-208-863-81	s	RES, CHIP 100 (1005)
R6	1-208-863-81	s	RES, CHIP 100 (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R7	1-208-871-81	s	RES, CHIP 220 (1005)
R8	1-208-871-81	s	RES, CHIP 220 (1005)
R9	1-208-923-81	s	RES, CHIP 33K (1005)
R10	1-208-923-81	s	RES, CHIP 33K (1005)
R11	1-208-923-81	s	RES, CHIP 33K (1005)
R12	1-208-923-81	s	RES, CHIP 33K (1005)
R13	1-208-923-81	s	RES, CHIP 33K (1005)
R14	1-208-923-81	s	RES, CHIP 33K (1005)
R15	1-208-919-81	s	RES, CHIP 22K (1005)
R16	1-208-907-81	s	RES, CHIP 6.8K (1005)
R17	1-208-923-81	s	RES, CHIP 33K (1005)
R18	1-208-919-81	s	RES, CHIP 22K (1005)
R19	1-208-907-81	s	RES, CHIP 6.8K (1005)
R20	1-208-923-81	s	RES, CHIP 33K (1005)
R21	1-208-931-81	s	RES, CHIP 68K (1005)
R22	1-208-931-81	s	RES, CHIP 68K (1005)
R23	1-208-927-81	s	RES, CHIP 47K (1005)
R24	1-208-923-81	s	RES, CHIP 33K (1005)
R25	1-208-895-81	s	RES, CHIP 2.2K (1005)
R26	1-208-915-81	s	RES, CHIP 15K (1005)
R27	1-208-915-81	s	RES, CHIP 15K (1005)
R28	1-208-919-81	s	RES, CHIP 22K (1005)
R29	1-208-895-81	s	RES, CHIP 2.2K (1005)
R30	1-208-931-81	s	RES, CHIP 68K (1005)
R31	1-208-931-81	s	RES, CHIP 68K (1005)
R32	1-208-931-81	s	RES, CHIP 68K (1005)
R33	1-208-911-81	s	RES, CHIP 10K (1005)
R34	1-208-895-81	s	RES, CHIP 2.2K (1005)
R35	1-208-915-81	s	RES, CHIP 15K (1005)
R36	1-208-923-81	s	RES, CHIP 33K (1005)
R37	1-208-915-81	s	RES, CHIP 15K (1005)
R38	1-208-923-81	s	RES, CHIP 33K (1005)
R40	1-208-891-81	s	RES, CHIP 1.5K (1005)
R41	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R42	1-208-863-81	s	RES, CHIP 100 (1005)
R43	1-208-891-81	s	RES, CHIP 1.5K (1005)
R44	1-208-911-81	s	RES, CHIP 10K (1005)
R45	1-208-863-81	s	RES, CHIP 100 (1005)
R46	1-208-891-81	s	RES, CHIP 1.5K (1005)
R47	1-208-911-81	s	RES, CHIP 10K (1005)
R48	1-208-863-81	s	RES, CHIP 100 (1005)
R49	1-208-911-81	s	RES, CHIP 10K (1005)
R50	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R51	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R52	1-208-899-81	s	RES, CHIP 3.3K (1005)
R53	1-208-919-81	s	RES, CHIP 22K (1005)
R54	1-208-911-81	s	RES, CHIP 10K (1005)
R55	1-208-895-81	s	RES, CHIP 2.2K (1005)
R56	1-208-911-81	s	RES, CHIP 10K (1005)
R57	1-208-895-81	s	RES, CHIP 2.2K (1005)
R58	1-208-907-81	s	RES, CHIP 6.8K (1005)
R59	1-208-903-81	s	RES, CHIP 4.7K (1005)
R60	1-208-919-81	s	RES, CHIP 22K (1005)
R61	1-208-911-81	s	RES, CHIP 10K (1005)
R62	1-208-887-81	s	RES, CHIP 1.0K (1005)
R63	1-208-887-81	s	RES, CHIP 1.0K (1005)
R64	1-208-887-81	s	RES, CHIP 1.0K (1005)
R65	1-208-863-81	s	RES, CHIP 100 (1005)
R66	1-218-953-81	s	RES, CHIP 1.0K

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R67	1-218-953-81	s	RES, CHIP 1.0K
R68	1-208-871-81	s	RES, CHIP 220 (1005)
R69	1-208-871-81	s	RES, CHIP 220 (1005)
R80	1-208-919-81	s	RES, CHIP 22K (1005)
R81	1-208-895-81	s	RES, CHIP 2.2K (1005)
R82	1-208-895-81	s	RES, CHIP 2.2K (1005)
R83	1-208-927-81	s	RES, CHIP 47K (1005)
R84	1-208-895-81	s	RES, CHIP 2.2K (1005)
R110	1-208-855-81	s	RES, CHIP 47 (1005)
R111	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R113	1-208-915-81	s	RES, CHIP 15K (1005)
R116	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R118	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R119	1-208-871-81	s	RES, CHIP 220 (1005)
R120	1-208-859-81	s	RES, CHIP 68 (1005)
R121	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R122	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R123	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R124	1-208-887-81	s	RES, CHIP 1.0K (1005)
R125	1-208-887-81	s	RES, CHIP 1.0K (1005)
R127	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R129	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R130	1-208-887-81	s	RES, CHIP 1.0K (1005)
R131	1-208-887-81	s	RES, CHIP 1.0K (1005)
R132	1-208-887-81	s	RES, CHIP 1.0K (1005)
R133	1-208-863-81	s	RES, CHIP 100 (1005)
R135	1-208-856-81	s	RES, CHIP 51 (1005)
R136	1-208-856-81	s	RES, CHIP 51 (1005)
R137	1-220-870-81	s	RES, CHIP 10 (1005)
R138	1-220-870-81	s	RES, CHIP 10 (1005)
R160	1-208-855-81	s	RES, CHIP 47 (1005)
R161	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R163	1-208-915-81	s	RES, CHIP 15K (1005)
R166	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R168	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R169	1-208-871-81	s	RES, CHIP 220 (1005)
R170	1-208-859-81	s	RES, CHIP 68 (1005)
R171	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R172	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R173	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R174	1-208-887-81	s	RES, CHIP 1.0K (1005)
R175	1-208-887-81	s	RES, CHIP 1.0K (1005)
R177	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R179	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R180	1-208-887-81	s	RES, CHIP 1.0K (1005)
R181	1-208-887-81	s	RES, CHIP 1.0K (1005)
R182	1-208-887-81	s	RES, CHIP 1.0K (1005)
R183	1-208-863-81	s	RES, CHIP 100 (1005)
R185	1-208-856-81	s	RES, CHIP 51 (1005)
R186	1-208-856-81	s	RES, CHIP 51 (1005)
R187	1-220-870-81	s	RES, CHIP 10 (1005)
R188	1-220-870-81	s	RES, CHIP 10 (1005)
R191	1-208-863-81	s	RES, CHIP 100 (1005)
R192	1-208-863-81	s	RES, CHIP 100 (1005)
R202	1-208-863-81	s	RES, CHIP 100 (1005)
R203	1-208-871-81	s	RES, CHIP 220 (1005)
R204	1-208-871-81	s	RES, CHIP 220 (1005)
R205	1-220-870-81	s	RES, CHIP 10 (1005)
R206	1-208-895-81	s	RES, CHIP 2.2K (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R207	1-208-927-81	s	RES, CHIP 47K (1005)
R208	1-208-927-81	s	RES, CHIP 47K (1005)
R209	1-208-887-81	s	RES, CHIP 1.0K (1005)
R210	1-208-927-81	s	RES, CHIP 47K (1005)
R211	1-208-887-81	s	RES, CHIP 1.0K (1005)
R212	1-208-927-81	s	RES, CHIP 47K (1005)
R213	1-208-887-81	s	RES, CHIP 1.0K (1005)
R214	1-208-927-81	s	RES, CHIP 47K (1005)
R215	1-208-887-81	s	RES, CHIP 1.0K (1005)
R216	1-208-927-81	s	RES, CHIP 47K (1005)
R217	1-208-887-81	s	RES, CHIP 1.0K (1005)
R218	1-208-927-81	s	RES, CHIP 47K (1005)
R219	1-208-887-81	s	RES, CHIP 1.0K (1005)
R221	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R222	1-208-927-81	s	RES, CHIP 47K (1005)
R223	1-208-935-81	s	RES, CHIP 100K (1005)
R225	1-208-935-81	s	RES, CHIP 100K (1005)
R227	1-208-887-81	s	RES, CHIP 1.0K (1005)
R228	1-208-935-81	s	RES, CHIP 100K (1005)
R231	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R232	1-208-927-81	s	RES, CHIP 47K (1005)
R233	1-208-887-81	s	RES, CHIP 1.0K (1005)
R234	1-208-927-81	s	RES, CHIP 47K (1005)
R235	1-208-887-81	s	RES, CHIP 1.0K (1005)
R236	1-208-927-81	s	RES, CHIP 47K (1005)
R237	1-208-887-81	s	RES, CHIP 1.0K (1005)
R239	1-208-863-81	s	RES, CHIP 100 (1005)
R250	1-220-870-81	s	RES, CHIP 10 (1005)
R251	1-208-927-81	s	RES, CHIP 47K (1005)
R252	1-208-863-81	s	RES, CHIP 100 (1005)
R253	1-208-863-81	s	RES, CHIP 100 (1005)
R254	1-208-863-81	s	RES, CHIP 100 (1005)
R301	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R305	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R306	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R307	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R310	1-208-911-81	s	RES, CHIP 10K (1005)
R311	1-208-911-81	s	RES, CHIP 10K (1005)
R312	1-208-911-81	s	RES, CHIP 10K (1005)
R313	1-208-911-81	s	RES, CHIP 10K (1005)
R314	1-208-911-81	s	RES, CHIP 10K (1005)
R315	1-208-887-81	s	RES, CHIP 1.0K (1005)
R316	1-208-887-81	s	RES, CHIP 1.0K (1005)
R401	1-220-870-81	s	RES, CHIP 10 (1005)
R402	1-208-935-81	s	RES, CHIP 100K (1005)
R403	1-208-895-81	s	RES, CHIP 2.2K (1005)
R404	1-208-935-81	s	RES, CHIP 100K (1005)
R405	1-220-870-81	s	RES, CHIP 10 (1005)
R406	1-220-870-81	s	RES, CHIP 10 (1005)
R407	1-220-870-81	s	RES, CHIP 10 (1005)
R408	1-220-870-81	s	RES, CHIP 10 (1005)
R411	1-220-870-81	s	RES, CHIP 10 (1005)
R412	1-220-870-81	s	RES, CHIP 10 (1005)
R413	1-220-870-81	s	RES, CHIP 10 (1005)
R417	1-208-911-81	s	RES, CHIP 10K (1005)
R418	1-208-887-81	s	RES, CHIP 1.0K (1005)
R419	1-208-863-81	s	RES, CHIP 100 (1005)
R420	1-220-870-81	s	RES, CHIP 10 (1005)
R450	1-220-870-81	s	RES, CHIP 10 (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R451	1-220-878-81	s	RES, CHIP 22 (1005)
R454	1-220-870-81	s	RES, CHIP 10 (1005)
R455	1-220-870-81	s	RES, CHIP 10 (1005)
R456	1-220-870-81	s	RES, CHIP 10 (1005)
R457	1-208-911-81	s	RES, CHIP 10K (1005)
R458	1-208-887-81	s	RES, CHIP 1.0K (1005)
R460	1-220-870-81	s	RES, CHIP 10 (1005)
R463	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R470	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R501	1-208-863-81	s	RES, CHIP 100 (1005)
R502	1-208-911-81	s	RES, CHIP 10K (1005)
R504	1-208-911-81	s	RES, CHIP 10K (1005)
R505	1-208-863-81	s	RES, CHIP 100 (1005)
R506	1-220-870-81	s	RES, CHIP 10 (1005)
R507	1-208-863-81	s	RES, CHIP 100 (1005)
R508	1-208-863-81	s	RES, CHIP 100 (1005)
R509	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R512	1-208-955-81	s	RES, CHIP 680K (1005)
R514	1-208-935-81	s	RES, CHIP 100K (1005)
R515	1-208-855-81	s	RES, CHIP 47 (1005)
R516	1-208-899-81	s	RES, CHIP 3.3K (1005)
R517	1-208-899-81	s	RES, CHIP 3.3K (1005)
R518	1-208-899-81	s	RES, CHIP 3.3K (1005)
R519	1-208-875-81	s	RES, CHIP 330 (1005)
R520	1-208-883-81	s	RES, CHIP 680 (1005)
R521	1-208-911-81	s	RES, CHIP 10K (1005)
R522	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R524	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R525	1-208-875-81	s	RES, CHIP 330 (1005)
R526	1-208-879-81	s	RES, CHIP 470 (1005)
R527	1-208-887-81	s	RES, CHIP 1.0K (1005)
R528	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R529	1-208-911-81	s	RES, CHIP 10K (1005)
R530	1-208-883-81	s	RES, CHIP 680 (1005)
R532	1-208-883-81	s	RES, CHIP 680 (1005)
R533	1-220-870-81	s	RES, CHIP 10 (1005)
R534	1-220-870-81	s	RES, CHIP 10 (1005)
R536	1-208-875-81	s	RES, CHIP 330 (1005)
R537	1-208-927-81	s	RES, CHIP 47K (1005)
R541	1-220-870-81	s	RES, CHIP 10 (1005)
R701	1-220-870-81	s	RES, CHIP 10 (1005)
R703	1-220-870-81	s	RES, CHIP 10 (1005)
R705	1-208-863-81	s	RES, CHIP 100 (1005)
R706	1-208-863-81	s	RES, CHIP 100 (1005)
R707	1-208-863-81	s	RES, CHIP 100 (1005)
R708	1-208-863-81	s	RES, CHIP 100 (1005)
R709	1-208-863-81	s	RES, CHIP 100 (1005)
R710	1-208-863-81	s	RES, CHIP 100 (1005)
R711	1-208-863-81	s	RES, CHIP 100 (1005)
R712	1-208-863-81	s	RES, CHIP 100 (1005)
R713	1-208-863-81	s	RES, CHIP 100 (1005)
R714	1-220-870-81	s	RES, CHIP 10 (1005)
R715	1-220-870-81	s	RES, CHIP 10 (1005)
R716	1-220-870-81	s	RES, CHIP 10 (1005)
R718	1-208-863-81	s	RES, CHIP 100 (1005)
R719	1-208-863-81	s	RES, CHIP 100 (1005)
R721	1-208-863-81	s	RES, CHIP 100 (1005)
R722	1-208-863-81	s	RES, CHIP 100 (1005)
R723	1-208-863-81	s	RES, CHIP 100 (1005)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R724	1-208-863-81	s	RES, CHIP 100 (1005)
R725	1-208-863-81	s	RES, CHIP 100 (1005)
R726	1-208-863-81	s	RES, CHIP 100 (1005)
R727	1-208-863-81	s	RES, CHIP 100 (1005)
R728	1-208-863-81	s	RES, CHIP 100 (1005)
R729	1-208-863-81	s	RES, CHIP 100 (1005)
R730	1-208-863-81	s	RES, CHIP 100 (1005)
R731	1-208-863-81	s	RES, CHIP 100 (1005)
R732	1-208-863-81	s	RES, CHIP 100 (1005)
R733	1-208-863-81	s	RES, CHIP 100 (1005)
R734	1-208-863-81	s	RES, CHIP 100 (1005)
R735	1-208-863-81	s	RES, CHIP 100 (1005)
R736	1-208-863-81	s	RES, CHIP 100 (1005)
R737	1-208-863-81	s	RES, CHIP 100 (1005)
R738	1-208-863-81	s	RES, CHIP 100 (1005)
R740	1-220-870-81	s	RES, CHIP 10 (1005)
R741	1-220-870-81	s	RES, CHIP 10 (1005)
R742	1-220-870-81	s	RES, CHIP 10 (1005)
R743	1-208-863-81	s	RES, CHIP 100 (1005)
R744	1-208-863-81	s	RES, CHIP 100 (1005)
R751	1-208-863-81	s	RES, CHIP 100 (1005)
R752	1-208-863-81	s	RES, CHIP 100 (1005)
R753	1-208-863-81	s	RES, CHIP 100 (1005)
R755	1-208-863-81	s	RES, CHIP 100 (1005)
R756	1-208-863-81	s	RES, CHIP 100 (1005)
R801	1-220-870-81	s	RES, CHIP 10 (1005)
R802	1-208-895-81	s	RES, CHIP 2.2K (1005)
R804	1-208-879-81	s	RES, CHIP 470 (1005)
R807	1-220-870-81	s	RES, CHIP 10 (1005)
R808	1-220-870-81	s	RES, CHIP 10 (1005)
R809	1-220-870-81	s	RES, CHIP 10 (1005)
R812	1-220-870-81	s	RES, CHIP 10 (1005)
R813	1-220-870-81	s	RES, CHIP 10 (1005)
R814	1-220-870-81	s	RES, CHIP 10 (1005)
R832	1-220-870-81	s	RES, CHIP 10 (1005)
R855	1-220-870-81	s	RES, CHIP 10 (1005)
R856	1-220-870-81	s	RES, CHIP 10 (1005)
R859	1-220-870-81	s	RES, CHIP 10 (1005)
R860	1-220-870-81	s	RES, CHIP 10 (1005)
R861	1-220-870-81	s	RES, CHIP 10 (1005)
R901	1-208-911-81	s	RES, CHIP 10K (1005)
R902	1-208-887-81	s	RES, CHIP 1.0K (1005)
R903	1-220-870-81	s	RES, CHIP 10 (1005)
R904	1-220-870-81	s	RES, CHIP 10 (1005)
R905	1-220-870-81	s	RES, CHIP 10 (1005)
R911	1-220-870-81	s	RES, CHIP 10 (1005)
R912	1-220-870-81	s	RES, CHIP 10 (1005)
R913	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R914	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R915	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R916	1-220-870-81	s	RES, CHIP 10 (1005)
RB105	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB106	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB107	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB108	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB109	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB110	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB155	1-234-372-21	s	RES, NETWORK 100 (1005X4)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
RB156	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB157	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB158	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB159	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB160	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB201	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB202	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB203	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB204	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB205	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB206	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB207	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB208	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB209	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB210	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB211	1-234-369-21	s	RES, NETWORK 10 (1005X4)
RB212	1-234-369-21	s	RES, NETWORK 10 (1005X4)
RB213	1-234-369-21	s	RES, NETWORK 10 (1005X4)
RB214	1-234-369-21	s	RES, NETWORK 10 (1005X4)
RB215	1-234-369-21	s	RES, NETWORK 10 (1005X4)
RB216	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB217	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB218	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB219	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB220	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB221	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB222	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB223	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB225	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB226	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB227	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB229	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB230	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB231	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB232	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB233	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB234	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB235	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB236	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB301	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB302	1-234-378-21	s	RES, NETWORK 10K (1005X4)
RB401	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB402	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB403	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB404	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB405	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB406	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB407	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB408	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB409	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB410	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB411	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB412	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB413	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB414	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB415	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB416	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB417	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB418	1-234-372-21	s	RES, NETWORK 100 (1005X4)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
RB419	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB420	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB421	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB422	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB423	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB424	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB425	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB426	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB427	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB428	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB456	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB457	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB458	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB459	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB460	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB461	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB462	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB463	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB464	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB465	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB466	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB467	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB468	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB469	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB470	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB471	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB472	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB473	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB474	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB475	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB476	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB477	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB478	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB479	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB480	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB481	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB482	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB483	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB484	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB485	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB486	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB487	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB488	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB489	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB490	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB491	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB492	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB511	1-234-369-21	s	RES, NETWORK 10 (1005X4)
RB513	1-234-373-21	s	RES, NETWORK 220 (1005X4)
RB514	1-234-373-21	s	RES, NETWORK 220 (1005X4)
RB515	1-234-373-21	s	RES, NETWORK 220 (1005X4)
RB522	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB523	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB524	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB525	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB526	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB527	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB528	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB529	1-234-371-21	s	RES, NETWORK 47 (1005X4)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
RB530	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB531	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB532	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB533	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB601	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB602	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB603	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB604	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB605	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB606	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB607	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB608	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB609	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB610	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB611	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB612	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB613	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB614	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB615	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB616	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB617	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB618	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB619	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB620	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB621	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB622	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB623	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB624	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB625	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB626	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB627	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB628	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB629	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB630	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB631	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB632	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB633	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB634	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB635	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB636	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB637	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB638	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB639	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB640	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB641	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB642	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB643	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB644	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB645	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB646	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB647	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB648	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB649	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB650	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB651	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB652	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB701	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB705	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB706	1-234-372-21	s	RES, NETWORK 100 (1005X4)

(DRX-5 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
RB707	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB708	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB901	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB902	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB903	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB904	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB911	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB912	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB913	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB914	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB915	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RV1	1-225-791-21	s	RES, ADJ, CERMET 5K
S1	1-572-658-21	s	SWITCH, ROTARY
S2	1-692-271-41	s	SWITCH, SLIDE
S4	1-570-711-33	s	SWITCH, SLIDE
THP1	⚠ 1-533-817-21	s	THERMISTOR
THP2	⚠ 1-533-817-21	s	THERMISTOR
THP3	⚠ 1-533-817-21	s	THERMISTOR
THP4	⚠ 1-533-817-21	s	THERMISTOR
THP5	⚠ 1-533-817-21	s	THERMISTOR
THP6	⚠ 1-533-817-21	s	THERMISTOR
THP7	⚠ 1-533-817-21	s	THERMISTOR
TP1	1-535-877-22	s	CHIP, CHECKER
TP2	1-535-877-22	s	CHIP, CHECKER
TP501	1-535-877-22	s	CHIP, CHECKER
TP801	1-535-877-22	s	CHIP, CHECKER
X101	1-795-872-11	s	OSCILLATOR
X151	1-795-872-11	s	OSCILLATOR

DRX-5 BOARD (suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
2pcs	A-1129-302-A	s	MOUNTED CIRCUIT BOARD, DRX-5
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C1	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C2	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C3	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C4	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C5	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C6	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C13	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C14	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C17	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C18	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C19	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C20	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C21	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C22	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C23	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C24	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C25	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C26	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C27	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C28	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C29	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C30	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C31	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C32	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C33	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C34	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C35	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C36	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C37	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C38	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C39	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C40	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C41	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C42	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C43	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C44	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C45	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C46	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C47	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C48	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C49	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C50	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C51	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C52	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C53	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C54	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C55	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C56	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C57	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C58	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C59	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C60	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C61	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C62	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C63	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C64	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C65	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C66	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C67	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C68	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C69	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C70	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C71	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C72	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C73	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C80	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C81	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C82	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C83	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C84	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C85	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C86	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C87	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C88	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C89	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C90	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C91	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C92	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C93	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C94	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C101	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C103	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C105	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C106	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C107	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C108	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C109	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C110	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C111	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C112	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C113	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C114	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C116	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C117	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C118	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C119	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C120	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C121	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C122	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C123	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C124	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C125	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C126	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C127	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C128	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C129	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C130	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C133	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C134	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C151	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C153	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C155	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C156	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C157	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C158	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C159	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C160	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C161	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C162	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C163	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C164	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C166	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C167	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C168	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C169	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C170	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C171	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C172	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C173	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C174	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C175	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C176	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C177	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C178	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C179	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C180	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C183	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C184	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C201	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C202	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C203	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C204	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C205	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C206	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C207	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C208	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C209	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C210	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C212	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C213	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C214	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C215	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C216	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C217	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C218	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C251	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C310	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C401	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C402	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C403	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C404	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C405	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C406	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C407	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C408	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C409	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C410	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C411	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C412	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C413	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C414	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C415	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C416	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C417	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C418	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C419	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C420	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C421	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C422	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C423	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C424	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C425	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C426	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C427	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C428	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C429	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C430	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C450	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C451	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C452	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C453	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C454	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C455	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C456	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C457	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C458	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C459	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C460	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C461	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C462	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C463	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C464	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C465	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C466	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C467	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C468	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C469	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C470	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C471	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C472	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C473	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C478	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C479	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C501	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C504	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C505	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C507	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C508	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C509	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C510	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C511	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C512	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C513	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C514	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C515	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C517	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C518	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C519	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C520	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C521	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C522	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C523	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C601	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C602	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C603	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C604	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C605	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C606	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C607	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C608	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C609	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C610	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C611	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C612	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C613	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C614	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C615	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C616	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C617	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C618	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C619	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C620	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C621	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C622	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C623	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C624	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C625	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C626	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C627	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C628	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C629	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C630	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C631	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C632	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C701	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C702	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C703	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C704	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C705	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C706	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C707	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C708	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C709	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C710	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C711	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C712	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C713	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C714	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C715	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C716	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C717	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C718	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C719	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C720	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C721	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C722	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C723	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C724	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C725	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C726	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C727	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C728	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C729	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C730	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C731	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C732	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C733	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C734	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C735	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C736	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C737	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C738	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C739	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C740	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C741	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C742	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C743	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C744	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C745	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C746	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C747	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C748	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C749	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C750	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C751	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C752	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C753	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C754	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C755	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C756	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C757	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C758	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C759	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C802	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C803	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C804	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C805	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C806	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C821	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C822	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C823	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C824	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C825	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C826	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C901	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C911	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C912	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C913	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C914	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C915	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C916	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C917	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C918	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C919	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C920	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C921	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C922	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C923	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C924	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C925	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C926	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C927	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C928	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C929	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C930	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C931	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
CN3	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D3	8-719-063-83	s	LED SML-510MWT86
D201	8-719-063-83	s	LED SML-510MWT86
D202	8-719-063-83	s	LED SML-510MWT86
D203	8-719-063-83	s	LED SML-510MWT86
D204	8-719-064-41	s	DIODE CL-191Y-CD-T
D205	8-719-064-41	s	DIODE CL-191Y-CD-T
D206	8-719-063-83	s	LED SML-510MWT86
D207	8-719-063-83	s	LED SML-510MWT86
D208	8-719-063-83	s	LED SML-510MWT86
D209	8-719-063-83	s	LED SML-510MWT86
D210	8-719-063-83	s	LED SML-510MWT86
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E3	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E4	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB1	1-469-094-21	s	FERRITE, EMI (SMD)
FB2	1-469-094-21	s	FERRITE, EMI (SMD)
FB3	1-469-094-21	s	FERRITE, EMI (SMD)
FB4	1-469-094-21	s	FERRITE, EMI (SMD)
FB5	1-469-094-21	s	FERRITE, EMI (SMD)
FB6	1-469-094-21	s	FERRITE, EMI (SMD)
FB101	1-469-094-21	s	FERRITE, EMI (SMD)
FB102	1-469-094-21	s	FERRITE, EMI (SMD)
FB103	1-469-094-21	s	FERRITE, EMI (SMD)
FB104	1-469-094-21	s	FERRITE, EMI (SMD)
FB105	1-469-094-21	s	FERRITE, EMI (SMD)
FB106	1-469-094-21	s	FERRITE, EMI (SMD)
FB107	1-469-094-21	s	FERRITE, EMI (SMD)
FB108	1-469-094-21	s	FERRITE, EMI (SMD)
FB109	1-469-094-21	s	FERRITE, EMI (SMD)
FB151	1-469-094-21	s	FERRITE, EMI (SMD)
FB152	1-469-094-21	s	FERRITE, EMI (SMD)
FB153	1-469-094-21	s	FERRITE, EMI (SMD)
FB154	1-469-094-21	s	FERRITE, EMI (SMD)
FB155	1-469-094-21	s	FERRITE, EMI (SMD)
FB156	1-469-094-21	s	FERRITE, EMI (SMD)
FB157	1-469-094-21	s	FERRITE, EMI (SMD)
FB158	1-469-094-21	s	FERRITE, EMI (SMD)
FB159	1-469-094-21	s	FERRITE, EMI (SMD)
FB501	1-469-094-21	s	FERRITE, EMI (SMD)
FB502	1-469-094-21	s	FERRITE, EMI (SMD)
FB801	1-469-094-21	s	FERRITE, EMI (SMD)
FB802	1-469-094-21	s	FERRITE, EMI (SMD)
FL501	1-233-891-21	s	FILTER, LOW PASS
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC3	8-759-327-01	s	IC NJM062V-TE2
IC4	6-701-572-01	s	IC TPS54610PWPR
IC5	6-701-572-01	s	IC TPS54610PWPR

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
IC6	6-701-572-01	s	IC TPS54610PWPR
IC7	8-759-338-95	s	IC NJM2903V (TE2)
IC80	6-700-655-01	s	IC LT1963ES8#TR
IC81	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC101	6-703-693-01	s	IC GS1532-CFE3
IC151	6-703-693-01	s	IC GS1532-CFE3
IC201	8-759-472-43	s	IC 74VHC245MTCX
IC202	8-759-472-43	s	IC 74VHC245MTCX
IC203	8-759-472-43	s	IC 74VHC245MTCX
IC205	8-752-392-03	s	IC CXD1095BR
IC206	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC207	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC208	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC210	8-759-363-26	s	IC RN5VD28AA-TL
IC216	8-759-472-39	s	IC 74VHC244MTCX
IC217	8-759-592-47	s	IC TC7SZ08FU(TE85R)
IC402	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC403	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC404	6-700-804-01	s	IC SN74LVC574APWR
IC405	6-700-804-01	s	IC SN74LVC574APWR
IC406	6-700-804-01	s	IC SN74LVC574APWR
IC407	6-700-804-01	s	IC SN74LVC574APWR
IC408	6-700-804-01	s	IC SN74LVC574APWR
IC409	6-700-804-01	s	IC SN74LVC574APWR
IC411	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC452	6-704-463-01	s	IC CY7C1021CV33-15ZXCT
IC453	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC454	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC455	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC502	6-706-471-01	s	IC THS5661AIPWR
IC504	8-759-561-46	s	IC AD8014ART-REEL7
IC505	6-700-804-01	s	IC SN74LVC574APWR
IC506	6-700-804-01	s	IC SN74LVC574APWR
IC507	6-700-804-01	s	IC SN74LVC574APWR
IC510	8-759-675-47	s	IC SN74LVC04APWR
IC513	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC514	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC515	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC601	6-705-983-01	s	IC IS42S32200B-6TL-TR
IC602	6-705-983-01	s	IC IS42S32200B-6TL-TR
IC603	6-705-983-01	s	IC IS42S32200B-6TL-TR
IC604	6-705-983-01	s	IC IS42S32200B-6TL-TR
IC701	6-702-787-01	s	IC UPD6467GR-525-E2
IC702	6-702-787-01	s	IC UPD6467GR-525-E2
IC703	6-702-787-01	s	IC UPD6467GR-525-E2
IC803	6-708-538-01	s	IC CDCVF2510APWR
IC809	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC810	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC811	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC812	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC813	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC814	8-759-592-49	s	IC TC7SZ125FU(TE85R)
IC901	8-759-472-43	s	IC 74VHC245MTCX
JC1	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
L1	1-416-344-11	s	COIL, CHOKE 10UH
L2	1-416-344-11	s	COIL, CHOKE 10UH
L3	1-416-344-11	s	COIL, CHOKE 10UH
L4	1-416-344-11	s	COIL, CHOKE 10UH

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
L5	1-416-344-11	s	COIL, CHOKE 10UH
L6	1-416-344-11	s	COIL, CHOKE 10UH
L80	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L201	1-414-398-11	s	INDUCTOR (SMD) 10UH
L202	1-414-398-11	s	INDUCTOR (SMD) 10UH
L203	1-414-398-11	s	INDUCTOR (SMD) 10UH
L401	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L402	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L403	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L450	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L451	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L452	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L502	1-414-398-11	s	INDUCTOR (SMD) 10UH
L503	1-414-398-11	s	INDUCTOR (SMD) 10UH
L504	1-414-398-11	s	INDUCTOR (SMD) 10UH
L505	1-414-398-11	s	INDUCTOR (SMD) 10UH
L601	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L602	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L603	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L604	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L701	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L702	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L703	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L704	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L705	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L911	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L912	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L913	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q4	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q5	8-729-927-99	s	TRANSISTOR 2SC4617R
Q6	8-729-927-99	s	TRANSISTOR 2SC4617R
Q7	8-729-927-99	s	TRANSISTOR 2SC4617R
Q202	8-729-927-99	s	TRANSISTOR 2SC4617R
Q203	8-729-927-99	s	TRANSISTOR 2SC4617R
Q204	8-729-927-99	s	TRANSISTOR 2SC4617R
Q205	8-729-927-99	s	TRANSISTOR 2SC4617R
Q206	8-729-927-99	s	TRANSISTOR 2SC4617R
Q207	8-729-927-99	s	TRANSISTOR 2SC4617R
Q208	8-729-927-99	s	TRANSISTOR 2SC4617R
Q209	8-729-927-99	s	TRANSISTOR 2SC4617R
Q210	8-729-927-99	s	TRANSISTOR 2SC4617R
Q211	8-729-927-99	s	TRANSISTOR 2SC4617R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R3	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R4	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R5	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R6	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R7	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R8	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R9	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R10	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R11	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R12	1-208-923-11	s	RESISTOR, CHIP 33K (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R13	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R14	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R15	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R16	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R17	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R18	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R19	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R20	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R21	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R22	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R23	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R24	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R25	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R26	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R27	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R28	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R29	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R30	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R31	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R32	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R33	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R34	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R35	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R36	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R37	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R38	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R40	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R41	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R42	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R43	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R44	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R45	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R46	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R47	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R48	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R49	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R50	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R51	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R52	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R53	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R54	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R55	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R56	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R57	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R58	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R59	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R60	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R61	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R62	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R63	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R64	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R65	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R66	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R67	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R68	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R69	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R80	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R81	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R82	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R83	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R84	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R110	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R111	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R113	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R116	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R118	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R119	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R120	1-218-939-11	s	RESISTOR, CHIP 68 1/16W (1005)
R121	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R122	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R123	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R124	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R125	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R127	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R129	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R130	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R131	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R132	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R133	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R135	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R136	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R137	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R138	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R160	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R161	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R163	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R166	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R168	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R169	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R170	1-218-939-11	s	RESISTOR, CHIP 68 1/16W (1005)
R171	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R172	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R173	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R174	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R175	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R177	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R179	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R180	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R181	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R182	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R183	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R185	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R186	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R187	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R188	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R191	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R192	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R202	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R203	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R204	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R205	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R206	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R207	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R208	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R209	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R210	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R211	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R212	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R213	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R214	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R215	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R216	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R217	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R218	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R219	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R221	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R222	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R223	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R225	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R227	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R228	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R231	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R232	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R233	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R234	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R235	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R236	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R237	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R239	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R250	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R251	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R252	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R253	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R254	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R301	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R305	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R306	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R307	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R310	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R311	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R312	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R313	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R314	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R315	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R316	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R401	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R402	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R403	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R404	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R405	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R406	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R407	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R408	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R411	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R412	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R413	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R417	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R418	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R419	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R420	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R450	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R451	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R454	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R455	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R456	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R457	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R458	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R460	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R463	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R470	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R501	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R502	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R504	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R505	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R506	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R507	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R508	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R509	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R512	1-208-955-11	s	RESISTOR CHIP 680K
R514	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R515	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R516	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R517	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R518	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R519	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R520	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R521	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R522	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R524	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R525	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R526	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R527	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R528	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R529	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R530	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R532	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R533	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R534	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R535	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R536	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R537	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R541	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R701	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R703	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R705	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R706	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R707	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R708	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R709	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R710	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R711	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R712	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R713	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R714	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R715	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R716	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R718	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R719	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R721	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R722	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R723	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R724	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R725	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R726	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R727	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R728	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R729	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R730	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R731	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R732	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R733	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R734	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R735	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R736	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R737	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R738	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R740	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R741	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R742	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R743	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R744	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R751	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R752	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R753	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R755	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R756	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R801	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R802	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R804	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R807	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R808	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R809	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R812	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R813	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R814	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R832	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R855	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R856	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R859	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R860	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R861	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R901	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R902	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R903	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R904	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R905	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R911	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R912	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R913	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R914	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R915	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R916	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
RB105	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB106	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB107	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB108	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB109	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB110	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB155	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB156	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB157	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB158	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB159	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB160	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
RB201	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB202	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB203	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB204	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB205	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB206	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB207	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB208	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB209	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB210	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB211	1-234-369-21	s	RES, NETWORK 10X4 (1005)
RB212	1-234-369-21	s	RES, NETWORK 10X4 (1005)
RB213	1-234-369-21	s	RES, NETWORK 10X4 (1005)
RB214	1-234-369-21	s	RES, NETWORK 10X4 (1005)
RB215	1-234-369-21	s	RES, NETWORK 10X4 (1005)
RB216	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB217	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB218	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB219	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB220	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB221	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB222	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB225	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB226	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB227	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB229	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB230	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB231	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB232	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB233	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB234	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB235	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB236	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB301	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB302	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB401	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB402	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB403	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB404	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB405	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB406	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB407	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB408	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB409	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB410	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB411	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB412	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB413	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB414	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB415	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB416	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB417	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB418	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB419	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB420	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB421	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB422	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB423	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB424	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
RB425	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB426	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB427	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB428	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB456	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB457	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB458	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB459	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB460	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB461	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB462	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB463	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB464	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB465	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB466	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB467	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB468	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB469	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB470	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB471	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB472	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB473	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB474	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB475	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB476	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB477	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB478	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB479	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB480	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB481	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB482	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB483	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB484	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB485	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB486	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB487	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB488	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB489	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB490	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB491	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB492	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB511	1-234-369-21	s	RES, NETWORK 10X4 (1005)
RB513	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB514	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB515	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB522	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB523	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB524	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB525	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB526	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB527	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB528	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB529	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB530	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB531	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB532	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB533	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB601	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB602	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
RB603	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB604	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB605	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB606	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB607	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB608	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB609	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB610	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB611	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB612	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB613	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB614	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB615	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB616	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB617	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB618	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB619	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB620	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB621	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB622	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB623	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB624	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB625	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB626	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB627	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB628	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB629	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB630	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB631	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB632	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB633	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB634	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB635	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB636	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB637	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB638	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB639	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB640	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB641	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB642	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB643	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB644	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB645	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB646	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB647	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB648	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB649	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB650	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB651	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB652	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB701	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB705	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB706	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB707	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB708	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB901	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB902	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB903	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB904	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(DRX-5 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description	
RB911	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB912	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB913	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB914	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB915	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RV1	1-225-791-21	s	RES, ADJ, CERMET 5K	
S1	1-572-658-21	s	SWITCH,ROTARY	
S2	1-692-271-31	s	SWITCH, SLIDE	
S4	1-570-711-11	s	SWITCH,SLIDE	
THP1	⚠ 1-533-817-21	s	THERMISTOR	
THP2	⚠ 1-533-817-21	s	THERMISTOR	
THP3	⚠ 1-533-817-21	s	THERMISTOR	
THP4	⚠ 1-533-817-21	s	THERMISTOR	
THP5	⚠ 1-533-817-21	s	THERMISTOR	
THP6	⚠ 1-533-817-21	s	THERMISTOR	
THP7	⚠ 1-533-817-21	s	THERMISTOR	
TP1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP501	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP801	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
X101	1-795-872-11	s	OSCILLATOR	
X151	1-795-872-11	s	OSCILLATOR	

DTX-5 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-301-A	s	MOUNTED CIRCUIT BOARD, DTX-5
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C101	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C102	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C103	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C104	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C105	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C106	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C107	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C108	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C109	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C110	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C111	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C112	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C113	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C114	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C115	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C116	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C117	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C118	1-127-738-11	s	CAPACITOR, CERAMIC 4.7MF/25V
C119	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C120	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C121	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C122	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C123	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C124	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C125	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C126	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C127	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C128	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C129	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C130	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C131	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C132	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C133	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C134	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C135	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C136	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C137	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C138	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C139	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C140	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C141	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C142	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C143	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C144	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C145	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C146	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C147	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C148	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C149	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C150	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C151	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C152	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C154	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C155	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C156	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C157	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C158	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C159	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C160	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C161	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C162	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C163	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C164	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C165	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C201	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C202	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C203	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C204	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C205	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C208	1-165-871-11	s	CAPACITOR,ELECT 22MF
C209	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C210	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C211	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C212	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C213	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C215	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C216	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C217	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C219	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C220	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C221	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C222	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C223	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C224	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C225	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C226	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C227	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C228	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C251	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C252	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C253	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C254	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C255	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C256	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C257	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C258	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C259	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C260	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C261	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C262	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C263	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C264	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C265	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C266	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C267	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C268	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C269	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C270	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C271	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C272	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C273	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C274	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C275	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C276	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C301	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C302	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C303	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C304	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C305	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C306	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C307	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C308	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C309	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C310	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C311	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C312	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C313	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C315	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C316	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C317	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C319	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C353	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C354	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C355	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C356	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C357	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C358	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C359	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C360	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C361	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C362	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C363	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C365	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C367	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C368	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C369	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C370	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C371	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C372	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C374	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C401	1-164-882-11	s	CAPACITOR,CERAMIC 220PF/16V CH
C402	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C403	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C404	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C405	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C406	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C407	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C408	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C409	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C410	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C411	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C412	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C413	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C414	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C415	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C416	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C417	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C418	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C419	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C420	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C421	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C422	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C423	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C424	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C425	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C426	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C427	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C428	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C429	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C430	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C431	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C432	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C433	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C434	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C501	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C502	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C503	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C504	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C505	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C506	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C507	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C508	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C509	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C510	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C511	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C512	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C513	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C515	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C516	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C517	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C518	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C519	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C520	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C521	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C522	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C523	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C524	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C525	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C526	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C527	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C528	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C529	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C530	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C531	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C532	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C533	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C534	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C535	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C536	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C537	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C538	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C539	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C540	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C541	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C542	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C601	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C602	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C603	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C604	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C605	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C606	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C607	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C608	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C609	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C610	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C611	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C612	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C701	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C702	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C703	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C704	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C705	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C706	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C707	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C708	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C709	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C710	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C711	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C712	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C713	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C715	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C716	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C717	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C719	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
CN501	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D101	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D102	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D103	8-719-063-83	s	LED SML-510MWT86
D301	8-719-820-41	s	DIODE 1SS302
D601	8-719-063-83	s	LED SML-510MWT86
D602	8-719-064-41	s	DIODE CL-191Y-CD-T
D603	8-719-077-09	s	DIODE CL-196HR-CD-T
D604	8-719-063-83	s	LED SML-510MWT86
D605	8-719-064-41	s	DIODE CL-191Y-CD-T
D606	8-719-077-09	s	DIODE CL-196HR-CD-T
D701	8-719-820-41	s	DIODE 1SS302
E101	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E102	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E103	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E104	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-469-094-21	s	FERRITE, EMI (SMD)
FB102	1-469-094-21	s	FERRITE, EMI (SMD)
FB103	1-469-094-21	s	FERRITE, EMI (SMD)
FB104	1-469-094-21	s	FERRITE, EMI (SMD)
FB201	1-469-094-21	s	FERRITE, EMI (SMD)
FB202	1-469-094-21	s	FERRITE, EMI (SMD)
FB203	1-469-094-21	s	FERRITE, EMI (SMD)
FB204	1-469-094-21	s	FERRITE, EMI (SMD)
FB205	1-469-094-21	s	FERRITE, EMI (SMD)
FB206	1-469-094-21	s	FERRITE, EMI (SMD)
FB207	1-469-094-21	s	FERRITE, EMI (SMD)
FB401	1-469-094-21	s	FERRITE, EMI (SMD)
FB402	1-469-094-21	s	FERRITE, EMI (SMD)
FB403	1-469-094-21	s	FERRITE, EMI (SMD)
FB404	1-469-094-21	s	FERRITE, EMI (SMD)
FB503	1-469-094-21	s	FERRITE, EMI (SMD)
FB504	1-469-094-21	s	FERRITE, EMI (SMD)
FL301	1-234-076-21	s	FILTER, LOW PASS
FL701	1-234-076-21	s	FILTER, LOW PASS

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
IC101	8-759-327-01	s	IC NJM062V-TE2
IC102	6-704-976-01	s	IC ADR381ART-REEL7
IC103	8-759-327-01	s	IC NJM062V-TE2
IC104	6-701-572-01	s	IC TPS54610PWPR
IC105	6-701-572-01	s	IC TPS54610PWPR
IC106	8-759-338-95	s	IC NJM2903V (TE2)
IC107	8-759-338-95	s	IC NJM2903V (TE2)
IC108	8-759-346-27	s	IC LM45BIM3X
IC109	6-706-482-01	s	IC TC7SH00FU(T5RSOYJF)
IC201	6-703-692-01	s	IC GS1561S-CFE3
IC251	8-752-078-34	s	IC CXB1342R
IC301	8-759-561-46	s	IC AD8014ART-REEL7
IC302	8-752-337-04	s	IC CXD1176Q
IC351	6-708-506-01	s	IC ML86V7666TBZ03A
IC402	8-759-472-43	s	IC 74VHC245MTCX
IC403	6-700-804-01	s	IC SN74LVC574APWR
IC404	6-700-804-01	s	IC SN74LVC574APWR
IC405	6-700-804-01	s	IC SN74LVC574APWR
IC502	8-759-472-43	s	IC 74VHC245MTCX
IC503	6-700-804-01	s	IC SN74LVC574APWR
IC504	8-759-472-43	s	IC 74VHC245MTCX
IC507	6-702-787-01	s	IC UPD6467GR-525-E2
IC509	6-705-983-01	s	IC IS42S32200B-6TL-TR
IC510	6-705-983-01	s	IC IS42S32200B-6TL-TR
IC511	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC512	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC513	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC514	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC601	8-759-472-43	s	IC 74VHC245MTCX
IC602	8-759-472-43	s	IC 74VHC245MTCX
IC603	8-759-472-43	s	IC 74VHC245MTCX
IC604	8-759-472-18	s	IC 74VHC138MTCX
IC605	8-759-363-26	s	IC RN5VD28AA-TL
IC606	8-752-392-03	s	IC CXD1095BR
IC608	8-759-523-79	s	IC TC74VHC02FT
IC609	6-706-491-01	s	IC TC7SH86FU(T5RSOYJF)
IC610	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC611	8-752-392-03	s	IC CXD1095BR
IC701	8-759-561-46	s	IC AD8014ART-REEL7
IC702	8-752-337-04	s	IC CXD1176Q
JC502	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
L101	1-416-344-11	s	COIL, CHOKE 10UH
L102	1-416-344-11	s	COIL, CHOKE 10UH
L103	1-416-344-11	s	COIL, CHOKE 10UH
L104	1-416-344-11	s	COIL, CHOKE 10UH
L201	1-414-459-11	s	INDUCTOR,CHIP 4.7NH
L202	1-414-459-11	s	INDUCTOR,CHIP 4.7NH
L251	1-414-398-11	s	INDUCTOR (SMD) 10UH
L252	1-414-398-11	s	INDUCTOR (SMD) 10UH
L253	1-414-398-11	s	INDUCTOR (SMD) 10UH
L254	1-414-398-11	s	INDUCTOR (SMD) 10UH
L301	1-414-398-11	s	INDUCTOR (SMD) 10UH
L302	1-414-398-11	s	INDUCTOR (SMD) 10UH
L303	1-414-398-11	s	INDUCTOR (SMD) 10UH
L304	1-414-398-11	s	INDUCTOR (SMD) 10UH
L305	1-414-398-11	s	INDUCTOR (SMD) 10UH
L306	1-414-398-11	s	INDUCTOR (SMD) 10UH
L351	1-414-398-11	s	INDUCTOR (SMD) 10UH

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L352	1-414-398-11	s	INDUCTOR (SMD) 10UH
L353	1-414-398-11	s	INDUCTOR (SMD) 10UH
L354	1-414-398-11	s	INDUCTOR (SMD) 10UH
L355	1-414-398-11	s	INDUCTOR (SMD) 10UH
L356	1-414-398-11	s	INDUCTOR (SMD) 10UH
L401	1-414-398-11	s	INDUCTOR (SMD) 10UH
L402	1-414-398-11	s	INDUCTOR (SMD) 10UH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L601	1-414-398-11	s	INDUCTOR (SMD) 10UH
L701	1-414-398-11	s	INDUCTOR (SMD) 10UH
L702	1-414-398-11	s	INDUCTOR (SMD) 10UH
L703	1-414-398-11	s	INDUCTOR (SMD) 10UH
L704	1-414-398-11	s	INDUCTOR (SMD) 10UH
L705	1-414-398-11	s	INDUCTOR (SMD) 10UH
L706	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q101	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q102	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q103	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q106	8-729-927-99	s	TRANSISTOR 2SC4617R
Q107	8-729-927-99	s	TRANSISTOR 2SC4617R
Q108	8-729-928-27	s	TRANSISTOR DTA144EE
Q109	8-729-041-24	s	TRANSISTOR NDS355AN
Q201	8-729-046-30	s	TRANSISTOR 2SC5245-4/5-TL-E
Q202	8-729-046-30	s	TRANSISTOR 2SC5245-4/5-TL-E
Q301	8-729-928-19	s	TRANSISTOR 2SA1774R
Q302	8-729-928-19	s	TRANSISTOR 2SA1774R
Q303	8-729-927-99	s	TRANSISTOR 2SC4617R
Q304	8-729-927-99	s	TRANSISTOR 2SC4617R
Q351	8-729-928-19	s	TRANSISTOR 2SA1774R
Q601	8-729-927-99	s	TRANSISTOR 2SC4617R
Q602	8-729-927-99	s	TRANSISTOR 2SC4617R
Q603	8-729-927-99	s	TRANSISTOR 2SC4617R
Q604	8-729-927-99	s	TRANSISTOR 2SC4617R
Q605	8-729-927-99	s	TRANSISTOR 2SC4617R
Q606	8-729-927-99	s	TRANSISTOR 2SC4617R
Q607	8-729-927-99	s	TRANSISTOR 2SC4617R
Q701	8-729-928-19	s	TRANSISTOR 2SA1774R
Q702	8-729-928-19	s	TRANSISTOR 2SA1774R
Q703	8-729-927-99	s	TRANSISTOR 2SC4617R
Q704	8-729-927-99	s	TRANSISTOR 2SC4617R
R101	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R102	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R103	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R104	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R105	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R106	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R107	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R108	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R109	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R110	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R111	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R112	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R113	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R114	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R115	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R116	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R117	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R118	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R119	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R120	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R121	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R122	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R123	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R124	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R125	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R126	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R127	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R128	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R129	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R130	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R131	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R132	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R133	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R134	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R135	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R136	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R137	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R138	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R139	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R140	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R141	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R142	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R143	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R144	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R145	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R146	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R147	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R148	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R149	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R150	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R151	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R152	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R153	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R154	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R155	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R156	1-216-817-11	s	RESISTOR,CHIP 470 1/10W 1608
R157	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R158	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R159	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R160	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R161	1-216-809-11	s	RESISTOR,CHIP 100 1/10W 1608
R201	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R202	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R203	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R204	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R205	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R206	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R207	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R208	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R209	1-208-721-11	s	RESISTOR CHIP 39K 1/16W (1005)
R210	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R212	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R213	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R214	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R217	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R218	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R219	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R221	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R222	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R223	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R224	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R225	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R251	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R252	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R253	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R254	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R255	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R256	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R257	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R258	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R259	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R260	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R261	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R262	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R263	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R264	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R265	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R267	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R301	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R302	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R303	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R304	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R305	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R306	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R307	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R308	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R309	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R310	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R311	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R312	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R313	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R314	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R315	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R316	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R317	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R318	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R319	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R320	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R321	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R322	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R323	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R324	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R325	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R351	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R352	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R353	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R354	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R355	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R356	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R357	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R358	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R360	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R361	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R363	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R364	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R365	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R366	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R367	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R369	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R371	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R373	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R375	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R377	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R378	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R379	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R381	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R382	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R383	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R385	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R386	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R387	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R388	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R389	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R401	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R402	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R403	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R404	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R405	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R406	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R407	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R408	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R409	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R410	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R411	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R412	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R413	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R414	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R415	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R416	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R417	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R418	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R419	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R420	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R422	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R423	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R424	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R425	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R426	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R427	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R428	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R501	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R502	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R503	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R505	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R507	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R508	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R510	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R511	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R512	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R513	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R514	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R515	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R516	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R517	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R518	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R519	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R520	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R521	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R522	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R523	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R524	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R525	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R526	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R527	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R528	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R529	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R530	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R531	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R532	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R533	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R536	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R537	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R538	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R539	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R540	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R541	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R542	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R545	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R548	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R549	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R601	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R602	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R603	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R604	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R606	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R607	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R608	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R609	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R610	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R612	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R613	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R614	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R615	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R616	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R618	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R619	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R621	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R623	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R625	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R627	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R628	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R629	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R630	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R631	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R632	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R633	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R634	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R635	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R636	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R637	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R638	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R639	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R640	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R701	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R702	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R703	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R704	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R705	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R706	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R707	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R708	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R709	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R710	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R711	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R712	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R713	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R714	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R715	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R716	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R717	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R718	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R719	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R720	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R721	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R722	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R723	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R724	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R725	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
RB401	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB402	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB403	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB404	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB405	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB406	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB407	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB408	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB409	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB410	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB411	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB412	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB413	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB414	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB415	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB416	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB417	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB418	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB419	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB420	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB421	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB422	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB423	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB424	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB501	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB502	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB503	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB504	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB505	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB601	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB602	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB603	1-234-381-21	s	RES, NETWORK 100KX4 (1005)

(DTX-5 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
RB604	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB605	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB606	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB607	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB608	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB609	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB610	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB611	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB612	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB613	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB614	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB615	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB616	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB617	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB618	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB619	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB620	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB621	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB622	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB623	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB624	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB625	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB626	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB627	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB628	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB629	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB630	1-234-375-21	s	RES, NETWORK 1KX4 (1005)
RB631	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB632	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB633	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB634	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RV251	1-225-789-21	s	RES, ADJ, CERMET 2K
RV301	1-225-788-21	s	RES, ADJ, CERMET 1K
RV701	1-225-788-21	s	RES, ADJ, CERMET 1K
S601	1-692-271-31	s	SWITCH, SLIDE
S602	1-572-658-21	s	SWITCH,ROTARY
S603	1-762-118-21	s	SWITCH, TOGGLE
S604	1-762-120-11	s	SWITCH, TOGGLE
S605	1-762-120-11	s	SWITCH, TOGGLE
THP101 ⚠	1-533-817-21	s	THERMISTOR
THP102 ⚠	1-533-817-21	s	THERMISTOR
THP103 ⚠	1-533-817-21	s	THERMISTOR
THP104 ⚠	1-533-817-21	s	THERMISTOR
THP105 ⚠	1-533-817-21	s	THERMISTOR
THP106 ⚠	1-533-817-21	s	THERMISTOR
TP251	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP301	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP351	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP501	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP701	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
X201	1-795-872-11	s	OSCILLATOR

EN-159A BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1132-789-A	s	MOUNTED CIRCUIT BOARD, EN-159A
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C101	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C102	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C103	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C104	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C105	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C106	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C107	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C108	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C109	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C110	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C111	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C112	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C113	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C114	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C115	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C116	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C117	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C118	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C120	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C121	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C122	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C123	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C124	1-162-970-11	s	CAPACITOR CERAMIC 0.01MF/25V B
C125	1-162-970-11	s	CAPACITOR CERAMIC 0.01MF/25V B
C126	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C127	1-115-412-11	s	CAPACITOR,CERAMIC 680PF/25V CH
C128	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C129	1-115-412-11	s	CAPACITOR,CERAMIC 680PF/25V CH
C130	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C131	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C132	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C133	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C134	1-115-416-11	s	CAPACITOR,CERAMIC 1000PF/25V
C135	1-165-908-11	s	CAP, CERAMIC 1MF B 1608
C136	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C137	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C138	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C139	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C140	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C141	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C142	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C143	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C144	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C145	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C146	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C147	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C148	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C149	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C150	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C151	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C152	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C153	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C155	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C156	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C157	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C158	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C159	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)
C160	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C161	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C162	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C163	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C164	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C165	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C166	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C167	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C201	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C202	1-165-908-11	s	CAP, CERAMIC 1MF B 1608
C205	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C231	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C232	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C233	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C234	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C235	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C236	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C237	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C238	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C239	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C240	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C241	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C242	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C243	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C244	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C245	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C246	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C247	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C248	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C249	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C301	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C302	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C303	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C304	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C305	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C306	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C307	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C308	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C309	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C310	1-115-416-11	s	CAPACITOR,CERAMIC 1000PF/25V
C311	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C312	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C313	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C314	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C315	1-127-954-11	s	CAPACITOR,CHIP FILM 0.047MF
C316	1-115-416-11	s	CAPACITOR,CERAMIC 1000PF/25V
C317	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C318	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C319	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C320	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C321	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C322	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C323	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C324	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C325	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C326	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C328	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C329	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C330	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C331	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C332	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C333	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C334	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C335	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C336	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C337	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C338	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C339	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C340	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C341	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C342	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C343	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C344	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C345	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C346	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C347	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C348	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C349	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C350	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C351	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C352	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C353	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C354	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C355	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C356	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C357	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C358	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C359	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C360	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C361	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C362	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C363	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C364	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C365	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C366	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C367	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C368	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C369	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C370	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C371	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C372	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C373	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C374	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C375	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C376	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C377	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C378	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C379	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C380	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C381	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C382	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C383	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C384	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C385	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C386	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C387	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C388	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C389	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C390	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C391	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C392	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C393	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C394	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C395	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C396	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C397	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C398	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C399	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C400	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C401	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C402	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C403	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C404	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C405	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C406	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C407	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C408	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C409	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C410	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C411	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C412	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C413	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C414	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C415	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C416	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C417	1-162-913-11	s	CAPACITOR,CHIP CERAMIC 8PF/50V
C418	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C419	1-162-913-11	s	CAPACITOR,CHIP CERAMIC 8PF/50V
C420	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C421	1-162-913-11	s	CAPACITOR,CHIP CERAMIC 8PF/50V
C501	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C502	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C503	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C504	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C505	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C506	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C507	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C508	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C509	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C510	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C511	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C512	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C513	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C514	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C515	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C516	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C517	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C518	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C524	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C618	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C619	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C620	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C621	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
CN501	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
D101	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D102	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D202	8-719-064-52	s	DIODE CL-191YG-CD-T
D203	8-719-064-52	s	DIODE CL-191YG-CD-T
D301	8-719-801-78	s	DIODE 1SS184
D302	8-719-820-41	s	DIODE 1SS302
E101	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E102	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E103	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E104	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-469-094-21	s	FERRITE, EMI (SMD)
FB102	1-469-094-21	s	FERRITE, EMI (SMD)
FB103	1-469-094-21	s	FERRITE, EMI (SMD)
FB104	1-469-094-21	s	FERRITE, EMI (SMD)
FB301	1-469-094-21	s	FERRITE, EMI (SMD)
FB302	1-469-094-21	s	FERRITE, EMI (SMD)
IC101	8-759-327-01	s	IC NJM062V-TE2
IC102	8-759-327-01	s	IC NJM062V-TE2
IC104	6-701-572-01	s	IC TPS54610PWPR
IC105	6-701-572-01	s	IC TPS54610PWPR
IC106	6-704-976-01	s	IC ADR381ART-REEL7
IC107	8-759-472-43	s	IC 74VHC245MTCX
IC108	8-759-472-43	s	IC 74VHC245MTCX
IC109	8-759-472-43	s	IC 74VHC245MTCX
IC110	8-752-392-03	s	IC CXD1095BR
IC111	8-759-662-38	s	IC 74VHCT08AMTCX
IC112	8-759-472-18	s	IC 74VHC138MTCX
IC113	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC114	8-759-685-33	s	IC BU2500FV-E2
IC116	6-706-491-01	s	IC TC7SH86FU(T5RSOYJF)
IC117	6-706-482-01	s	IC TC7SH00FU(T5RSOYJF)
IC118	8-759-338-95	s	IC NJM2903V (TE2)
IC201	8-759-675-47	s	IC SN74LVC04APWR
IC202	8-759-675-47	s	IC SN74LVC04APWR
IC207	8-759-472-65	s	IC 74VHC574MTCX
IC208	8-759-472-65	s	IC 74VHC574MTCX
IC209	8-759-472-65	s	IC 74VHC574MTCX
IC301	8-752-334-64	s	IC CXD1171M
IC302	8-759-533-95	s	IC UPD6466GS-515
IC303	8-759-533-95	s	IC UPD6466GS-515
IC304	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC305	8-752-335-47	s	IC CXD1216M
IC306	8-759-970-59	s	IC TLC272CPS
IC307	8-752-337-04	s	IC CXD1176Q
IC308	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC309	8-759-472-65	s	IC 74VHC574MTCX
IC310	8-759-662-38	s	IC 74VHCT08AMTCX
IC311	6-707-556-01	s	IC CXD9184R
IC312	8-759-745-64	s	IC NJM4560M
IC313	8-759-561-46	s	IC AD8014ART-REEL7
IC314	8-752-391-99	s	IC CXD2315Q-T4
IC315	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC316	8-752-391-99	s	IC CXD2315Q-T4
IC317	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC318	8-752-391-99	s	IC CXD2315Q-T4
IC319	8-759-561-46	s	IC AD8014ART-REEL7
IC320	8-759-561-46	s	IC AD8014ART-REEL7

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
IC321	8-759-561-46	s	IC AD8014ART-REEL7
IC502	6-700-387-01	s	IC EPC2LC20-TP
IC513	8-759-472-65	s	IC 74VHC574MTCX
IC514	8-759-472-65	s	IC 74VHC574MTCX
IC515	8-759-472-65	s	IC 74VHC574MTCX
L101	1-416-344-11	s	COIL, CHOKE 10UH
L102	1-416-344-11	s	COIL, CHOKE 10UH
L103	1-416-344-11	s	COIL, CHOKE 10UH
L104	1-416-344-11	s	COIL, CHOKE 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
L206	1-414-398-11	s	INDUCTOR (SMD) 10UH
L207	1-414-398-11	s	INDUCTOR (SMD) 10UH
L301	1-414-398-11	s	INDUCTOR (SMD) 10UH
L302	1-414-398-11	s	INDUCTOR (SMD) 10UH
L303	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L304	1-414-398-11	s	INDUCTOR (SMD) 10UH
L305	1-414-398-11	s	INDUCTOR (SMD) 10UH
L306	1-414-398-11	s	INDUCTOR (SMD) 10UH
L307	1-414-398-11	s	INDUCTOR (SMD) 10UH
L308	1-414-398-11	s	INDUCTOR (SMD) 10UH
L309	1-414-398-11	s	INDUCTOR (SMD) 10UH
L310	1-412-955-11	s	INDUCTOR 22UH (2520)
L311	1-414-398-11	s	INDUCTOR (SMD) 10UH
L312	1-414-398-11	s	INDUCTOR (SMD) 10UH
L313	1-414-398-11	s	INDUCTOR (SMD) 10UH
L314	1-414-398-11	s	INDUCTOR (SMD) 10UH
L315	1-414-398-11	s	INDUCTOR (SMD) 10UH
L316	1-414-398-11	s	INDUCTOR (SMD) 10UH
L317	1-414-398-11	s	INDUCTOR (SMD) 10UH
L318	1-414-398-11	s	INDUCTOR (SMD) 10UH
L319	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L320	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L321	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L322	1-414-398-11	s	INDUCTOR (SMD) 10UH
L323	1-414-398-11	s	INDUCTOR (SMD) 10UH
L324	1-414-398-11	s	INDUCTOR (SMD) 10UH
L325	1-414-398-11	s	INDUCTOR (SMD) 10UH
L326	1-414-398-11	s	INDUCTOR (SMD) 10UH
L327	1-414-398-11	s	INDUCTOR (SMD) 10UH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L502	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q101	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q102	8-729-927-99	s	TRANSISTOR 2SC4617R
Q103	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-927-99	s	TRANSISTOR 2SC4617R
Q206	8-729-927-99	s	TRANSISTOR 2SC4617R
Q207	8-729-927-99	s	TRANSISTOR 2SC4617R
R101	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R102	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R103	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R104	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R105	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R106	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R107	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R108	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R109	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R110	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R111	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R112	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R113	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R114	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R115	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R116	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R117	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R118	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R119	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R120	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R121	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R122	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R123	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R124	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R125	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R126	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R127	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R128	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R129	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R130	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R131	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R132	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R133	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R134	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R135	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R136	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R137	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R138	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R139	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R140	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R141	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R142	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R143	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R144	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R145	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R146	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R147	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R148	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R149	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R150	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R151	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R152	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R153	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R154	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R155	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R156	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R157	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R158	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R159	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R160	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R161	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R165	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R166	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R168	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R171	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R174	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R175	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R176	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R177	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R204	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R206	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R210	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R211	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R213	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R214	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R221	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R223	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R224	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R225	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R226	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R227	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R228	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R229	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R230	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R231	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R232	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R259	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R260	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R261	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R262	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R263	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R264	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R265	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R266	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R267	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R268	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R269	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R270	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R271	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R272	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R273	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R274	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R275	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R276	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R277	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R278	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R279	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R298	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R301	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R302	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R303	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R305	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R306	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R307	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R308	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R309	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R311	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R312	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R313	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R314	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R315	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R316	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R317	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R318	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R319	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R320	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R321	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R322	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R323	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R324	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R325	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R326	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R327	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R329	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R331	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R332	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R333	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R334	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R341	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R342	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R343	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R344	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R345	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R346	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R347	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R348	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R349	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R350	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R351	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R352	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R353	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R354	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R355	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R356	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R357	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R358	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R360	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R361	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R362	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R363	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R364	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R365	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R366	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R367	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R368	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R369	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R370	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R371	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R372	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R373	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R375	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R376	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R377	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R378	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R379	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R380	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R381	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R382	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R383	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R384	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R387	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R390	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R391	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R392	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R393	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R394	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R396	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R398	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R400	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R401	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R402	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R403	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R404	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R405	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R406	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R407	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R408	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R409	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R410	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R411	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R412	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R413	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R414	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R415	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R416	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R417	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R418	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R419	1-218-903-11	s	RESISTOR,CHIP 220K 1/10W(1608)
R420	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R421	1-218-903-11	s	RESISTOR,CHIP 220K 1/10W(1608)
R422	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R423	1-218-903-11	s	RESISTOR,CHIP 220K 1/10W(1608)
R424	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R425	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R426	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R427	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R428	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R429	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R430	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R431	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R432	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R433	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R434	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R435	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R436	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R437	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R438	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R439	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R440	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R441	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R442	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R443	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R444	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R445	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R446	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R447	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R448	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R449	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R450	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R451	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R452	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R453	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R454	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R455	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R456	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R457	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R458	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R459	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R501	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R502	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R503	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R504	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R505	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R506	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R507	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R508	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R509	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R510	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R511	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R512	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R513	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R514	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R515	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R516	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R517	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R525	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R526	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R527	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R528	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R547	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R663	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R667	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R668	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R669	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R670	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R671	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R672	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R901	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R902	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R911	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R912	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R913	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
RB101	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB102	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB103	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB104	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB105	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB106	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB107	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB108	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB109	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB110	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB111	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB112	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB113	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB114	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB115	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB116	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB117	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB118	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB119	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB120	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB121	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
RB122	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB123	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB124	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB125	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB127	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB128	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB202	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB203	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB204	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB205	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB206	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB207	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB210	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB211	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB212	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB213	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB214	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB215	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB216	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB217	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB218	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB219	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB220	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB221	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB222	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB223	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB224	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB225	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB226	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB227	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB228	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB229	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB230	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB231	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB232	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB233	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB234	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB235	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB236	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB237	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB238	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB239	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB240	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB241	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB242	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB243	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB254	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB255	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB301	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB302	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB303	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB304	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB305	1-234-379-11	s	RESISTOR,NETWORK 22KX4 (1005)
RB306	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB307	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB308	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB309	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB311	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB312	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description	
RB313	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB314	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB315	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB316	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB317	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB318	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB319	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB320	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB321	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB322	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB323	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB324	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB325	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB326	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB327	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB328	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB329	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB330	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB331	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB501	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB502	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB503	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB504	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB505	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB506	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB507	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB508	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB529	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB530	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB531	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB532	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB533	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB534	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB539	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB540	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB541	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB542	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB543	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RB544	1-234-372-11	s	RES, NETWORK 100X4	(1005)
RV301	1-225-793-11	s	RES, ADJ, CERMET 20K	
RV302	1-225-792-21	s	RES, ADJ, CERMET 10K	
RV303	1-225-787-21	s	RES, ADJ, CERMET 500	
RV304	1-225-787-21	s	RES, ADJ, CERMET 500	
RV305	1-225-787-21	s	RES, ADJ, CERMET 500	
S201	1-762-120-11	s	SWITCH, TOGGLE	
S301	1-570-711-11	s	SWITCH,SLIDE	
THP101 !	1-533-817-21	s	THERMISTOR	
THP102 !	1-533-817-21	s	THERMISTOR	
THP103 !	1-533-817-21	s	THERMISTOR	
THP104 !	1-533-817-21	s	THERMISTOR	
THP105 !	1-533-817-21	s	THERMISTOR	
THP106 !	1-803-615-11	s	THERMISTOR, POSITIVE	
THP107 !	1-803-615-11	s	THERMISTOR, POSITIVE	
TP202	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP207	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP301	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP302	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP303	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	

(EN-159A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
TP304	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP305	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP306	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP307	1-535-877-22	s	CHIP,CHECKER (TEST POINT)

EN-159B BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1132-790-A	s	MOUNTED CIRCUIT BOARD, EN-159B
4pcs	7-682-947-01	s	SCREW +PSW 3X6
C101	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C102	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C103	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C104	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C105	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C106	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C107	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C108	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C109	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C110	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C111	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C112	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C113	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C114	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C115	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C116	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C117	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C118	1-165-176-11	s	CAPACITOR,CERAMIC 47000PF/16V
C120	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C121	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C122	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C123	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C124	1-162-970-11	s	CAPACITOR CERAMIC 0.01MF/25V B
C125	1-162-970-11	s	CAPACITOR CERAMIC 0.01MF/25V B
C126	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C127	1-115-412-11	s	CAPACITOR,CERAMIC 680PF/25V CH
C128	1-164-227-11	s	CAPACITOR,CERAMIC 0.022MF/25V
C129	1-115-412-11	s	CAPACITOR,CERAMIC 680PF/25V CH
C130	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C131	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C132	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C133	1-127-692-91	s	CAP, CHIP CERAMIC 10MF B 3216
C134	1-115-416-11	s	CAPACITOR,CERAMIC 1000PF/25V
C135	1-165-908-11	s	CAP, CERAMIC 1MF B 1608
C136	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C137	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C138	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C139	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C140	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C141	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C142	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C143	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C144	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C145	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C146	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C147	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C148	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C149	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C150	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C151	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C152	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C153	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C155	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C156	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C157	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C158	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C159	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)
C160	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C161	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C162	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C163	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C164	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C165	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C166	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C167	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C201	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C202	1-165-908-11	s	CAP, CERAMIC 1MF B 1608
C203	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C204	1-126-391-11	s	CAPACITOR ELECT 47MF/6.3V(105)
C205	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C206	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C207	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C208	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C209	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C210	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C211	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C212	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C213	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C214	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C215	1-126-390-11	s	CAPACITOR ELECT 22MF/6.3V(105)
C216	1-126-390-11	s	CAPACITOR ELECT 22MF/6.3V(105)
C217	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C218	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C219	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C220	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C221	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C222	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C223	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C224	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C225	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C226	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C227	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C228	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C229	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C230	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C231	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C232	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C233	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C234	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C235	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C236	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C237	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C238	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C239	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C240	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C241	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C242	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C243	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C244	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C245	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C246	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C247	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C248	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C249	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C250	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C251	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C252	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C253	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C254	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C255	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C256	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C257	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C258	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C259	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C260	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C261	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C262	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C263	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C264	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C265	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C266	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C267	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C268	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C301	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C302	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C303	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C304	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C305	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C306	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C307	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C308	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C309	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C310	1-115-416-11	s	CAPACITOR,CERAMIC 1000PF/25V
C311	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C312	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C313	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C314	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C315	1-127-954-11	s	CAPACITOR,CHIP FILM 0.047MF
C316	1-115-416-11	s	CAPACITOR,CERAMIC 1000PF/25V
C317	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C318	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C319	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C320	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C321	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C322	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C323	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C324	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C325	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C326	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C328	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C329	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C330	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C331	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C332	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C333	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C334	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C335	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C336	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C337	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C338	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C339	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C340	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C341	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C342	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C343	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C344	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C345	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C346	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C347	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C348	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C349	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C350	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C351	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C352	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C353	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C354	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C355	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C356	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C357	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C358	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C359	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C360	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C361	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C362	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C363	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C364	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C365	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C366	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C367	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C368	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C369	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C370	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C371	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C372	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C373	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C374	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C375	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C376	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C377	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C378	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C379	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C380	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C381	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C382	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C383	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C384	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C385	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C386	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C387	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C388	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C389	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C390	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C391	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C392	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C393	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C394	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C395	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C396	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C397	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C398	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C399	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C400	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C401	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C402	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C403	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C404	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C405	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C406	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C407	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C408	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C409	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C410	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C411	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C412	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C413	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C414	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C415	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C416	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C417	1-162-913-11	s	CAPACITOR,CHIP CERAMIC 8PF/50V
C418	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C419	1-162-913-11	s	CAPACITOR,CHIP CERAMIC 8PF/50V
C420	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C421	1-162-913-11	s	CAPACITOR,CHIP CERAMIC 8PF/50V
C501	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C502	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C503	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C504	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C505	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C506	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C507	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C508	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C509	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C510	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C511	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C512	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C513	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C514	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C515	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C516	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C517	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C518	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C519	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C520	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C521	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C522	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C523	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C524	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C525	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C526	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C527	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C528	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C529	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C530	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C531	1-162-912-11	s	CAPACITOR,CERAMIC 7PF/50V 1608
C532	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C533	1-162-912-11	s	CAPACITOR,CERAMIC 7PF/50V 1608
C534	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C535	1-162-912-11	s	CAPACITOR,CERAMIC 7PF/50V 1608
C536	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C537	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C538	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C539	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C540	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C541	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C542	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C543	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C544	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C545	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C546	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C547	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C548	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C549	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C550	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C551	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C552	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C553	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C554	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C555	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C556	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C557	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C558	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C559	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C560	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C561	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C562	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C563	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C564	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C565	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C566	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C567	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C568	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C569	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C570	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C571	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C572	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C573	1-100-159-91	s	CAP, CERAMIC 22MF B (SMD) 3216
C574	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C575	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C576	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C577	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C578	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C579	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C580	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C581	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C582	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C583	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C584	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C585	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C586	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C587	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C588	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C589	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C590	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C591	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C592	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C593	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C594	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C595	1-162-919-11	s	CAPACITOR,CERAMIC 22PF/50V CH
C596	1-162-923-11	s	CAPACITOR,CERAMIC 47PF/50V CH
C597	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C598	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C599	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C600	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C601	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C602	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C603	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C604	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C605	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C606	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C607	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C608	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C609	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C610	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C611	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C612	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C613	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C614	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C615	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C616	1-162-910-11	s	CAPACITOR,CERAMIC 5PF/50V 1608
C617	1-162-915-11	s	CAPACITOR,CERAMIC 10PF/50V CH
C618	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C619	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C620	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
CN501	1-764-093-21	o	PIN, CONNECTOR (PC BOARD) 8P
D101	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D102	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D201	8-719-024-71	s	DIODE 1SS362-TE85L
D202	8-719-064-52	s	DIODE CL-191YG-CD-T
D203	8-719-064-52	s	DIODE CL-191YG-CD-T
D204	8-719-063-83	s	LED SML-510MWT86
D205	8-719-077-09	s	DIODE CL-196HR-CD-T
D301	8-719-801-78	s	DIODE 1SS184
D302	8-719-820-41	s	DIODE 1SS302
D501	8-719-801-78	s	DIODE 1SS184
D502	8-719-820-41	s	DIODE 1SS302
D503	8-719-820-41	s	DIODE 1SS302
D504	8-719-820-41	s	DIODE 1SS302
E101	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E102	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E103	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E104	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-469-094-21	s	FERRITE, EMI (SMD)
FB102	1-469-094-21	s	FERRITE, EMI (SMD)
FB103	1-469-094-21	s	FERRITE, EMI (SMD)
FB104	1-469-094-21	s	FERRITE, EMI (SMD)
FB301	1-469-094-21	s	FERRITE, EMI (SMD)
FB302	1-469-094-21	s	FERRITE, EMI (SMD)
FL501	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
FL502	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
FL503	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
IC101	8-759-327-01	s	IC NJM062V-TE2
IC102	8-759-327-01	s	IC NJM062V-TE2
IC104	6-701-572-01	s	IC TPS54610PWPR
IC105	6-701-572-01	s	IC TPS54610PWPR
IC106	6-704-976-01	s	IC ADR381ART-REEL7
IC107	8-759-472-43	s	IC 74VHC245MTCX
IC108	8-759-472-43	s	IC 74VHC245MTCX

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
IC109	8-759-472-43	s	IC 74VHC245MTCX
IC110	8-752-392-03	s	IC CXD1095BR
IC111	8-759-662-38	s	IC 74VHCT08AMTCX
IC112	8-759-472-18	s	IC 74VHC138MTCX
IC113	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC114	8-759-685-33	s	IC BU2500FV-E2
IC116	6-706-491-01	s	IC TC7SH86FU(T5RSOYJF)
IC117	6-706-482-01	s	IC TC7SH00FU(T5RSOYJF)
IC118	8-759-338-95	s	IC NJM2903V (TE2)
IC201	8-759-675-47	s	IC SN74LVC04APWR
IC202	8-759-675-47	s	IC SN74LVC04APWR
IC203	8-759-561-46	s	IC AD8014ART-REEL7
IC204	8-759-184-64	s	IC TC4W66FU
IC205	8-759-344-12	s	IC GS4981CTAE3
IC206	8-759-472-43	s	IC 74VHC245MTCX
IC207	8-759-472-65	s	IC 74VHC574MTCX
IC208	8-759-472-65	s	IC 74VHC574MTCX
IC209	8-759-472-65	s	IC 74VHC574MTCX
IC211	6-707-557-01	s	IC CXD9186R
IC212	8-759-327-01	s	IC NJM062V-TE2
IC213	8-759-472-14	s	IC 74VHC125MTCX
IC301	8-752-334-64	s	IC CXD1171M
IC302	8-759-533-95	s	IC UPD6466GS-515
IC303	8-759-533-95	s	IC UPD6466GS-515
IC304	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC305	8-752-335-47	s	IC CXD1216M
IC306	8-759-970-59	s	IC TLC272CPS
IC307	8-752-337-04	s	IC CXD1176Q
IC308	6-706-484-01	s	IC TC7SH04FU(T5RSOYJF)
IC309	8-759-472-65	s	IC 74VHC574MTCX
IC310	8-759-662-38	s	IC 74VHCT08AMTCX
IC311	6-707-556-01	s	IC CXD9184R
IC312	8-759-745-64	s	IC NJM4560M
IC313	8-759-561-46	s	IC AD8014ART-REEL7
IC314	8-752-391-99	s	IC CXD2315Q-T4
IC315	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC316	8-752-391-99	s	IC CXD2315Q-T4
IC317	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC318	8-752-391-99	s	IC CXD2315Q-T4
IC319	8-759-561-46	s	IC AD8014ART-REEL7
IC320	8-759-561-46	s	IC AD8014ART-REEL7
IC321	8-759-561-46	s	IC AD8014ART-REEL7
IC502	6-700-387-01	s	IC EPC2LC20-TP
IC503	8-752-414-92	s	IC CXD2309AQ-T6
IC505	8-752-391-99	s	IC CXD2315Q-T4
IC506	8-752-391-99	s	IC CXD2315Q-T4
IC507	8-752-391-99	s	IC CXD2315Q-T4
IC508	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC509	6-706-478-01	s	IC TC7SET08FU(T5RSOJF)
IC510	8-759-561-46	s	IC AD8014ART-REEL7
IC511	8-759-561-46	s	IC AD8014ART-REEL7
IC512	8-759-561-46	s	IC AD8014ART-REEL7
IC516	8-759-523-02	s	IC TC74HC4053AFT(EL)
IC517	8-759-523-02	s	IC TC74HC4053AFT(EL)
IC518	8-759-662-38	s	IC 74VHCT08AMTCX
IC519	8-759-662-37	s	IC 74VHCT00AMTCX
L101	1-416-344-11	s	COIL, CHOKE 10UH
L102	1-416-344-11	s	COIL, CHOKE 10UH

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L103	1-416-344-11	s	COIL, CHOKE 10UH
L104	1-416-344-11	s	COIL, CHOKE 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
L201	1-414-398-11	s	INDUCTOR (SMD) 10UH
L202	1-414-398-11	s	INDUCTOR (SMD) 10UH
L203	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L204	1-414-400-11	s	INDUCTOR, 22UH
L205	1-414-400-11	s	INDUCTOR, 22UH
L206	1-414-398-11	s	INDUCTOR (SMD) 10UH
L207	1-414-398-11	s	INDUCTOR (SMD) 10UH
L208	1-414-398-11	s	INDUCTOR (SMD) 10UH
L209	1-414-398-11	s	INDUCTOR (SMD) 10UH
L301	1-414-398-11	s	INDUCTOR (SMD) 10UH
L302	1-414-398-11	s	INDUCTOR (SMD) 10UH
L303	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L304	1-414-398-11	s	INDUCTOR (SMD) 10UH
L305	1-414-398-11	s	INDUCTOR (SMD) 10UH
L306	1-414-398-11	s	INDUCTOR (SMD) 10UH
L307	1-414-398-11	s	INDUCTOR (SMD) 10UH
L308	1-414-398-11	s	INDUCTOR (SMD) 10UH
L309	1-414-398-11	s	INDUCTOR (SMD) 10UH
L310	1-412-955-11	s	INDUCTOR 22UH (2520)
L311	1-414-398-11	s	INDUCTOR (SMD) 10UH
L312	1-414-398-11	s	INDUCTOR (SMD) 10UH
L313	1-414-398-11	s	INDUCTOR (SMD) 10UH
L314	1-414-398-11	s	INDUCTOR (SMD) 10UH
L315	1-414-398-11	s	INDUCTOR (SMD) 10UH
L316	1-414-398-11	s	INDUCTOR (SMD) 10UH
L317	1-414-398-11	s	INDUCTOR (SMD) 10UH
L318	1-414-398-11	s	INDUCTOR (SMD) 10UH
L319	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L320	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L321	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L322	1-414-398-11	s	INDUCTOR (SMD) 10UH
L323	1-414-398-11	s	INDUCTOR (SMD) 10UH
L324	1-414-398-11	s	INDUCTOR (SMD) 10UH
L325	1-414-398-11	s	INDUCTOR (SMD) 10UH
L326	1-414-398-11	s	INDUCTOR (SMD) 10UH
L327	1-414-398-11	s	INDUCTOR (SMD) 10UH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L502	1-414-398-11	s	INDUCTOR (SMD) 10UH
L503	1-414-398-11	s	INDUCTOR (SMD) 10UH
L504	1-414-398-11	s	INDUCTOR (SMD) 10UH
L505	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L506	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L507	1-412-947-11	s	INDUCTOR 4.7UH (2520)
L508	1-414-398-11	s	INDUCTOR (SMD) 10UH
L509	1-414-398-11	s	INDUCTOR (SMD) 10UH
L510	1-414-398-11	s	INDUCTOR (SMD) 10UH
L511	1-414-398-11	s	INDUCTOR (SMD) 10UH
L512	1-414-398-11	s	INDUCTOR (SMD) 10UH
L513	1-414-398-11	s	INDUCTOR (SMD) 10UH
L514	1-414-398-11	s	INDUCTOR (SMD) 10UH
L515	1-414-398-11	s	INDUCTOR (SMD) 10UH
L516	1-414-398-11	s	INDUCTOR (SMD) 10UH
L517	1-414-398-11	s	INDUCTOR (SMD) 10UH
L518	1-412-955-11	s	INDUCTOR 22UH (2520)
L519	1-414-398-11	s	INDUCTOR (SMD) 10UH

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L520	1-414-398-11	s	INDUCTOR (SMD) 10UH
L521	1-414-398-11	s	INDUCTOR (SMD) 10UH
L522	1-414-398-11	s	INDUCTOR (SMD) 10UH
L523	1-414-398-11	s	INDUCTOR (SMD) 10UH
L524	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q101	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q102	8-729-927-99	s	TRANSISTOR 2SC4617R
Q103	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-927-99	s	TRANSISTOR 2SC4617R
Q201	8-729-928-19	s	TRANSISTOR 2SA1774R
Q202	8-729-927-99	s	TRANSISTOR 2SC4617R
Q203	8-729-927-99	s	TRANSISTOR 2SC4617R
Q204	8-729-927-99	s	TRANSISTOR 2SC4617R
Q205	8-729-927-99	s	TRANSISTOR 2SC4617R
Q206	8-729-927-99	s	TRANSISTOR 2SC4617R
Q207	8-729-927-99	s	TRANSISTOR 2SC4617R
Q208	8-729-927-99	s	TRANSISTOR 2SC4617R
Q209	8-729-927-99	s	TRANSISTOR 2SC4617R
Q501	8-729-143-13	s	TRANSISTOR 2SC4176-B34
Q502	8-729-143-13	s	TRANSISTOR 2SC4176-B34
Q503	8-729-143-13	s	TRANSISTOR 2SC4176-B34
Q504	8-729-927-99	s	TRANSISTOR 2SC4617R
Q505	8-729-928-19	s	TRANSISTOR 2SA1774R
R101	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R102	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R103	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R104	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R105	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R106	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R107	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R108	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R109	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R110	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R111	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R112	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R113	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R114	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R115	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R116	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R117	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R118	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R119	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R120	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R121	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R122	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R123	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R124	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R125	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R126	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R127	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R128	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R129	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R130	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R131	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R132	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R133	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R134	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R135	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R136	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R137	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R138	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R139	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R140	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R141	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R142	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R143	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R144	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R145	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R146	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R147	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R148	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R149	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R150	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R151	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R152	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R153	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R154	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R155	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R156	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R157	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R158	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R159	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R160	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R161	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R165	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R166	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R168	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R171	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R174	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R175	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R176	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R177	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R201	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R202	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R203	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R204	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R205	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R206	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R207	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R208	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R209	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R210	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R211	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R212	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R213	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R214	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R215	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R216	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R217	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R218	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R219	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R220	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R221	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R222	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R223	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R224	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R225	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R226	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R227	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R228	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R229	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R230	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R231	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R232	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R233	1-216-857-11	s	RESISTOR,CHIP 1M 1/10W(1608)
R234	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R235	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R236	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R237	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R238	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R239	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R240	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R241	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R242	1-218-899-11	s	RESISTOR,CHIP 150K 1/10W(1608)
R243	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R244	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R245	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R246	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R247	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R248	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R249	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R250	1-218-915-11	s	RESISTOR,CHIP 680K 1/10W(1608)
R251	1-218-911-11	s	RESISTOR,CHIP 470K 1/10W(1608)
R252	1-218-915-11	s	RESISTOR,CHIP 680K 1/10W(1608)
R253	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R254	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R255	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R256	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R257	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R258	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R259	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R260	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R261	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R262	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R263	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R264	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R265	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R266	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R267	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R268	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R269	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R271	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R272	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R273	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R274	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R275	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R276	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R277	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R278	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R279	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R280	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R281	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R282	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R283	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R284	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R285	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R286	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R287	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R288	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R289	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R290	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R291	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R292	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R293	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R294	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R295	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R296	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R297	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R298	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R299	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R301	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R302	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R303	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R305	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R306	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R307	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R308	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R309	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R311	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R312	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R313	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R314	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R315	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R316	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R317	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R318	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R319	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R320	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R321	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R322	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R323	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R324	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R325	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R326	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R327	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R329	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R331	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R332	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R333	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R334	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R341	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R342	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R343	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R344	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R345	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R346	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R347	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R348	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R349	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R350	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R351	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R352	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R353	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R354	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R355	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R356	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R357	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R358	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R360	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R361	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R362	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R363	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R364	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R365	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R366	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R367	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R368	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R369	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R370	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R371	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R372	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R373	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R375	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R376	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R377	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R378	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R379	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R380	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R381	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R382	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R383	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R384	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R387	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R390	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R391	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R392	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R393	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R394	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R396	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R398	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R400	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R401	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R402	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R403	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R404	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R405	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R406	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R407	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R408	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R409	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R410	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R411	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R412	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R413	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R414	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R415	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R416	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R417	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R418	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R419	1-218-903-11	s	RESISTOR,CHIP 220K 1/10W(1608)
R420	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R421	1-218-903-11	s	RESISTOR,CHIP 220K 1/10W(1608)
R422	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R423	1-218-903-11	s	RESISTOR,CHIP 220K 1/10W(1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R424	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R425	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R426	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R427	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R428	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R429	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R430	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R431	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R432	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R433	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R434	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R435	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R436	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R437	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R438	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R439	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R440	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R441	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R442	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R443	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R444	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R445	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R446	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R447	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R448	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R449	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R450	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R451	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R452	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R453	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R454	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R455	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R456	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R457	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R458	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R459	1-211-969-11	s	RESISTOR,CHIP 10 1/10W (1608)
R501	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R502	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R503	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R504	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R505	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R506	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R507	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R508	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R509	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R510	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R511	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R512	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R513	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R514	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R515	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R516	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R517	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R518	1-218-867-11	s	RESISTOR,CHIP 6.8K 1/10W(1608)
R519	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R520	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R521	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R522	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R523	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R524	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R525	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R526	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R527	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R528	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R529	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R530	1-218-837-11	s	RESISTOR,CHIP 390 1/10W (1608)
R531	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R532	1-218-837-11	s	RESISTOR,CHIP 390 1/10W (1608)
R533	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R534	1-218-837-11	s	RESISTOR,CHIP 390 1/10W (1608)
R535	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R536	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R537	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R538	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R539	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R540	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R541	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R542	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R543	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R544	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R545	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R546	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R547	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R548	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R549	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R550	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R551	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R552	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R553	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R554	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R555	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R556	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R557	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R558	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R559	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R560	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R561	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R562	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R563	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R564	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R565	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R566	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R567	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R568	1-218-899-11	s	RESISTOR,CHIP 150K 1/10W(1608)
R569	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R570	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R571	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R572	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R573	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R574	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R575	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R576	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R577	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R578	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R579	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R580	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R581	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R582	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R583	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R584	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R585	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R586	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R587	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R588	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R589	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R590	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R591	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R592	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R593	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R594	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R595	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R596	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R597	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R598	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R599	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R600	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R601	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R602	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R603	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R604	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R605	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R606	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R607	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R608	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R609	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R610	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R611	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R612	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R613	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R614	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R615	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R616	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R617	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R618	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R619	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R620	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R621	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R622	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R623	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R624	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R625	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R626	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R627	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R628	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R629	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R630	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R631	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R632	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R633	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R634	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R635	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
R636	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R637	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R638	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R639	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R640	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R641	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R642	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R643	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R644	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R645	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R646	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R647	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R648	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R649	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R650	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R651	1-218-851-11	s	RESISTOR,CHIP 1.5K 1/10W(1608)
R652	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R653	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R654	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R655	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R656	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R657	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R658	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R659	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R660	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R661	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R662	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R664	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R665	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R666	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R671	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R672	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R674	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R675	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R901	1-218-895-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R902	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R903	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R904	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R905	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R906	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R907	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R908	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R909	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R910	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R911	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R912	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R913	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R914	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
RB101	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB102	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB103	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB104	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB105	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB106	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB107	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB108	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB109	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB110	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB111	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB112	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB113	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB114	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB115	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB116	1-234-372-11	s	RES, NETWORK 100X4 (1005)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
RB117	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB118	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB119	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB120	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB121	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB122	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB123	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB124	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB125	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB127	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB128	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB201	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB202	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB203	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB204	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB205	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB206	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB207	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB208	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB209	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB210	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB211	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB212	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB213	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB214	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB215	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB216	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB217	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB218	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB219	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB220	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB221	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB222	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB223	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB224	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB225	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB226	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB227	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB228	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB229	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB230	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB231	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB232	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB233	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB234	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB235	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB236	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB237	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB238	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB239	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB240	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB241	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB242	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB243	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB244	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB245	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB246	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB247	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB248	1-234-373-21	s	RES, NETWORK 220X4 (1005)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
RB249	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB250	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB251	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB252	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB253	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB254	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB255	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB301	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB302	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB303	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB304	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB305	1-234-379-11	s	RESISTOR,NETWORK 22KX4 (1005)
RB306	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB307	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB308	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB309	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB311	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB312	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB313	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB314	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB315	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB316	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB317	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB318	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB319	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB320	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB321	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB322	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB323	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB324	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB325	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB326	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB327	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB328	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB329	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB330	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB331	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB501	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB502	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB503	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB504	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB505	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB506	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB507	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB508	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB509	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB510	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB511	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB512	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB513	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB514	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB515	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB516	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB517	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB518	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB519	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB520	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB521	1-234-373-21	s	RES, NETWORK 220X4 (1005)
RB522	1-234-373-21	s	RES, NETWORK 220X4 (1005)

(EN-159B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description	
RB523	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB524	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB525	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB526	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB527	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB528	1-234-373-21	s	RES, NETWORK 220X4	(1005)
RB535	1-234-523-21	s	RESISTOR,CHIP NETWORK	
RB536	1-234-523-21	s	RESISTOR,CHIP NETWORK	
RB537	1-234-523-21	s	RESISTOR,CHIP NETWORK	
RB538	1-234-523-21	s	RESISTOR,CHIP NETWORK	
RB544	1-234-372-11	s	RES, NETWORK 100X4 (1005)	
RV301	1-225-793-11	s	RES, ADJ, CERMET 20K	
RV302	1-225-792-21	s	RES, ADJ, CERMET 10K	
RV303	1-225-787-21	s	RES, ADJ, CERMET 500	
RV304	1-225-787-21	s	RES, ADJ, CERMET 500	
RV305	1-225-787-21	s	RES, ADJ, CERMET 500	
RV501	1-225-792-21	s	RES, ADJ, CERMET 10K	
RV502	1-225-791-21	s	RES, ADJ, CERMET 5K	
RV503	1-225-791-21	s	RES, ADJ, CERMET 5K	
RV504	1-225-787-21	s	RES, ADJ, CERMET 500	
RV505	1-225-787-21	s	RES, ADJ, CERMET 500	
RV506	1-225-787-21	s	RES, ADJ, CERMET 500	
S201	1-762-120-11	s	SWITCH, TOGGLE	
S301	1-570-711-11	s	SWITCH,SLIDE	
THP101 ⚠	1-533-817-21	s	THERMISTOR	
THP102 ⚠	1-533-817-21	s	THERMISTOR	
THP103 ⚠	1-533-817-21	s	THERMISTOR	
THP104 ⚠	1-533-817-21	s	THERMISTOR	
THP105 ⚠	1-533-817-21	s	THERMISTOR	
THP106 ⚠	1-803-615-11	s	THERMISTOR, POSITIVE	
THP107 ⚠	1-803-615-11	s	THERMISTOR, POSITIVE	
TP201	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP202	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP203	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP204	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP205	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP206	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP207	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP301	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP302	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP303	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP304	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP305	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP306	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP307	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP501	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP502	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	
TP503	1-535-877-22	s	CHIP,CHECKER (TEST POINT)	

HIF-25 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
2pcs	A-1129-304-A	s	MOUNTED CIRCUIT BOARD, HIF-25
4pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C7	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C11	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C101	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C102	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C103	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C104	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C107	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C201	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C202	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C203	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C204	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C205	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C206	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C207	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
CN102	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN103	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN104	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN105	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB102	1-414-554-21	s	FERRITE, EMI(SMD)
FB201	1-414-554-21	s	FERRITE, EMI(SMD)
FB202	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC101	6-702-621-01	s	IC GS1528-CKAE3
IC201	6-702-621-01	s	IC GS1528-CKAE3
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L102	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L201	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L202	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R5	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R6	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R7	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R8	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R9	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R10	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(HIF-25 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R11	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R12	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R101	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R102	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R103	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R104	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R105	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R106	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R107	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R108	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R109	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R110	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R113	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R114	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R119	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R120	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R123	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R124	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R201	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R202	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R203	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R204	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R205	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R206	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R207	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R208	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R209	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R210	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R211	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R213	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R217	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R218	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R221	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R222	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R225	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R226	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)

HIF-26 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1132-794-A	s	MOUNTED CIRCUIT BOARD, HIF-26
8pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C7	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C11	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C101	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C102	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C103	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C104	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C107	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C201	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C202	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C203	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C204	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C205	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C206	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C207	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
CN102	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN103	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN104	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN105	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB102	1-414-554-21	s	FERRITE, EMI(SMD)
FB201	1-414-554-21	s	FERRITE, EMI(SMD)
FB202	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC101	6-702-621-01	s	IC GS1528-CKAE3
IC201	6-702-621-01	s	IC GS1528-CKAE3
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L102	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L201	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L202	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R5	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R6	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R7	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R8	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R9	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R10	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(HIF-26 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R11	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R12	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R101	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R102	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R103	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R104	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R105	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R106	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R107	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R108	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R109	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R110	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R113	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R114	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R119	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R120	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R123	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R124	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R201	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R202	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R203	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R204	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R205	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R206	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R207	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R208	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R209	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R210	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R211	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R213	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R217	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R218	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R221	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R222	1-216-864-11	s	CONDUCTOR, CHIP (1608)

HIF-27 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-308-A	s	MOUNTED CIRCUIT BOARD, HIF-27
3pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C7	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C11	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C101	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C102	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C103	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C104	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C107	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C201	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C202	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C203	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C204	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C205	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C206	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C207	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
CN102	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN103	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN104	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB102	1-414-554-21	s	FERRITE, EMI(SMD)
FB201	1-414-554-21	s	FERRITE, EMI(SMD)
FB202	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC101	6-702-621-01	s	IC GS1528-CKAE3
IC201	6-702-621-01	s	IC GS1528-CKAE3
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L102	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L201	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
L202	1-414-457-11	s	INDUCTOR, CHIP (S) 3.3NH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R5	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R6	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R7	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R8	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R9	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R10	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R11	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(HIF-27 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R12	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R101	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R102	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R103	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R104	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R105	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R106	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R107	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R108	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R109	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R110	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R113	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R114	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R119	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R120	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R123	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R124	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R201	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R202	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R203	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R204	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R205	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R206	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R207	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R208	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R209	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R210	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R211	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R213	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R217	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R218	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R221	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R222	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R225	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R226	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)

MB-1071 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-220-A	s	MOUNTED CIRCUIT BOARD, MB-1071
CN31	1-580-547-11	o	PIN, CONNECTOR (PC BOARD) 36P
CN32	1-779-092-11	s	PIN, CONNECTOR (PC BOARD) 10P

MB-1072/1072G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-083-A	s	MOUNTED CIRCUIT BOARD, MB-1072G (GOLD)
1pc	A-1129-279-A	s	MOUNTED CIRCUIT BOARD, MB-1072 (SILVER)
1pc	3-990-798-01	s	LABEL,SERVICE PARTS-NO
CN31	1-580-547-11	o	PIN, CONNECTOR (PC BOARD) 36P
CN32	1-778-534-31	s	CONNECTOR, FFC/FPC(ZIF) ST 45P (GOLD)
	1-778-534-21	o	CONNECTOR, FFC (ZIF) 45P (SILVER)

SDI-85 BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-305-A	s	MOUNTED CIRCUIT BOARD, SDI-85
4pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C7	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C10	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C101	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C102	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C103	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C104	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C107	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C108	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C109	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C110	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C111	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C112	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C113	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C114	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C115	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C201	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C202	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C203	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C204	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C205	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C206	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C207	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C208	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C209	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C210	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C211	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C212	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C213	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C214	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C301	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C302	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C303	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C304	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C305	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C306	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C307	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C308	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C309	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C310	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C401	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C402	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C403	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C404	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C405	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C406	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C407	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C408	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C409	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C410	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005

(SDI-85 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
CN102	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN103	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN104	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN105	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB102	1-414-554-21	s	FERRITE, EMI(SMD)
FB201	1-414-554-21	s	FERRITE, EMI(SMD)
FB202	1-414-554-21	s	FERRITE, EMI(SMD)
FB301	1-414-554-21	s	FERRITE, EMI(SMD)
FB401	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC101	6-702-620-01	s	IC GS1524-CKDE3
IC102	6-701-084-01	s	IC MC10EP57DTR2
IC103	8-759-471-91	s	IC 74VHC04MTCX
IC201	6-702-620-01	s	IC GS1524-CKDE3
IC202	6-701-084-01	s	IC MC10EP57DTR2
IC301	6-702-620-01	s	IC GS1524-CKDE3
IC401	6-702-620-01	s	IC GS1524-CKDE3
L1	1-416-344-11	s	COIL, CHOKE 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
L201	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
L301	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
L401	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-927-99	s	TRANSISTOR 2SC4617R
Q102	8-729-927-99	s	TRANSISTOR 2SC4617R
Q201	8-729-927-99	s	TRANSISTOR 2SC4617R
Q202	8-729-927-99	s	TRANSISTOR 2SC4617R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R5	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R6	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R7	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R8	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R9	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R10	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R11	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R12	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R13	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R101	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R102	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R103	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R104	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R105	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R106	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R107	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R108	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R109	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)

(SDI-85 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R110	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R111	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R112	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R113	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R114	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R115	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R116	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R117	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R118	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R119	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R120	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R121	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R122	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R123	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R124	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R125	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R126	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R127	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R133	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R134	1-220-872-81	s	RES, CHIP 12 (1005)
R135	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R201	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R202	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R203	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R204	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R205	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R206	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R207	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R208	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R209	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R210	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R211	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R212	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R213	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R214	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R215	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R216	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R217	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R218	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R219	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R220	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R221	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R222	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R223	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R224	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R225	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R226	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R227	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R228	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R229	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R233	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R234	1-220-872-81	s	RES, CHIP 12 (1005)
R235	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R301	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R302	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R303	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R304	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R305	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R306	1-208-911-11	s	RESISTOR, CHIP 10K (1005)

(SDI-85 BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R307	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R308	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R309	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R310	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R311	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R333	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R334	1-220-872-81	s	RES, CHIP 12 (1005)
R335	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R401	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R402	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R403	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R404	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R405	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R406	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R407	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R408	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R409	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R410	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R411	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R433	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)
R434	1-220-872-81	s	RES, CHIP 12 (1005)
R435	1-208-886-11	s	RESISTOR, CHIP 910 1/16W(1005)

SDI-86/86G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-074-A	s	MOUNTED CIRCUIT BOARD, SDI-86G (GOLD)
1pc	A-1129-306-A	s	MOUNTED CIRCUIT BOARD, SDI-86 (SILVER)
4pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C2	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C7	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C8	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C9	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C10	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C11	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C12	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C15	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C17	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C18	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C19	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C20	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C21	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C22	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C23	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C101	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C102	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C103	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C104	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C105	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C106	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C107	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C108	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C109	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C110	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C111	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C112	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C113	1-164-866-11	s	CAPACITOR,CHIP CERAMIC 47PF/50
C114	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C115	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C116	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C117	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C118	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C119	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C120	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C121	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C122	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C123	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C124	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C125	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C127	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C128	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C201	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C202	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C203	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C204	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C205	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C206	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C207	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C208	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C209	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C210	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C211	1-164-866-11	s	CAPACITOR,CHIP CERAMIC 47PF/50
C212	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C214	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C215	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C216	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C217	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C218	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C219	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C220	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C221	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C222	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C223	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C224	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C225	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C226	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C301	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C302	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C303	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C401	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C402	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C403	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C501	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C502	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C503	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C505	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C506	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C507	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C508	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C509	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C510	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C511	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C601	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C602	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C603	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C605	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C606	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C607	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C608	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C609	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C610	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C611	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C701	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C702	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C703	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C801	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C802	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C803	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C904	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C905	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C906	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C907	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C908	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C909	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
CN102	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN103	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN104	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN105	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
CN108	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D101	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D102	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D103	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D201	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D202	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D203	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D301	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D302	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D303	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D401	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D402	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
D403	9-910-999-30	s	HANDLED BY TOKYO PROD.GP
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB102	1-414-554-21	s	FERRITE, EMI(SMD)
FB103	1-414-554-21	s	FERRITE, EMI(SMD)
FB201	1-414-554-21	s	FERRITE, EMI(SMD)
FB202	1-414-554-21	s	FERRITE, EMI(SMD)
FB203	1-414-554-21	s	FERRITE, EMI(SMD)
FB301	1-414-554-21	s	FERRITE, EMI(SMD)
FB302	1-414-554-21	s	FERRITE, EMI(SMD)
FB401	1-414-554-21	s	FERRITE, EMI(SMD)
FB402	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	8-759-327-01	s	IC NJM062V-TE2
IC3	6-704-976-01	s	IC ADR381ART-REEL7
IC4	8-759-338-95	s	IC NJM2903V (TE2)
IC101	8-752-080-61	s	IC CXB1340N
IC102	8-759-523-02	s	IC TC74HC4053AFT(EL)
IC201	8-752-080-61	s	IC CXB1340N
IC202	8-759-523-02	s	IC TC74HC4053AFT(EL)
IC501	8-759-561-46	s	IC AD8014ART-REEL7
IC502	8-759-523-02	s	IC TC74HC4053AFT(EL)
IC601	8-759-561-46	s	IC AD8014ART-REEL7
IC602	8-759-523-02	s	IC TC74HC4053AFT(EL)
IC902	8-759-561-46	s	IC AD8014ART-REEL7
IC903	8-759-561-46	s	IC AD8014ART-REEL7
L1	1-416-344-11	s	COIL, CHOKE 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L3	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-465-31	s	INDUCTOR, CHIP (J) 15NH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-414-398-11	s	INDUCTOR (SMD) 10UH
L201	1-414-465-31	s	INDUCTOR, CHIP (J) 15NH
L203	1-414-398-11	s	INDUCTOR (SMD) 10UH
L204	1-414-398-11	s	INDUCTOR (SMD) 10UH
L301	1-414-465-31	s	INDUCTOR, CHIP (J) 15NH
L401	1-414-465-31	s	INDUCTOR, CHIP (J) 15NH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L502	1-414-398-11	s	INDUCTOR (SMD) 10UH
L601	1-414-398-11	s	INDUCTOR (SMD) 10UH

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L602	1-414-398-11	s	INDUCTOR (SMD) 10UH
L901	1-414-398-11	s	INDUCTOR (SMD) 10UH
L902	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q4	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q5	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-105-68	s	TRANSISTOR 2SC3356-K
Q102	8-729-927-99	s	TRANSISTOR 2SC4617R
Q103	8-729-927-99	s	TRANSISTOR 2SC4617R
Q104	8-729-105-68	s	TRANSISTOR 2SC3356-K
Q201	8-729-105-68	s	TRANSISTOR 2SC3356-K
Q202	8-729-927-99	s	TRANSISTOR 2SC4617R
Q203	8-729-927-99	s	TRANSISTOR 2SC4617R
Q204	8-729-105-68	s	TRANSISTOR 2SC3356-K
Q301	8-729-105-68	s	TRANSISTOR 2SC3356-K
Q302	8-729-927-99	s	TRANSISTOR 2SC4617R
Q303	8-729-927-99	s	TRANSISTOR 2SC4617R
Q401	8-729-105-68	s	TRANSISTOR 2SC3356-K
Q402	8-729-927-99	s	TRANSISTOR 2SC4617R
Q403	8-729-927-99	s	TRANSISTOR 2SC4617R
Q501	8-729-927-99	s	TRANSISTOR 2SC4617R
Q502	8-729-927-99	s	TRANSISTOR 2SC4617R
Q503	8-729-928-19	s	TRANSISTOR 2SA1774R
Q504	8-729-928-19	s	TRANSISTOR 2SA1774R
Q505	8-729-928-19	s	TRANSISTOR 2SA1774R
Q506	8-729-928-19	s	TRANSISTOR 2SA1774R
Q507	8-729-928-27	s	TRANSISTOR DTA144EE
Q508	8-729-928-81	s	TRANSISTOR DTC144EE
Q509	8-729-928-27	s	TRANSISTOR DTA144EE
Q510	8-729-928-81	s	TRANSISTOR DTC144EE
Q511	8-729-927-99	s	TRANSISTOR 2SC4617R
Q512	8-729-927-99	s	TRANSISTOR 2SC4617R
Q513	8-729-927-99	s	TRANSISTOR 2SC4617R
Q514	8-729-927-99	s	TRANSISTOR 2SC4617R
Q601	8-729-927-99	s	TRANSISTOR 2SC4617R
Q602	8-729-927-99	s	TRANSISTOR 2SC4617R
Q603	8-729-928-19	s	TRANSISTOR 2SA1774R
Q604	8-729-928-19	s	TRANSISTOR 2SA1774R
Q605	8-729-928-19	s	TRANSISTOR 2SA1774R
Q606	8-729-928-19	s	TRANSISTOR 2SA1774R
Q607	8-729-928-27	s	TRANSISTOR DTA144EE
Q608	8-729-928-81	s	TRANSISTOR DTC144EE
Q609	8-729-928-27	s	TRANSISTOR DTA144EE
Q610	8-729-928-81	s	TRANSISTOR DTC144EE
Q611	8-729-927-99	s	TRANSISTOR 2SC4617R
Q612	8-729-927-99	s	TRANSISTOR 2SC4617R
Q613	8-729-927-99	s	TRANSISTOR 2SC4617R
Q614	8-729-927-99	s	TRANSISTOR 2SC4617R
Q701	8-729-927-99	s	TRANSISTOR 2SC4617R
Q702	8-729-927-99	s	TRANSISTOR 2SC4617R
Q703	8-729-928-19	s	TRANSISTOR 2SA1774R
Q704	8-729-928-19	s	TRANSISTOR 2SA1774R
Q705	8-729-928-19	s	TRANSISTOR 2SA1774R
Q706	8-729-928-19	s	TRANSISTOR 2SA1774R
Q707	8-729-928-27	s	TRANSISTOR DTA144EE
Q708	8-729-928-81	s	TRANSISTOR DTC144EE
Q709	8-729-928-27	s	TRANSISTOR DTA144EE

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
Q710	8-729-928-81	s	TRANSISTOR DTC144EE
Q801	8-729-927-99	s	TRANSISTOR 2SC4617R
Q802	8-729-927-99	s	TRANSISTOR 2SC4617R
Q803	8-729-928-19	s	TRANSISTOR 2SA1774R
Q804	8-729-928-19	s	TRANSISTOR 2SA1774R
Q805	8-729-928-19	s	TRANSISTOR 2SA1774R
Q806	8-729-928-19	s	TRANSISTOR 2SA1774R
Q807	8-729-928-27	s	TRANSISTOR DTA144EE
Q808	8-729-928-81	s	TRANSISTOR DTC144EE
Q809	8-729-928-27	s	TRANSISTOR DTA144EE
Q810	8-729-928-81	s	TRANSISTOR DTC144EE
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R5	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R6	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R7	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R8	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R9	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R10	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R11	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R12	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R13	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R14	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R15	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R16	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R17	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R18	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R19	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R20	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R21	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R22	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R23	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R24	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R25	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R26	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R27	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R28	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R29	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R30	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R101	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R102	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R103	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R104	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R105	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R106	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R107	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R108	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R109	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R110	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R111	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R112	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R113	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R114	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R115	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R116	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R117	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R118	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R119	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R120	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R121	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R122	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R123	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R124	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R125	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R126	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R127	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R128	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R129	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R130	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R131	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R132	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R136	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R137	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R138	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R139	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R201	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R202	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R203	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R204	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R205	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R206	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R207	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R208	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R209	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R210	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R211	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R212	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R213	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R214	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R215	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R216	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R217	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R218	1-208-647-11	s	RESISTOR CHIP 33 1/16W (1005)
R219	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R220	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R221	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R222	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R223	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R224	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R225	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R226	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R227	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R228	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R229	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R230	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R231	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R232	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R233	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R234	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R301	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R302	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R303	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R304	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R305	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R306	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R307	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R308	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R309	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R310	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R311	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R312	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R313	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R401	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R402	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R403	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R404	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R405	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R406	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R407	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R408	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R409	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R410	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R411	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R412	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R413	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R501	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R502	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R503	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R504	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R505	1-208-943-11	s	RESISTOR CHIP 220K
R506	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R507	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R508	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R509	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R510	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R511	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R512	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R513	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R514	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R515	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R516	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R517	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R518	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R519	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R520	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R521	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R522	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R523	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R524	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R525	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R526	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R527	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R528	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R529	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R530	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R601	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R602	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R603	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R604	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R605	1-208-943-11	s	RESISTOR CHIP 220K
R606	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R607	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R608	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)

(SDI-86/86G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R609	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R610	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R611	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R612	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R613	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R614	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R615	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R616	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R617	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R618	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R619	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R620	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R621	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R622	1-208-679-11	s	RESISTOR CHIP 680 1/16W (1005)
R623	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R624	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R625	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R626	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R627	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R628	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R629	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R630	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R701	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R702	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R703	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R704	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R705	1-208-943-11	s	RESISTOR CHIP 220K
R706	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R707	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R708	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R709	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R710	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R711	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R712	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R713	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R801	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R802	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R803	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R804	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R805	1-208-943-11	s	RESISTOR CHIP 220K
R806	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R807	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R808	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R809	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R810	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R811	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R812	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R813	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R913	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R914	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R915	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R916	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R917	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R918	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R919	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R920	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R921	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R922	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)

SDI-87/87G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-084-A	s	MOUNTED CIRCUIT BOARD, SDI-87G (GOLD)
1pc	A-1129-309-A	s	MOUNTED CIRCUIT BOARD, SDI-87 (SILVER)
3pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
1pc	3-990-798-11	s	LABEL,SERVICE PARTS-NO
C1	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C2	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C7	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C8	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C9	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C10	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C11	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C12	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C15	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C17	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C18	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C19	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C20	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C21	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C22	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C23	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C24	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C25	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C101	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C102	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C103	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C104	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C107	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C108	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C109	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C110	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C111	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C112	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C113	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C114	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C115	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C116	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C117	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C118	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C119	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C120	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C121	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C122	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C123	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C201	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C202	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C203	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C204	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C205	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C206	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C207	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C208	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C209	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C210	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V

(SDI-87/87G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
C211	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C212	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C213	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C214	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C215	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C216	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C217	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C218	1-164-845-11	s	CAPACITOR,CERAMIC 5PF/16V(1005
C303	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C304	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C305	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C306	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C307	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C308	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C309	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C310	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C311	1-127-760-11	s	CAPACITOR,CERAMIC 4.7MF/6.3V
C312	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C313	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C314	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C315	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C316	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C319	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C320	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C321	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C322	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C401	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C402	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C403	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C404	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C501	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C502	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C503	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C504	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C505	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C506	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
CN102	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN103	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN104	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN105	1-778-647-31	s	CONNECTOR, FFC/FPC(ZIF) ST 15P (GOLD)
	1-778-647-21	o	CONNECTOR, FFC (ZIF) 15P (SILVER)
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D3	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D4	8-719-017-03	s	DIODE 02DZ4.7-TPH3
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB102	1-414-554-21	s	FERRITE, EMI(SMD)
FB201	1-414-554-21	s	FERRITE, EMI(SMD)
FB202	1-414-554-21	s	FERRITE, EMI(SMD)
FB301	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	8-759-327-01	s	IC NJM062V-TE2
IC3	6-704-976-01	s	IC ADR381ART-REEL7
IC4	8-759-338-95	s	IC NJM2903V (TE2)

(SDI-87/87G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
IC5	8-759-338-95	s	IC NJM2903V (TE2)
IC101	6-702-578-01	s	IC MSW-2-20+-TR
IC102	6-702-620-01	s	IC GS1524-CKDE3
IC103	6-701-084-01	s	IC MC10EP57DTR2
IC201	6-702-578-01	s	IC MSW-2-20+-TR
IC202	6-702-620-01	s	IC GS1524-CKDE3
IC203	6-701-084-01	s	IC MC10EP57DTR2
IC301	6-702-578-01	s	IC MSW-2-20+-TR
IC302	6-702-620-01	s	IC GS1524-CKDE3
IC303	8-759-561-46	s	IC AD8014ART-REEL7
IC401	8-759-471-85	s	IC 74VHC00MTCX
IC402	8-759-471-85	s	IC 74VHC00MTCX
IC403	8-759-471-96	s	IC 74VHC08MTCX
IC404	8-759-471-85	s	IC 74VHC00MTCX
IC501	8-759-561-46	s	IC AD8014ART-REEL7
IC502	8-759-561-46	s	IC AD8014ART-REEL7
L1	1-416-344-11	s	COIL, CHOKE 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L3	1-414-398-11	s	INDUCTOR (SMD) 10UH
L4	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
L201	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
L301	1-414-461-31	s	INDUCTOR, CHIP (K) 6.8NH
L303	1-414-398-11	s	INDUCTOR (SMD) 10UH
L304	1-414-398-11	s	INDUCTOR (SMD) 10UH
L501	1-414-398-11	s	INDUCTOR (SMD) 10UH
L502	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q4	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q5	8-729-928-19	s	TRANSISTOR 2SA1774R
Q6	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-927-99	s	TRANSISTOR 2SC4617R
Q102	8-729-928-19	s	TRANSISTOR 2SA1774R
Q103	8-729-046-30	s	TRANSISTOR 2SC5245-4/5-TL-E
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-928-19	s	TRANSISTOR 2SA1774R
Q106	8-729-928-19	s	TRANSISTOR 2SA1774R
Q107	8-729-821-88	s	TRANSISTOR 2SK1332-3
Q108	8-729-928-27	s	TRANSISTOR DTA144EE
Q109	8-729-928-81	s	TRANSISTOR DTC144EE
Q110	8-729-927-99	s	TRANSISTOR 2SC4617R
Q111	8-729-927-99	s	TRANSISTOR 2SC4617R
Q112	8-729-928-27	s	TRANSISTOR DTA144EE
Q113	8-729-928-81	s	TRANSISTOR DTC144EE
Q114	8-729-041-23	s	TRANSISTOR NDS356AP
Q201	8-729-927-99	s	TRANSISTOR 2SC4617R
Q202	8-729-928-19	s	TRANSISTOR 2SA1774R
Q203	8-729-046-30	s	TRANSISTOR 2SC5245-4/5-TL-E
Q204	8-729-927-99	s	TRANSISTOR 2SC4617R
Q205	8-729-928-19	s	TRANSISTOR 2SA1774R
Q206	8-729-928-19	s	TRANSISTOR 2SA1774R
Q207	8-729-821-88	s	TRANSISTOR 2SK1332-3
Q208	8-729-928-27	s	TRANSISTOR DTA144EE
Q209	8-729-928-81	s	TRANSISTOR DTC144EE
Q210	8-729-927-99	s	TRANSISTOR 2SC4617R

(SDI-87/87G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
Q211	8-729-927-99	s	TRANSISTOR 2SC4617R
Q301	8-729-927-99	s	TRANSISTOR 2SC4617R
Q302	8-729-928-19	s	TRANSISTOR 2SA1774R
Q303	8-729-046-30	s	TRANSISTOR 2SC5245-4/5-TL-E
Q304	8-729-927-99	s	TRANSISTOR 2SC4617R
Q305	8-729-928-19	s	TRANSISTOR 2SA1774R
Q306	8-729-928-19	s	TRANSISTOR 2SA1774R
Q307	8-729-821-88	s	TRANSISTOR 2SK1332-3
Q308	8-729-928-27	s	TRANSISTOR DTA144EE
Q309	8-729-928-81	s	TRANSISTOR DTC144EE
Q401	8-729-928-27	s	TRANSISTOR DTA144EE
Q402	8-729-928-81	s	TRANSISTOR DTC144EE
Q403	8-729-928-27	s	TRANSISTOR DTA144EE
Q404	8-729-928-27	s	TRANSISTOR DTA144EE
Q405	8-729-928-81	s	TRANSISTOR DTC144EE
Q406	8-729-928-27	s	TRANSISTOR DTA144EE
Q407	8-729-928-27	s	TRANSISTOR DTA144EE
Q408	8-729-928-81	s	TRANSISTOR DTC144EE
Q409	8-729-928-27	s	TRANSISTOR DTA144EE
Q410	8-729-928-27	s	TRANSISTOR DTA144EE
Q411	8-729-928-27	s	TRANSISTOR DTA144EE
Q412	8-729-928-27	s	TRANSISTOR DTA144EE
Q413	8-729-928-27	s	TRANSISTOR DTA144EE
Q414	8-729-928-81	s	TRANSISTOR DTC144EE
Q415	8-729-041-23	s	TRANSISTOR NDS356AP
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R5	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R6	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R7	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R8	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R9	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R10	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R11	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R12	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R13	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R14	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R15	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R16	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R18	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R19	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R20	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R21	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R22	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R23	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R24	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R25	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R26	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R27	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R28	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R29	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R30	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R31	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R32	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R33	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R34	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R35	1-208-911-11	s	RESISTOR, CHIP 10K (1005)

(SDI-87/87G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R36	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R37	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R101	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R102	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R104	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R105	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R106	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R107	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R108	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R109	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R110	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R111	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R112	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R113	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R114	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R115	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R116	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R117	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R118	1-208-943-11	s	RESISTOR CHIP 220K
R119	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R120	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R121	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R122	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R123	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R124	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R125	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R126	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R127	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R128	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R129	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R130	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R131	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R132	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R133	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R134	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R135	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R136	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R137	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R138	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R139	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R140	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R141	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R142	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R143	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R144	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R145	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R146	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R147	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R148	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R149	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R150	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R201	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R202	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R204	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R205	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R206	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R207	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R208	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R209	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)

(SDI-87/87G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R210	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R211	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R212	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R213	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R214	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R215	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R216	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R217	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R218	1-208-943-11	s	RESISTOR CHIP 220K
R219	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R220	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R221	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R222	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R223	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R224	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R225	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R226	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R227	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R228	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R229	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R230	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R231	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R232	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R233	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R234	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R235	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R250	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R301	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R302	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R304	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R305	1-208-860-11	s	RESISTOR CHIP 75 1/16W (1005)
R306	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R307	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R308	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R309	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R310	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R311	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R312	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R313	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R314	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R315	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R316	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R317	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R318	1-208-943-11	s	RESISTOR CHIP 220K
R319	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R320	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R321	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R322	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R323	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R325	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R326	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R327	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R328	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R329	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R330	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R331	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R332	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R333	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R334	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)

(SDI-87/87G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R350	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R401	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R402	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R403	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R404	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R405	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R406	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R407	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R408	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R409	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R410	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R411	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R412	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R413	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R414	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R415	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R416	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R417	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R418	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R501	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R502	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R503	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R504	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R505	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R506	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R507	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R508	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R509	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R510	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)

SDP-12 BOARD (suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-303-B	s	MOUNTED CIRCUIT BOARD, SDP-12
2pcs	3-364-941-01	s	SCREW (+B) (2.6X5), NYLOK
C1	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C4	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C6	1-165-872-21	s	CAP, ELECT 47MF (5.0X6.5)
C9	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C11	1-126-394-21	s	CAP, CHIP ELECT 10MF (4X5.7)
C13	1-165-872-21	s	CAP, ELECT 47MF (5.0X6.5)
C16	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C17	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C20	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C22	1-126-394-21	s	CAP, CHIP ELECT 10MF (4X5.7)
C23	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C24	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C25	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C26	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C27	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C29	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C30	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C31	1-128-416-21	s	CAP, CHIP ELECT 100MF
C32	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C33	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C34	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C35	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C36	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C37	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C38	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C39	1-164-936-81	s	CAP, CHIP CERAMIC 680PF B 1005
C40	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C41	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C42	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C43	1-165-872-21	s	CAP, ELECT 47MF (5.0X6.5)
C44	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C45	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C46	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C47	1-119-923-81	s	CAP, CERAMIC 0.047MF B 1005
C48	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C49	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C50	1-107-819-81	s	CAP,CHIP CERAMIC 22000PF B1005
C51	1-164-936-81	s	CAP, CHIP CERAMIC 680PF B 1005
C52	1-100-620-91	s	CAP, CHIP CERAMIC 47MF B(3225)
C53	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C55	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C56	1-165-872-21	s	CAP, ELECT 47MF (5.0X6.5)
C57	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C101	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C102	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C103	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C104	1-126-394-21	s	CAP, CHIP ELECT 10MF (4X5.7)
C105	1-126-394-21	s	CAP, CHIP ELECT 10MF (4X5.7)
C106	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C107	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C108	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C109	1-125-891-91	s	CAP, CHIP CERAMIC0.47MF B 1608
C110	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C111	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C112	1-125-891-91	s	CAP, CHIP CERAMIC0.47MF B 1608
C113	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C114	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C115	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C116	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C117	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C118	1-164-850-81	s	CAP, CHIP CERAMIC 10PF CH 1005
C119	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C120	1-164-937-81	s	CAP, CHIPCERAMIC 1000PF B 1005
C121	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C122	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C123	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C210	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C218	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C221	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C222	1-216-864-91	s	CONDUCTOR, CHIP (1608)
C223	1-216-864-91	s	CONDUCTOR, CHIP (1608)
C225	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C226	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C227	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C228	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C229	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C230	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C231	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C232	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C233	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C234	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C235	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C236	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C237	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C238	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C239	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C246	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C248	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C249	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C250	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C251	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C252	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C253	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C254	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C255	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C256	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C257	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C258	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C259	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C260	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C261	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C262	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C263	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C264	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C265	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C266	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C267	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C268	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C269	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C270	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C271	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C274	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C276	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C277	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C279	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C404	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C405	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C406	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C407	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C408	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C409	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C410	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C412	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C413	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C415	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C416	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C417	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C418	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C420	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C421	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C422	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C423	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C424	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C425	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C426	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C427	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C428	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C429	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C430	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C431	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C432	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C433	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C434	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C435	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C436	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C437	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C438	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C439	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C440	1-165-989-91	s	CAP, CERAMIC 10MF (2012)
C441	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C442	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C445	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C446	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C447	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C448	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C449	1-164-939-81	s	CAP, CHIPCERAMIC 2200PF B 1005
C450	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C451	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C452	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C453	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C454	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C455	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C456	1-100-507-91	s	CAP, CERAMIC 4.7MF C (1608)
C457	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C458	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C459	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C460	1-100-506-91	s	CAP, CERAMIC 1MF C (1005)
C461	1-216-864-91	s	CONDUCTOR, CHIP (1608)
C462	1-216-864-91	s	CONDUCTOR, CHIP (1608)
C475	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C479	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C482	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C483	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C484	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
C943	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C944	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C945	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
C949	1-125-777-81	s	CAP, CHIP CERAMIC 0.1MF B 1005
CN103	1-695-480-21	o	PIN, CONNECTOR (PC BOARD) 2P
CN104	1-770-470-21	o	PIN, CONNECTOR (PC BOARD) 6P
CN105	1-815-921-11	s	JACK, MODULAR
CN402	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
CP201	1-417-612-11	s	CONVERSION MODULE,O/E,OE-301
CP401	1-417-611-11	s	CONVERSION MODULE,E/O,EO-300
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D5	8-719-024-81	s	DIODE 1SS300-TE85L
D101	8-719-024-81	s	DIODE 1SS300-TE85L
D102	8-719-024-81	s	DIODE 1SS300-TE85L
D103	8-719-024-81	s	DIODE 1SS300-TE85L
E1	1-535-877-22	s	CHIP, CHECKER
E2	1-535-877-22	s	CHIP, CHECKER
FB1	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB2	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB3	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB4	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB5	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB6	1-469-094-21	s	FERRITE, EMI (SMD) (1608)
FB101	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB203	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB204	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB205	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB206	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB207	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB208	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB209	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB210	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB211	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB401	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB402	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB403	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB404	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB405	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB406	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB407	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB408	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB409	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
FB410	1-414-554-21	s	FERRITE, EMI (SMD) (1608)
IC1	8-759-327-01	s	IC NJM062V(TE2)
IC2	8-759-327-01	s	IC NJM062V(TE2)
IC3	6-704-976-01	s	IC ADR381ARTZ-REEL7
IC4	8-759-327-01	s	IC NJM062V(TE2)
IC5	6-706-482-01	s	IC TC7SH00FU(T5RSOYJF)
IC6	6-701-572-01	s	IC TPS54610PWPR
IC7	6-701-572-01	s	IC TPS54610PWPR
IC9	8-759-338-95	s	IC NJM2903V(TE2)
IC10	8-759-338-95	s	IC NJM2903V(TE2)
IC101	8-759-338-95	s	IC NJM2903V(TE2)
IC102	8-759-338-95	s	IC NJM2903V(TE2)
IC103	8-759-471-85	s	IC 74VHC00MTCX

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
IC104	8-759-327-01	s	IC NJM062V(TE2)
IC105	8-759-327-01	s	IC NJM062V(TE2)
IC106	8-759-346-27	s	IC LM45BIM3X
IC107	8-759-523-01	s	IC TC74HC4052AFT(EL)
IC202	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC204	6-709-052-01	s	IC GS1561-CFE3
IC205	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC207	8-759-472-43	s	IC 74VHC245MTCX
IC209	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC210	6-700-804-01	s	IC SN74LVC574APWR
IC211	6-700-804-01	s	IC SN74LVC574APWR
IC212	6-700-804-01	s	IC SN74LVC574APWR
IC213	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC401	6-700-804-01	s	IC SN74LVC574APWR
IC402	6-700-804-01	s	IC SN74LVC574APWR
IC403	6-700-804-01	s	IC SN74LVC574APWR
IC404	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC405	8-759-472-43	s	IC 74VHC245MTCX
IC407	8-759-363-26	s	IC RN5VD28AA-TL-FA
IC408	8-759-471-96	s	IC 74VHC08MTCX
IC410	6-703-693-01	s	IC GS1532-CFE3
IC413	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC414	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC415	8-759-669-43	s	IC SN74LVC157APWR-12
IC421	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC422	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC423	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC906	6-700-804-01	s	IC SN74LVC574APWR
IC907	6-700-804-01	s	IC SN74LVC574APWR
IC908	6-700-804-01	s	IC SN74LVC574APWR
IC912	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC913	8-759-592-42	s	IC TC7SZ00FU(TE85R)
JC101	1-218-990-81	s	CONDUCTOR, CHIP (1005)
JC102	1-218-990-81	s	CONDUCTOR, CHIP (1005)
L1	1-457-205-21	s	COIL, CHOKE (SMD) 3.3UH
L2	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L3	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L4	1-414-398-41	s	INDUCTOR (SMD) 10.0UH
L5	1-416-344-21	s	COIL, CHOKE 10UH
L6	1-416-344-21	s	COIL, CHOKE 10UH
L7	1-416-344-21	s	COIL, CHOKE 10UH
L202	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L203	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L204	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L205	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L401	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L402	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
L403	1-414-392-41	s	INDUCTOR (SMD) 1.0UH
Q1	8-729-035-99	s	TRANSISTOR 2SA1615-Z-E2
Q2	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q3	8-729-035-99	s	TRANSISTOR 2SA1615-Z-E2
Q4	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q5	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q6	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q7	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q8	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q9	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q101	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
Q102	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q103	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q104	8-729-928-05	s	TRANSISTOR 2SC4617TL-QR
Q105	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q106	8-729-928-25	s	TRANSISTOR 2SA1774TL-QR
Q205	8-729-928-28	s	TRANSISTOR DTA144EE-TL
Q206	8-729-928-82	s	TRANSISTOR DTC144EE-TL
Q207	8-729-041-23	s	TRANSISTOR NDS356AP
Q407	8-729-928-28	s	TRANSISTOR DTA144EE-TL
Q408	8-729-928-82	s	TRANSISTOR DTC144EE-TL
Q409	8-729-041-23	s	TRANSISTOR NDS356AP
R1	1-208-863-81	s	RES, CHIP 100 (1005)
R2	1-208-871-81	s	RES, CHIP 220 (1005)
R3	1-208-895-81	s	RES, CHIP 2.2K (1005)
R4	1-208-923-81	s	RES, CHIP 33K (1005)
R5	1-208-923-81	s	RES, CHIP 33K (1005)
R6	1-208-863-81	s	RES, CHIP 100 (1005)
R7	1-208-871-81	s	RES, CHIP 220 (1005)
R8	1-208-895-81	s	RES, CHIP 2.2K (1005)
R9	1-208-923-81	s	RES, CHIP 33K (1005)
R10	1-208-923-81	s	RES, CHIP 33K (1005)
R11	1-208-919-81	s	RES, CHIP 22K (1005)
R12	1-208-923-81	s	RES, CHIP 33K (1005)
R13	1-208-911-81	s	RES, CHIP 10K (1005)
R14	1-208-871-81	s	RES, CHIP 220 (1005)
R15	1-208-871-81	s	RES, CHIP 220 (1005)
R16	1-208-923-81	s	RES, CHIP 33K (1005)
R17	1-208-923-81	s	RES, CHIP 33K (1005)
R18	1-208-931-81	s	RES, CHIP 68K (1005)
R19	1-208-931-81	s	RES, CHIP 68K (1005)
R20	1-208-927-81	s	RES, CHIP 47K (1005)
R21	1-208-903-81	s	RES, CHIP 4.7K (1005)
R22	1-208-939-81	s	RES, CHIP 150K (1005)
R23	1-208-923-81	s	RES, CHIP 33K (1005)
R24	1-208-927-81	s	RES, CHIP 47K (1005)
R25	1-208-927-81	s	RES, CHIP 47K (1005)
R26	1-208-923-81	s	RES, CHIP 33K (1005)
R27	1-208-927-81	s	RES, CHIP 47K (1005)
R28	1-208-887-81	s	RES, CHIP 1.0K (1005)
R29	1-208-887-81	s	RES, CHIP 1.0K (1005)
R30	1-208-887-81	s	RES, CHIP 1.0K (1005)
R31	1-208-911-81	s	RES, CHIP 10K (1005)
R32	1-208-891-81	s	RES, CHIP 1.5K (1005)
R33	1-208-863-81	s	RES, CHIP 100 (1005)
R34	1-208-911-81	s	RES, CHIP 10K (1005)
R35	1-208-907-81	s	RES, CHIP 6.8K (1005)
R36	1-208-907-81	s	RES, CHIP 6.8K (1005)
R37	1-208-887-81	s	RES, CHIP 1.0K (1005)
R38	1-208-935-81	s	RES, CHIP 100K (1005)
R39	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R40	1-208-871-81	s	RES, CHIP 220 (1005)
R41	1-208-863-81	s	RES, CHIP 100 (1005)
R42	1-208-891-81	s	RES, CHIP 1.5K (1005)
R43	1-208-863-81	s	RES, CHIP 100 (1005)
R44	1-208-911-81	s	RES, CHIP 10K (1005)
R45	1-208-907-81	s	RES, CHIP 6.8K (1005)
R46	1-208-891-81	s	RES, CHIP 1.5K (1005)
R47	1-208-891-81	s	RES, CHIP 1.5K (1005)

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R51	1-208-923-81	s	RES, CHIP 33K (1005)
R52	1-208-895-81	s	RES, CHIP 2.2K (1005)
R53	1-208-915-81	s	RES, CHIP 15K (1005)
R54	1-208-919-81	s	RES, CHIP 22K (1005)
R55	1-208-911-81	s	RES, CHIP 10K (1005)
R56	1-208-895-81	s	RES, CHIP 2.2K (1005)
R57	1-208-915-81	s	RES, CHIP 15K (1005)
R58	1-208-919-81	s	RES, CHIP 22K (1005)
R59	1-208-907-81	s	RES, CHIP 6.8K (1005)
R60	1-208-927-81	s	RES, CHIP 47K (1005)
R61	1-208-931-81	s	RES, CHIP 68K (1005)
R62	1-208-911-81	s	RES, CHIP 10K (1005)
R63	1-208-907-81	s	RES, CHIP 6.8K (1005)
R64	1-208-915-81	s	RES, CHIP 15K (1005)
R65	1-208-895-81	s	RES, CHIP 2.2K (1005)
R66	1-208-911-81	s	RES, CHIP 10K (1005)
R67	1-208-911-81	s	RES, CHIP 10K (1005)
R68	1-208-911-81	s	RES, CHIP 10K (1005)
R69	1-208-871-81	s	RES, CHIP 220 (1005)
R70	1-208-867-81	s	RES, CHIP 150 (1005)
R71	1-208-887-81	s	RES, CHIP 1.0K (1005)
R72	1-208-871-81	s	RES, CHIP 220 (1005)
R73	1-208-903-81	s	RES, CHIP 4.7K (1005)
R74	1-208-927-81	s	RES, CHIP 47K (1005)
R75	1-208-895-81	s	RES, CHIP 2.2K (1005)
R76	1-208-895-81	s	RES, CHIP 2.2K (1005)
R101	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R102	1-208-887-81	s	RES, CHIP 1.0K (1005)
R103	1-208-911-81	s	RES, CHIP 10K (1005)
R104	1-208-911-81	s	RES, CHIP 10K (1005)
R105	1-208-919-81	s	RES, CHIP 22K (1005)
R106	1-208-879-81	s	RES, CHIP 470 (1005)
R107	1-208-903-81	s	RES, CHIP 4.7K (1005)
R108	1-208-903-81	s	RES, CHIP 4.7K (1005)
R109	1-208-899-81	s	RES, CHIP 3.3K (1005)
R110	1-208-875-81	s	RES, CHIP 330 (1005)
R111	1-208-903-81	s	RES, CHIP 4.7K (1005)
R112	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R113	1-208-907-81	s	RES, CHIP 6.8K (1005)
R114	1-208-891-81	s	RES, CHIP 1.5K (1005)
R115	1-208-911-81	s	RES, CHIP 10K (1005)
R116	1-208-911-81	s	RES, CHIP 10K (1005)
R117	1-208-911-81	s	RES, CHIP 10K (1005)
R118	1-208-895-81	s	RES, CHIP 2.2K (1005)
R119	1-208-895-81	s	RES, CHIP 2.2K (1005)
R120	1-208-935-81	s	RES, CHIP 100K (1005)
R121	1-208-907-81	s	RES, CHIP 6.8K (1005)
R122	1-208-911-81	s	RES, CHIP 10K (1005)
R123	1-208-895-81	s	RES, CHIP 2.2K (1005)
R124	1-208-927-81	s	RES, CHIP 47K (1005)
R125	1-208-919-81	s	RES, CHIP 22K (1005)
R126	1-208-919-81	s	RES, CHIP 22K (1005)
R127	1-208-927-81	s	RES, CHIP 47K (1005)
R128	1-208-927-81	s	RES, CHIP 47K (1005)
R129	1-208-927-81	s	RES, CHIP 47K (1005)
R130	1-208-911-81	s	RES, CHIP 10K (1005)
R131	1-208-895-81	s	RES, CHIP 2.2K (1005)
R132	1-208-907-81	s	RES, CHIP 6.8K (1005)
R133	1-208-919-81	s	RES, CHIP 22K (1005)

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R134	1-208-919-81	s	RES, CHIP 22K (1005)
R135	1-208-927-81	s	RES, CHIP 47K (1005)
R136	1-208-927-81	s	RES, CHIP 47K (1005)
R139	1-208-927-81	s	RES, CHIP 47K (1005)
R140	1-208-927-81	s	RES, CHIP 47K (1005)
R141	1-208-895-81	s	RES, CHIP 2.2K (1005)
R142	1-208-907-81	s	RES, CHIP 6.8K (1005)
R143	1-208-911-81	s	RES, CHIP 10K (1005)
R144	1-208-911-81	s	RES, CHIP 10K (1005)
R145	1-208-887-81	s	RES, CHIP 1.0K (1005)
R146	1-208-911-81	s	RES, CHIP 10K (1005)
R147	1-208-887-81	s	RES, CHIP 1.0K (1005)
R148	1-208-927-81	s	RES, CHIP 47K (1005)
R149	1-208-863-81	s	RES, CHIP 100 (1005)
R150	1-208-927-81	s	RES, CHIP 47K (1005)
R151	1-208-863-81	s	RES, CHIP 100 (1005)
R152	1-208-863-81	s	RES, CHIP 100 (1005)
R153	1-208-863-81	s	RES, CHIP 100 (1005)
R154	1-208-863-81	s	RES, CHIP 100 (1005)
R155	1-208-863-81	s	RES, CHIP 100 (1005)
R156	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R157	1-208-935-81	s	RES, CHIP 100K (1005)
R158	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R159	1-208-935-81	s	RES, CHIP 100K (1005)
R161	1-208-863-81	s	RES, CHIP 100 (1005)
R212	1-208-935-81	s	RES, CHIP 100K (1005)
R213	1-208-911-81	s	RES, CHIP 10K (1005)
R217	1-208-911-81	s	RES, CHIP 10K (1005)
R238	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R241	1-208-855-81	s	RES, CHIP 47 (1005)
R242	1-208-903-81	s	RES, CHIP 4.7K (1005)
R243	1-208-903-81	s	RES, CHIP 4.7K (1005)
R244	1-208-863-81	s	RES, CHIP 100 (1005)
R245	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R246	1-208-907-81	s	RES, CHIP 6.8K (1005)
R248	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R249	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R251	1-208-887-81	s	RES, CHIP 1.0K (1005)
R252	1-208-887-81	s	RES, CHIP 1.0K (1005)
R253	1-220-870-81	s	RES, CHIP 10 (1005)
R254	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R255	1-208-895-81	s	RES, CHIP 2.2K (1005)
R256	1-208-863-81	s	RES, CHIP 100 (1005)
R257	1-208-887-81	s	RES, CHIP 1.0K (1005)
R259	1-220-870-81	s	RES, CHIP 10 (1005)
R262	1-220-870-81	s	RES, CHIP 10 (1005)
R264	1-208-863-81	s	RES, CHIP 100 (1005)
R265	1-208-863-81	s	RES, CHIP 100 (1005)
R268	1-208-863-81	s	RES, CHIP 100 (1005)
R269	1-208-863-81	s	RES, CHIP 100 (1005)
R271	1-208-855-81	s	RES, CHIP 47 (1005)
R272	1-208-855-81	s	RES, CHIP 47 (1005)
R277	1-208-855-81	s	RES, CHIP 47 (1005)
R278	1-208-895-81	s	RES, CHIP 2.2K (1005)
R280	1-208-863-81	s	RES, CHIP 100 (1005)
R281	1-208-863-81	s	RES, CHIP 100 (1005)
R282	1-208-911-81	s	RES, CHIP 10K (1005)
R283	1-208-887-81	s	RES, CHIP 1.0K (1005)
R284	1-208-863-81	s	RES, CHIP 100 (1005)

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R285	1-208-863-81	s	RES, CHIP 100 (1005)
R286	1-208-863-81	s	RES, CHIP 100 (1005)
R287	1-208-863-81	s	RES, CHIP 100 (1005)
R288	1-208-863-81	s	RES, CHIP 100 (1005)
R289	1-208-863-81	s	RES, CHIP 100 (1005)
R290	1-208-863-81	s	RES, CHIP 100 (1005)
R291	1-208-863-81	s	RES, CHIP 100 (1005)
R292	1-208-863-81	s	RES, CHIP 100 (1005)
R293	1-220-870-81	s	RES, CHIP 10 (1005)
R297	1-220-870-81	s	RES, CHIP 10 (1005)
R298	1-208-855-81	s	RES, CHIP 47 (1005)
R300	1-208-855-81	s	RES, CHIP 47 (1005)
R301	1-208-855-81	s	RES, CHIP 47 (1005)
R302	1-208-855-81	s	RES, CHIP 47 (1005)
R303	1-208-911-81	s	RES, CHIP 10K (1005)
R304	1-208-863-81	s	RES, CHIP 100 (1005)
R305	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R306	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R401	1-220-870-81	s	RES, CHIP 10 (1005)
R403	1-208-863-81	s	RES, CHIP 100 (1005)
R404	1-208-863-81	s	RES, CHIP 100 (1005)
R405	1-208-863-81	s	RES, CHIP 100 (1005)
R406	1-220-870-81	s	RES, CHIP 10 (1005)
R407	1-220-870-81	s	RES, CHIP 10 (1005)
R408	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R409	1-220-870-81	s	RES, CHIP 10 (1005)
R410	1-208-903-81	s	RES, CHIP 4.7K (1005)
R412	1-220-870-81	s	RES, CHIP 10 (1005)
R413	1-220-870-81	s	RES, CHIP 10 (1005)
R414	1-220-870-81	s	RES, CHIP 10 (1005)
R416	1-208-863-81	s	RES, CHIP 100 (1005)
R417	1-208-863-81	s	RES, CHIP 100 (1005)
R418	1-208-863-81	s	RES, CHIP 100 (1005)
R419	1-208-863-81	s	RES, CHIP 100 (1005)
R420	1-208-863-81	s	RES, CHIP 100 (1005)
R421	1-208-863-81	s	RES, CHIP 100 (1005)
R422	1-208-863-81	s	RES, CHIP 100 (1005)
R423	1-208-863-81	s	RES, CHIP 100 (1005)
R424	1-208-935-81	s	RES, CHIP 100K (1005)
R425	1-208-863-81	s	RES, CHIP 100 (1005)
R426	1-208-863-81	s	RES, CHIP 100 (1005)
R427	1-208-935-81	s	RES, CHIP 100K (1005)
R428	1-208-863-81	s	RES, CHIP 100 (1005)
R429	1-208-863-81	s	RES, CHIP 100 (1005)
R433	1-208-855-81	s	RES, CHIP 47 (1005)
R435	1-208-863-81	s	RES, CHIP 100 (1005)
R436	1-208-863-81	s	RES, CHIP 100 (1005)
R437	1-208-863-81	s	RES, CHIP 100 (1005)
R438	1-208-863-81	s	RES, CHIP 100 (1005)
R439	1-208-863-81	s	RES, CHIP 100 (1005)
R440	1-208-863-81	s	RES, CHIP 100 (1005)
R441	1-220-870-81	s	RES, CHIP 10 (1005)
R442	1-220-870-81	s	RES, CHIP 10 (1005)
R444	1-208-863-81	s	RES, CHIP 100 (1005)
R445	1-208-863-81	s	RES, CHIP 100 (1005)
R446	1-208-863-81	s	RES, CHIP 100 (1005)
R447	1-208-863-81	s	RES, CHIP 100 (1005)
R448	1-208-863-81	s	RES, CHIP 100 (1005)
R449	1-208-863-81	s	RES, CHIP 100 (1005)

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R450	1-208-911-81	s	RES, CHIP 10K (1005)
R451	1-208-863-81	s	RES, CHIP 100 (1005)
R452	1-208-863-81	s	RES, CHIP 100 (1005)
R453	1-208-863-81	s	RES, CHIP 100 (1005)
R454	1-208-863-81	s	RES, CHIP 100 (1005)
R455	1-208-863-81	s	RES, CHIP 100 (1005)
R456	1-208-863-81	s	RES, CHIP 100 (1005)
R457	1-208-863-81	s	RES, CHIP 100 (1005)
R458	1-208-887-81	s	RES, CHIP 1.0K (1005)
R459	1-208-863-81	s	RES, CHIP 100 (1005)
R460	1-208-863-81	s	RES, CHIP 100 (1005)
R461	1-208-863-81	s	RES, CHIP 100 (1005)
R462	1-208-863-81	s	RES, CHIP 100 (1005)
R463	1-208-863-81	s	RES, CHIP 100 (1005)
R464	1-208-863-81	s	RES, CHIP 100 (1005)
R465	1-208-863-81	s	RES, CHIP 100 (1005)
R466	1-208-863-81	s	RES, CHIP 100 (1005)
R467	1-208-863-81	s	RES, CHIP 100 (1005)
R468	1-208-863-81	s	RES, CHIP 100 (1005)
R469	1-208-863-81	s	RES, CHIP 100 (1005)
R470	1-208-863-81	s	RES, CHIP 100 (1005)
R471	1-208-863-81	s	RES, CHIP 100 (1005)
R472	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R474	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R478	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R480	1-208-915-81	s	RES, CHIP 15K (1005)
R482	1-208-855-81	s	RES, CHIP 47 (1005)
R483	1-208-887-81	s	RES, CHIP 1.0K (1005)
R485	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R486	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R487	1-208-871-81	s	RES, CHIP 220 (1005)
R488	1-208-859-81	s	RES, CHIP 68 (1005)
R489	1-208-887-81	s	RES, CHIP 1.0K (1005)
R490	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R491	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R492	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R493	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R495	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R496	1-208-887-81	s	RES, CHIP 1.0K (1005)
R497	1-208-887-81	s	RES, CHIP 1.0K (1005)
R498	1-208-856-81	s	RES, CHIP 51 (1005)
R499	1-208-856-81	s	RES, CHIP 51 (1005)
R505	1-208-935-81	s	RES, CHIP 100K (1005)
R508	1-208-863-81	s	RES, CHIP 100 (1005)
R521	1-208-863-81	s	RES, CHIP 100 (1005)
R522	1-208-935-81	s	RES, CHIP 100K (1005)
R523	1-208-911-81	s	RES, CHIP 10K (1005)
R532	1-208-863-81	s	RES, CHIP 100 (1005)
R533	1-220-870-81	s	RES, CHIP 10 (1005)
R534	1-208-911-81	s	RES, CHIP 10K (1005)
R535	1-208-911-81	s	RES, CHIP 10K (1005)
R536	1-220-870-81	s	RES, CHIP 10 (1005)
R537	1-208-935-81	s	RES, CHIP 100K (1005)
R538	1-208-911-81	s	RES, CHIP 10K (1005)
R539	1-208-911-81	s	RES, CHIP 10K (1005)
R540	1-208-911-81	s	RES, CHIP 10K (1005)
R565	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R566	1-218-990-81	s	CONDUCTOR, CHIP (1005)
R970	1-208-863-81	s	RES, CHIP 100 (1005)

(SDP-12 BOARD suffix 12)

Ref. No. or Q'ty	Part No.	SP	Description
R973	1-220-870-81	s	RES, CHIP 10 (1005)
R975	1-220-870-81	s	RES, CHIP 10 (1005)
R976	1-208-855-81	s	RES, CHIP 47 (1005)
R978	1-208-855-81	s	RES, CHIP 47 (1005)
R979	1-208-855-81	s	RES, CHIP 47 (1005)
R980	1-208-911-81	s	RES, CHIP 10K (1005)
R981	1-208-863-81	s	RES, CHIP 100 (1005)
RB201	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB202	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB203	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB204	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB205	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB206	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB207	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB213	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB214	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB215	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB216	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB217	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB224	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB225	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB401	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB402	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB403	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB404	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB405	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB406	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB407	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB408	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB409	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB410	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB411	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB412	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB413	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB414	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB415	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB416	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB417	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB418	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB424	1-234-381-21	s	RES, NETWORK 100K (1005X4)
RB425	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB426	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB427	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB428	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB429	1-234-372-21	s	RES, NETWORK 100 (1005X4)
RB905	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB906	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB907	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB908	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB909	1-234-371-21	s	RES, NETWORK 47 (1005X4)
RB910	1-234-371-21	s	RES, NETWORK 47 (1005X4)
S401	1-692-271-41	s	SWITCH, SLIDE
S402	1-771-721-21	s	SWITCH, TACTILE
TP201	1-535-877-22	s	CHIP, CHECKER
TP401	1-535-877-22	s	CHIP, CHECKER
X201	1-795-872-11	s	OSCILLATOR
X401	1-795-872-11	s	OSCILLATOR

SDP-12 BOARD (suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1129-303-A	s	MOUNTED CIRCUIT BOARD, SDP-12
C1	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C4	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C6	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C9	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C11	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C13	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C16	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C17	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C20	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C22	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C23	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C24	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C25	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C26	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C27	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C29	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C30	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C31	1-128-416-11	s	CAPACITOR ELECT 100MF/16V(105C
C32	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C33	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C34	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C35	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C36	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C37	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C38	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C39	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C40	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C41	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C42	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C43	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C44	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C45	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C46	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C47	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C48	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C49	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C50	1-107-819-11	s	CAP,CERAMIC 22000PF/16V(1005)
C51	1-164-936-11	s	CAPACITOR,CHIP CERAMIC 680PF
C52	1-100-620-91	s	CAPACITOR, CHIP 47MF(3225)
C53	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C54	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C55	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C56	1-165-872-21	s	CAPACITOR,SOLID ELECT 47MF
C57	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C101	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C102	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C103	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C104	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C105	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C106	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C107	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C108	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C109	1-125-891-11	s	CAPACITOR CERAMIC 0.47MF/10V
C110	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C111	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C112	1-125-891-11	s	CAPACITOR CERAMIC 0.47MF/10V
C113	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C114	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C115	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C116	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C117	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C118	1-164-850-11	s	CAPACITOR,CHIP CERAMIC 10PF/50
C119	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C120	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C121	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C122	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C123	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C210	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C218	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C221	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C222	1-216-864-11	s	CONDUCTOR, CHIP (1608)
C223	1-216-864-11	s	CONDUCTOR, CHIP (1608)
C225	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C226	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C227	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C228	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C229	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C230	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C231	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C232	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C233	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C234	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C235	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C236	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C237	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C238	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C239	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C246	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C248	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C249	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C250	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C251	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C252	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C253	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C254	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C255	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C256	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C257	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C258	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C259	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C260	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C261	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C262	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C263	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C264	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C265	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C266	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C267	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C268	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C269	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C270	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C271	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C274	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C276	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C277	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C279	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
C404	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C405	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C406	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C407	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C408	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C409	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C410	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C412	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C413	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C415	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C416	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C417	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C418	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C420	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C421	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C422	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C423	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C424	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C425	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C426	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C427	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C428	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C429	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C430	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C431	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C432	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C433	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C434	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C435	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C436	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C437	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C438	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C439	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C440	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C441	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C442	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C445	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C446	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C447	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C448	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C449	1-164-939-11	s	CAPACITOR,CHIP CERAMIC 2200PF
C450	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C451	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C452	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C453	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C454	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C455	1-100-567-81	s	CAP,CHIP CERAMIC 0.01MF B 1005
C456	1-100-507-91	s	CAPACITOR,CERAMIC4.7MF C(1608)
C457	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C458	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C459	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C460	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C461	1-216-864-11	s	CONDUCTOR, CHIP (1608)
C462	1-216-864-11	s	CONDUCTOR, CHIP (1608)
C475	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C479	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C482	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C483	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C484	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
CN103	1-695-480-21	o	PIN, CONNECTOR (PC BOARD) 2P
CN104	1-770-470-21	o	PIN, CONNECTOR (PC BOARD) 6P
CN105	1-815-921-11	s	JACK, MODULAR
CN402	1-764-080-21	o	PIN, CONNECTOR (PC BOARD) 8P
CP201	1-417-612-11	s	CONVERSION MODULE,O/E,OE-301
CP401	1-417-611-11	s	CONVERSION MODULE,E/O,EO-300
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D5	8-719-024-81	s	DIODE 1SS300-TE85L
D101	8-719-024-81	s	DIODE 1SS300-TE85L
D102	8-719-024-81	s	DIODE 1SS300-TE85L
D103	8-719-024-81	s	DIODE 1SS300-TE85L
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E2	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FB1	1-469-094-21	s	FERRITE, EMI (SMD)
FB2	1-469-094-21	s	FERRITE, EMI (SMD)
FB3	1-469-094-21	s	FERRITE, EMI (SMD)
FB4	1-469-094-21	s	FERRITE, EMI (SMD)
FB5	1-469-094-21	s	FERRITE, EMI (SMD)
FB6	1-469-094-21	s	FERRITE, EMI (SMD)
FB101	1-414-554-21	s	FERRITE, EMI(SMD)
FB203	1-414-554-21	s	FERRITE, EMI(SMD)
FB204	1-414-554-21	s	FERRITE, EMI(SMD)
FB205	1-414-554-21	s	FERRITE, EMI(SMD)
FB206	1-414-554-21	s	FERRITE, EMI(SMD)
FB207	1-414-554-21	s	FERRITE, EMI(SMD)
FB208	1-414-554-21	s	FERRITE, EMI(SMD)
FB209	1-414-554-21	s	FERRITE, EMI(SMD)
FB210	1-414-554-21	s	FERRITE, EMI(SMD)
FB211	1-414-554-21	s	FERRITE, EMI(SMD)
FB401	1-414-554-21	s	FERRITE, EMI(SMD)
FB402	1-414-554-21	s	FERRITE, EMI(SMD)
FB403	1-414-554-21	s	FERRITE, EMI(SMD)
FB404	1-414-554-21	s	FERRITE, EMI(SMD)
FB405	1-414-554-21	s	FERRITE, EMI(SMD)
FB406	1-414-554-21	s	FERRITE, EMI(SMD)
FB407	1-414-554-21	s	FERRITE, EMI(SMD)
FB408	1-414-554-21	s	FERRITE, EMI(SMD)
FB409	1-414-554-21	s	FERRITE, EMI(SMD)
FB410	1-414-554-21	s	FERRITE, EMI(SMD)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	8-759-327-01	s	IC NJM062V-TE2
IC3	6-704-976-01	s	IC ADR381ART-REEL7
IC4	8-759-327-01	s	IC NJM062V-TE2
IC5	6-706-482-01	s	IC TC7SH00FU(T5RSOYJF)
IC6	6-701-572-01	s	IC TPS54610PWPR
IC7	6-701-572-01	s	IC TPS54610PWPR
IC9	8-759-338-95	s	IC NJM2903V (TE2)
IC10	8-759-338-95	s	IC NJM2903V (TE2)
IC101	8-759-338-95	s	IC NJM2903V (TE2)
IC102	8-759-338-95	s	IC NJM2903V (TE2)
IC103	8-759-471-85	s	IC 74VHC00MTCX
IC104	8-759-327-01	s	IC NJM062V-TE2
IC105	8-759-327-01	s	IC NJM062V-TE2
IC106	8-759-346-27	s	IC LM45BIM3X
IC107	8-759-833-99	s	IC MC74HC4052ADTR2

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
IC202	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC204	6-703-692-01	s	IC GS1561S-CFE3
IC205	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC207	8-759-472-43	s	IC 74VHC245MTCX
IC209	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC210	6-700-804-01	s	IC SN74LVC574APWR
IC211	6-700-804-01	s	IC SN74LVC574APWR
IC212	6-700-804-01	s	IC SN74LVC574APWR
IC213	8-759-592-42	s	IC TC7SZ00FU(TE85R)
IC401	6-700-804-01	s	IC SN74LVC574APWR
IC402	6-700-804-01	s	IC SN74LVC574APWR
IC403	6-700-804-01	s	IC SN74LVC574APWR
IC404	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC405	8-759-472-43	s	IC 74VHC245MTCX
IC407	8-759-363-26	s	IC RN5VD28AA-TL
IC408	8-759-471-96	s	IC 74VHC08MTCX
IC410	6-703-693-01	s	IC GS1532-CFE3
IC413	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC414	6-706-487-01	s	IC TC7SH08FU(T5RSOYJF)
IC415	8-759-540-36	s	IC SN74LVC157APWR
IC416	9-910-999-34	s	DELETED FROM RP MASTER
IC421	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC422	8-759-592-44	s	IC TC7SZ04FU(TE85R)
IC423	8-759-592-44	s	IC TC7SZ04FU(TE85R)
JC1	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC2	1-216-864-11	s	CONDUCTOR, CHIP (1608)
JC101	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
JC102	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
L1	1-416-948-21	s	COIL, CHOKE (SMD)
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L3	1-414-398-11	s	INDUCTOR (SMD) 10UH
L4	1-414-398-11	s	INDUCTOR (SMD) 10UH
L5	1-416-344-11	s	COIL, CHOKE 10UH
L6	1-416-344-11	s	COIL, CHOKE 10UH
L7	1-416-344-11	s	COIL, CHOKE 10UH
L202	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L203	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L204	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L205	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L401	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L402	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
L403	1-414-392-31	s	INDUCTOR (SMD) 1.0UH
Q1	8-729-032-74	s	TRANSISTOR 2SA1615-Z-K
Q2	8-729-927-99	s	TRANSISTOR 2SC4617R
Q3	8-729-032-74	s	TRANSISTOR 2SA1615-Z-K
Q4	8-729-927-99	s	TRANSISTOR 2SC4617R
Q5	8-729-928-19	s	TRANSISTOR 2SA1774R
Q6	8-729-927-99	s	TRANSISTOR 2SC4617R
Q7	8-729-928-19	s	TRANSISTOR 2SA1774R
Q8	8-729-927-99	s	TRANSISTOR 2SC4617R
Q9	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-928-19	s	TRANSISTOR 2SA1774R
Q102	8-729-928-19	s	TRANSISTOR 2SA1774R
Q103	8-729-927-99	s	TRANSISTOR 2SC4617R
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-928-19	s	TRANSISTOR 2SA1774R
Q106	8-729-928-19	s	TRANSISTOR 2SA1774R
Q205	8-729-928-27	s	TRANSISTOR DTA144EE

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
Q206	8-729-928-81	s	TRANSISTOR DTC144EE
Q207	8-729-041-23	s	TRANSISTOR NDS356AP
Q407	8-729-928-27	s	TRANSISTOR DTA144EE
Q408	8-729-928-81	s	TRANSISTOR DTC144EE
Q409	8-729-041-23	s	TRANSISTOR NDS356AP
R1	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R2	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R3	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R4	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R5	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R6	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R7	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R8	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R9	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R10	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R11	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R12	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R13	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R14	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R15	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R16	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R17	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R18	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R19	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R20	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R21	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R22	1-208-939-11	s	RESISTOR, CHIP 150K (1005)
R23	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R24	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R25	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R26	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R27	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R28	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R29	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R30	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R31	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R32	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R33	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R34	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R35	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R36	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R37	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R38	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R39	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R40	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R41	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R42	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R43	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R44	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R45	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R46	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R47	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R48	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R49	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R51	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R52	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R53	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R54	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R55	1-208-911-11	s	RESISTOR, CHIP 10K (1005)

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R56	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R57	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R58	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R59	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R60	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R61	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R62	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R63	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R64	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R65	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R66	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R67	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R68	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R69	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R70	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R71	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R72	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R73	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R74	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R101	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R102	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R103	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R104	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R105	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R106	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R107	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R108	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R109	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R110	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R111	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R112	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R113	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R114	1-208-687-11	s	RESISTOR CHIP 1.5K 1/16W (1005
R115	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R116	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R117	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R118	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R119	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R120	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R121	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R122	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R123	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R124	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R125	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R126	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R127	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R128	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R129	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R130	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R131	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R132	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R133	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R134	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R135	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R136	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R139	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R140	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R141	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R142	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R143	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R144	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R145	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R146	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R147	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R148	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R149	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R150	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R151	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R152	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R153	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R154	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R155	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R156	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R157	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R158	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R159	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R161	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R212	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R213	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R217	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R238	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R241	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R242	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R243	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R244	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R245	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R246	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R248	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R249	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R251	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R252	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R253	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R254	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R255	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R256	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R257	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R259	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R262	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R264	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R265	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R268	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R269	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R271	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R272	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R277	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R278	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R280	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R281	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R282	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R283	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R284	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R285	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R286	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R287	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R289	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R290	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R291	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R292	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R293	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R297	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R298	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R300	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R301	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R302	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R303	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R304	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R305	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R306	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R401	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R403	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R404	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R405	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R406	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R407	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R408	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R409	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R410	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R412	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R413	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R414	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R416	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R417	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R418	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R421	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R422	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R423	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R424	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R425	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R426	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R427	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R428	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R429	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R433	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R435	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R436	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R437	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R438	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R439	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R440	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R441	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R442	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R444	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R445	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R446	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R447	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R448	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R449	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R450	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R451	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R452	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R453	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R454	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R455	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R456	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R457	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R458	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R459	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
R460	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R461	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R462	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R463	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R464	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R465	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R466	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R467	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R468	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R469	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R470	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R471	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R472	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R474	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R478	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R480	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R482	1-208-855-81	s	RESISTOR,CHIP 47 1/16W (1005)
R483	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R485	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R486	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R487	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R488	1-218-939-11	s	RESISTOR, CHIP 68 1/16W (1005)
R489	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R490	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R491	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R492	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R493	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R495	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R496	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R497	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R498	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R499	1-208-652-11	s	RESISTOR CHIP 51 1/16W (1005)
R505	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R508	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R521	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R522	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R523	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R532	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R533	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R534	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R535	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R536	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R537	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R538	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R539	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R540	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R565	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R566	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
RB201	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB202	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB203	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB204	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB205	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB206	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB207	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB213	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB214	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB215	1-234-371-11	s	RES, NETWORK 47X4 (1005)

(SDP-12 BOARD suffix 11)

Ref. No. or Q'ty	Part No.	SP	Description
RB216	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB217	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB224	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB225	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB401	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB402	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB403	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB404	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB405	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB406	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB407	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB408	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB409	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB410	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB411	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB412	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB413	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB414	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB415	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB416	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB417	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB418	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB424	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB425	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB426	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB427	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB428	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB429	1-234-372-11	s	RES, NETWORK 100X4 (1005)
S401	1-692-271-31	s	SWITCH, SLIDE
S402	1-771-721-11	s	SWITCH, TACTILE
TP201	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
TP401	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
X201	1-795-872-11	s	OSCILLATOR
X401	1-795-872-11	s	OSCILLATOR

VDA-64A BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1132-791-A	s	MOUNTED CIRCUIT BOARD, VDA-64A
8pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C4	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C7	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C9	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C10	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C11	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C12	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C13	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C14	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C101	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C102	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C103	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C104	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C105	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C106	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C107	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C108	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C201	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C202	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C203	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C204	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C205	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C206	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C207	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C208	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C211	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
CN1	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN2	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN3	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN4	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D201	8-719-801-78	s	DIODE 1SS184
E101	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E102	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FL101	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
FL201	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
FL202	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
IC1	6-704-976-01	s	IC ADR381ART-REEL7
IC2	8-759-327-01	s	IC NJM062V-TE2
IC3	8-759-338-95	s	IC NJM2903V (TE2)
IC101	8-759-561-46	s	IC AD8014ART-REEL7
IC102	8-759-561-46	s	IC AD8014ART-REEL7
IC201	8-759-561-46	s	IC AD8014ART-REEL7
IC202	8-759-561-46	s	IC AD8014ART-REEL7
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-414-398-11	s	INDUCTOR (SMD) 10UH
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L201	1-414-398-11	s	INDUCTOR (SMD) 10UH

(VDA-64A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L202	1-414-398-11	s	INDUCTOR (SMD) 10UH
L203	1-414-398-11	s	INDUCTOR (SMD) 10UH
L204	1-414-398-11	s	INDUCTOR (SMD) 10UH
L205	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
Q201	8-729-927-99	s	TRANSISTOR 2SC4617R
Q202	8-729-928-19	s	TRANSISTOR 2SA1774R
Q203	8-729-927-99	s	TRANSISTOR 2SC4617R
R2	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R3	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R12	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R13	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R14	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R15	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R16	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R17	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R18	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R19	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R20	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R21	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R22	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R23	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R24	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R25	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R26	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R27	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R28	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R102	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R107	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R109	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R111	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R114	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R117	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R118	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R119	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R120	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R121	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R122	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R123	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R126	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R127	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R134	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R135	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R142	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R143	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R202	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R204	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R205	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R207	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R208	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R209	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R210	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R212	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R214	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R215	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R216	1-216-864-11	s	CONDUCTOR, CHIP (1608)

(VDA-64A BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R217	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R218	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R219	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R220	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R221	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R222	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R225	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R226	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R227	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R228	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R229	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R230	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R231	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R232	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
R235	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R236	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R237	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
RY201	1-755-380-21	s	RELAY

VDA-64B BOARD
---

*1: Board No. suffix 11
*2: Board No. suffix 12

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1132-792-A	s	MOUNTED CIRCUIT BOARD, VDA-64B
8pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C4	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C7	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C9	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C10	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C11	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C12	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C13	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C14	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C103	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C104	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C107	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C108	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C111	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C112	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C116	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C117	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C118	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C201	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C202	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C203	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C204	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C205	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C206	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C207	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C208	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C211	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
CN1	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN2	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN3	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN4	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D101	8-719-801-78	s	DIODE 1SS184
D201	8-719-801-78	s	DIODE 1SS184
E101	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E102	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FL102	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
FL201	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
FL202	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
IC1	6-704-976-01	s	IC ADR381ART-REEL7
IC2	8-759-327-01	s	IC NJM062V-TE2
IC3	8-759-338-95	s	IC NJM2903V (TE2)
IC102	8-759-561-46	s	IC AD8014ART-REEL7
IC103	8-759-561-46	s	IC AD8014ART-REEL7
IC201	8-759-561-46	s	IC AD8014ART-REEL7
IC202	8-759-561-46	s	IC AD8014ART-REEL7
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH

(VDA-64B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
L107	1-414-398-11	s	INDUCTOR (SMD) 10UH
L201	1-414-398-11	s	INDUCTOR (SMD) 10UH
L202	1-414-398-11	s	INDUCTOR (SMD) 10UH
L203	1-414-398-11	s	INDUCTOR (SMD) 10UH
L204	1-414-398-11	s	INDUCTOR (SMD) 10UH
L205	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-927-99	s	TRANSISTOR 2SC4617R
Q102	8-729-928-19	s	TRANSISTOR 2SA1774R
Q103	8-729-927-99	s	TRANSISTOR 2SC4617R
Q201	8-729-927-99	s	TRANSISTOR 2SC4617R
Q202	8-729-928-19	s	TRANSISTOR 2SA1774R
Q203	8-729-927-99	s	TRANSISTOR 2SC4617R
R2	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R12	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R13	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R14	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R15	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R16	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R17	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R18	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R19	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R20	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R21	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R22	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R23	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R24	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R25	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R26	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R27	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R28	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R104	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R105	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R108	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R110	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R113	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R116	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R118	1-211-985-11	s	RESISTOR,CHIP 47 1/10W (1608)
R120	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R123	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R127	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R129	1-218-835-11	s	RESISTOR,CHIP 330 1/10W (1608)
R130	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R133	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R135	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R136 *1	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
*2	1-218-871-91	s	RES,CHIP 10K (1608)
R137	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R138	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R139	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R140	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R141	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
R144	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R145	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)

(VDA-64B BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R146	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
R202	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R204	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R205	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R207	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R208	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R209	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R210	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R212	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R214	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R215	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R216	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R217	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R218	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R219	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R220	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R221	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R222	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R225	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R226	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R227	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R228	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R229	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R230	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R231	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R232	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
R235	1-218-859-11	s	RESISTOR,CHIP 3.3K 1/10W(1608)
R236	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R237	1-211-977-11	s	RESISTOR,CHIP 22 1/10W (1608)
R238	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
RY101	1-755-380-21	s	RELAY
RY201	1-755-380-21	s	RELAY

VDA-64C BOARD
---

*1: Board No. suffix 12

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1132-793-A	s	MOUNTED CIRCUIT BOARD, VDA-64C
8pcs	3-364-941-01	s	SCREW (+B) (2.6X5),NYLOK
C1	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C2	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C3	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C4	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C7	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C9	1-126-394-11	s	CAPACITOR,ELECT 10MF/16V(CHIP)
C10	1-100-352-91	s	CAP, CHIP CERAMIC 1MF B (1608)
C11	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C12	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C13	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C14	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C101	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C102	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C103	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C104	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C105	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C106	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C107	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C108	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C201	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C202	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C203	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C204	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C205	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C206	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C207	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C208	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
CN1	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN2	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN3	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
CN4	1-793-324-11	o	CONNECTOR, COAXIAL (BNC TYPE)
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
E101	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
E102	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
FL101	1-813-437-11	s	FILTER, LOW PASS (10MHZ)
IC1	6-704-976-01	s	IC ADR381ART-REEL7
IC2	8-759-327-01	s	IC NJM062V-TE2
IC3	8-759-338-95	s	IC NJM2903V (TE2)
IC101	8-759-561-46	s	IC AD8014ART-REEL7
IC102	8-759-561-46	s	IC AD8014ART-REEL7
IC201	8-759-561-46	s	IC AD8014ART-REEL7
IC202	8-759-561-46	s	IC AD8014ART-REEL7
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-414-398-11	s	INDUCTOR (SMD) 10UH
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L201	1-414-398-11	s	INDUCTOR (SMD) 10UH
L202	1-414-398-11	s	INDUCTOR (SMD) 10UH
L203	1-414-398-11	s	INDUCTOR (SMD) 10UH

(VDA-64C BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L204	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
R5	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R6	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R7	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R8	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R9	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R10	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R12	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R13	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R14	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R15	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R16	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R17	1-218-875-11	s	RESISTOR,CHIP 15K 1/10W (1608)
R18	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R19	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R20	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R21	1-218-887-11	s	RESISTOR,CHIP 47K 1/10W (1608)
R22	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R23	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R24	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R25	1-218-855-11	s	RESISTOR,CHIP 2.2K 1/10W(1608)
R26	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R27	1-218-879-11	s	RESISTOR,CHIP 22K 1/10W (1608)
R28	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R101	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R103	1-211-973-11	s	RESISTOR,CHIP 15 1/10W (1608)
R107	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R109	1-218-831-11	s	RESISTOR, CHIP 220 1/10W(1608)
R111	1-218-839-11	s	RESISTOR,CHIP 470 1/10W (1608)
R112	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R115	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R117	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R118	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R119	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R120	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R121	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R122	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R123	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R126	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R127	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R134	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R135	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R142	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R143	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R201	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R203	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R211	1-211-973-11	s	RESISTOR,CHIP 15 1/10W (1608)
R212	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R213	1-211-973-11	s	RESISTOR,CHIP 15 1/10W (1608)
R214	1-211-989-11	s	RESISTOR,CHIP 68 1/10W (1608)
R215	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R216	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R217	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R218	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R219	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R220	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)

(VDA-64C BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R221	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R222	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R225	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R226	1-218-843-11	s	RESISTOR,CHIP 680 1/10W (1608)
R227	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R228	1-211-990-11	s	RESISTOR,CHIP 75 1/10W (1608)
R233	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R234	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R239	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R240	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R241 *1	1-216-864-91	s	CONDUCTOR, CHIP (1608)
RV101	1-225-788-21	s	RES, ADJ, CERMET 1K

VIF-34B/34BG BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-077-A	s	MOUNTED CIRCUIT BOARD, VIF-34BG (GOLD)
1pc	A-1151-870-A	s	MOUNTED CIRCUIT BOARD, VIF-34B (SILVER)
C1	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C2	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C3	1-128-589-11	s	CAPACITOR,ELECT 47MF/6.3V(105C)
C4	1-128-589-11	s	CAPACITOR,ELECT 47MF/6.3V(105C)
C5	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C6	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C7	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C8	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C9	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C10	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C11	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C12	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C13	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C14	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C15	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C16	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C17	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C18	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C19	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C20	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C21	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)
C22	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)
C23	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C24	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C25	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C26	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C27	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C28	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C29	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C31	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C32	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C33	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C34	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C35	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C36	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C101	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C102	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C103	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C104	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C107	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C108	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C109	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C110	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C111	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C112	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C113	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C114	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C115	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C116	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C117	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C120	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C121	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C122	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005

(VIF-34B/34BG BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
CN3	1-778-451-31	s	CONNECTOR, FFC/FPC(ZIF) AN 50P (GOLD)
	1-778-451-21	o	CONNECTOR, FPC (50P) (SILVER)
CN4	1-770-161-21	s	PIN, CONNECTOR (SMT) 6P
CN5	1-778-451-31	s	CONNECTOR, FFC/FPC(ZIF) AN 50P (GOLD)
	1-778-451-21	o	CONNECTOR, FPC (50P) (SILVER)
CN101	1-695-480-21	o	PIN, CONNECTOR (PC BOARD) 2P
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D3	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D4	8-719-046-87	s	DIODE F1J6
D31	8-719-421-27	s	DIODE MA728
D32	8-719-421-27	s	DIODE MA728
D33	8-719-024-81	s	DIODE 1SS300-TE85L
D34	8-719-024-81	s	DIODE 1SS300-TE85L
D35	8-719-024-81	s	DIODE 1SS300-TE85L
D36	8-719-024-81	s	DIODE 1SS300-TE85L
D37	8-719-421-27	s	DIODE MA728
D38	8-719-421-27	s	DIODE MA728
D39	8-719-421-27	s	DIODE MA728
D40	8-719-421-27	s	DIODE MA728
D41	8-719-421-27	s	DIODE MA728
D42	8-719-421-27	s	DIODE MA728
D43	8-719-024-81	s	DIODE 1SS300-TE85L
D44	8-719-024-81	s	DIODE 1SS300-TE85L
D45	8-719-024-81	s	DIODE 1SS300-TE85L
D46	8-719-024-81	s	DIODE 1SS300-TE85L
D47	8-719-024-81	s	DIODE 1SS300-TE85L
D48	8-719-024-81	s	DIODE 1SS300-TE85L
D49	8-719-024-81	s	DIODE 1SS300-TE85L
D50	8-719-024-81	s	DIODE 1SS300-TE85L
D51	8-719-024-81	s	DIODE 1SS300-TE85L
D52	8-719-024-81	s	DIODE 1SS300-TE85L
D53	8-719-024-81	s	DIODE 1SS300-TE85L
D54	8-719-024-81	s	DIODE 1SS300-TE85L
D55	8-719-421-27	s	DIODE MA728
D56	8-719-421-27	s	DIODE MA728
D57	8-719-421-27	s	DIODE MA728
D58	8-719-421-27	s	DIODE MA728
D59	8-719-421-27	s	DIODE MA728
D60	8-719-421-27	s	DIODE MA728
D61	8-719-421-27	s	DIODE MA728
D62	8-719-421-27	s	DIODE MA728
D63	8-719-421-27	s	DIODE MA728
D64	8-719-421-27	s	DIODE MA728
D65	8-719-421-27	s	DIODE MA728
D66	8-719-421-27	s	DIODE MA728
D67	8-719-421-27	s	DIODE MA728
D68	8-719-421-27	s	DIODE MA728
D69	8-719-421-27	s	DIODE MA728
D70	8-719-421-27	s	DIODE MA728
D71	8-719-421-27	s	DIODE MA728
D72	8-719-421-27	s	DIODE MA728
D73	8-719-421-27	s	DIODE MA728
D74	8-719-421-27	s	DIODE MA728
D75	8-719-024-81	s	DIODE 1SS300-TE85L
D76	8-719-024-81	s	DIODE 1SS300-TE85L
D77	8-719-024-81	s	DIODE 1SS300-TE85L

(VIF-34B/34BG BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
D78	8-719-024-81	s	DIODE 1SS300-TE85L
D79	8-719-421-27	s	DIODE MA728
D80	8-719-421-27	s	DIODE MA728
D81	8-719-421-27	s	DIODE MA728
D82	8-719-421-27	s	DIODE MA728
D83	8-719-421-27	s	DIODE MA728
D84	8-719-421-27	s	DIODE MA728
D85	8-719-421-27	s	DIODE MA728
D86	8-719-421-27	s	DIODE MA728
D101	8-719-024-81	s	DIODE 1SS300-TE85L
D102	8-719-421-27	s	DIODE MA728
D103	8-719-421-27	s	DIODE MA728
D104	8-719-421-27	s	DIODE MA728
D105	8-719-421-27	s	DIODE MA728
D106	8-719-024-81	s	DIODE 1SS300-TE85L
D107	8-719-024-81	s	DIODE 1SS300-TE85L
D108	8-719-421-27	s	DIODE MA728
D109	8-719-421-27	s	DIODE MA728
D110	8-719-421-27	s	DIODE MA728
D111	8-719-421-27	s	DIODE MA728
D112	8-719-024-81	s	DIODE 1SS300-TE85L
D113	8-719-024-81	s	DIODE 1SS300-TE85L
D114	8-719-421-27	s	DIODE MA728
D115	8-719-421-27	s	DIODE MA728
D116	8-719-421-27	s	DIODE MA728
D117	8-719-421-27	s	DIODE MA728
D118	8-719-024-81	s	DIODE 1SS300-TE85L
D119	8-719-024-81	s	DIODE 1SS300-TE85L
D120	8-719-421-27	s	DIODE MA728
D121	8-719-421-27	s	DIODE MA728
D122	8-719-421-27	s	DIODE MA728
D123	8-719-421-27	s	DIODE MA728
D124	8-719-421-27	s	DIODE MA728
D125	8-719-421-27	s	DIODE MA728
D126	8-719-421-27	s	DIODE MA728
D127	8-719-421-27	s	DIODE MA728
D128	8-719-024-81	s	DIODE 1SS300-TE85L
D129	8-719-024-81	s	DIODE 1SS300-TE85L
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC3	8-759-561-46	s	IC AD8014ART-REEL7
IC4	8-759-327-01	s	IC NJM062V-TE2
IC31	8-759-472-18	s	IC 74VHC138MTCX
IC32	8-752-392-03	s	IC CXD1095BR
IC33	8-759-472-43	s	IC 74VHC245MTCX
IC34	8-759-662-39	s	IC 74VHCT245AMTCX
IC35	8-759-524-04	s	IC TC74VHC125FT (EL)
IC36	8-759-524-04	s	IC TC74VHC125FT (EL)
IC101	8-752-392-03	s	IC CXD1095BR
IC102	8-759-662-39	s	IC 74VHCT245AMTCX
IC103	8-759-564-49	s	IC TC7W53FU-TE12R
IC104	8-759-561-46	s	IC AD8014ART-REEL7
IC105	8-759-561-46	s	IC AD8014ART-REEL7
IC106	8-759-561-46	s	IC AD8014ART-REEL7
IC107	8-759-745-64	s	IC NJM4560M
IC108	8-759-678-06	s	IC CAT24WC02WI-TE13

(VIF-34B/34BG BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L3	1-414-398-11	s	INDUCTOR (SMD) 10UH
L4	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-414-398-11	s	INDUCTOR (SMD) 10UH
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
Q5	8-729-047-32	s	TRANSISTOR SI4425DY-T1
Q6	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q31	8-729-927-99	s	TRANSISTOR 2SC4617R
Q33	8-729-927-99	s	TRANSISTOR 2SC4617R
Q35	8-729-927-99	s	TRANSISTOR 2SC4617R
Q37	8-729-927-99	s	TRANSISTOR 2SC4617R
Q39	8-729-927-99	s	TRANSISTOR 2SC4617R
Q41	8-729-927-99	s	TRANSISTOR 2SC4617R
Q43	8-729-927-99	s	TRANSISTOR 2SC4617R
Q45	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-927-99	s	TRANSISTOR 2SC4617R
Q102	8-729-927-99	s	TRANSISTOR 2SC4617R
Q103	8-729-927-99	s	TRANSISTOR 2SC4617R
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-927-99	s	TRANSISTOR 2SC4617R
Q106	8-729-927-99	s	TRANSISTOR 2SC4617R
Q107	8-729-927-99	s	TRANSISTOR 2SC4617R
Q108	8-729-927-99	s	TRANSISTOR 2SC4617R
Q109	8-729-928-19	s	TRANSISTOR 2SA1774R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R3	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R4	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R5	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R6	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R7	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R8	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R9	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R10	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R11	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R12	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R14	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R15	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R16	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R19	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R22	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R23	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R24	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R25	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R26	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R27	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R31	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R32	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R33	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R34	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)

(VIF-34B/34BG BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R35	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R36	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R37	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R39	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R41	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R43	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R45	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R47	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R49	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R51	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R53	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R54	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R55	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R56	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R57	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R58	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R59	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R60	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R61	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R62	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R63	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R64	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R65	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R66	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R67	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R101	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R102	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R103	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R104	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R105	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R106	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R107	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R108	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R109	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R110	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R111	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R112	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R113	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R114	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R115	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R116	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R119	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R121	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R122	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)
R123	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R124	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R126	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R128	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R129	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R130	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R132	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R133	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R134	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R136	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R137	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R138	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R139	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R140	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R141	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)

(VIF-34B/34BG BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R142	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R143	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R144	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R145	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R146	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R147	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R148	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R149	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R150	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R151	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R152	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R153	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R154	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R155	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R156	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R157	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R158	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R159	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R160	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R161	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R162	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R163	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R164	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R165	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R166	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
RB31	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB32	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB33	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB34	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB35	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB36	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB37	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB38	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB39	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB40	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB41	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB42	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB43	1-233-810-21	s	RES, NETWORK 100K (3216)
RB44	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB45	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB46	1-233-810-21	s	RES, NETWORK 100K (3216)
RB47	1-233-810-21	s	RES, NETWORK 100K (3216)
RB48	1-233-810-21	s	RES, NETWORK 100K (3216)
RB49	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB50	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB51	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB52	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB53	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB54	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB55	1-234-380-11	s	RESISTOR,NETWORK 47KX4 (1005)
RB56	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB57	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB58	1-234-380-11	s	RESISTOR,NETWORK 47KX4 (1005)
RB62	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB63	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB101	1-233-810-21	s	RES, NETWORK 100K (3216)
RB102	1-233-810-21	s	RES, NETWORK 100K (3216)
RB103	1-233-810-21	s	RES, NETWORK 100K (3216)
RB104	1-234-378-11	s	RES, NETWORK 10KX4 (1005)

(VIF-34B/34BG BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
RB105	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB106	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB107	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB108	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
THP1	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE
THP2	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE
THP3	⚠ 1-803-615-11	s	THERMISTOR, POSITIVE
THP4	⚠ 1-803-615-11	s	THERMISTOR, POSITIVE
THP5	⚠ 1-803-615-11	s	THERMISTOR, POSITIVE
THP6	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE

VIF-34/34G BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1161-076-A	s	MOUNTED CIRCUIT BOARD, VIF-34G (GOLD)
1pc	A-1129-229-A	s	MOUNTED CIRCUIT BOARD, VIF-34 (SILVER)
C1	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C2	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C3	1-128-589-11	s	CAPACITOR,ELECT 47MF/6.3V(105C)
C4	1-128-589-11	s	CAPACITOR,ELECT 47MF/6.3V(105C)
C5	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C6	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C7	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C8	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C9	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C10	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C11	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C12	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C13	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C14	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C15	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C16	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C17	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C18	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C19	1-115-340-11	s	CAPACITOR CERAMIC 0.22MF/25V B
C20	1-128-589-11	s	CAPACITOR ELECT 47MF/6.3V(105C
C21	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)
C22	1-126-399-11	s	CAPACITOR ELECT 10MF/35V(CHIP)
C23	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C24	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C25	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C26	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C27	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C28	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C29	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C31	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C32	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C33	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C34	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C35	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C36	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C101	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C102	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005
C103	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C104	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C105	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C106	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C107	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C108	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C109	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C110	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C111	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C112	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C113	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C114	1-100-055-21	s	CAP, CHIP CERAMIC 22MF B 3225
C115	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C116	1-100-506-91	s	CAPACITOR, CERAMIC 1MF B 1005
C117	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C120	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C121	1-127-573-11	s	CAPACITOR,CERAMIC 1MFB(2012)
C122	1-100-505-11	s	CAPACITOR,CERAMIC 0.1MF B 1005

(VIF-34/34G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
CN3	1-778-451-31	s	CONNECTOR, FFC/FPC(ZIF) AN 50P (GOLD)
	1-778-451-21	o	CONNECTOR, FPC (50P) (SILVER)
CN4	1-770-161-21	s	PIN, CONNECTOR (SMT) 6P
CN5	1-778-451-31	s	CONNECTOR, FFC/FPC(ZIF) AN 50P (GOLD)
	1-778-451-21	o	CONNECTOR, FPC (50P) (SILVER)
CN101	1-695-480-21	o	PIN, CONNECTOR (PC BOARD) 2P
D1	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D2	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D3	8-719-017-03	s	DIODE 02DZ4.7-TPH3
D4	8-719-046-87	s	DIODE F1J6
D31	8-719-421-27	s	DIODE MA728
D32	8-719-421-27	s	DIODE MA728
D33	8-719-024-81	s	DIODE 1SS300-TE85L
D34	8-719-024-81	s	DIODE 1SS300-TE85L
D35	8-719-024-81	s	DIODE 1SS300-TE85L
D36	8-719-024-81	s	DIODE 1SS300-TE85L
D37	8-719-421-27	s	DIODE MA728
D38	8-719-421-27	s	DIODE MA728
D39	8-719-421-27	s	DIODE MA728
D40	8-719-421-27	s	DIODE MA728
D41	8-719-421-27	s	DIODE MA728
D42	8-719-421-27	s	DIODE MA728
D43	8-719-024-81	s	DIODE 1SS300-TE85L
D44	8-719-024-81	s	DIODE 1SS300-TE85L
D45	8-719-024-81	s	DIODE 1SS300-TE85L
D46	8-719-024-81	s	DIODE 1SS300-TE85L
D47	8-719-024-81	s	DIODE 1SS300-TE85L
D48	8-719-024-81	s	DIODE 1SS300-TE85L
D49	8-719-024-81	s	DIODE 1SS300-TE85L
D50	8-719-024-81	s	DIODE 1SS300-TE85L
D51	8-719-024-81	s	DIODE 1SS300-TE85L
D52	8-719-024-81	s	DIODE 1SS300-TE85L
D53	8-719-024-81	s	DIODE 1SS300-TE85L
D54	8-719-024-81	s	DIODE 1SS300-TE85L
D55	8-719-421-27	s	DIODE MA728
D56	8-719-421-27	s	DIODE MA728
D57	8-719-421-27	s	DIODE MA728
D58	8-719-421-27	s	DIODE MA728
D59	8-719-421-27	s	DIODE MA728
D60	8-719-421-27	s	DIODE MA728
D61	8-719-421-27	s	DIODE MA728
D62	8-719-421-27	s	DIODE MA728
D63	8-719-421-27	s	DIODE MA728
D64	8-719-421-27	s	DIODE MA728
D65	8-719-421-27	s	DIODE MA728
D66	8-719-421-27	s	DIODE MA728
D67	8-719-421-27	s	DIODE MA728
D68	8-719-421-27	s	DIODE MA728
D69	8-719-421-27	s	DIODE MA728
D70	8-719-421-27	s	DIODE MA728
D71	8-719-421-27	s	DIODE MA728
D72	8-719-421-27	s	DIODE MA728
D73	8-719-421-27	s	DIODE MA728
D74	8-719-421-27	s	DIODE MA728
D75	8-719-024-81	s	DIODE 1SS300-TE85L
D76	8-719-024-81	s	DIODE 1SS300-TE85L
D77	8-719-024-81	s	DIODE 1SS300-TE85L

(VIF-34/34G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
D78	8-719-024-81	s	DIODE 1SS300-TE85L
D79	8-719-421-27	s	DIODE MA728
D80	8-719-421-27	s	DIODE MA728
D81	8-719-421-27	s	DIODE MA728
D82	8-719-421-27	s	DIODE MA728
D83	8-719-421-27	s	DIODE MA728
D84	8-719-421-27	s	DIODE MA728
D85	8-719-421-27	s	DIODE MA728
D86	8-719-421-27	s	DIODE MA728
D101	8-719-024-81	s	DIODE 1SS300-TE85L
D102	8-719-421-27	s	DIODE MA728
D103	8-719-421-27	s	DIODE MA728
D104	8-719-421-27	s	DIODE MA728
D105	8-719-421-27	s	DIODE MA728
D106	8-719-024-81	s	DIODE 1SS300-TE85L
D107	8-719-024-81	s	DIODE 1SS300-TE85L
D108	8-719-421-27	s	DIODE MA728
D109	8-719-421-27	s	DIODE MA728
D110	8-719-421-27	s	DIODE MA728
D111	8-719-421-27	s	DIODE MA728
D112	8-719-024-81	s	DIODE 1SS300-TE85L
D113	8-719-024-81	s	DIODE 1SS300-TE85L
D114	8-719-421-27	s	DIODE MA728
D115	8-719-421-27	s	DIODE MA728
D116	8-719-421-27	s	DIODE MA728
D117	8-719-421-27	s	DIODE MA728
D118	8-719-024-81	s	DIODE 1SS300-TE85L
D119	8-719-024-81	s	DIODE 1SS300-TE85L
D120	8-719-421-27	s	DIODE MA728
D121	8-719-421-27	s	DIODE MA728
D122	8-719-421-27	s	DIODE MA728
D123	8-719-421-27	s	DIODE MA728
D124	8-719-421-27	s	DIODE MA728
D125	8-719-421-27	s	DIODE MA728
D126	8-719-421-27	s	DIODE MA728
D127	8-719-421-27	s	DIODE MA728
D128	8-719-024-81	s	DIODE 1SS300-TE85L
D129	8-719-024-81	s	DIODE 1SS300-TE85L
E1	1-535-877-22	s	CHIP,CHECKER (TEST POINT)
IC1	8-759-327-01	s	IC NJM062V-TE2
IC2	6-704-976-01	s	IC ADR381ART-REEL7
IC3	8-759-561-46	s	IC AD8014ART-REEL7
IC4	8-759-327-01	s	IC NJM062V-TE2
IC31	8-759-472-18	s	IC 74VHC138MTCX
IC32	8-752-392-03	s	IC CXD1095BR
IC33	8-759-472-43	s	IC 74VHC245MTCX
IC34	8-759-662-39	s	IC 74VHCT245AMTCX
IC35	8-759-524-04	s	IC TC74VHC125FT (EL)
IC36	8-759-524-04	s	IC TC74VHC125FT (EL)
IC101	8-752-392-03	s	IC CXD1095BR
IC102	8-759-662-39	s	IC 74VHCT245AMTCX
IC103	8-759-564-49	s	IC TC7W53FU-TE12R
IC104	8-759-561-46	s	IC AD8014ART-REEL7
IC105	8-759-561-46	s	IC AD8014ART-REEL7
IC106	8-759-561-46	s	IC AD8014ART-REEL7
IC107	8-759-745-64	s	IC NJM4560M
IC108	8-759-678-06	s	IC CAT24WC02WI-TE13

(VIF-34/34G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
L1	1-414-398-11	s	INDUCTOR (SMD) 10UH
L2	1-414-398-11	s	INDUCTOR (SMD) 10UH
L3	1-414-398-11	s	INDUCTOR (SMD) 10UH
L4	1-414-398-11	s	INDUCTOR (SMD) 10UH
L101	1-414-398-11	s	INDUCTOR (SMD) 10UH
L102	1-414-398-11	s	INDUCTOR (SMD) 10UH
L103	1-414-398-11	s	INDUCTOR (SMD) 10UH
L104	1-414-398-11	s	INDUCTOR (SMD) 10UH
L105	1-414-398-11	s	INDUCTOR (SMD) 10UH
L106	1-414-398-11	s	INDUCTOR (SMD) 10UH
Q1	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q2	8-729-807-51	s	TRANSISTOR 2SD1623-S
Q3	8-729-927-99	s	TRANSISTOR 2SC4617R
Q5	8-729-047-32	s	TRANSISTOR SI4425DY-T1
Q6	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q31	8-729-927-99	s	TRANSISTOR 2SC4617R
Q32	8-729-927-99	s	TRANSISTOR 2SC4617R
Q33	8-729-927-99	s	TRANSISTOR 2SC4617R
Q34	8-729-927-99	s	TRANSISTOR 2SC4617R
Q35	8-729-927-99	s	TRANSISTOR 2SC4617R
Q36	8-729-927-99	s	TRANSISTOR 2SC4617R
Q37	8-729-927-99	s	TRANSISTOR 2SC4617R
Q38	8-729-927-99	s	TRANSISTOR 2SC4617R
Q39	8-729-927-99	s	TRANSISTOR 2SC4617R
Q40	8-729-927-99	s	TRANSISTOR 2SC4617R
Q41	8-729-927-99	s	TRANSISTOR 2SC4617R
Q42	8-729-927-99	s	TRANSISTOR 2SC4617R
Q43	8-729-927-99	s	TRANSISTOR 2SC4617R
Q44	8-729-927-99	s	TRANSISTOR 2SC4617R
Q45	8-729-927-99	s	TRANSISTOR 2SC4617R
Q46	8-729-927-99	s	TRANSISTOR 2SC4617R
Q101	8-729-927-99	s	TRANSISTOR 2SC4617R
Q102	8-729-927-99	s	TRANSISTOR 2SC4617R
Q103	8-729-927-99	s	TRANSISTOR 2SC4617R
Q104	8-729-927-99	s	TRANSISTOR 2SC4617R
Q105	8-729-927-99	s	TRANSISTOR 2SC4617R
Q106	8-729-927-99	s	TRANSISTOR 2SC4617R
Q107	8-729-927-99	s	TRANSISTOR 2SC4617R
Q108	8-729-927-99	s	TRANSISTOR 2SC4617R
Q109	8-729-928-19	s	TRANSISTOR 2SA1774R
R1	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R2	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R3	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R4	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R5	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R6	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R7	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R8	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R9	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R10	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R11	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R12	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R14	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R15	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R16	1-208-931-11	s	RESISTOR, CHIP 68K (1005)
R19	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R22	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R23	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R24	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)

(VIF-34/34G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R25	1-208-715-11	s	RESISTOR,CHIP 22K 1/16W (1005)
R26	1-208-703-11	s	RESISTOR,CHIP 6.8K 1/16W(1005)
R27	1-208-923-11	s	RESISTOR, CHIP 33K (1005)
R31	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R32	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R33	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R34	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R35	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R36	1-208-935-11	s	RESISTOR, CHIP 100K (1005)
R37	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R38	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R39	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R40	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R41	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R42	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R43	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R44	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R45	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R46	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R47	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R48	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R49	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R50	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R51	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R52	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R53	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R54	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R55	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R56	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R57	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R58	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R59	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R60	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R61	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R62	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R63	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R64	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R65	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R66	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R67	1-208-675-11	s	RESISTOR CHIP 470 1/16W (1005)
R101	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R102	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R103	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R104	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R105	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R106	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R107	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R108	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R109	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R110	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R111	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R112	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R113	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R114	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R115	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R116	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R119	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R121	1-208-927-11	s	RESISTOR, CHIP 47K 1/16W(1005)
R122	1-208-691-11	s	RESISTOR CHIP 2.2K 1/16W(1005)

(VIF-34/34G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R123	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R124	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R126	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R128	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R129	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R130	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R132	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R133	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R134	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R136	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R137	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R138	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R139	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R140	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R141	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R142	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R143	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R144	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R145	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R146	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R147	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R148	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R149	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R150	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R151	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R152	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R153	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R154	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R155	1-218-941-11	s	RESISTOR,CHIP 100 1/16W (1005)
R156	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R157	1-208-911-11	s	RESISTOR, CHIP 10K (1005)
R158	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R159	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R160	1-208-663-11	s	RESISTOR CHIP 150 1/16W (1005)
R161	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R162	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R163	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R164	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R165	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R166	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
RB31	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB32	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB33	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB34	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB35	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB36	1-234-381-21	s	RES, NETWORK 100KX4 (1005)
RB37	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB38	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB39	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB40	1-234-372-11	s	RES, NETWORK 100X4 (1005)
RB41	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB42	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB43	1-233-810-21	s	RES, NETWORK 100K (3216)
RB44	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB45	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB46	1-233-810-21	s	RES, NETWORK 100K (3216)
RB47	1-233-810-21	s	RES, NETWORK 100K (3216)
RB48	1-233-810-21	s	RES, NETWORK 100K (3216)
RB49	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K

(VIF-34/34G BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
RB50	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB51	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB52	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB53	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB54	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB55	1-234-380-11	s	RESISTOR,NETWORK 47KX4 (1005)
RB56	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB57	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB58	1-234-380-11	s	RESISTOR,NETWORK 47KX4 (1005)
RB62	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB63	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB101	1-233-810-21	s	RES, NETWORK 100K (3216)
RB102	1-233-810-21	s	RES, NETWORK 100K (3216)
RB103	1-233-810-21	s	RES, NETWORK 100K (3216)
RB104	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB105	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB106	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
RB107	1-233-577-11	s	RESISTOR, CHIP NETWORK 470
RB108	1-233-578-11	s	RESISTOR,CHIP NETWORK 47K
THP1	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE
THP2	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE
THP3	⚠ 1-803-615-11	s	THERMISTOR, POSITIVE
THP4	⚠ 1-803-615-11	s	THERMISTOR, POSITIVE
THP5	⚠ 1-803-615-11	s	THERMISTOR, POSITIVE
THP6	⚠ 1-804-458-21	s	THERMISTOR, POSITIVE

4-4. Packing Materials & Supplied Accessories

```
------------------
HDCU1000/1080/1500
------------------
 Ref. No.
 or Q'ty  Part No.    SP Description

 1pc      A-8278-054-A s REMOTE INDICATOR ASSY
 1pc      1-576-231-51 s FUSE (H.B.C.) (for HDCU1000)
 1pc      1-576-233-51 s FUSE (H.B.C.) (for HDCU1000)
 1pc      3-903-898-01 s OPERATION MANUAL
                         (for HDCU1000/1500)
 1pc      3-992-287-01 s OPERATION MANUAL (for HDCU1080)
```

```
-------------
HKCU1001/1003
-------------
 Ref. No.
 or Q'ty  Part No.    SP Description

 1pc      1-560-155-00 s CONNECTOR (PLUG)
                                  (for HKCU1001/1003)
```

4-5. Optional Fixtures List

```
----------------
Optional Fixtures
----------------
Part No.    SP Description

A-1153-700-A s MOUNTED CIRCUIT BOARD, EX-982
A-1153-701-A s MOUNTED CIRCUIT BOARD, EX-983
A-1153-715-A s MOUNTED CIRCUIT BOARD, EX-984
J-6480-010-A o ALIGNMENT SLEEVE REMOVER
J-7120-140-A o PLD DOWNLOAD JIG
```

Section 5
Semiconductor Pin Assignments

The following describes the semiconductor types used in this unit.
For semiconductors marked with page numbers in the index, refer to the corresponding pages in this section. However, in some cases incompatible types are also listed, therefore, when a part is to be replaced, also refer to the Spare Parts section.
In addition, for semiconductors with ID Nos., refer to the separate CD-ROM titled “Semiconductor Pin Assignments” (Sony Part No. 9-968-546-xx) that allows searching for parts by semiconductor type or ID No.
The semiconductors in the manual or on the CD-ROM are listed by equivalent types. Thus the external view or the index mark indication may differ from the actual type.
Pin assignments and block diagrams are based on the IC manufacturer’s data book.

本機に使用されている半導体型名の一覧を下記に示します。
索引中，ページが記載されている半導体は，本章の該当ページを参照してください。ただし，互換性のない型名を併記している場合がありますので，部品を交換するときは，Spare Partsの章を参照してください。
また，ID番号が記載されている半導体は，別途発行の “Semiconductor Pin Assignments” CD−ROM版 (ソニー部品番号：9−968−546−xx)を参照してください。
半導体型名またはID番号から検索ができます。
マニュアルまたはCD−ROMに掲載されている半導体は，それぞれの機能を等価的に表わしたものです。
外観やインデックスマークの表示方法が実物と異なる場合があります。
ピン配置およびブロック図はICメーカーのデータブックに従いました。

DIODE — **Page or ID No.**

02DZ2.0-TPH3 ..... DC008-04
02DZ4.7-TPH3 ..... DC008-04
02DZ5.1-TPH3 ..... DC008-04

1SS184 ..... DC001-03
1SS300-TE85L DC001-02
1SS301-TE85L DC001-03
1SS302 ..... DC001-01
1SS302-TE85L DC001-01
1SS362-TE85L DC001-01

MA728 ..... DC008-01
MA728-TX DC008-01
MA8051-M DC008-04

RB706F-40 ..... DC001-01

LED — **Page or ID No.**

CL-155UR/G-D LC009-03
CL-191Y-CD-T LC004-01
CL-191YG-CD-T LC004-01
CL-196HR-CD-T LC001-01
CL-196YG-CD-T LC001-01

F1J6 ..... LC001-01
F1J6TP LC001-01

SML-510MWT86 ..... LC004-01

TRANSISTOR — **Page or ID No.**

2SA1213Y-TE12L TC002-01
2SA1226-E4 ..... TC001-01
2SA1226-T1E3E4 ..... TC001-01
2SA1615-Z-K TC010-02
2SA1774R TC001-01
2SC3356-K TC001-02
2SC3356-T1K TC001-02
2SC4176-B34 ..... TC001-02
2SC4176T1B33B34B35 ..... TC001-02
2SC4617R TC001-02
2SD1623-S TC002-02
2SD596DV345 ..... TC001-02
2SK1332-3 ..... TC001-05

DTA144EE TC001-04
DTA144EE-TL TC001-04
DTC144EE TC001-03
DTC144EE-TL TC001-03

NDS355AN TC001-07
NDS356AP TC001-20

SI4425DY-T1 ..... TC012-04

Index

IC	Page or ID No.
74VHC00MTCX	TC74HC00P
74VHC04MTCX	TC74HC04P
74VHC08MTCX	TC74HC08P
74VHC125MTCX	MC74HC125N
74VHC138MTCX	TC74HC138P
74VHC244MTCX	TC74HC244P
74VHC245MTCX	TC74HC245P
74VHC32MTCX	TC74HC32P
74VHC4053MTCX	MC74HC4053F
74VHC574MTCX	TC74HC574P
74VHCT00AMTCX	TC74HC00P
74VHCT08AMTCX	TC74HC08P
74VHCT245AMTCX	TC74HC245P
AD8014ART-REEL7	AD8055ART-REEL7
ADR381ART-REEL7	MAX6066BEUR-T
AK4552VT-E2	AK4552VT-E2
BCM5221A4KPT	BCM5221A4KPT
BU2500FV-E2	M62352P
CXB1340N	CXB1340N
CXB1342R	CXB1342R
CXD1095BR	CXD1095AR
CXD1171M	CXD1171M
CXD1176Q	CXD1176Q
CXD1176Q-T4	CXD1176Q
CXD1216M	CXD1216M
CXD1216M-TH	CXD1216M
CXD2309AQ-T6	CXD2309Q-T6
CXD2315Q-T4	CXD2306Q
CXD9093R	CXD9093R
CY2309ZC-1HT	CY2309ZC-1HT
EPC2LC20-TP	EPC2LC20
EPC2LC20N-TP	EPC2LC20
FM18L08-70-STR	FM1808-70-STR
HCPL-0630-500	MA009-01
IS42S32200B-6TL-TR	IS42S32200B-6TL-TR
L78M05T-FA	L78M05T-FA
LC4032V-75TN48C	LC4032V-25T48C
LM45BIM3X	LM45BIM3X
MB86189PFV-G-BND-ER	MB86189PFV-G-BND-ER
MBM29LV160B-90PFTN	MBM29LV160B-90PTFN
MC10EP57DTR2	MC10EP57DTR2
MC14053BDTR2	MC74HC4053F
MC74HC4046ADTR2	CD4046BE
MC74HC4052ADTR2	MC74HC4052N
MT48LC8M16A2P-75-Y15WTR	HY57V281620AT-P
NC7SZ04P5X	TC7S04F
NC7SZ08P5	TC7S08F
NC7SZ32P5X	TC7S32F
NJM062V(TE2)	RC4558
NJM062V-TE2	RC4558
NJM2903V(TE2)	UA393DC
NJM4558V-TE2	RC4558
NJM4560M	RC4558
NJM4580V(TE2)	RC4558
NJM4580VTE2	RC4558
NJM78M05DL1A-TE1	NJM78M12DLA_TE1
RN5VD28AA-TL	S-80928ANMP-DDR-T2
RTC4574JE-TP	RTC4574JE-TP
SN74CBT3253PWR-12	SN74CBT3253PW-E20
SN74LVC04APWR	TC74HC04P
SN74LVC08APWR	TC74HC08P
SN74LVC125APWR-12	MC74HC125N
SN74LVC138APWR-12	TC74HC138P
SN74LVC157APWR	TC74HC157P
SN74LVC245APWR	TC74HC245P
SN74LVC574APWR	TC74HC574P
SN74LVC74APWR-12	TC74HC74P
SN75158PS	SN75158P
TC4W66FU(TE12R)	TC4W66F
TC4W66FU	TC4W66F
TC74HC4052AFT(EL)	MC74HC4052N
TC74HC4053AFT(EL)	MC74HC4053F
TC74HC4538AFT(EL)	MC74HC4538N
TC74HC4538AFT	MC74HC4538N
TC74VHC02FT(EL)	TC74HC02P
TC74VHC02FT	TC74HC02P
TC74VHC125FT(EL)	MC74HC125N
TC74VHC244FT(EL)	TC74HC244P
TC7SZ00FU(TE85R)	TC7S00F
TC7SZ04FU(TE85R)	TC7S04F
TC7SZ08FU(TE85R)	TC7S08F
TC7SZ125FU(TE85R)	NC7SZ125P5
TC7W53FU(TE12R)	TC4W53FU
TC7W53FU-TE12R	TC4W53FU
TC7WH04FU(TE12R)	TC7W04F
TL712CPS	TL712CP
TLC272CPS	RC4558
TLC272CPWR	RC4558
TLC272CPWR-12	RC4558
TPS54610PWPR	TPS54610PWPR
UPD6466GS-515	UPD6466GS-502-E2
UPD6467GR-525-E2	UPD6466GS-502-E2

Section 6
Block Diagrams

Index

Board Name	Function	Page
Overall (HDCU1000)	–	6-2, 6-3
Overall (HDCU1080)	–	6-4, 6-5
Overall (HDCU1500)	–	6-6, 6-7
ADO-10	SIGNAL INTERFACE	6-2, 6-3, 6-4, 6-5, 6-6, 6-7
AT-167	SYSTEM CONTROLLER	6-8
AU-302	FRONT INTERCOM INTERFACE	6-10
AU-303	FRONT INTERCOM INTERFACE	6-10
AVP-6	AUDIO, TALLY	6-11
CN-2672	CONNECTOR (RCP/CNU)	6-2, 6-3, 6-4, 6-5
CN-2673	CONNECTOR (MIC)	6-2, 6-3, 6-4, 6-5
CN-2674	CONNECTOR (VBS/PROMPTER)	6-2, 6-3, 6-4, 6-5, 6-16
CN-2675	CONNECTOR (RCP/CNU/TRUNK)	6-6, 6-7, 6-17
CN-2676	CONNECTOR (MIC)	6-6, 6-7
CN-2677	CONNECTOR	6-6, 6-7
CN-2678	CONNECTOR (INTERCOM)	6-6, 6-7
CN-2700	CONNECTOR (INTERCOM)	6-2, 6-3, 6-4, 6-5
CN-2718	CONNECTOR	6-2, 6-3, 6-4, 6-5
CN-2805	CONNECTOR (TRUNK)	6-2, 6-3, 6-4, 6-5
CNB-21	CONNECTOR INTERFACE	6-2, 6-3, 6-4, 6-5
CNB-22	CONNECTOR INTERFACE	6-6, 6-7
DRX-5	VIDEO PROCESSOR	6-12
DTX-5	HD/SD/VBS RETURN SIGNAL CONVERTER	6-13
DU-390	THROUGH BOARD	6-4, 6-5
EN-159A	SD ENCODER UNIT	6-14
EN-159B	SD ENCODER & COMPONENT VIDEO UNIT	6-14
HIF-25	SDI OUTPUT	6-15
HIF-26	SDI OUTPUT	6-15
HIF-27	SDI OUTPUT	6-15
MB-1071	MOTHERBOARD	6-2, 6-3, 6-4, 6-5
MB-1072	MOTHERBOARD	6-6, 6-7
SDI-85	RETURN HD INPUT	6-15
SDI-86	RETURN SD INPUT	6-16
SDI-87	RETURN INPUT	6-17
SDP-12	OPTICAL INTERFACE	6-18
VDA-64A	SD ANALOG VIDEO OUTPUT	6-19
VDA-64B	FRAME REFERENCE INPUT & SD ANALOG VIDEO OUTPUT	6-19
VDA-64C	SD ANALOG VIDEO OUTPUT	6-19
VIF-34B	CONNECTOR INTERFACE	6-20
VIF-34	CONNECTOR INTERFACE	6-20

Board List

Board Name	HDCU1000	HDCU1080	HDCU1500	HKCU1001	HKCU1003	HKCU1005
ADO-10/10G*	○	○	○	–	–	–
AT-167	○	○	○	–	–	–
AU-302	○	○	–	–	–	–
AU-303/303G*	–	–	○	–	–	–
AVP-6	○	○	○	–	–	–
CN-2672/2672G*	○	○	–	–	–	–
CN-2673	○	○	–	–	–	–
CN-2674/2674G*	○	○	–	–	–	–
CN-2675/2675G*	–	–	○	–	–	–
CN-2676	–	–	○	–	–	–
CN-2677/2677G*	–	–	○	–	–	–
CN-2678	–	–	○	–	–	–
CN-2700	○	○	–	–	–	–
CN-2718	○	○	–	–	–	–
CN-2805/2805G*	○	○	–	–	–	–
CNB-21/21G*	○	○	–	–	–	–
CNB-22/22G*	–	–	○	–	–	–
DRX-5	○	○	○	–	–	○
DTX-5	○	○	○	–	–	–
DU-390	–	○	–	○	–	–
EN-159A	–	–	–	○	–	–
EN-159B	–	–	–	–	○	–
HIF-25	○	○	–	–	–	–
HIF-26	–	–	–	–	–	○
HIF-27	–	–	○	–	–	–
MB-1071	○	○	–	–	–	–
MB-1072/1072G*	–	–	○	–	–	–
SDI-85	○	○	–	–	–	–
SDI-86/86G*	○	○	–	–	–	–
SDI-87/87G*	–	–	○	–	–	–
SDP-12/12C	○	○	○	–	–	–
VDA-64A	–	–	–	○	○	–
VDA-64B	–	–	–	–	○	–
VDA-64C	–	–	–	–	○	–
VIF-34B/34BG*	–	–	○	–	–	–
VIF-34/34G*	○	○	–	–	–	–


注意

＊印の基板は2種類ありますが，マニュアル内の記載では簡素化するため基板名には“G”を付けていません。

Note

The board with an asterisk (*) has two types. However, the board name in the manual does not have “G” at the end for simplification.


Overall (HDCU1000)

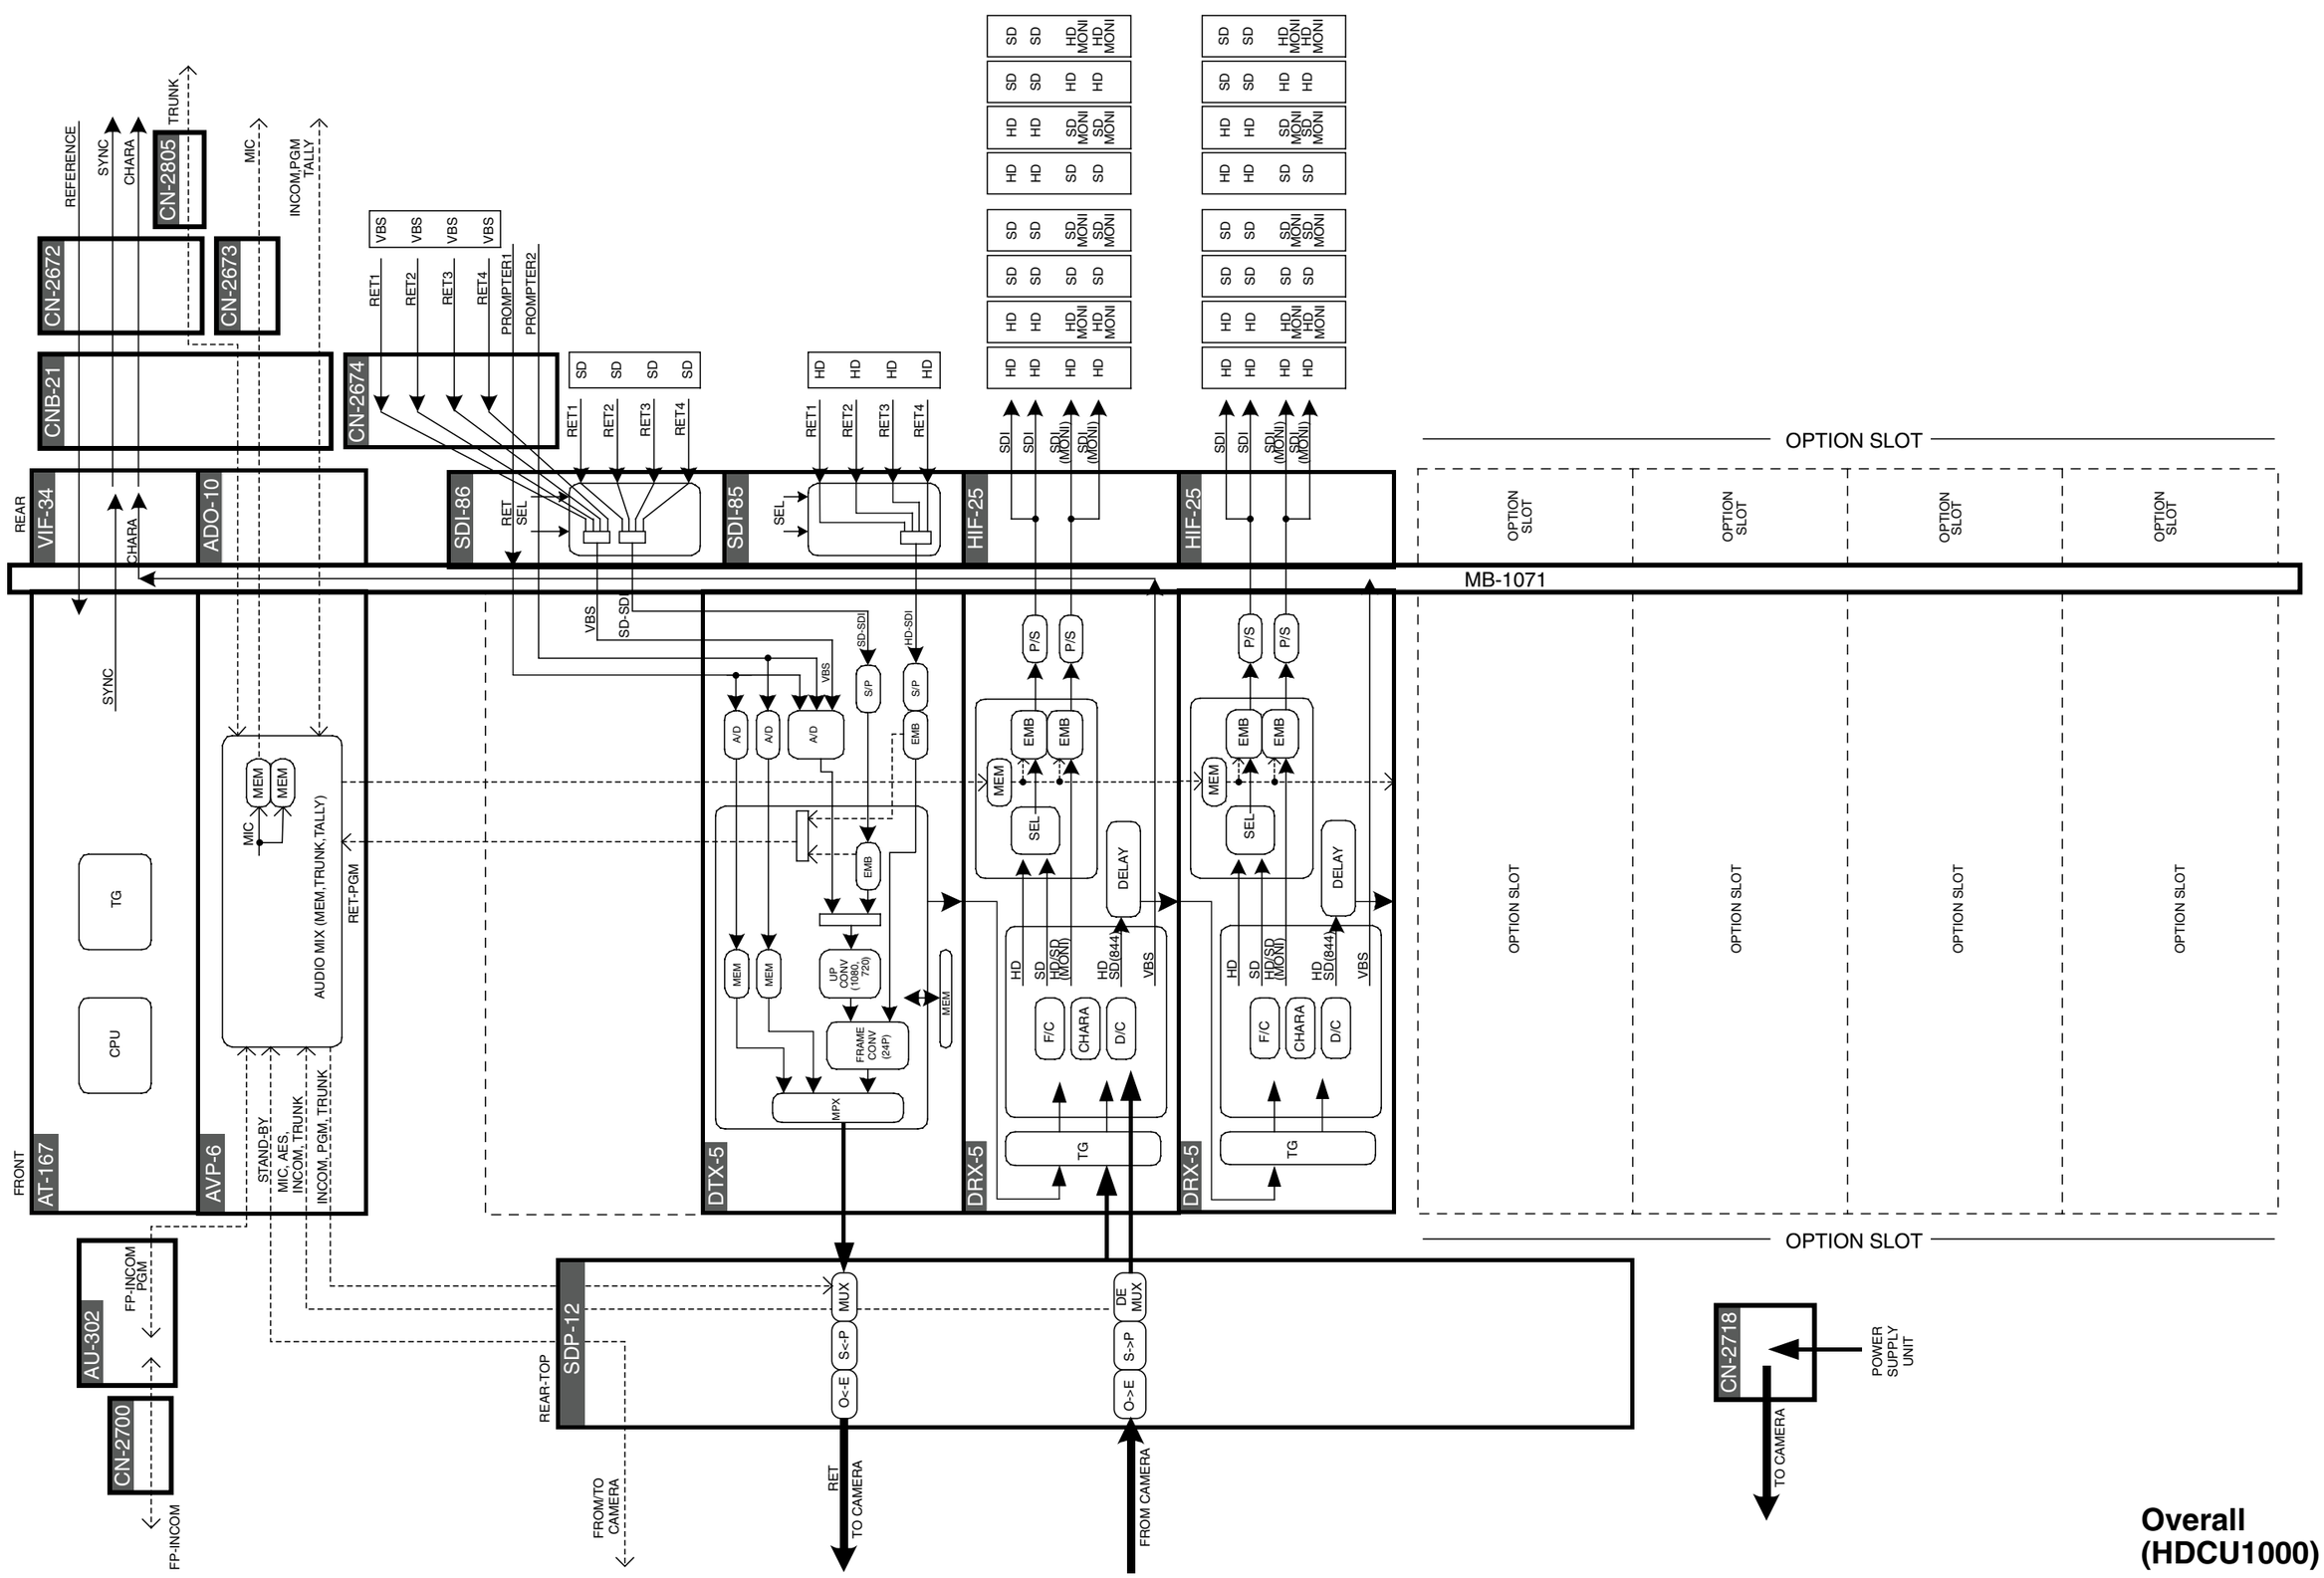

6-2

Overall (HDCU1000)


Overall (Option side) (HDCU1000)

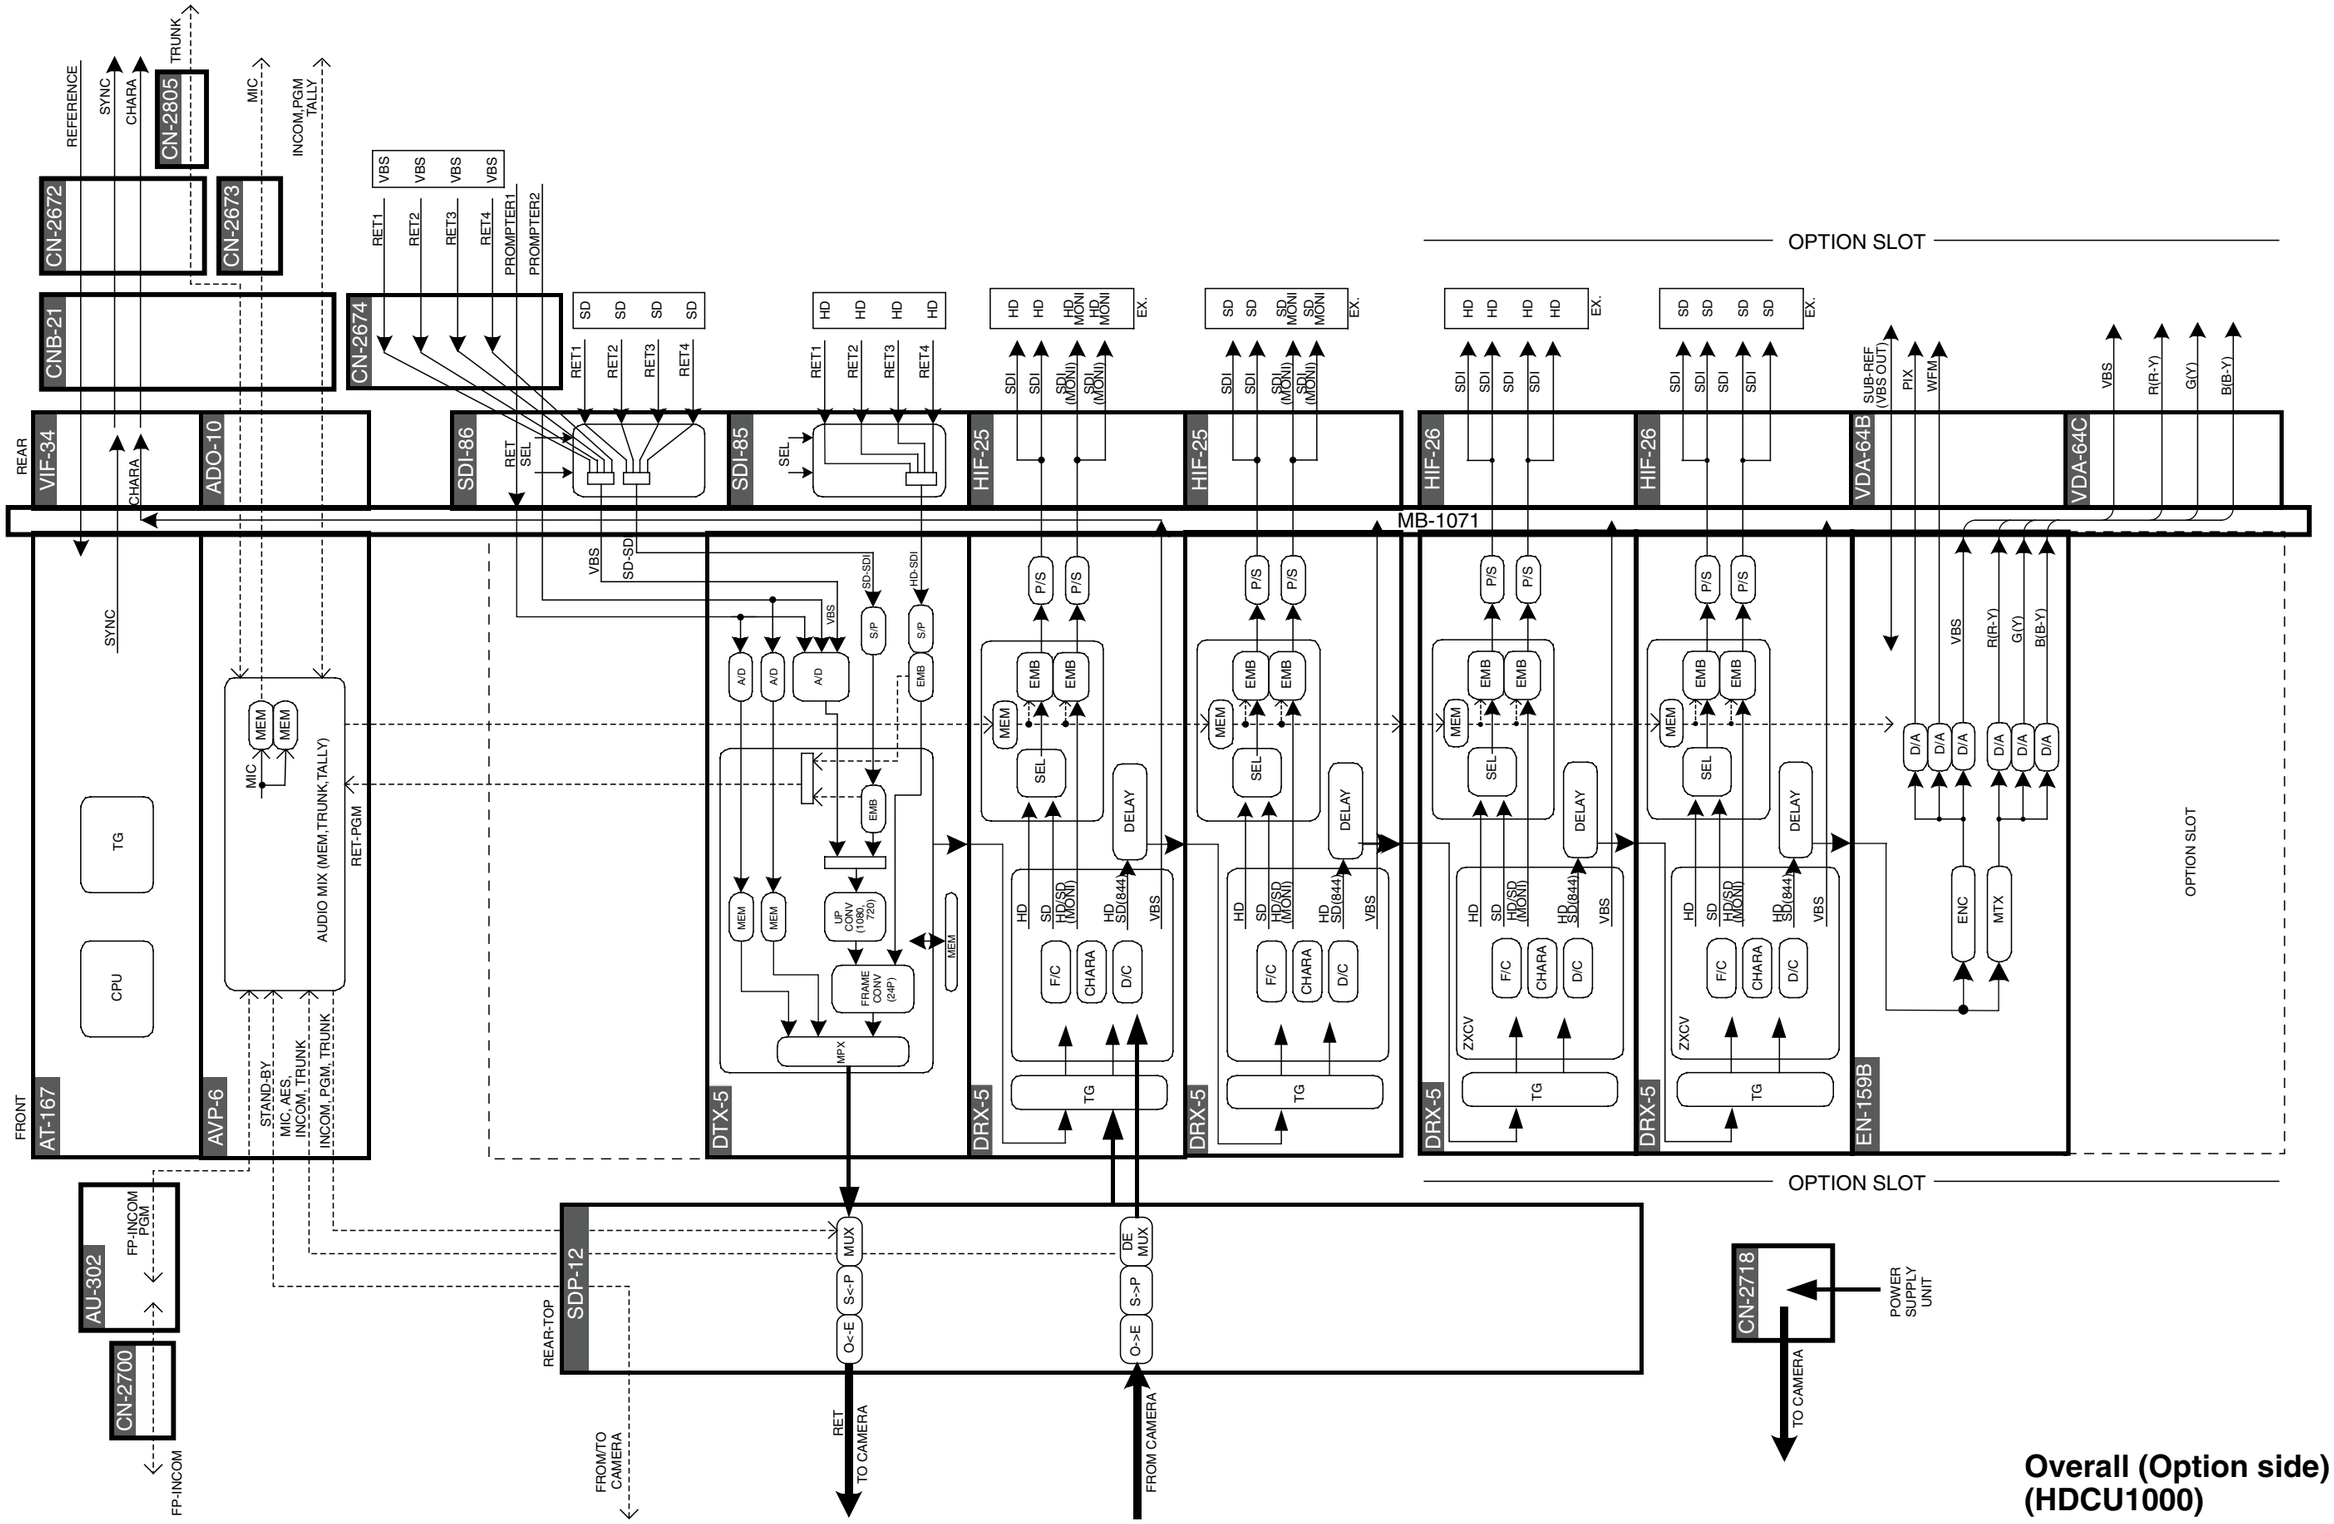

Overall (Option side) (HDCU1000)

6-3


Overall (HDCU1080)

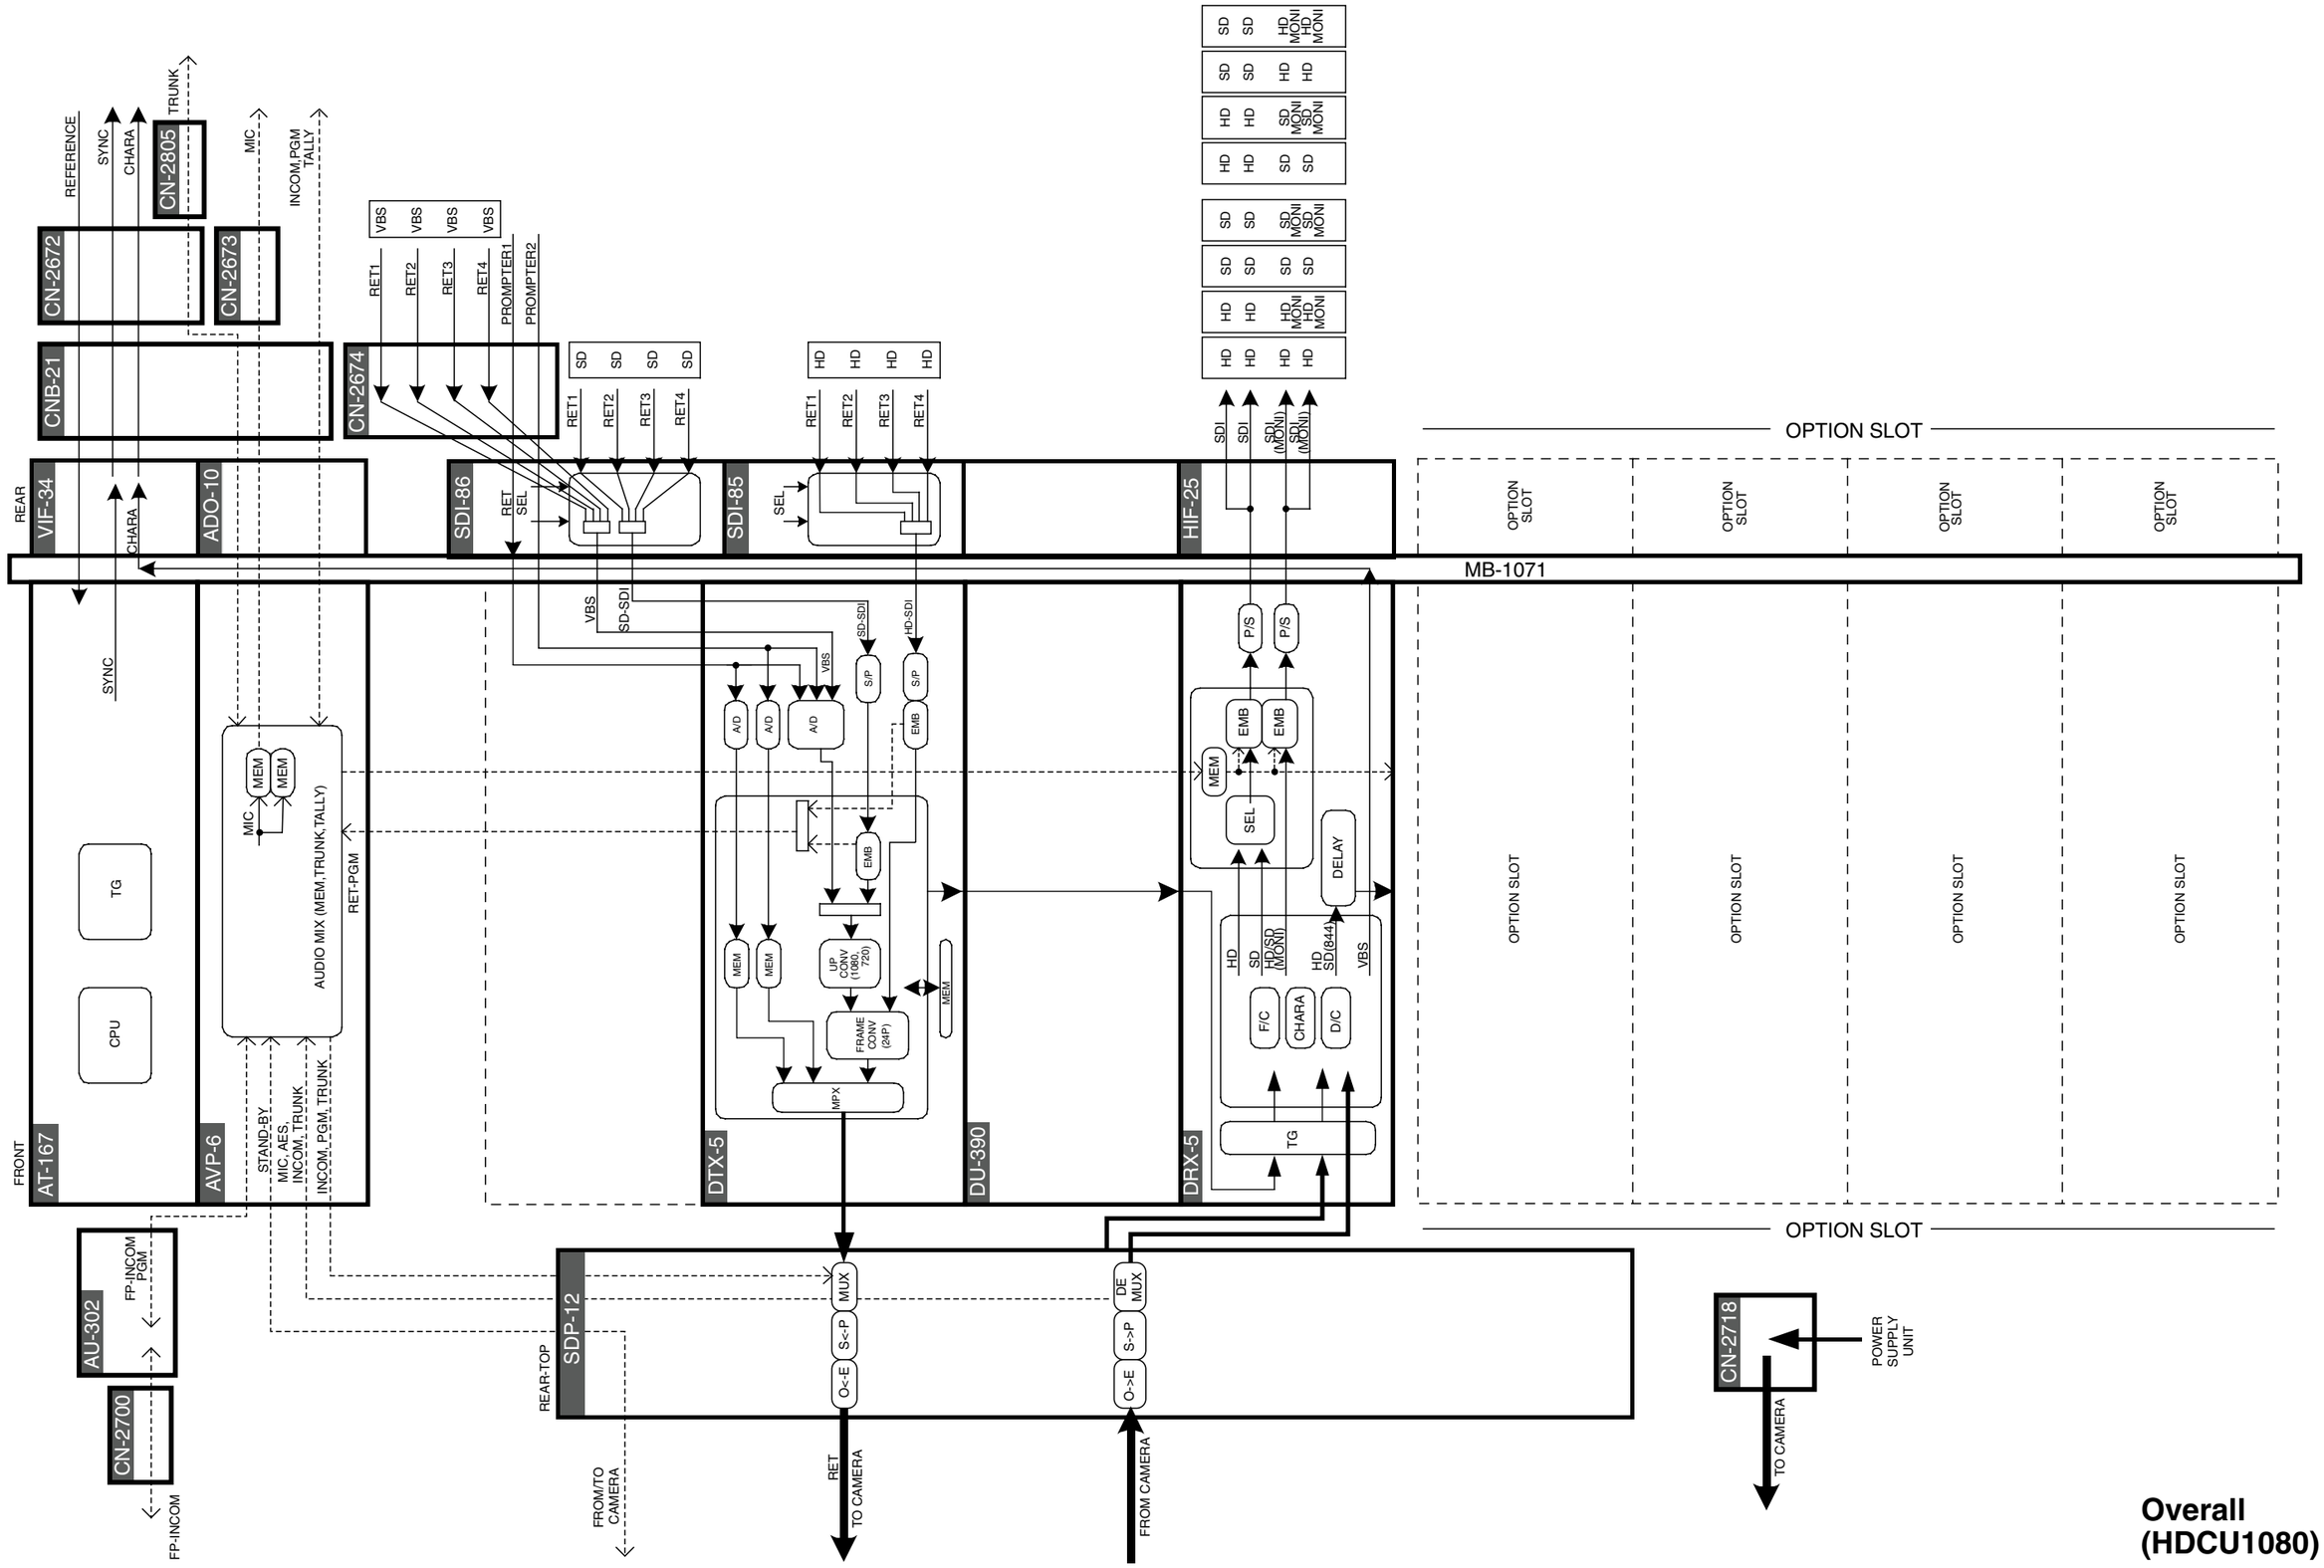

Overall (HDCU1080)

6-4


Overall (Option side) (HDCU1080)

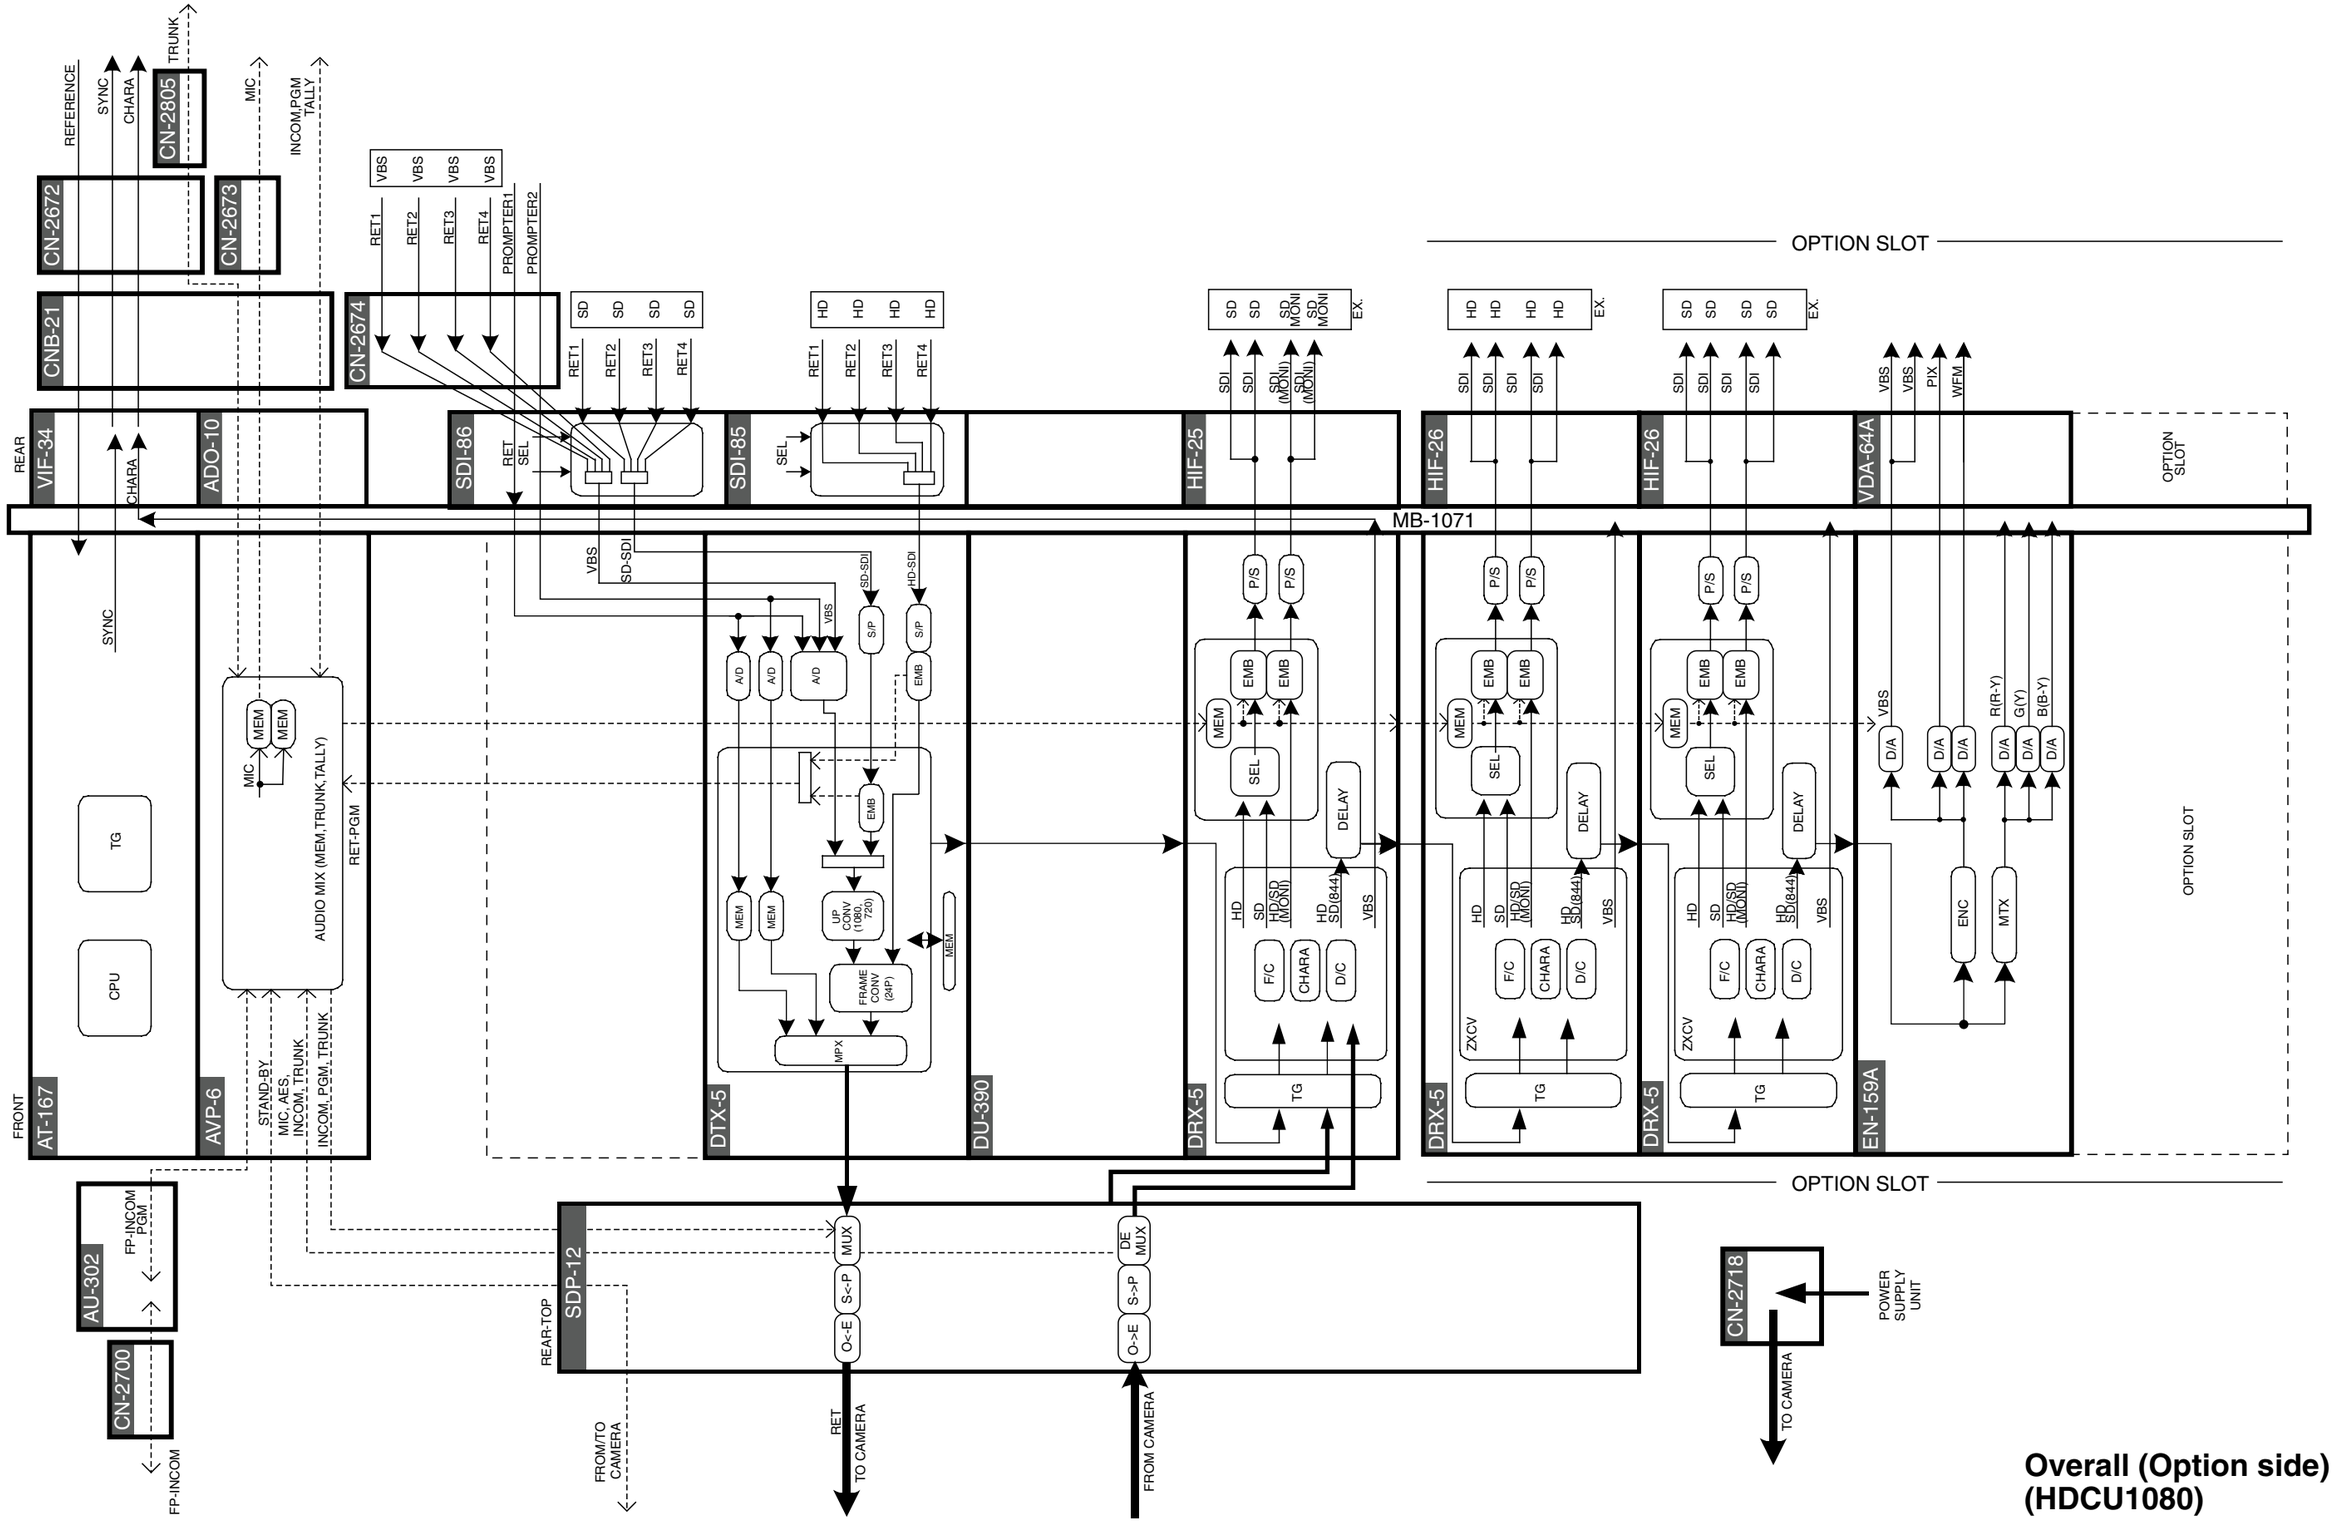

Overall (Option side) (HDCU1080)

6-5


Overall (HDCU1500)

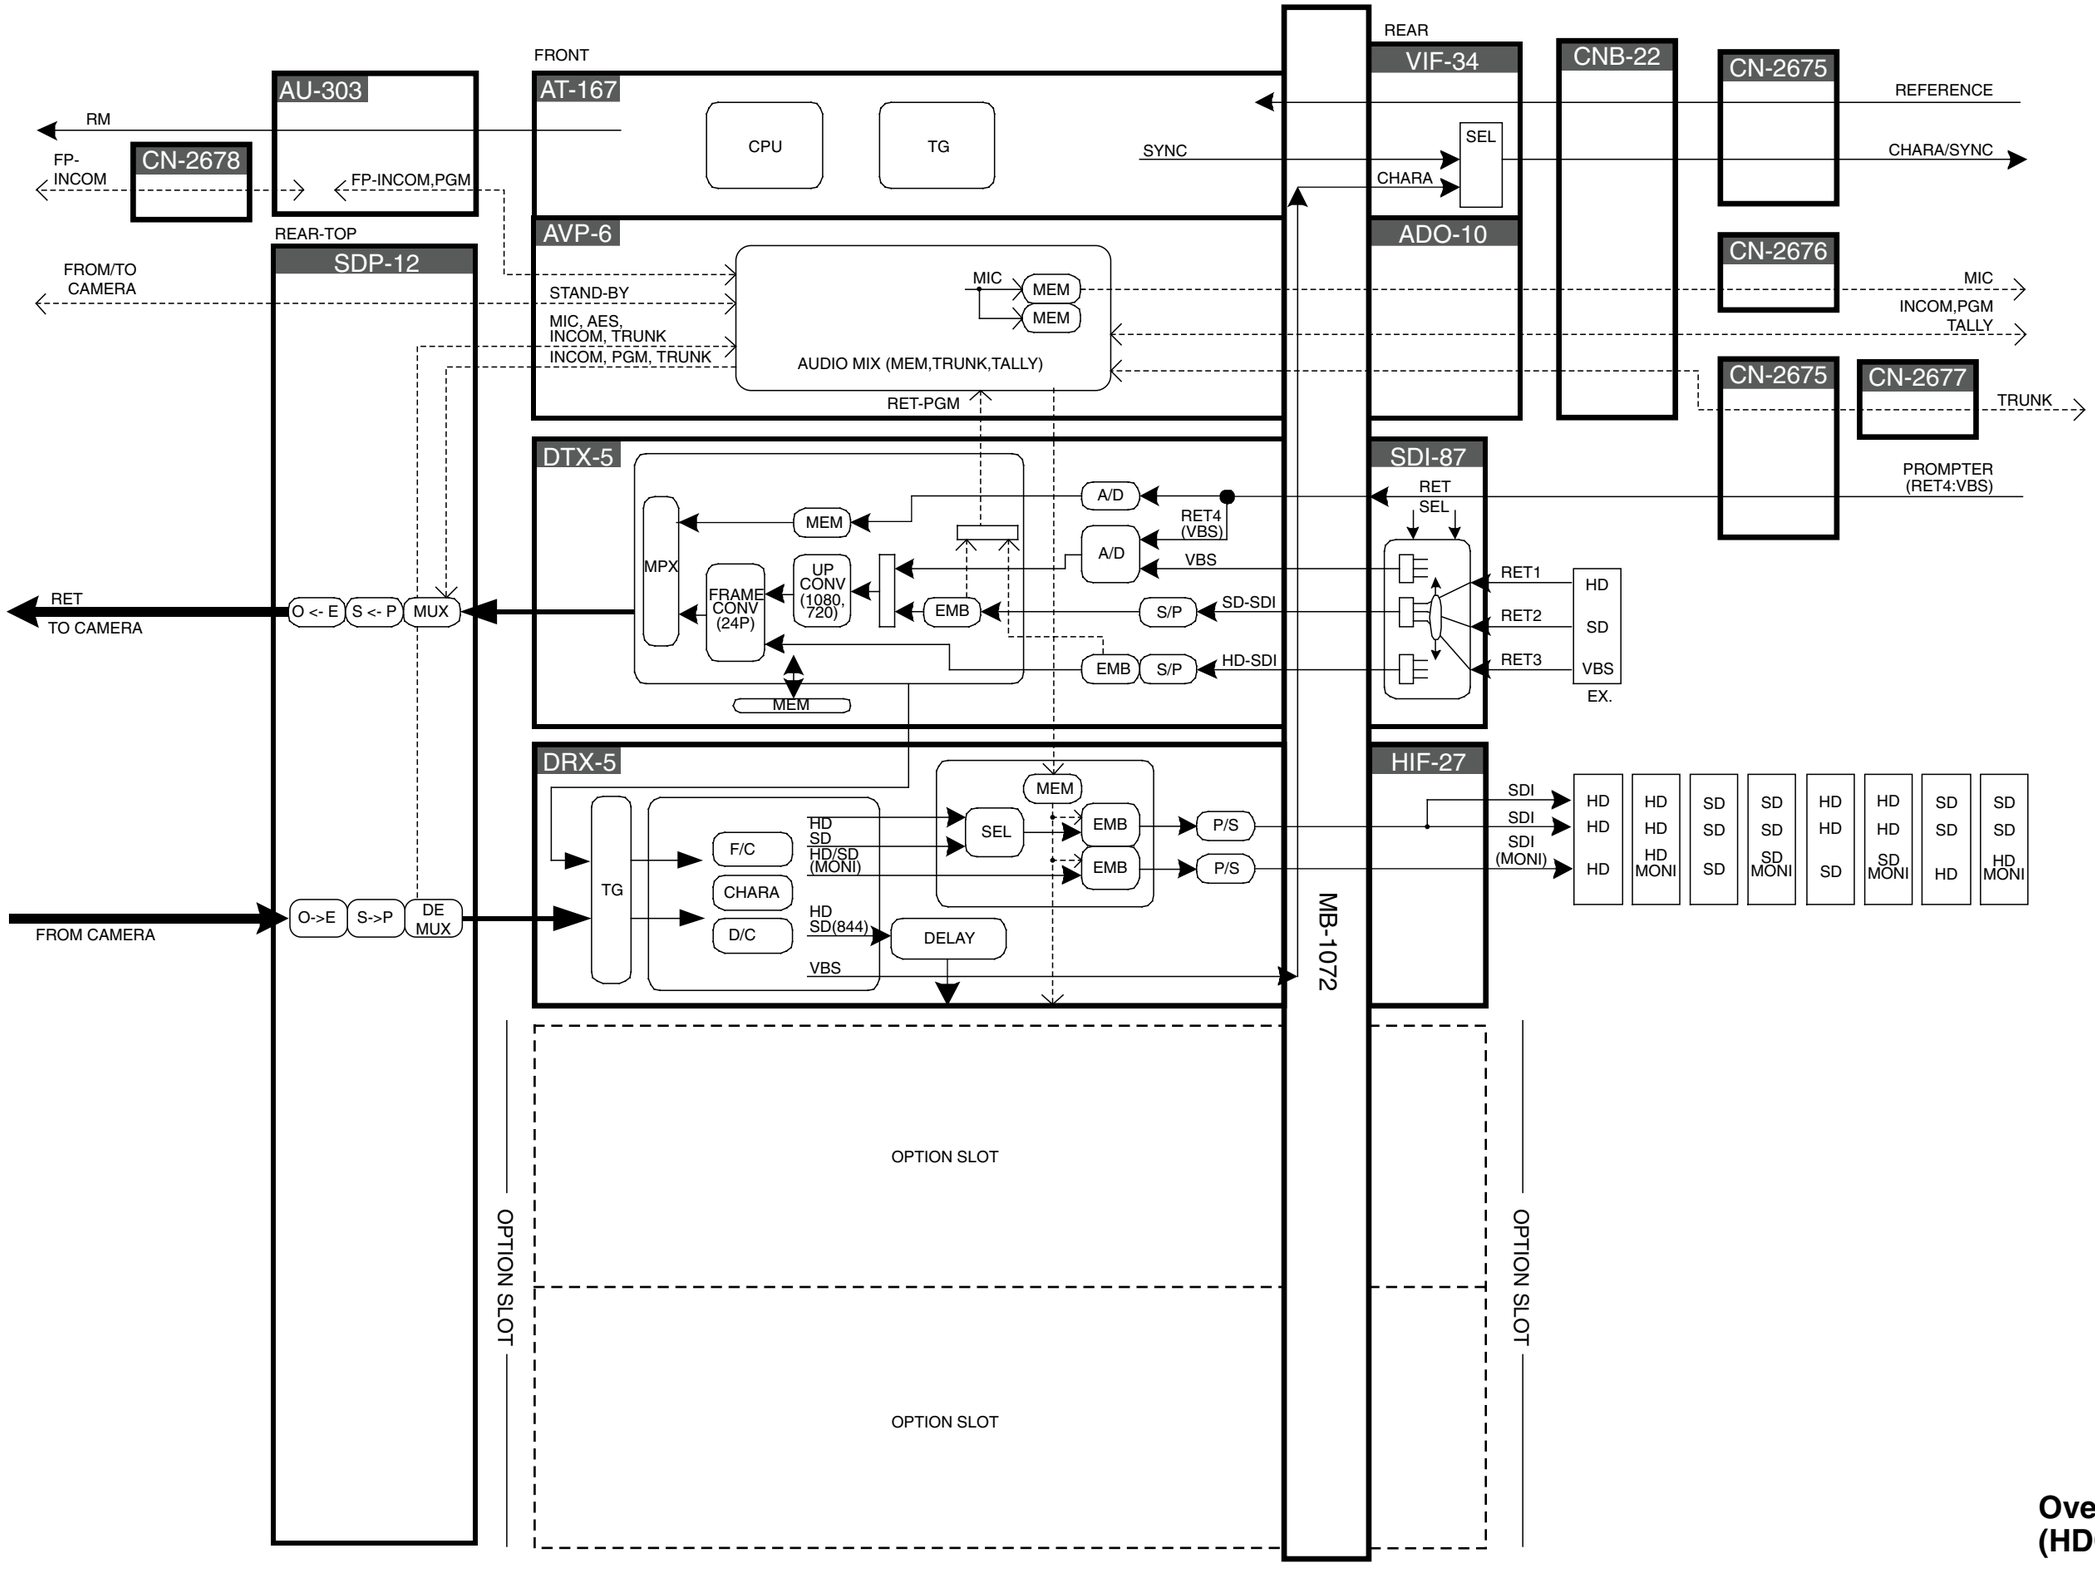

6-6


Overall (HDCU1500)

Overall (Option side) (HDCU1500)

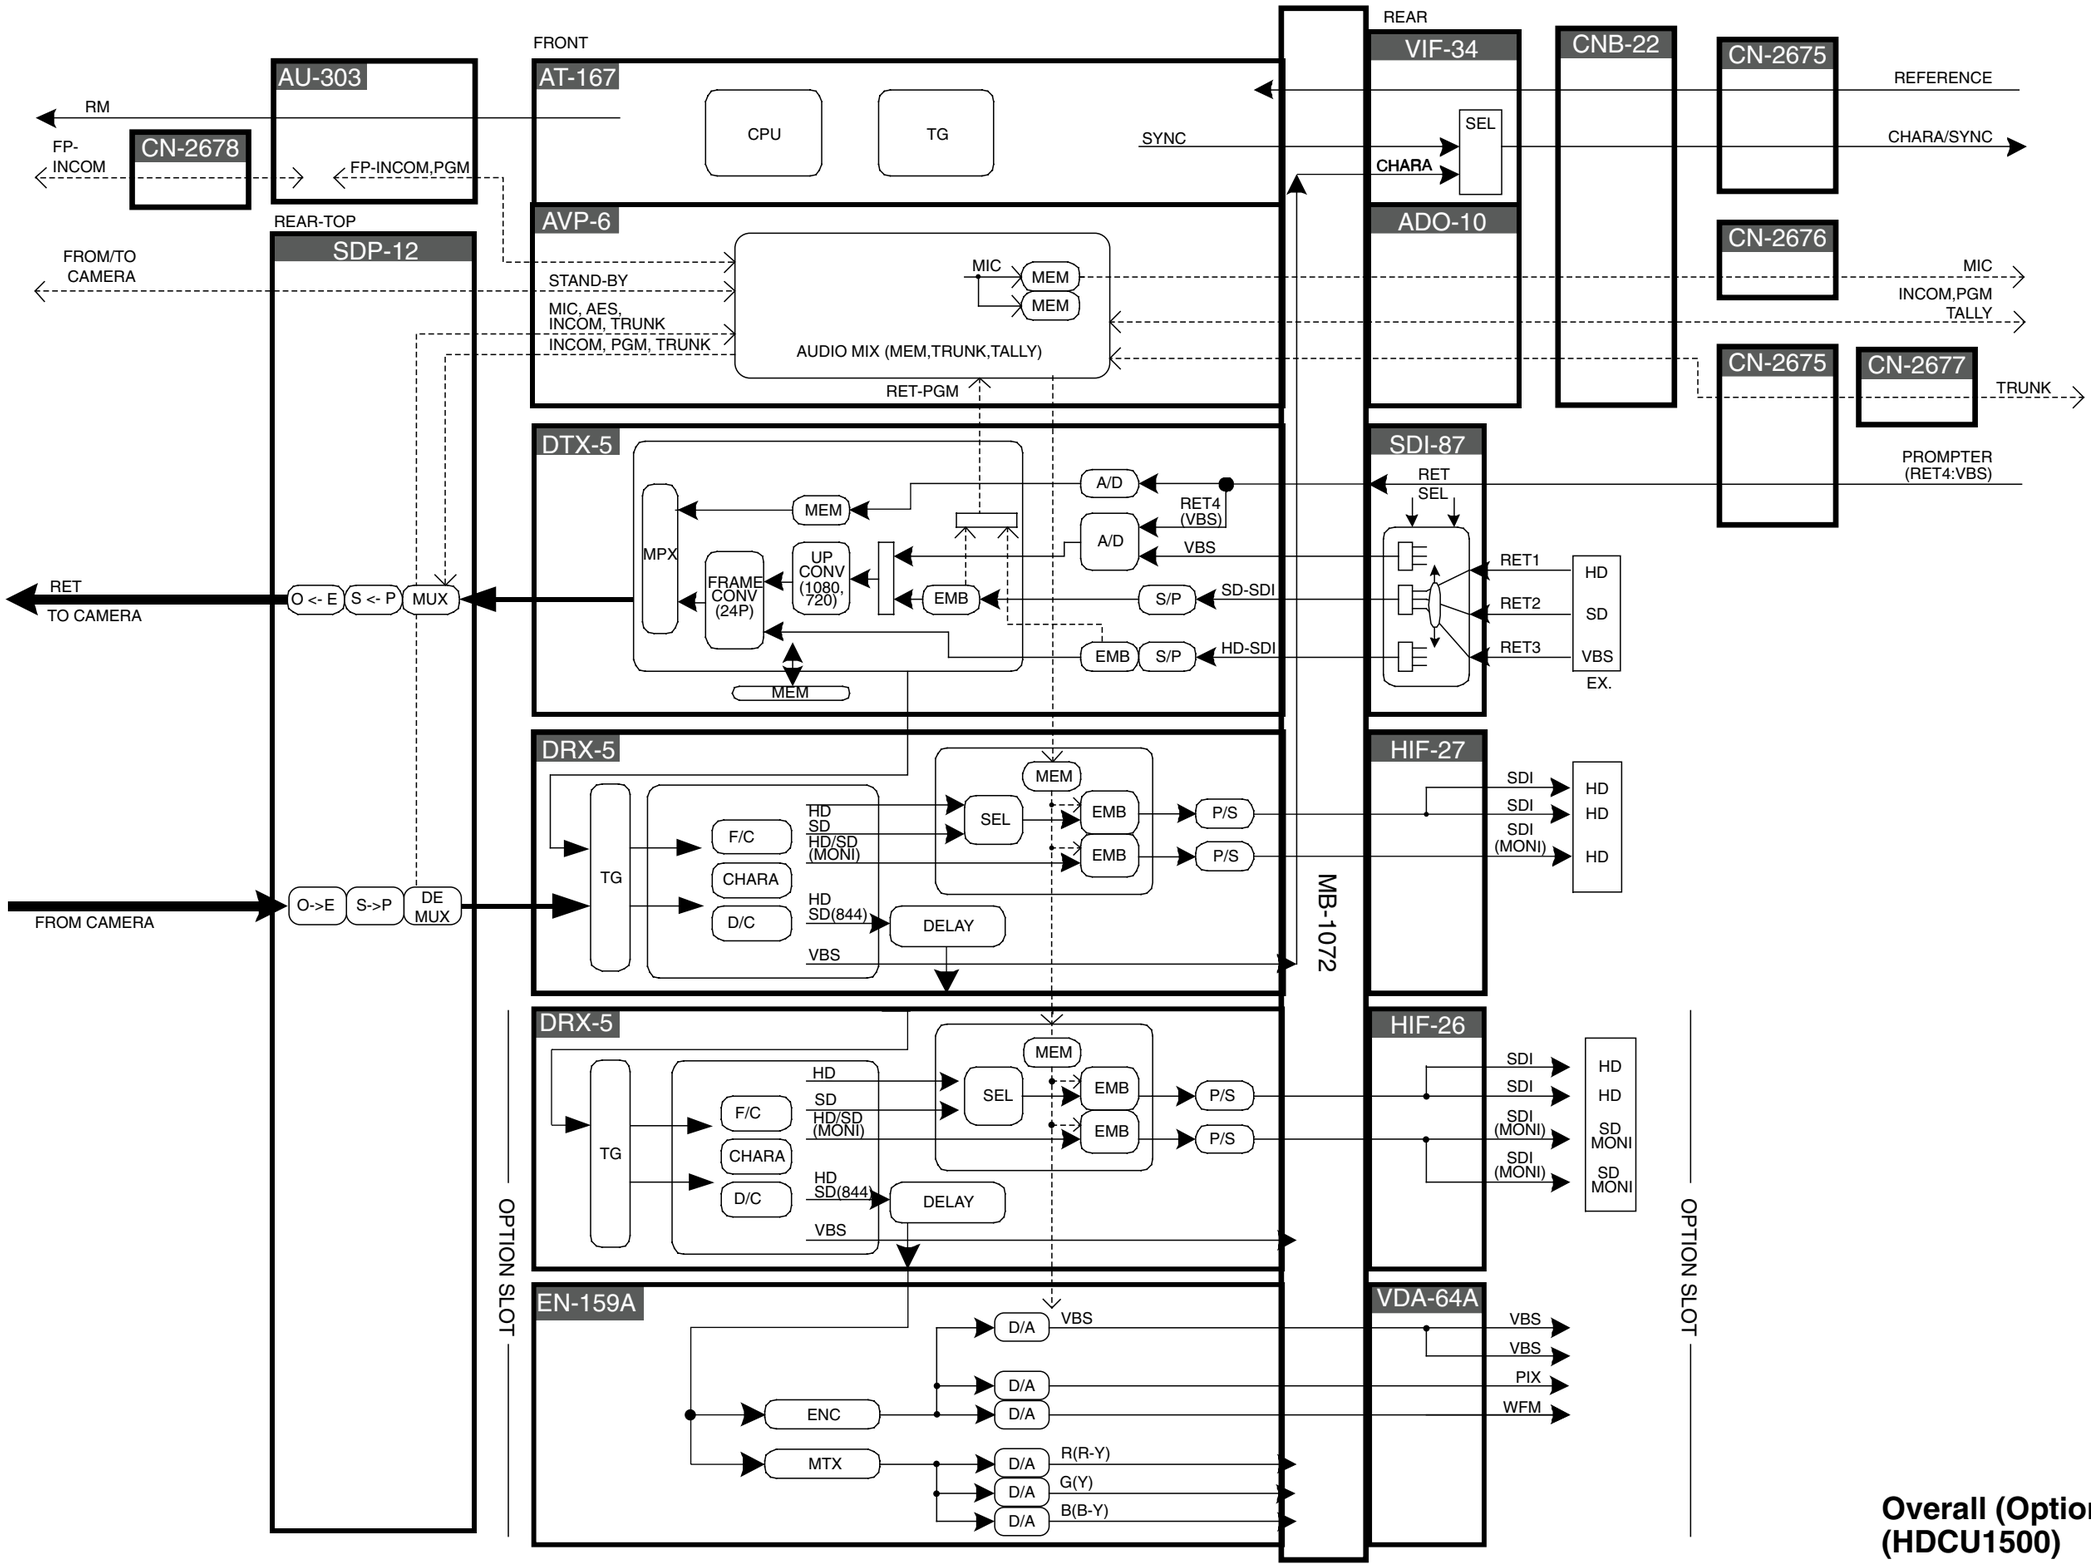


Overall (Option side) (HDCU1500)

6-7

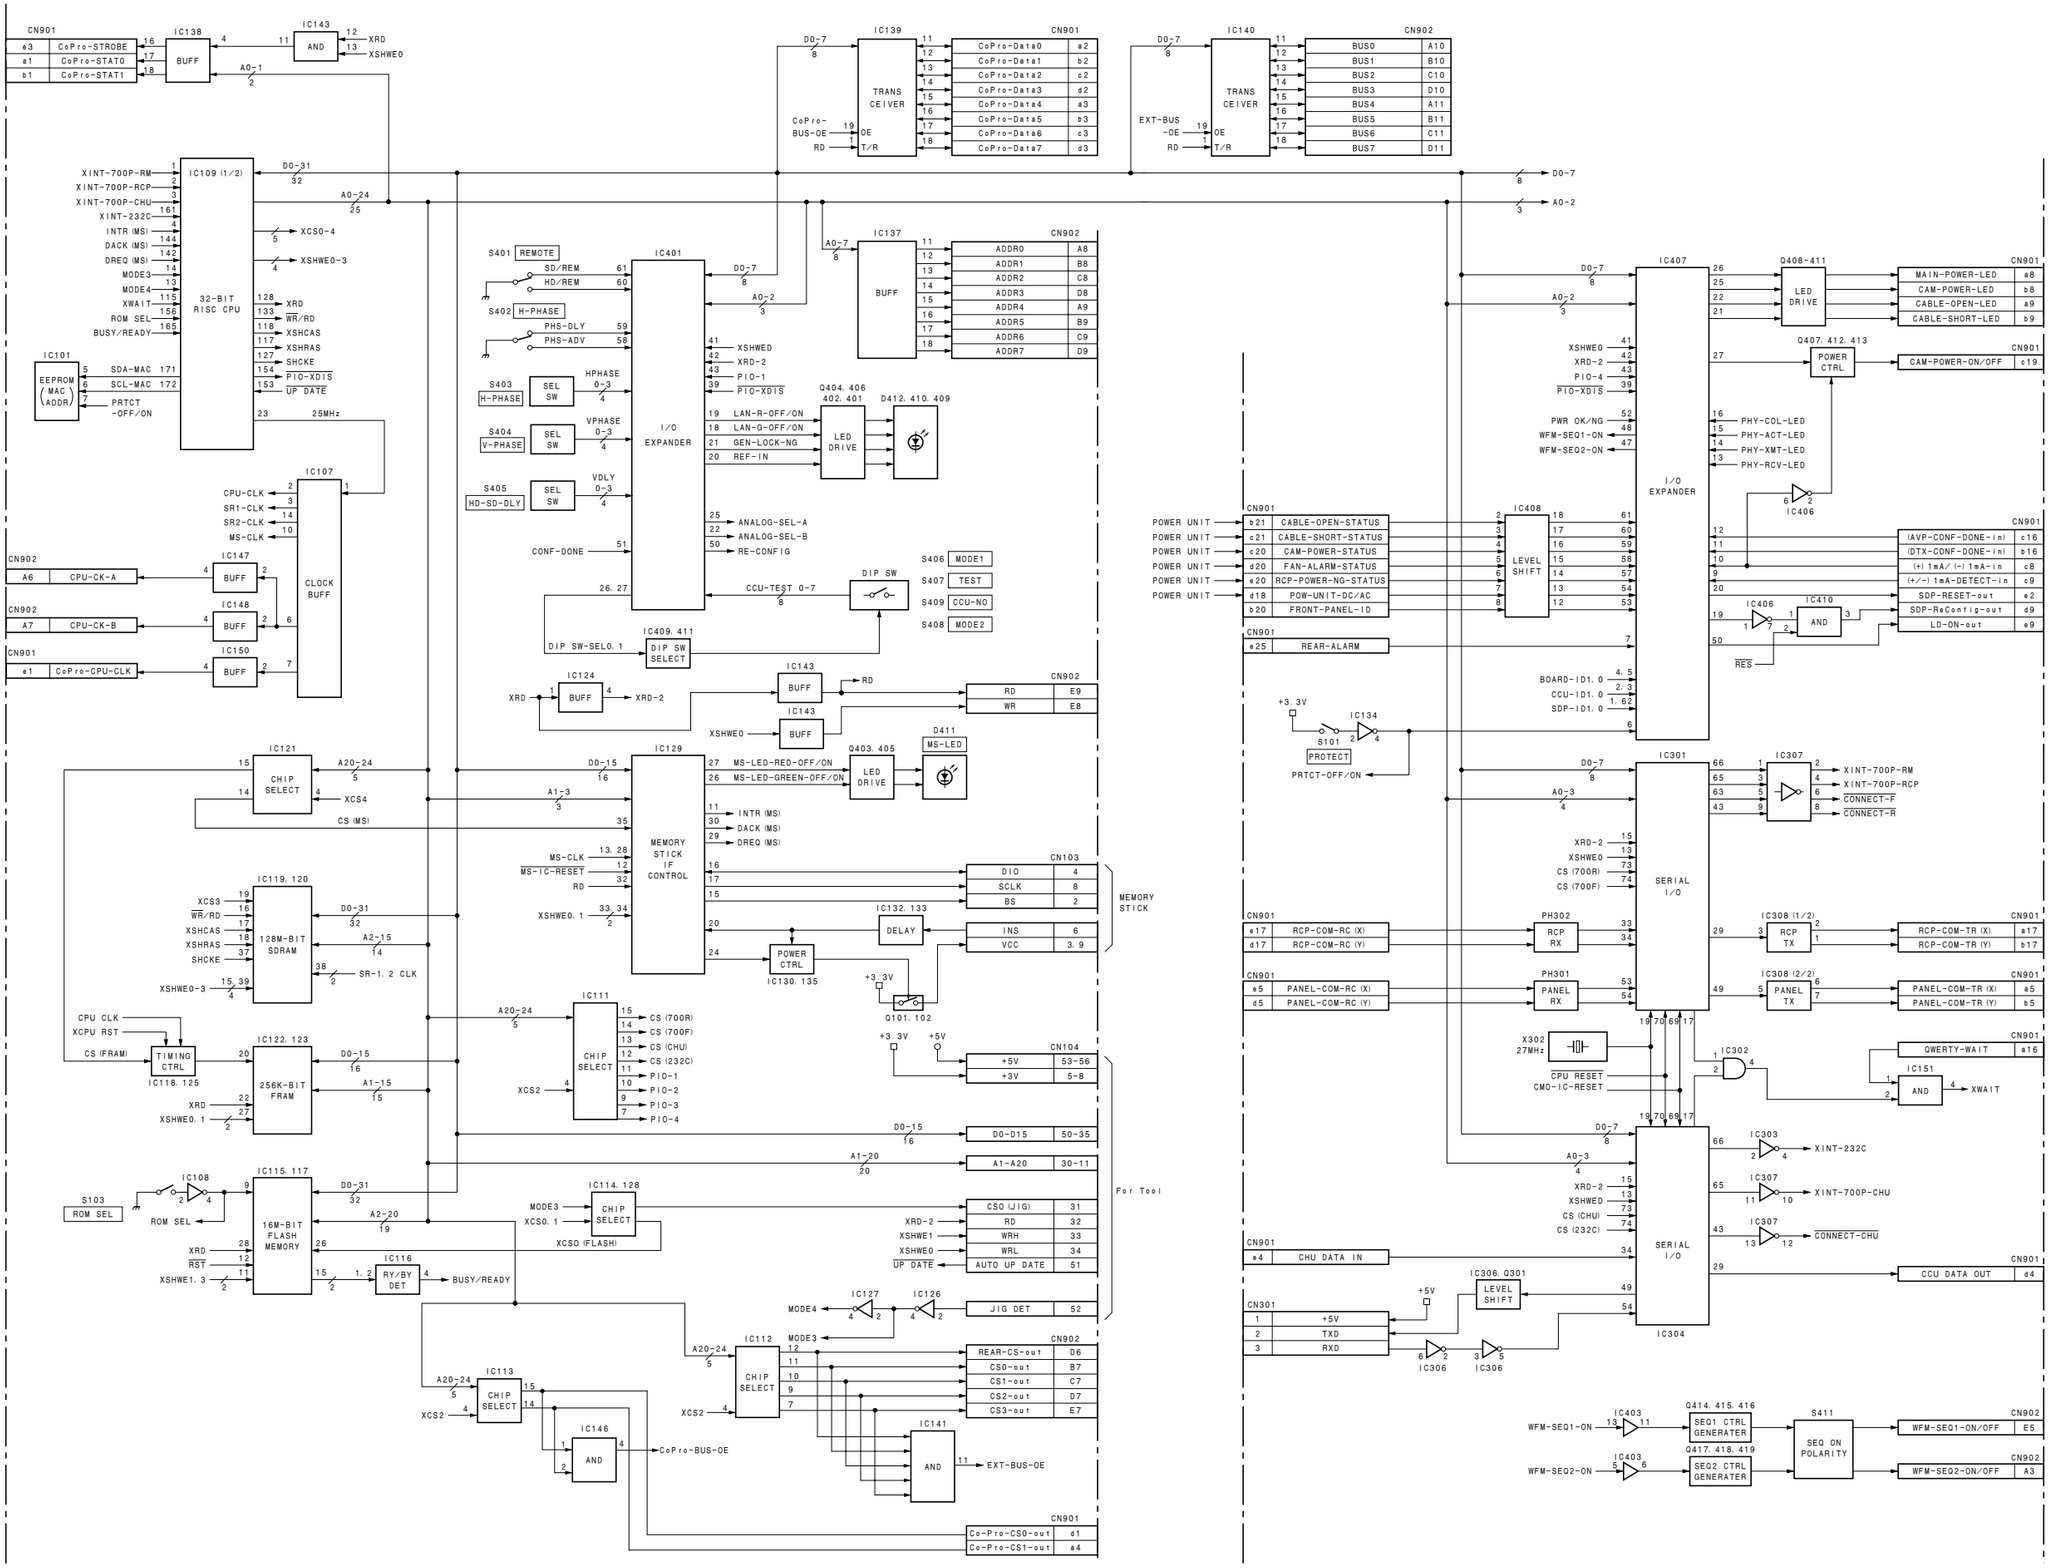


SYSTEM CONTROLLER
AT-167 (1/2)

AT-167 (2/2)

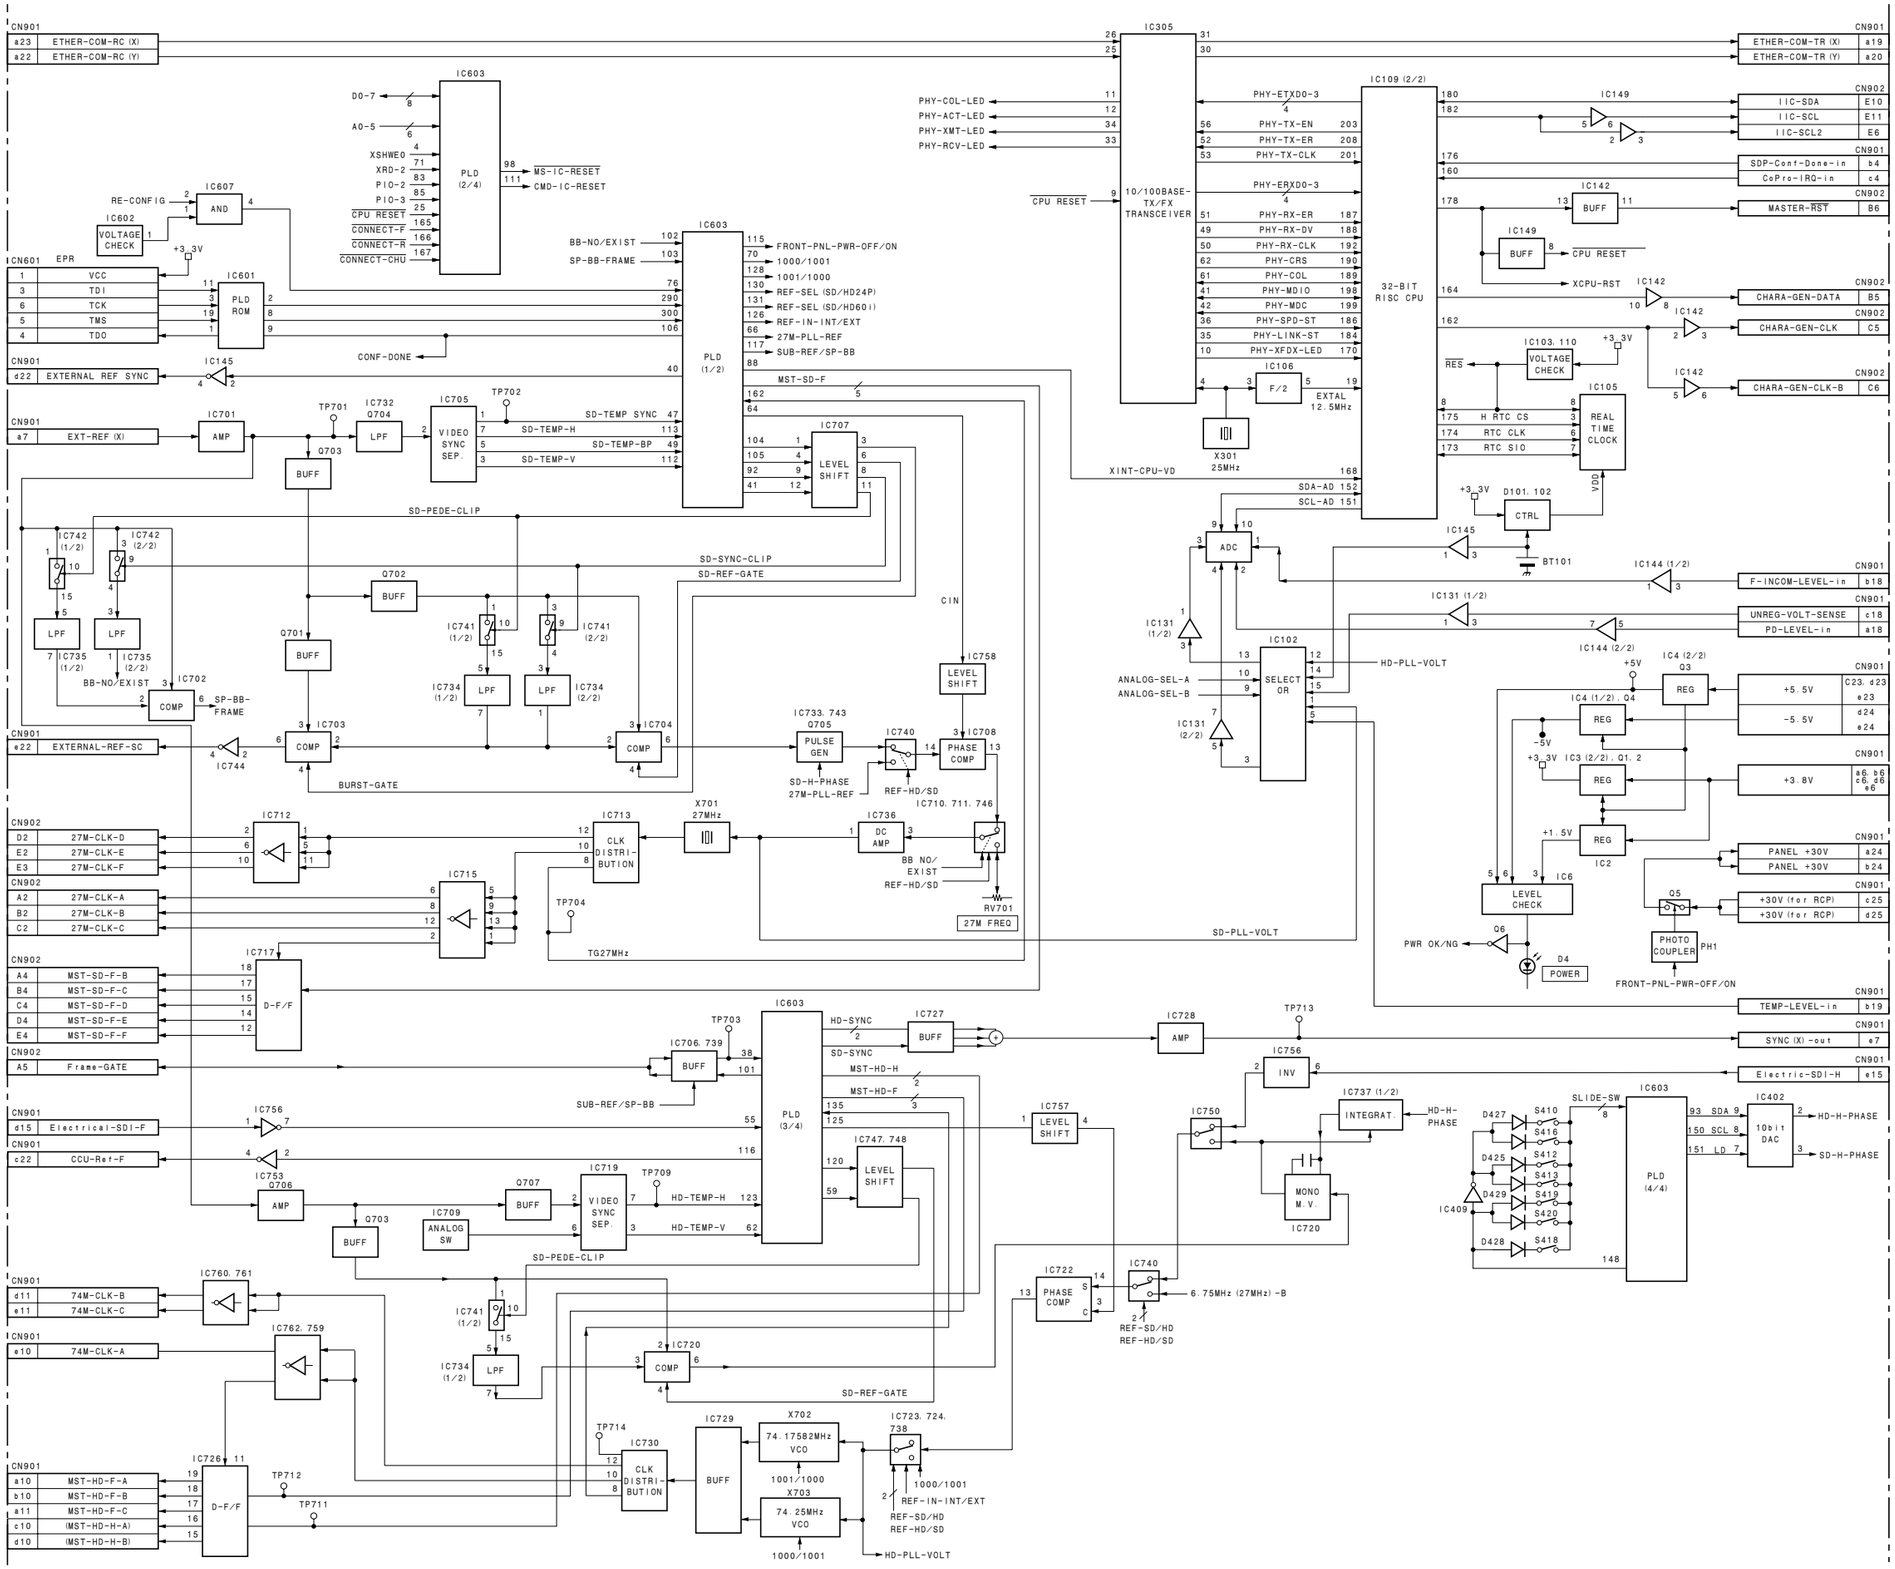

SYSTEM CONTROLLER
AT-167 (2/2)

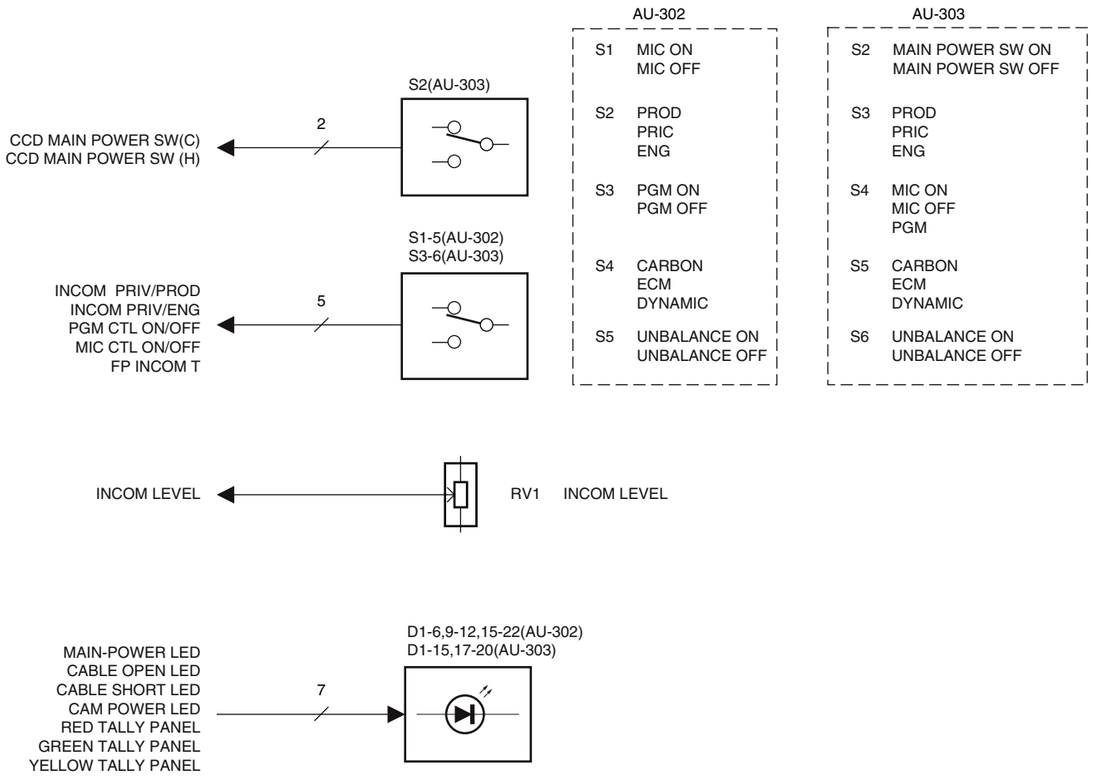

FRONT INTERCOM INTERFACE
AU-302

FRONT INTERCOM INTERFACE
AU-303

RED-TALLY-PANEL-OUT
RED-TALLY-REAR-OUT
TALLY-REAR-OUT
GREEN-TALLY-PANEL-OUT
GREEN-TALLY-REAR-OUT
Q715 DRIVER
Q703 DRIVER
Q704 DRIVER
Q714 DRIVER
Q704 DRIVER
CMD-R-TALLY
CMD-G-TALLY

TO SDP BOARD
TDIo/TDO:/TMSo/TDO:
SDP-OE
EPR CN
IC318 SELECTOR
IC310 EPC2-ROM

IC302
AUDIO PROCESSOR
SELECTOR
MIXING
LEVEL CONTROLLER
TRUNK ENC/DEC

TRUNK1-X IN
TRUNK1-Y IN
TRUNK1-X OUT
TRUNK1-Y OUT
IC109,107 232C/422A TX/RX
TRUNK2-X IN
TRUNK2-Y IN
TRUNK2-X OUT
TRUNK2-Y OUT
IC108,107 232C/422A TX/RX

IC301,303,304 X300 PLL 24.576MHz
IC300 AUDIO MEM
LRCK 64FS,256FS
IC309, 312 BUFF

RED-TALLY(X,Y) IN
S11
S12
PH700
R-TALLY
Q706,707 DC/DC CONV
T700
IC701 +5REG
IC702 +5REG
GREEN-TALLY(X,Y) IN
S21
S22
PH700
G-TALLY


SDI MIC 1/2 OUT
SDI MIC 3/4 OUT
RET-PGM 1/2
RET-PGM 3/4
27M CLK A IN
IC315 BUFF
SDP-RX12-MIC12
SDP-RX34-AES12
SDP-RX56-INC12
SDP-RX78-TRK12
IC314 BUFF
SDP-TX12-PGM12
SDP-TX34-SPA12
SDP-TX56-INC12
SDP-TX78-TRK12
LRCK,64FS
IC313 BUFF
LRCK,64FS
IC308 BUFF

+12V
+12.5V
IC100,Q100 +12V REG
-12.5V
IC100,Q101 -12V REG
IC104 +1.5VREG
+5.5V
IC101,Q103 +5VREG
-5.5V
IC101,Q104 -5V REG
+3.8V
IC105,Q102 +3.3VREG


AES1/2
IC319 MUTE
IC311 DRIVER
AES/EBU-X_OUT
MIC1/2
AD/DA RST
LRCK
64FS,256FS
IC501 D/A
IC507 LPF
IC508 LPF
RV500 LEVEL
RV501 LEVEL
IC505 0/-20DB AMP
IC506 0/-20DB AMP
S500
S501
MIC1 (X,Y) OUT
MIC2 (X,Y) OUT
PGM1/2
IC500 A/D
IC502 LPF
IC502 LPF
IC503 LIMIT
IC504 LIMIT
S502 0/-20DB
S503 0/-20DB
PGM1 (X,Y) IN
PGM2 (X,Y) IN
IC601 LPF
IC601 LIMIT
IC603 INV
IC605 MUTE
IC603 ATT
PROD (X,Y) IN
S600 RTS/CC
IC609 GAIN CONT
IC605 MUTE
IC609 CANCEL
S602 RTS (CC) / 4W
PROD ENG
IC613 LPF
IC608 AMP
PROD (X) OUT
(4W)
IC607 AMP
PROD (Y) OUT
IC600 A/D D/A
IC602 LPF
IC602 LIMIT
IC604 INV
IC606 MUTE
IC604 ATT
ENG (X,Y) IN
S601 RTS/CC
IC610 GAIN CONT
IC606 MUTE
IC610 CANCEL
S603 RTS (CC) / 4W
IC614 LPF
IC611 AMP
ENG (X) OUT
(4W)
IC612 AMP
ENG (Y) OUT
FP-INCOM
IC405 LPF
IC405 LIMIT
PANEL INCOM T (X) IN
FP-INCOM ,PGM
IC401 A/D D/A
IC409 LPF
IC410 LPF
IC407 AMP
IC407 AMP
PANEL INCOM R (X) OUT
PANEL PGM (X) OUT
IC404 MUTE CONT
CAM-SHORT-STATUS
CABLE-OPEN-STATUS
STB-INCOM
IC402 A/D D/A
IC403 LPF
IC403 LIMIT
IC404 MUTE
IC406 LPF
STBY-INOCM RX
IC404 MUTE
IC406 LIMIT
STBY-INCOM TX

CPU ADRS BUS 8
CPU DATA BUS 8
CPU CONTROL BUS 4
IC200 IC201 IC202
IC203 ADRS DEC
CS
CS
IC206 PIO
D104
S1
AD/DA RST
PANEL-PGM-ON,MIC-CTL-ON,PRIV/ENG,PRIV/PROD 4

AUDIO, TALLY
AVP-6

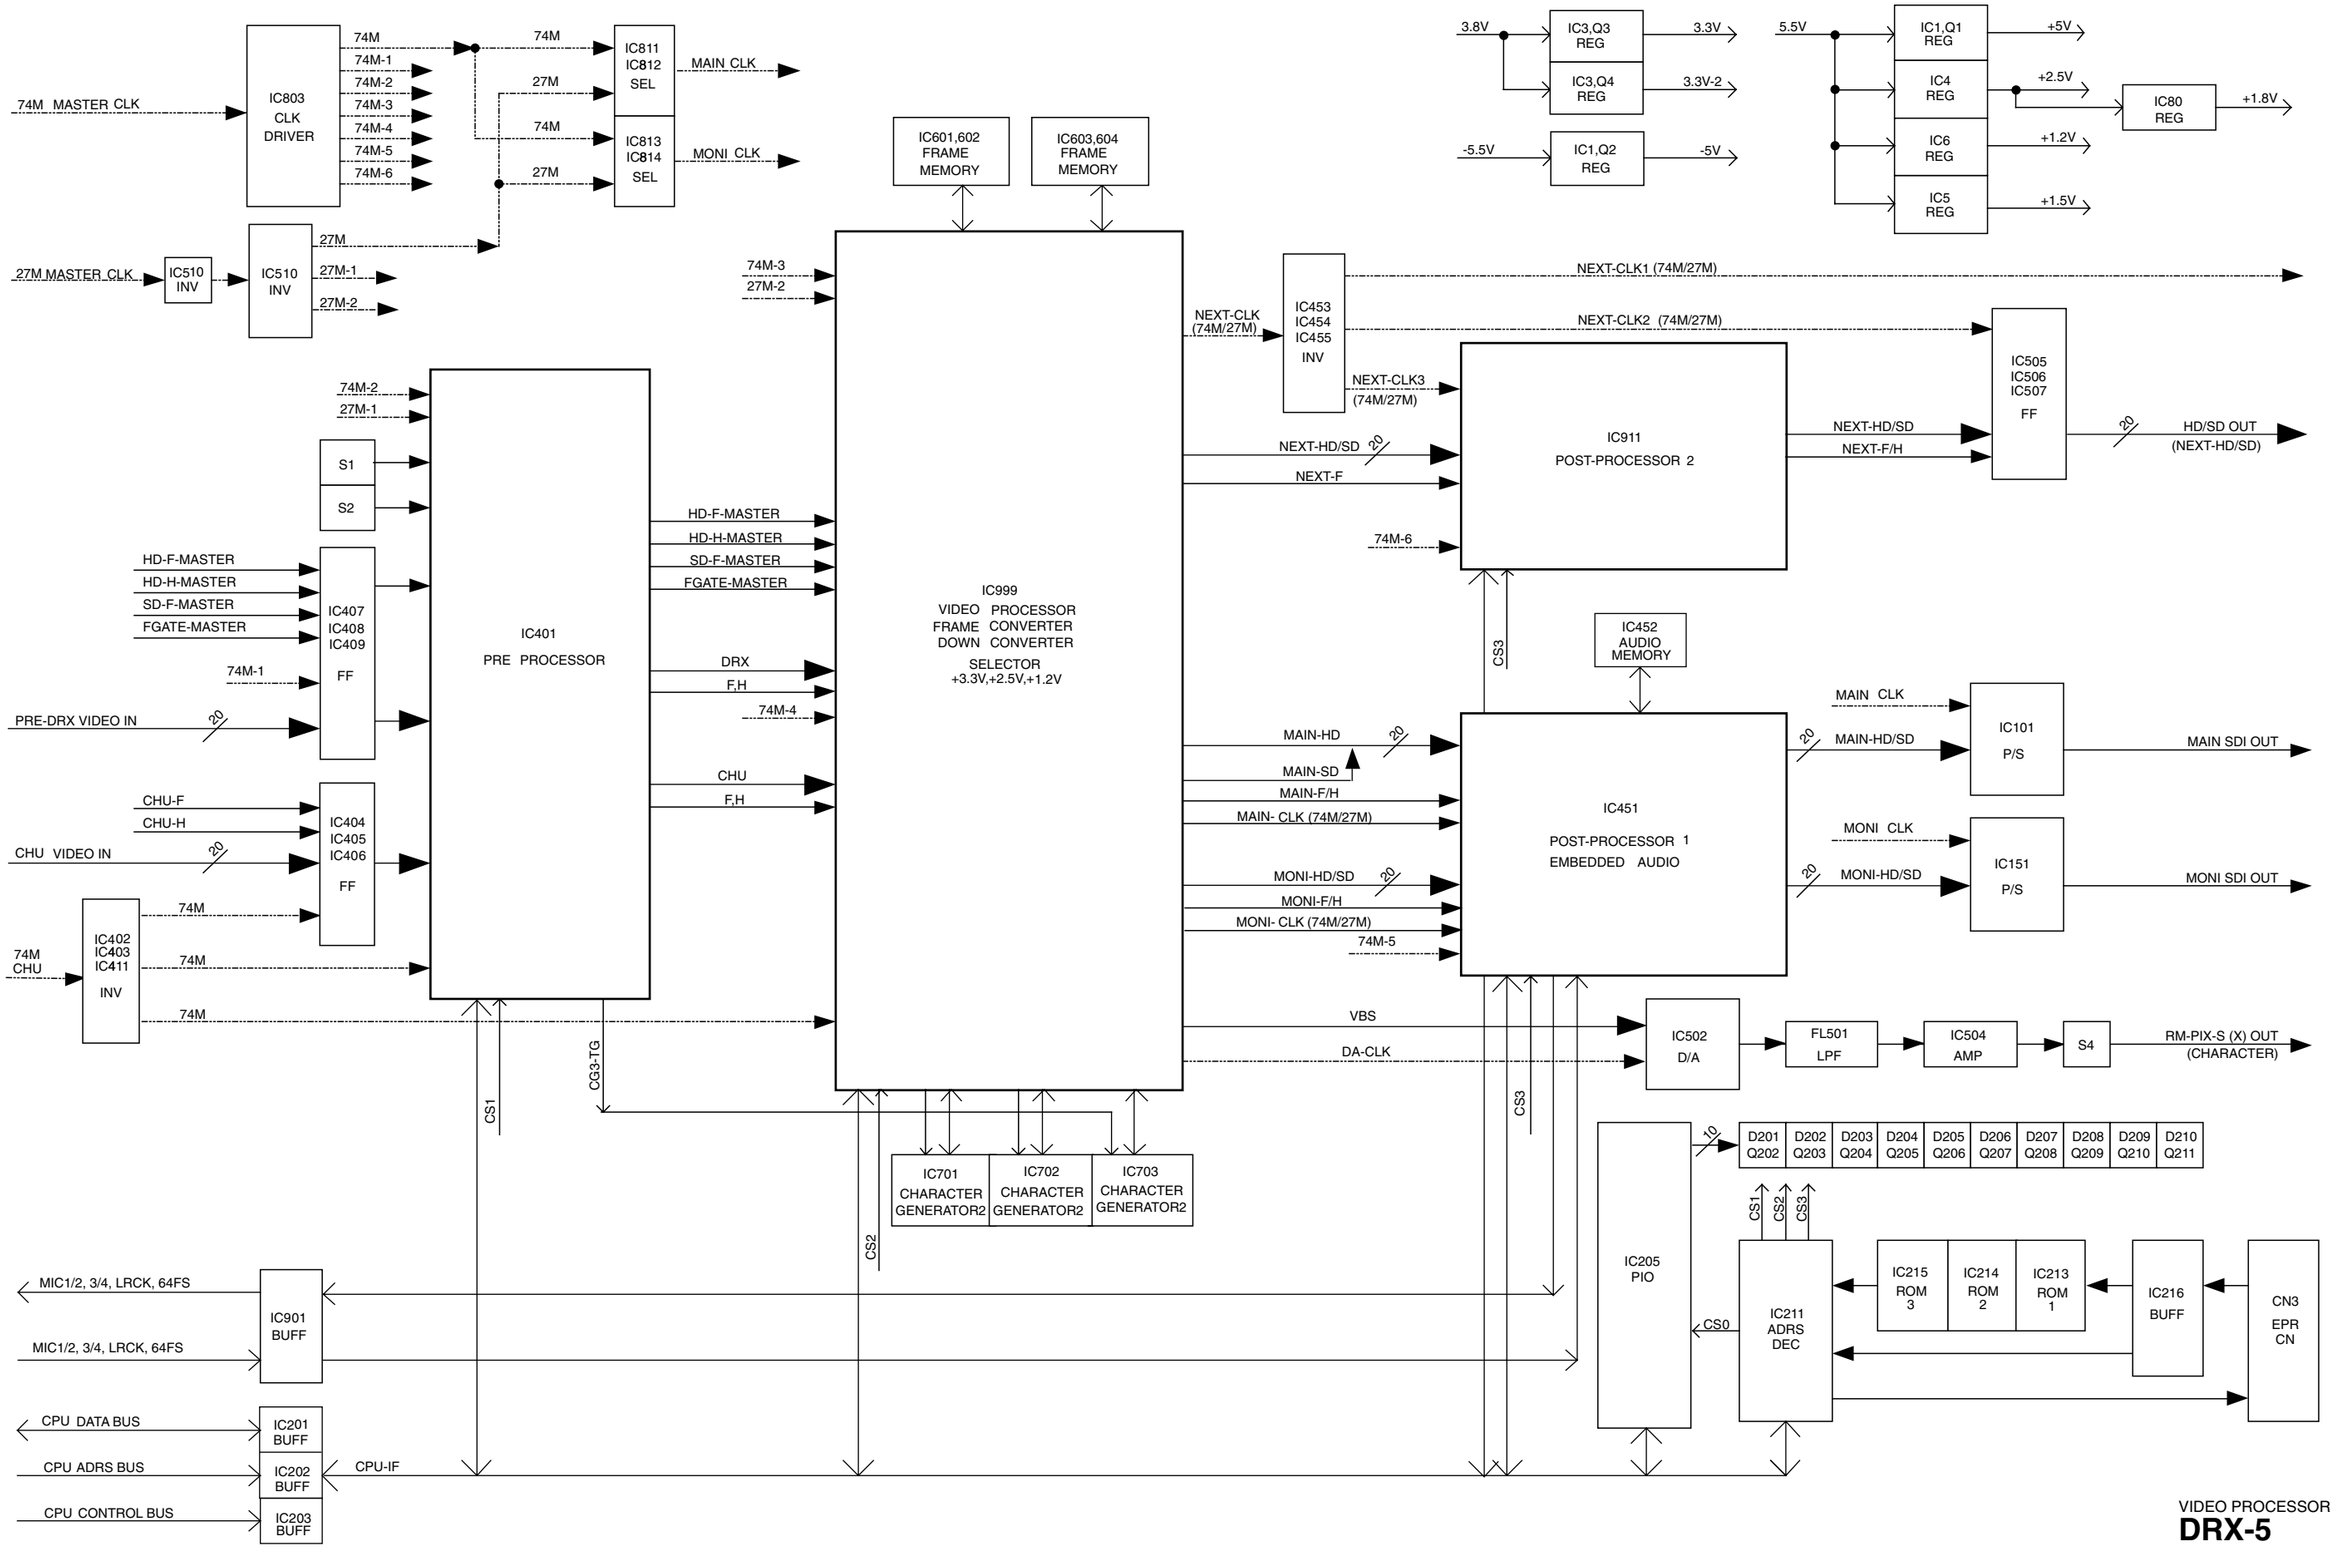


VIDEO PROCESSOR
DRX-5

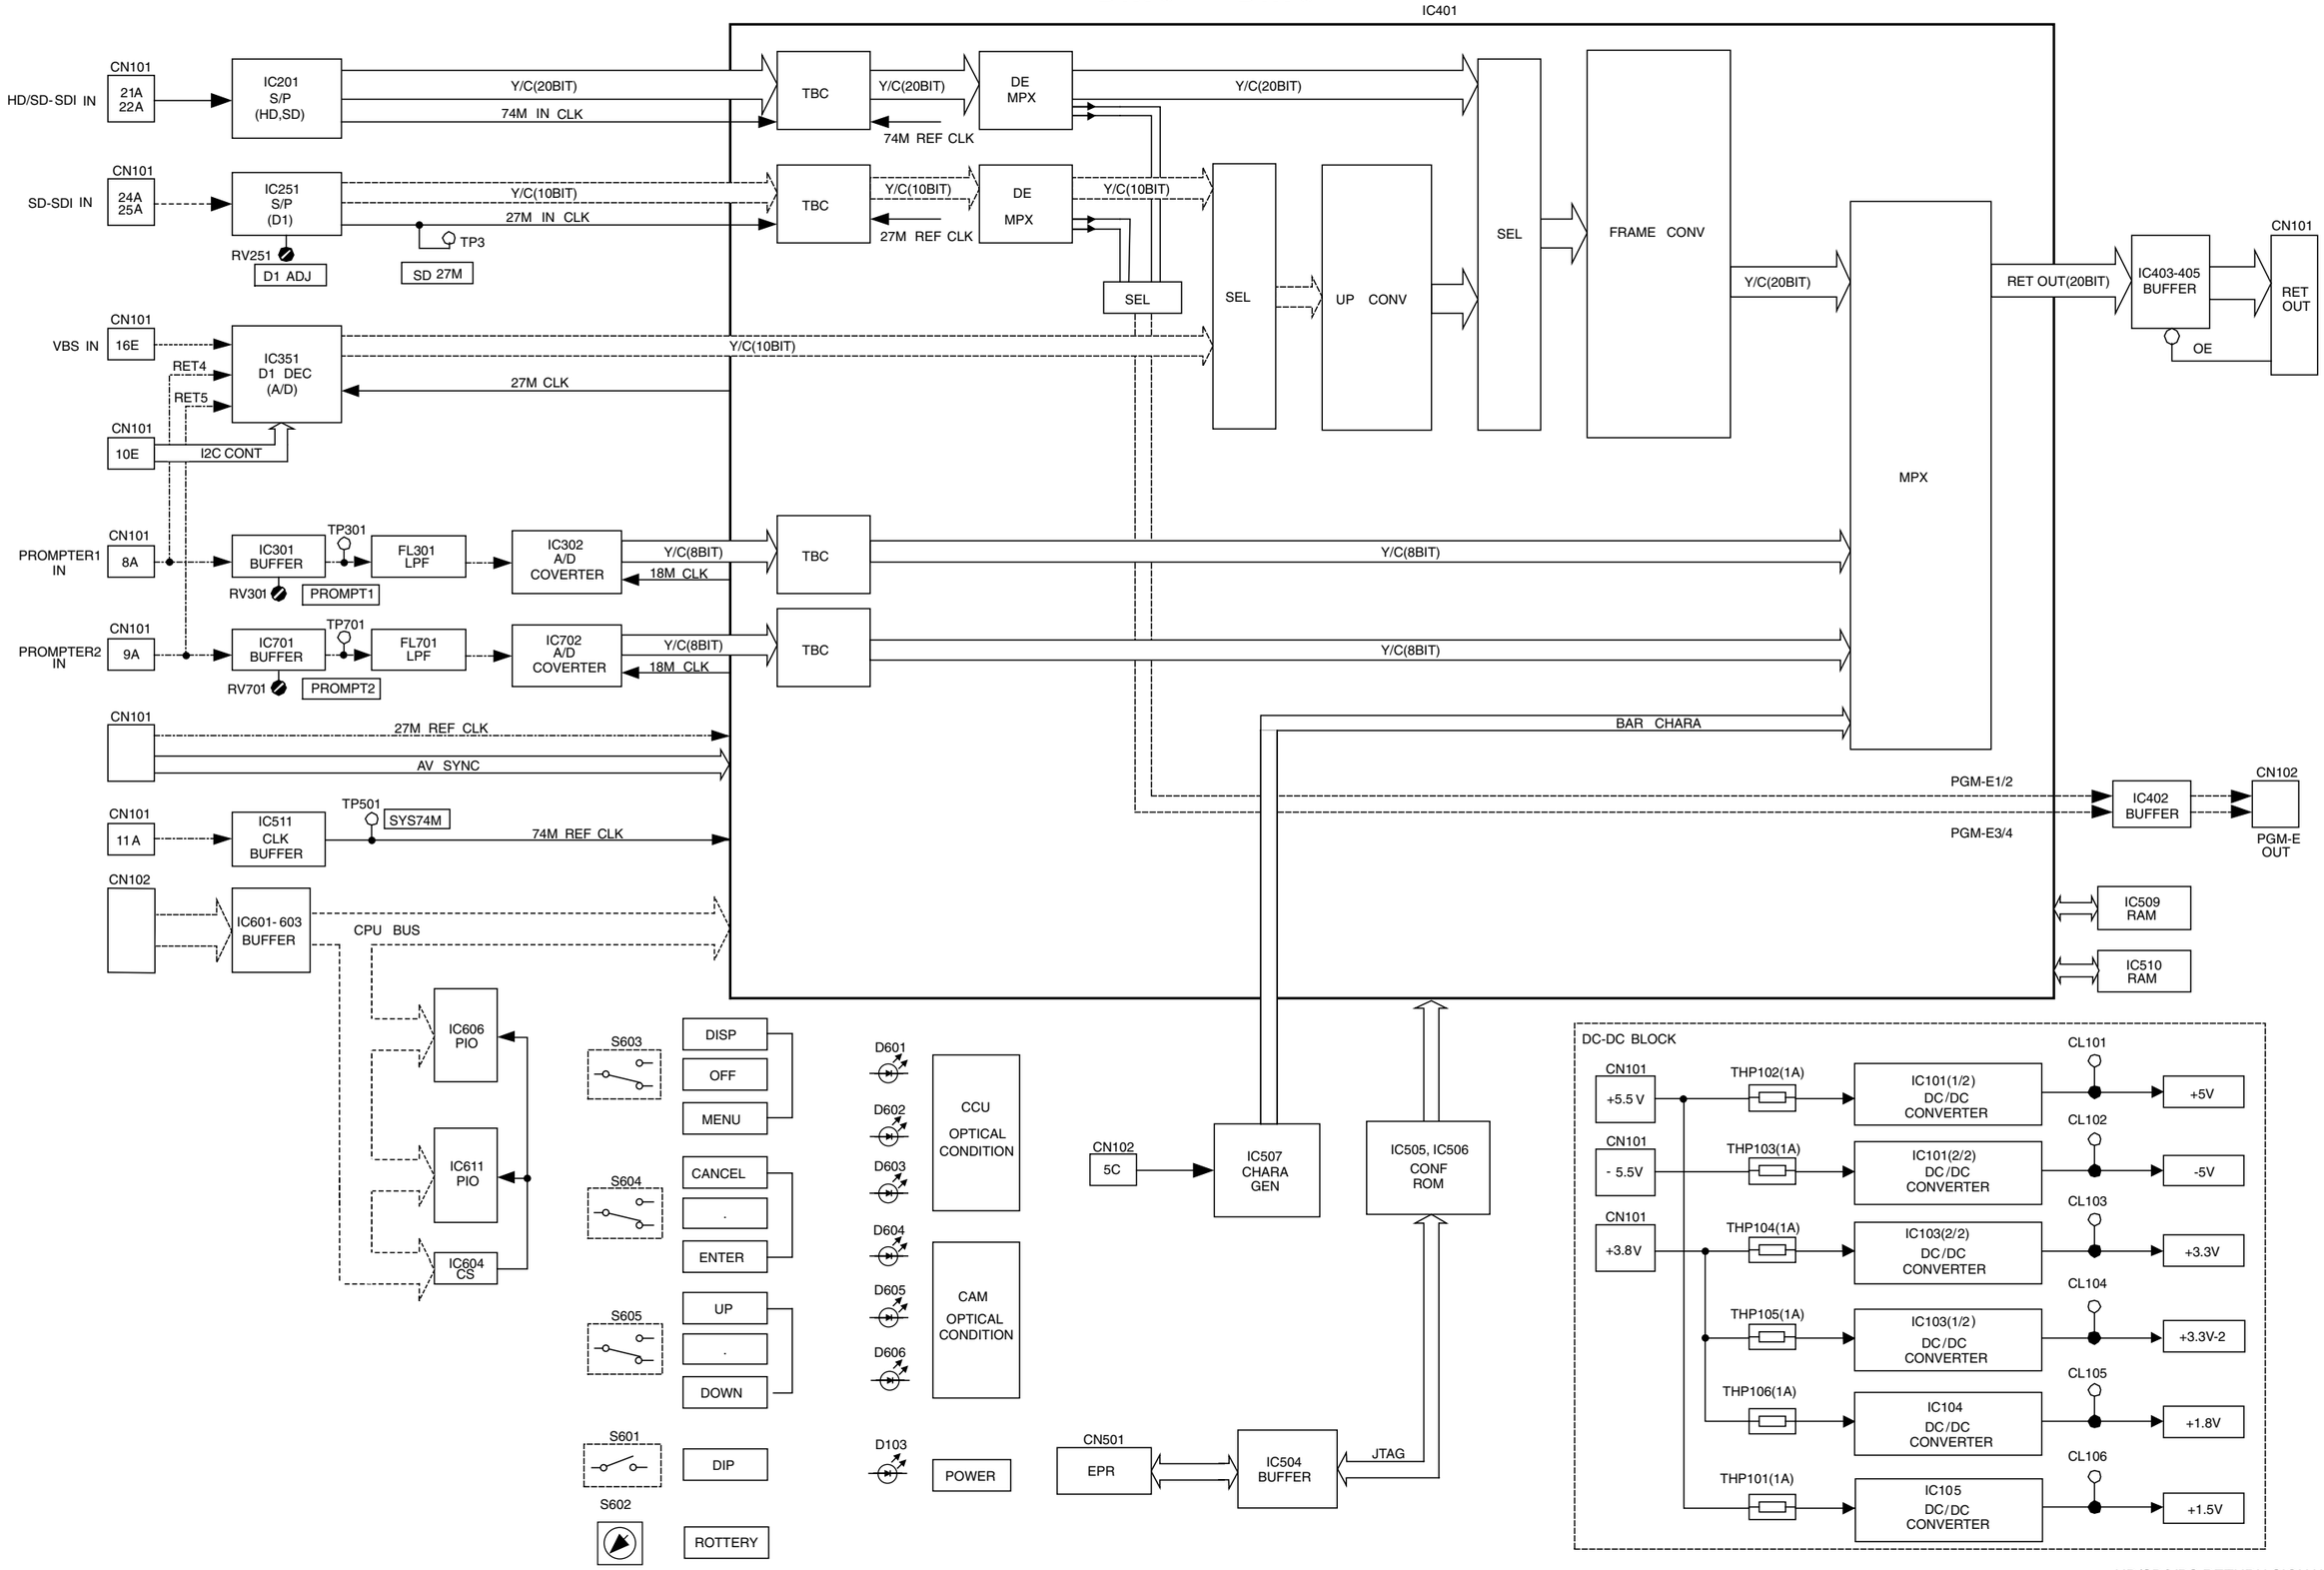


HD/SD/VBS RETURN SIGNAL CONVERTER

DTX-5

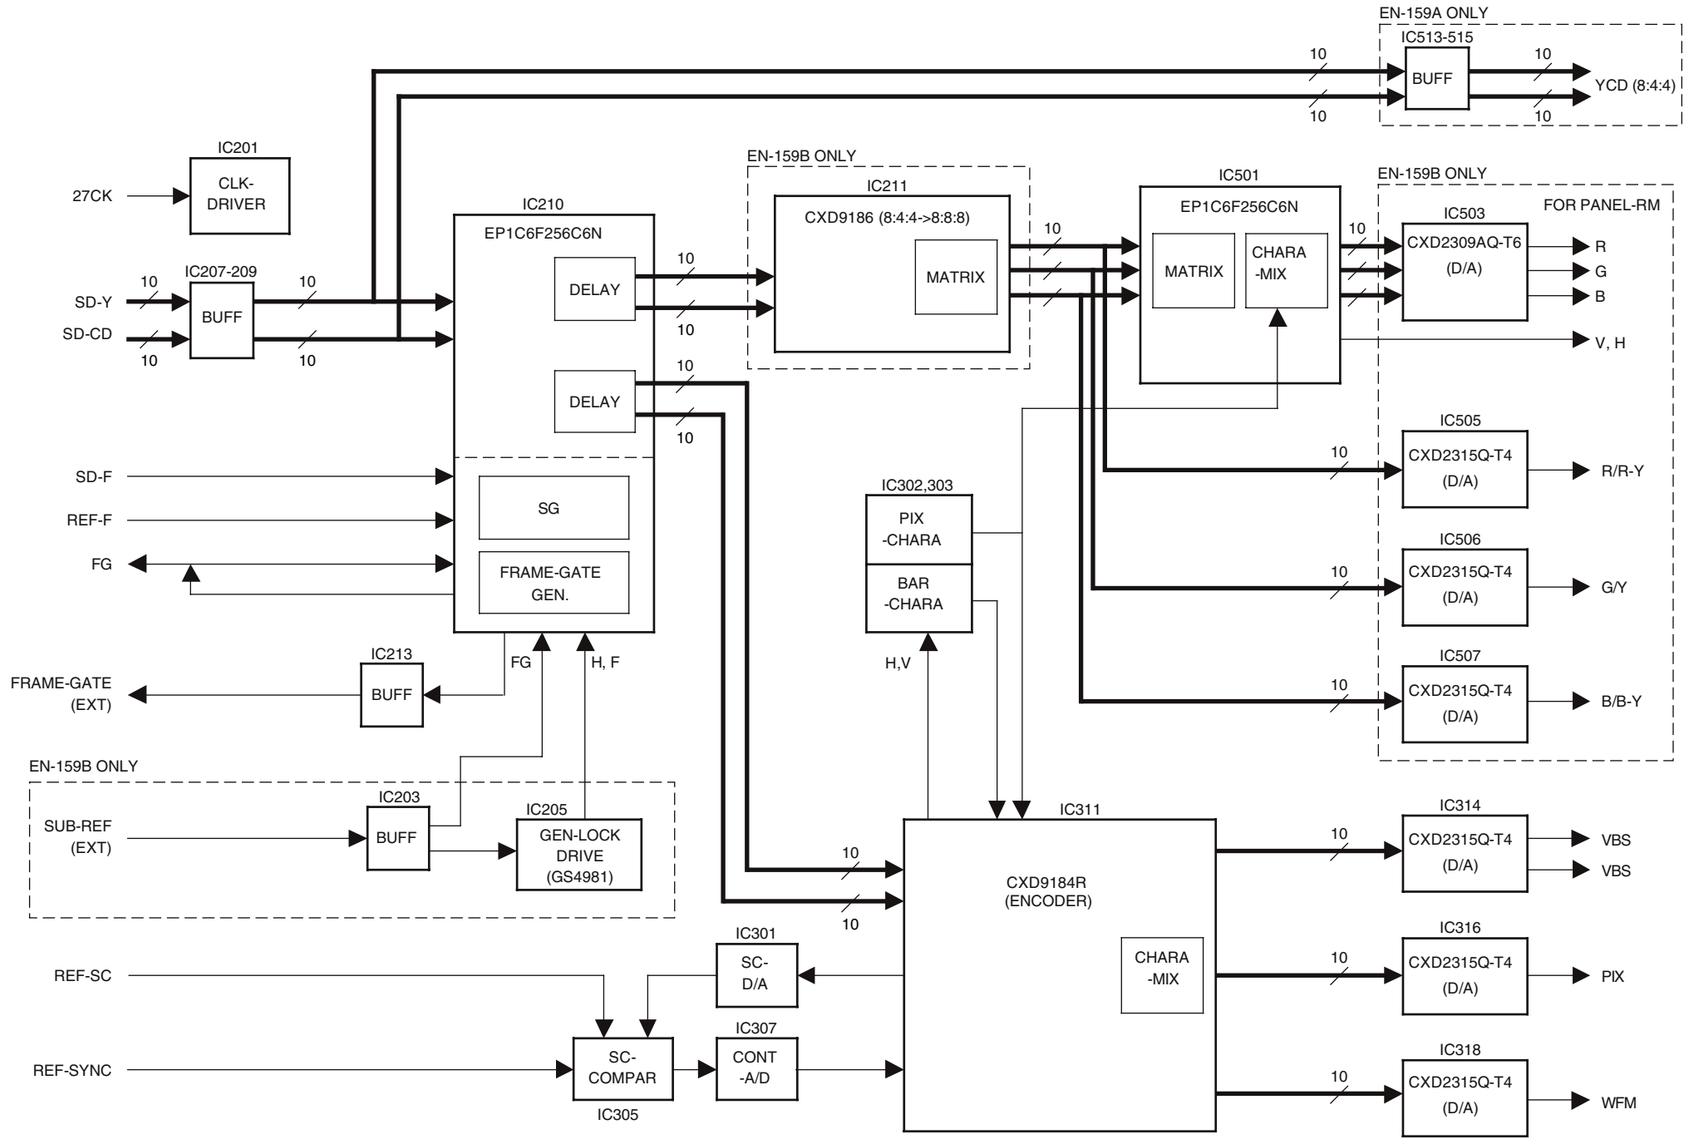


SD ENCODER UNIT
EN-159A

SD ENCODER & COMPONENT VIDEO UNIT
EN-159B

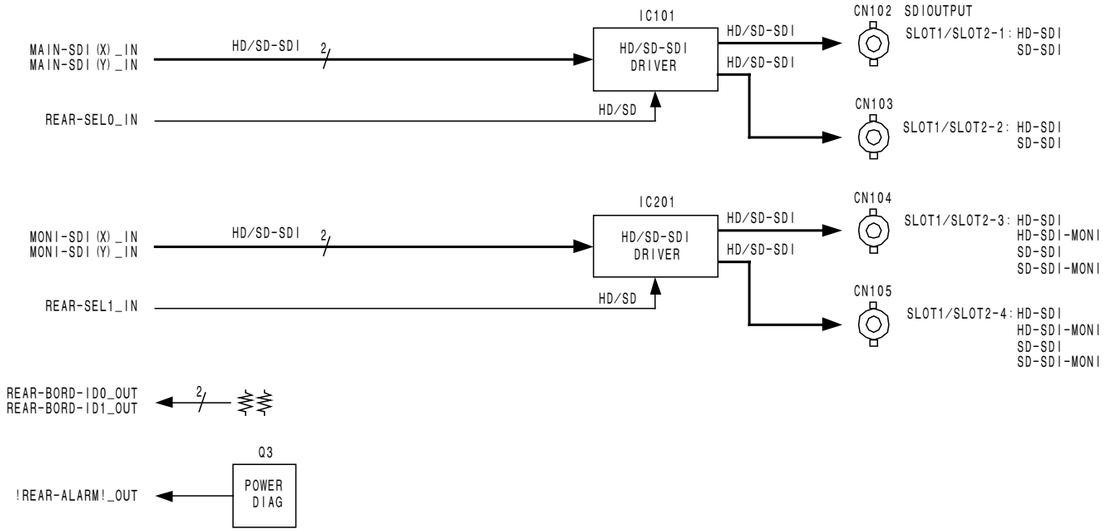


SDI OUTPUT
HIF-25

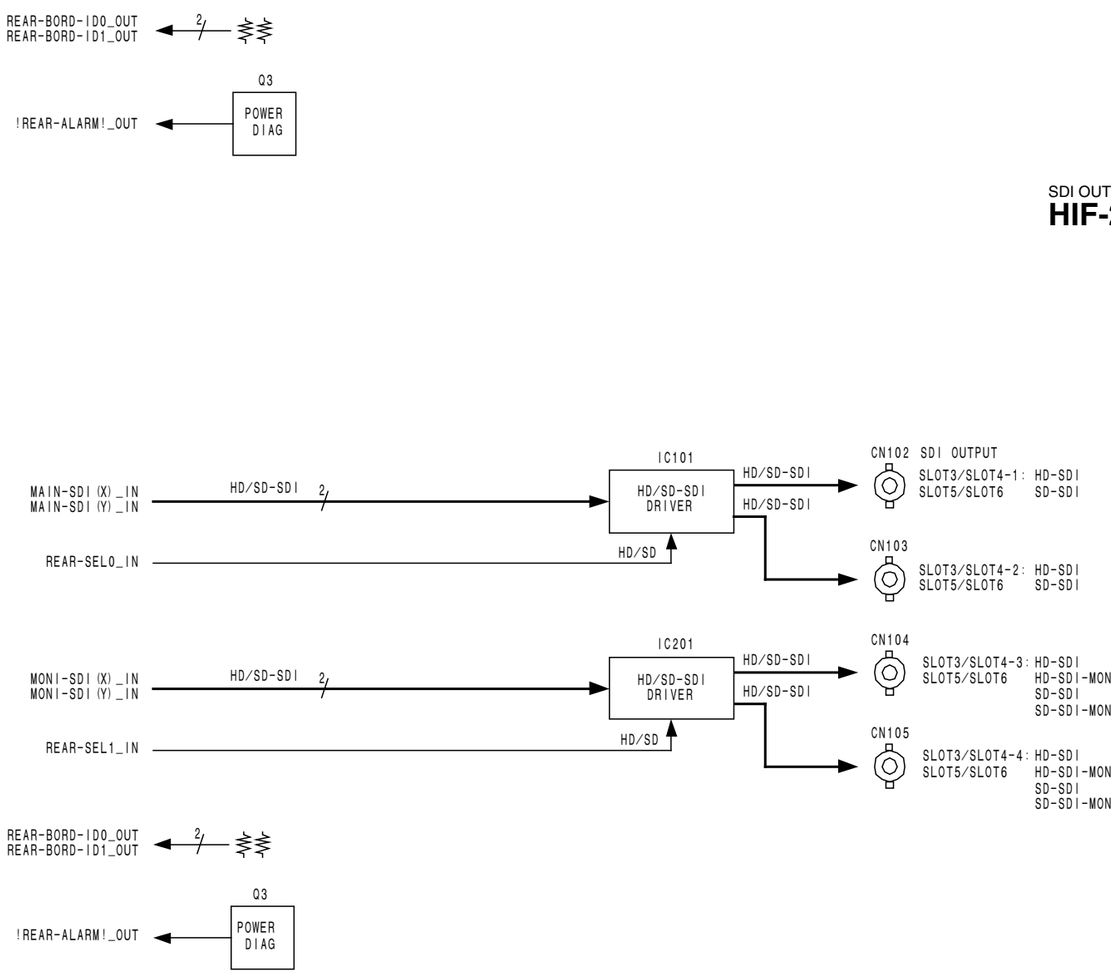


SDI OUTPUT
HIF-26


HIF-25, HIF-26, HIF-27, SDI-85

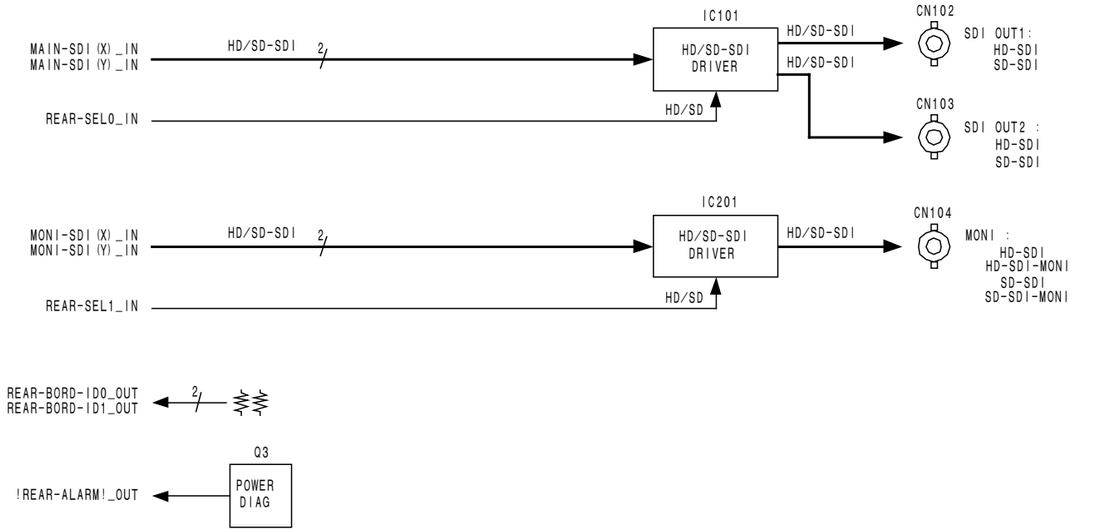

SDI OUTPUT
HIF-27

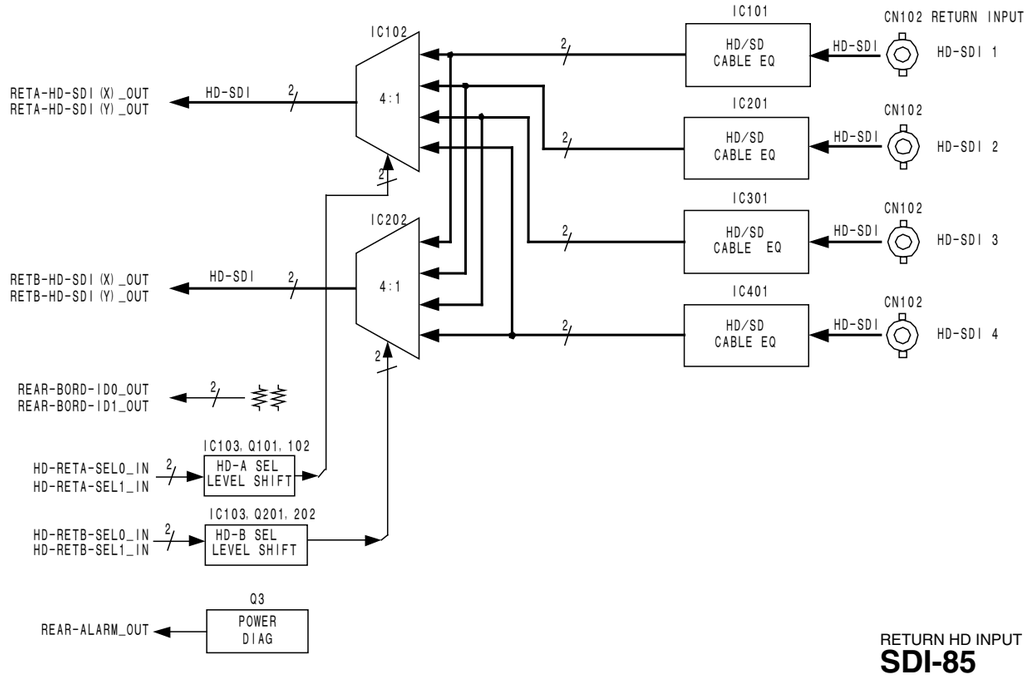


RETURN HD INPUT
SDI-85

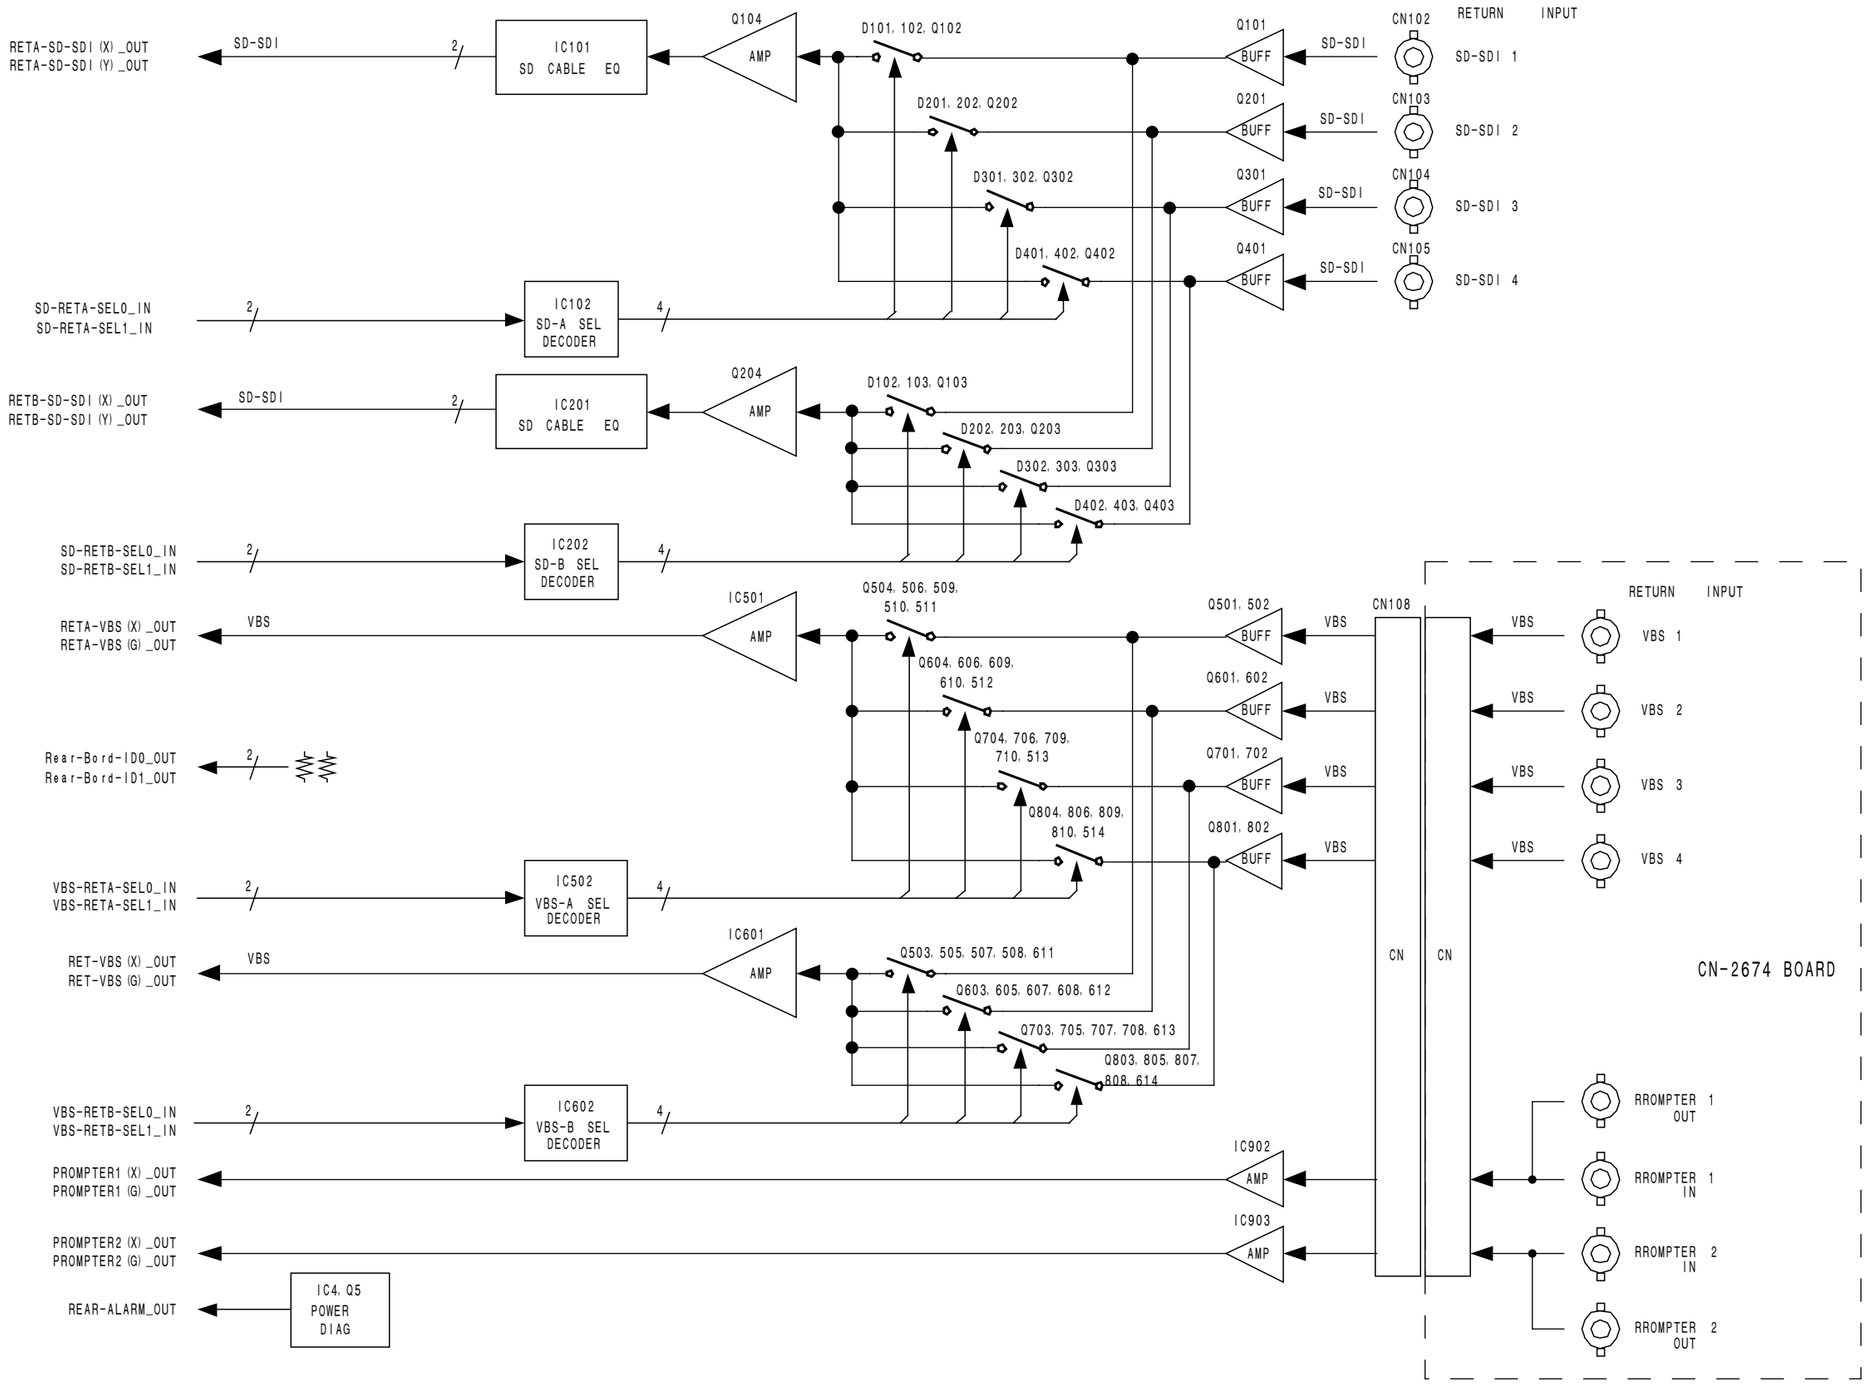


CONNECTOR (VBS PROMPTER)
CN-2674

RETURN SD INPUT
SDI-86

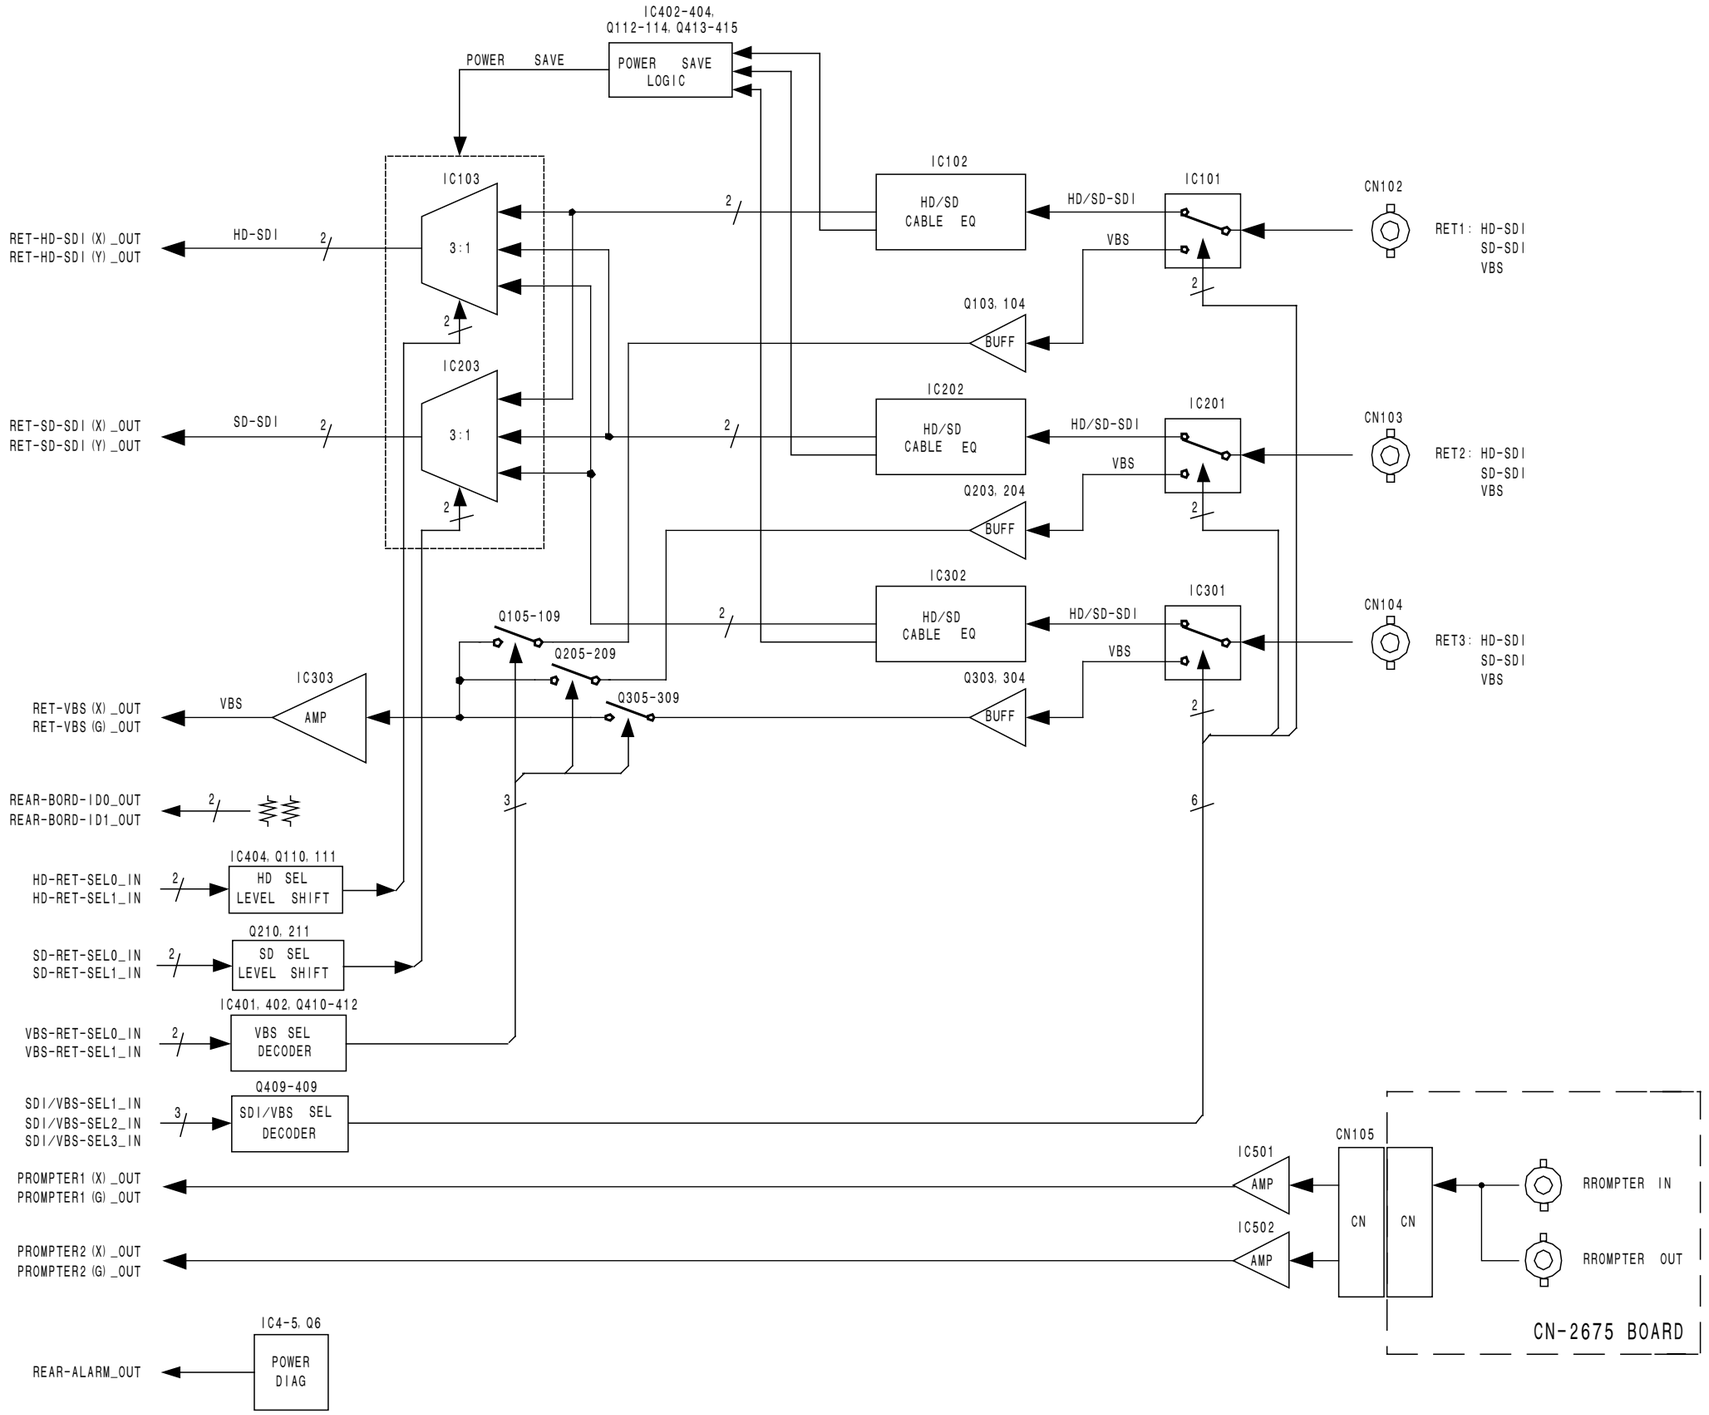


CONNECTOR (RCP/CNU/TRUNK)
CN-2675


RETURN INPUT
SDI-87

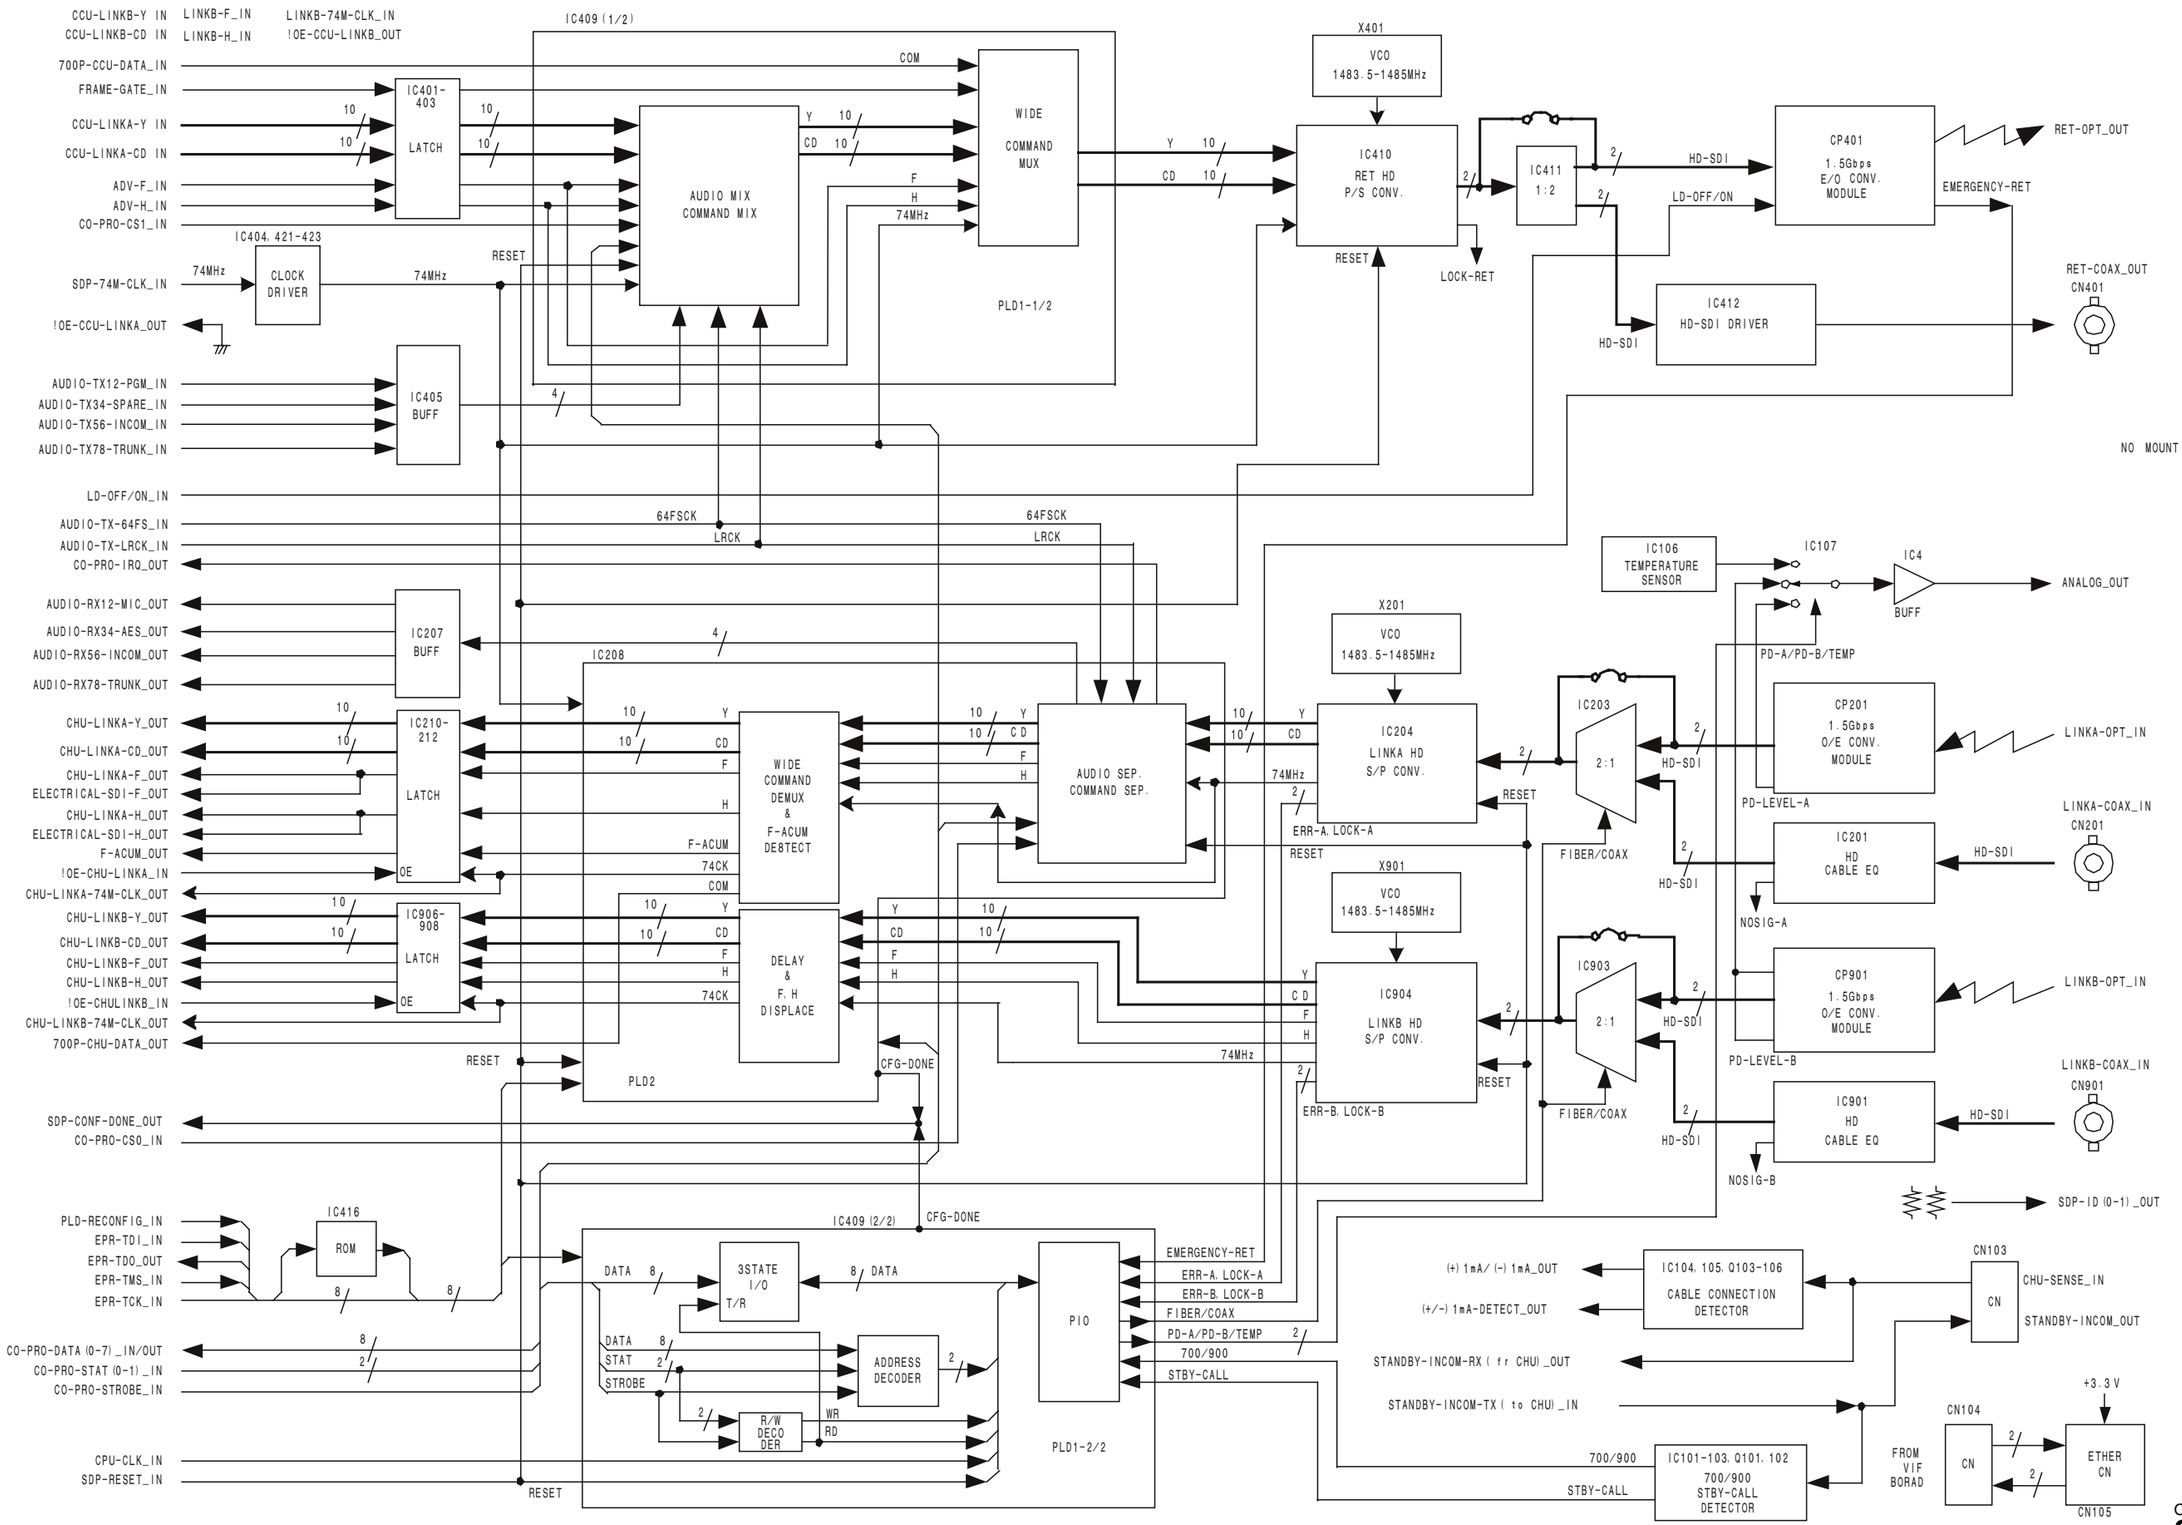


OPTICAL INTERFACE
SDP-12

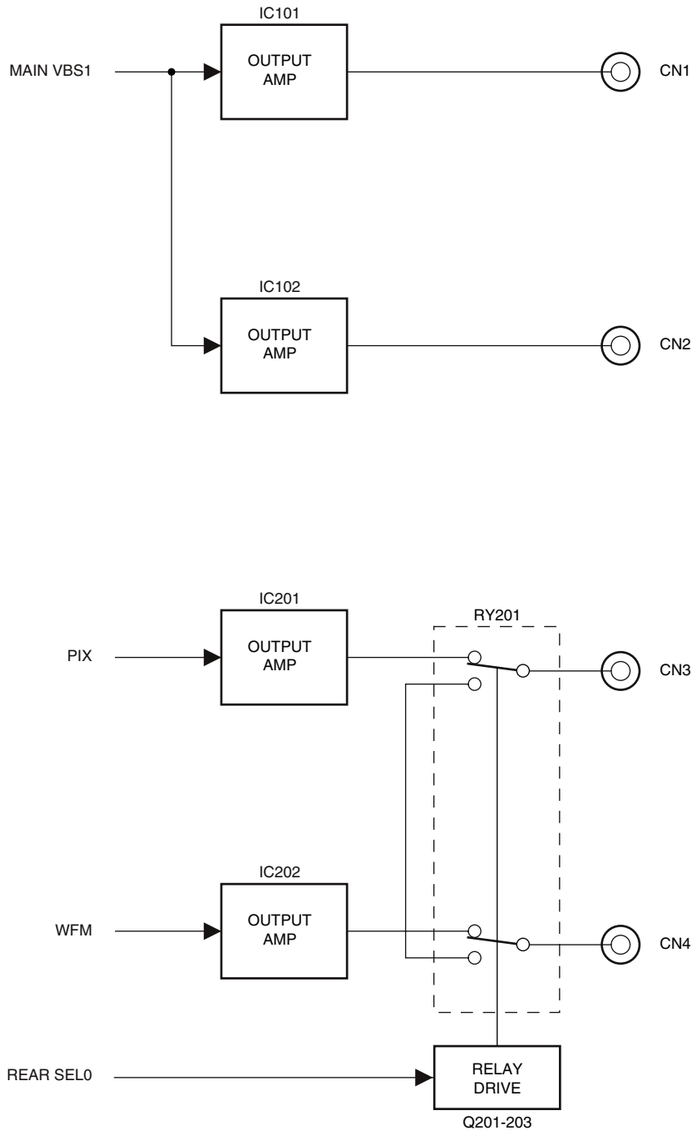



VDA-64A

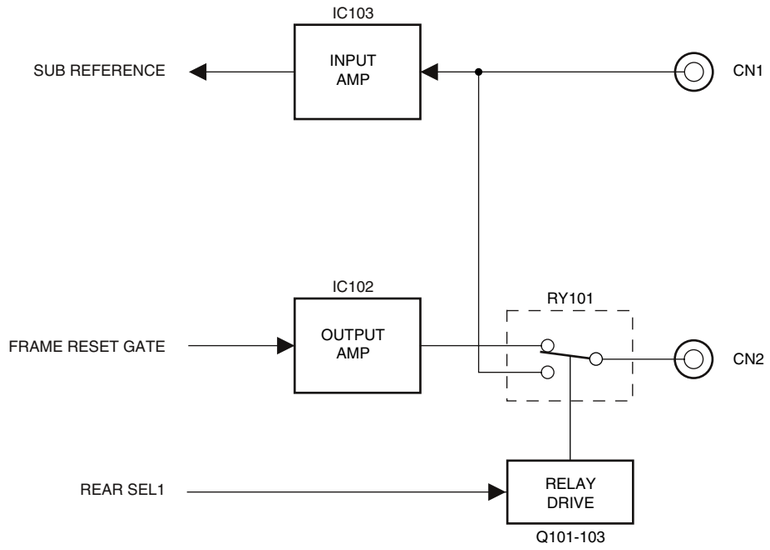

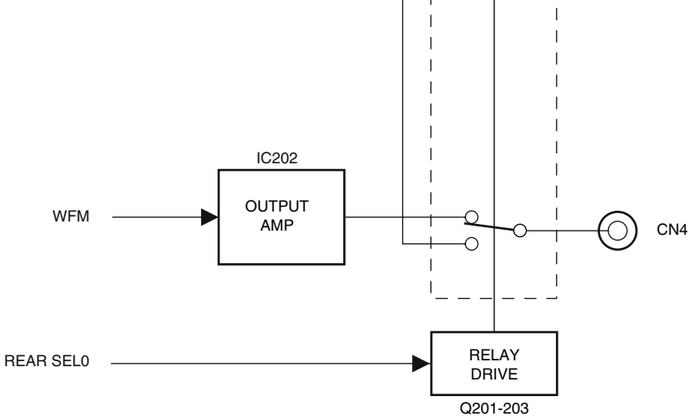

VDA-64B

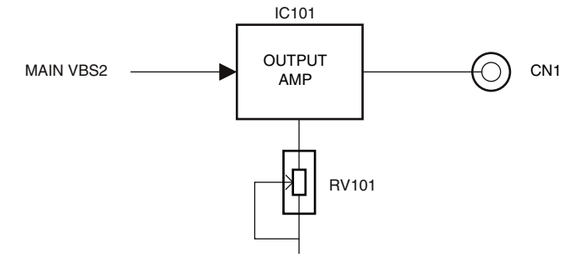

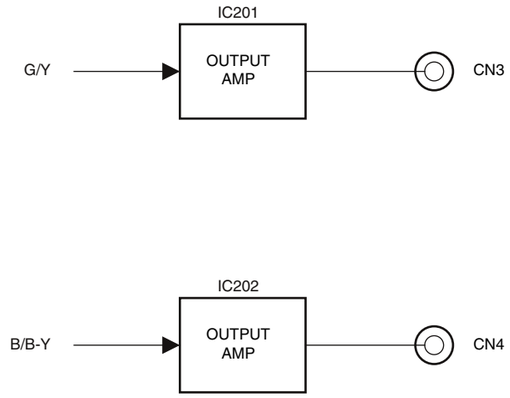



VDA-64C

SD ANALOG VIDEO OUTPUT
VDA-64A

FRAME REFERENCE INPUT &
SD ANALOG VIDEO OUTPUT
VDA-64B

SD ANALOG VIDEO OUTPUT
VDA-64C

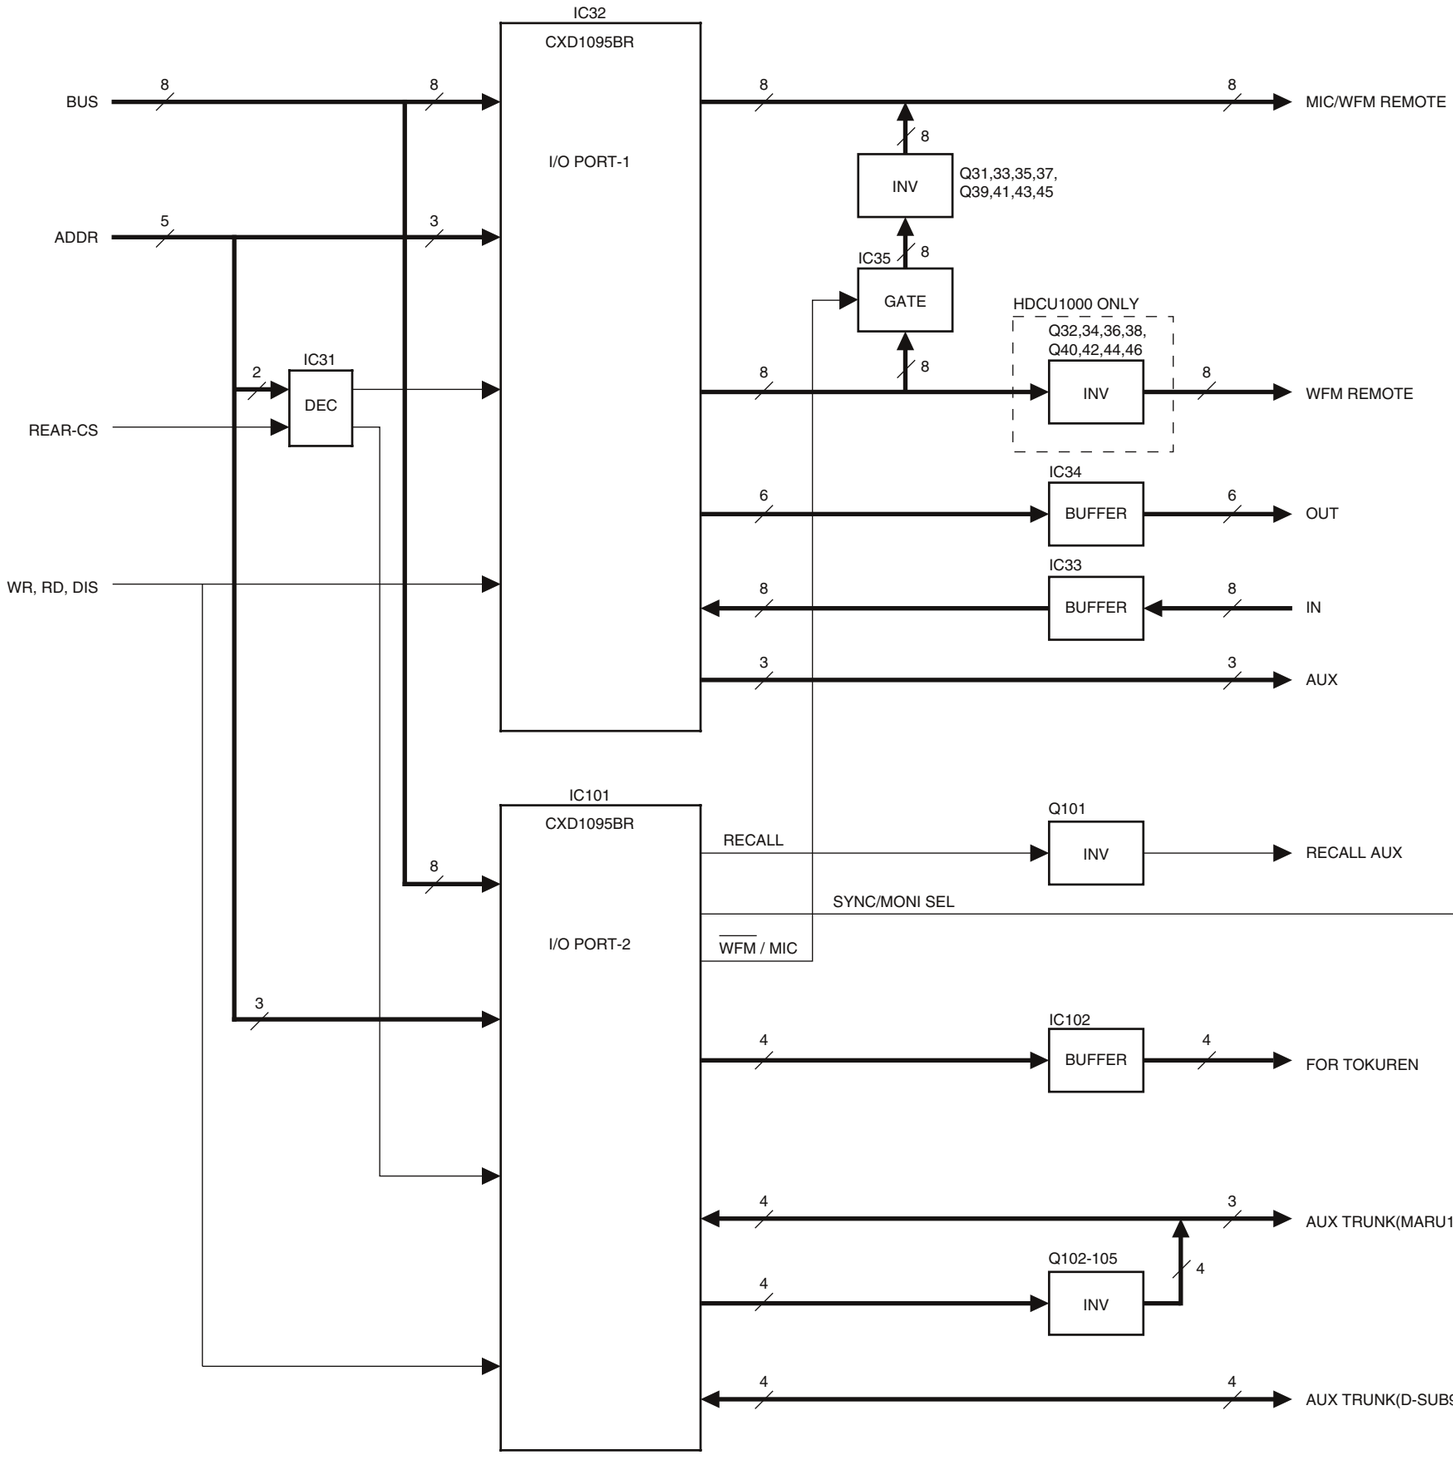

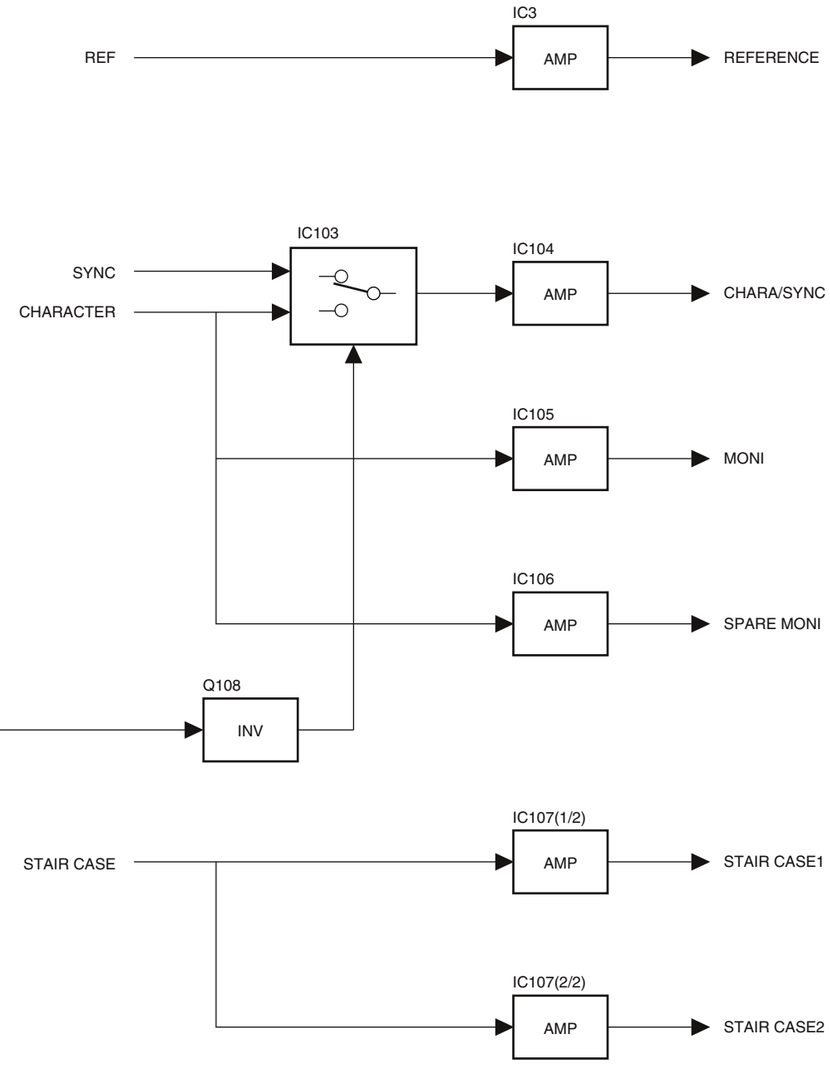

CONNECTOR INTERFACE
VIF-34

CONNECTOR INTERFACE
VIF-34B

Section 7
Schematic Diagrams

Index

Board Name	Page
ADO-10	7-2
AT-167	7-3
AU-302	7-13
AU-303/303G	7-15
AVP-6	7-17
CN-2672	7-25
CN-2673	7-26
CN-2674	7-26
CN-2675	7-27
CN-2676	7-28
CN-2677	7-28
CN-2678	7-29
CN-2700	7-29
CN-2718	7-29
CN-2805	7-29
CNB-21	7-30
CNB-22	7-32
DRX-5	7-33
DTX-5	7-44
DU-390	7-51
EN-159A	7-53
EN-159B	7-61
HIF-25	7-69
HIF-26	7-70
HIF-27	7-71
MB-1071	7-72
MB-1072	7-76
SDI-85	7-79
SDI-86	7-80
SDI-87	7-81
SDP-12	7-83
VDA-64A	7-94
VDA-64B	7-95
VDA-64C	7-96
VIF-34B	7-97
VIF-34	7-101
Frame Wiring	7-104

Board List


Board Name	HDCU1000	HDCU1500	HKCU1001	HKCU1003	HKCU1005
ADO-10/10G*	○	○	–	–	–
AT-167	○	○	–	–	–
AU-302	○	–	–	–	–
AU-303/303G*	–	○	–	–	–
AVP-6	○	○	–	–	–
CN-2672/2672G*	○	–	–	–	–
CN-2673	○	–	–	–	–
CN-2674/2674G*	○	–	–	–	–
CN-2675/2675G*	–	○	–	–	–
CN-2676	–	○	–	–	–
CN-2677/2677G*	–	○	–	–	–
CN-2678	–	○	–	–	–
CN-2700	○	–	–	–	–
CN-2718	○	–	–	–	–
CN-2805/2805G*	○	–	–	–	–
CNB-21/21G*	○	–	–	–	–
CNB-22/22G*	–	○	–	–	–
DRX-5	○	○	–	–	○
DTX-5	○	○	–	–	–
EN-159A	–	–	○	–	–
EN-159B	–	–	–	○	–
HIF-25	○	–	–	–	–
HIF-26	–	–	–	–	○
HIF-27	–	○	–	–	–
MB-1071	○	–	–	–	–
MB-1072/1072G*	–	○	–	–	–
SDI-85	○	–	–	–	–
SDI-86/86G*	○	–	–	–	–
SDI-87/87G*	–	○	–	–	–
SDP-12	○	○	–	–	–
VDA-64A	–	–	○	○	–
VDA-64B	–	–	–	○	–
VDA-64C	–	–	–	○	–
VIF-34B/34BG*	–	○	–	–	–
VIF-34/34G*	○	–	–	–	–

注意

＊印の基板は2種類ありますが，マニュアル内の記載では簡素化するため基板名には“G”を付けていません。

Note

The board with an asterisk (*) has two types. However, the board name in the manual does not have “G” at the end for simplification.

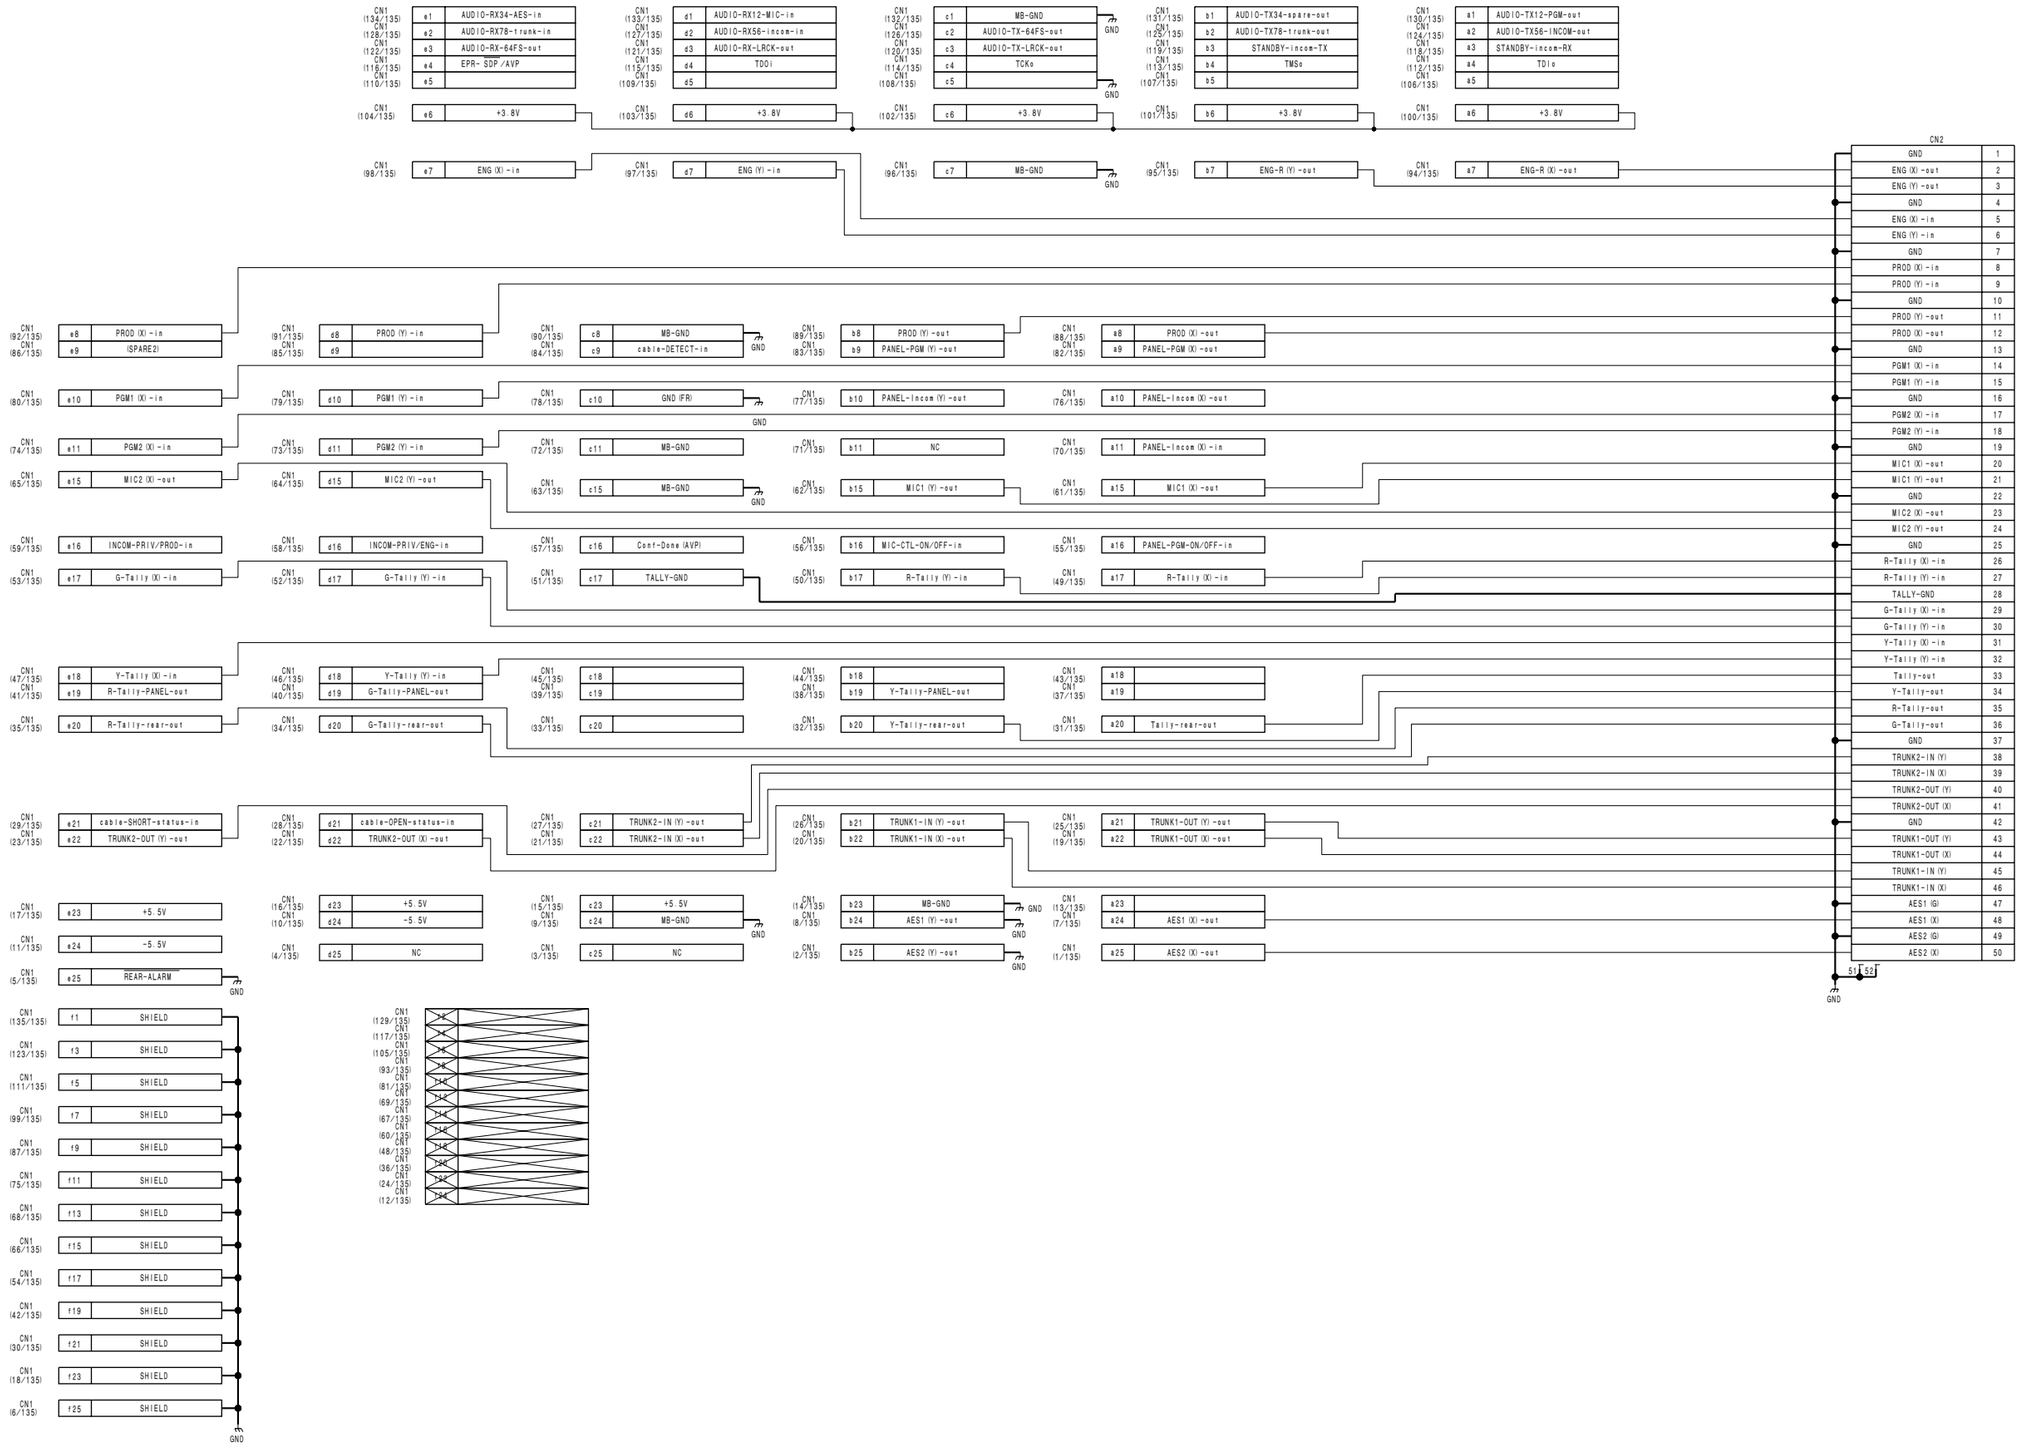



ADO-10

BOARD NO. 1-867-886-11

HDCU1000_ADO-10_011_1

MARK	CHANGED INFORMATION	Lot No.
*	R2 470 → 330	12-

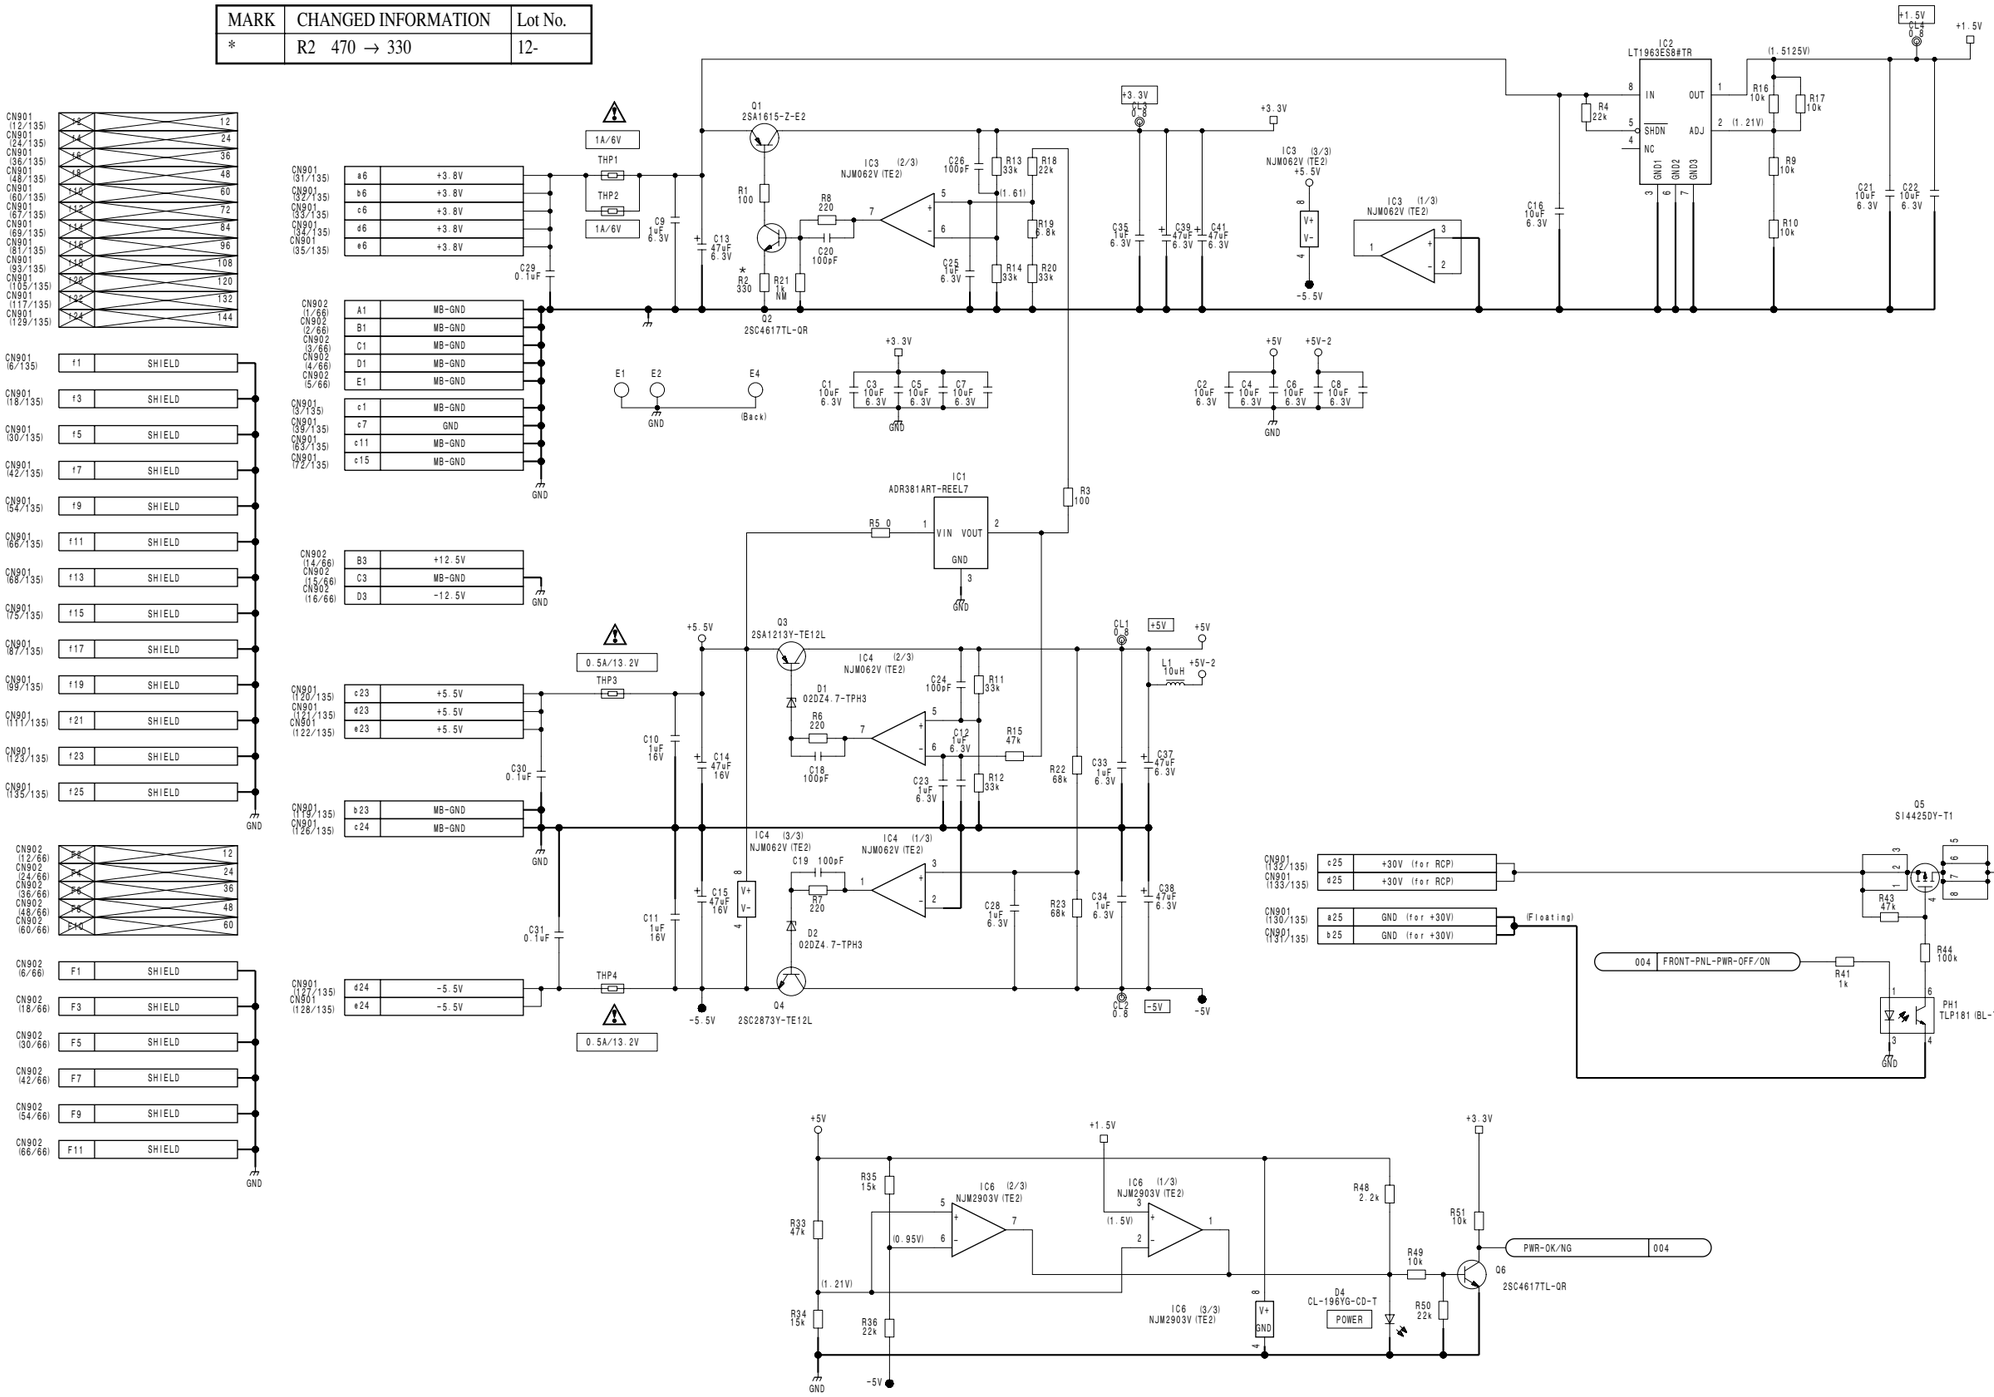


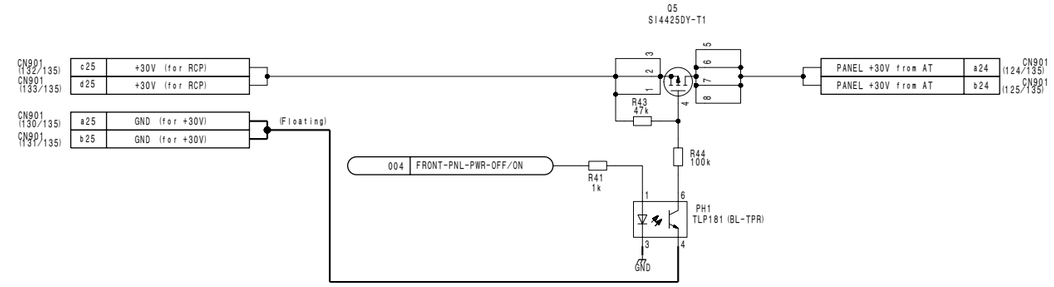


CN901 (46/135) CN901 (47/135) CN901 (82/135) CN901 (97/135) CN901 (98/135) CN901 (109/135) CN901 (110/135) CN901 (113/135)	d8	Prompter (G) -Rear-if
	e8	Prompter (X) -Rear-if
	b11	nc
	d19	RM-PIX-S (G) -if
	e19	RM-PIX-S (X) -if
	d21	RM-PIX-M (G) -if
	e21	RM-PIX-M (X) -if
	b22	

CN902 (28/66)	D5	WFM-STAIR-CASE-if

AT-167 (1/6)
BOARD NO. 1-867-877-11, 12
HDCU1000_AT-167_011_1

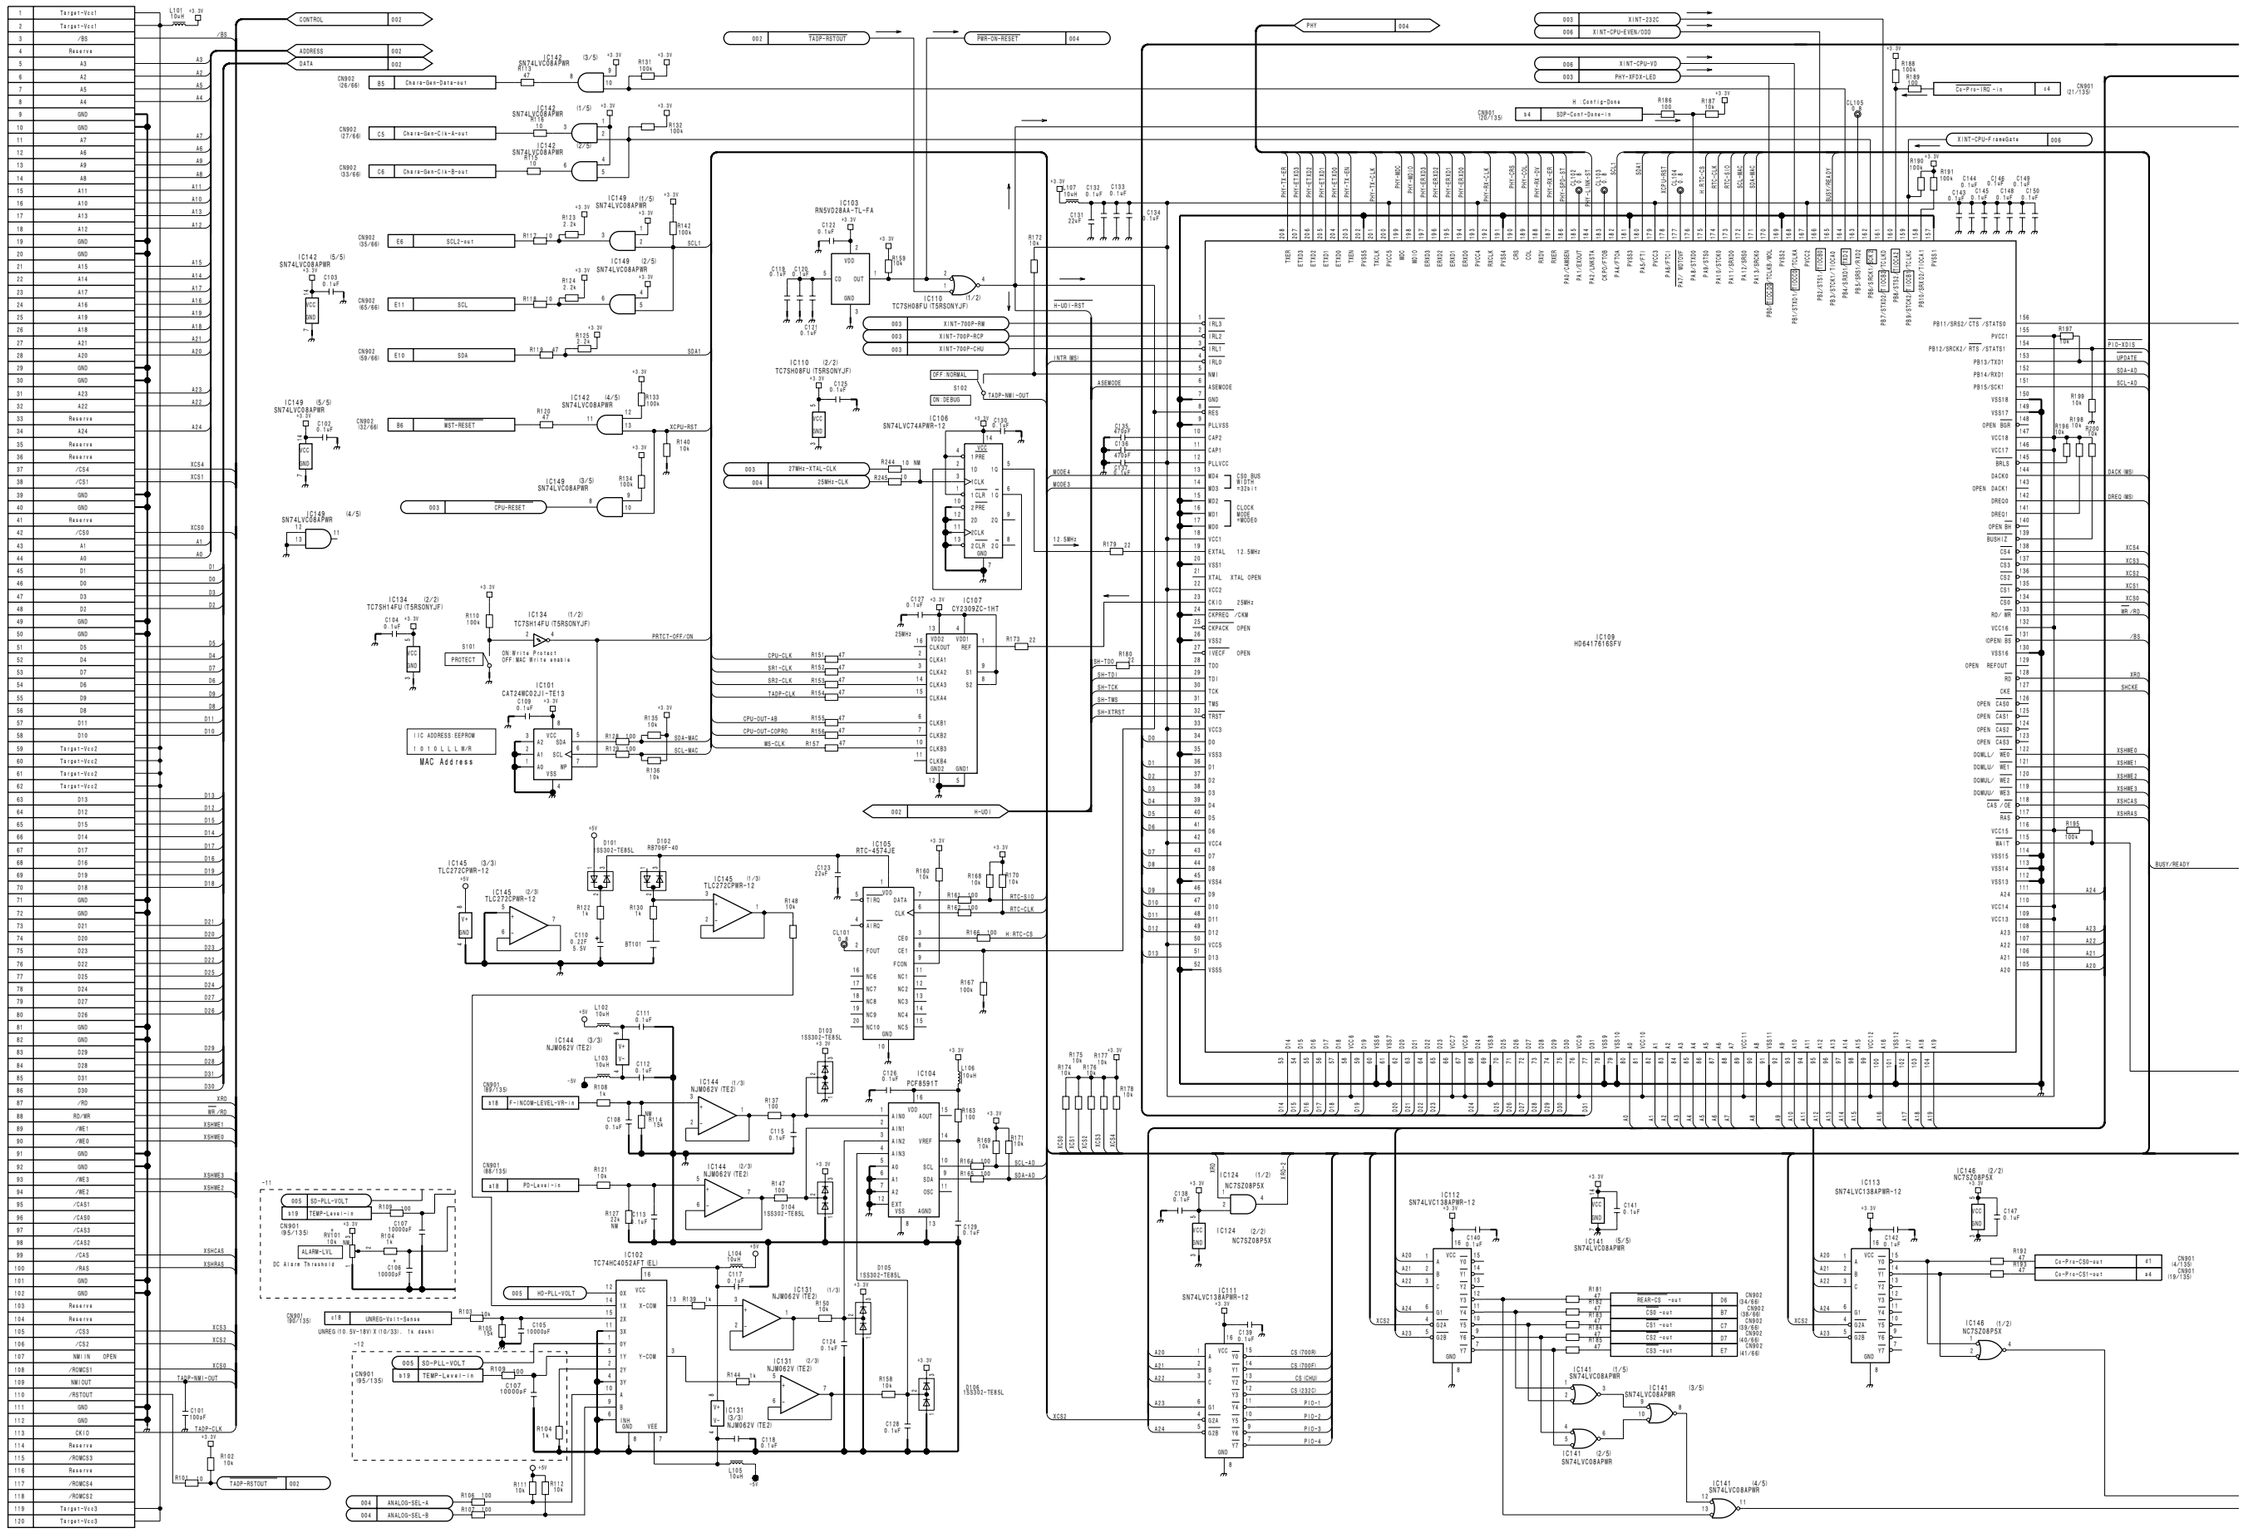

CN101
Target-Vcc1
Target-Vcc2
Target-Vcc3
Reserve
/BS
/CS4
/CS1
/CS0
/RD
/WR
/WE1
/WE0
/WE3
/WE2
/CAS1
/CAS0
/CAS3
/CAS2
/CAS
/RAS
/ROMCS1
/ROMCS3
/ROMCS2
/RSTOUT
NMI IN OPEN
NMI OUT
CK10
CONTROL
ADDRESS
DATA
TADP-RSTOUT
PWR-ON-RESET
PHY
XINT-232C
XINT-CPU-EVEN/ODD
XINT-CPU-VD
PHY-3FDX-LED
H Config-Done
SDP-Cont-Done-in
Ch-Pro-INC-in
XINT-CPU-FrameGate
Chara-Gen-Data-out
Chara-Gen-Clk-A-out
Chara-Gen-Clk-B-out
SCLE-out
SCL
SDA
RST-RESET
CPU-RESET
XCPU-RST
SCL1
SDA1
SCL-AD
SDA-AD
IC109
HD64178165FV
IC110
TC7SH08FU (TSRSONYJF)
XINT-700P-RW
XINT-700P-RCP
XINT-700P-CHU
OFF NORMAL
ON:DEBUG
S102
TADP-NMI-OUT
INTR.MSI
H-UDI-RST
ASEWDDE
MODE4
MODE3
12.5MHz
27MHz-XTAL-CLK
25MHz-CLK
IC106
SN74LVC74APWR-12
IC107
CY2309ZC-1HT
CPU-CLK
GR1-CLK
GR2-CLK
TADP-CLK
CPU-OUT-AB
CPU-OUT-COPRO
MS-CLK
SH-TDO
SH-TDI
SH-TCK
SH-TMS
SH-XTRST
H-UDI
IC101
CAT24WC02JI-TE13
IIC ADDRESS:EEPROM
1 0 1 0 L L L W/R
MAC Address
SDA-MAC
SCL-MAC
IC105
RTC-4574JE
RTC-SIO
RTC-CLK
H.RTC-CS
IC102
TC74HC4052AFT (EL)
PRTCT-OFF/ON
PROTECT
ON:Write Protect
OFF:MAC Write enable
SD-PLL-VOLT
TEMP-Level-in
F-INCOM-LEVEL-VR-in
PD-Level-in
UNREG-Voltage-Sense
UNREG (10.5V~18V) X (10/33), 1k down
DC Alarm Threshold
ALARM-LVL
IC103
RN5VD28AA-TL-FA
IC104
PCF8591T
IC112
SN74LVC138APWR-12
IC111
SN74LVC138APWR-12
IC113
SN74LVC138APWR-12
IC124
NC7SZ08P5X
IC141
SN74LVC08APWR
IC142
SN74LVC08APWR
IC145
TLC272CPWR-12
IC146
NC7SZ08P5X
REAR-CS -out
CS0 -out
CS1 -out
CS2 -out
CS3 -out
CS (700R)
CS (700F)
CS (232C)
PIO-1
PIO-2
PIO-3
PIO-4
Ch-Pro-CS0-out
Ch-Pro-CS1-out
BUSY/READY
XCS0
XCS1
XCS2
XCS3
XCS4
XCS5
XCS6
XSHWE0
XSHWE1
XSHWE2
XSHWE3
XSHCAS
XSHRAS
DACK (MSI)
DREQ (MSI)
PIO-XSIS
UPDATE
SDA-AD
SCL-AD

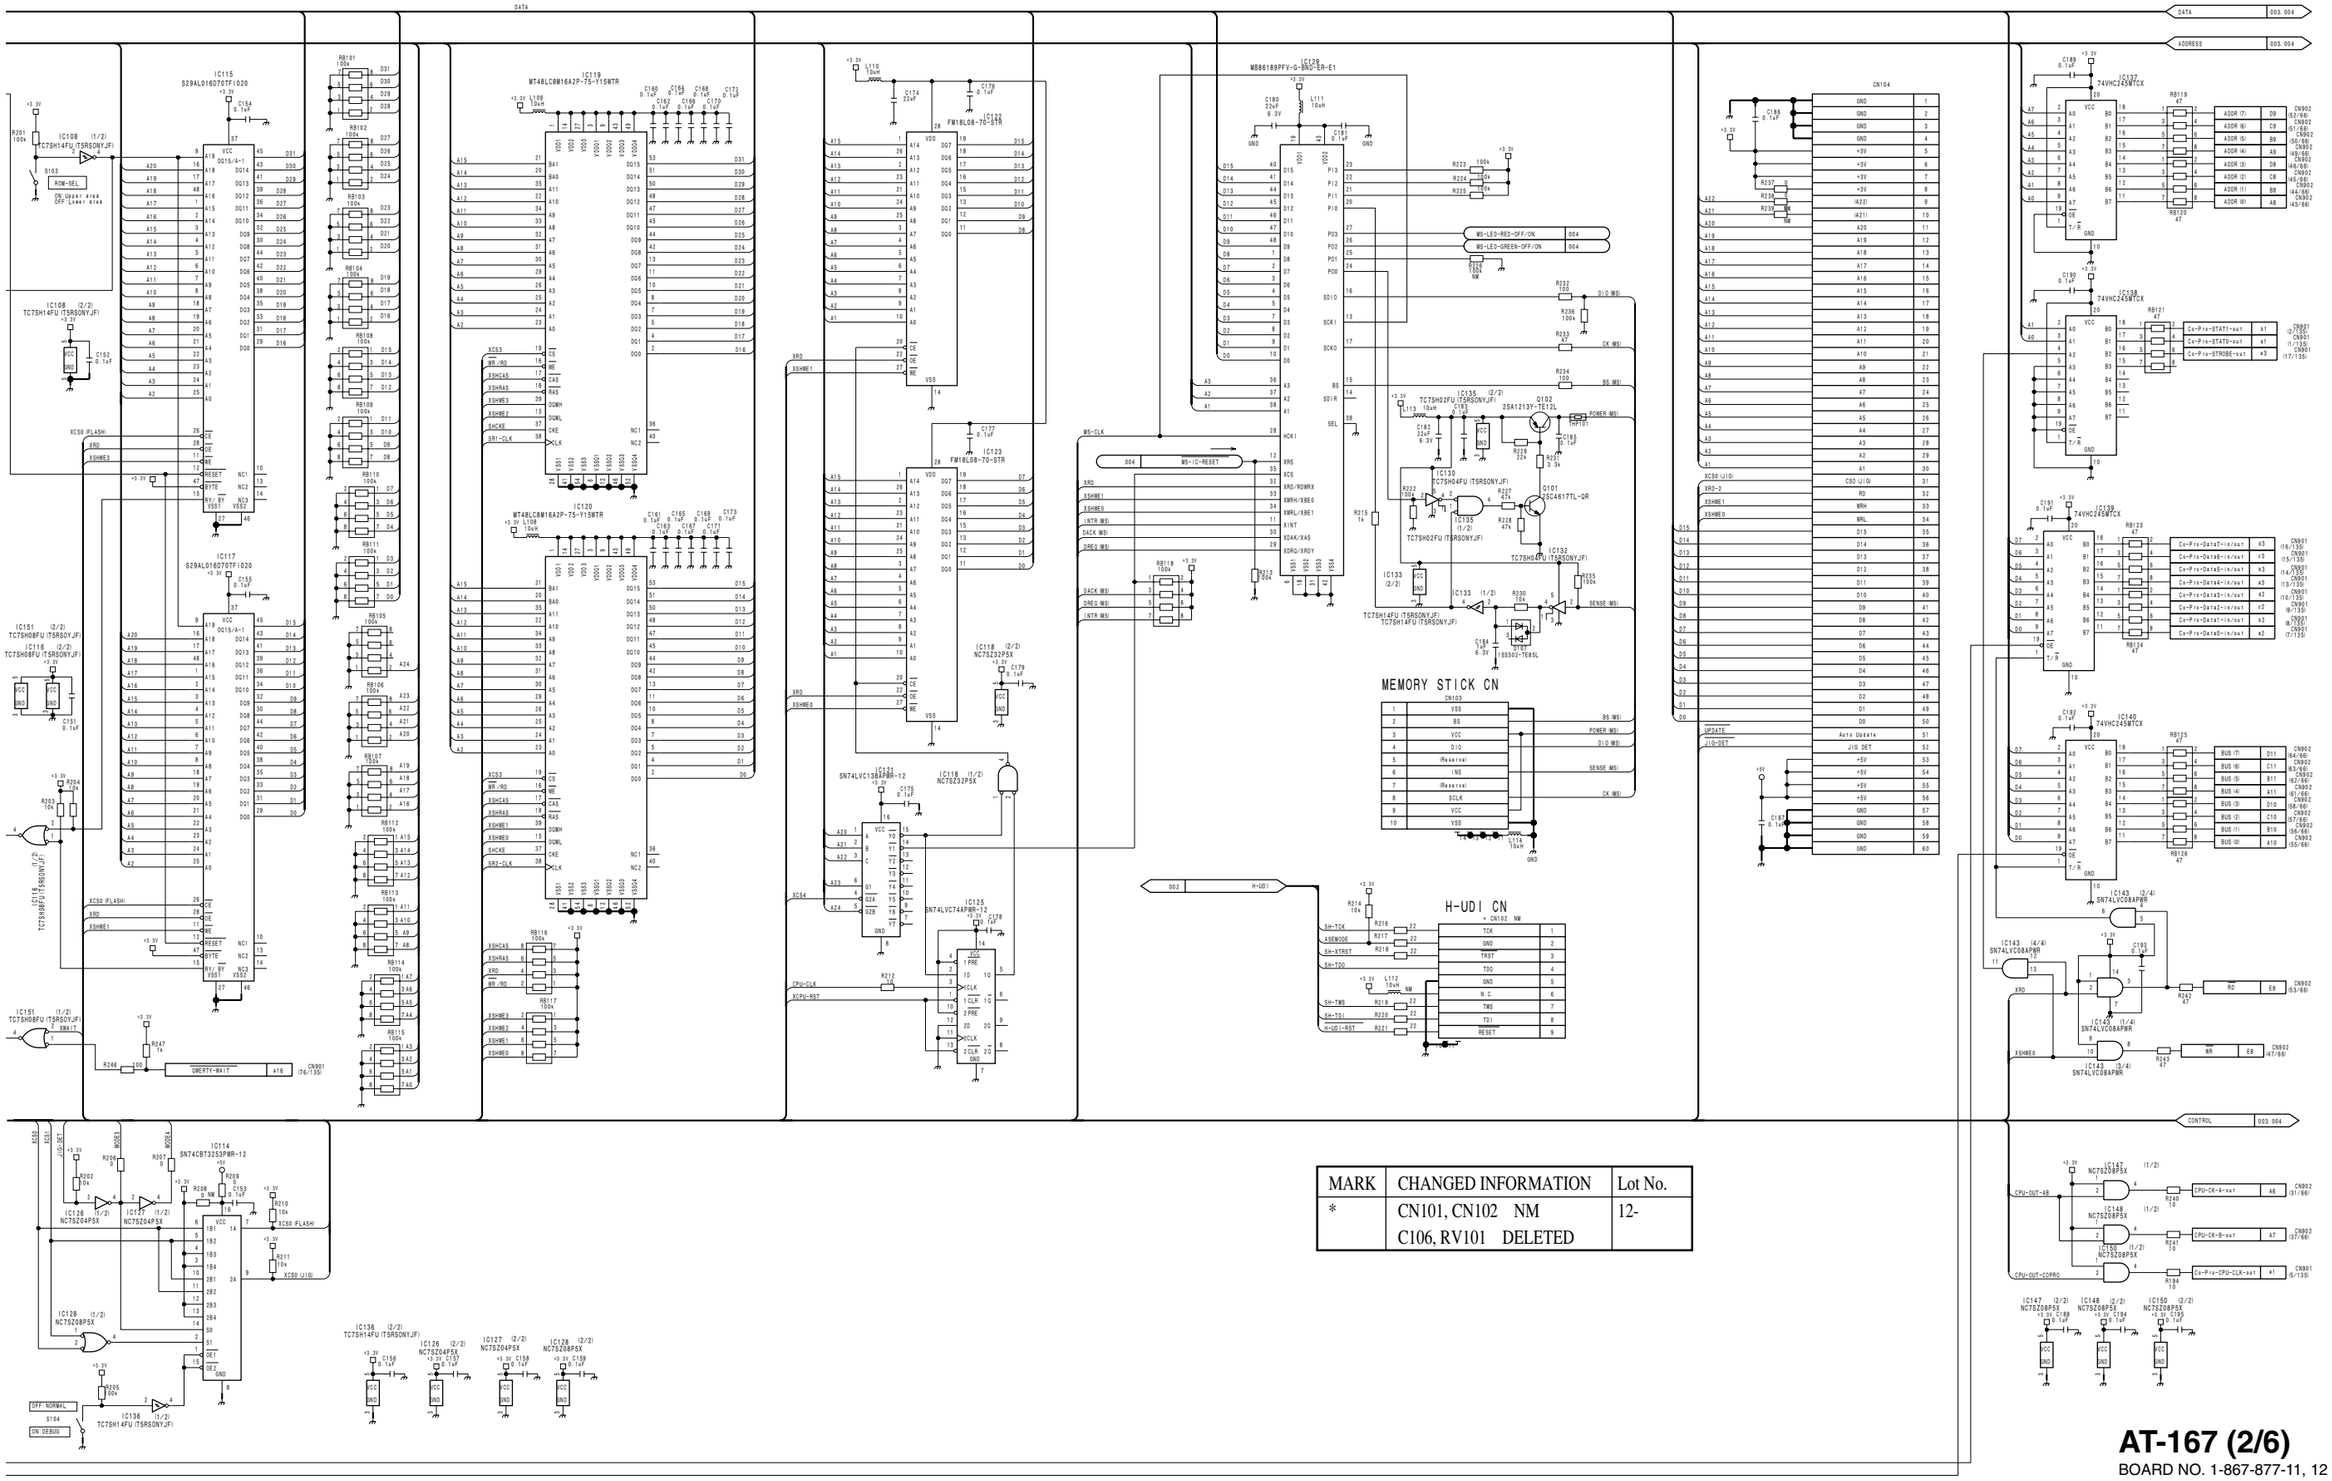


MARK	CHANGED INFORMATION	Lot No.
*	CN101, CN102 NM C106, RV101 DELETED	12-

AT-167 (2/6)
BOARD NO. 1-867-877-11, 12
HDCU1000_AT-167_011_2


MARK	CHANGED INFORMATION	Lot No.
*	R336 DELETED R340 100 → 10k IC309 ADDED	12-

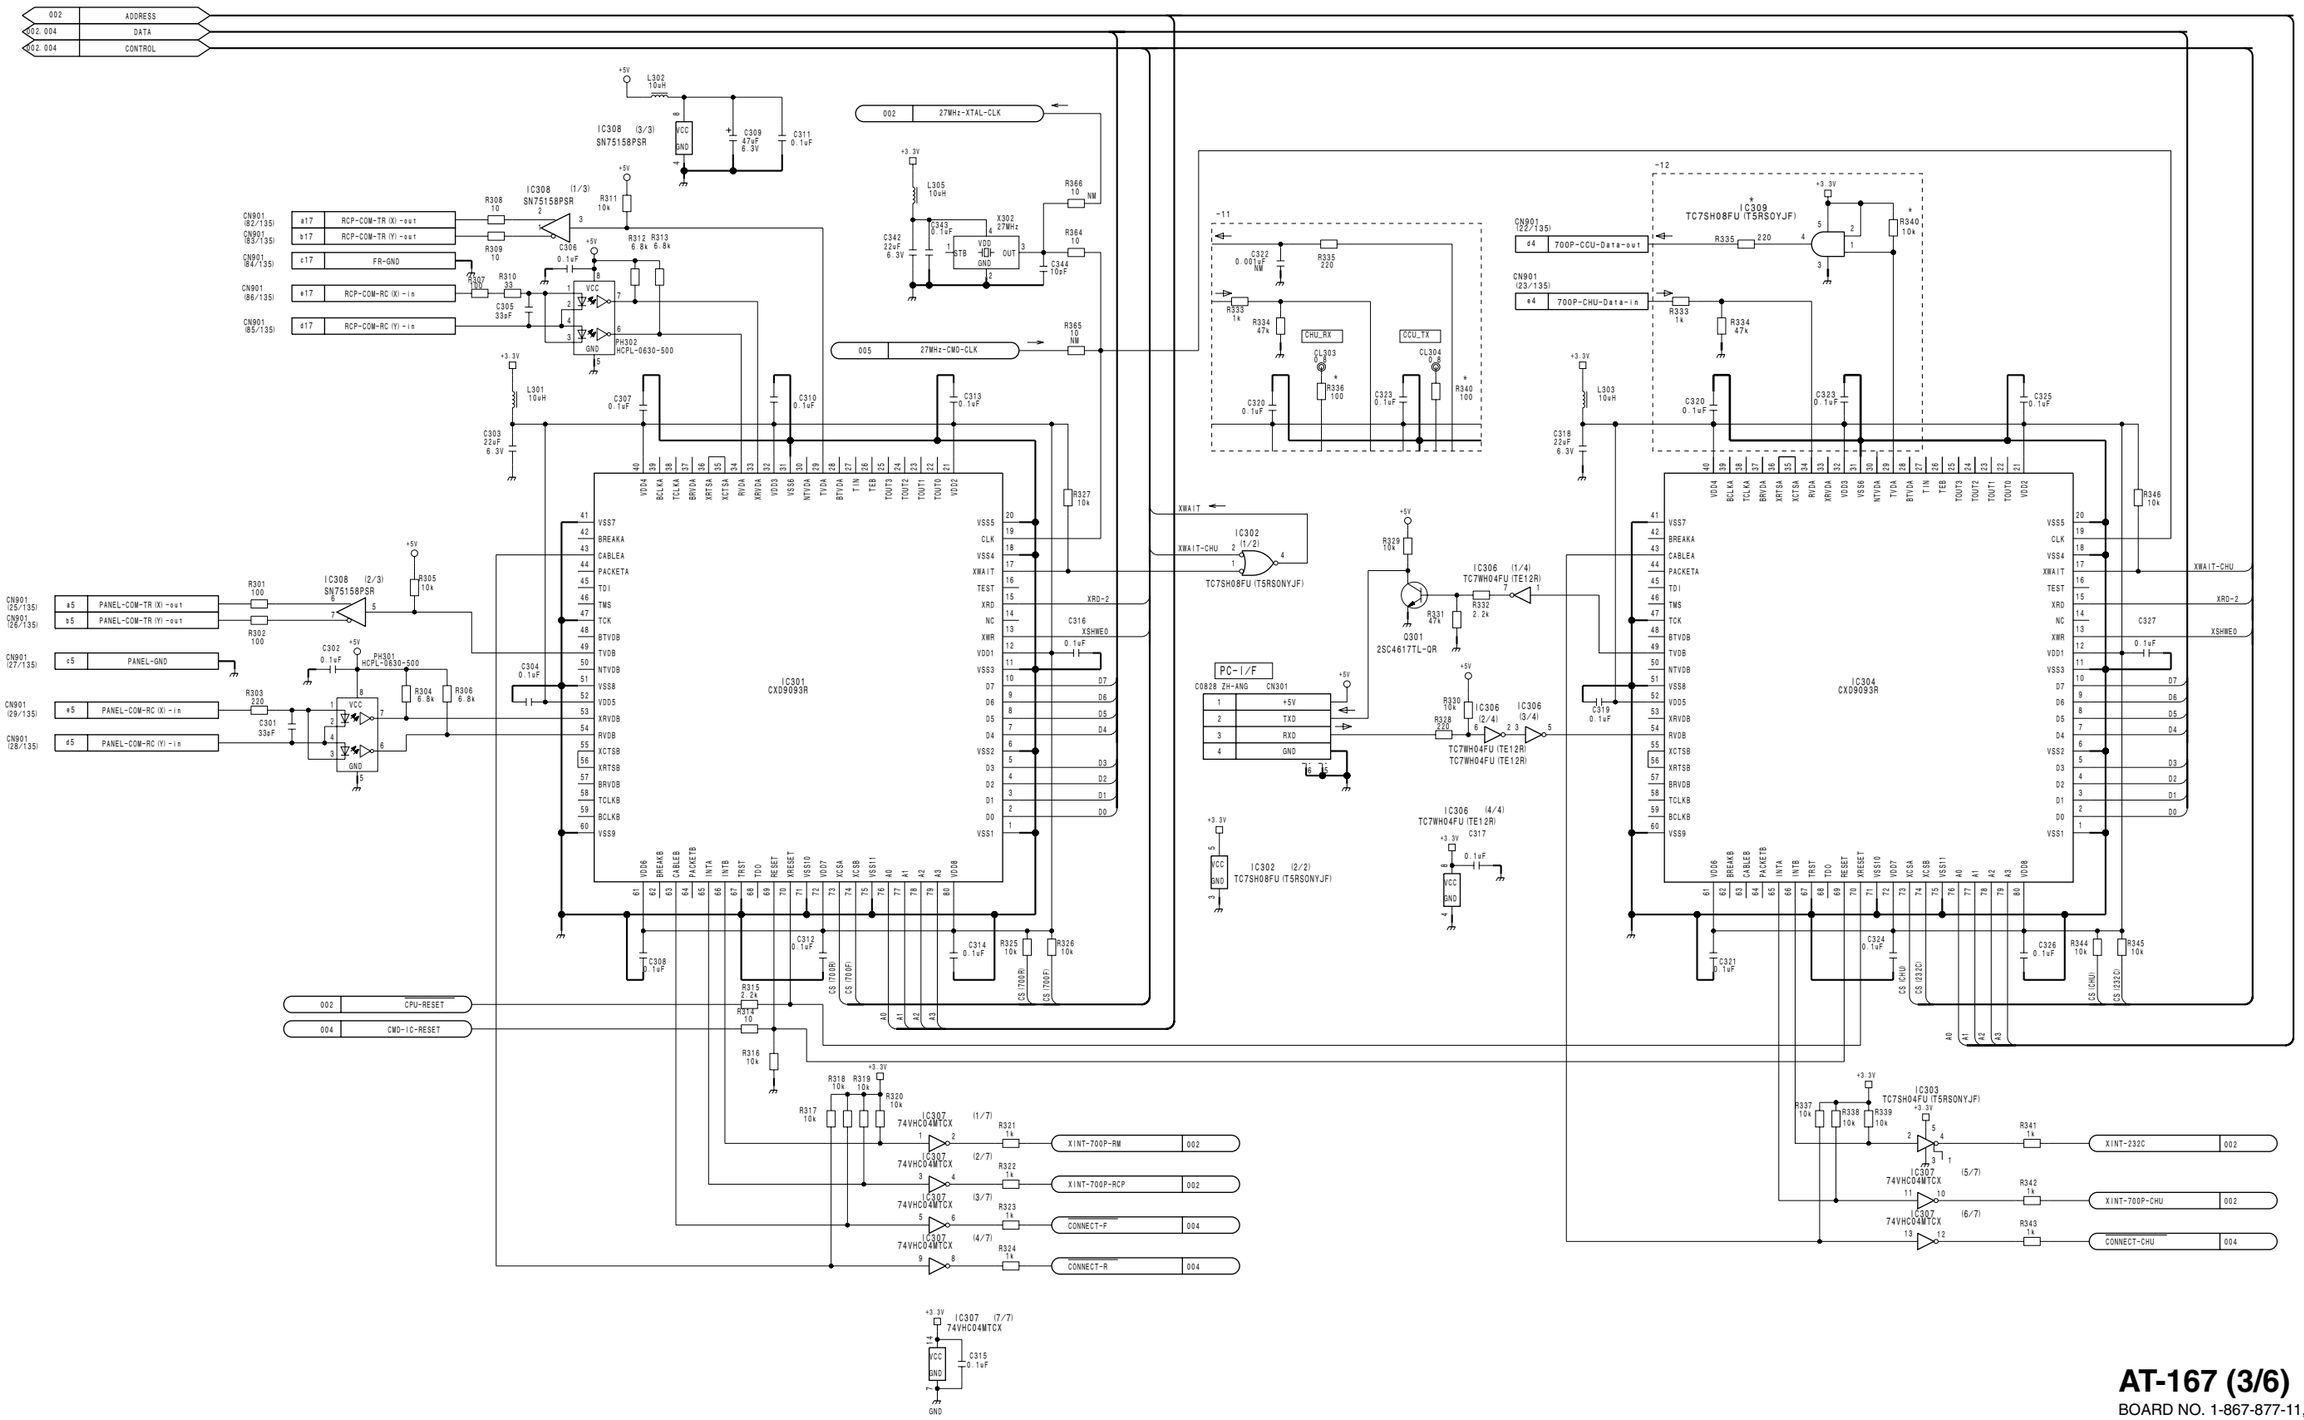



AT-167 (3/6)
BOARD NO. 1-867-877-11, 12
HDCU1000_AT-167_011_3

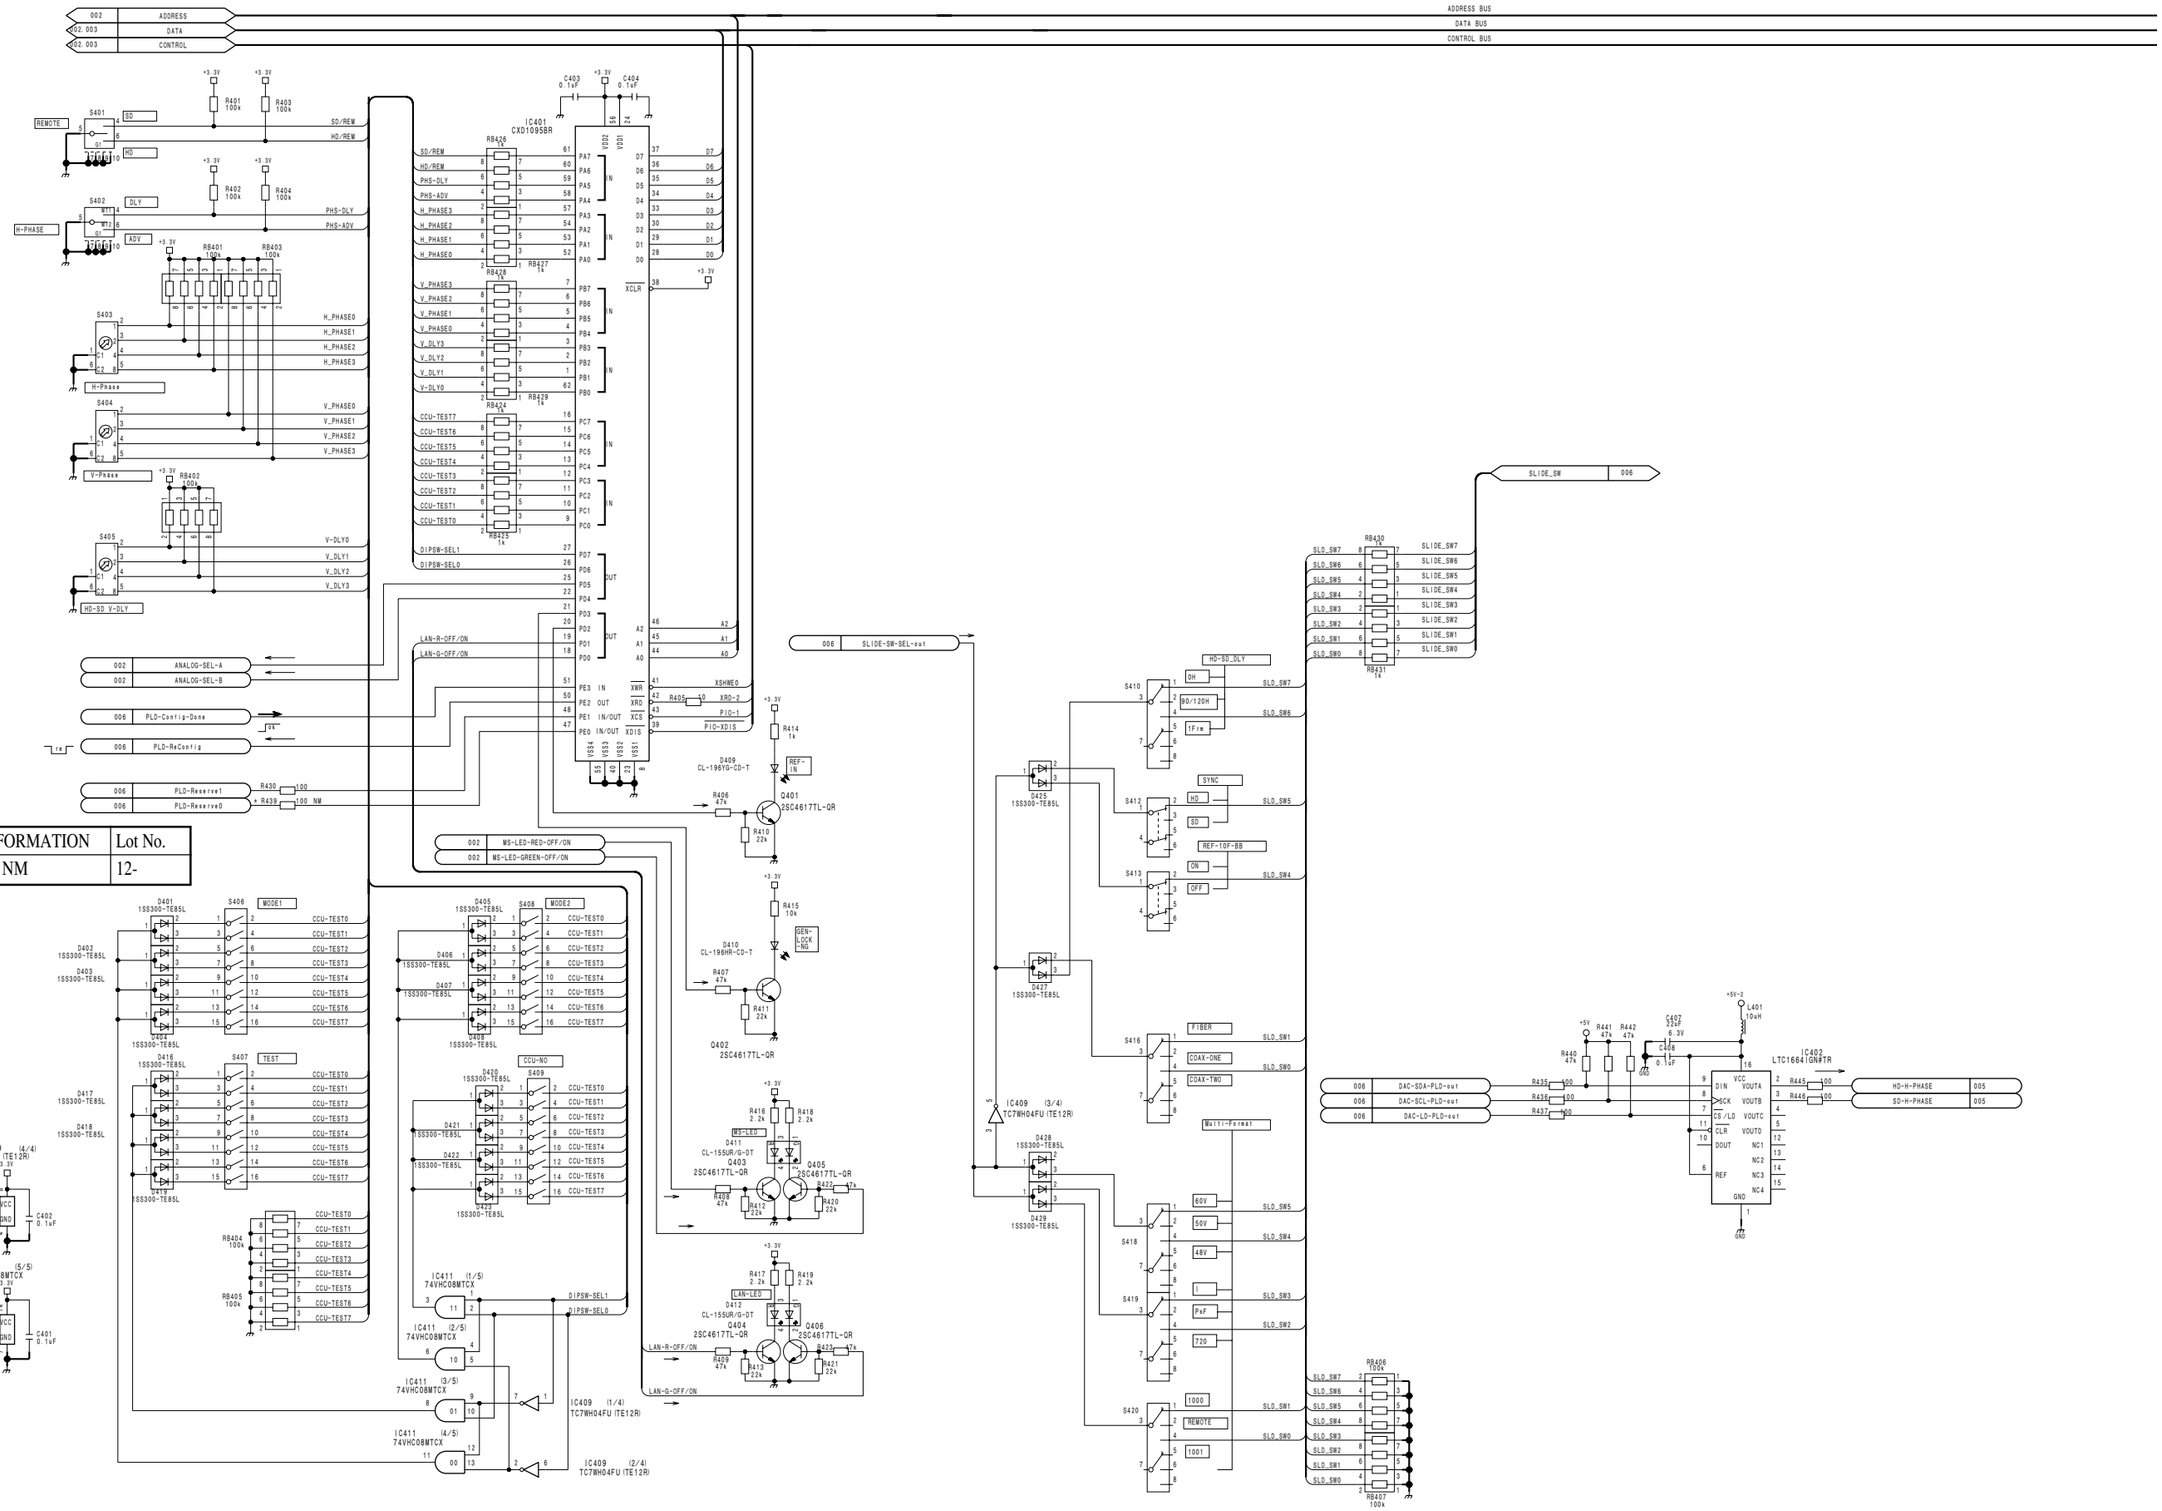

MARK	CHANGED INFORMATION	Lot No.
*	R439 100 → NM	12-

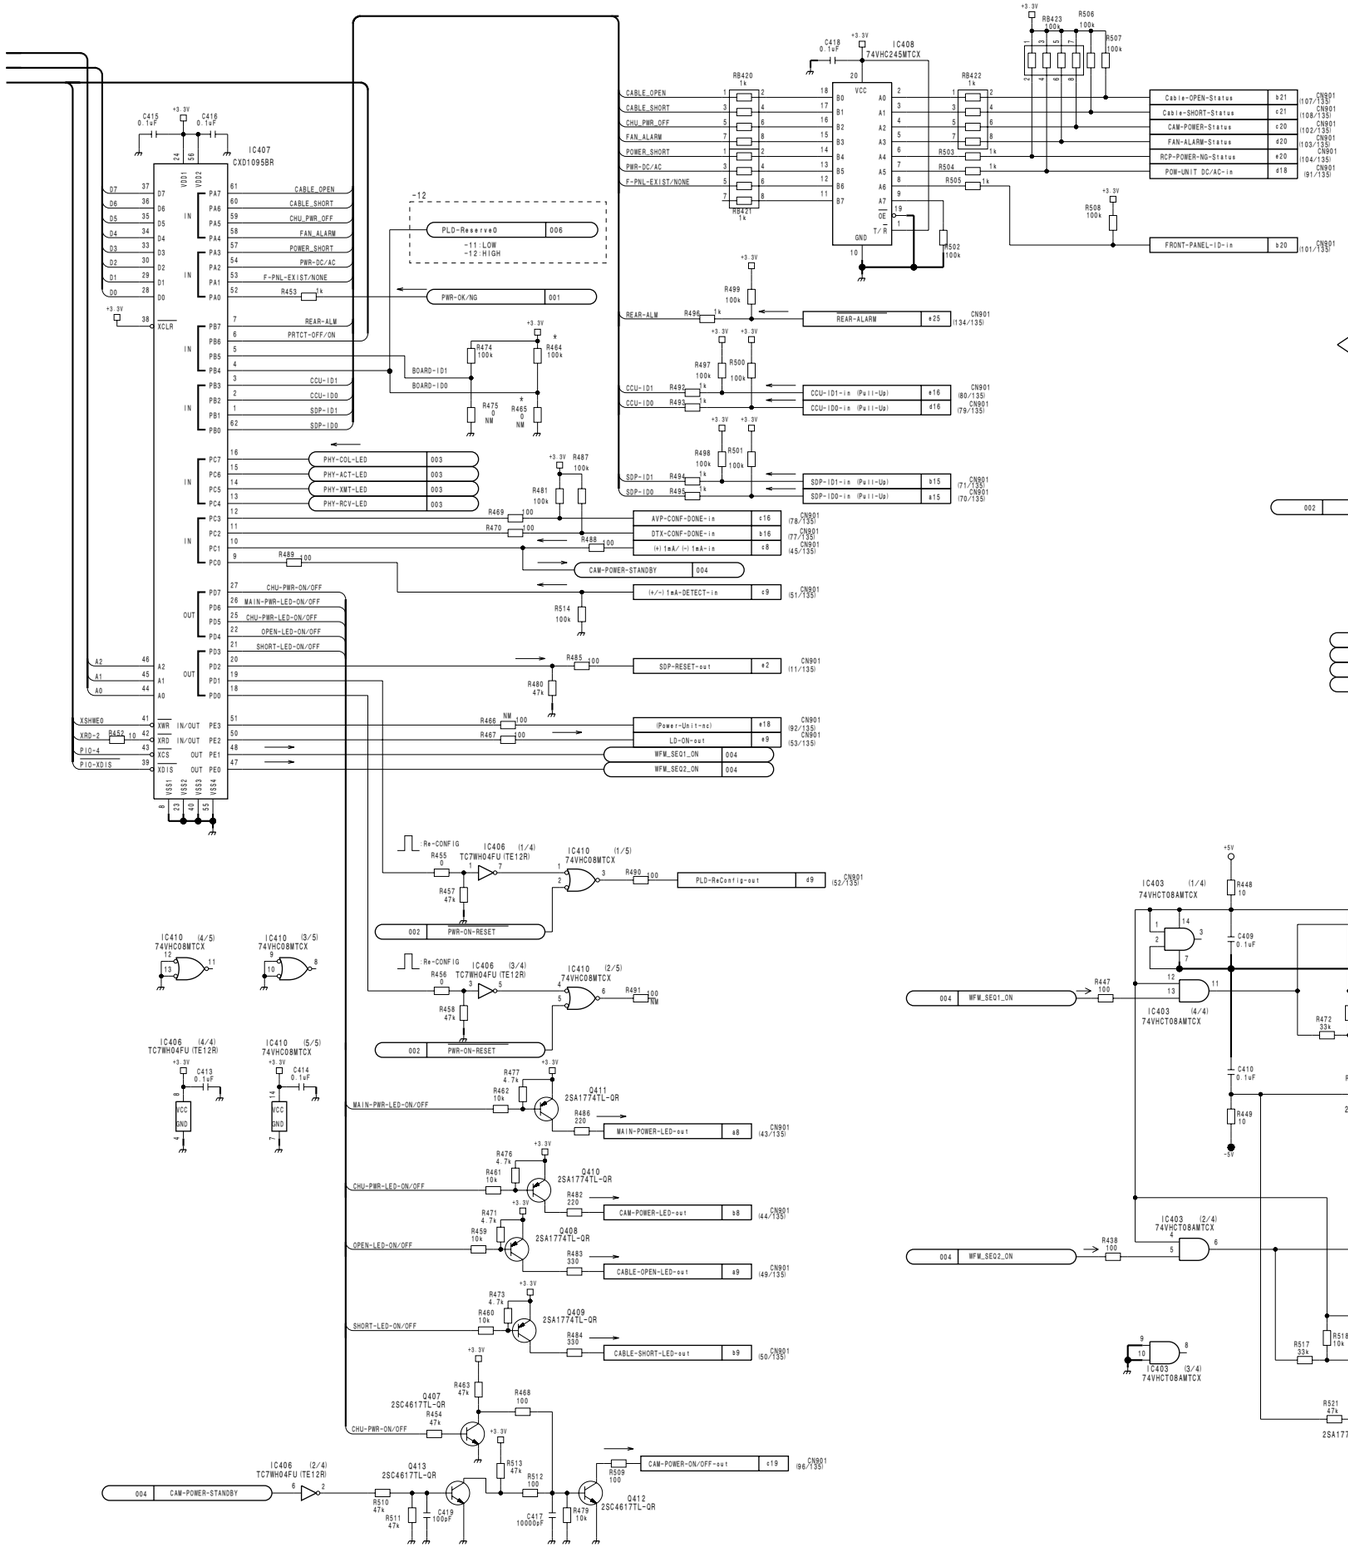


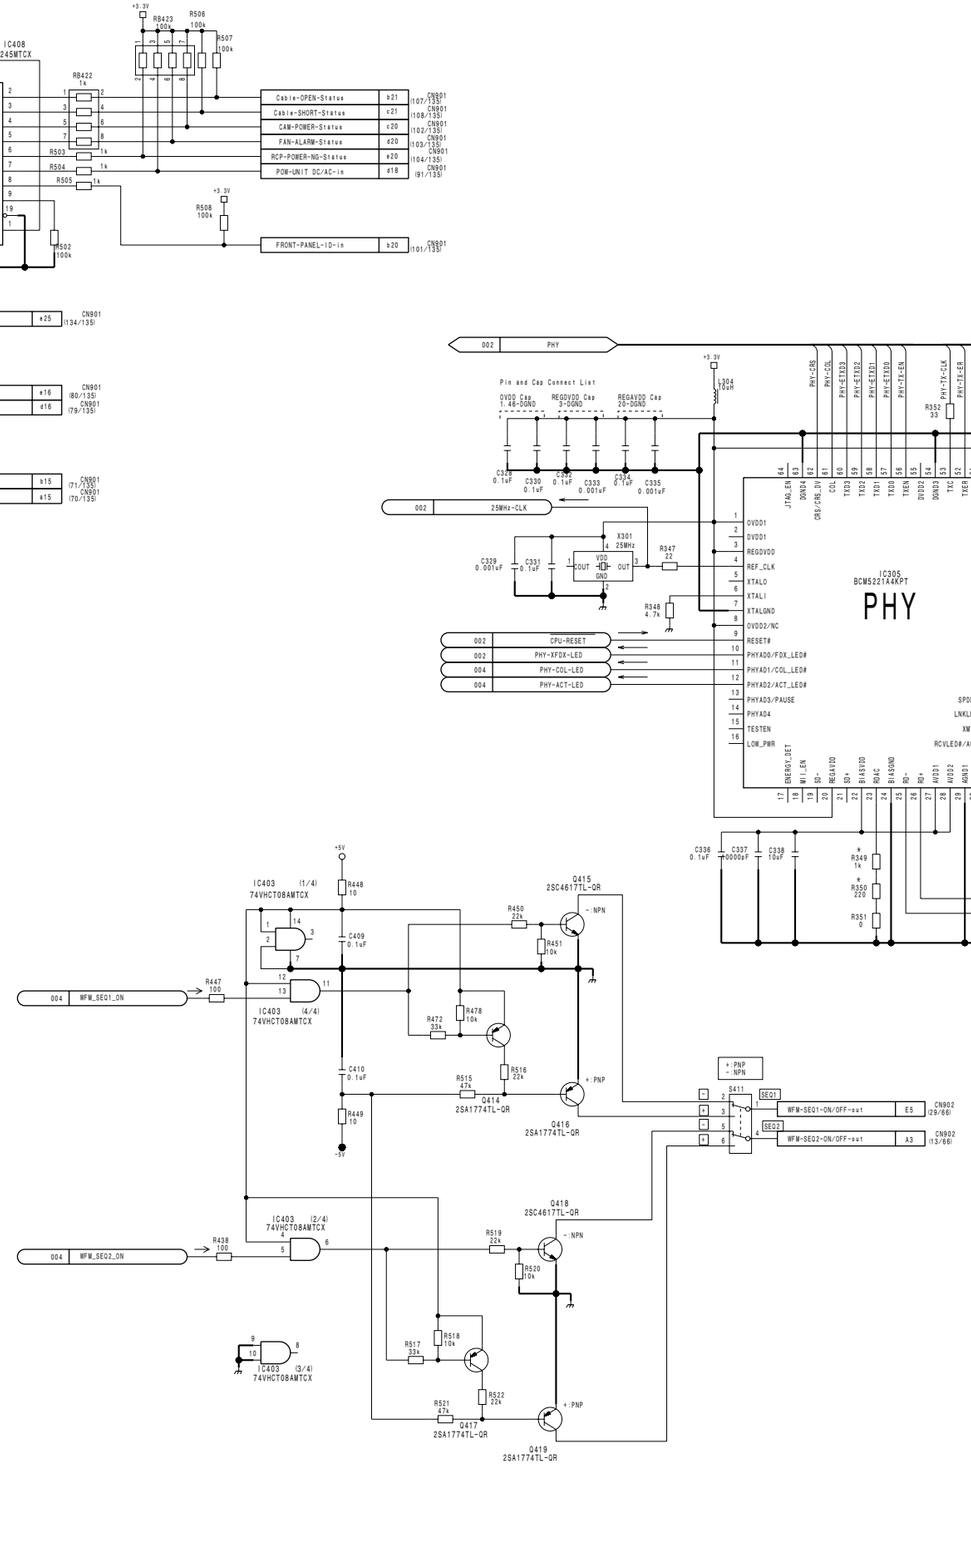

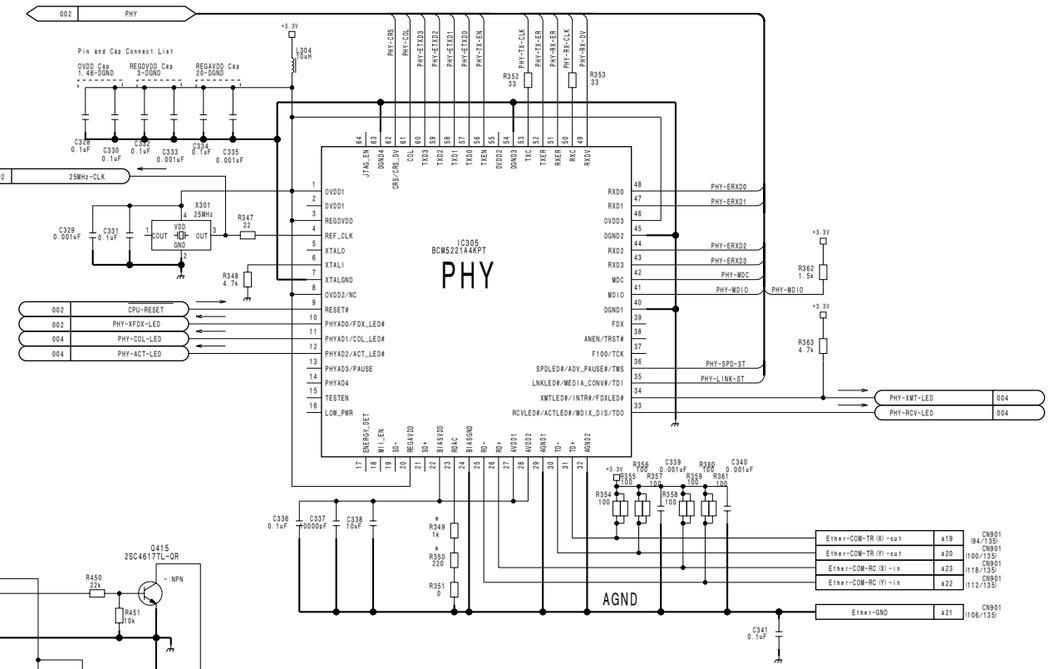

MARK	CHANGED INFORMATION	Lot No.
*	R349 470 → 1k	12-
	R350 470 → 220	
	R464 NM → 100k	
	R465 0 → NM	


AT-167 (4/6)
BOARD NO. 1-867-877-11, 12
HDCU1000_AT-167_011_4

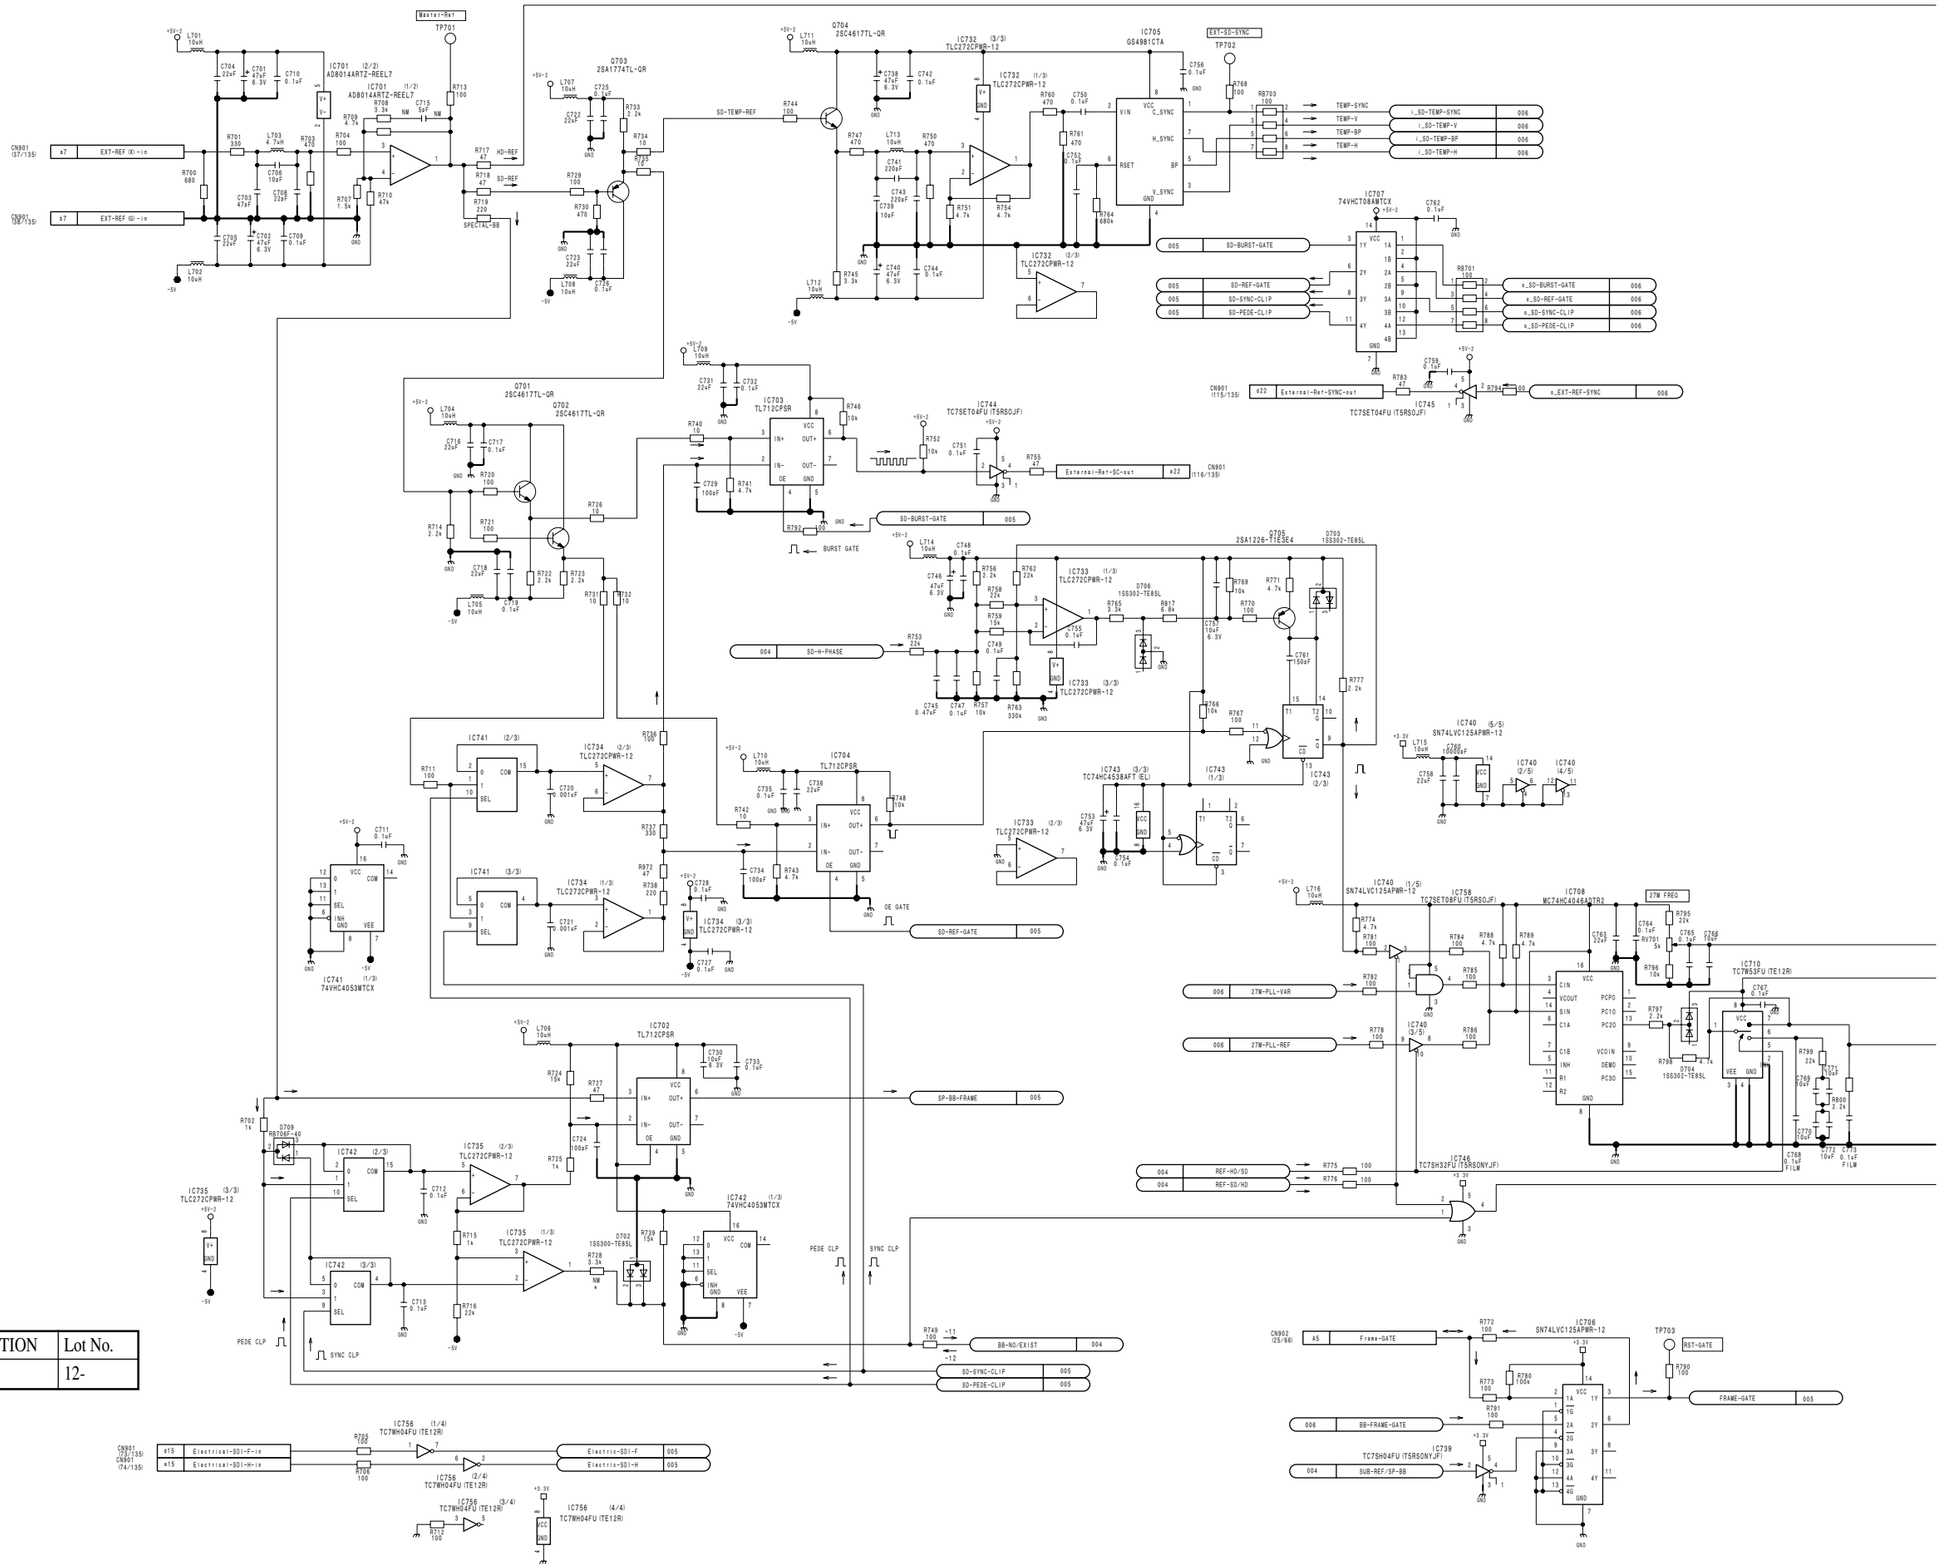

MARK	CHANGED INFORMATION	Lot No.
*	R728 3.3k → NM	12-


AT-167 (5/6)
SUFFIX: -11, -12

AT-167 (5/6)
SUFFIX: -11, -12

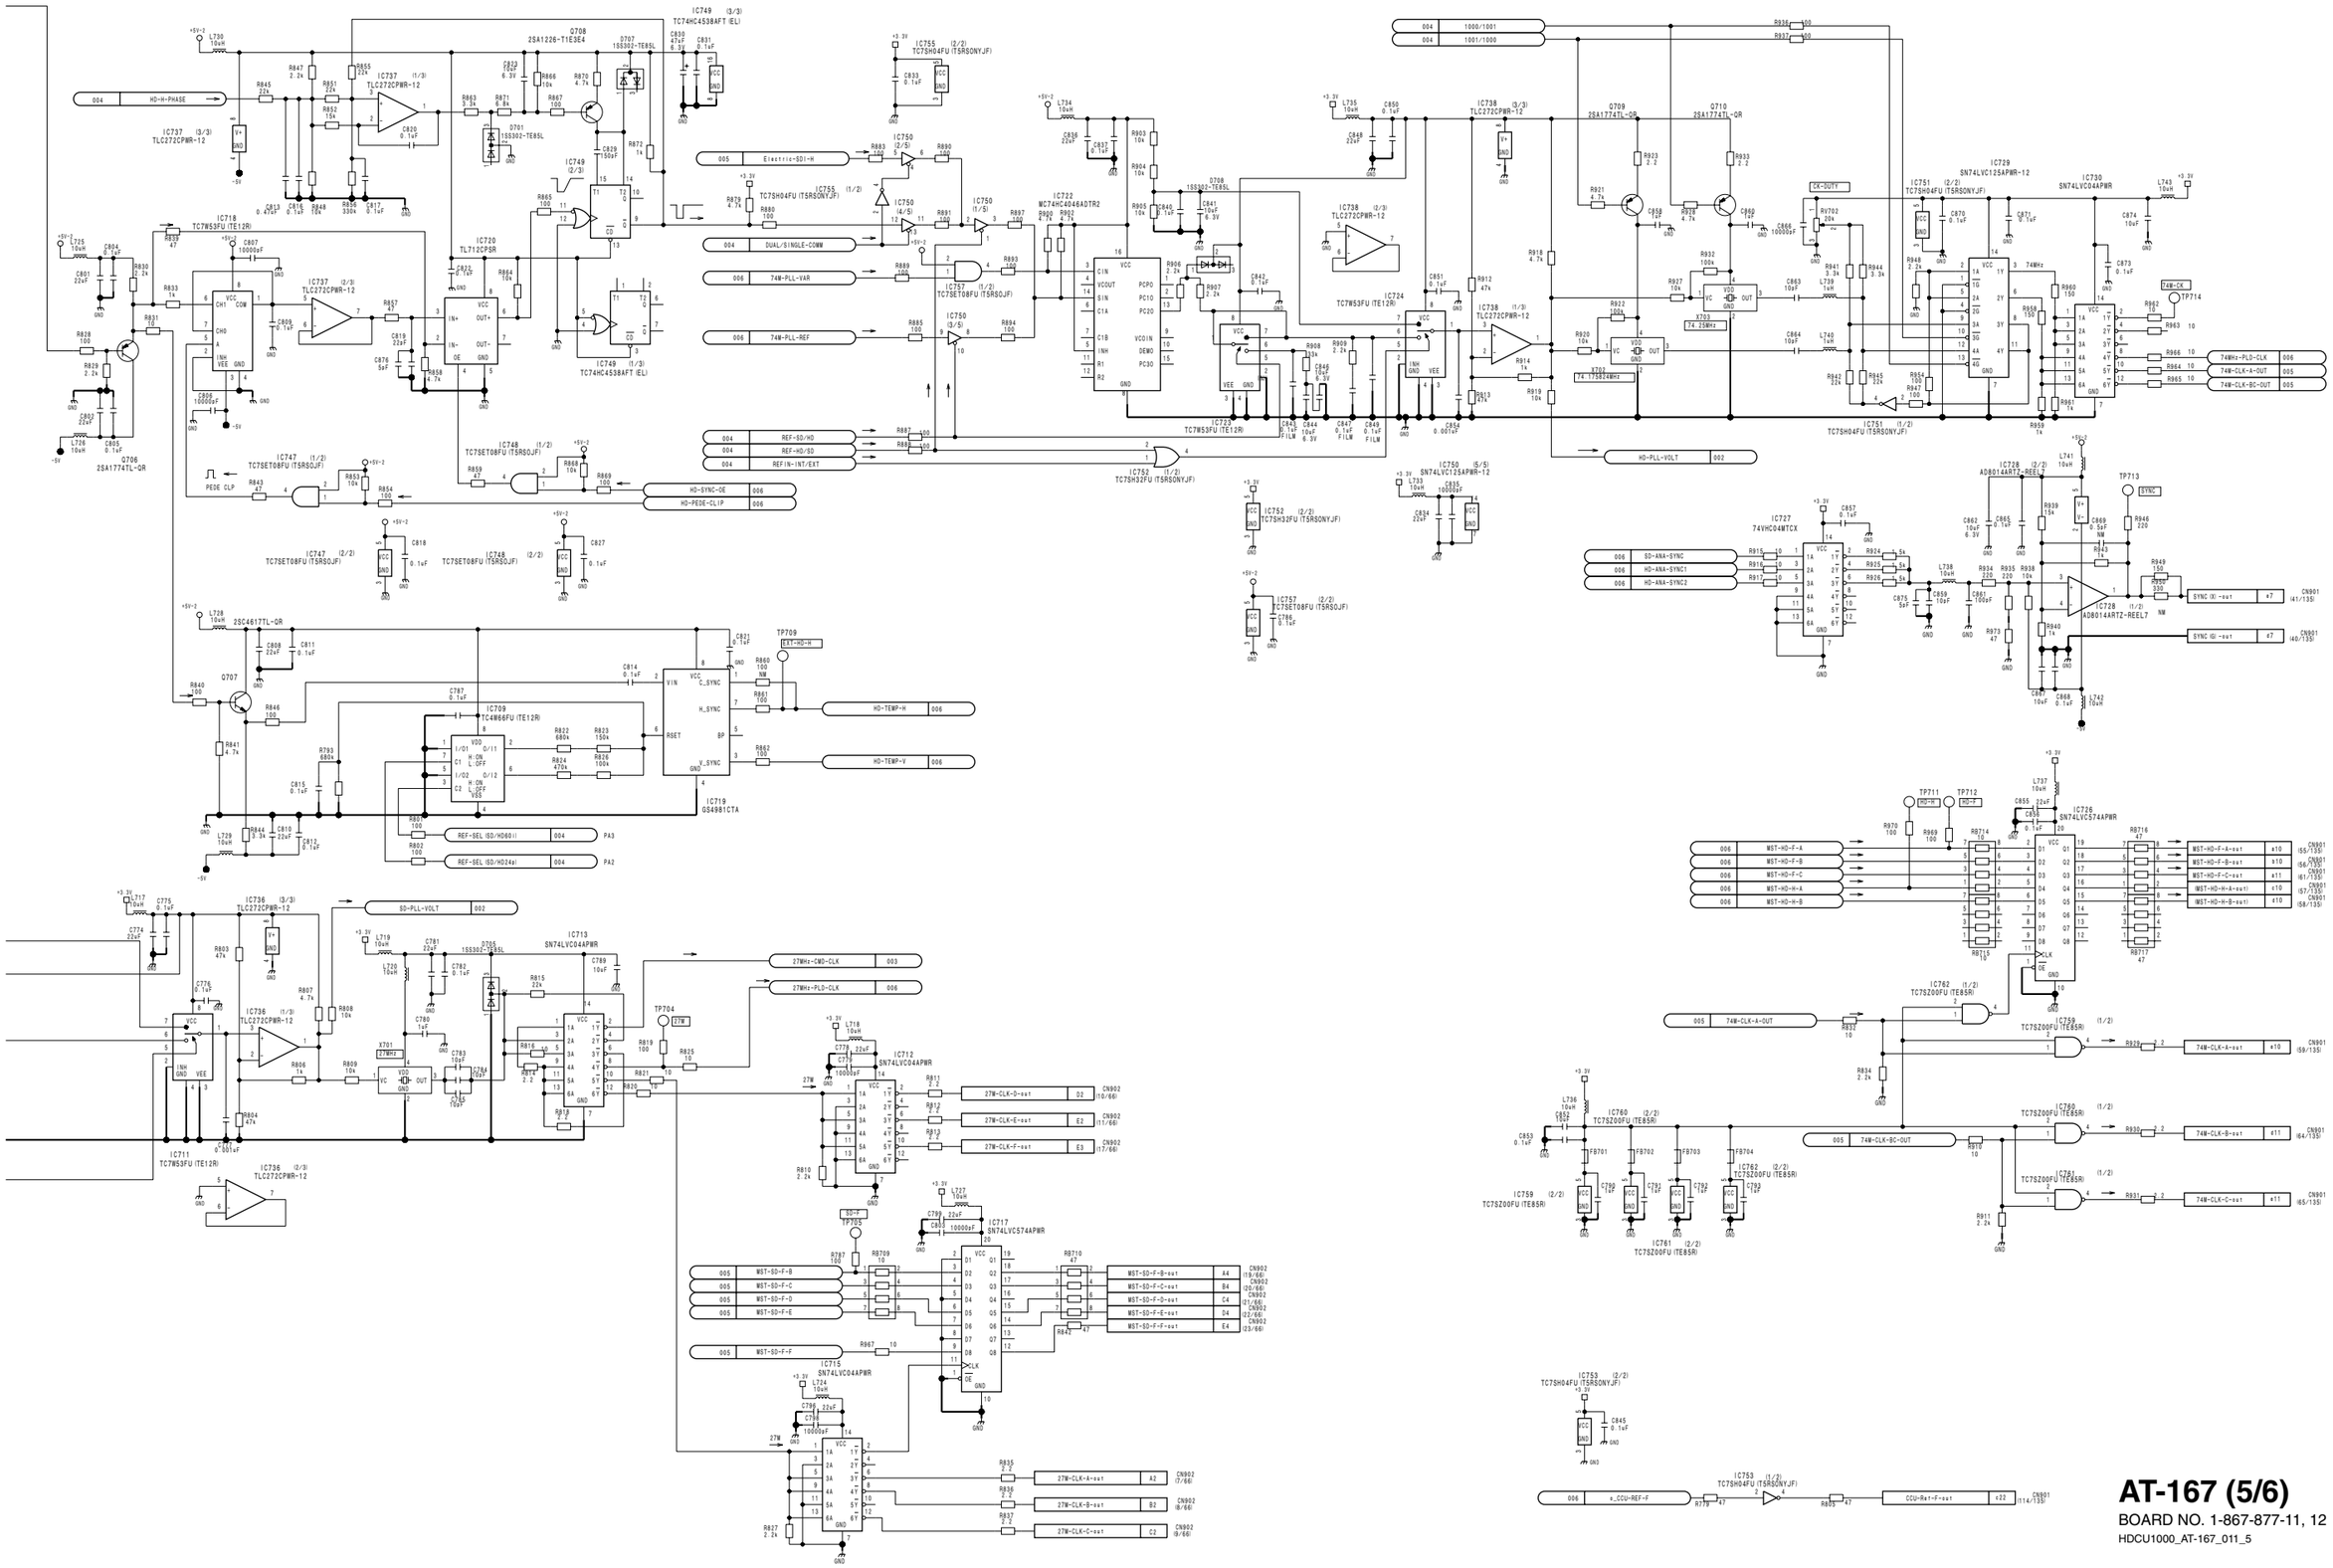


AT-167 (5/6)
BOARD NO. 1-867-877-11, 12
HDCU1000_AT-167_011_5

AT-167 (6/6)
SUFFIX: -11, -12

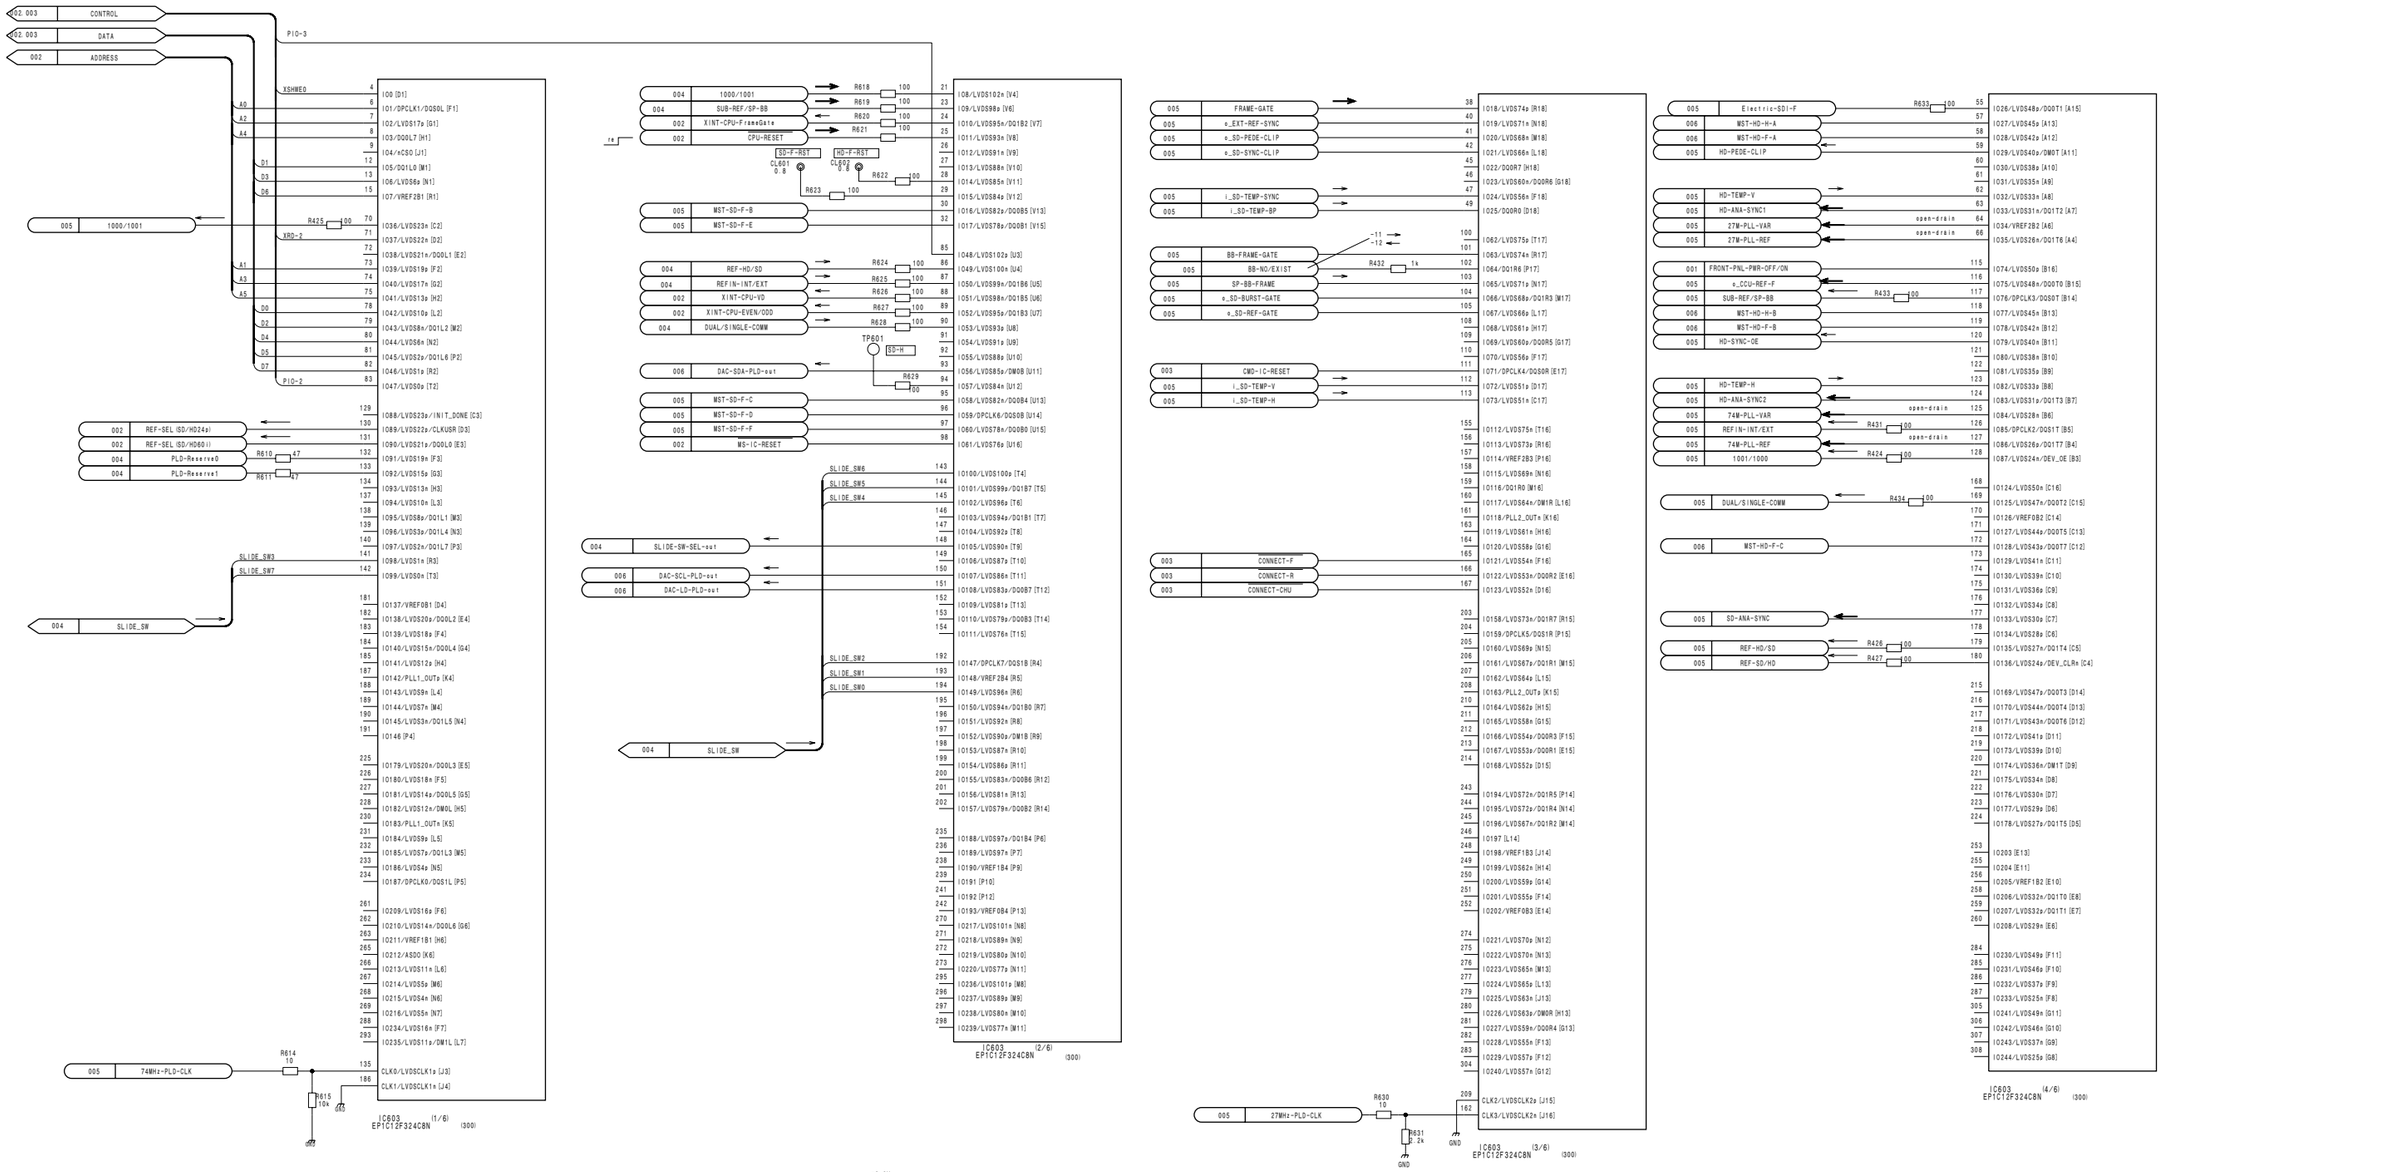


7-12


AT-167 (6/6)
BOARD NO. 1-867-877-11, 12
HDCU1000_AT-167_011_6

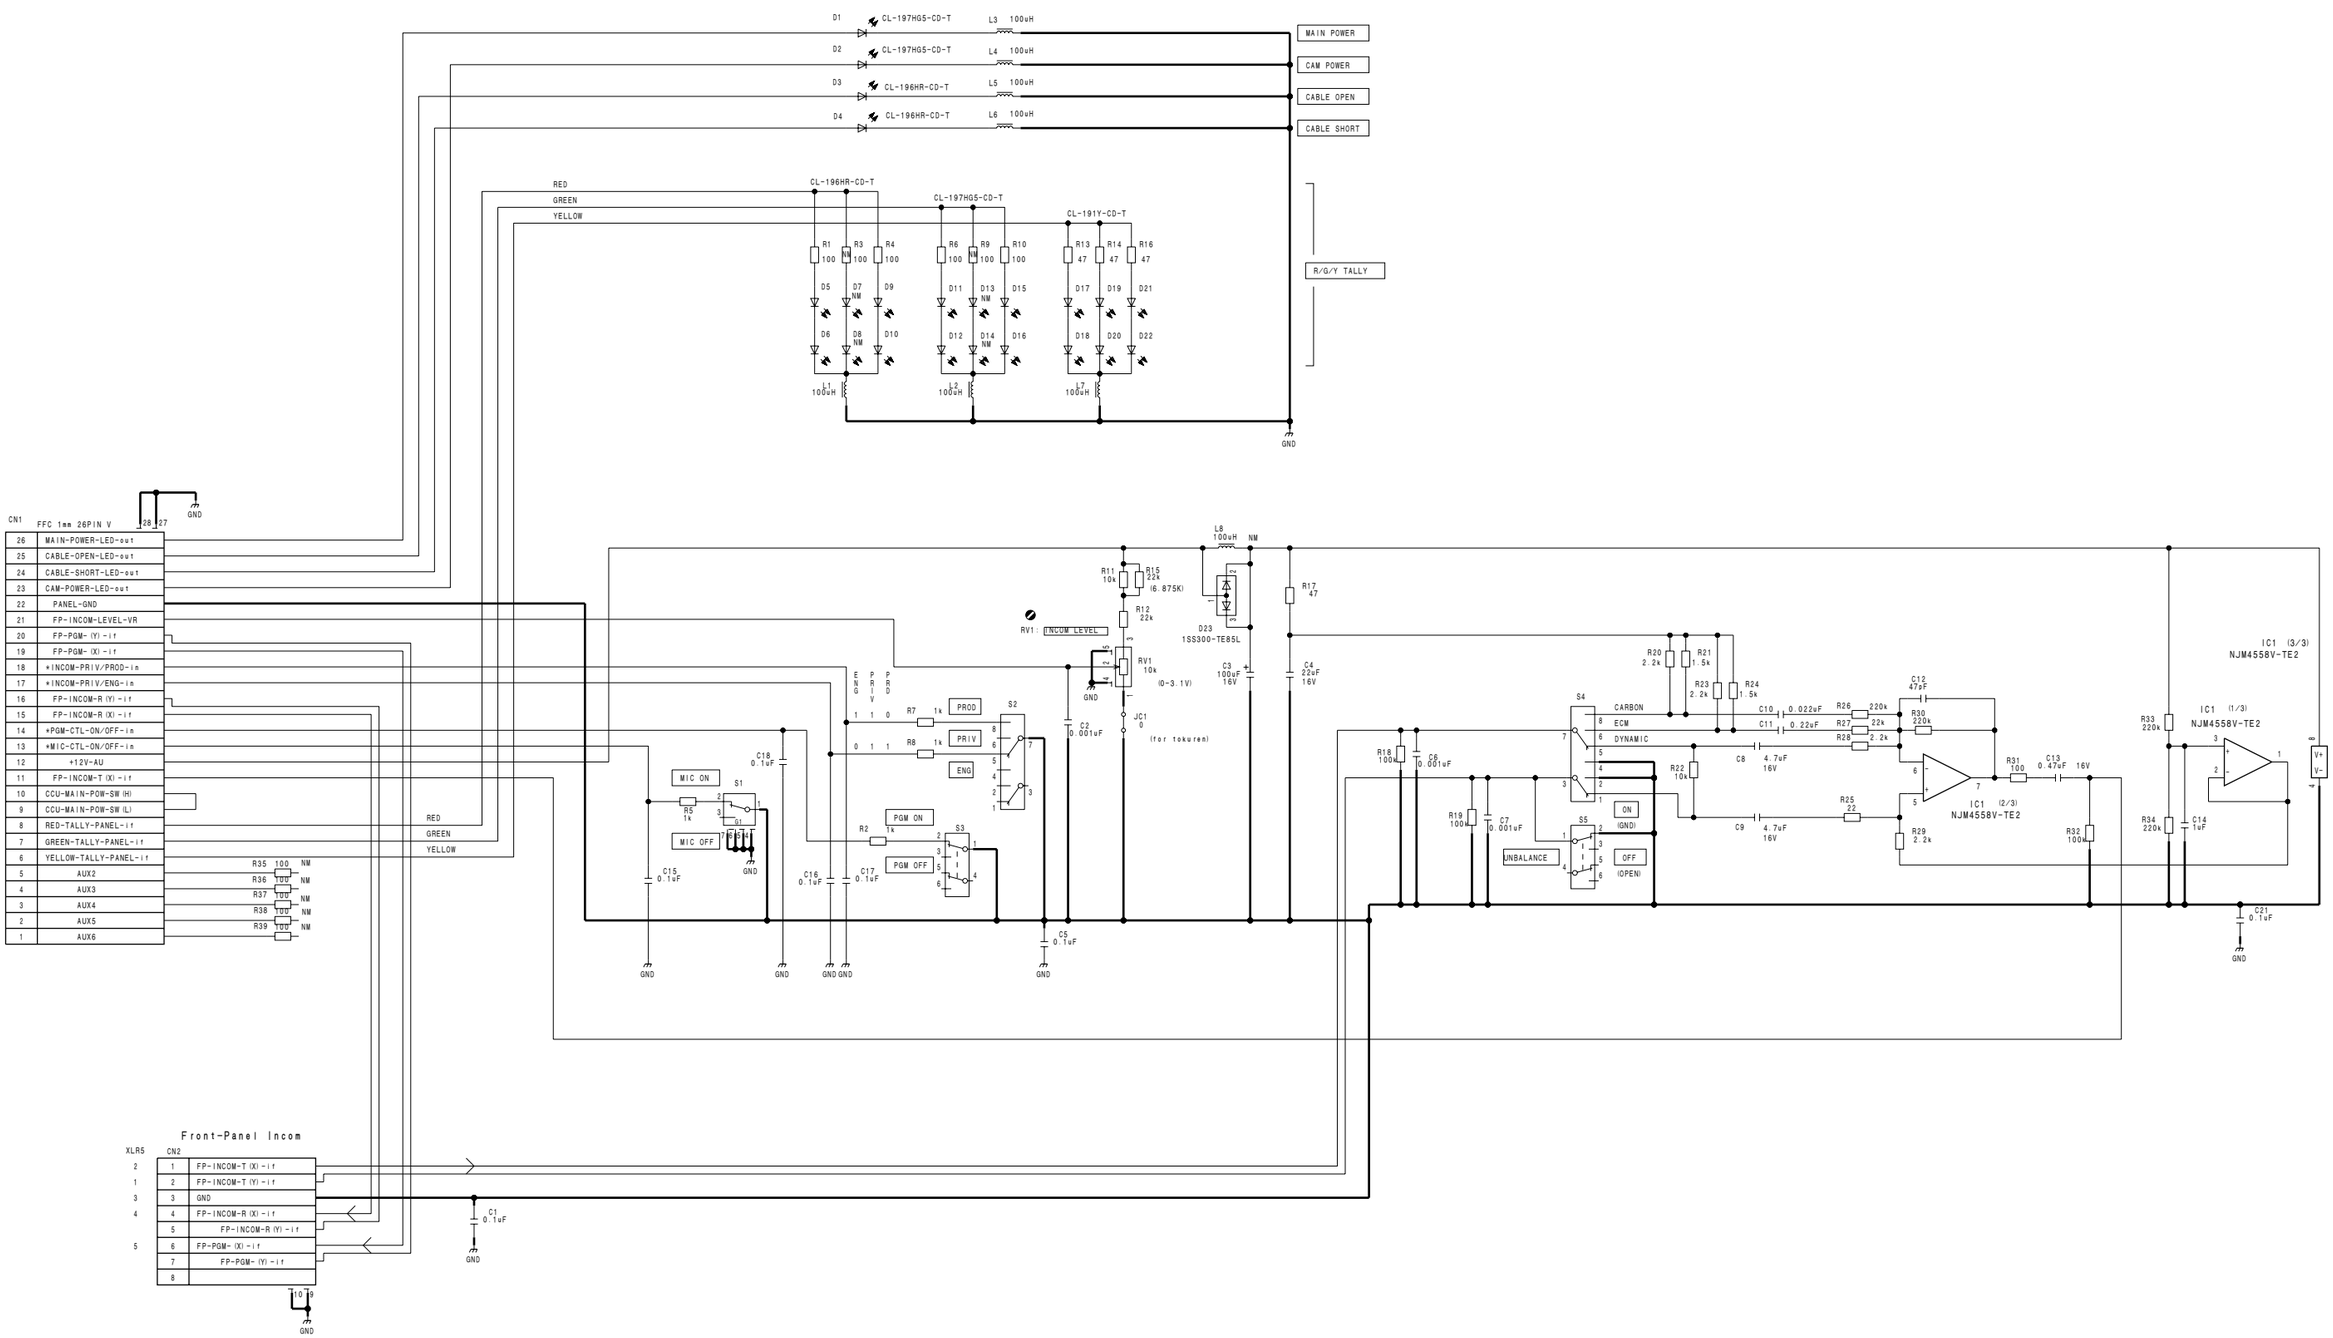


AU-302
BOARD NO. 1-867-884-12
HDCU1000_AU-302_012_1

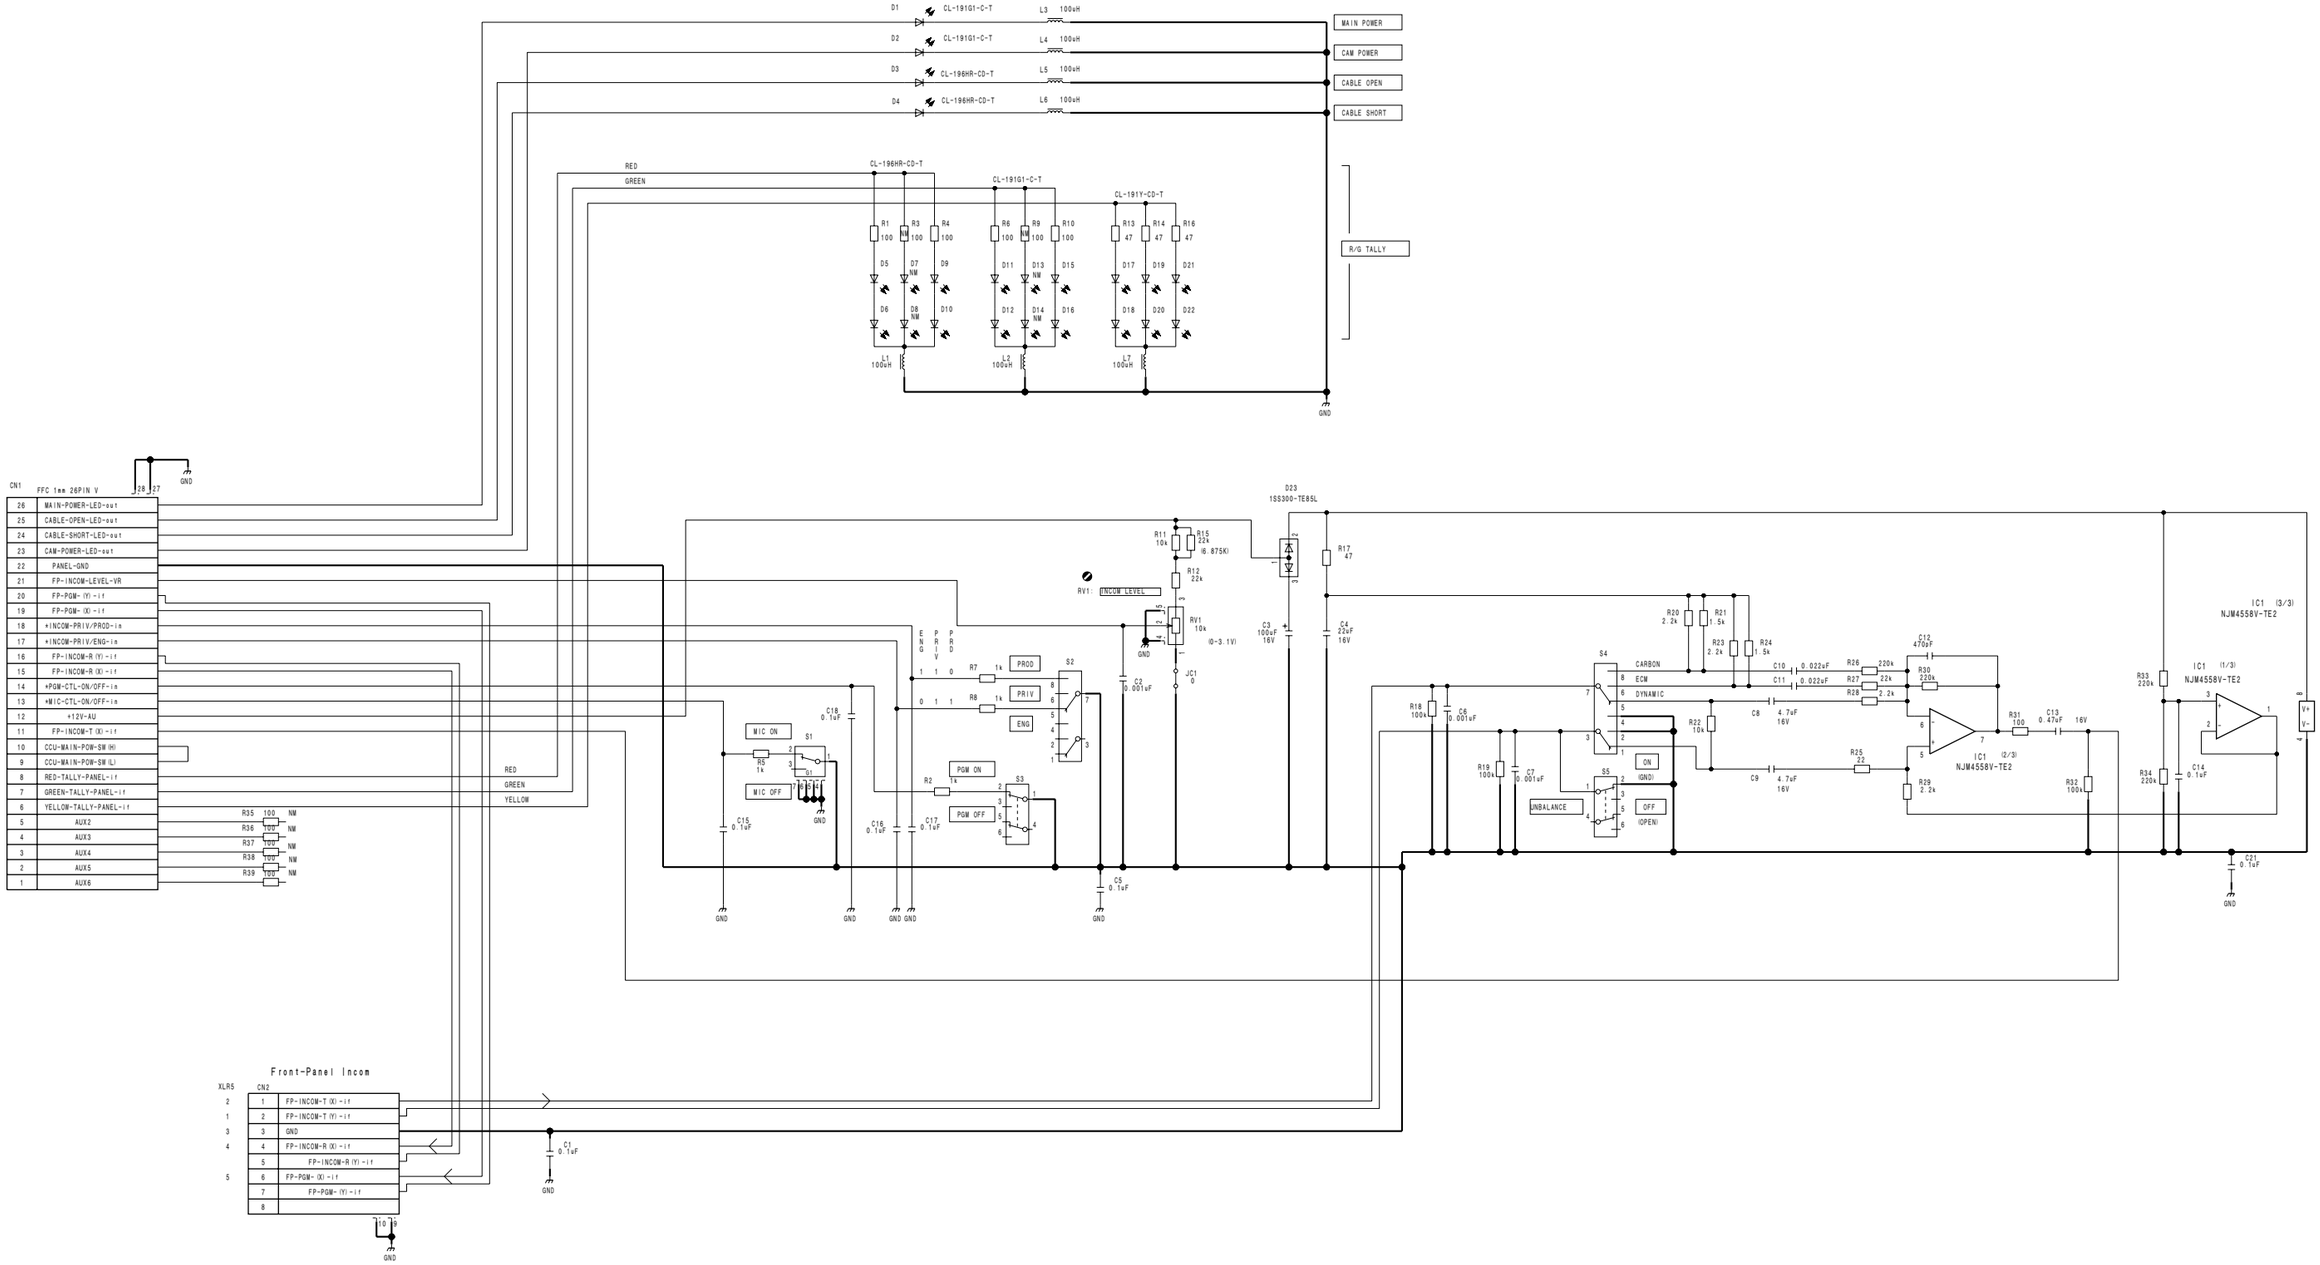

AU-302
BOARD NO. 1-867-884-11
HDCU1000_AU-302_011_1

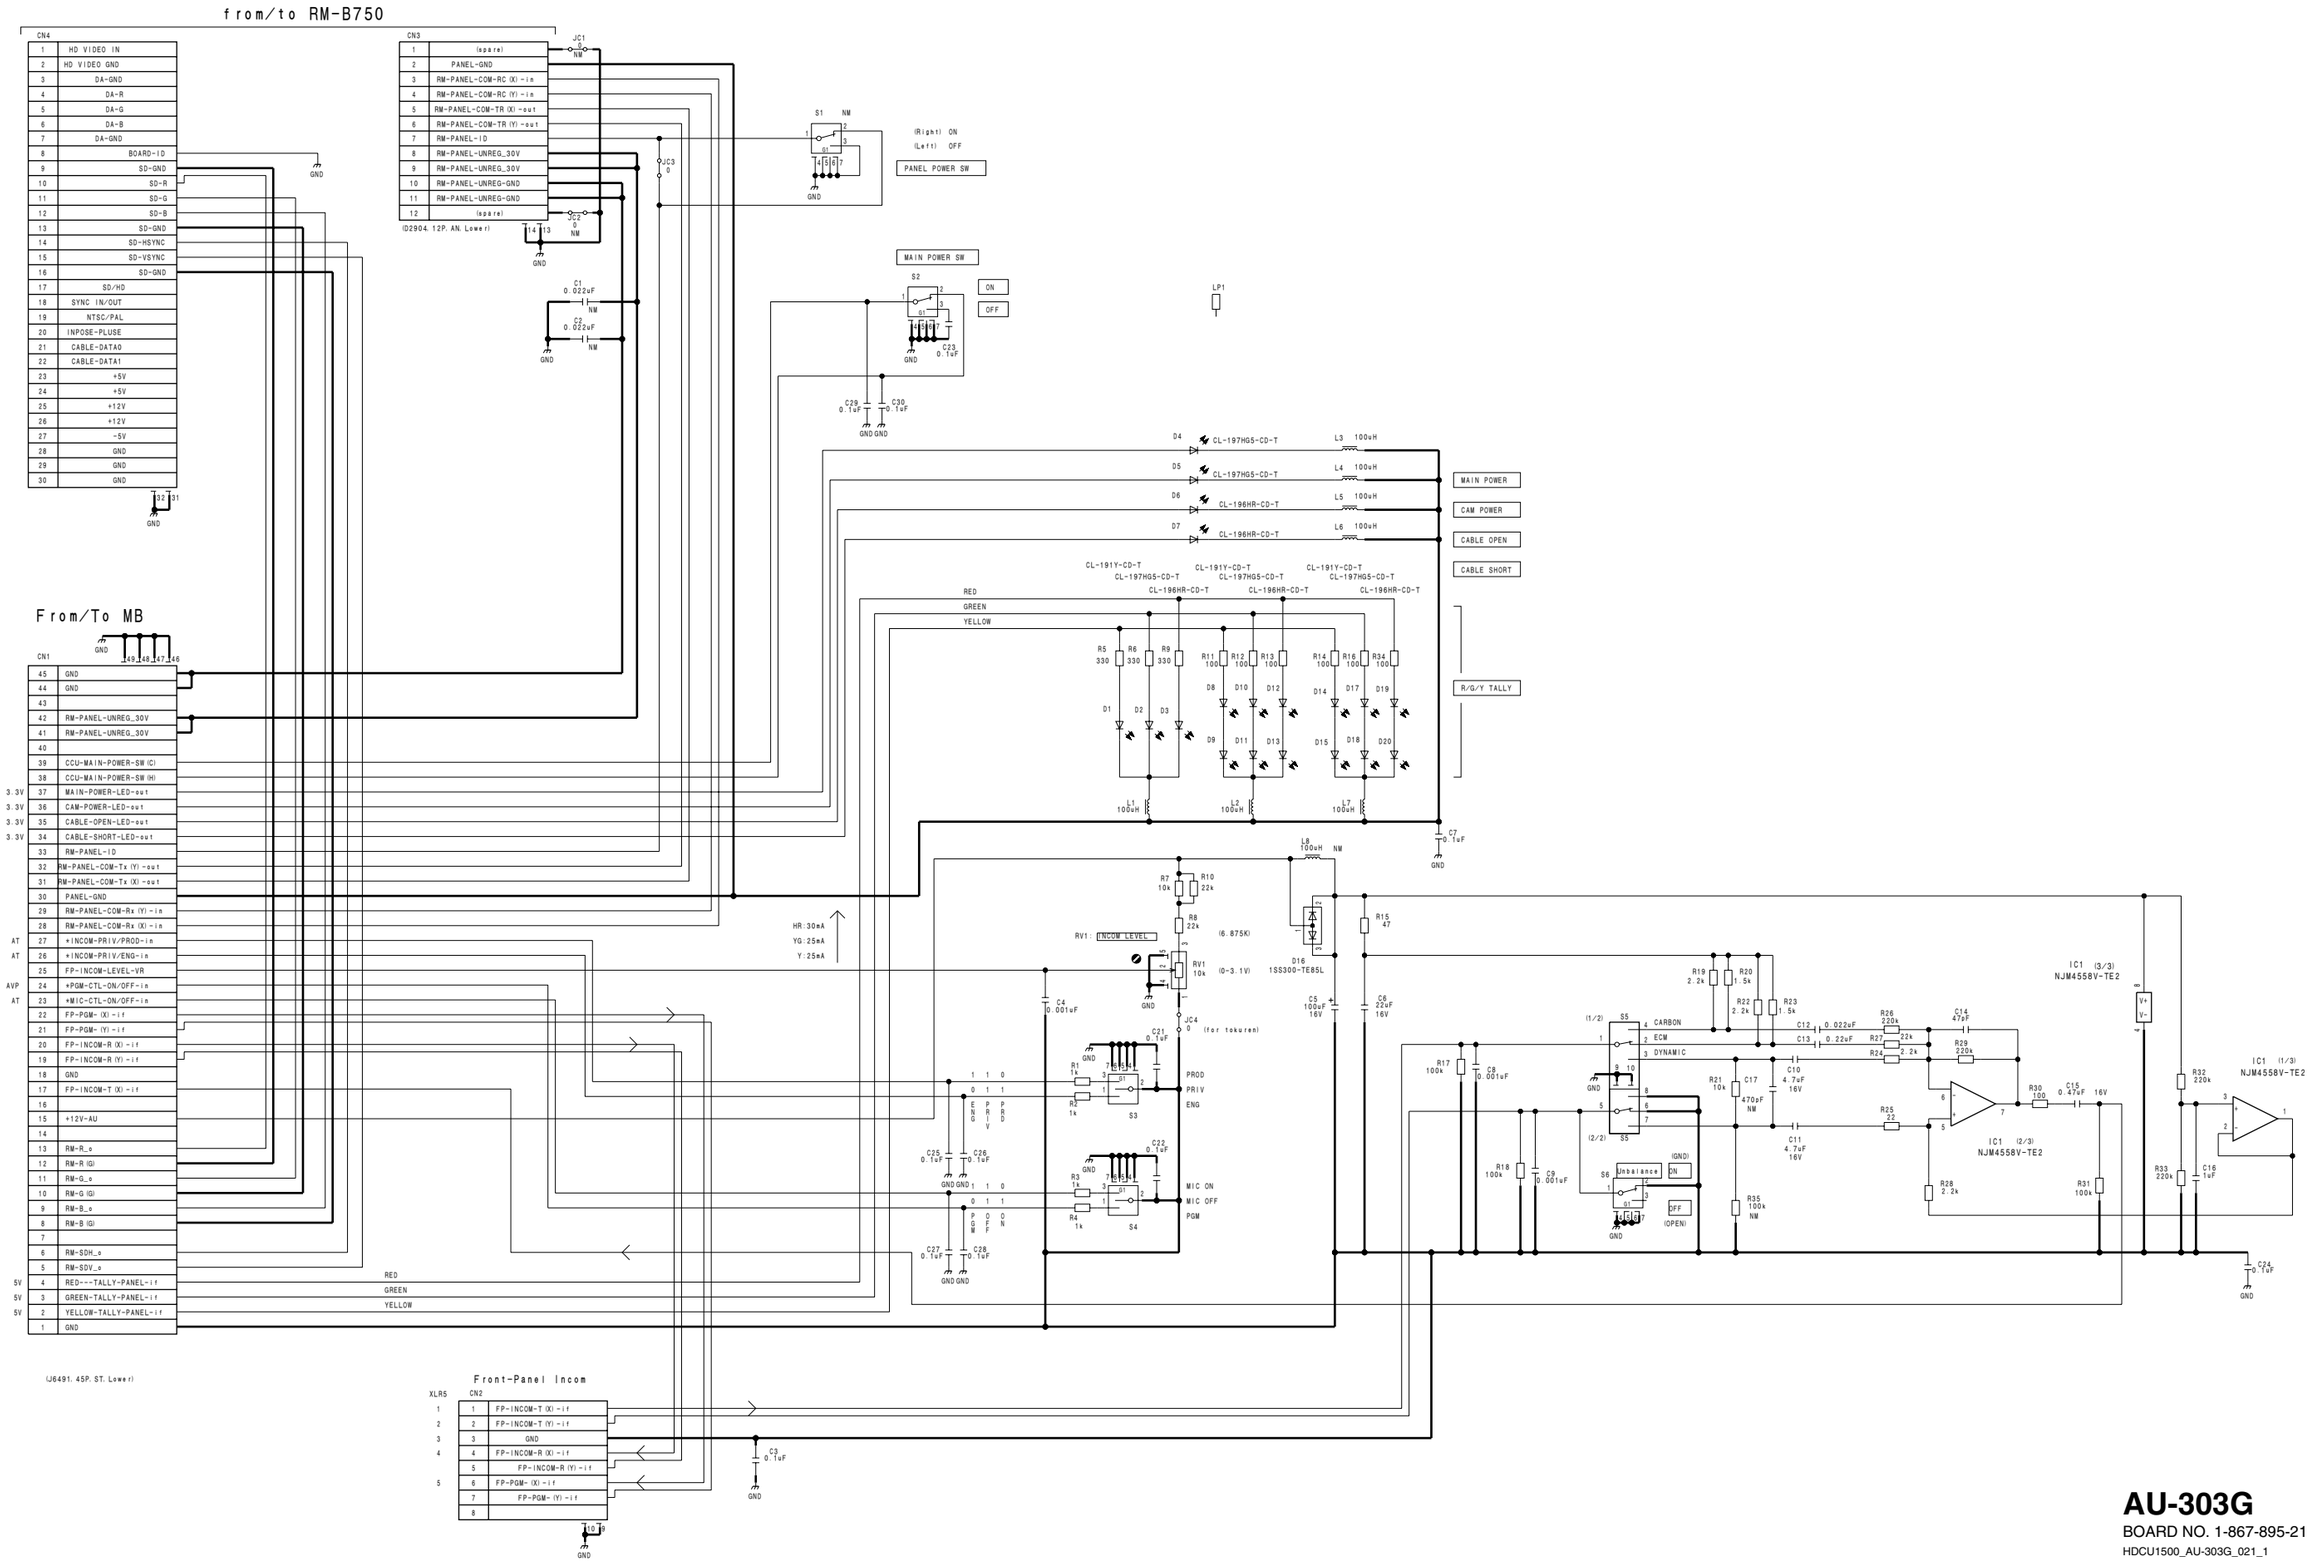


AU-303G
BOARD NO. 1-867-895-21
HDCU1500_AU-303G_021_1

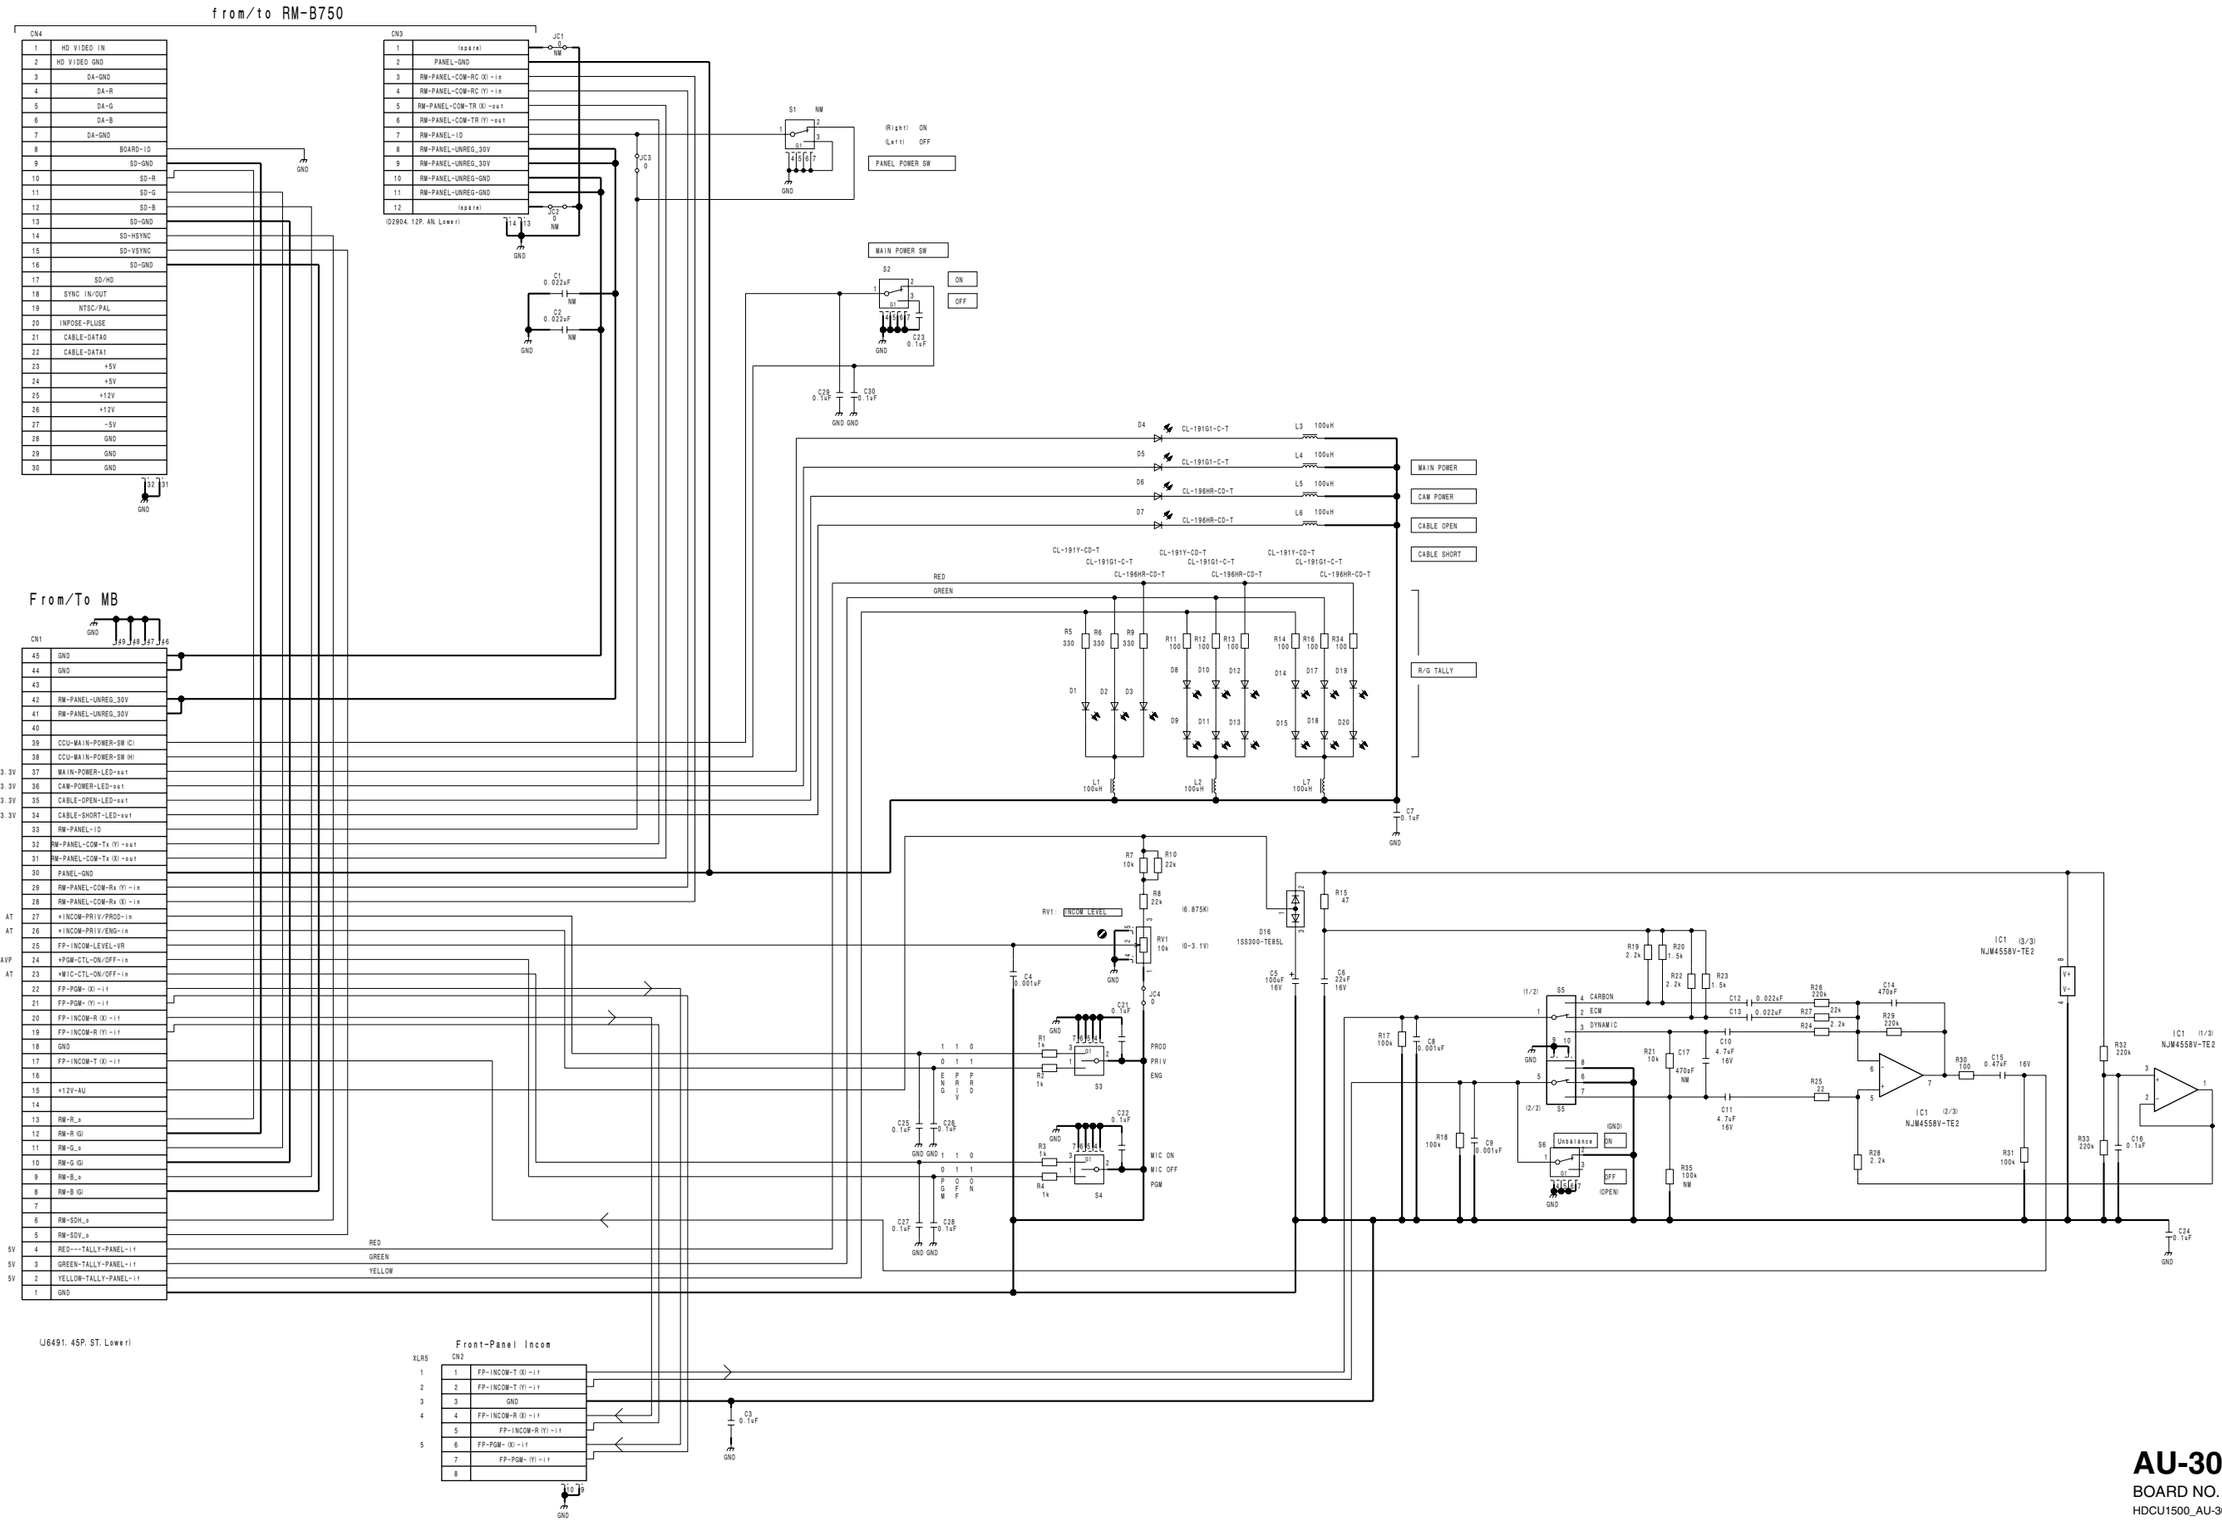



AU-303
BOARD NO. 1-867-895-11
HDCU1500_AU-303_011_1

AVP-6 (1/8)
SUFFIX: -11, -12


AVP-6 (1/8)
SUFFIX: -11, -12

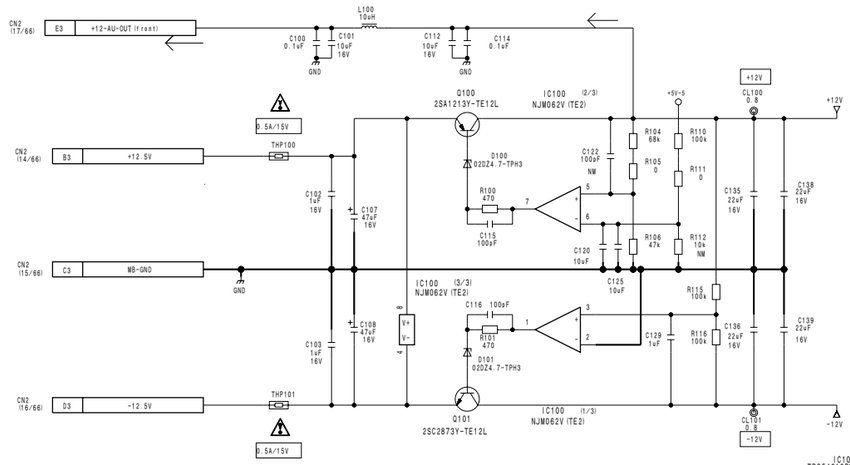


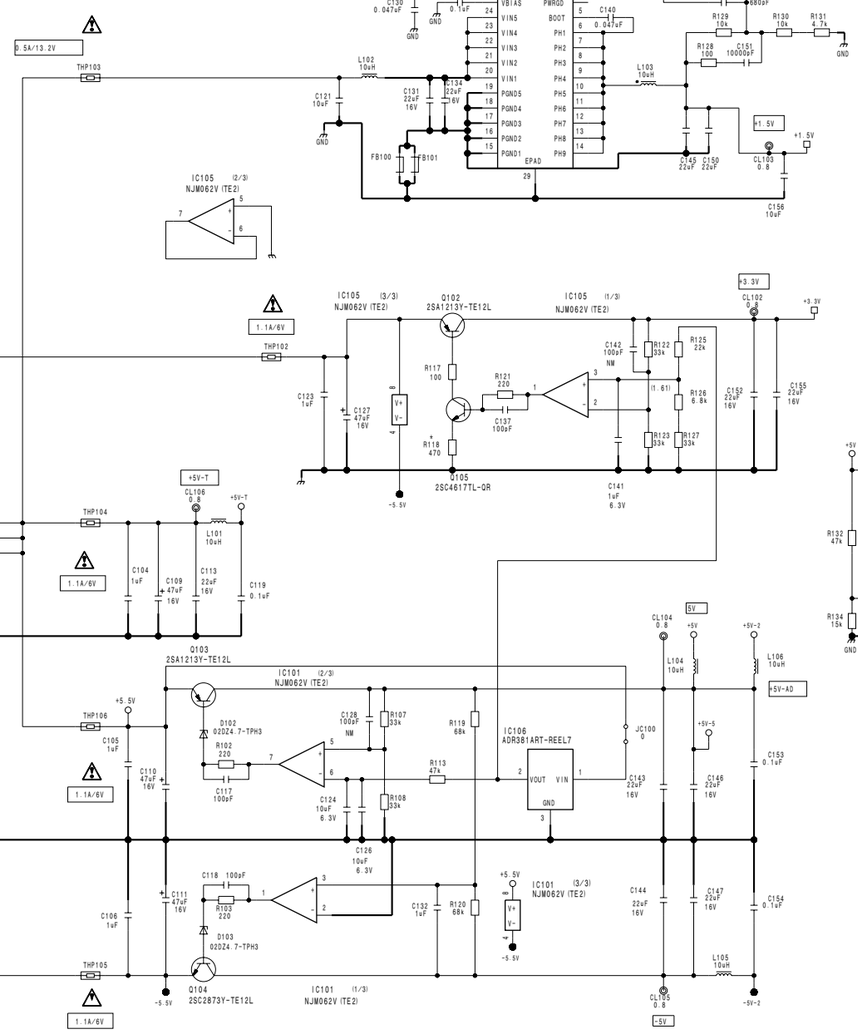


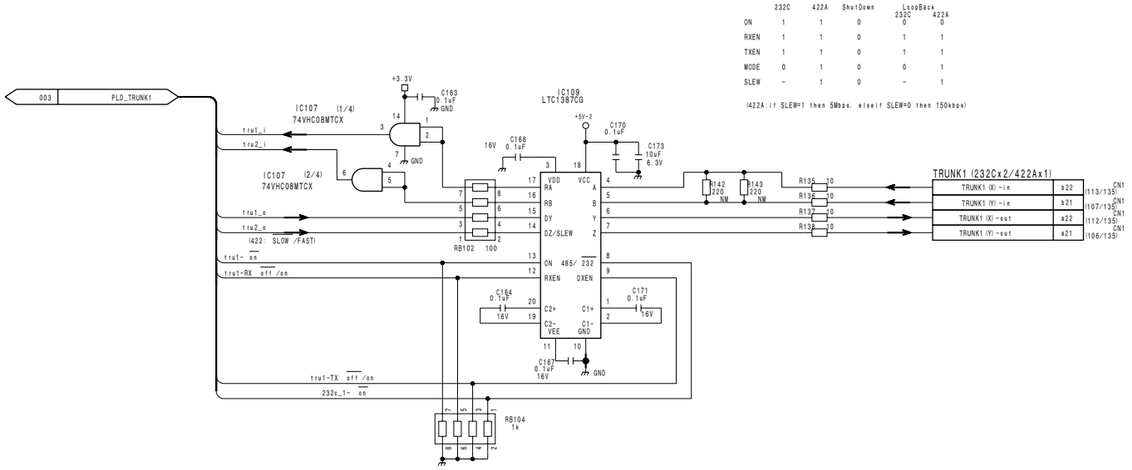

MARK	CHANGED INFORMATION	Lot No.
*	R118 100 → 470	12-

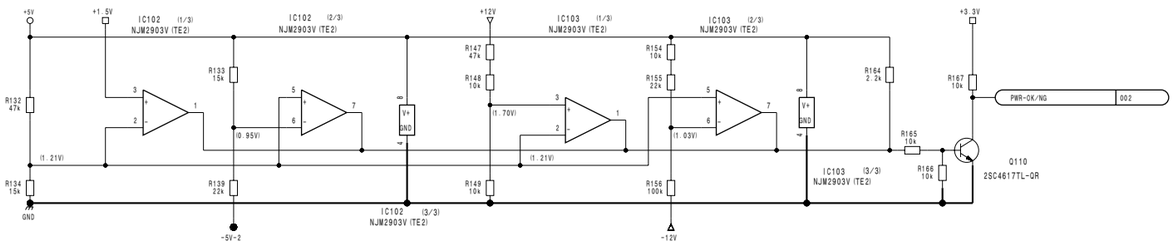


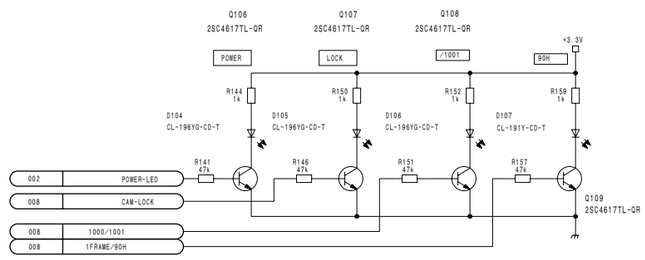




AVP-6 (1/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_1

AVP-6 (2/8)
SUFFIX: -11, -12

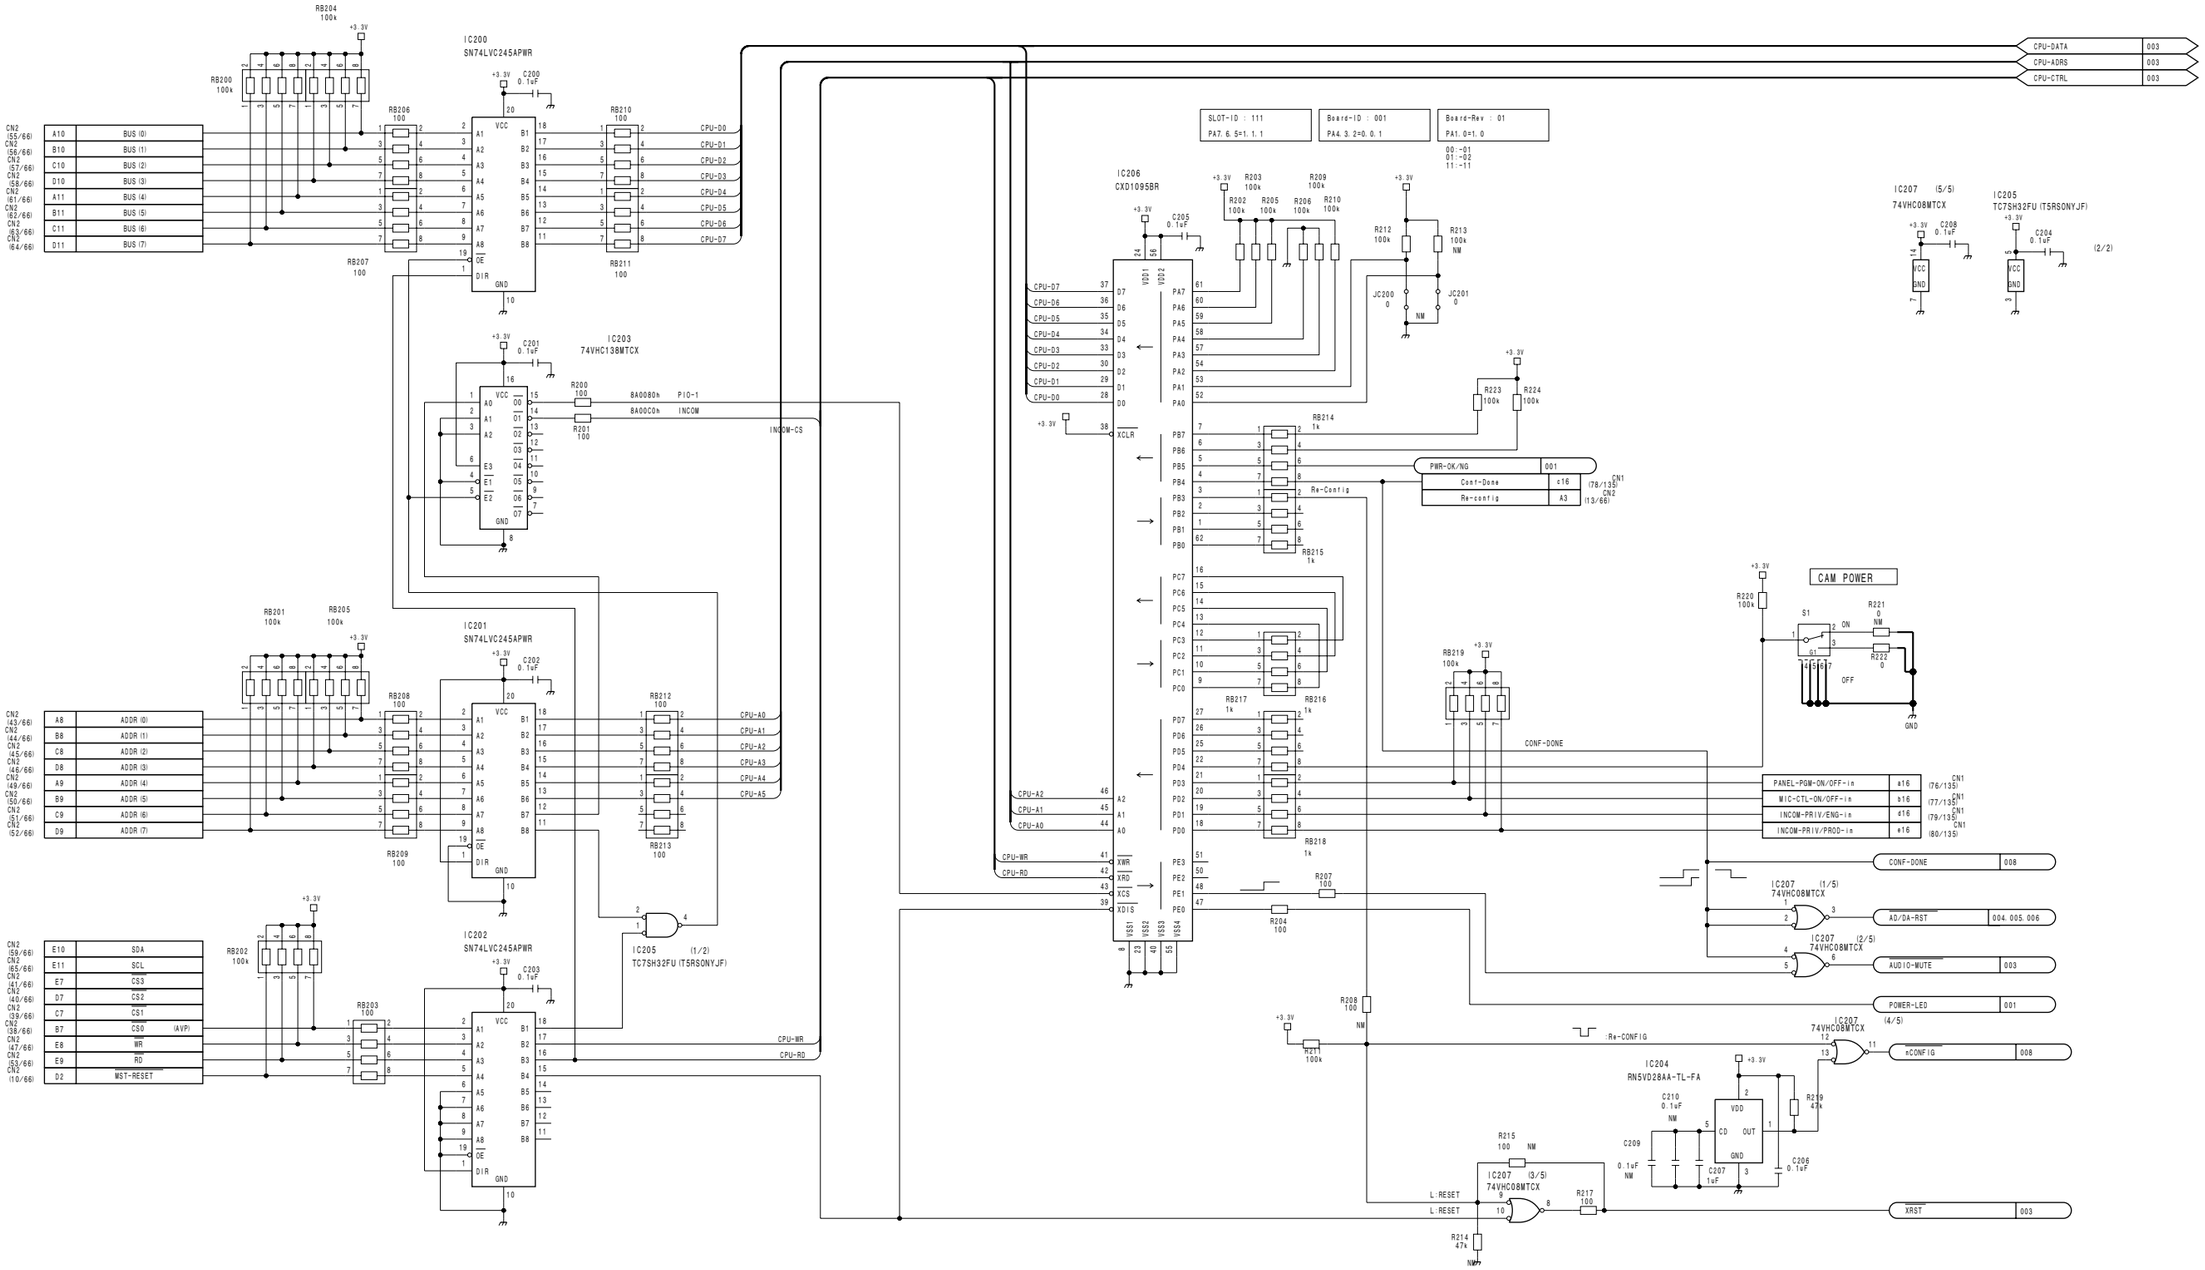

7-18


AVP-6 (2/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_2

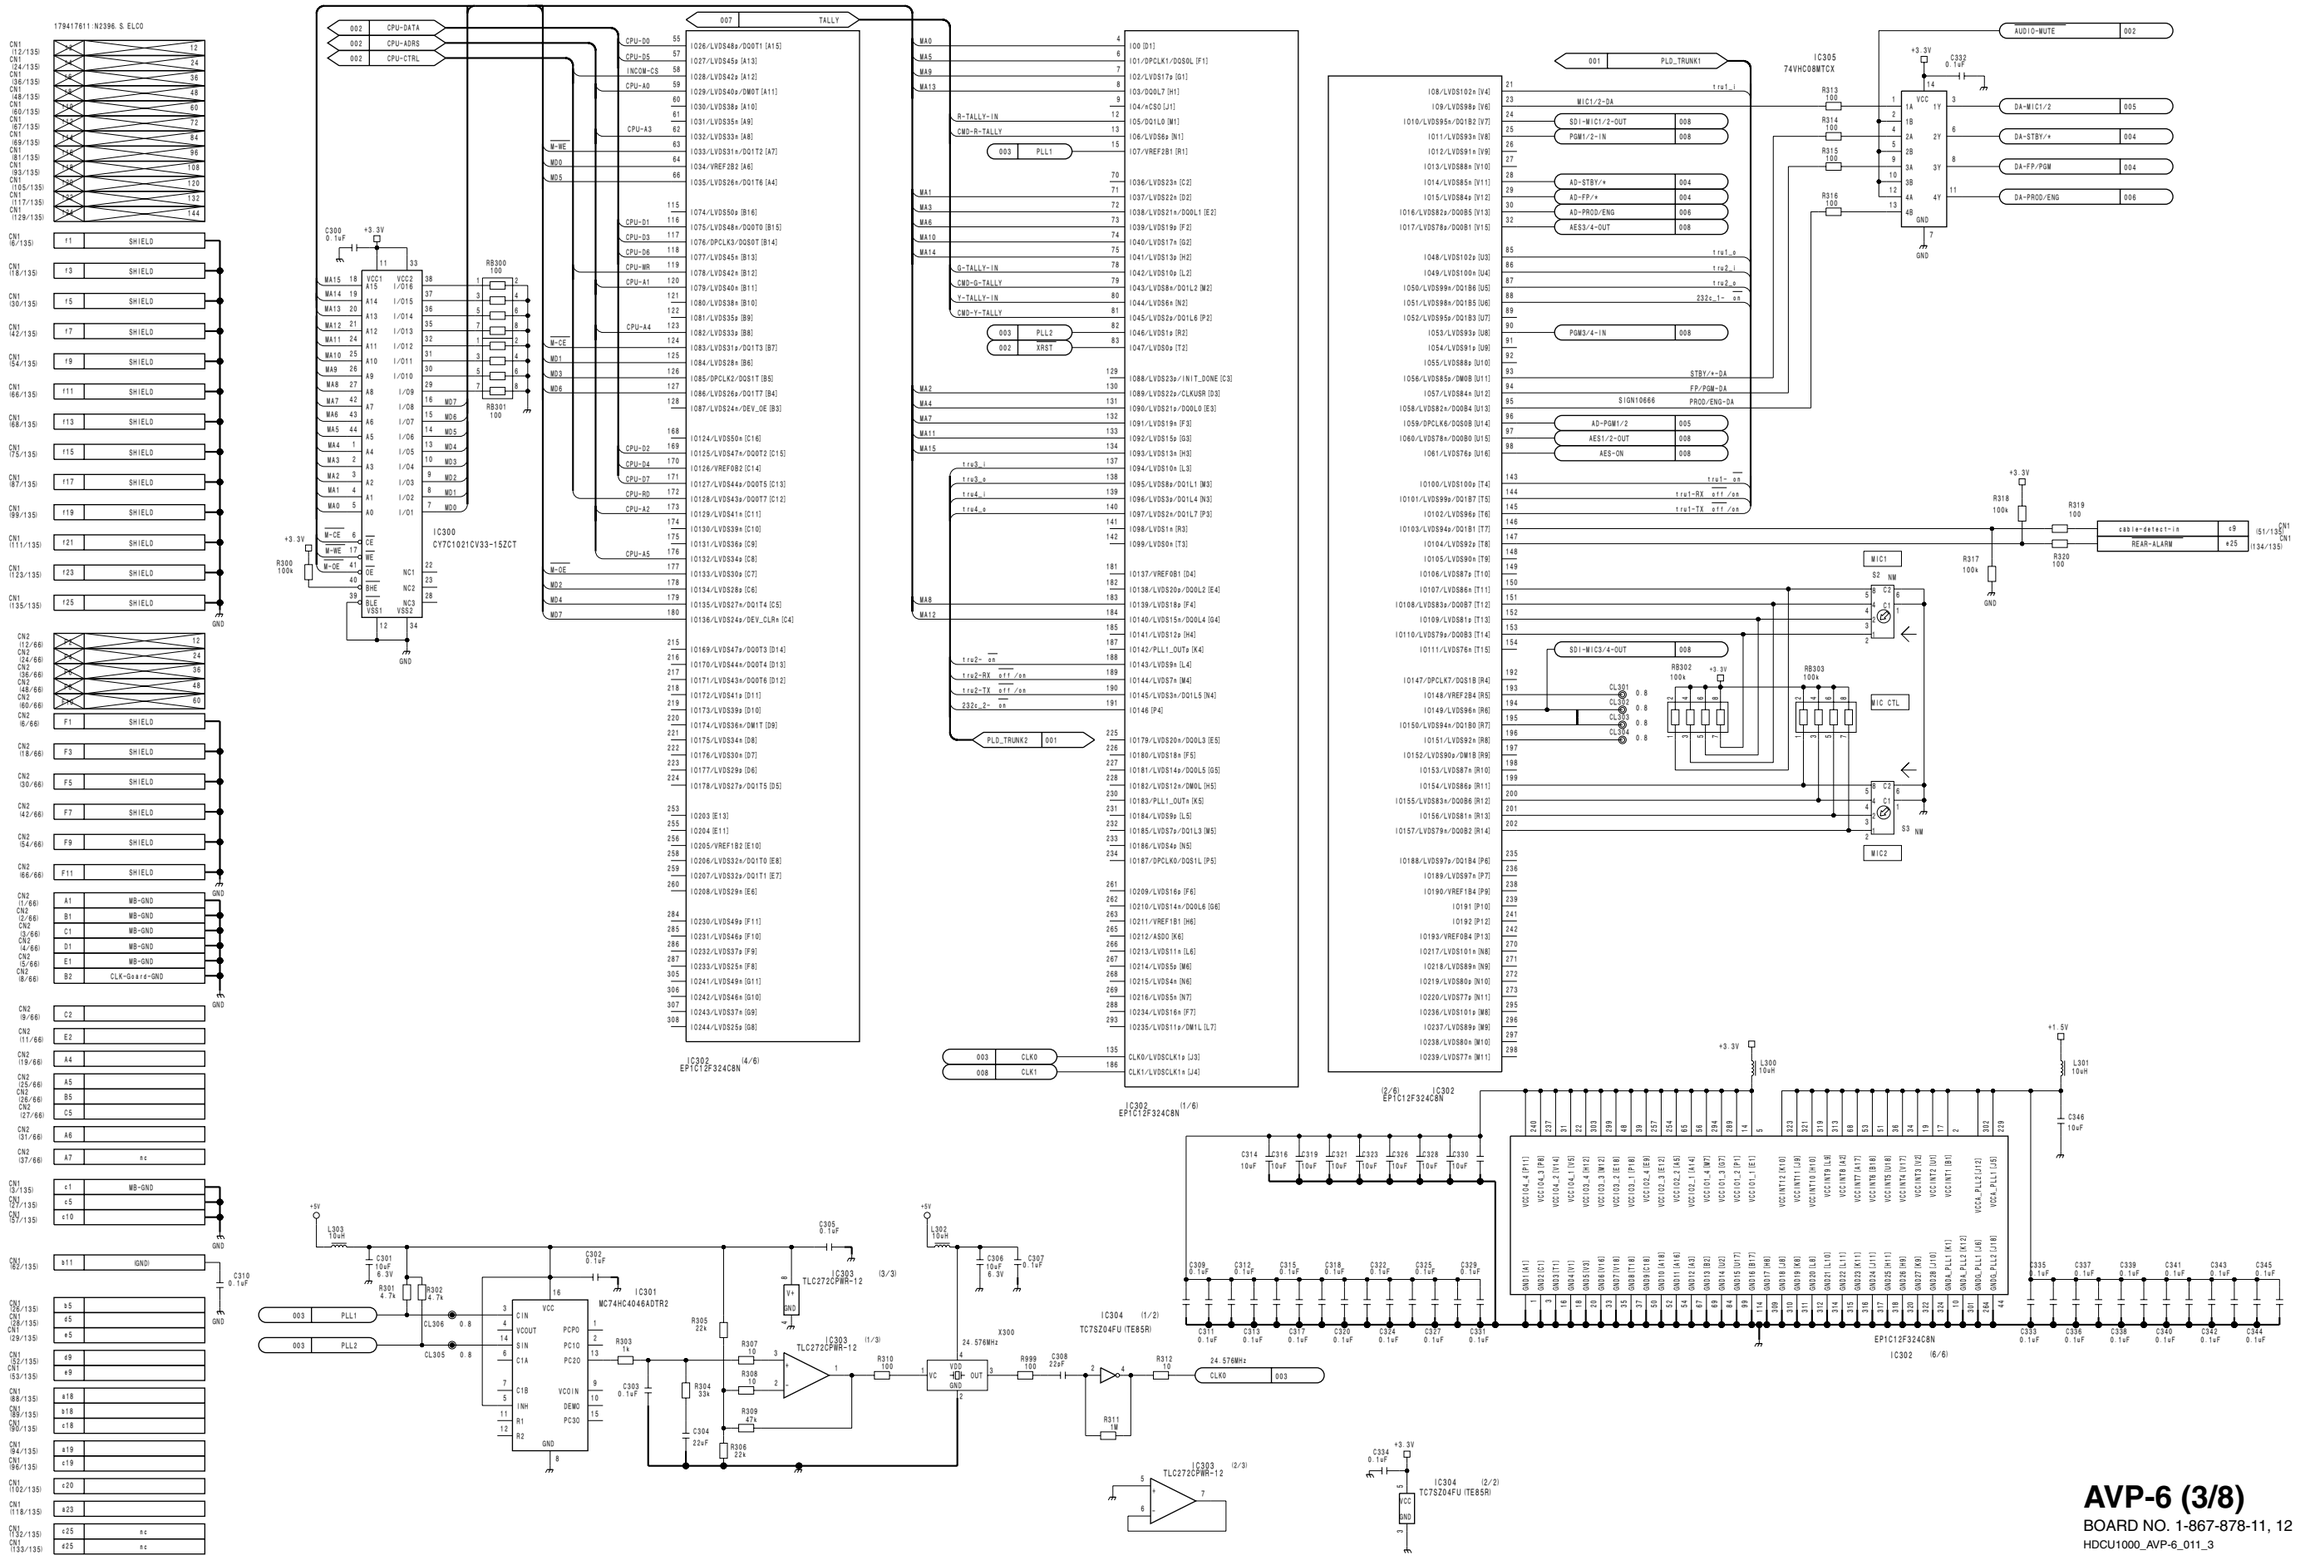

AVP-6 (3/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_3

AVP-6 (4/8)
SUFFIX: -11, -12

AVP-6 (4/8)
SUFFIX: -11, -12

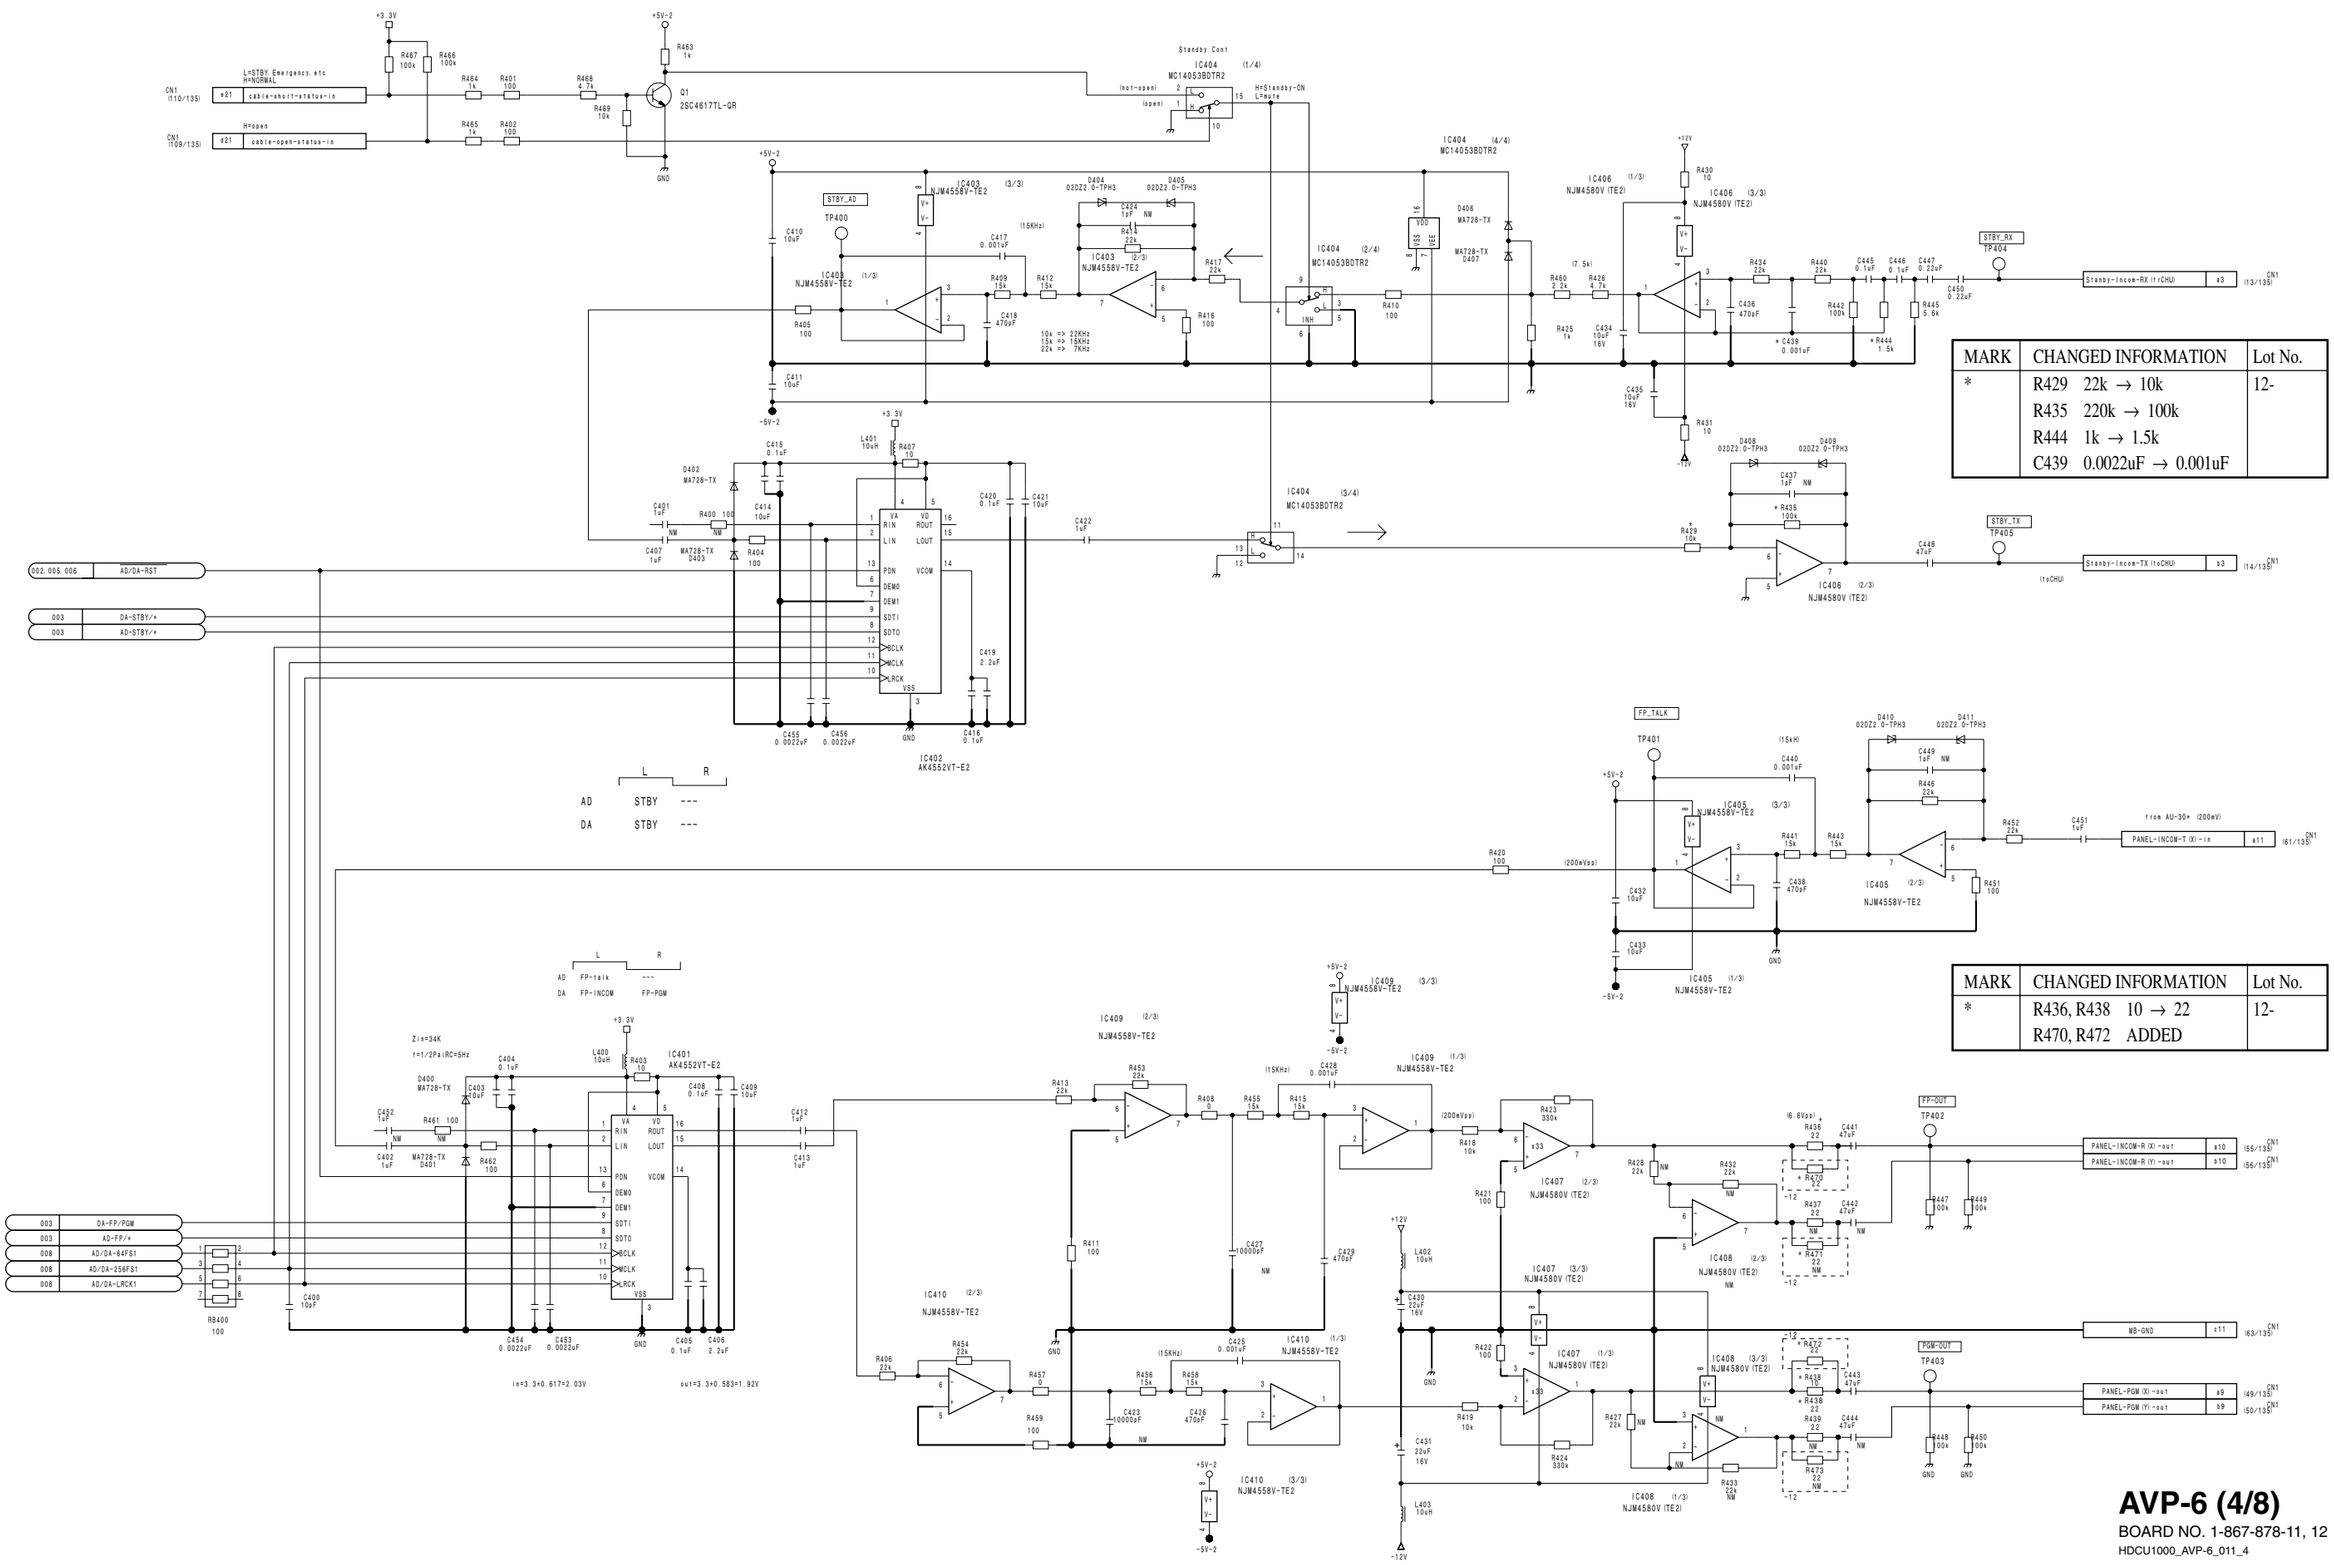


MARK	CHANGED INFORMATION	Lot No.
*	R429 22k → 10k	12-
	R435 220k → 100k	
	R444 1k → 1.5k	
	C439 0.0022uF → 0.001uF	

MARK	CHANGED INFORMATION	Lot No.
*	R436, R438 10 → 22	12-
	R470, R472 ADDED	

AVP-6 (4/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_4

AVP-6 (5/8)
SUFFIX: -11, -12


AVP-6 (5/8)
SUFFIX: -11, -12

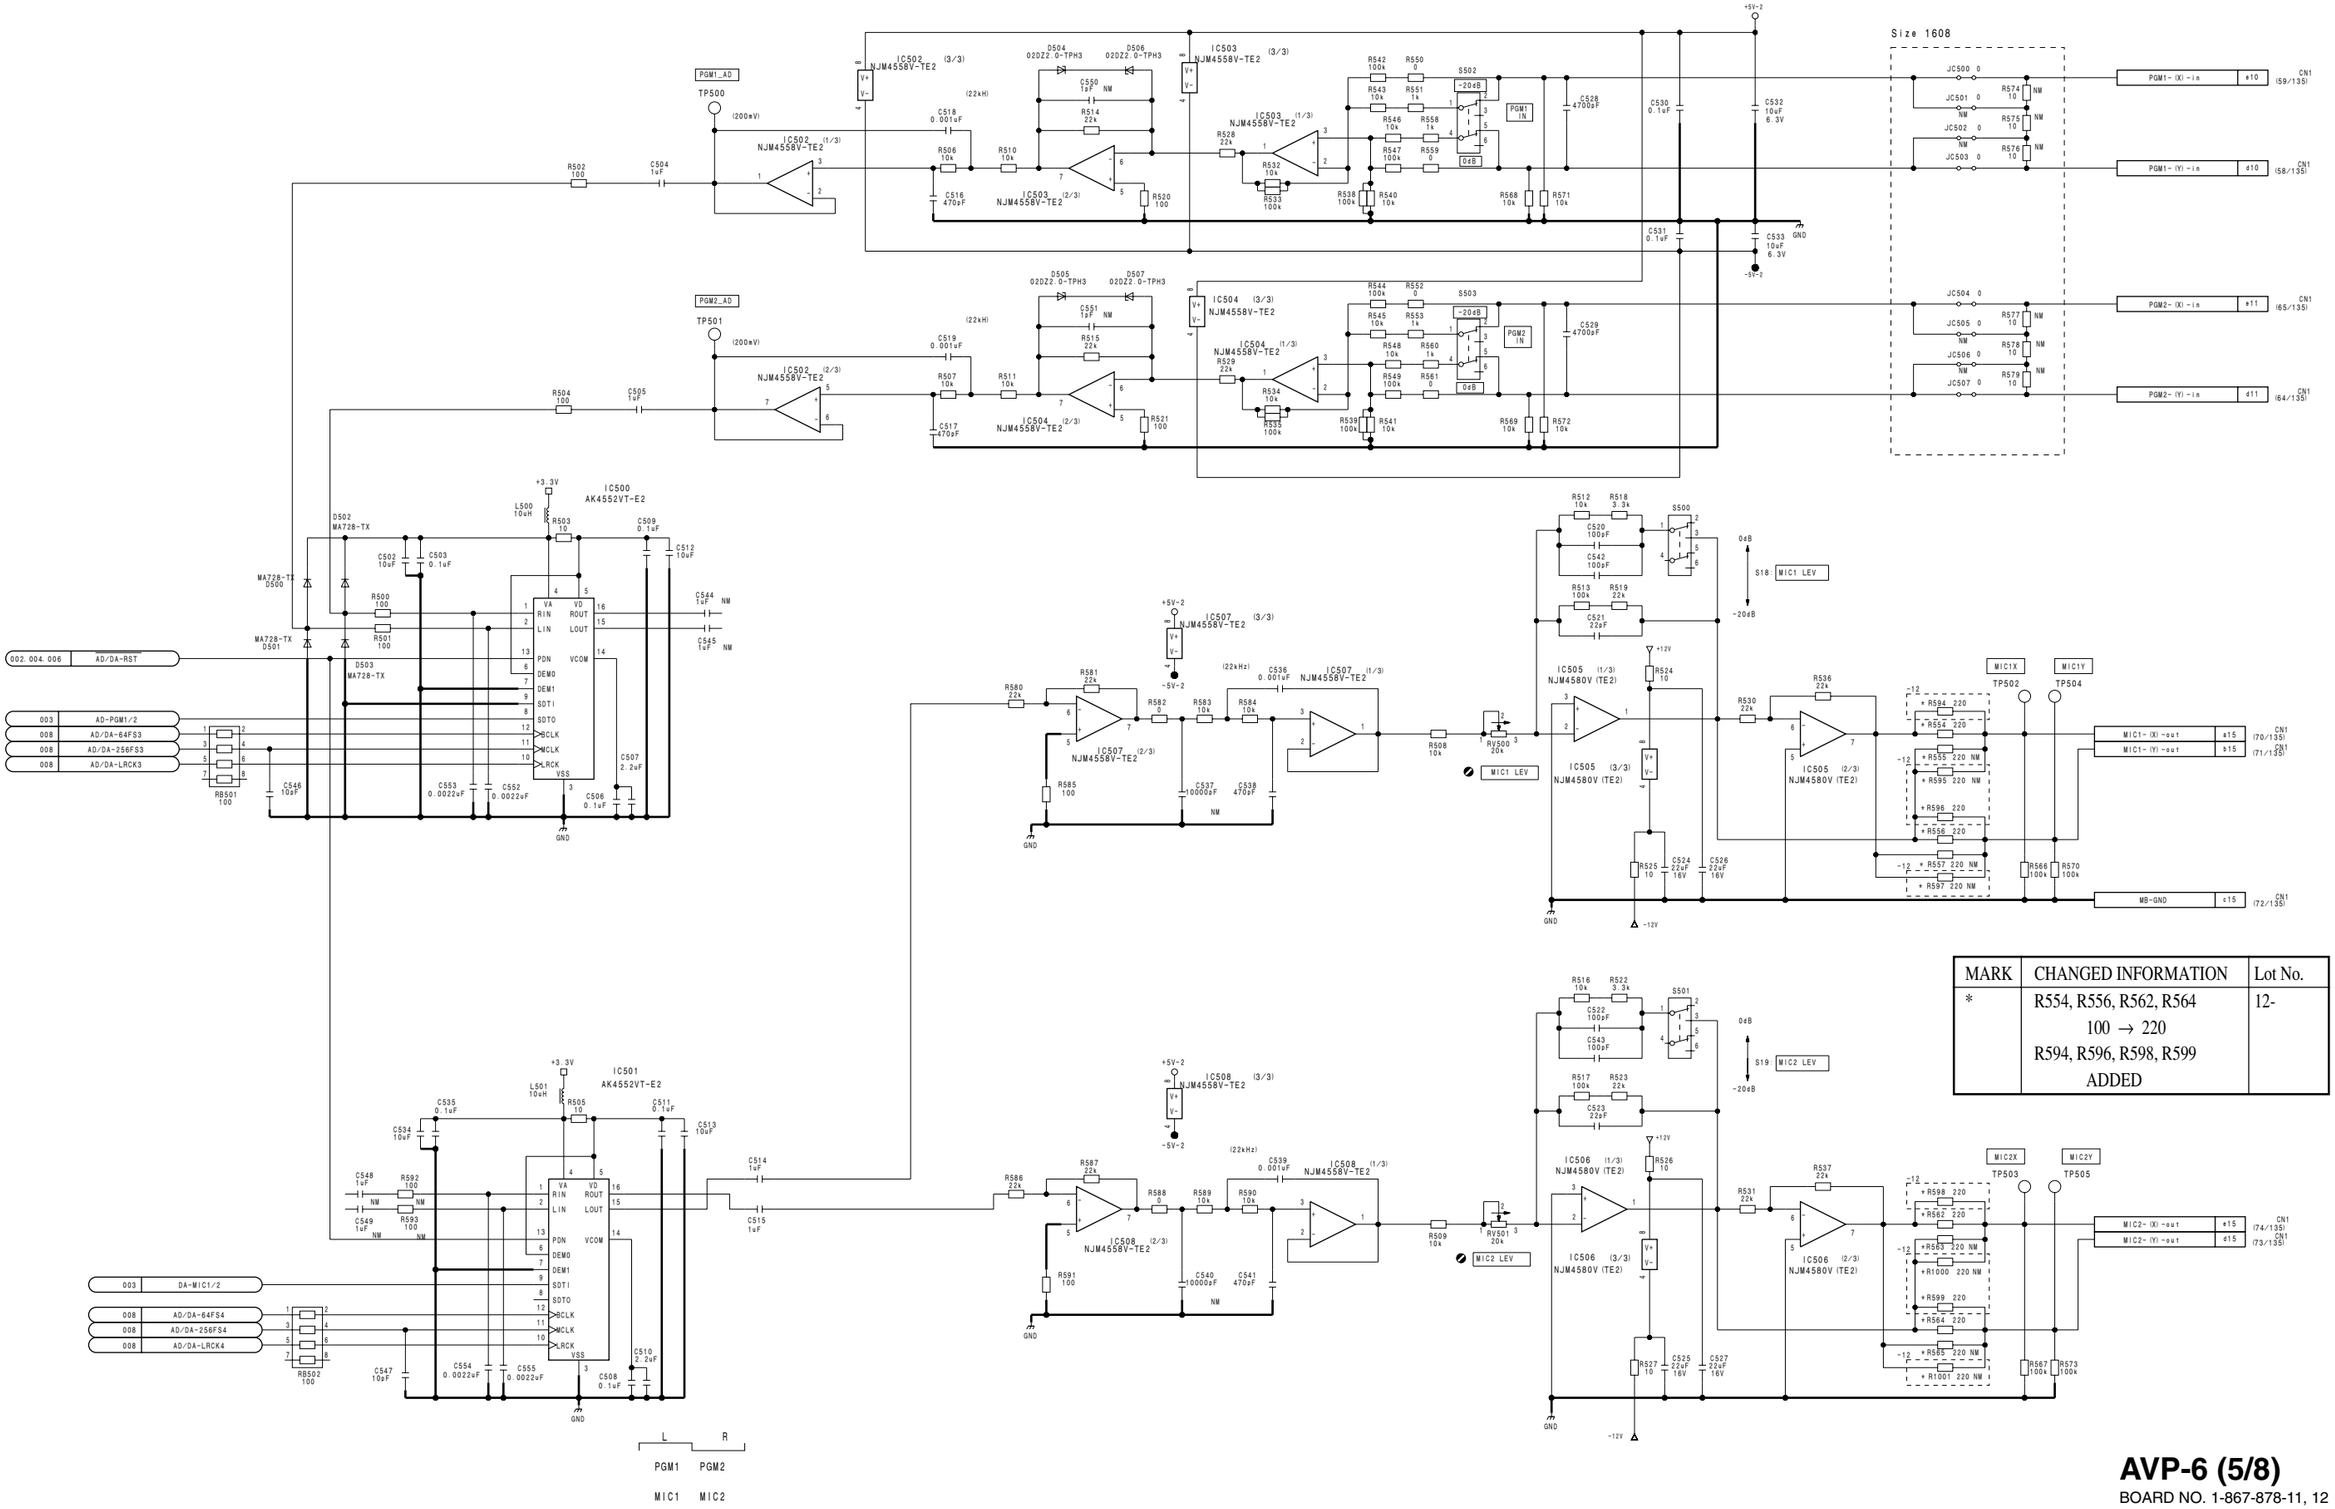

MARK	CHANGED INFORMATION	Lot No.
*	R554, R556, R562, R564 100 → 220 R594, R596, R598, R599 ADDED	12-

AVP-6 (5/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_5

AVP-6 (6/8)
SUFFIX: -11, -12

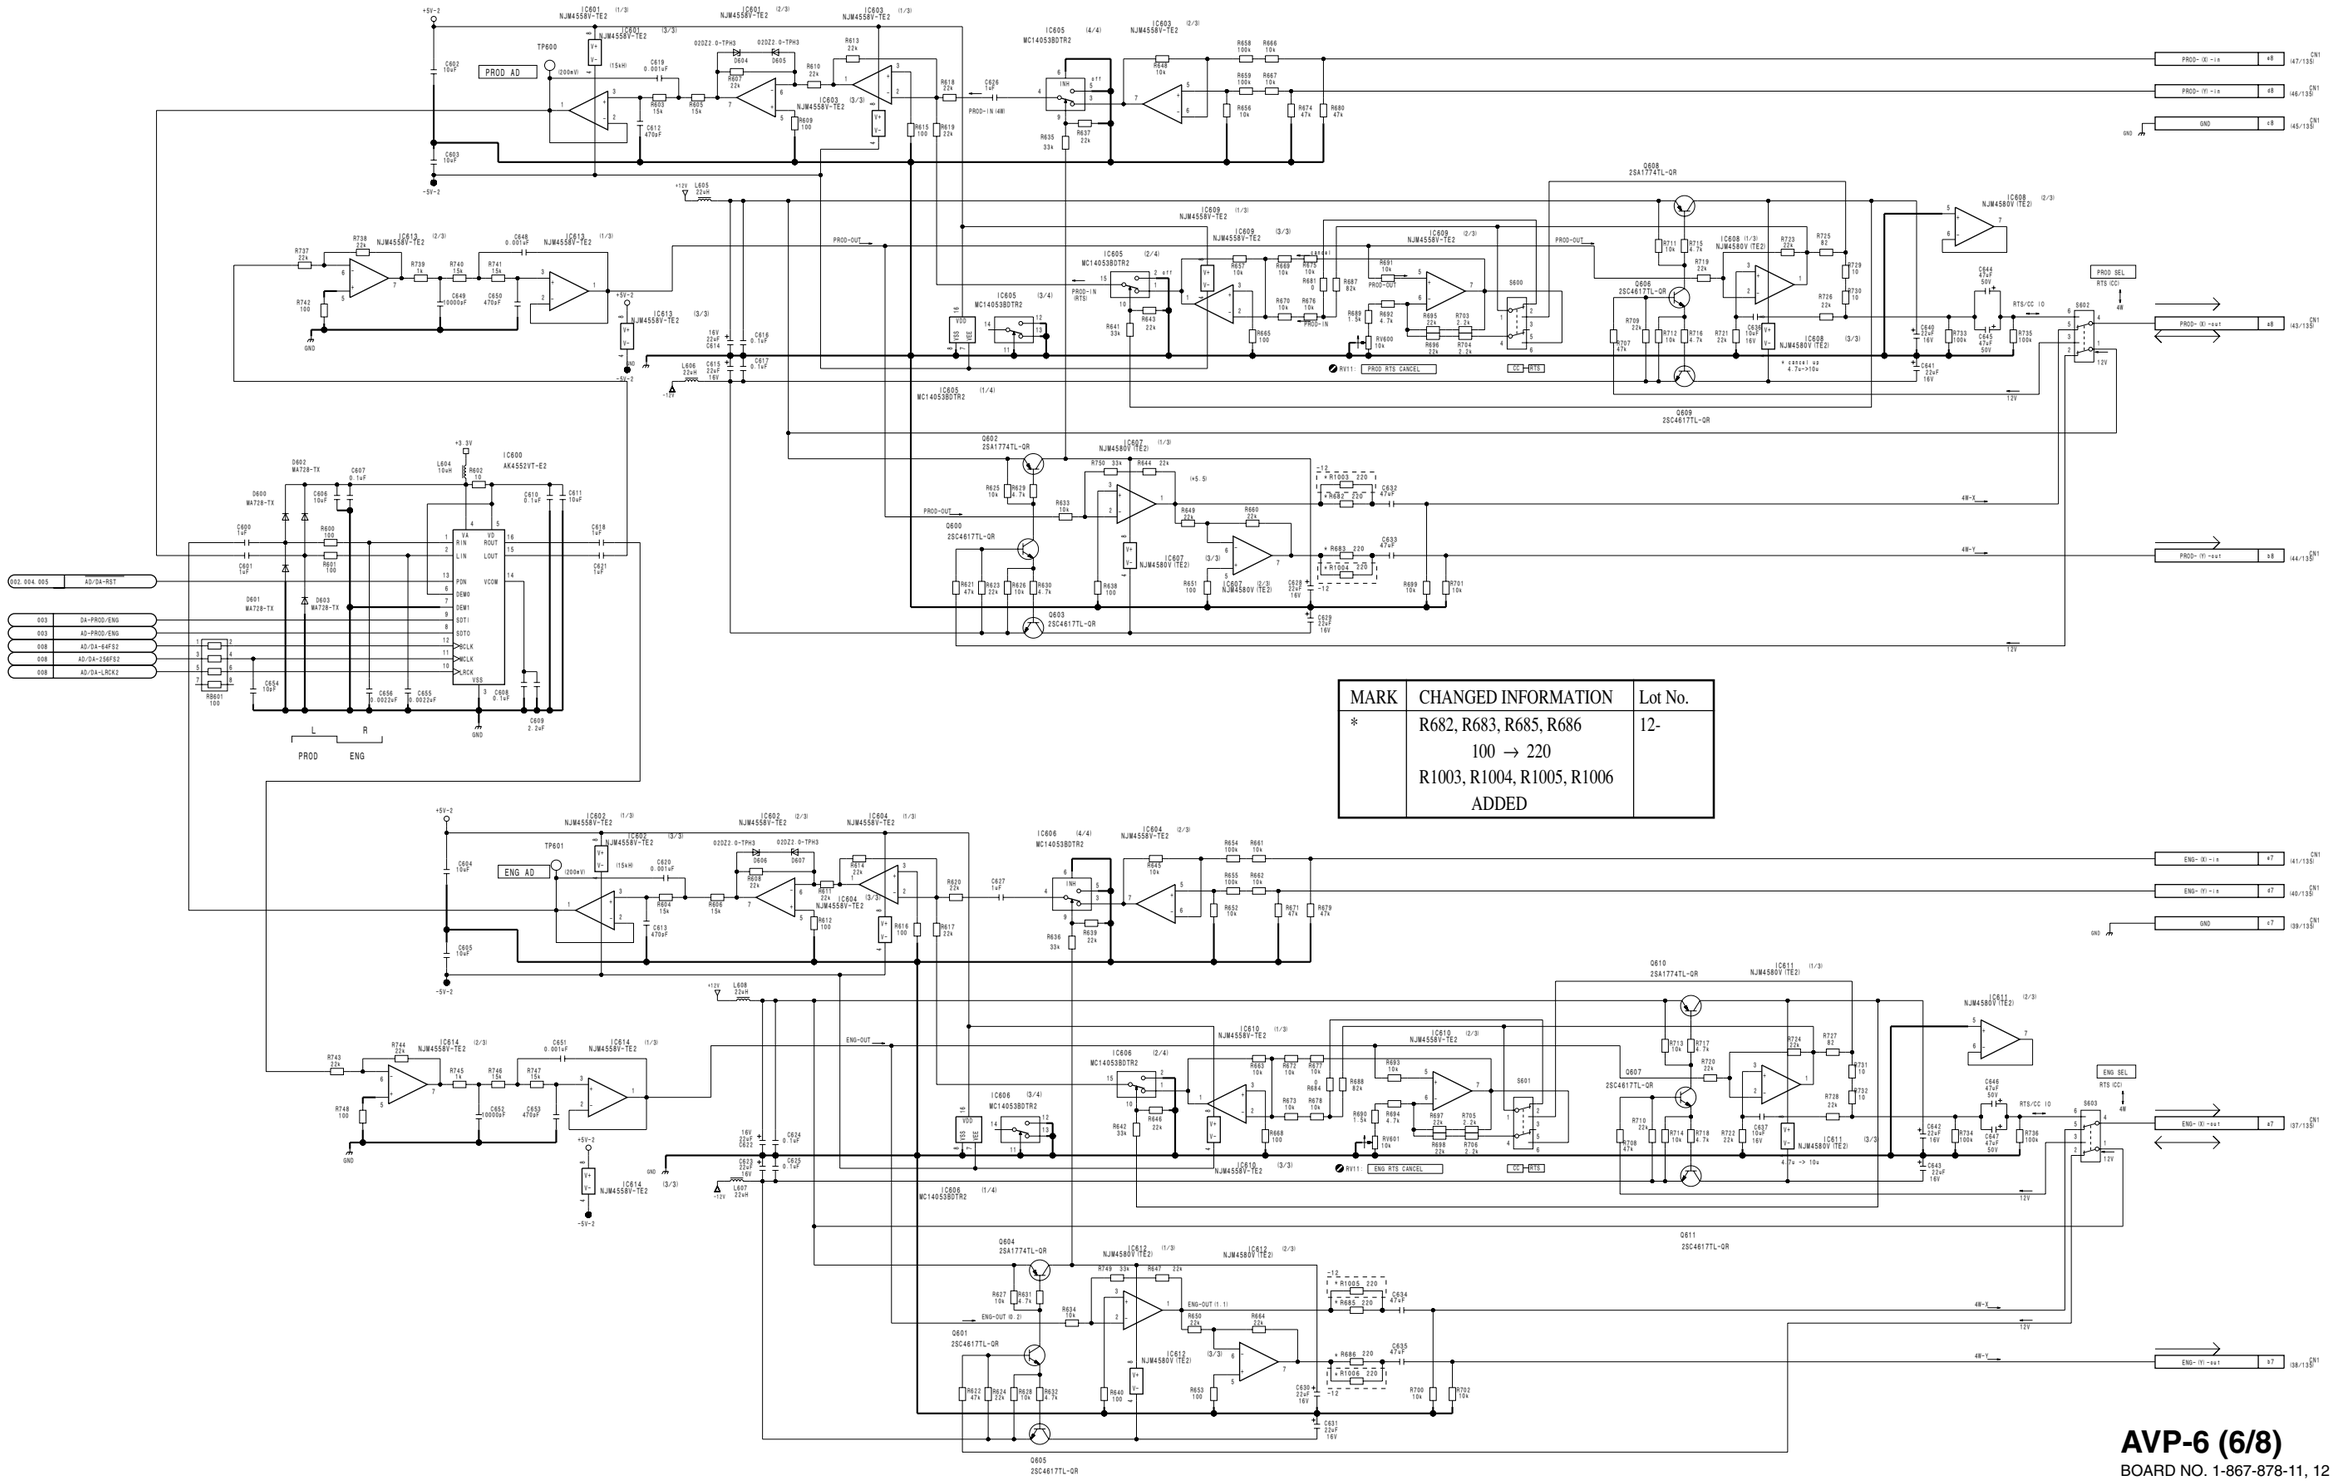


MARK	CHANGED INFORMATION	Lot No.
*	R682, R683, R685, R686 100 → 220 R1003, R1004, R1005, R1006 ADDED	12-

7-22

AVP-6 (6/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_6


AVP-6 (7/8)
SUFFIX: -11, -12

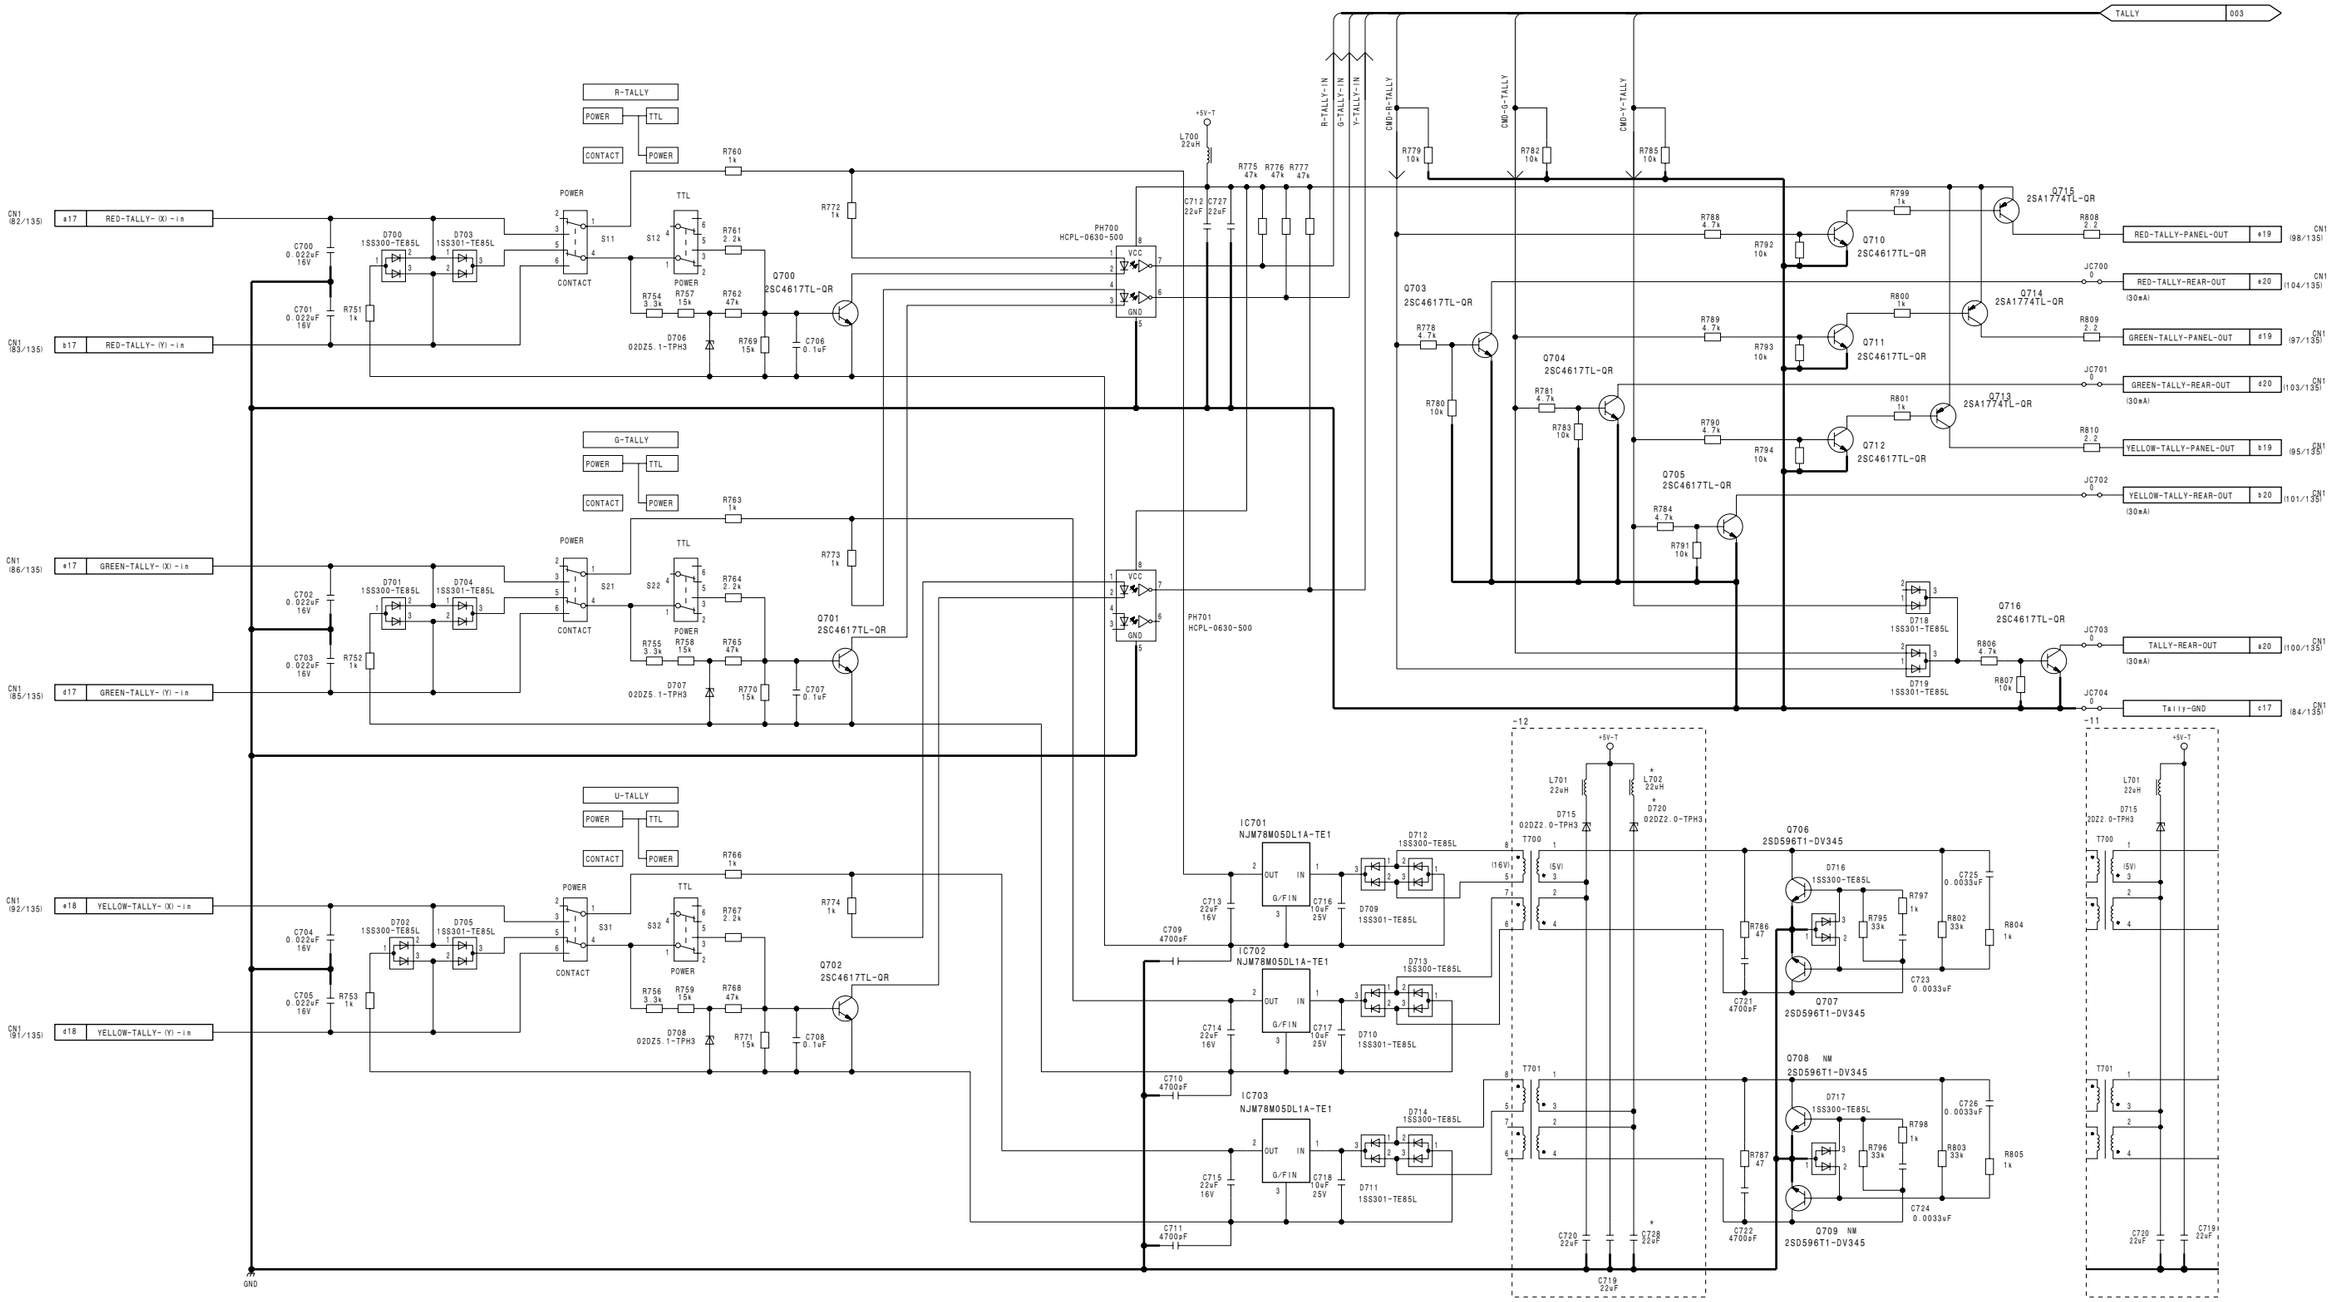



MARK	CHANGED INFORMATION	Lot No.
*	C728, D720, L702 ADDED	12-


AVP-6 (7/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_7

AVP-6 (8/8)
SUFFIX: -11, -12

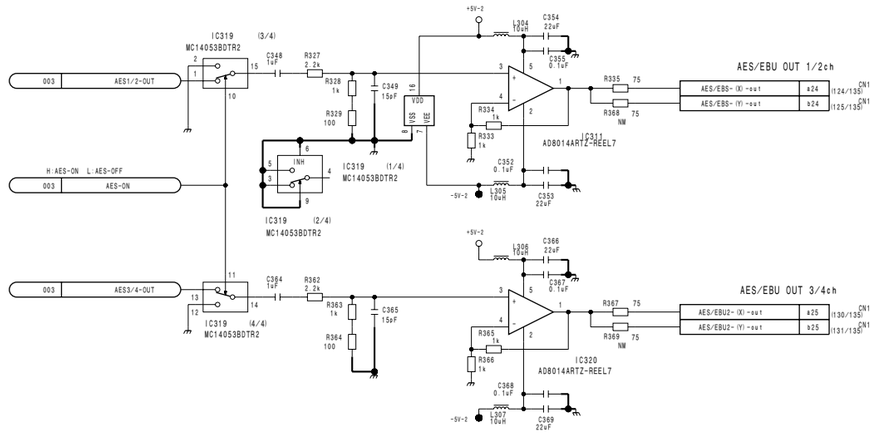

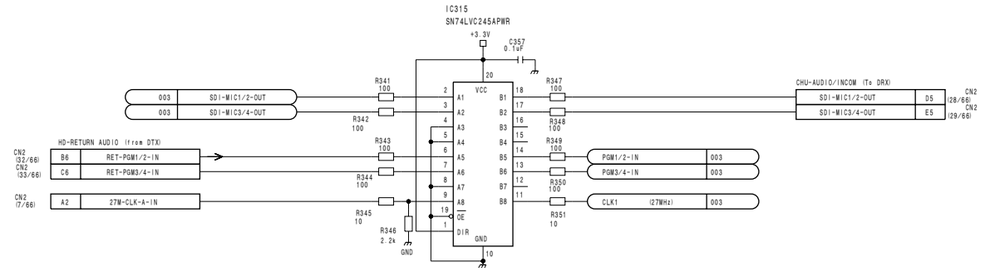


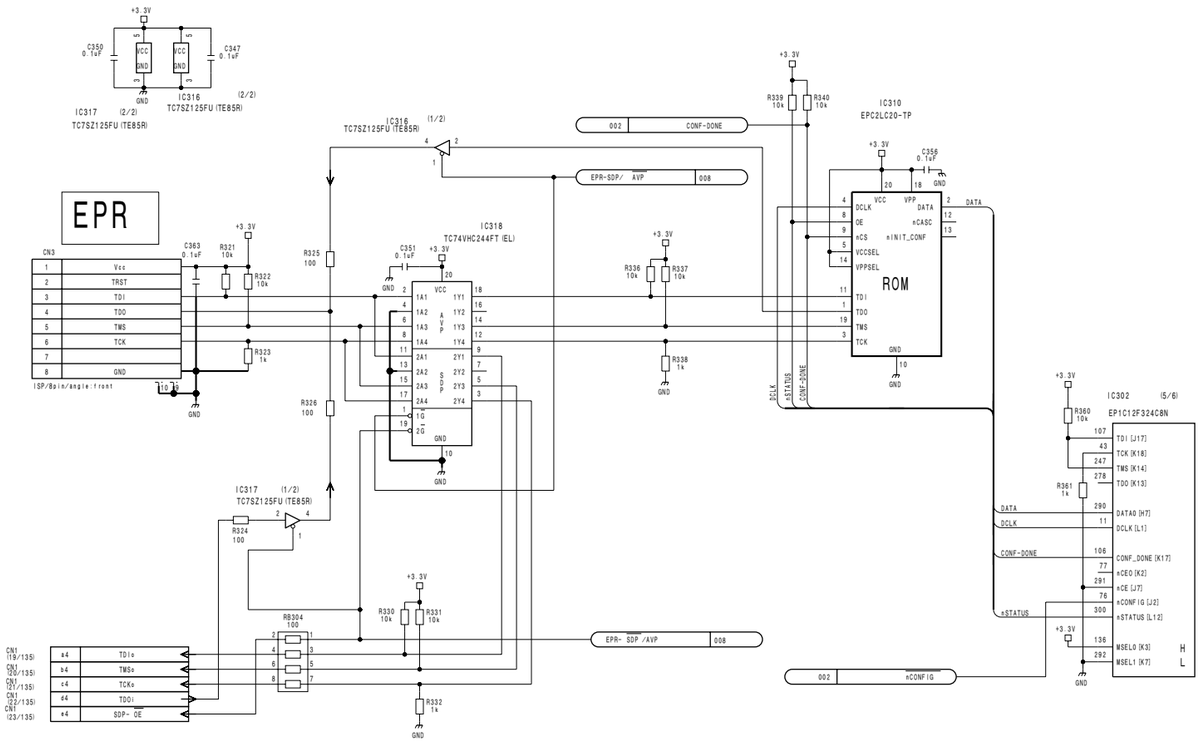

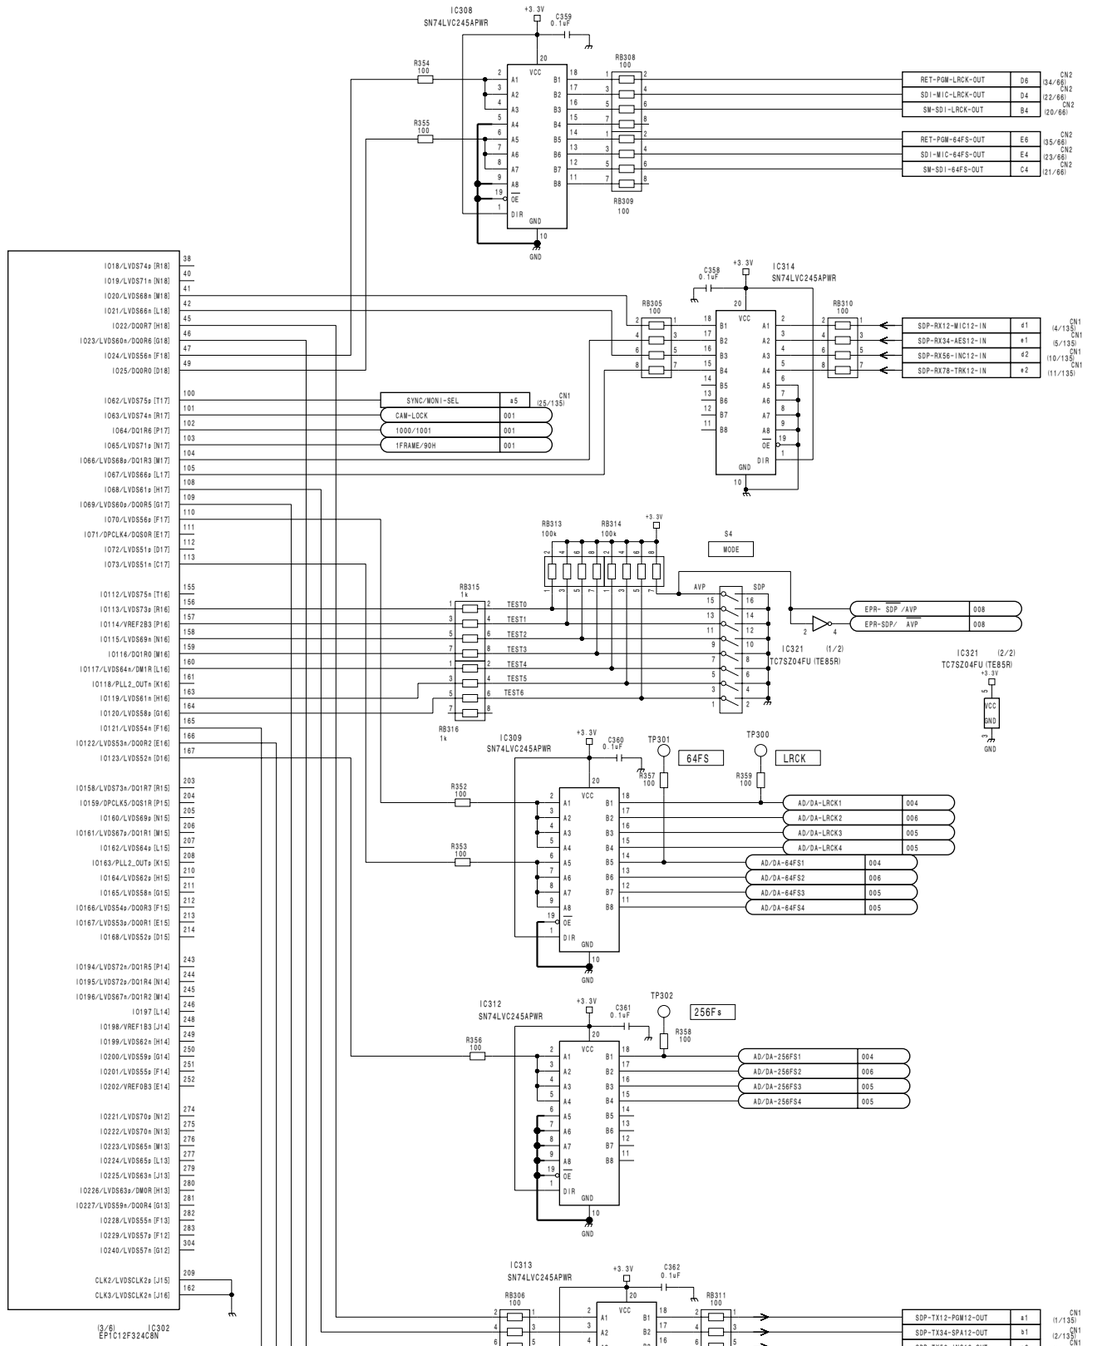


AVP-6 (8/8)
BOARD NO. 1-867-878-11, 12
HDCU1000_AVP-6_011_8

7-24

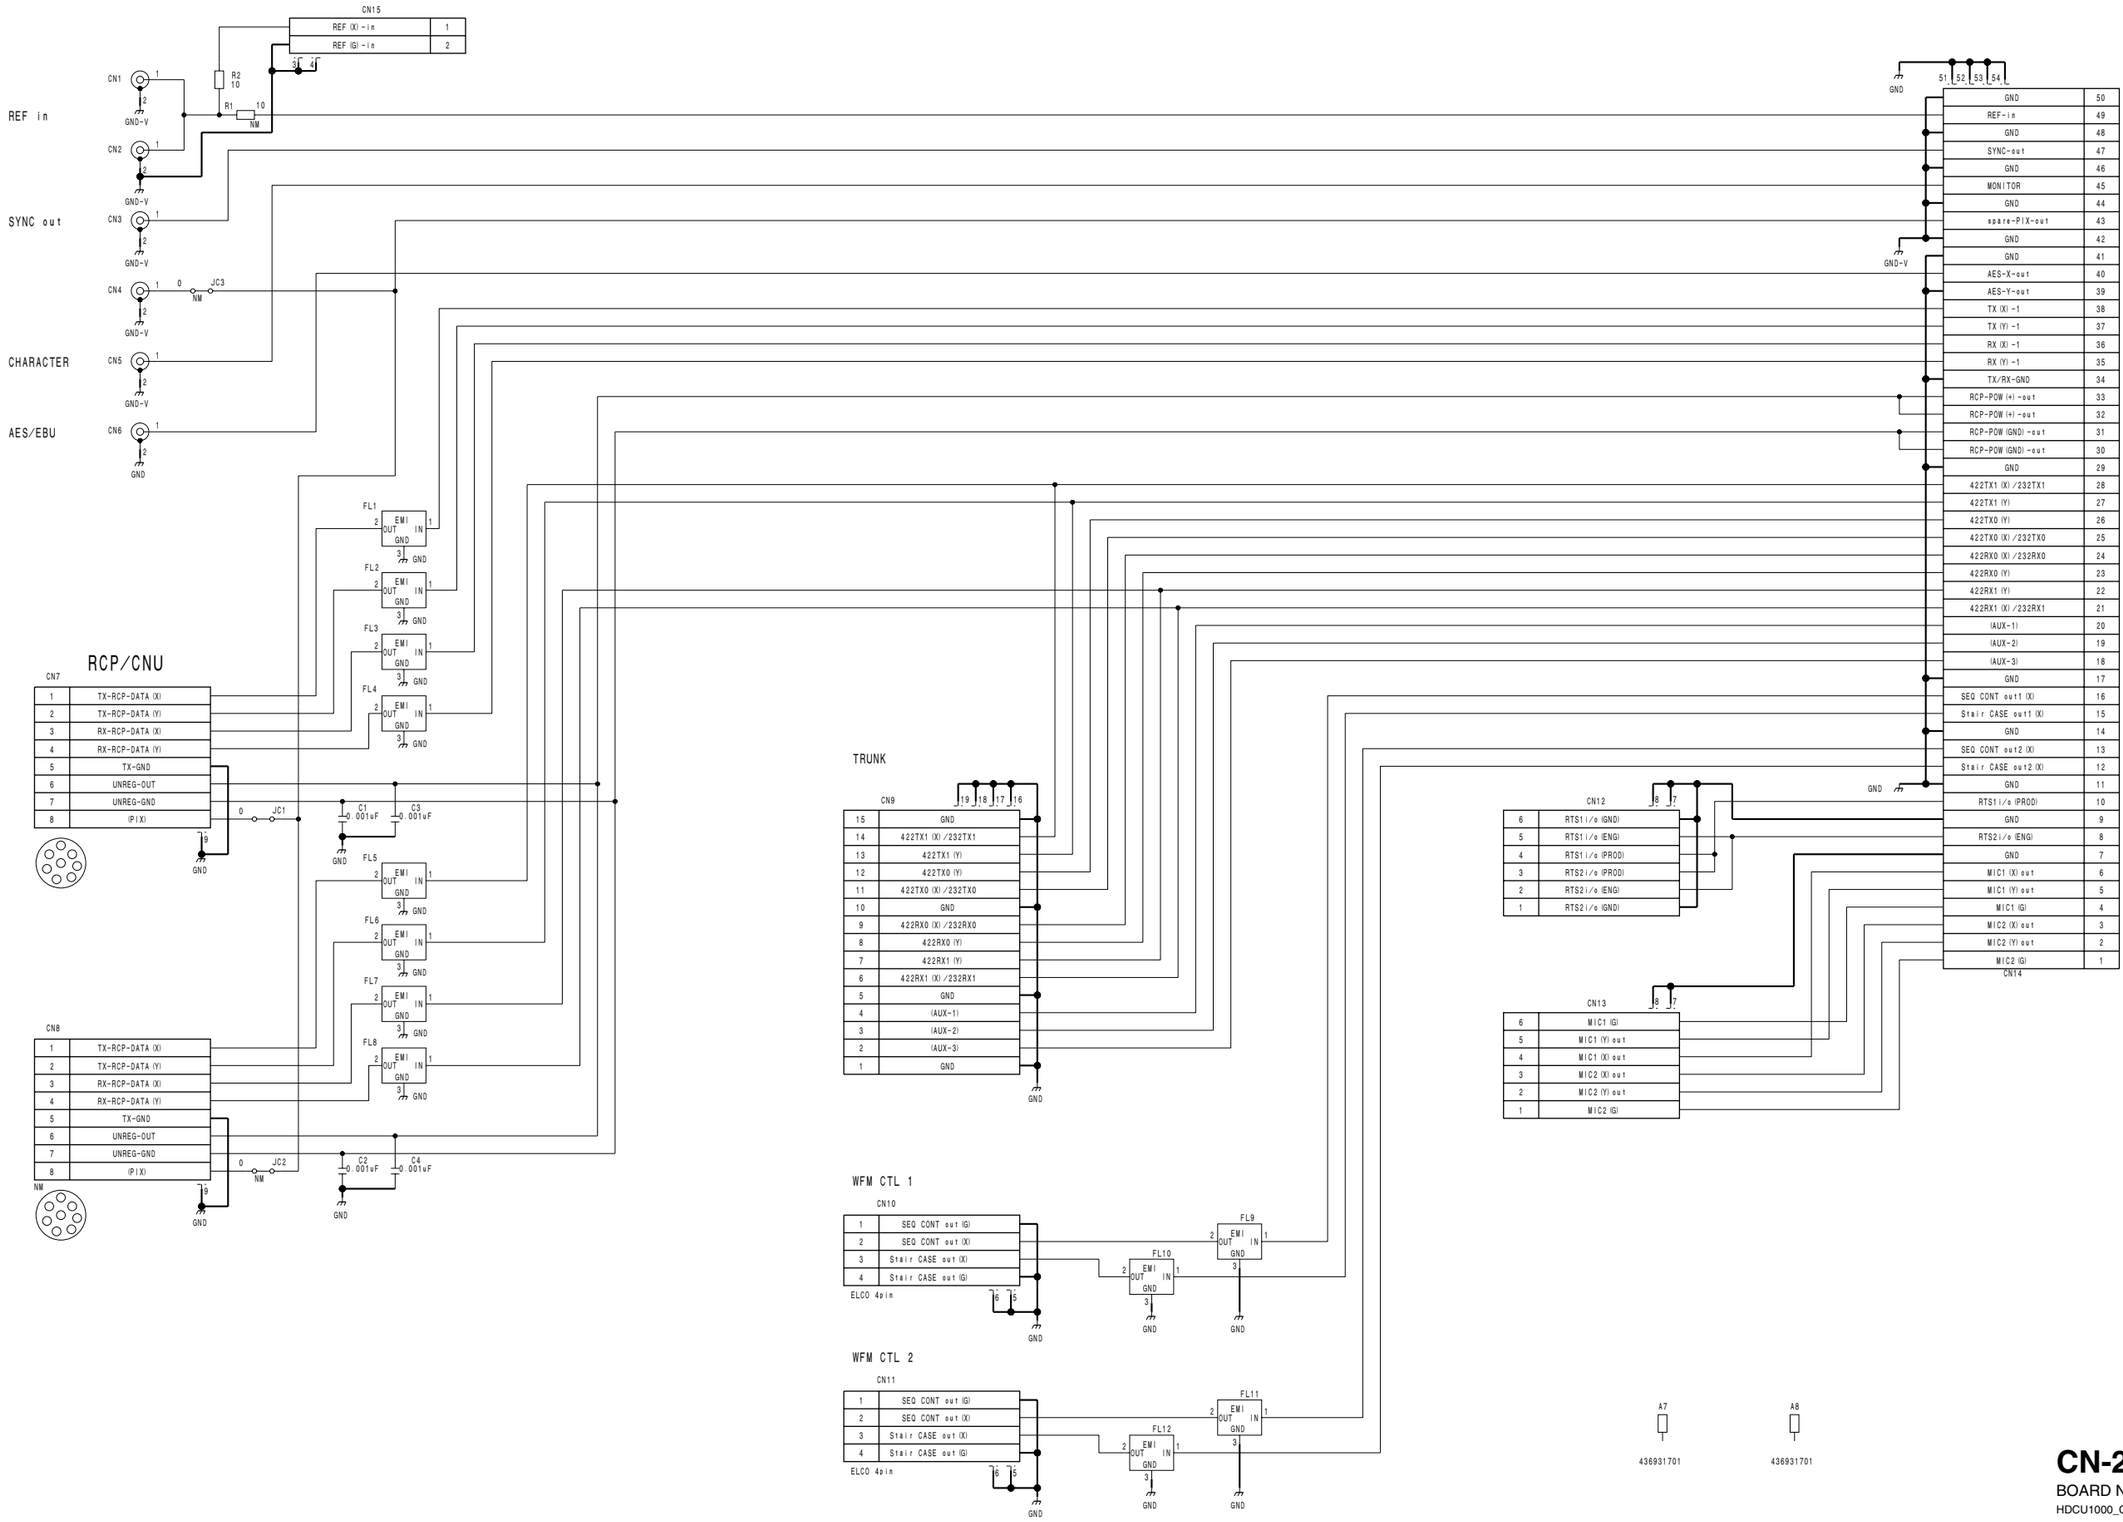



CN-2672
BOARD NO. 1-867-890-11
HDCU1000_CN-2672_011_1

MIC1 (RTS1)

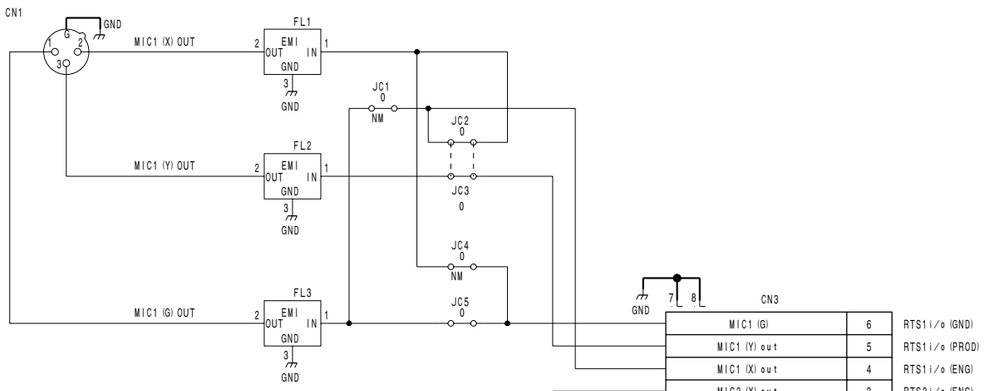

MIC2 (RTS2)

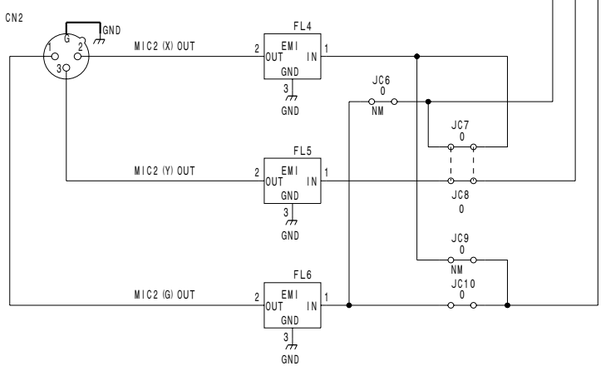

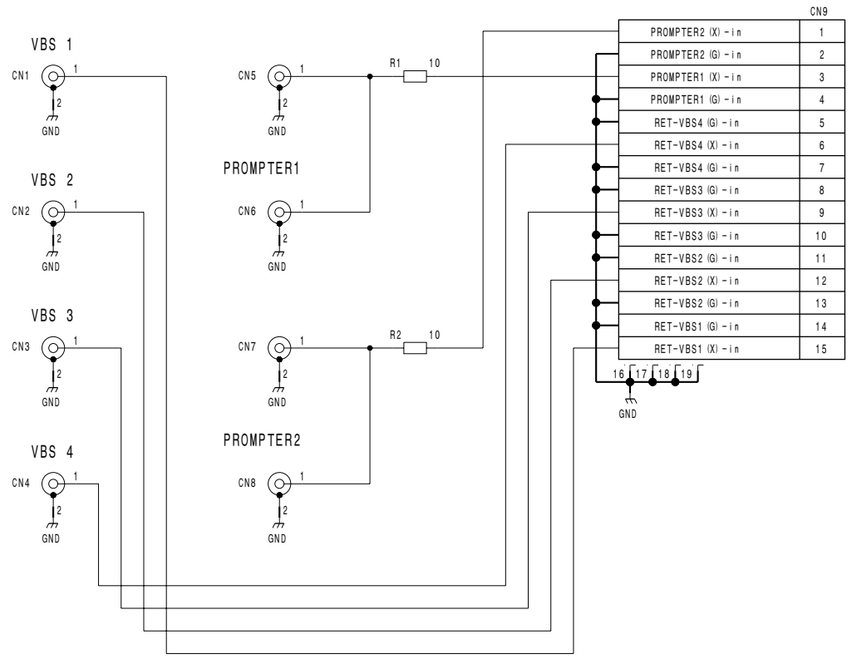

CN-2673
BOARD NO. 1-867-887-11
HDCU1000_CN-2673_011_1

CN-2674
BOARD NO. 1-867-891-11
HDCU1000_CN-2674_011_1

PROMPTER in

REF in

CHARACTER/SYNC out

RCP/CNU

TRUNK

WFM CTL 1

CN1 CN2 CN3 CN4 CN5 CN6 CN7 CN8 CN9 CN10 CN11 CN12 FL1 FL2 FL3 FL4 FL5 FL6 JC1 JC2 JC3 R1 R2 R3 R4 C1 C2 GND

CN6 NM

1	TX-RCP-DATA (X)
2	TX-RCP-DATA (Y)
3	RX-RCP-DATA (X)
4	RX-RCP-DATA (Y)
5	TX-GND
6	UNREG-OUT
7	UNREG-GND
8	(PIX)

CN7

15	GND
14	422TX1 (X) /232TX1
13	422TX1 (Y)
12	422TX0 (Y)
11	422TX0 (X) /232TX0
10	GND
9	422RX0 (X) /232RX0
8	422RX0 (Y)
7	422RX1 (Y)
6	422RX1 (X) /232RX1
5	GND
4	(AUX-1)
3	(AUX-2)
2	(AUX-3)
1	GND

CN8

1	SEQ CONT out (G)
2	SEQ CONT out (X)
3	Stair CASE out (X)
4	Stair CASE out (G)

CN9

1	MIC1 (G)
2	MIC1 (Y) out
3	MIC1 (X) out
4	MIC2 (X) out
5	MIC2 (Y) out
6	MIC2 (G)

CN10

PROMPTER2 (X) -in	1
PROMPTER2 (G) -in	2
PROMPTER1 (X) -in	3
PROMPTER1 (G) -in	4
N.C.	5
N.C.	6
N.C.	7
N.C.	8
N.C.	9
N.C.	10
N.C.	11
N.C.	12
N.C.	13
N.C.	14
N.C.	15

CN11


GND	50
REF-in	49
GND	48
SYNC-out	47
GND	46
SPARE-MONITOR	45
GND	44
GND	43
TX (X) -1	42
TX (Y) -1	41
RX (X) -1	40
RX (Y) -1	39
TX/RX-GND	38
RCP-POW (+) -out	37
RCP-POW (+) -out	36
RCP-POW (GND) -out	35
RCP-POW (GND) -out	34
GND	33
(AUX-3)	32
(AUX-2)	31
(AUX-1)	30
422RX1 (X) /232RX1	29
422RX1 (Y)	28
422RX0 (Y)	27
422RX0 (X) /232RX0	26
422TX0 (X) /232TX0	25
422TX0 (Y)	24
422TX1 (Y)	23
422TX1 (X) /232TX1	22
GND	21
SEQ CONT out1 (X)	20
Stair CASE out1 (X)	19
GND	18
GND	17
GND	16
MIC1 (X) out	15
MIC1 (Y) out	14
MIC1 (G)	13
GND	12
GND	11
GND	10
MIC2 (X) out	9
MIC2 (Y) out	8
MIC2 (G)	7
GND	6
GND	5
GND	4
GND	3
GND	2
GND	1

CN12


REF (X) -in	1
REF (G) -in	2


CN-2675
BOARD NO. 1-867-896-11
HDCU1500_CN-2675_011_1

MIC1 (RTS1)

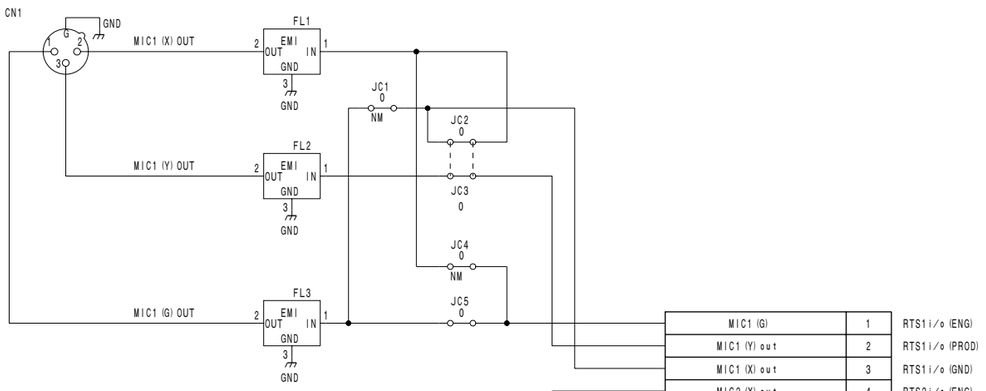

MIC2 (RTS2)

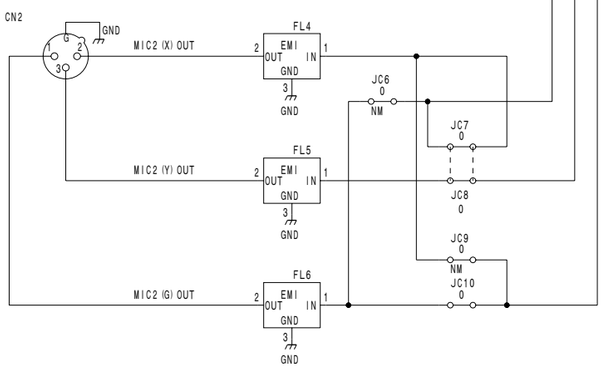

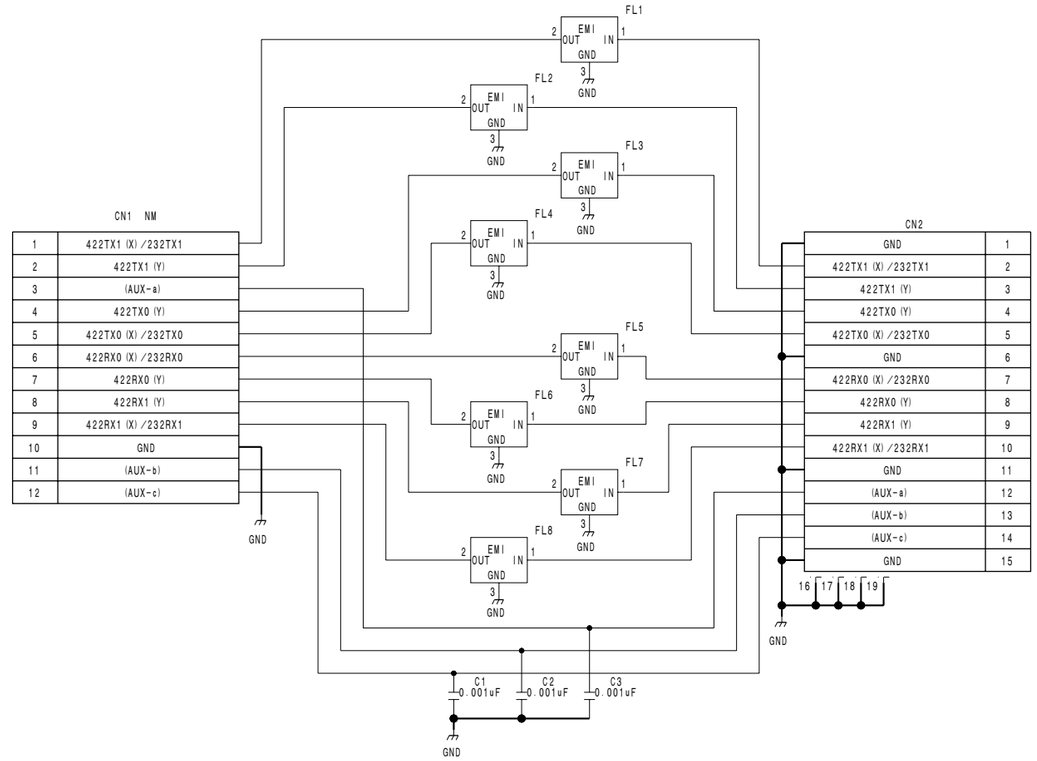


CN-2676
BOARD NO. 1-867-897-11
HDCU1500_CN-2676_011_1

CN-2677
BOARD NO. 1-867-898-11
HDCU1500_CN-2677_011_1

CN-2678, CN-2700, CN-2718, CN-2805


1 : Talk-Y
2 : Talk-X
3 : GND
4 : Receive
5 : PGM

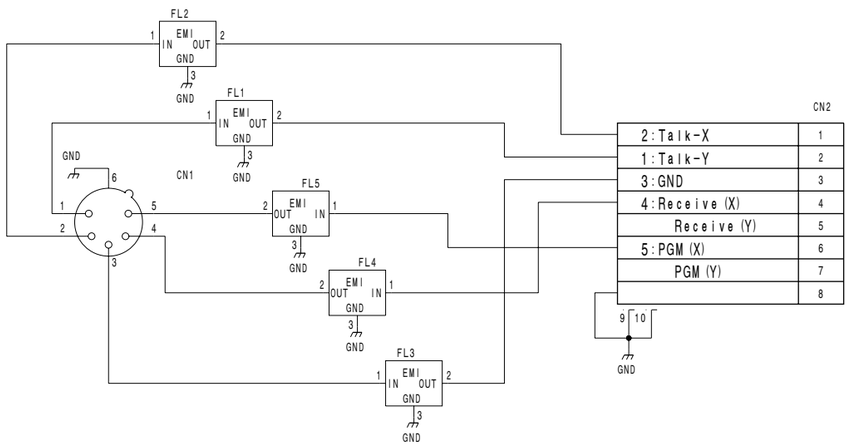

CN-2678

BOARD NO. 1-867-899-11

HDCU1500_CN-2678_011_1

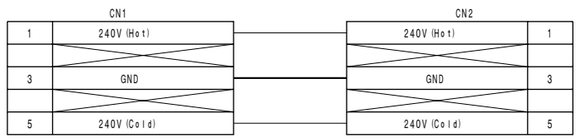


CN-2718

BOARD NO. 1-867-875-11

HDCU1000_CN-2718_011_1

1 : Talk-Y
2 : Talk-X
3 : GND
4 : Receive
5 : PGM

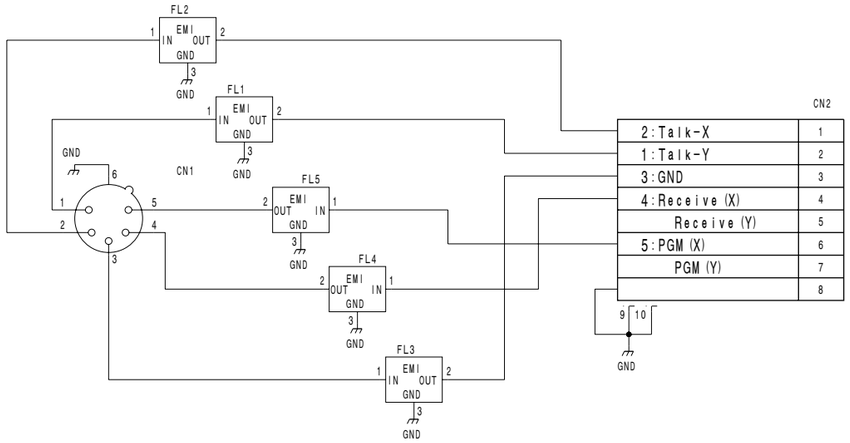


CN-2700

BOARD NO. 1-867-874-11

HDCU1000_CN-2700_011_1

TRUNK

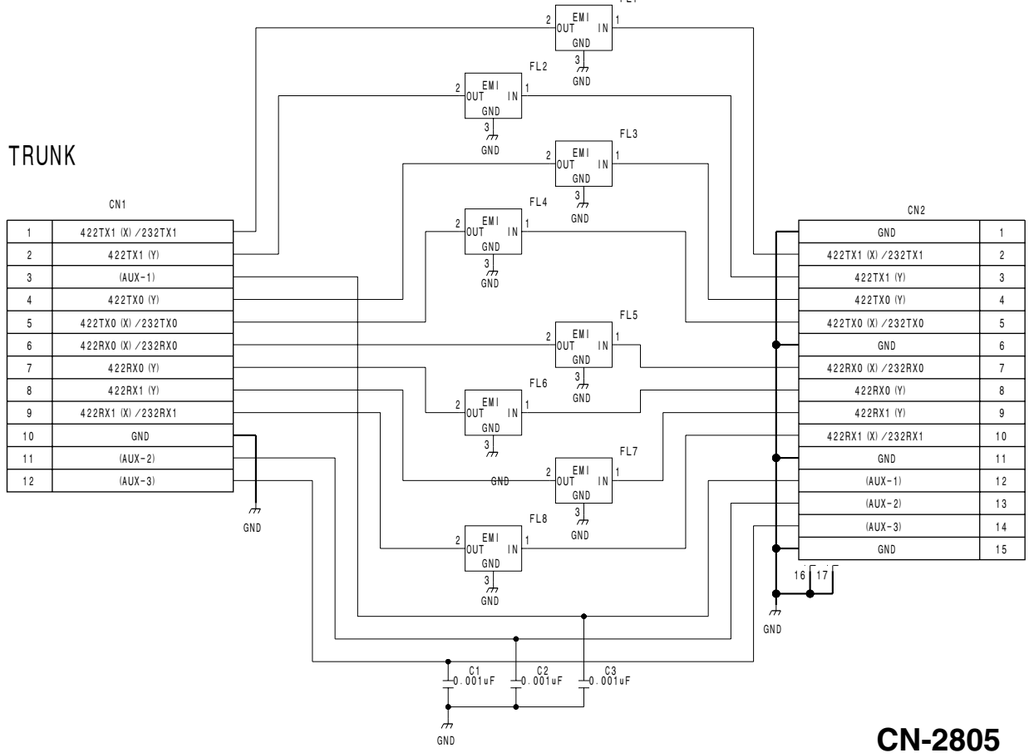


CN-2805

BOARD NO. 1-867-873-11

HDCU1000_CN-2805_011_1


CNB-21 (1/2)

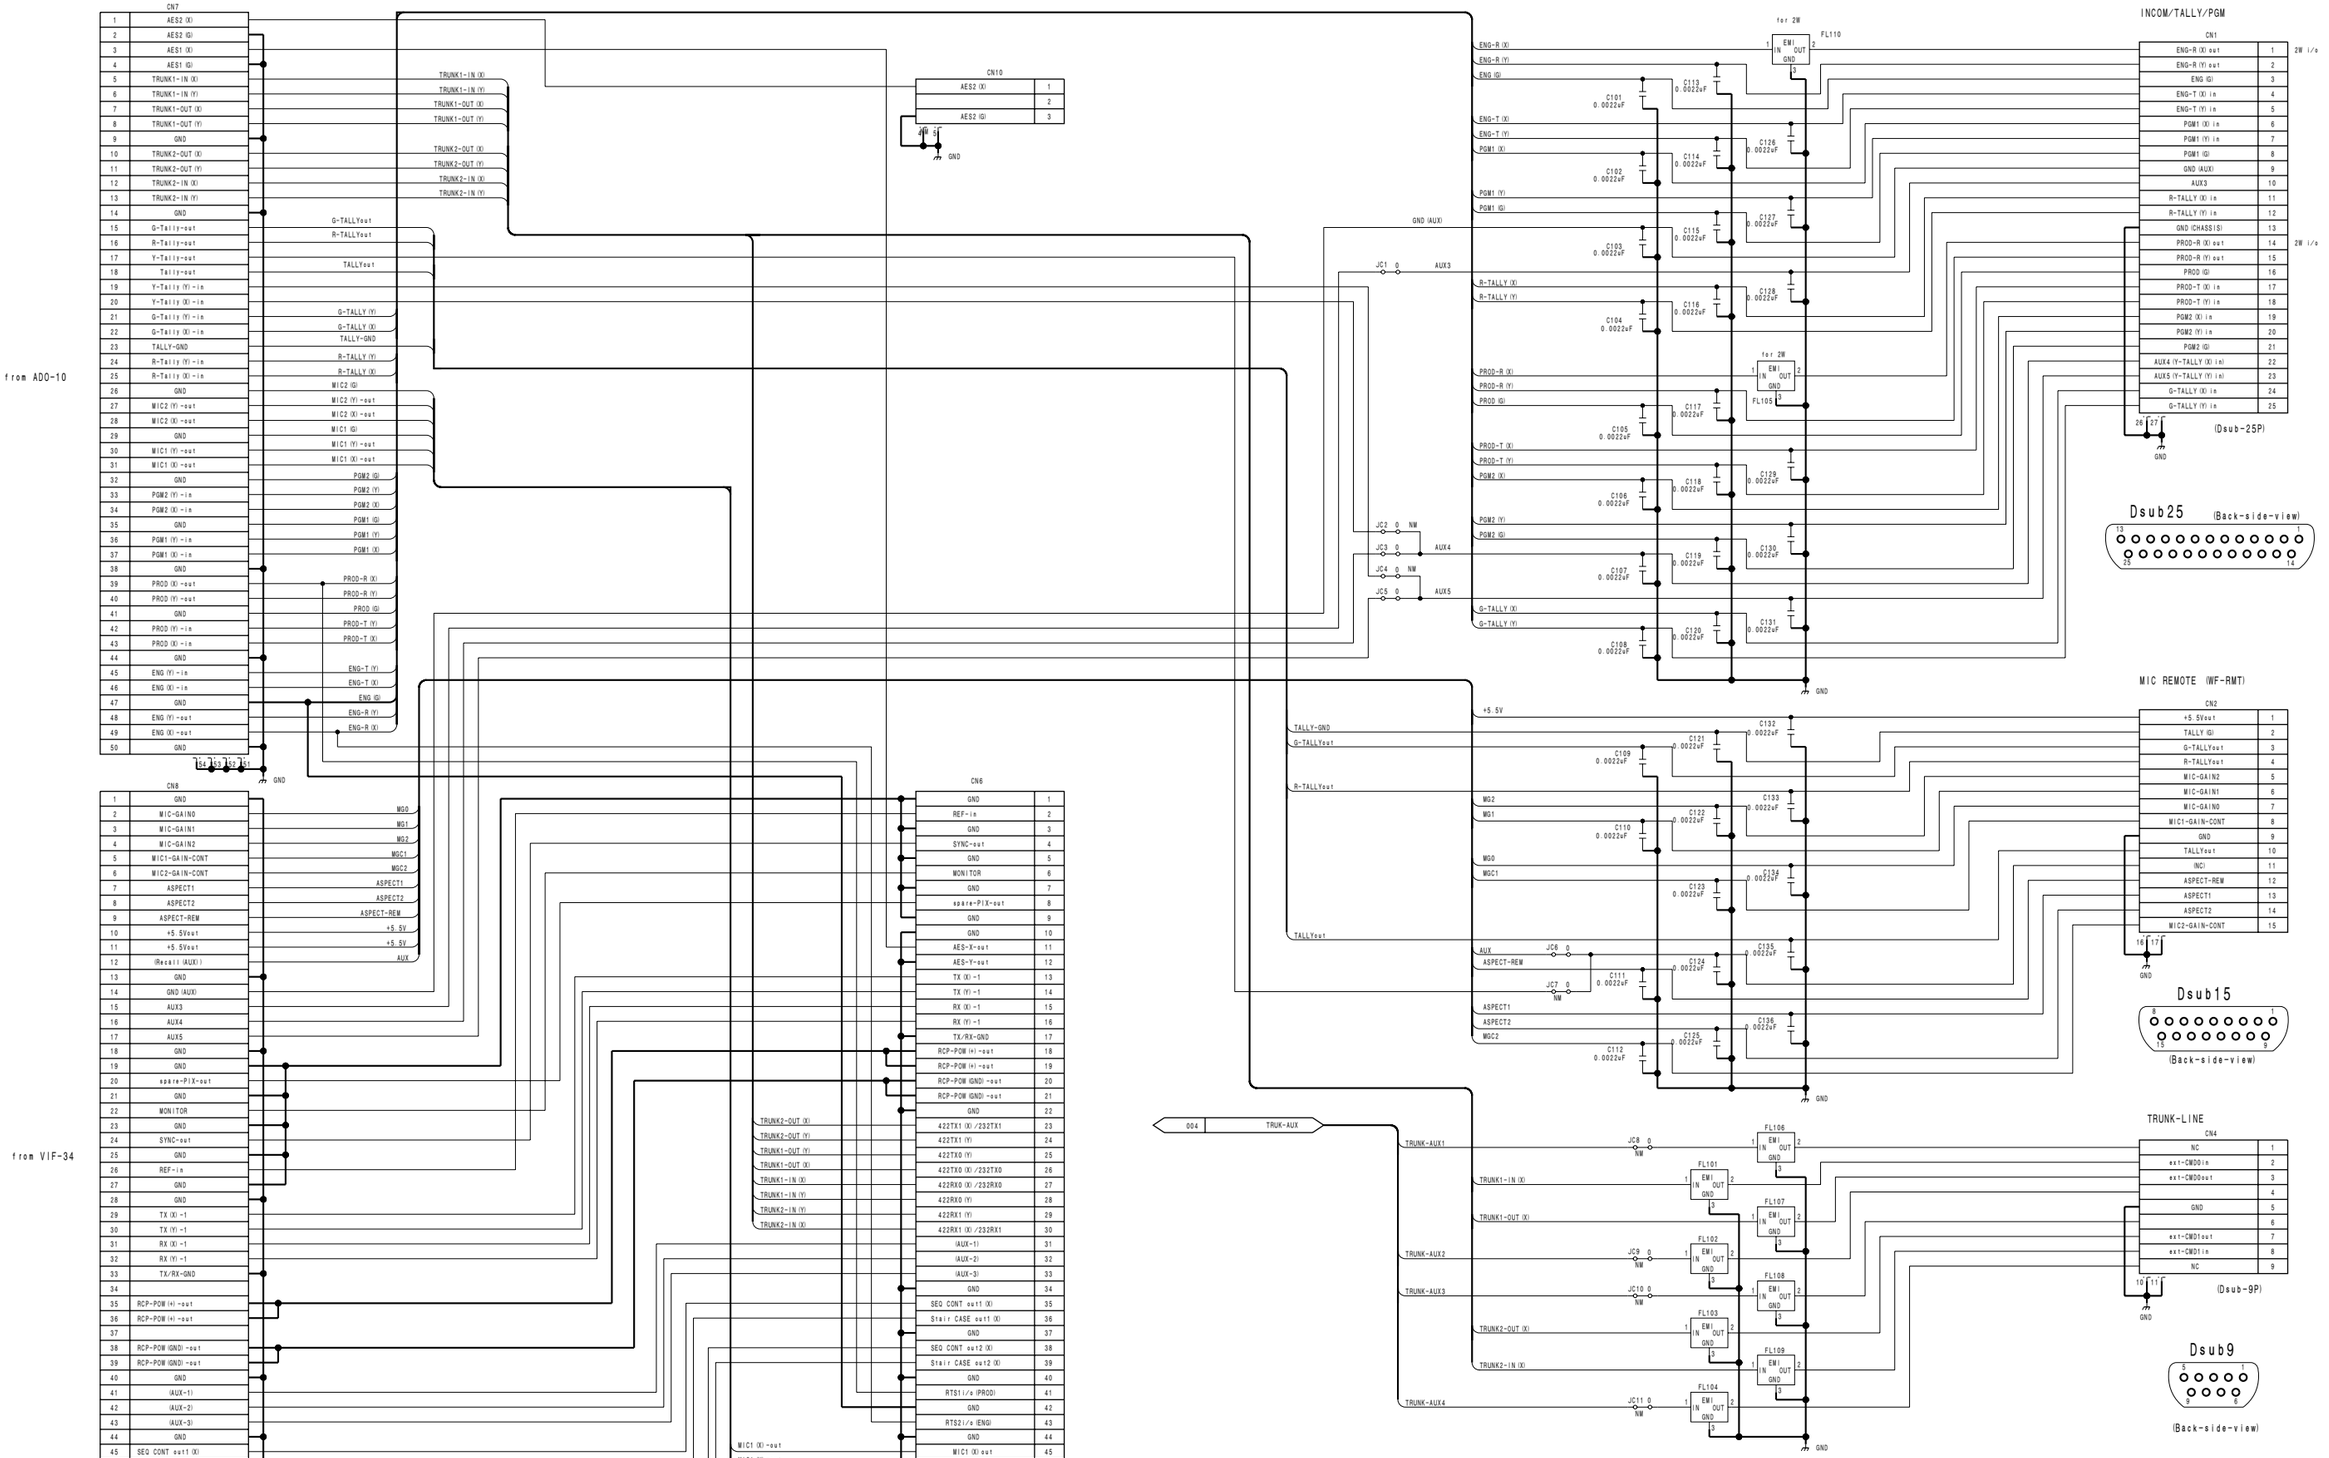

CNB-21 (1/2)

BOARD NO. 1-867-889-11


HDCU1000_CNB-21_011_1

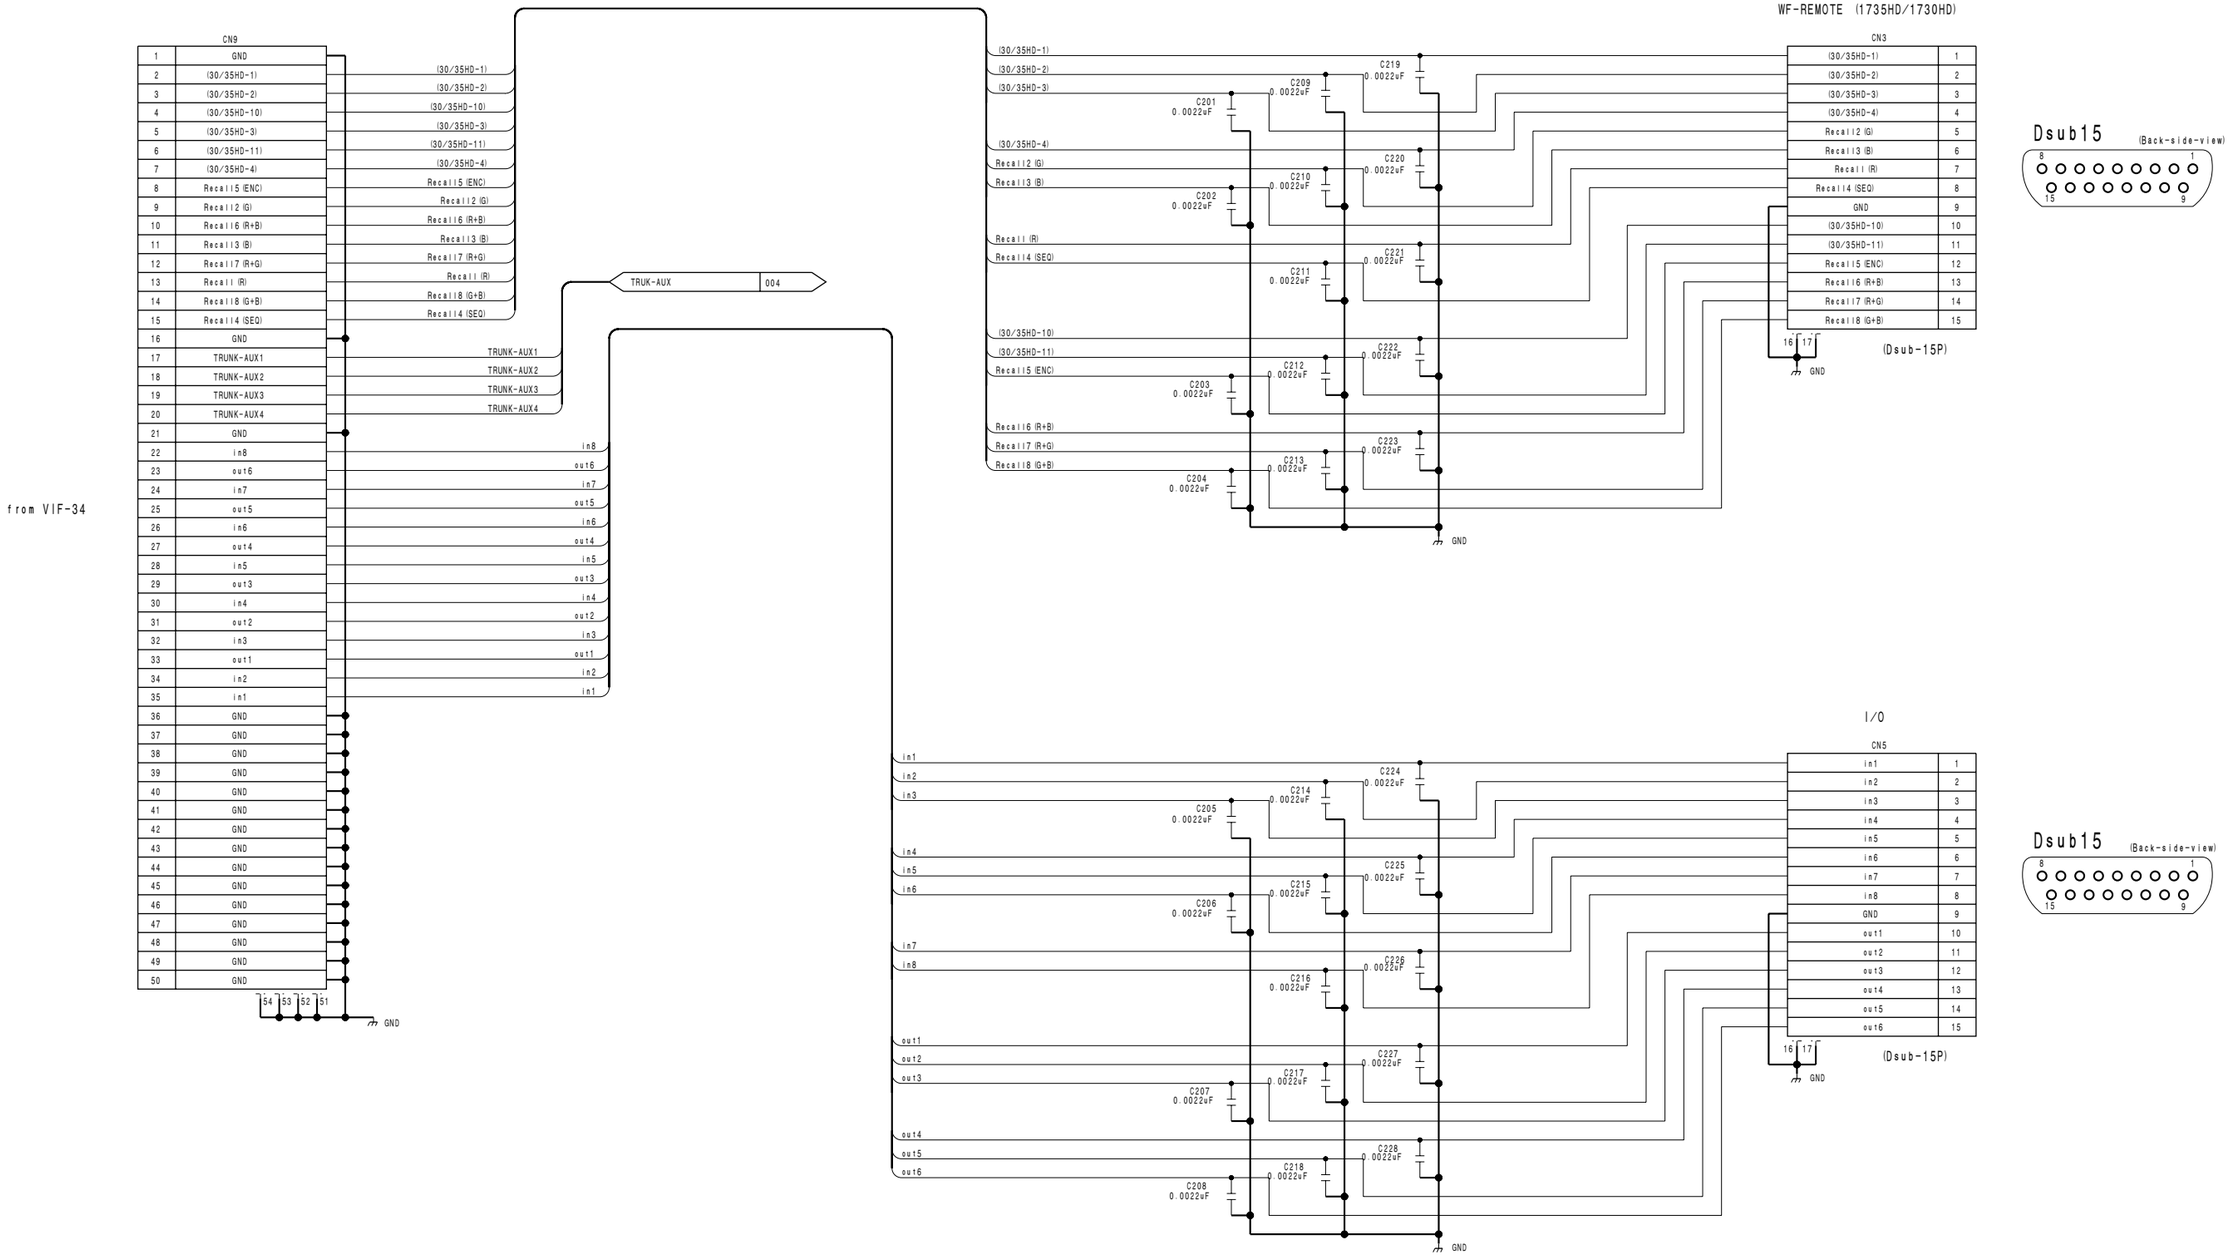

CNB-21 (2/2)

BOARD NO. 1-867-889-11

HDCU1000_CNB-21_011_2

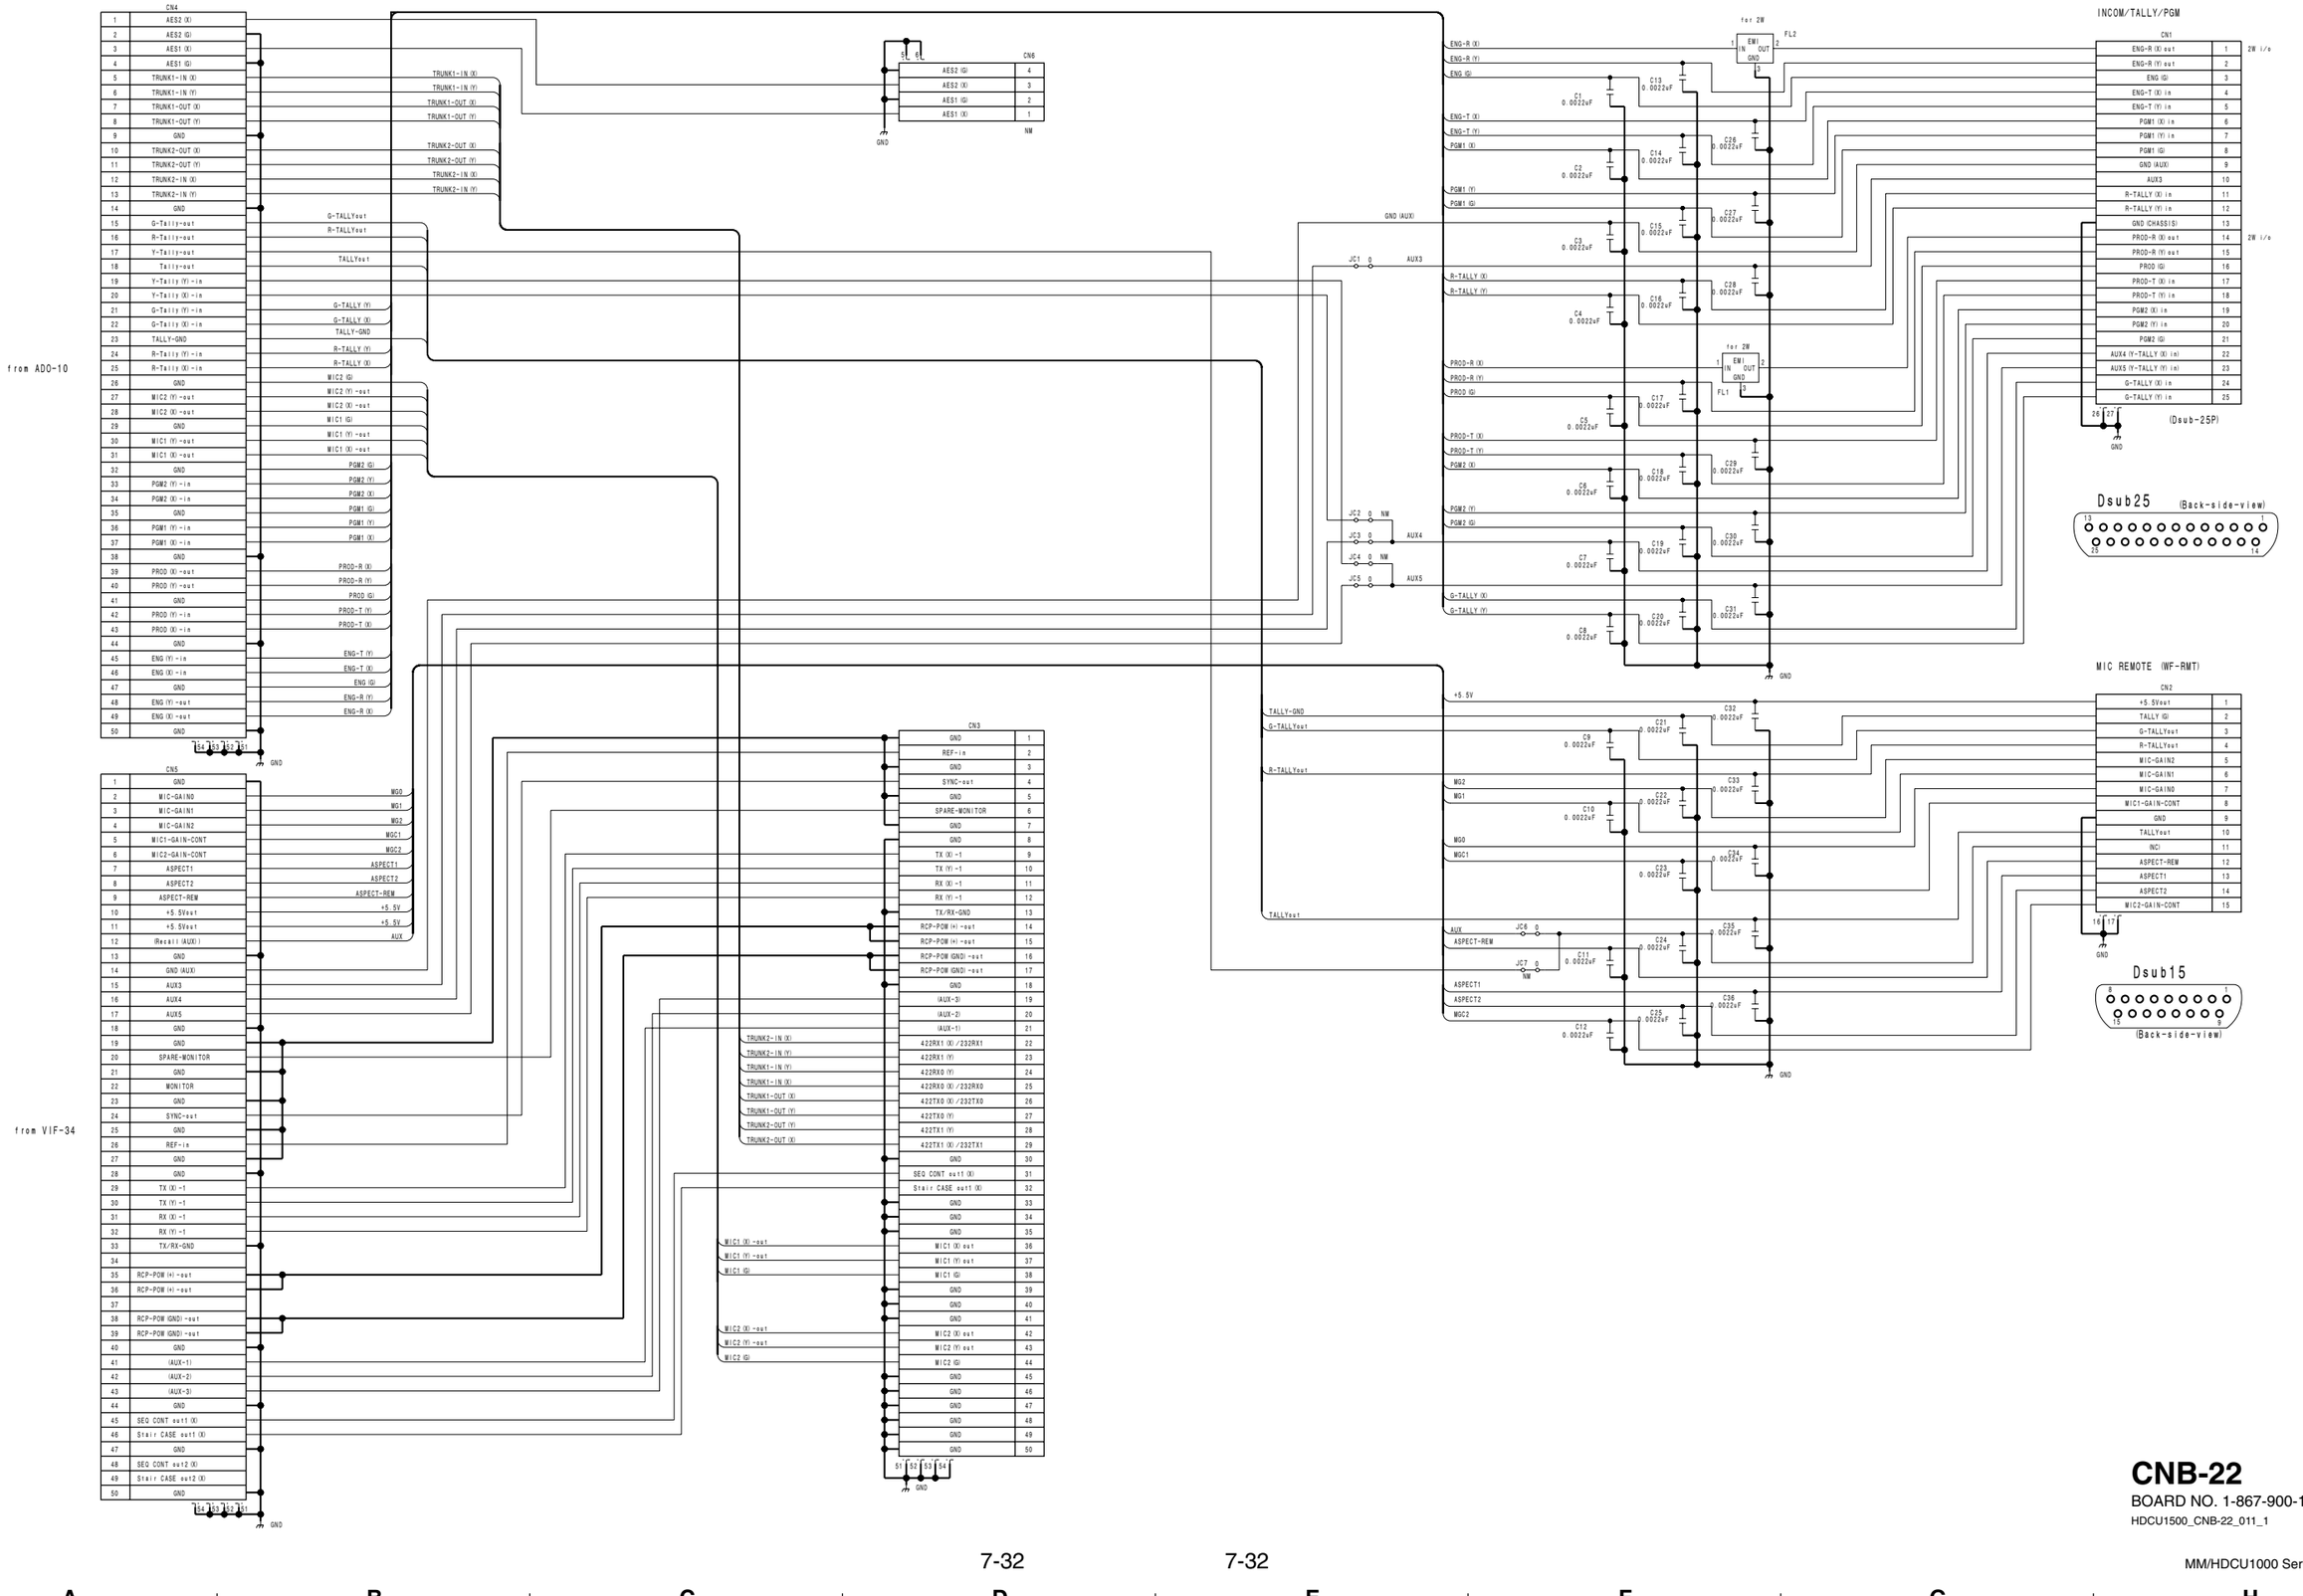

CNB-22

BOARD NO. 1-867-900-11


HDCU1500_CNB-22_011_1

DRX-5 (1/9)

SUFFIX: -11, -12

DRX-5 (1/9)

SUFFIX: -11, -12

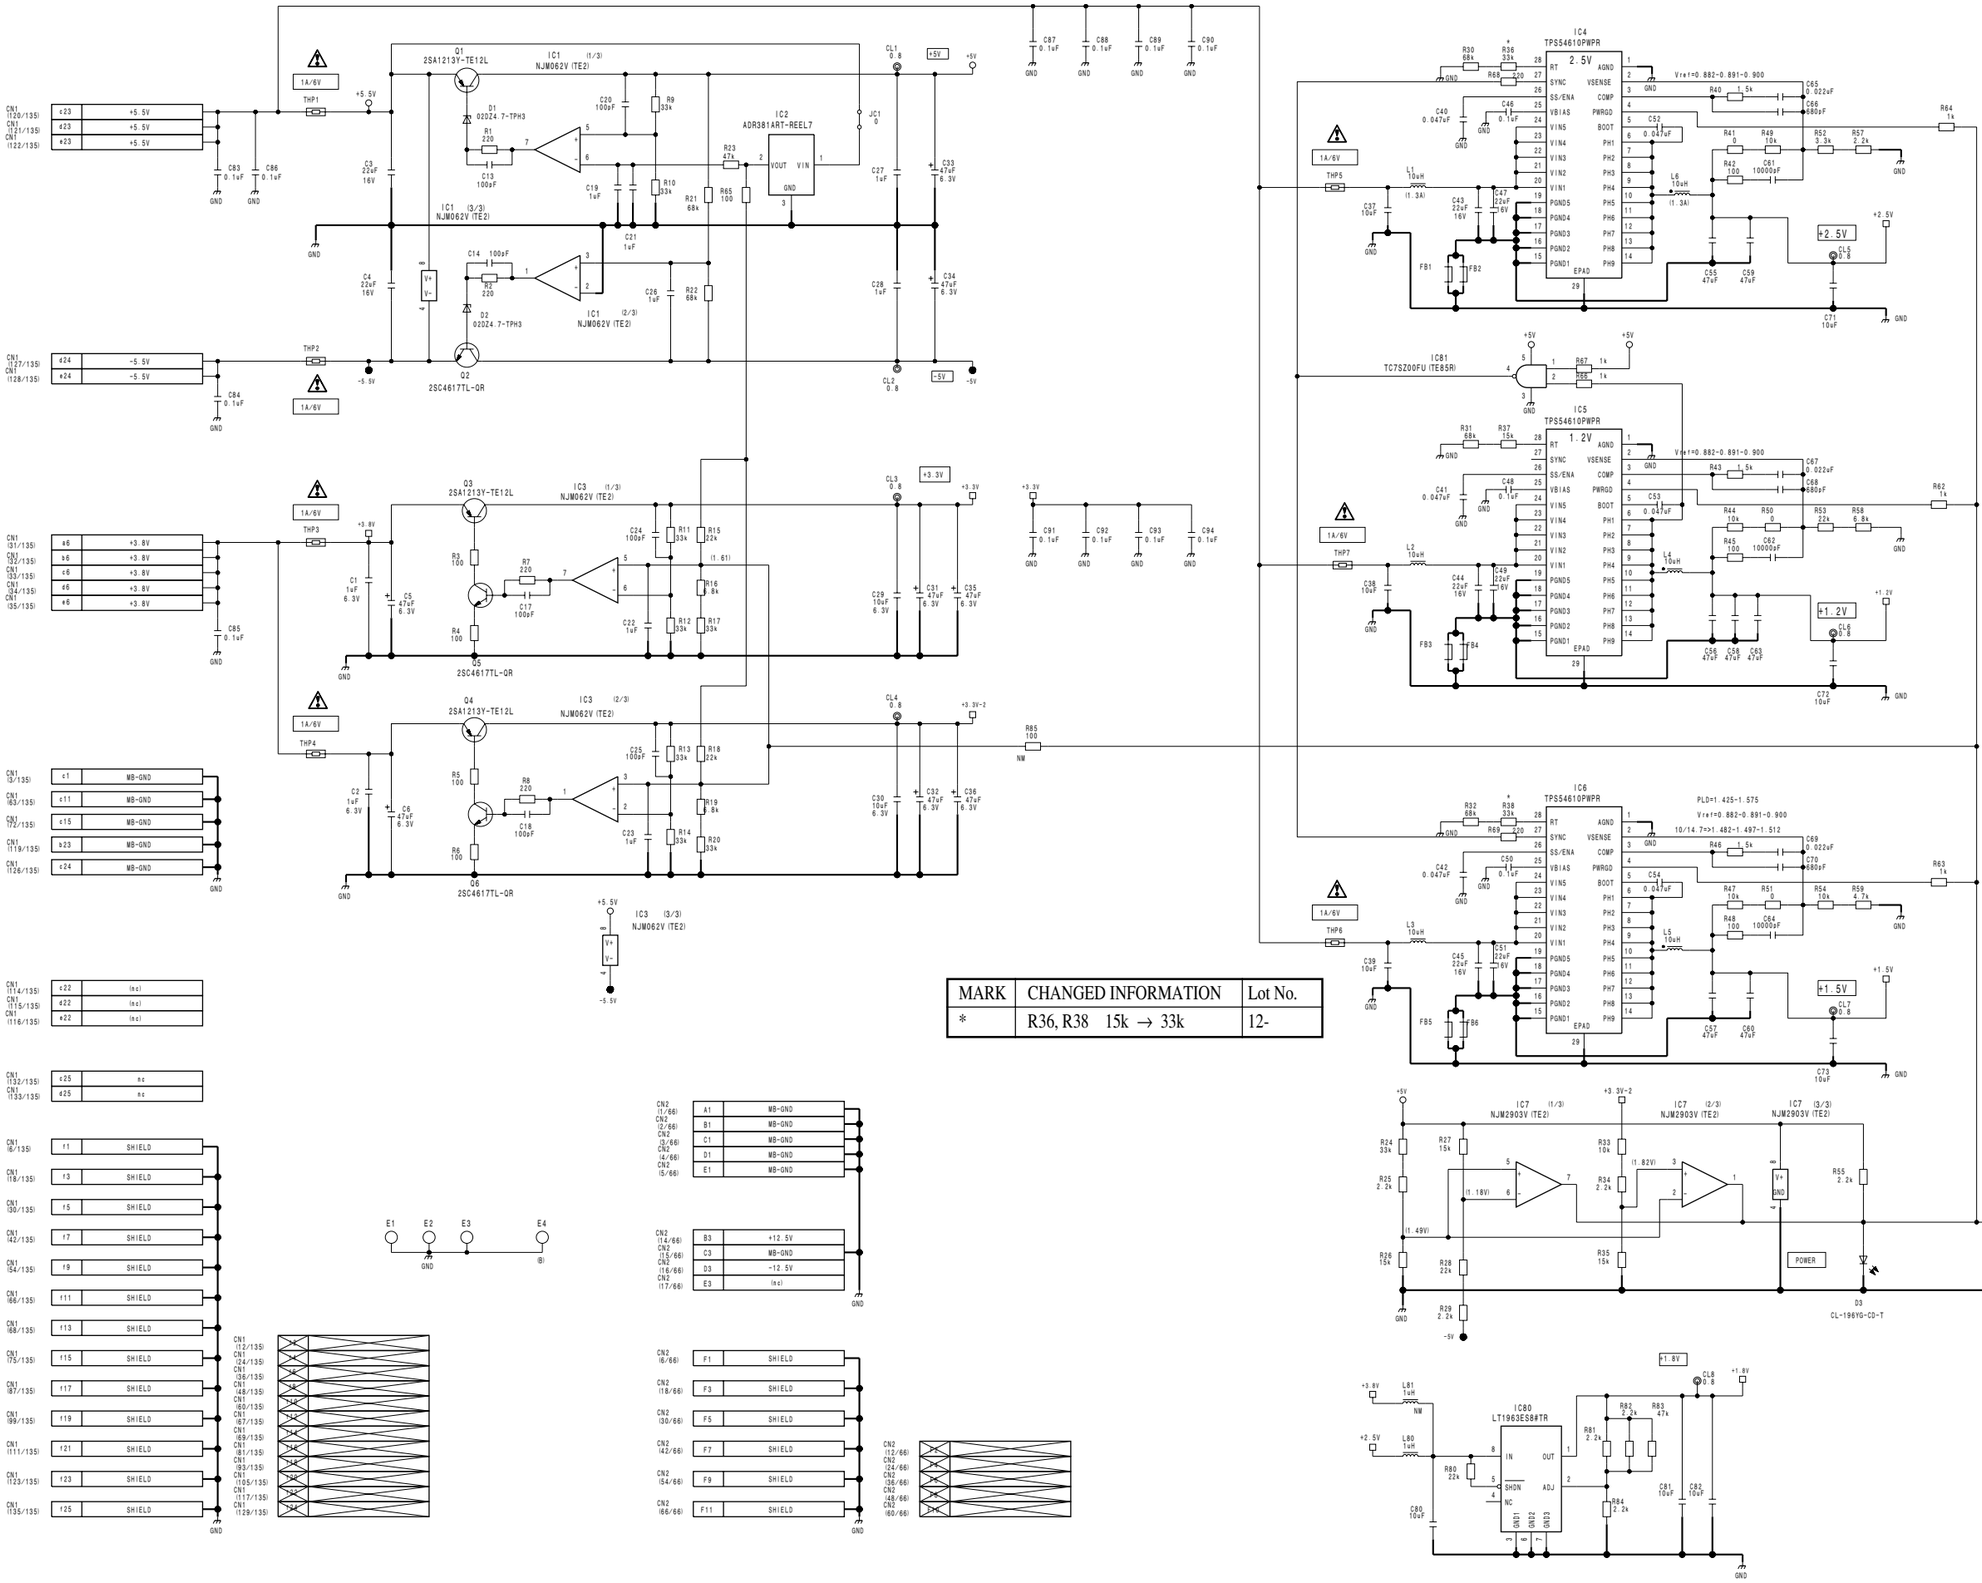


MARK	CHANGED INFORMATION	Lot No.
*	R36, R38 15k → 33k	12-

DRX-5 (1/9)

BOARD NO. 1-867-880-11, 12

HDCU1000_DRX-5_012_1


DRX-5 (2/9)
SUFFIX: -12

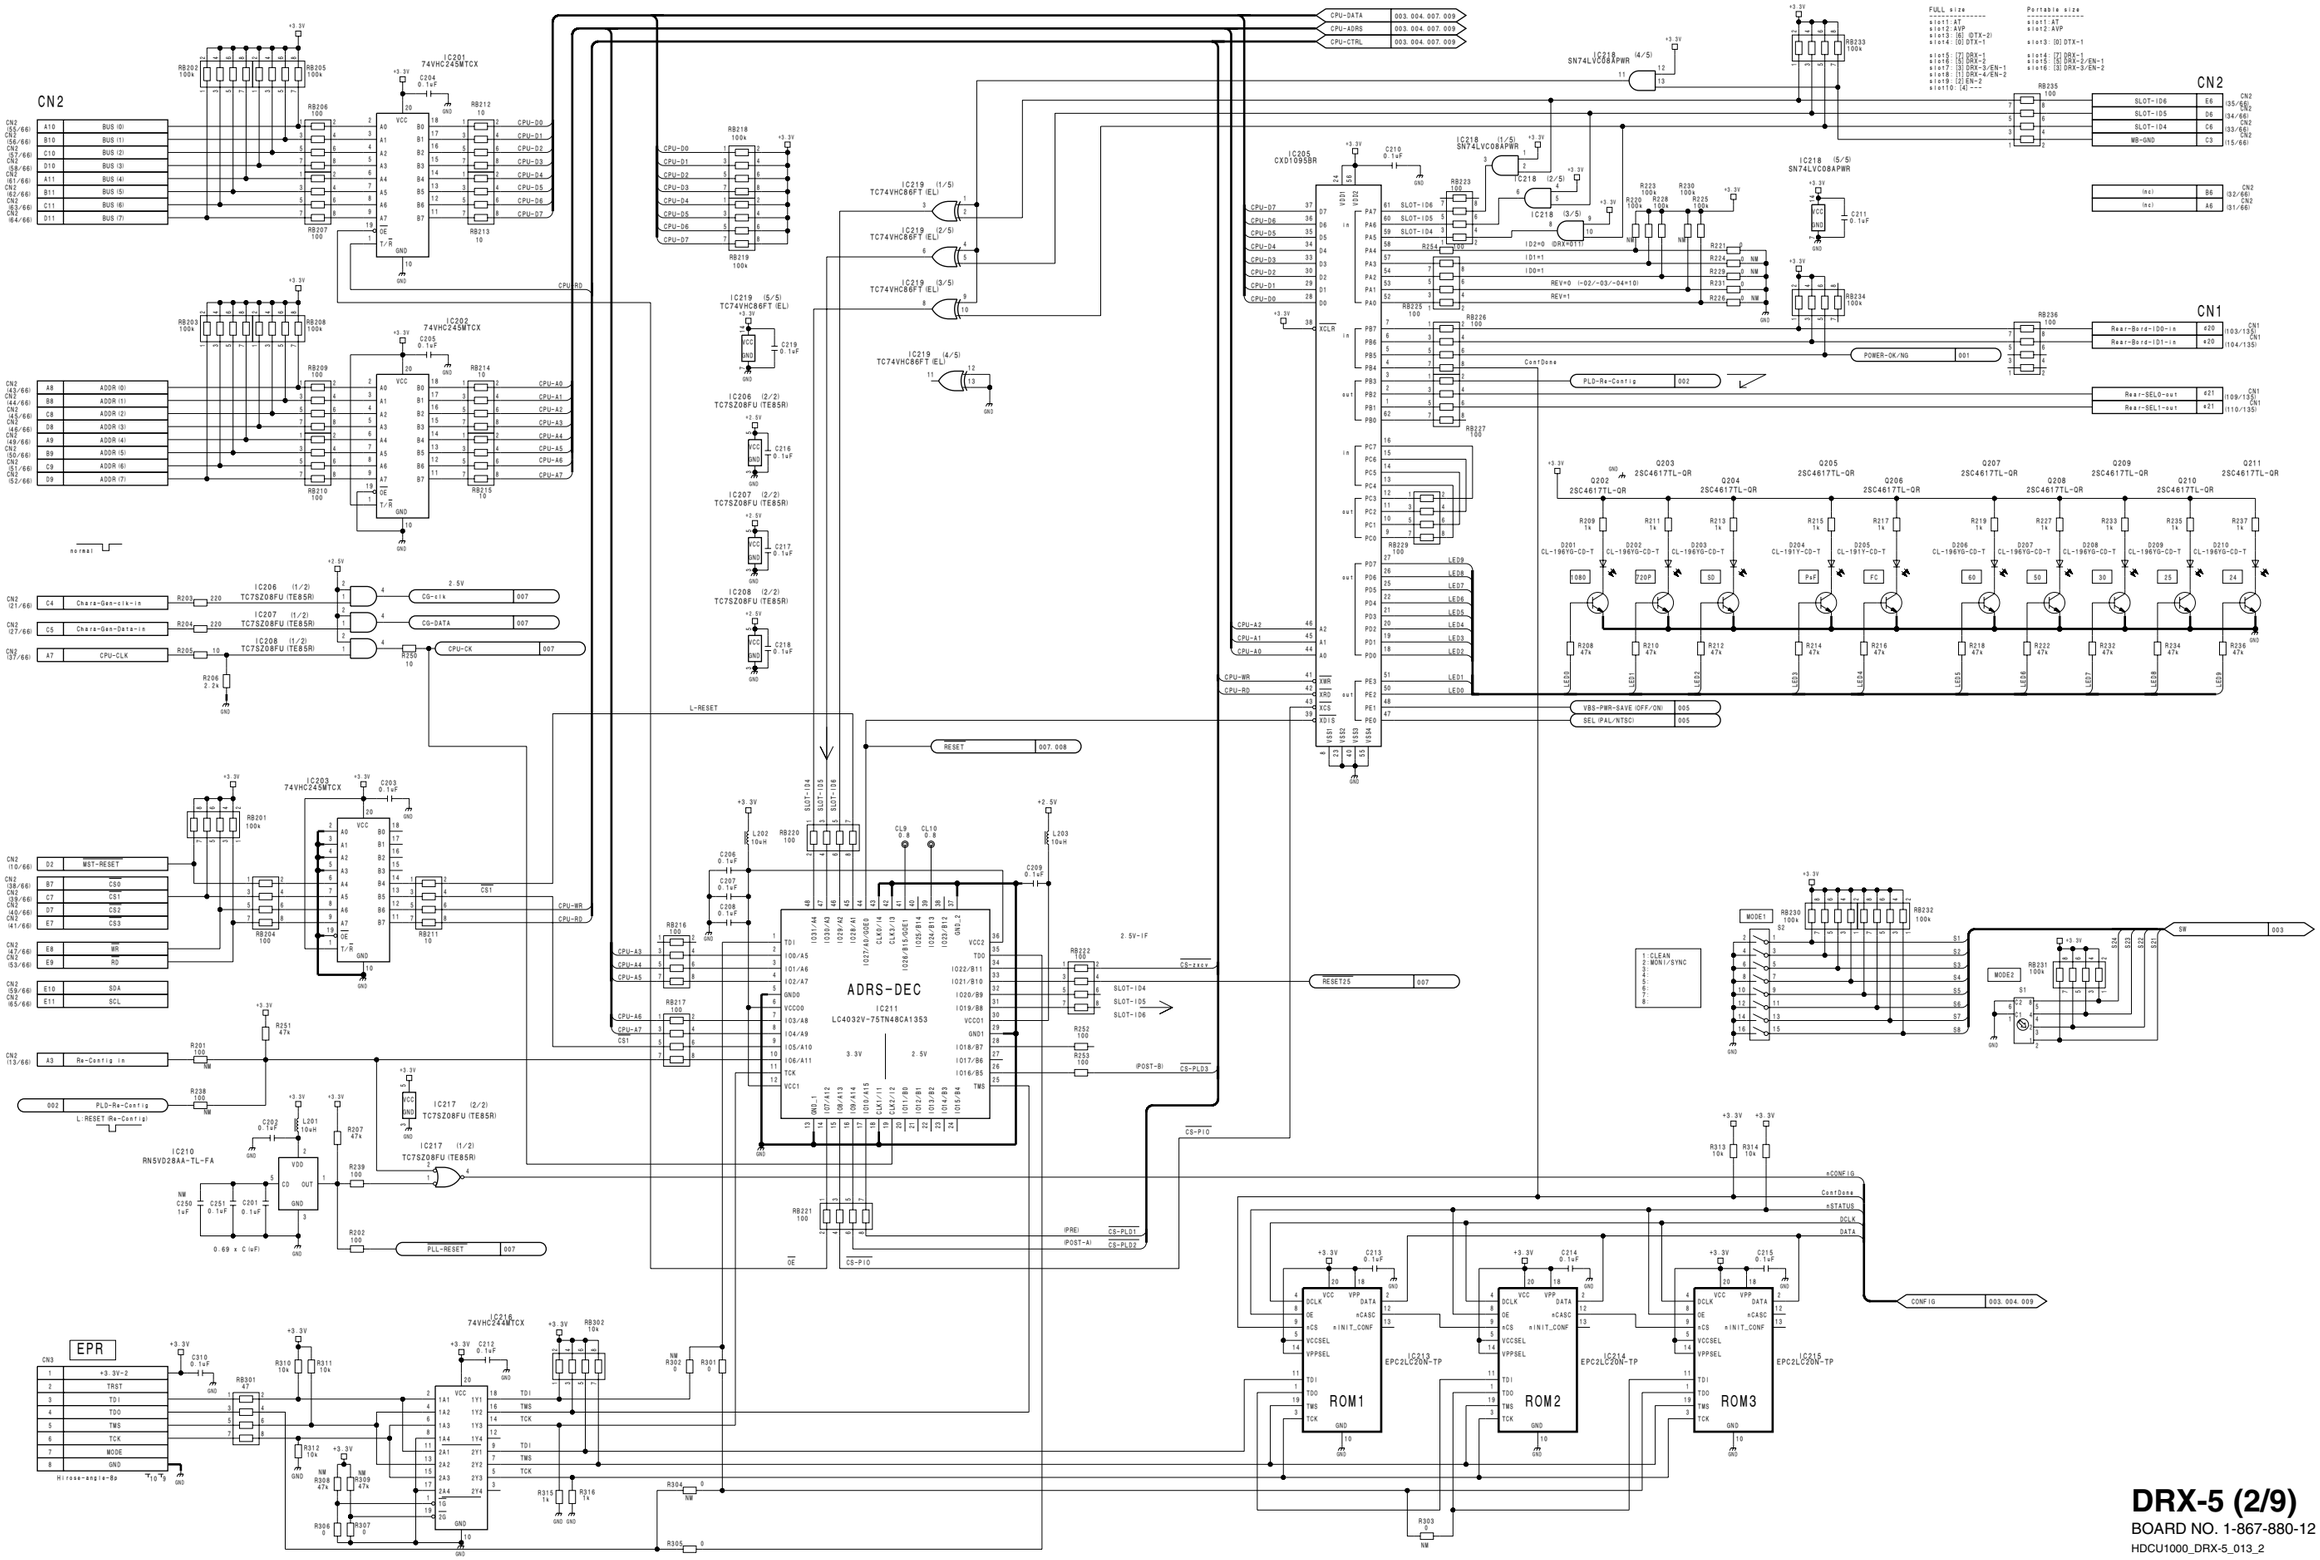

7-34

DRX-5 (2/9)
BOARD NO. 1-867-880-12
HDCU1000_DRX-5_013_2


MM/HDCU1000 Series

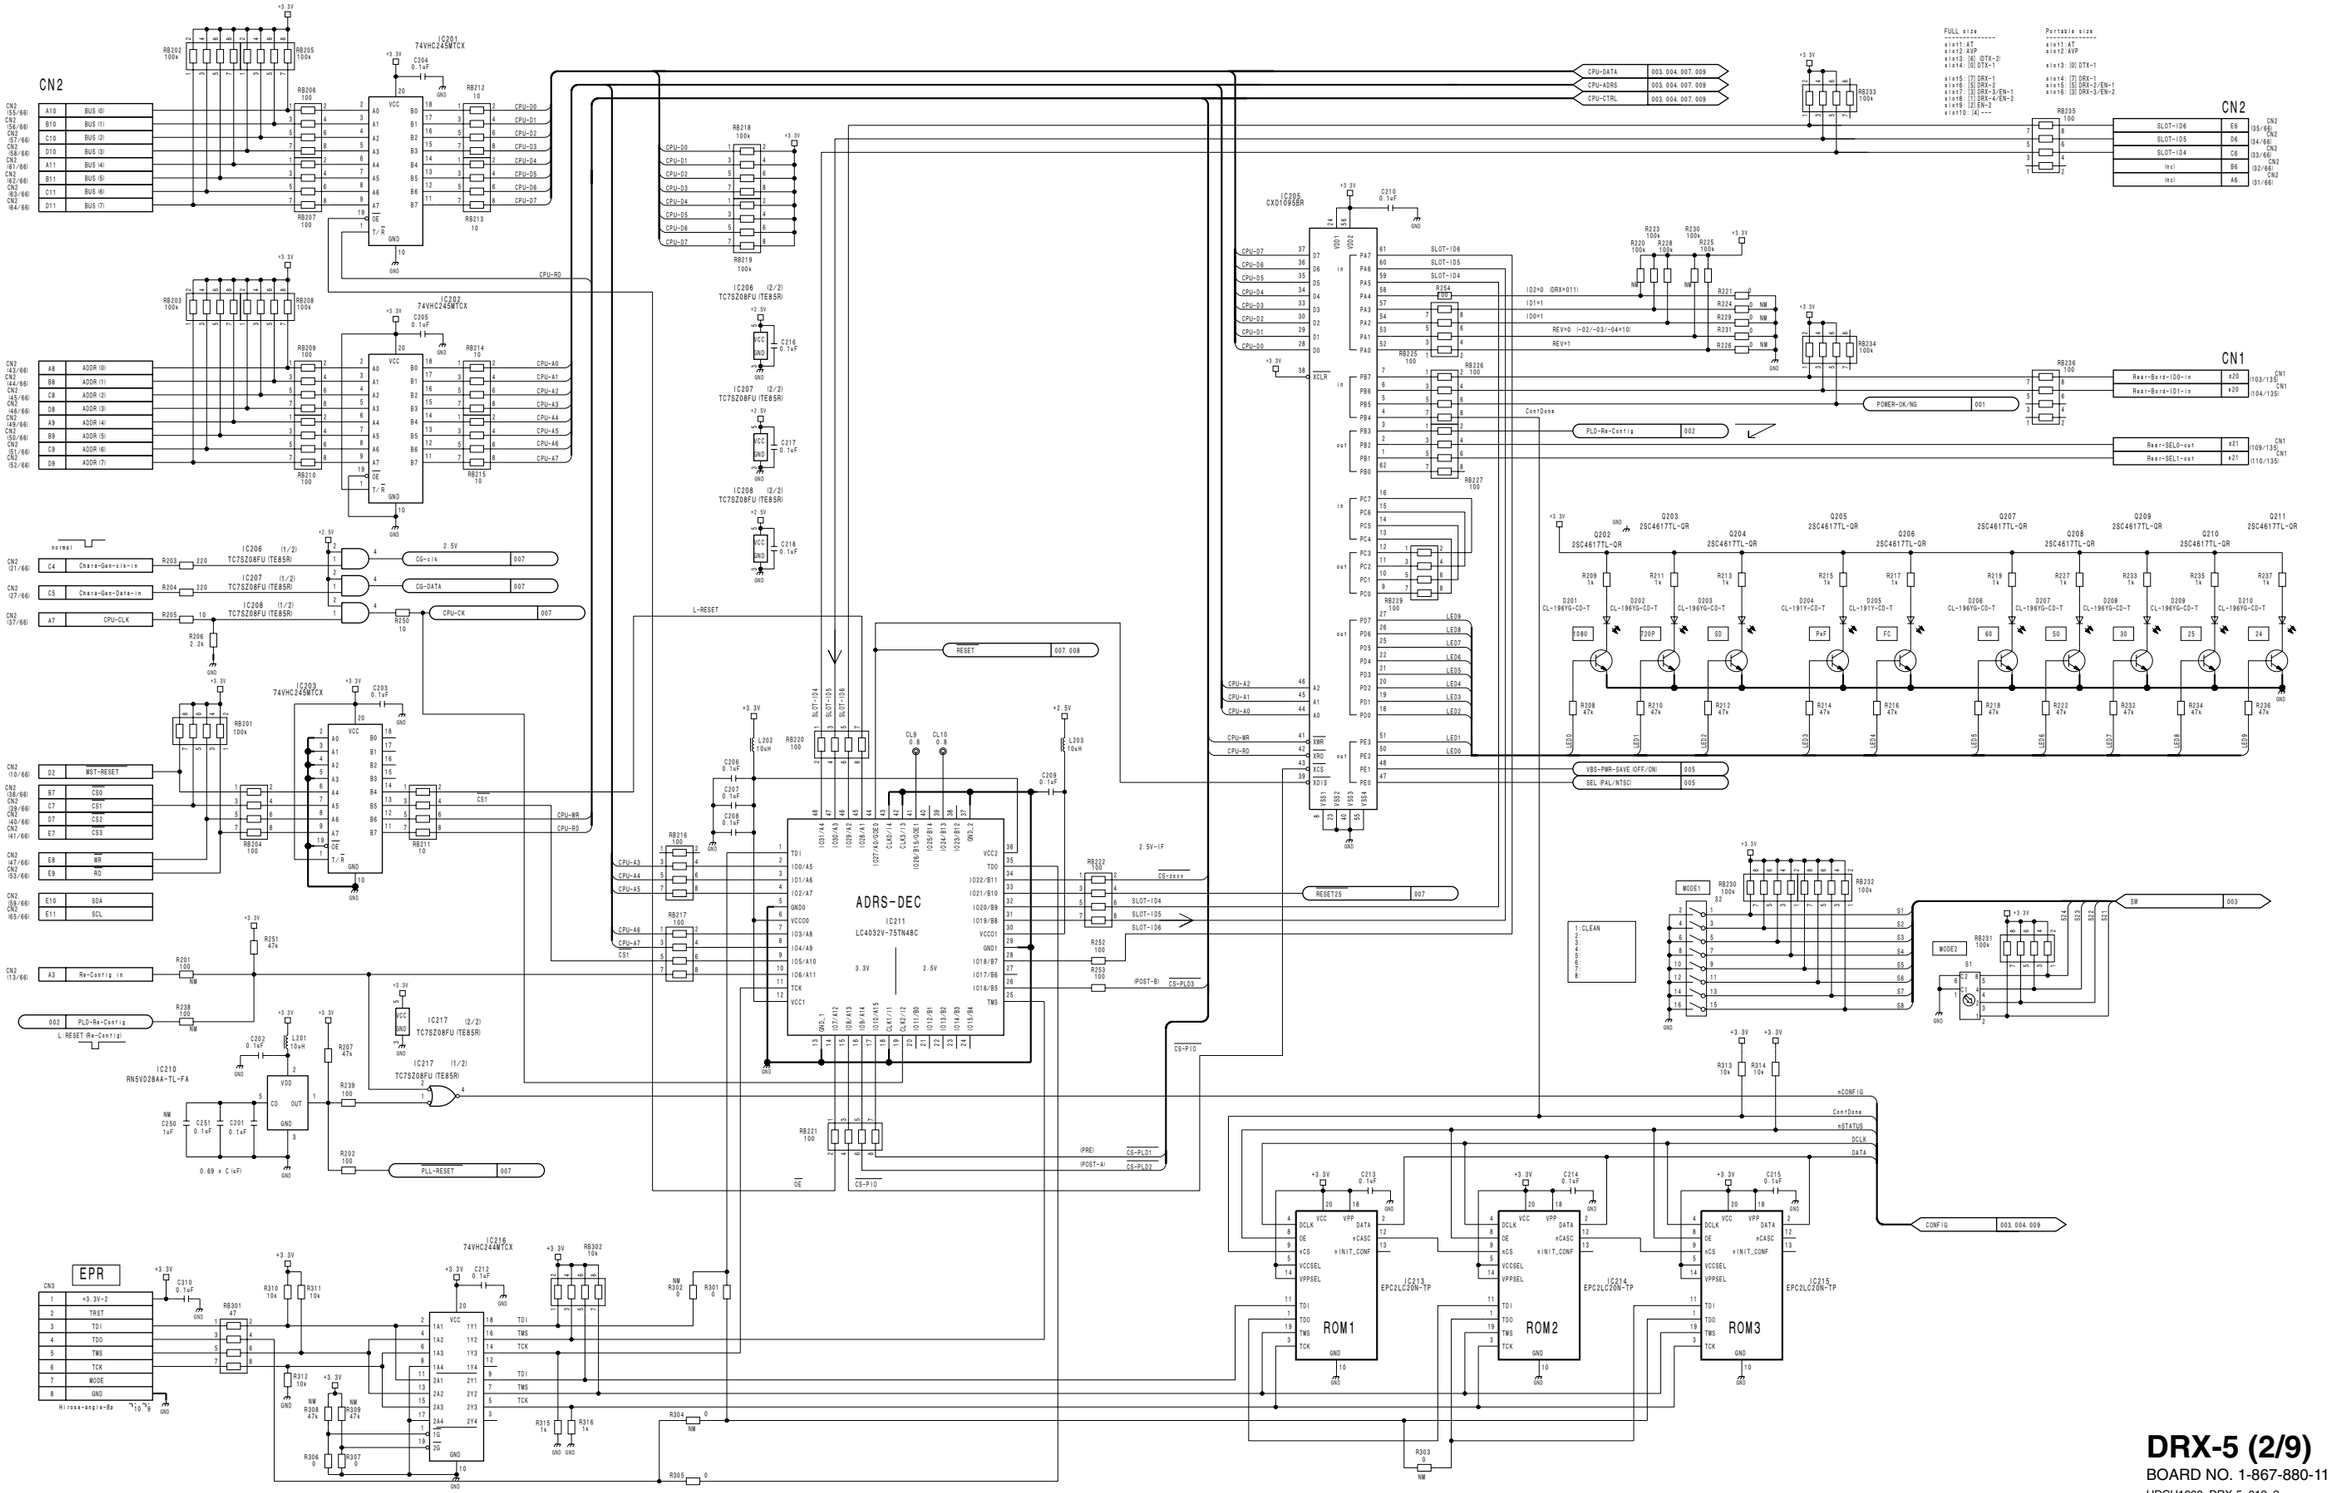

DRX-5 (2/9)
BOARD NO. 1-867-880-11
HDCU1000_DRX-5_012_2


DRX-5 (3/9)
SUFFIX: -11, -12

DRX-5 (3/9)
SUFFIX: -11, -12

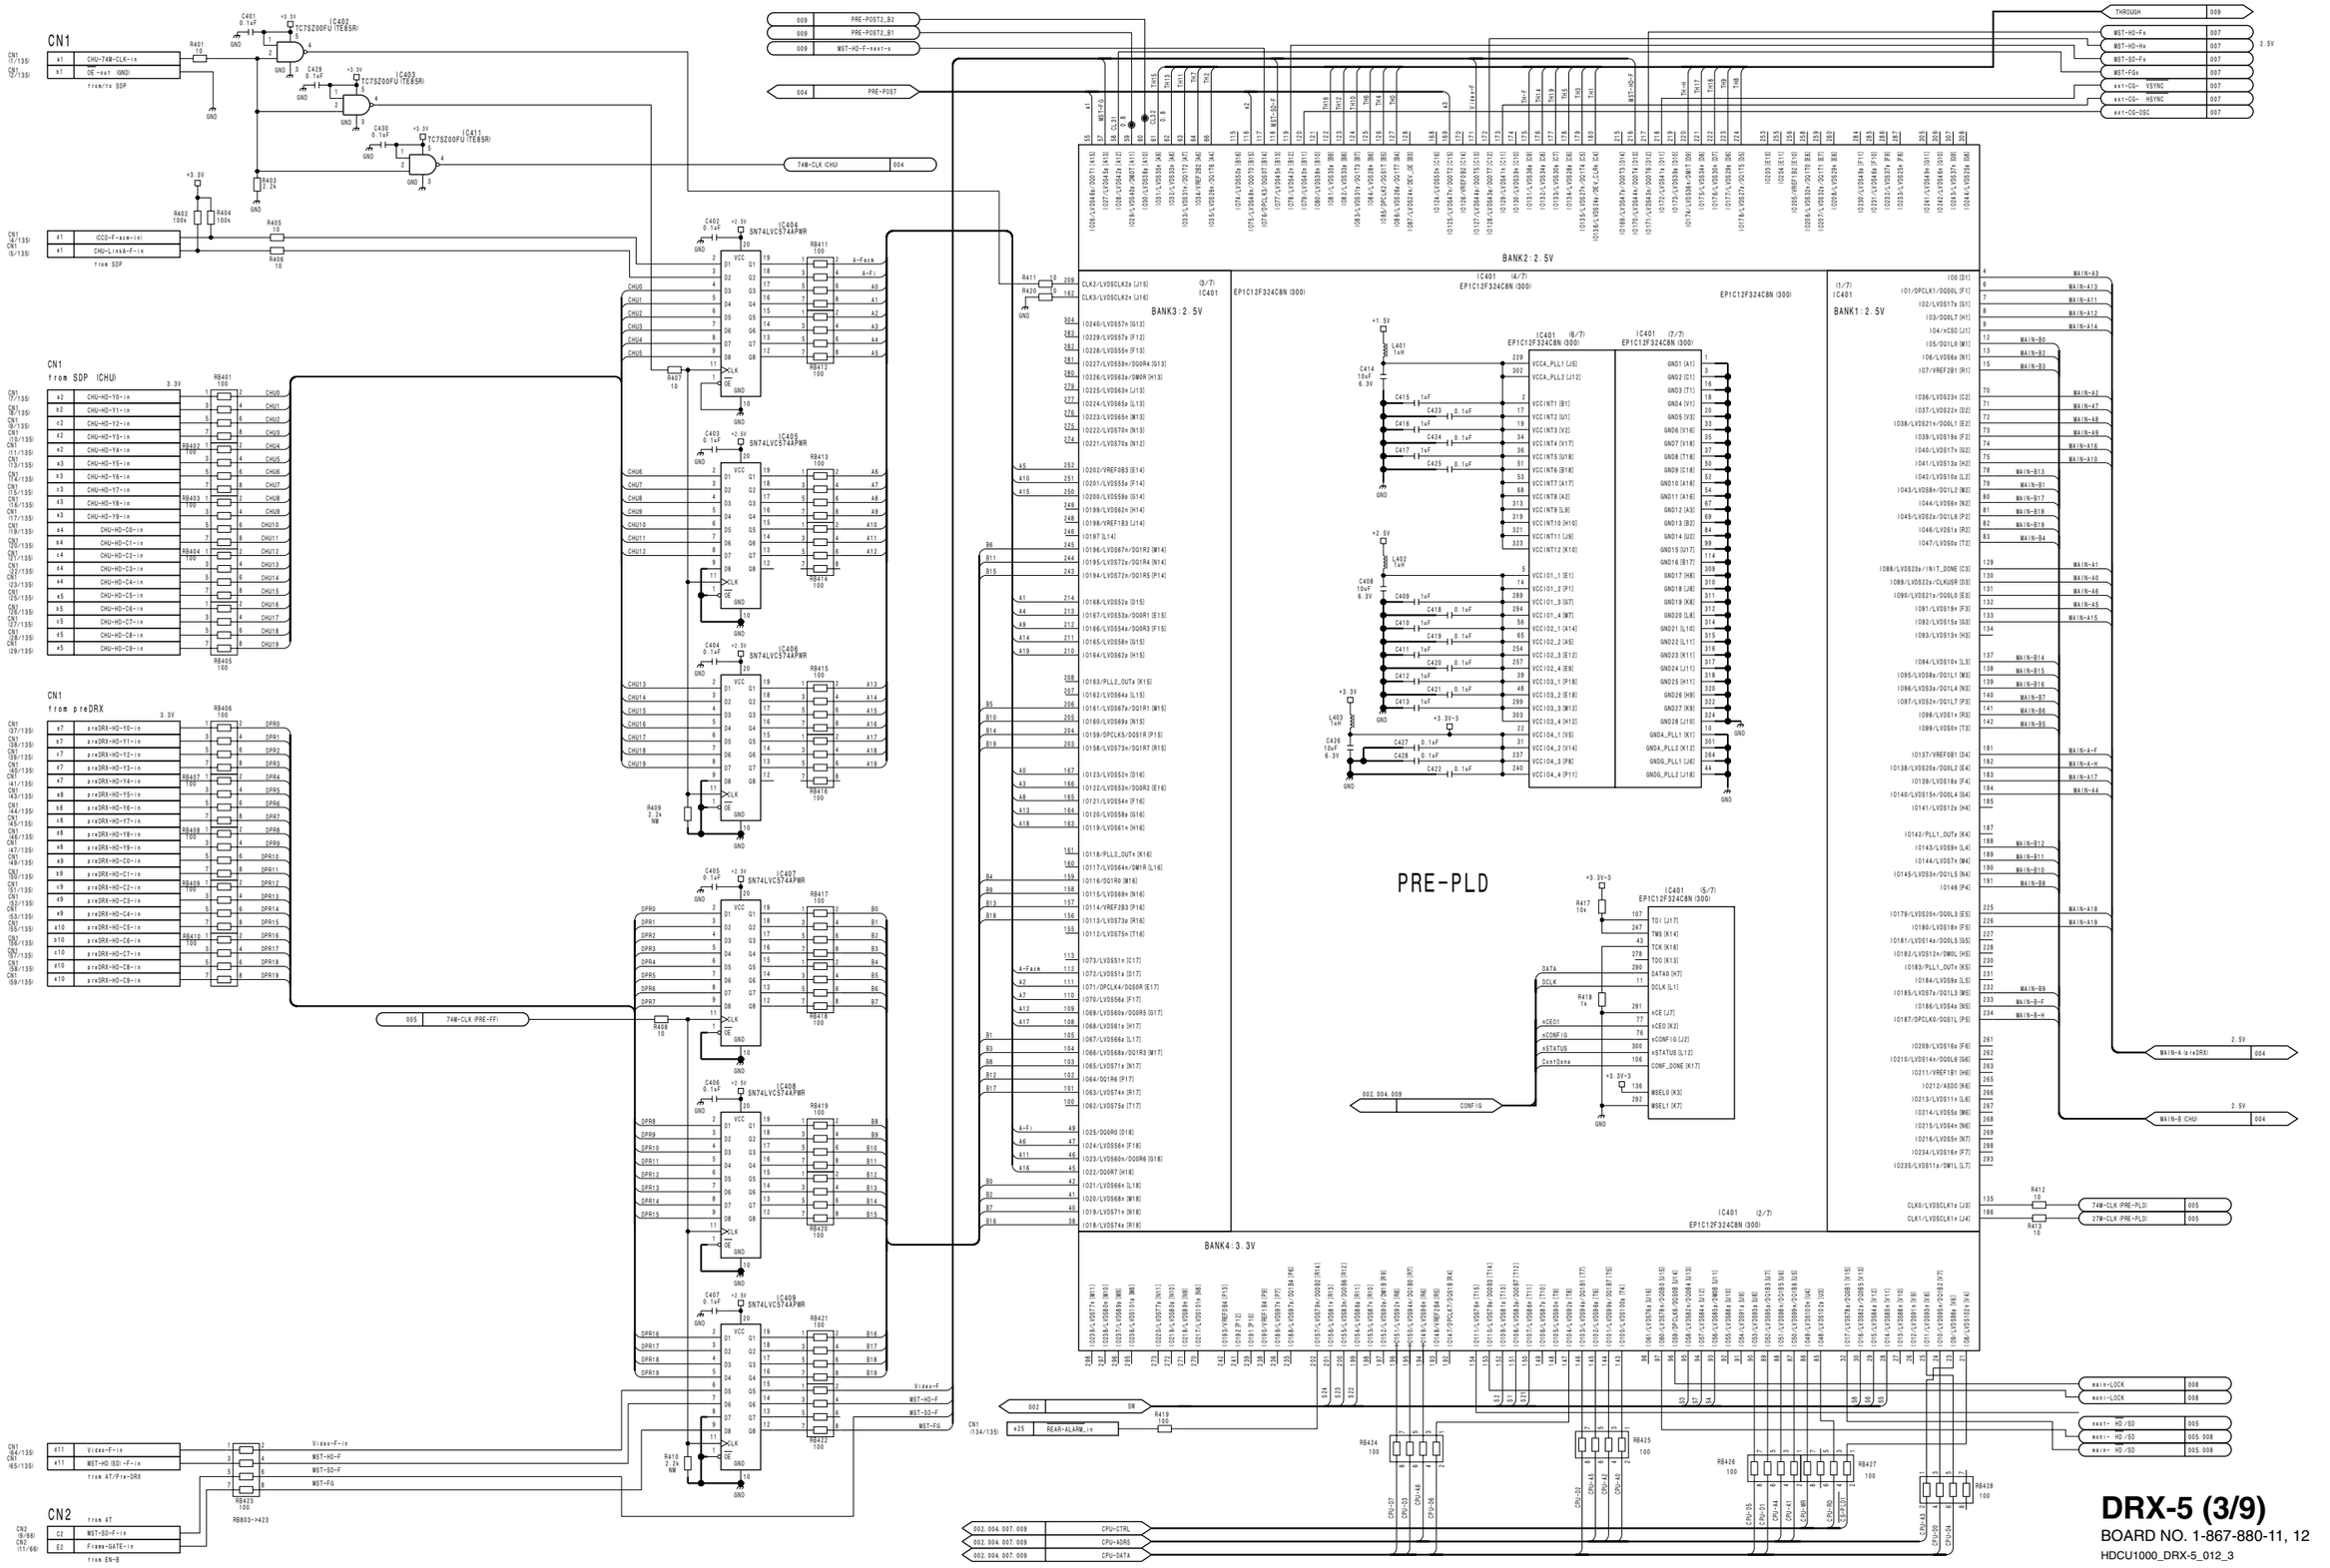


DRX-5 (3/9)
BOARD NO. 1-867-880-11, 12
HDCU1000_DRX-5_012_3

DRX-5 (4/9)
SUFFIX: -11, -12

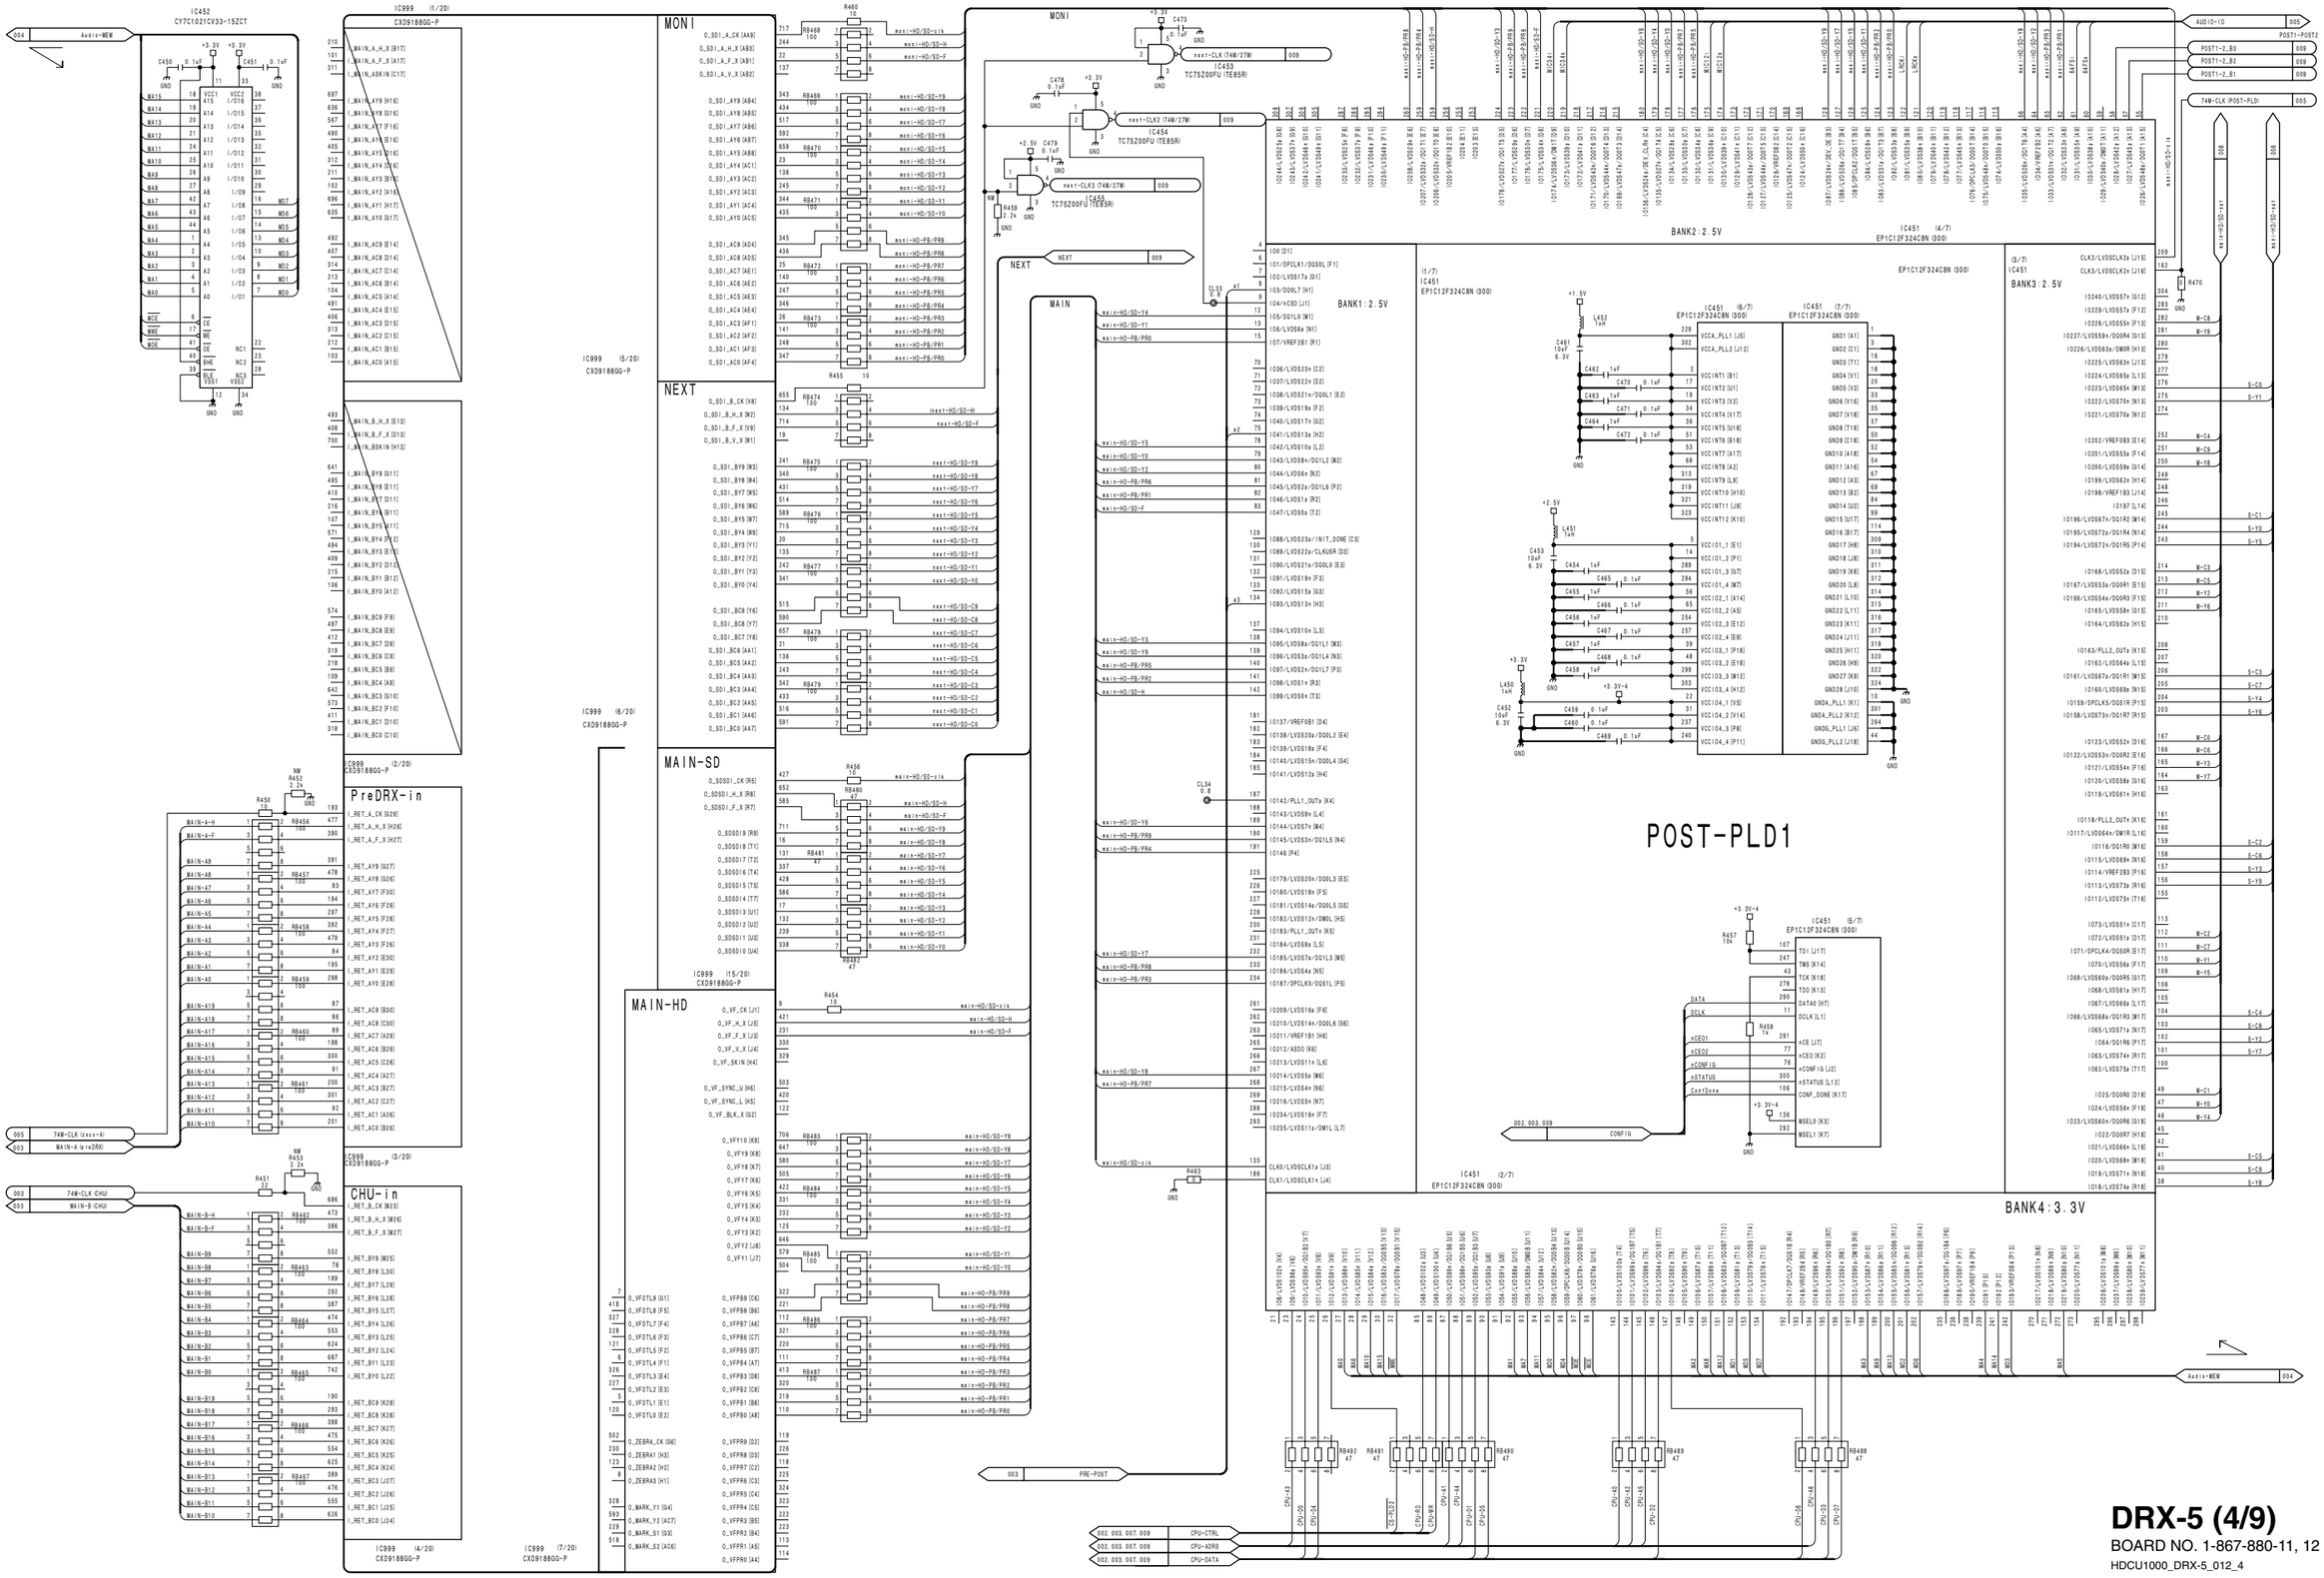


7-38

DRX-5 (4/9)
BOARD NO. 1-867-880-11, 12
HDCU1000_DRX-5_012_4

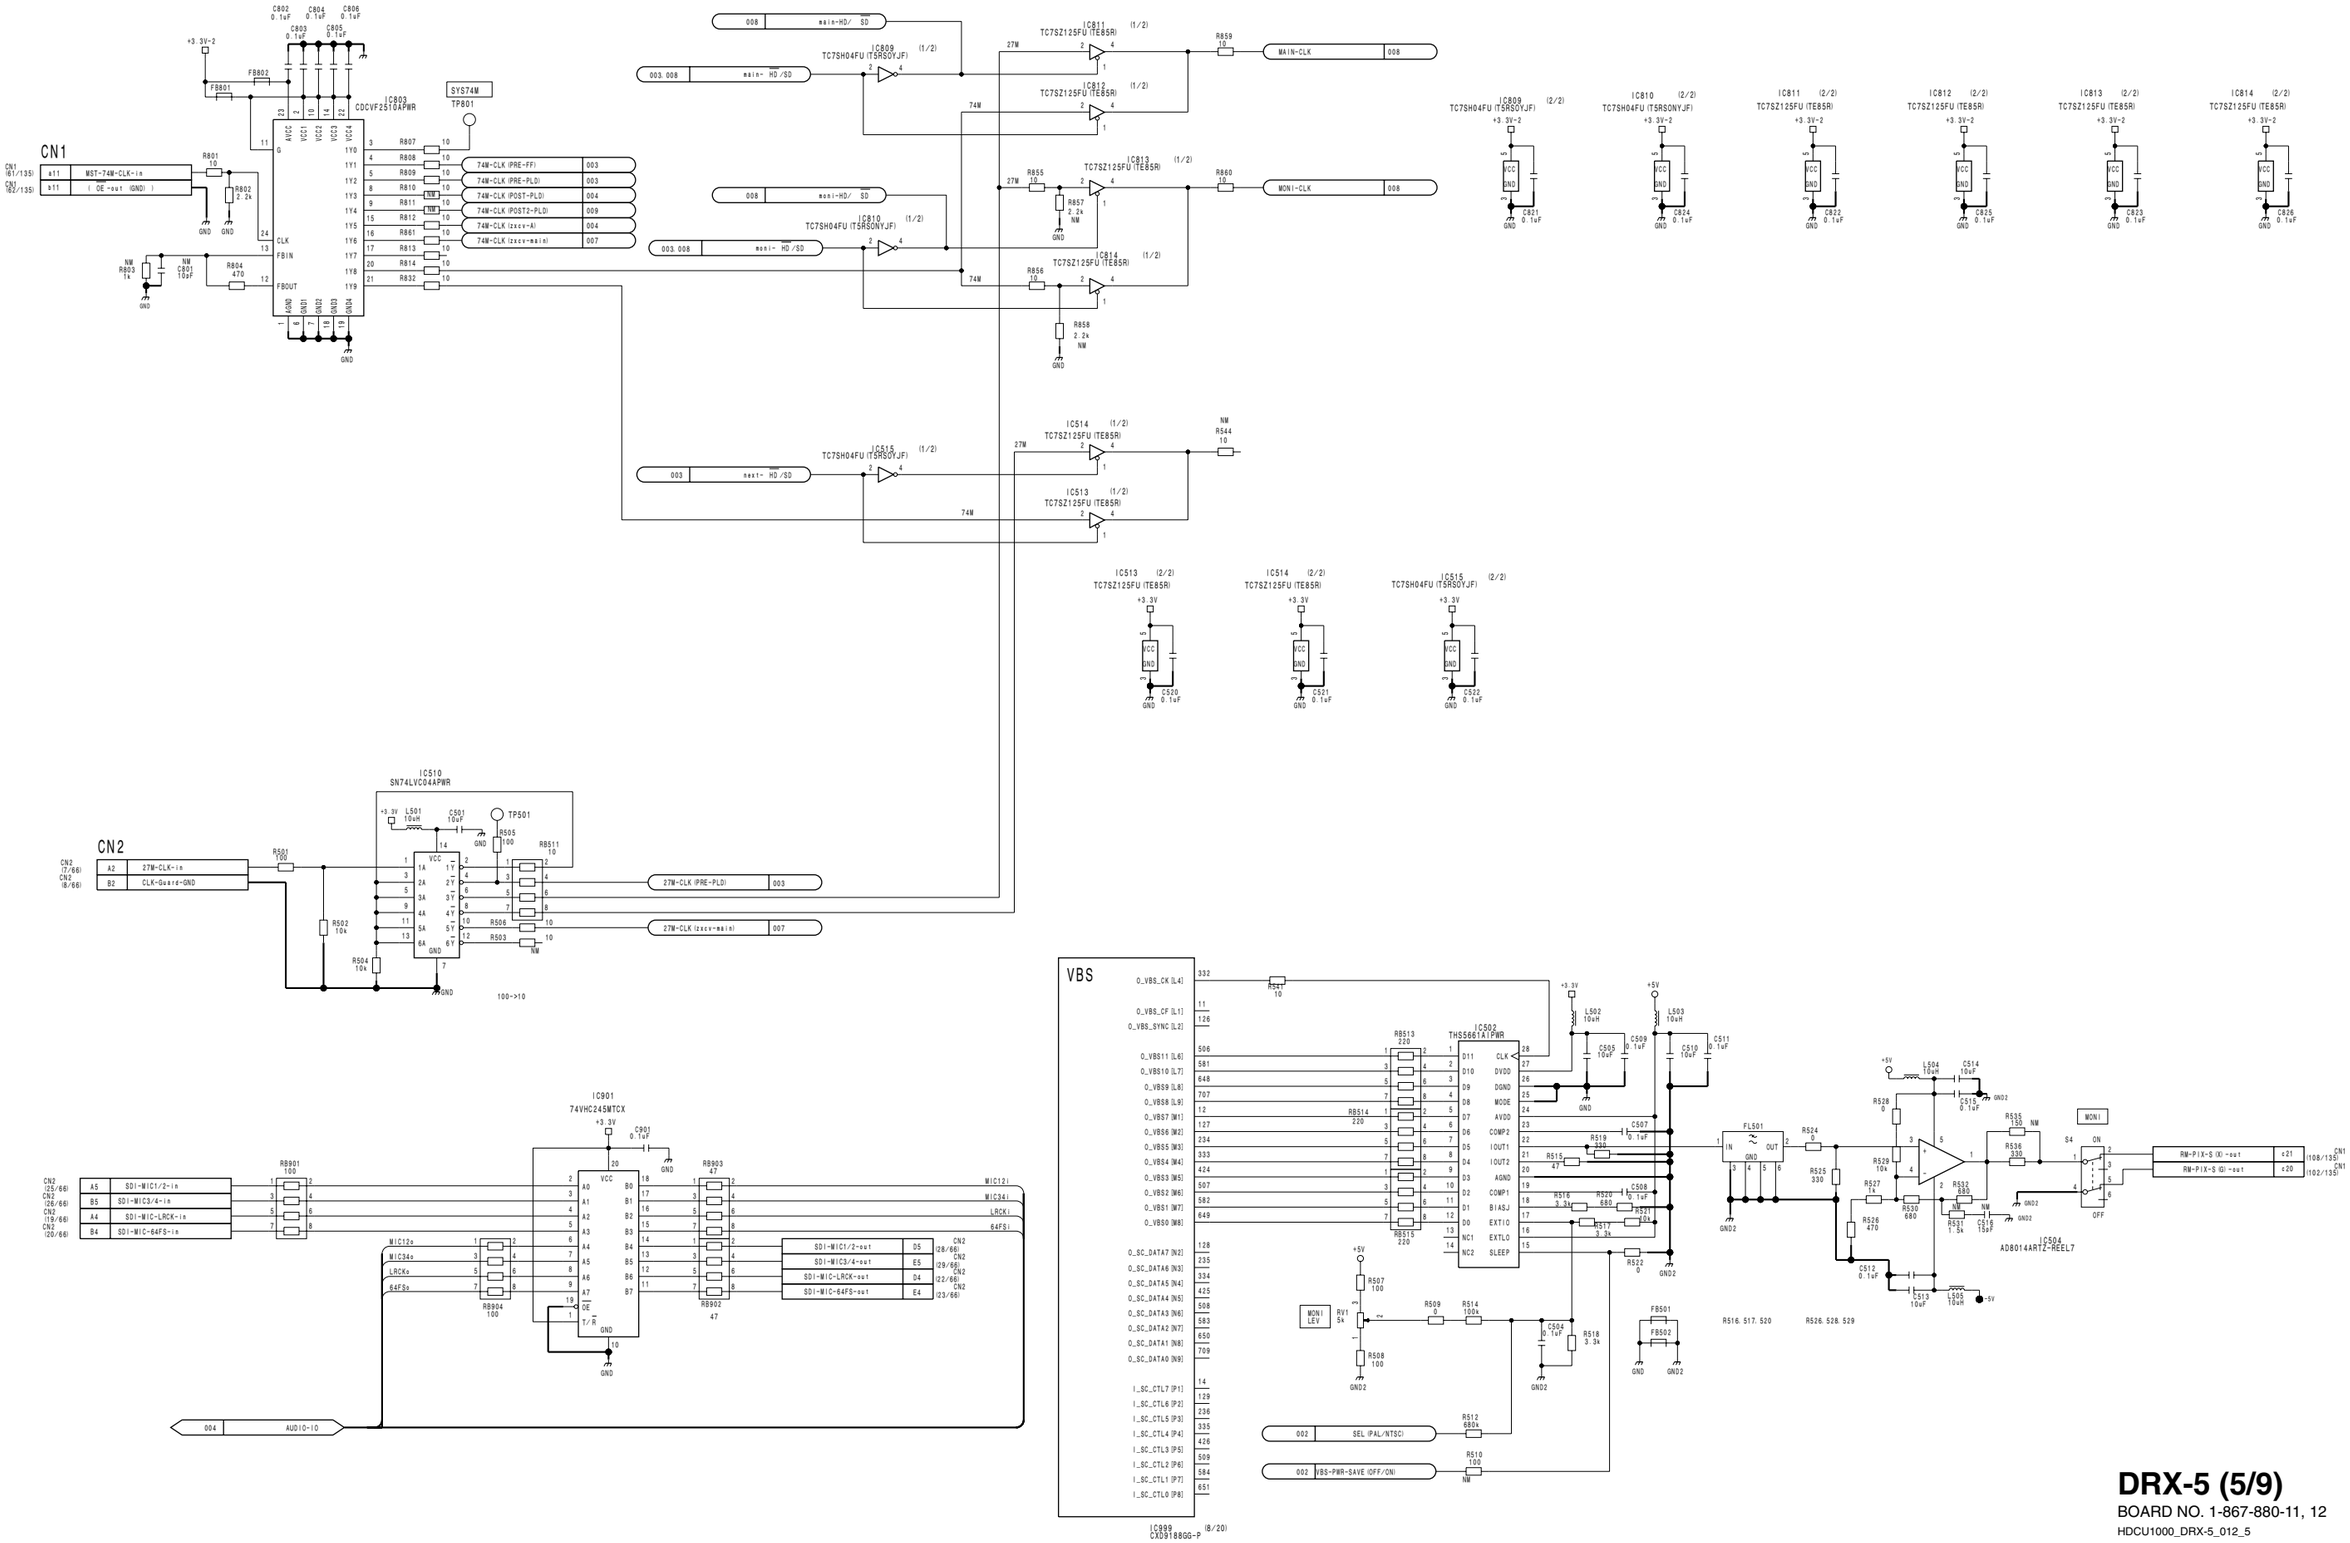

DRX-5 (5/9)
BOARD NO. 1-867-880-11, 12
HDCU1000_DRX-5_012_5


DRX-5 (6/9)
SUFFIX: -11, -12

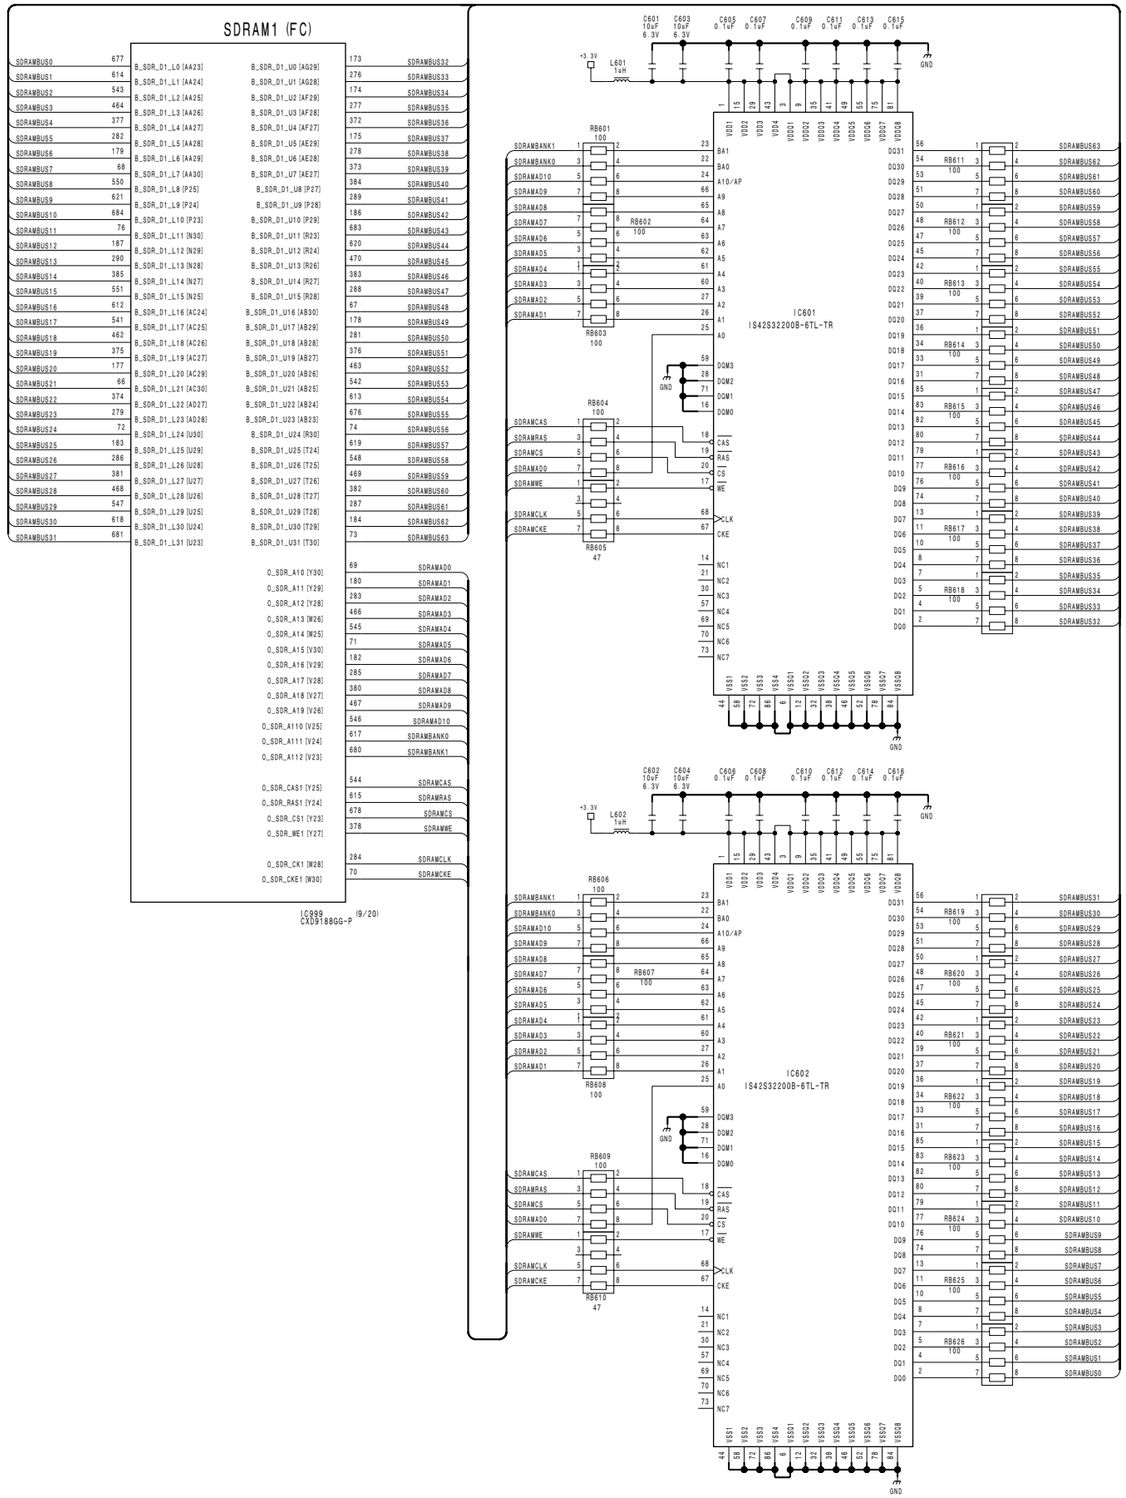

7-40


DRX-5 (6/9)
BOARD NO. 1-867-880-11, 12
HDCU1000_DRX-5_012_6

DRX-5 (7/9)
SUFFIX: -11, -12

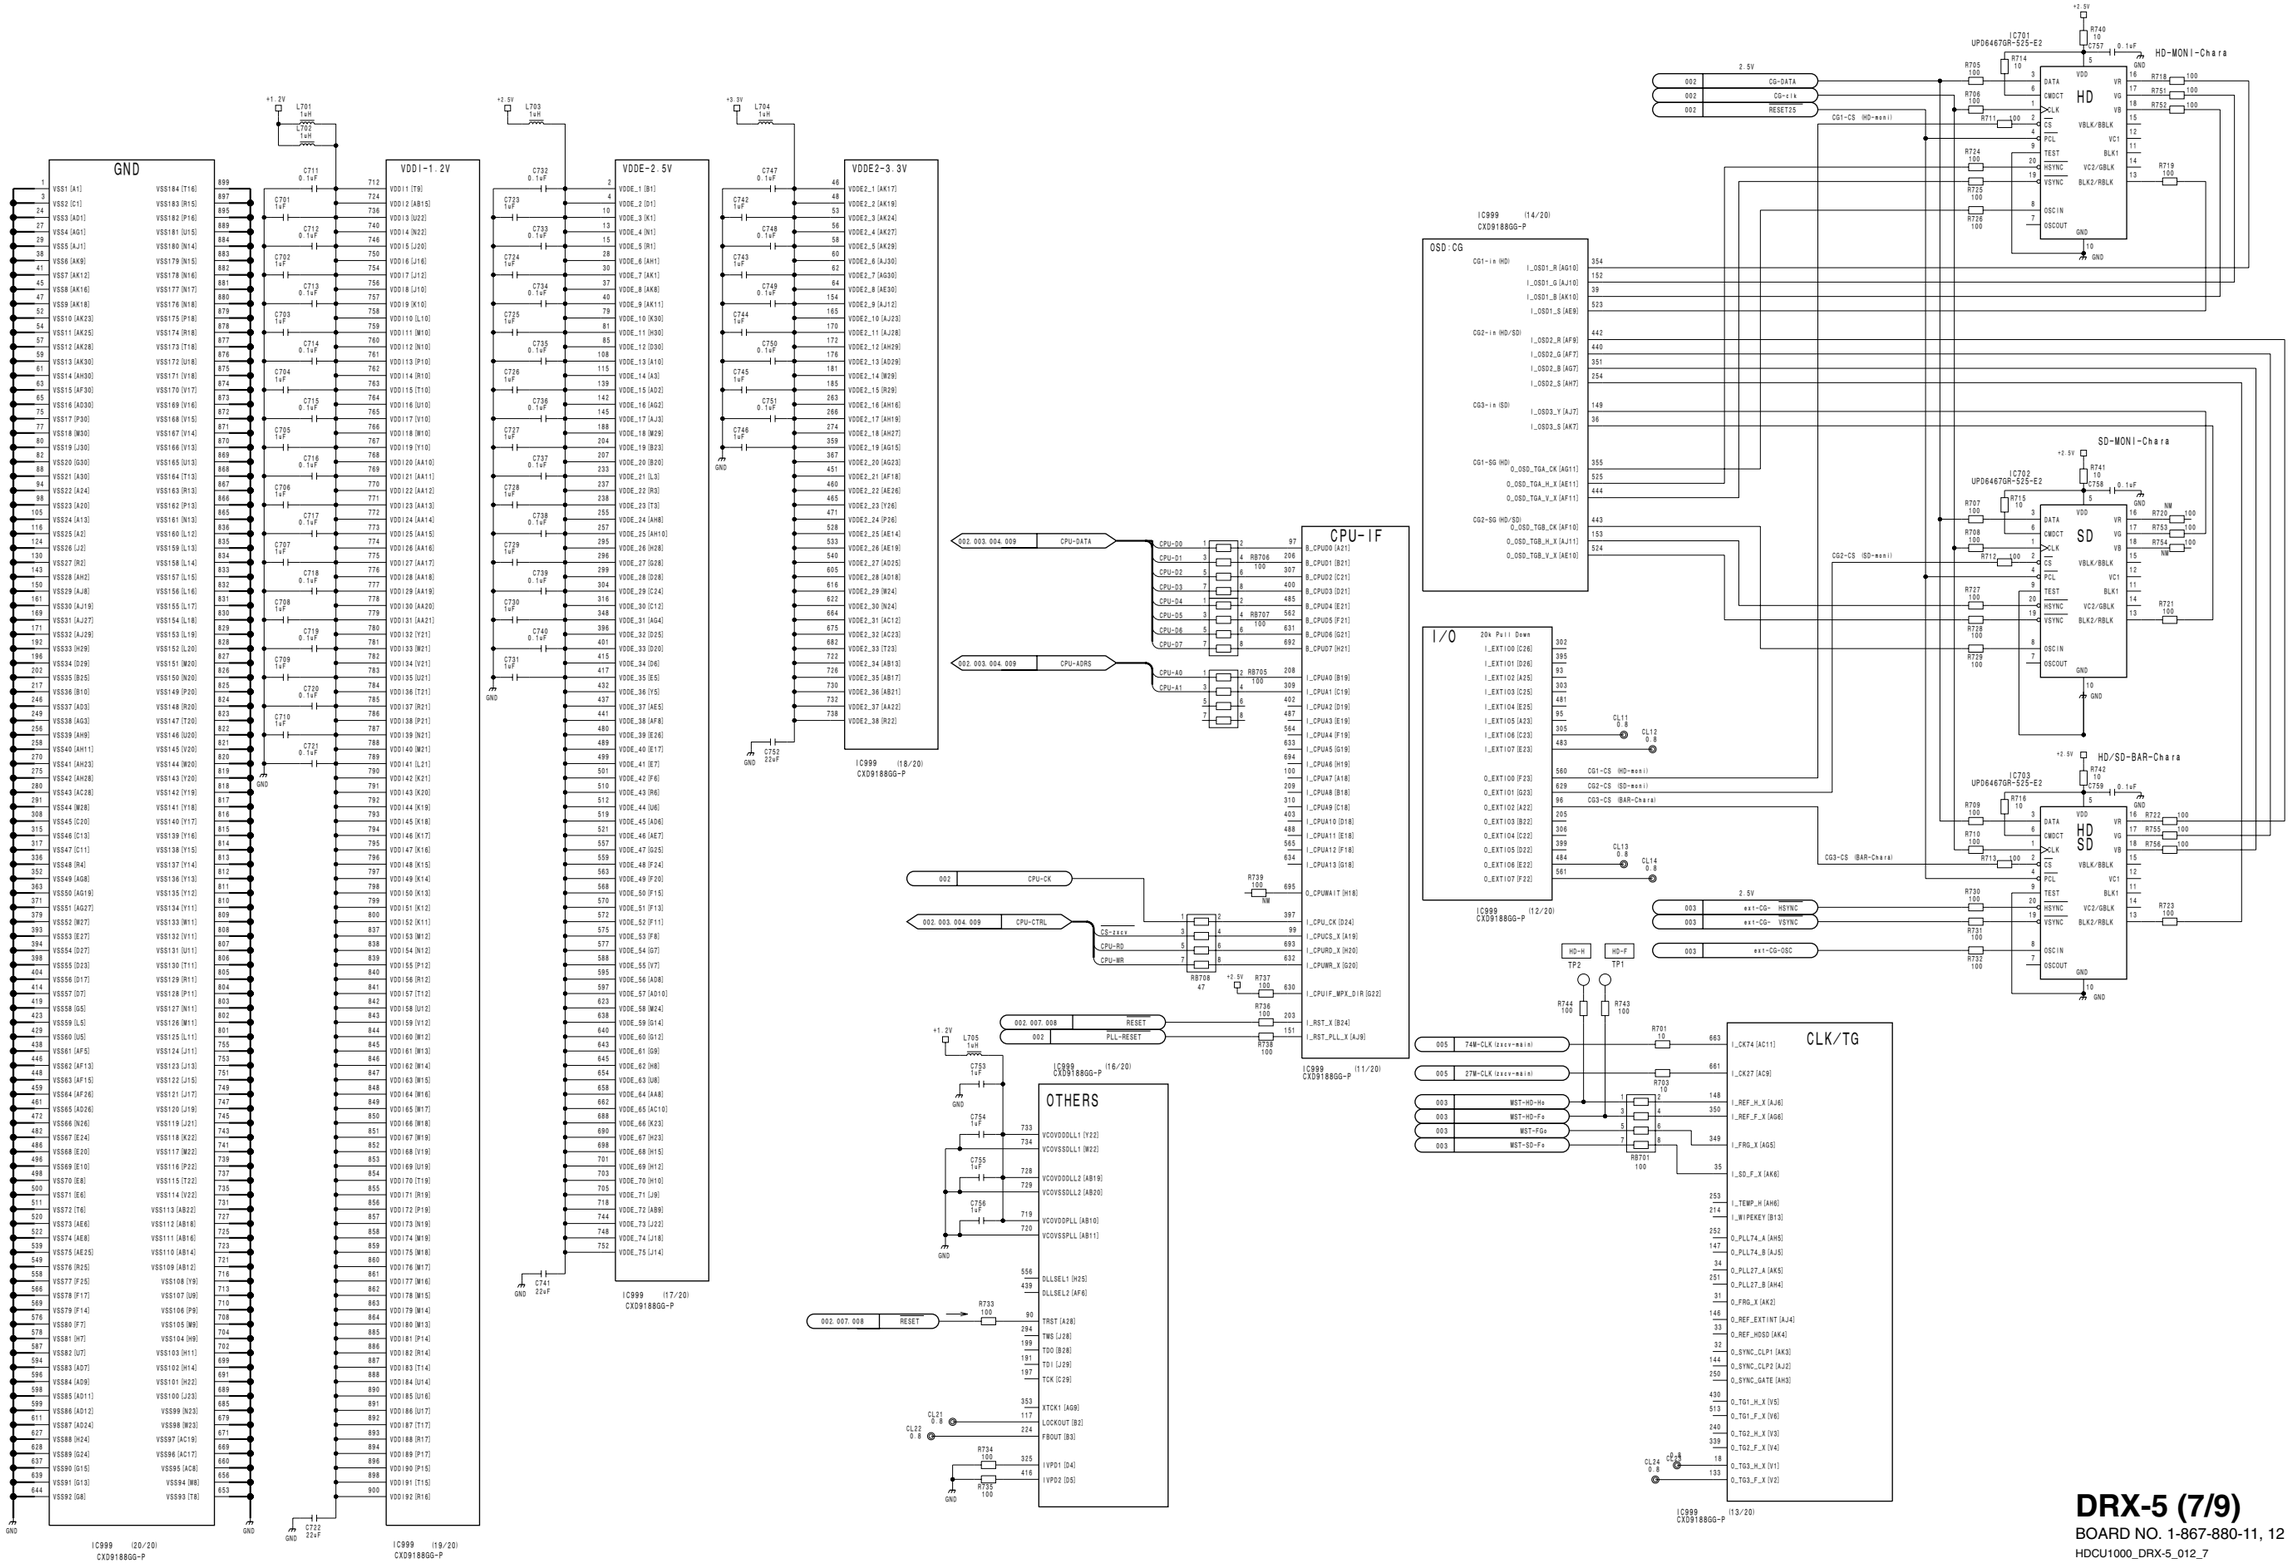

DRX-5 (7/9)
BOARD NO. 1-867-880-11, 12
HDCU1000_DRX-5_012_7

DRX-5 (8/9)
SUFFIX: -11, -12

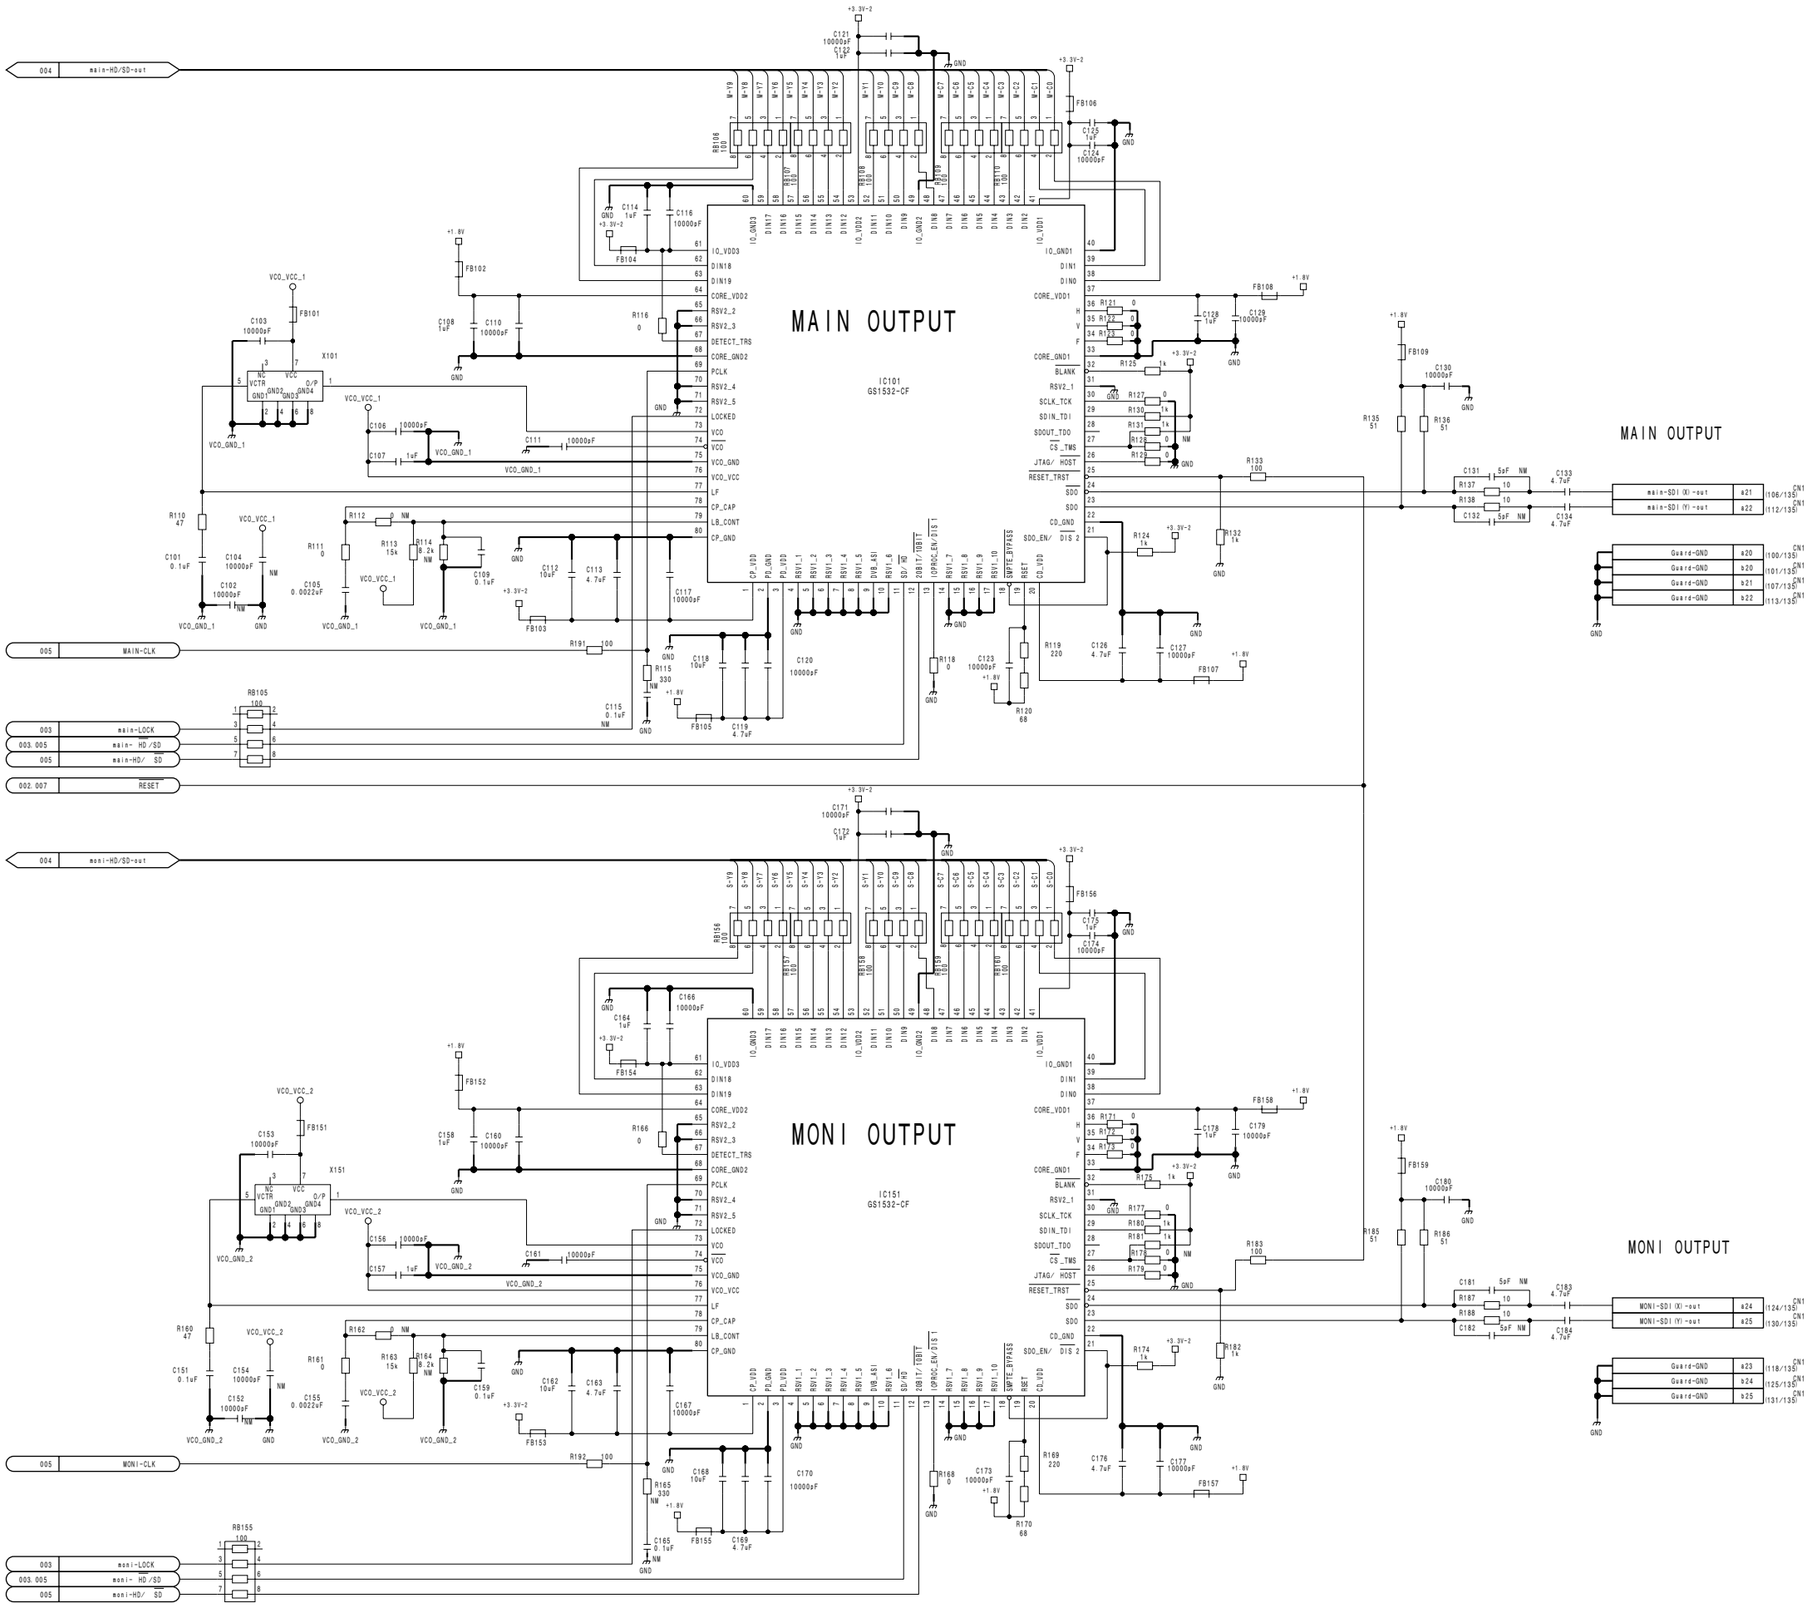


7-42

DRX-5 (8/9)
BOARD NO. 1-867-880-11, 12
HDCU1000_DRX-5_012_8

DRX-5 (9/9)

SUFFIX: -11, -12

DRX-5 (9/9)
SUFFIX: -11, -12

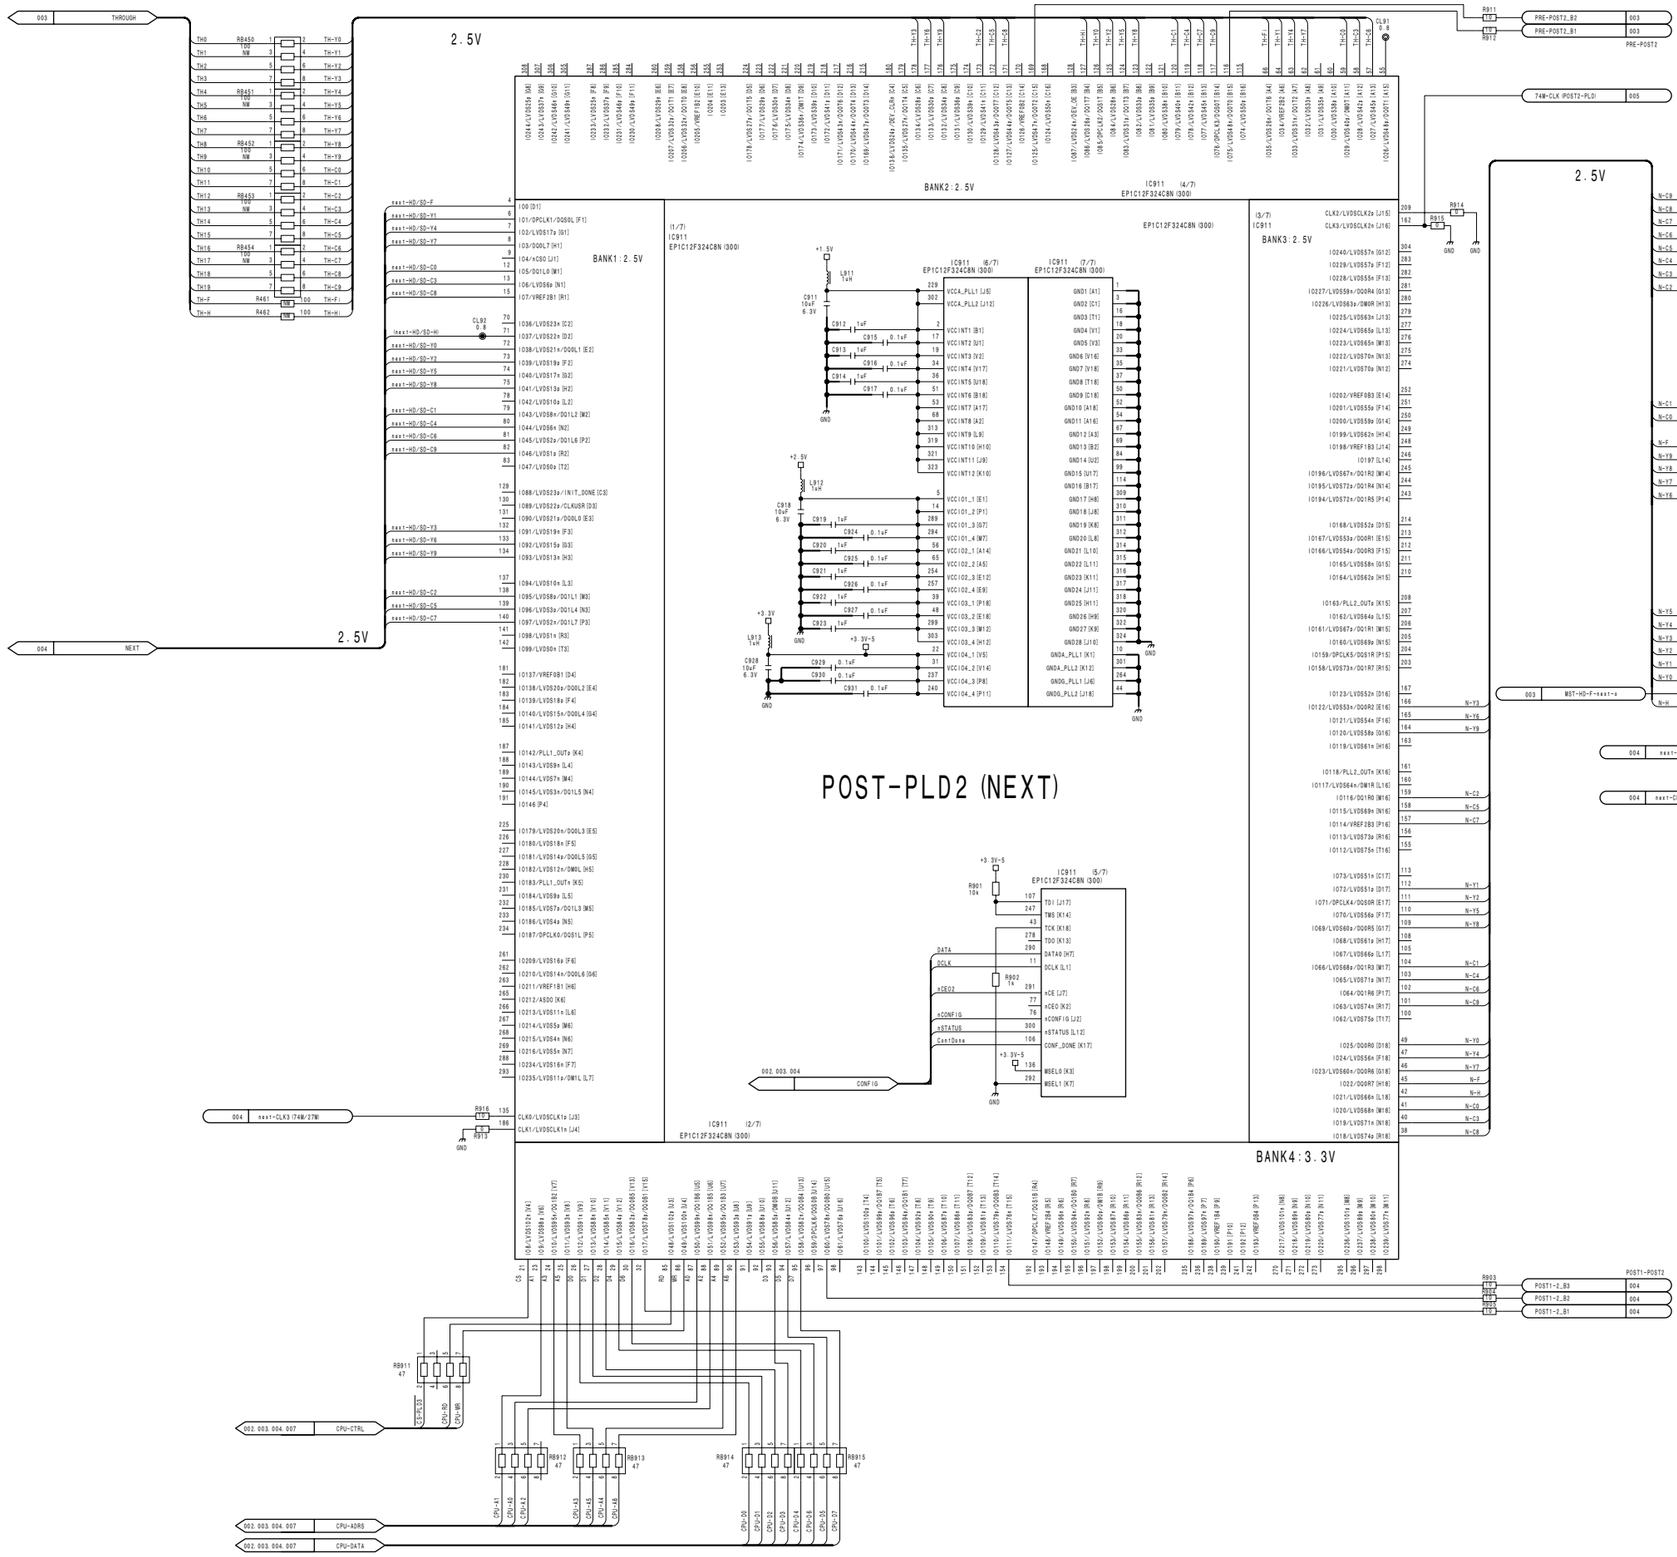


DRX-5 (9/9)

BOARD NO. 1-867-880-11, 12

HDCU1000_DRX-5_012_9

DTX-5 (1/7)

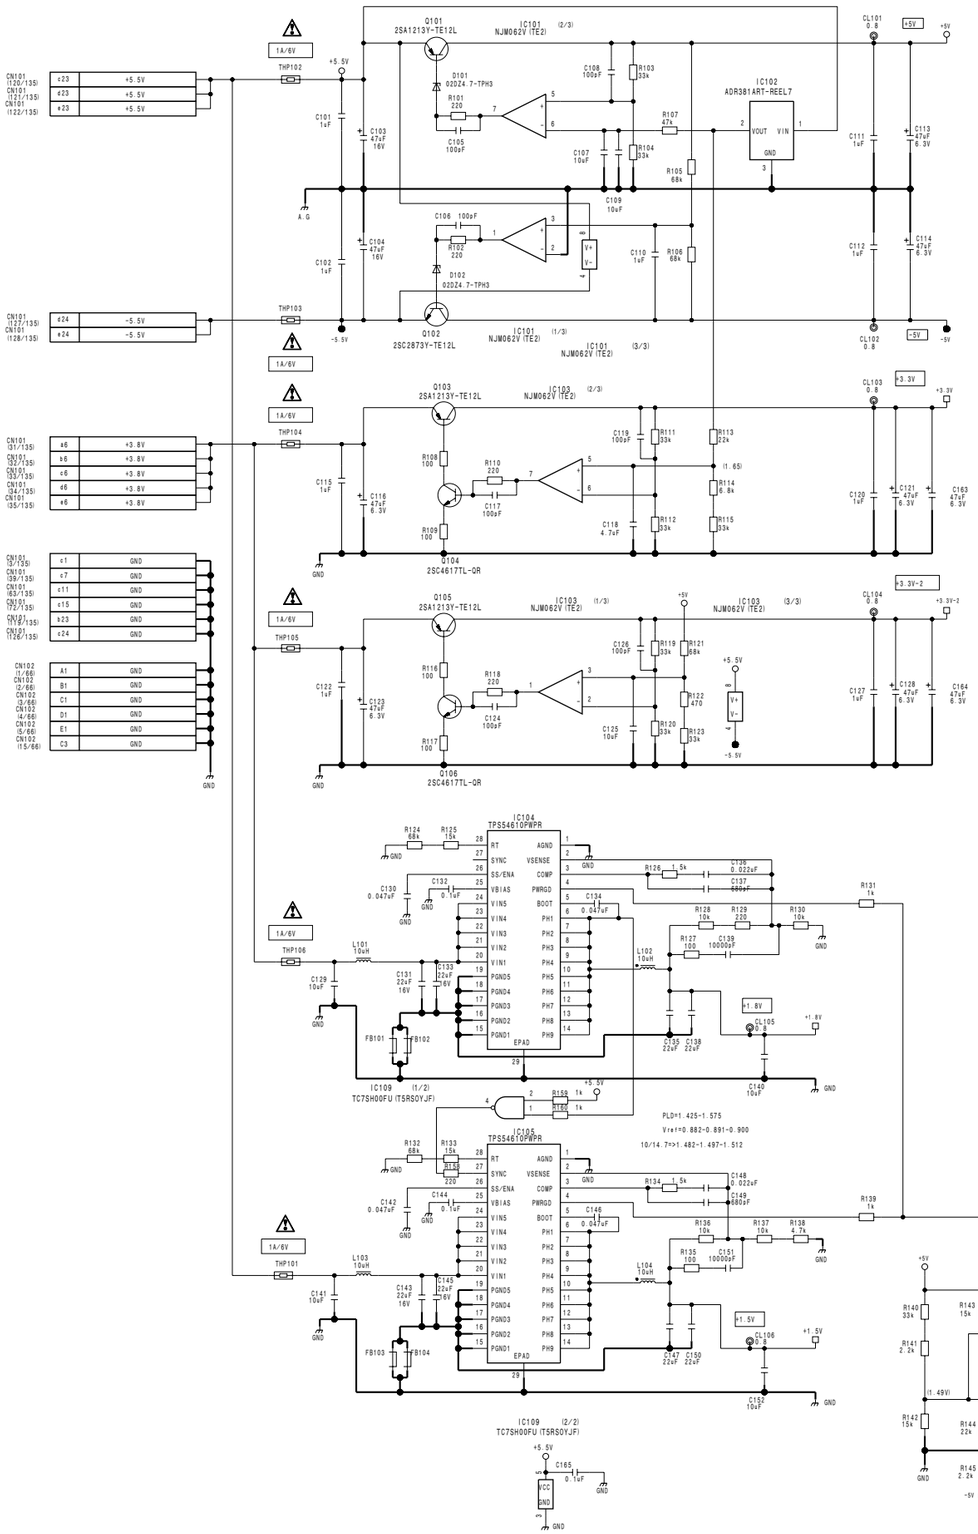

7-44


DTX-5 (1/7)

BOARD NO. 1-867-879-11

HDCU1000_DTX-5_011_1


MM/HDCU1000 Series

DTX-5 (2/7)

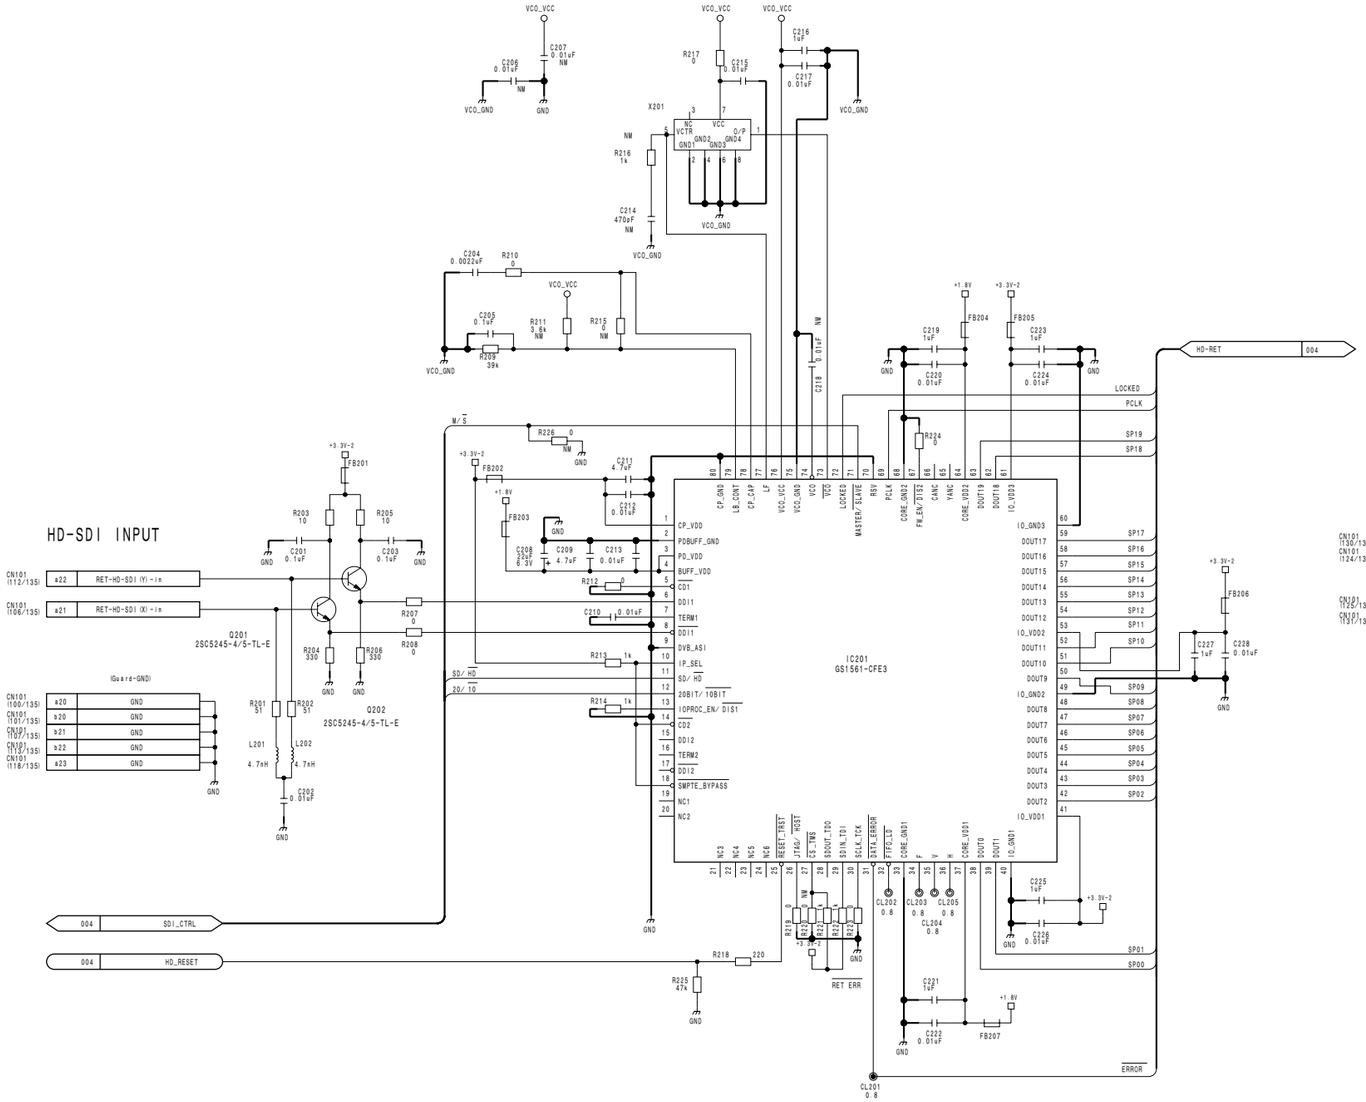

DTX-5 (2/7)
BOARD NO. 1-867-879-11
HDCU1000_DTX-5_011_2


DTX-5 (3/7)

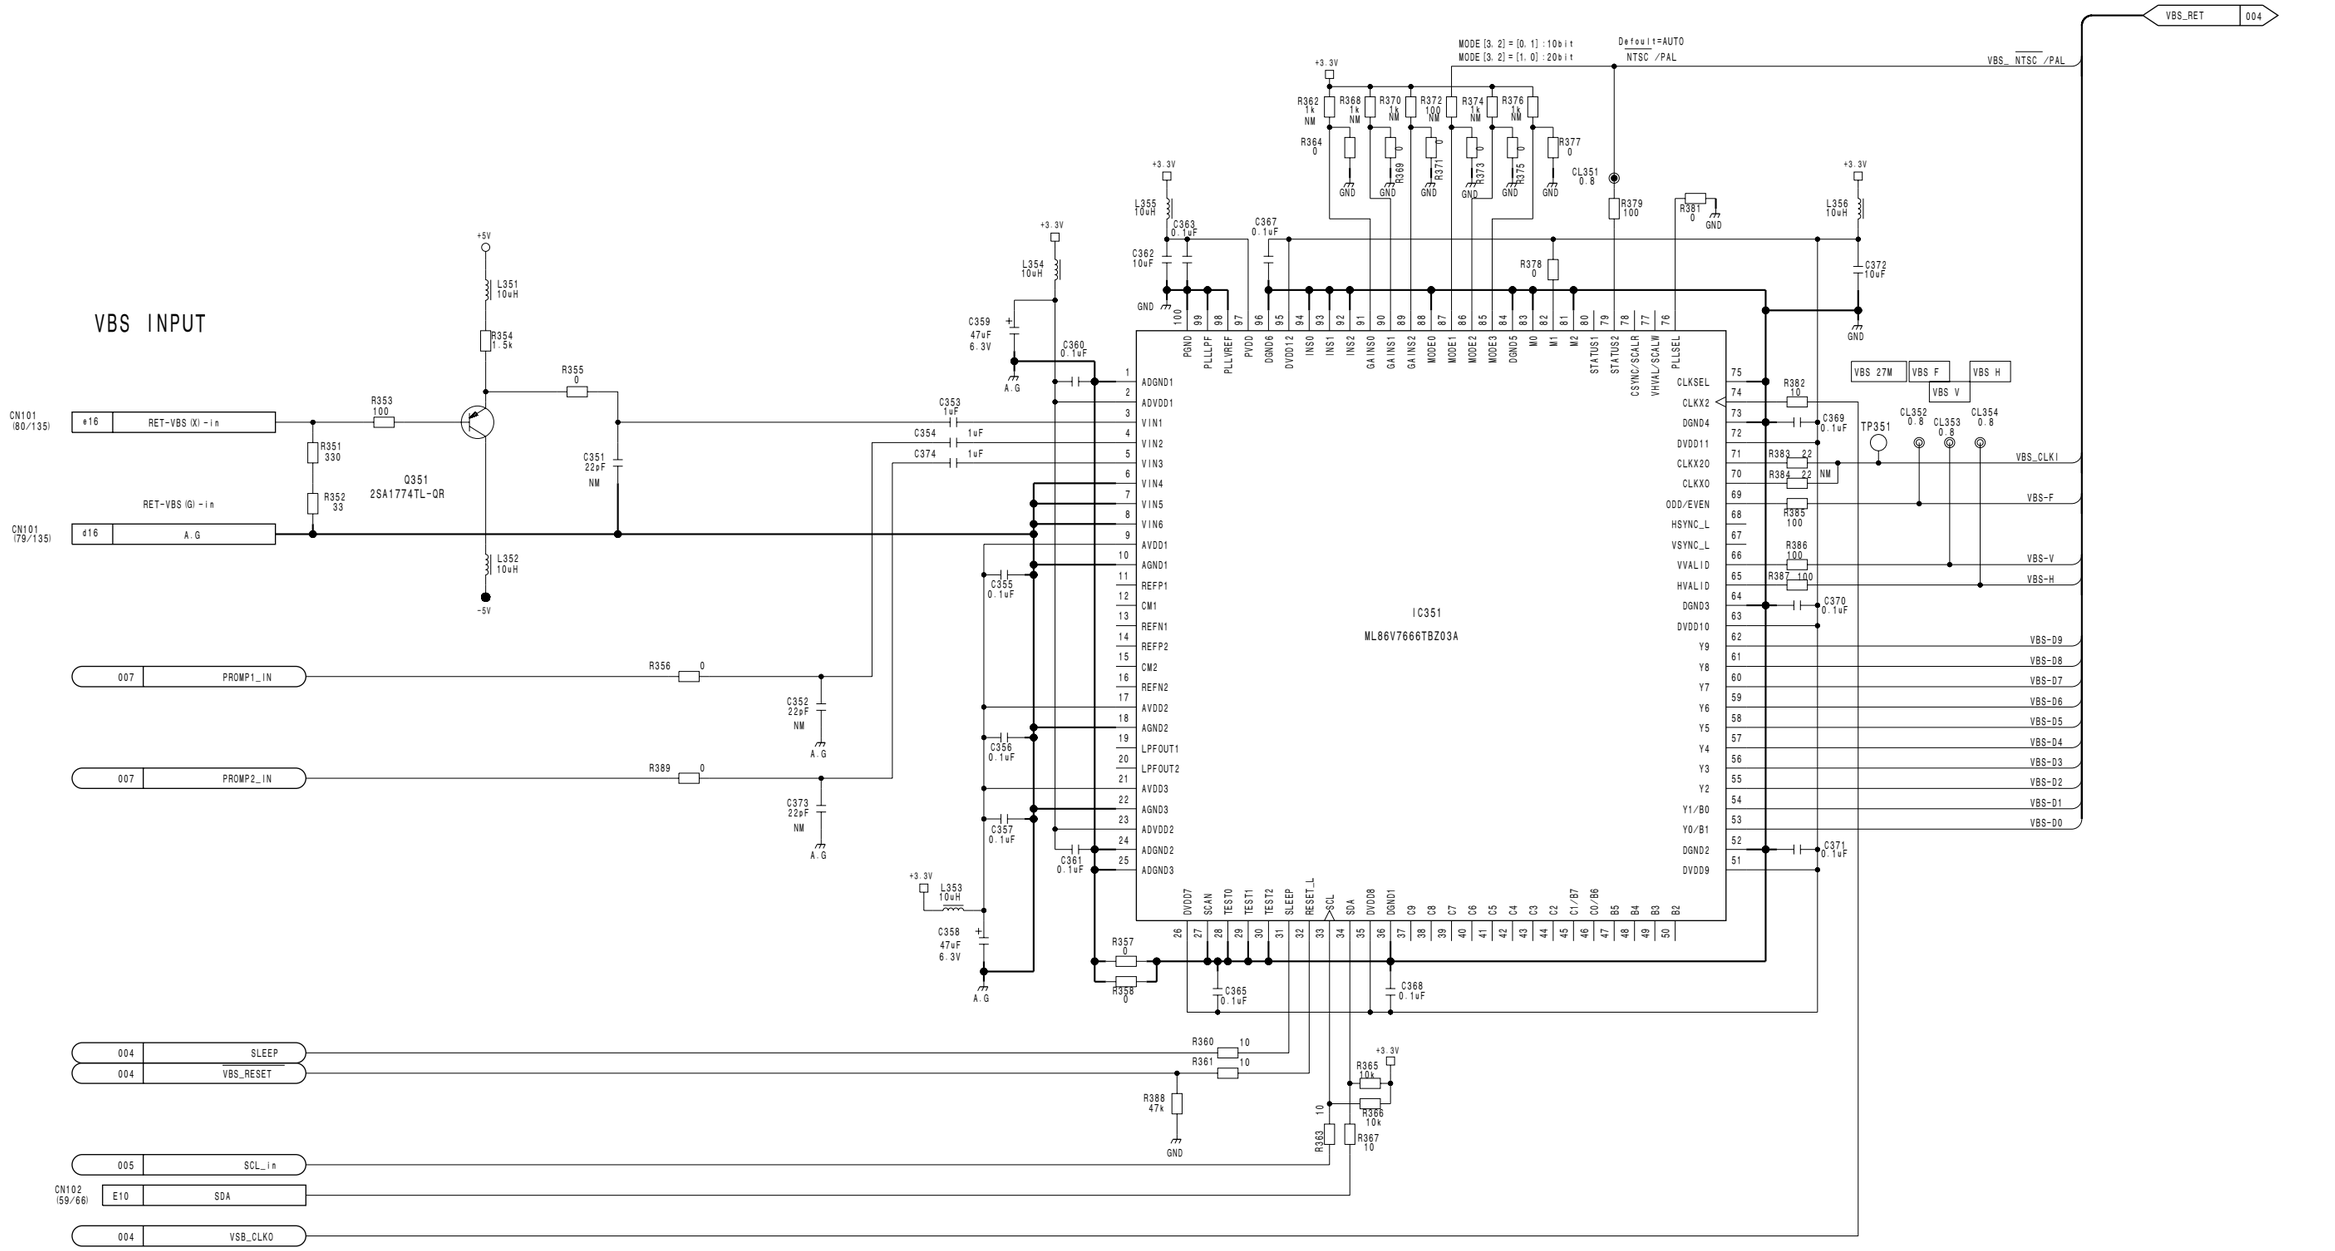


7-46

DTX-5 (3/7)
BOARD NO. 1-867-879-11
HDCU1000_DTX-5_011_3


DTX-5 (4/7)

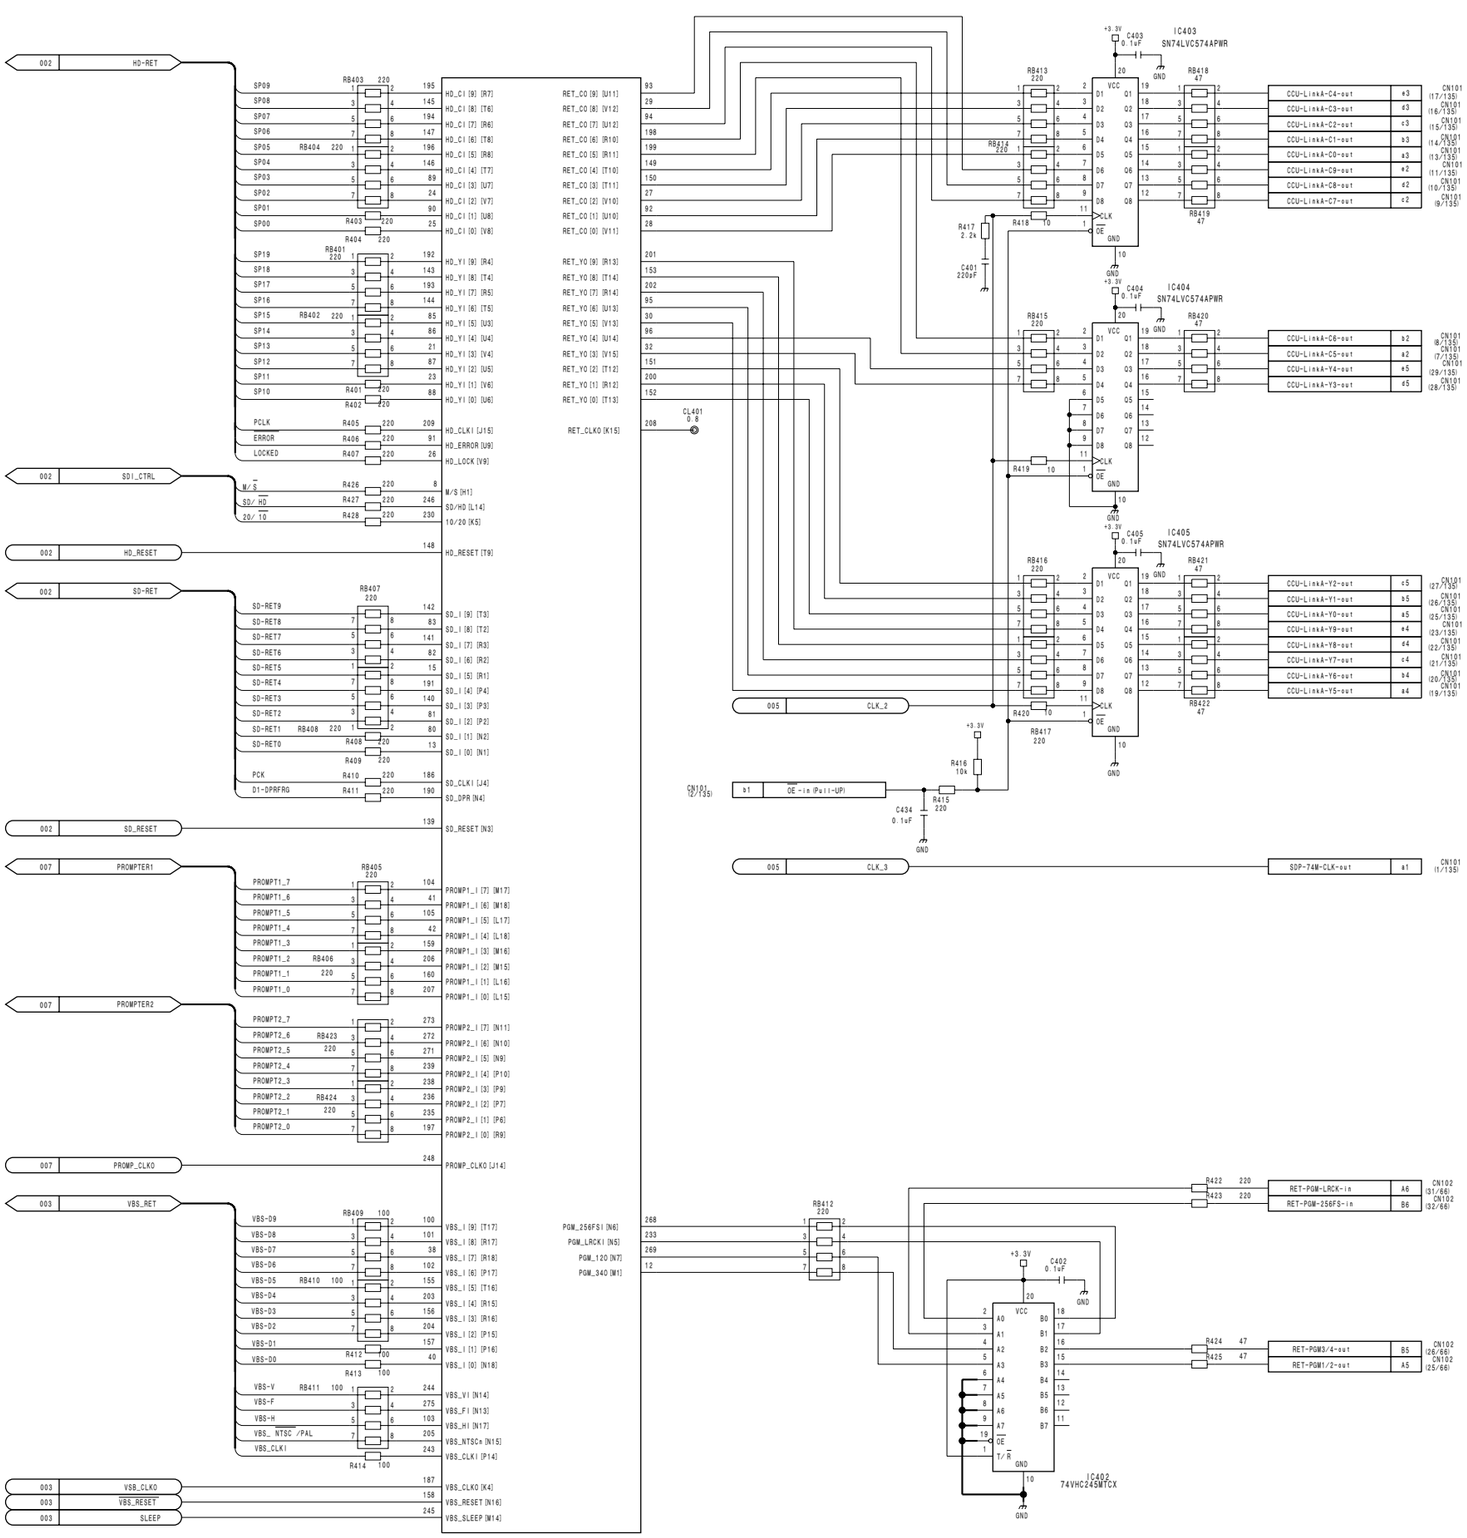

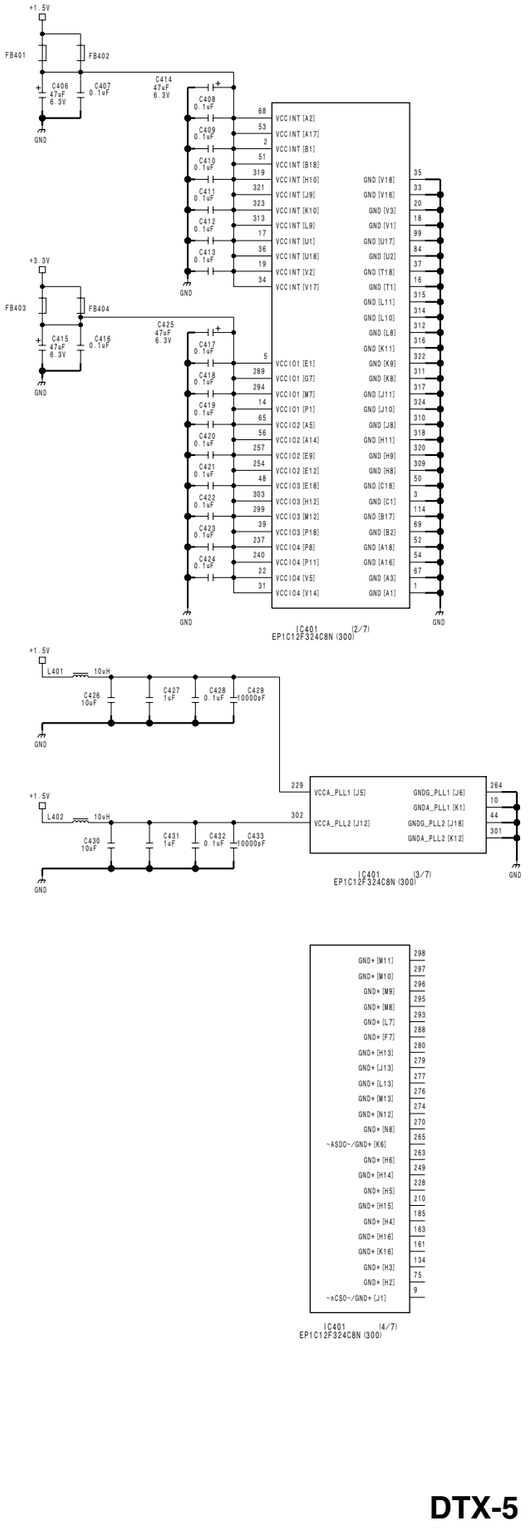

DTX-5 (4/7)
BOARD NO. 1-867-879-11
HDCU1000_DTX-5_011_4


DTX-5 (5/7)

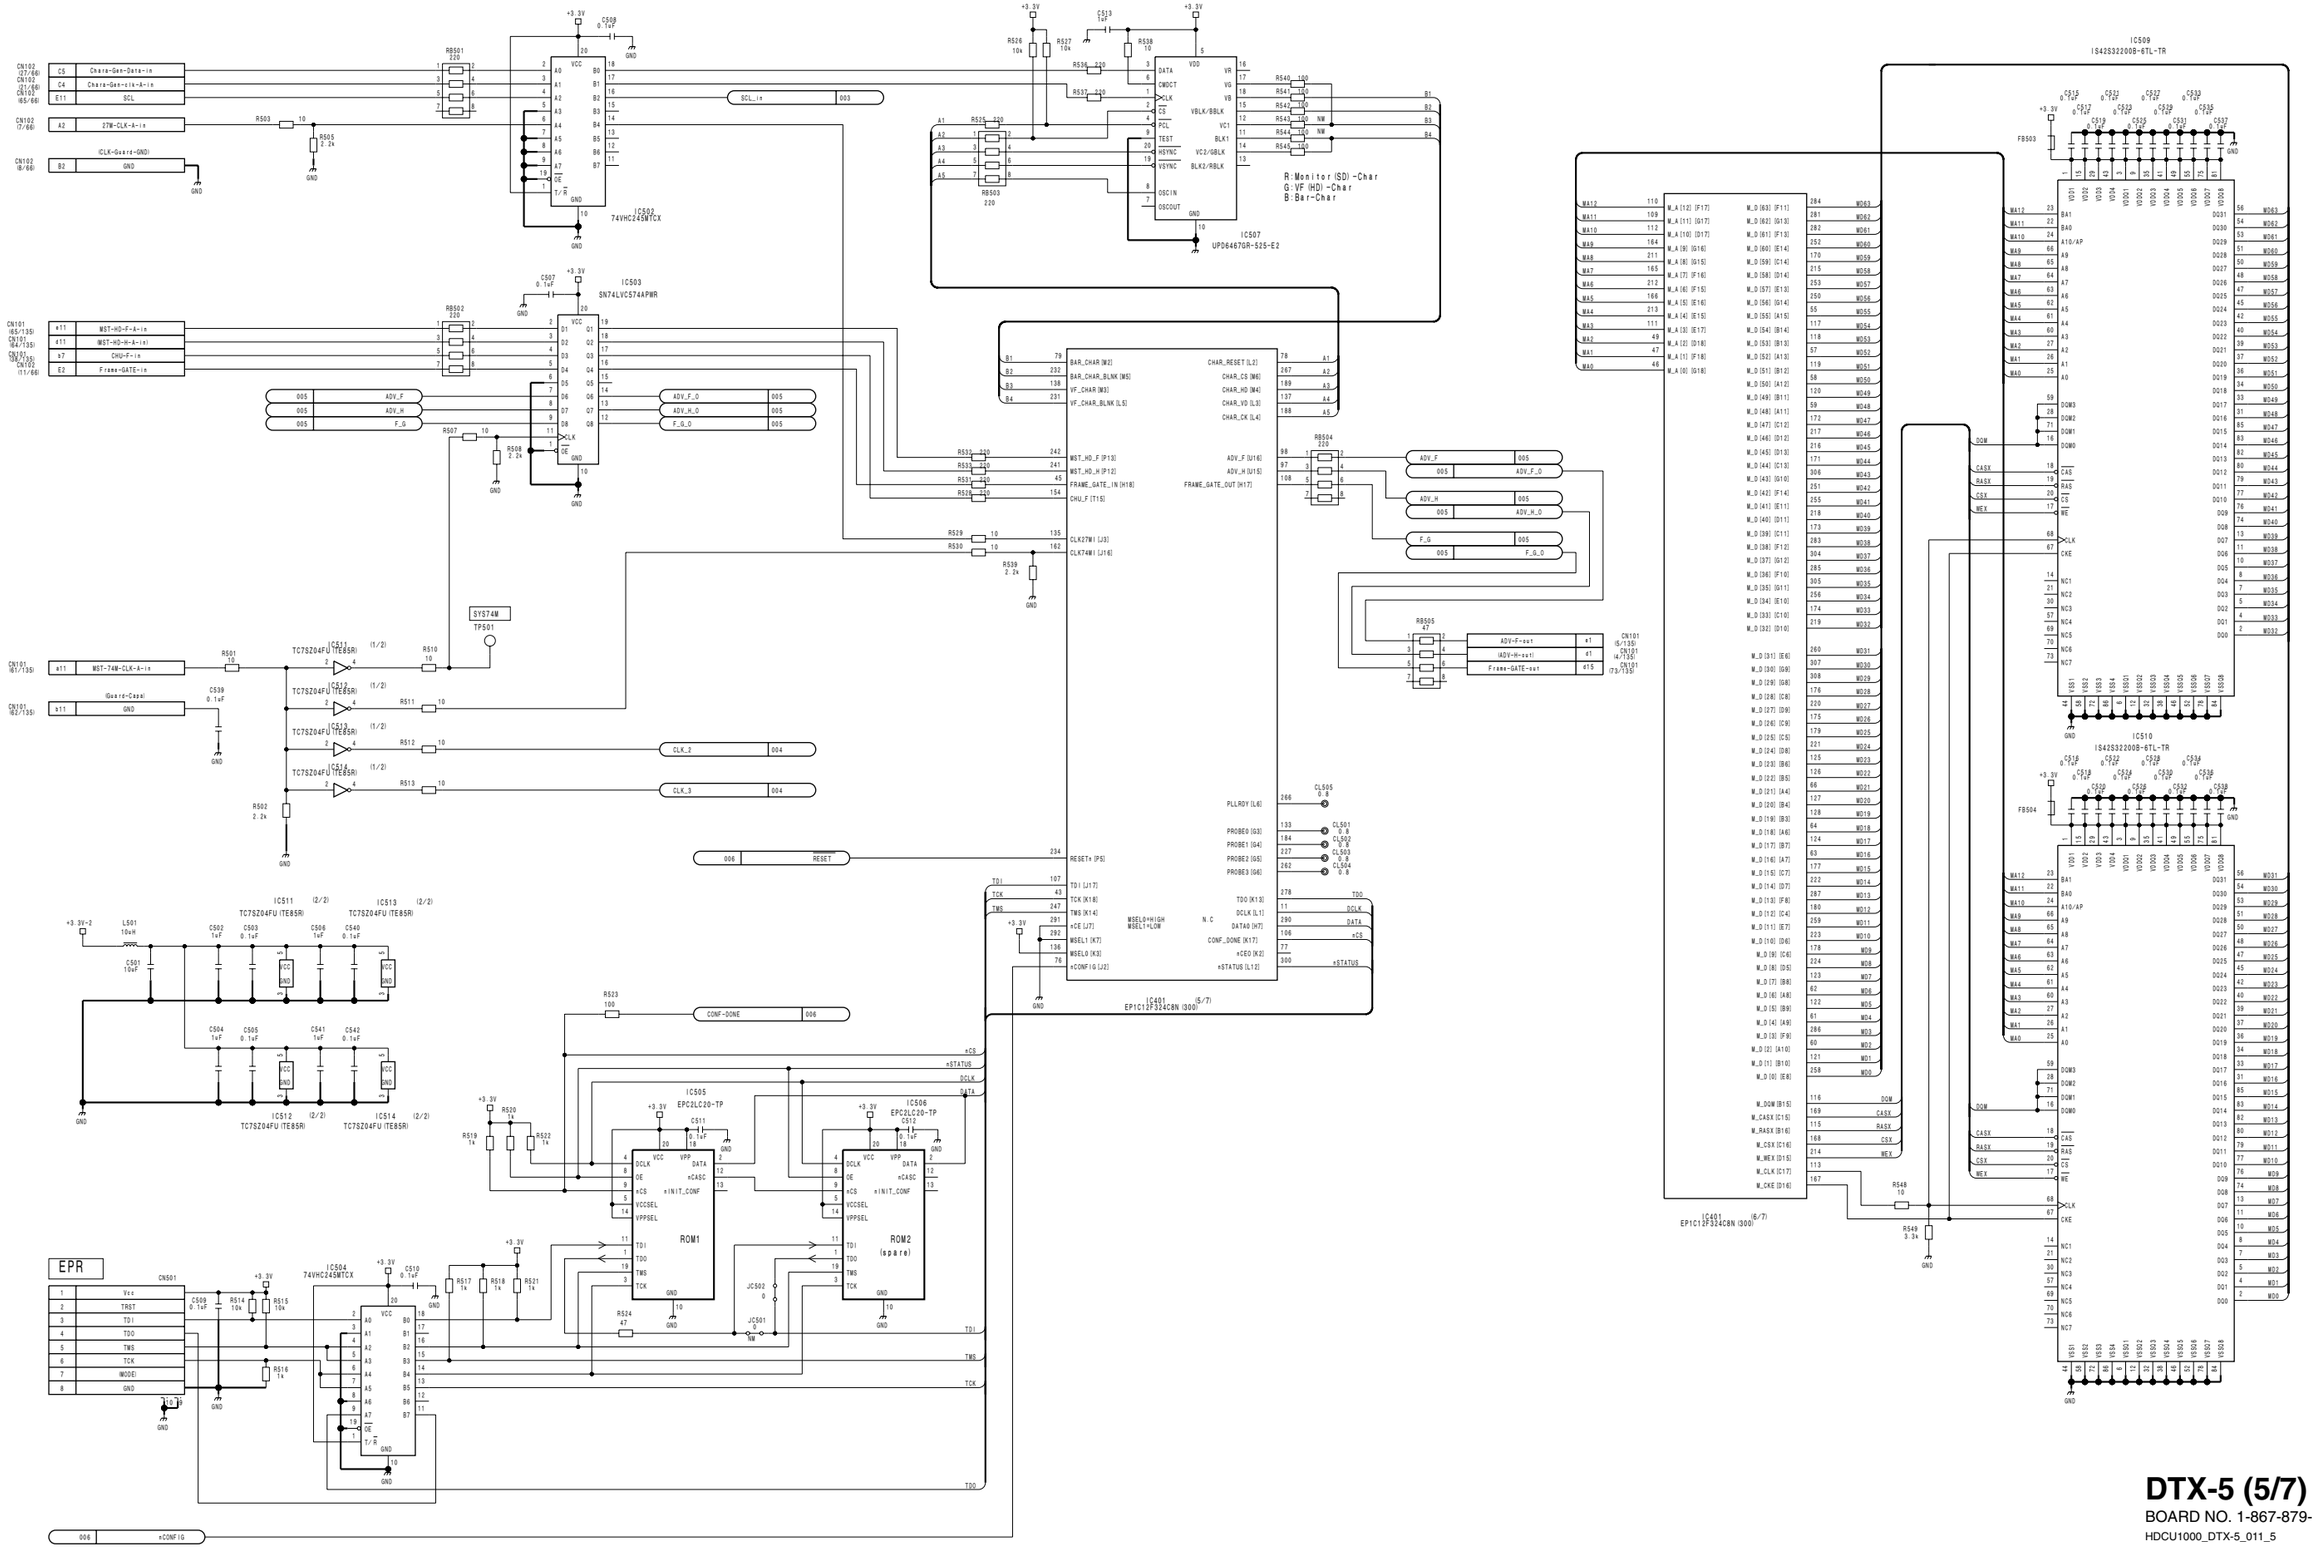

DTX-5 (5/7)

BOARD NO. 1-867-879-11


HDCU1000_DTX-5_011_5

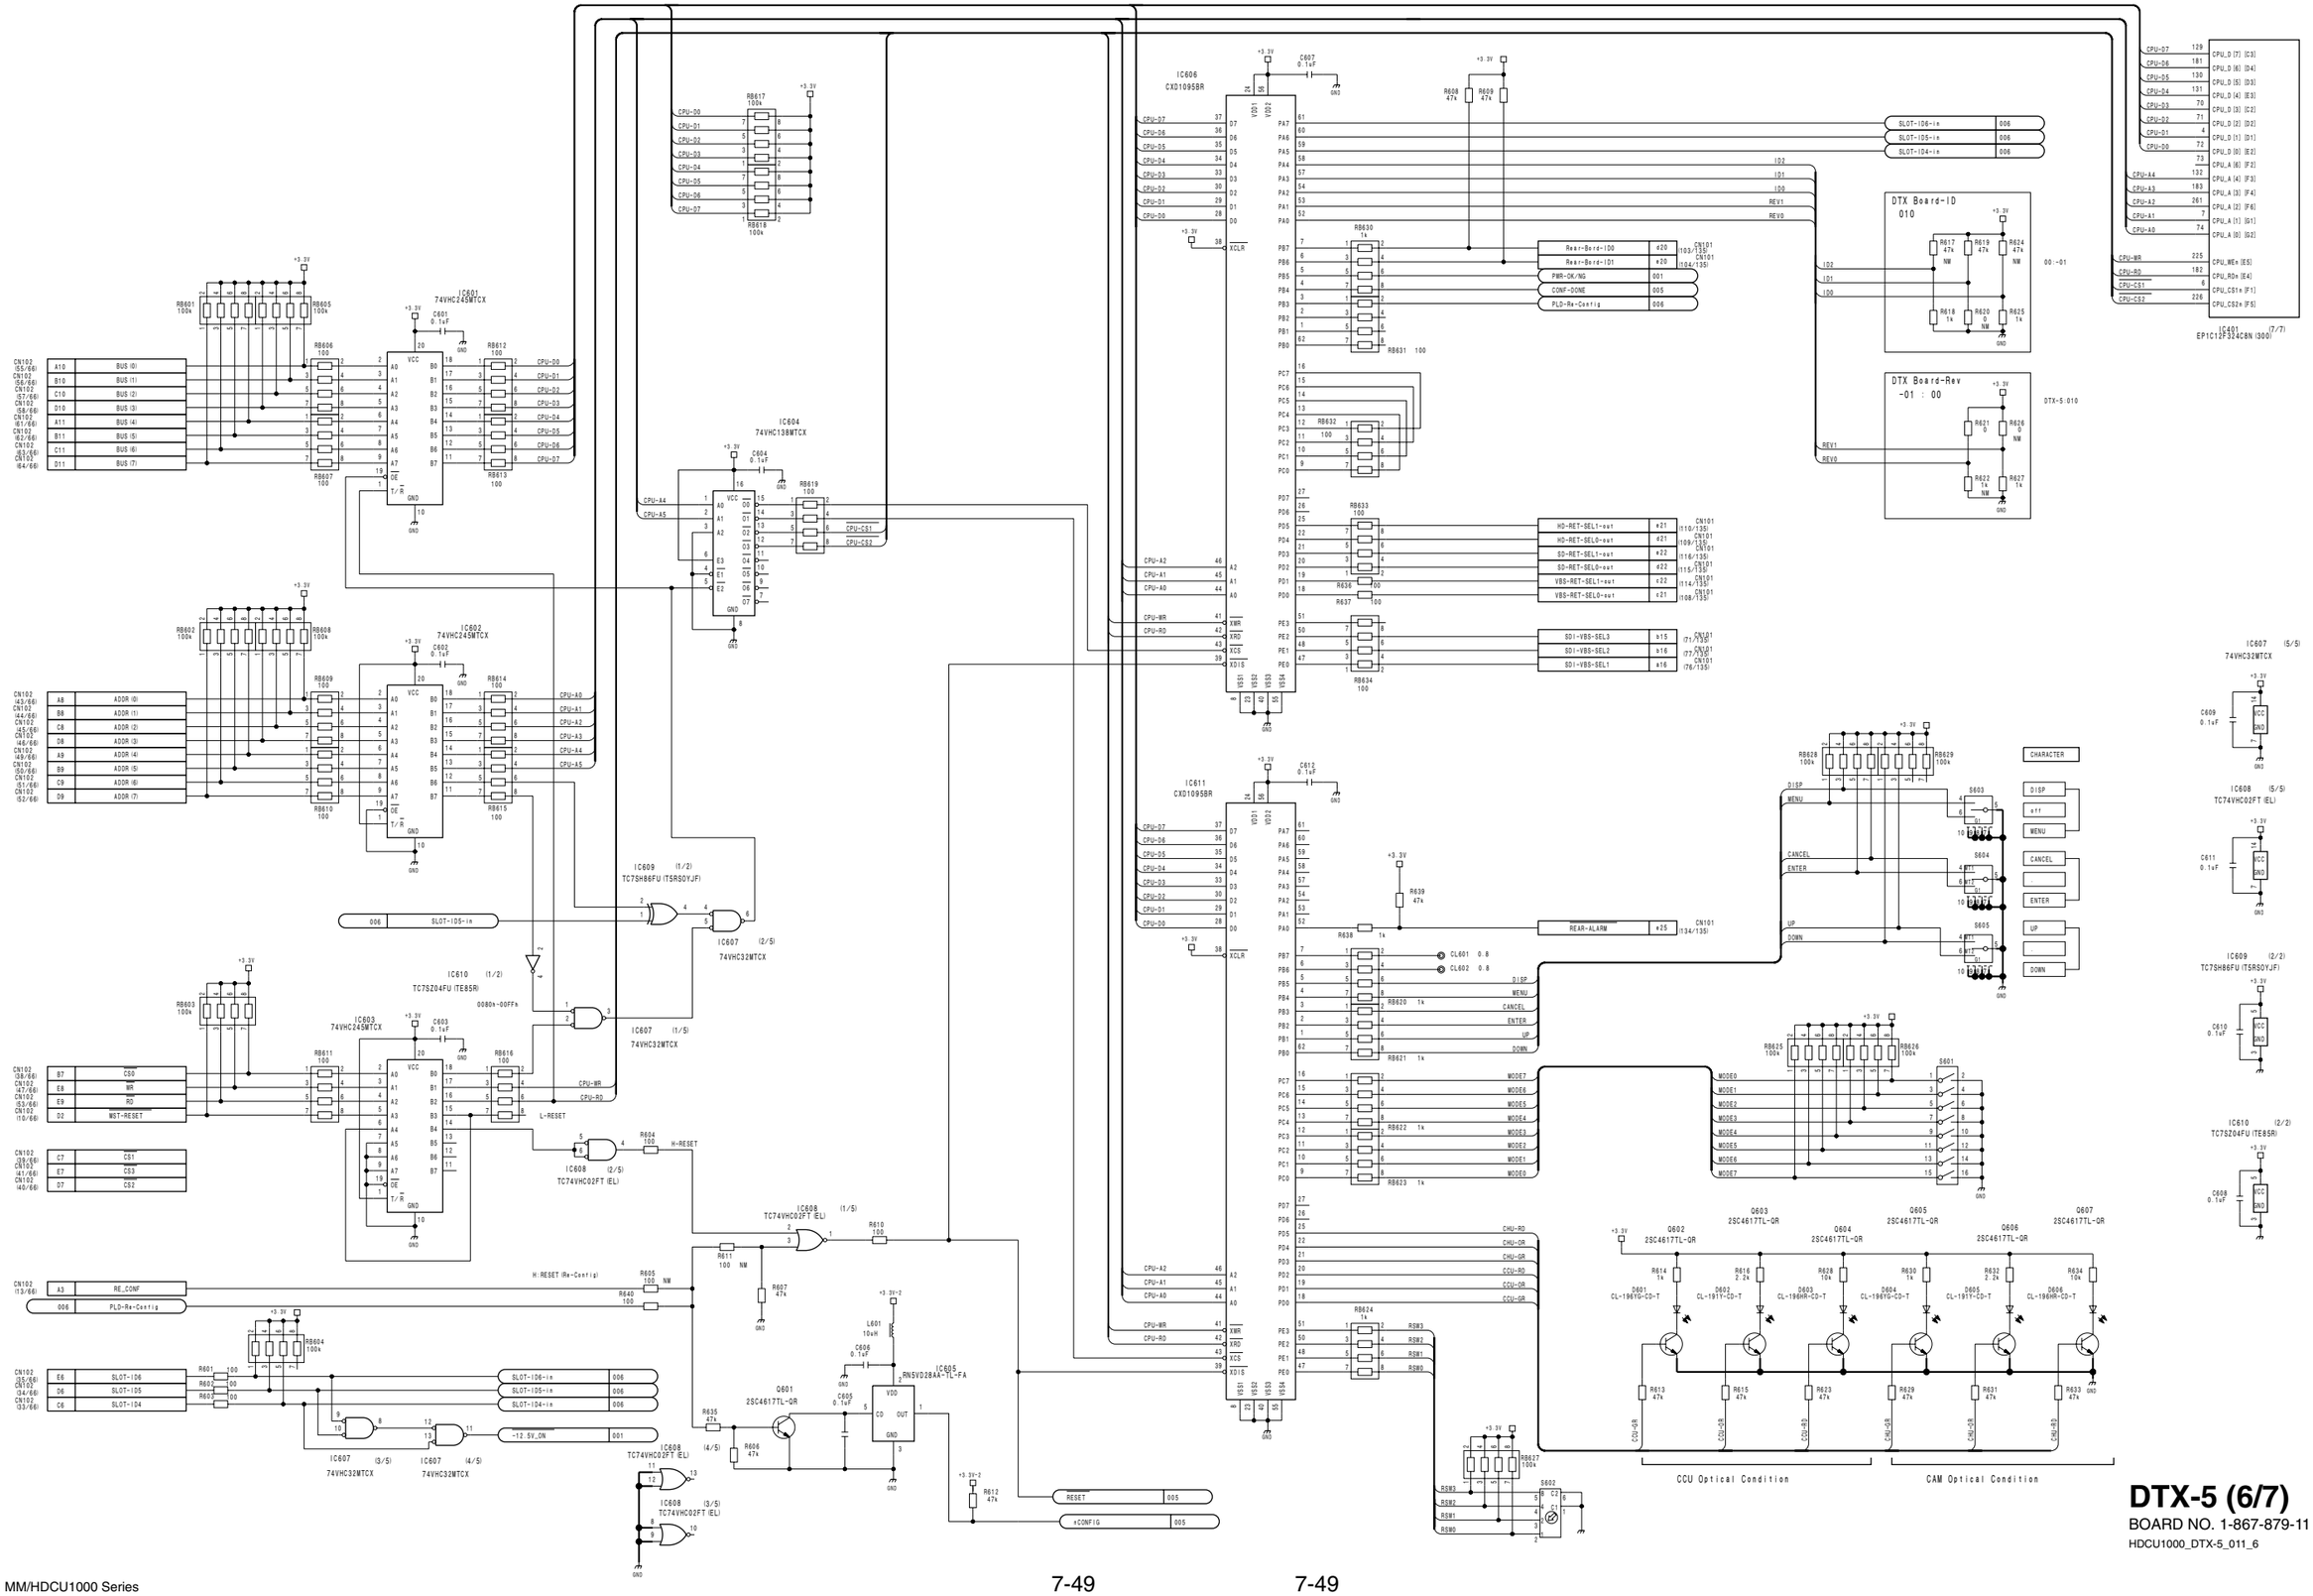

DTX-5 (6/7)
BOARD NO. 1-867-879-11
HDCU1000_DTX-5_011_6

DTX-5 (7/7)

PROMPTER1 INPUT

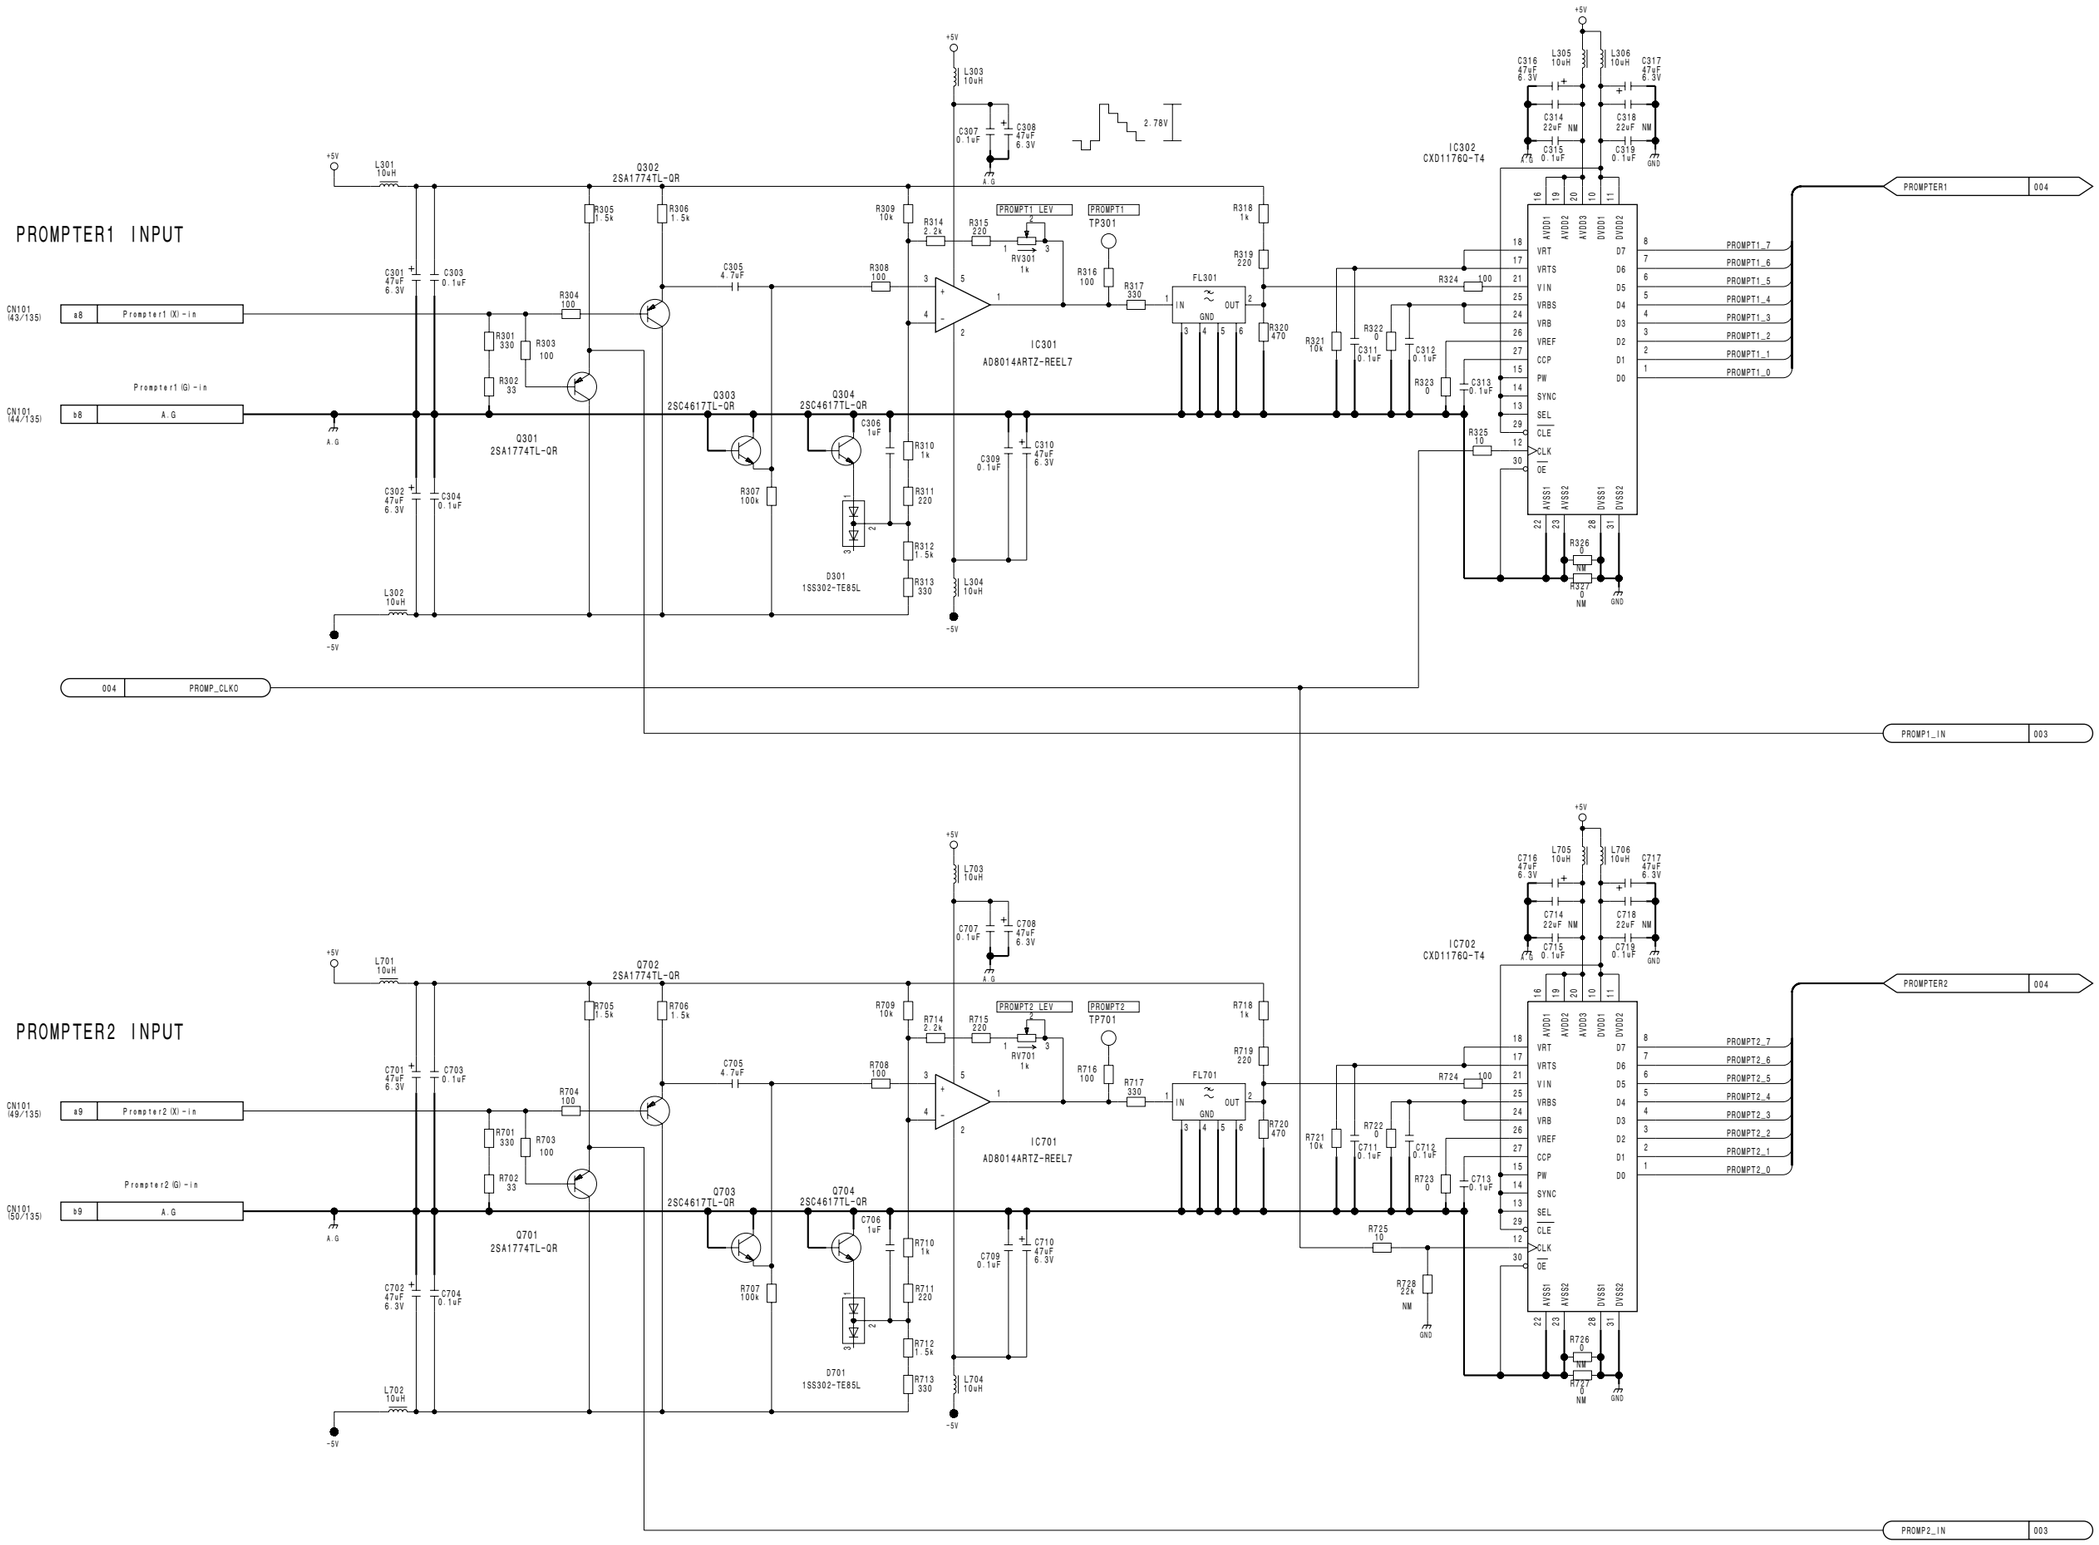


PROMPTER2 INPUT

DTX-5 (7/7)
BOARD NO. 1-867-879-11
HDCU1000_DTX-5_011_7



DU-390
BOARD NO. 1-870-346-11
HDCU1000_DU-390_001_1


EN-159A (1/4)

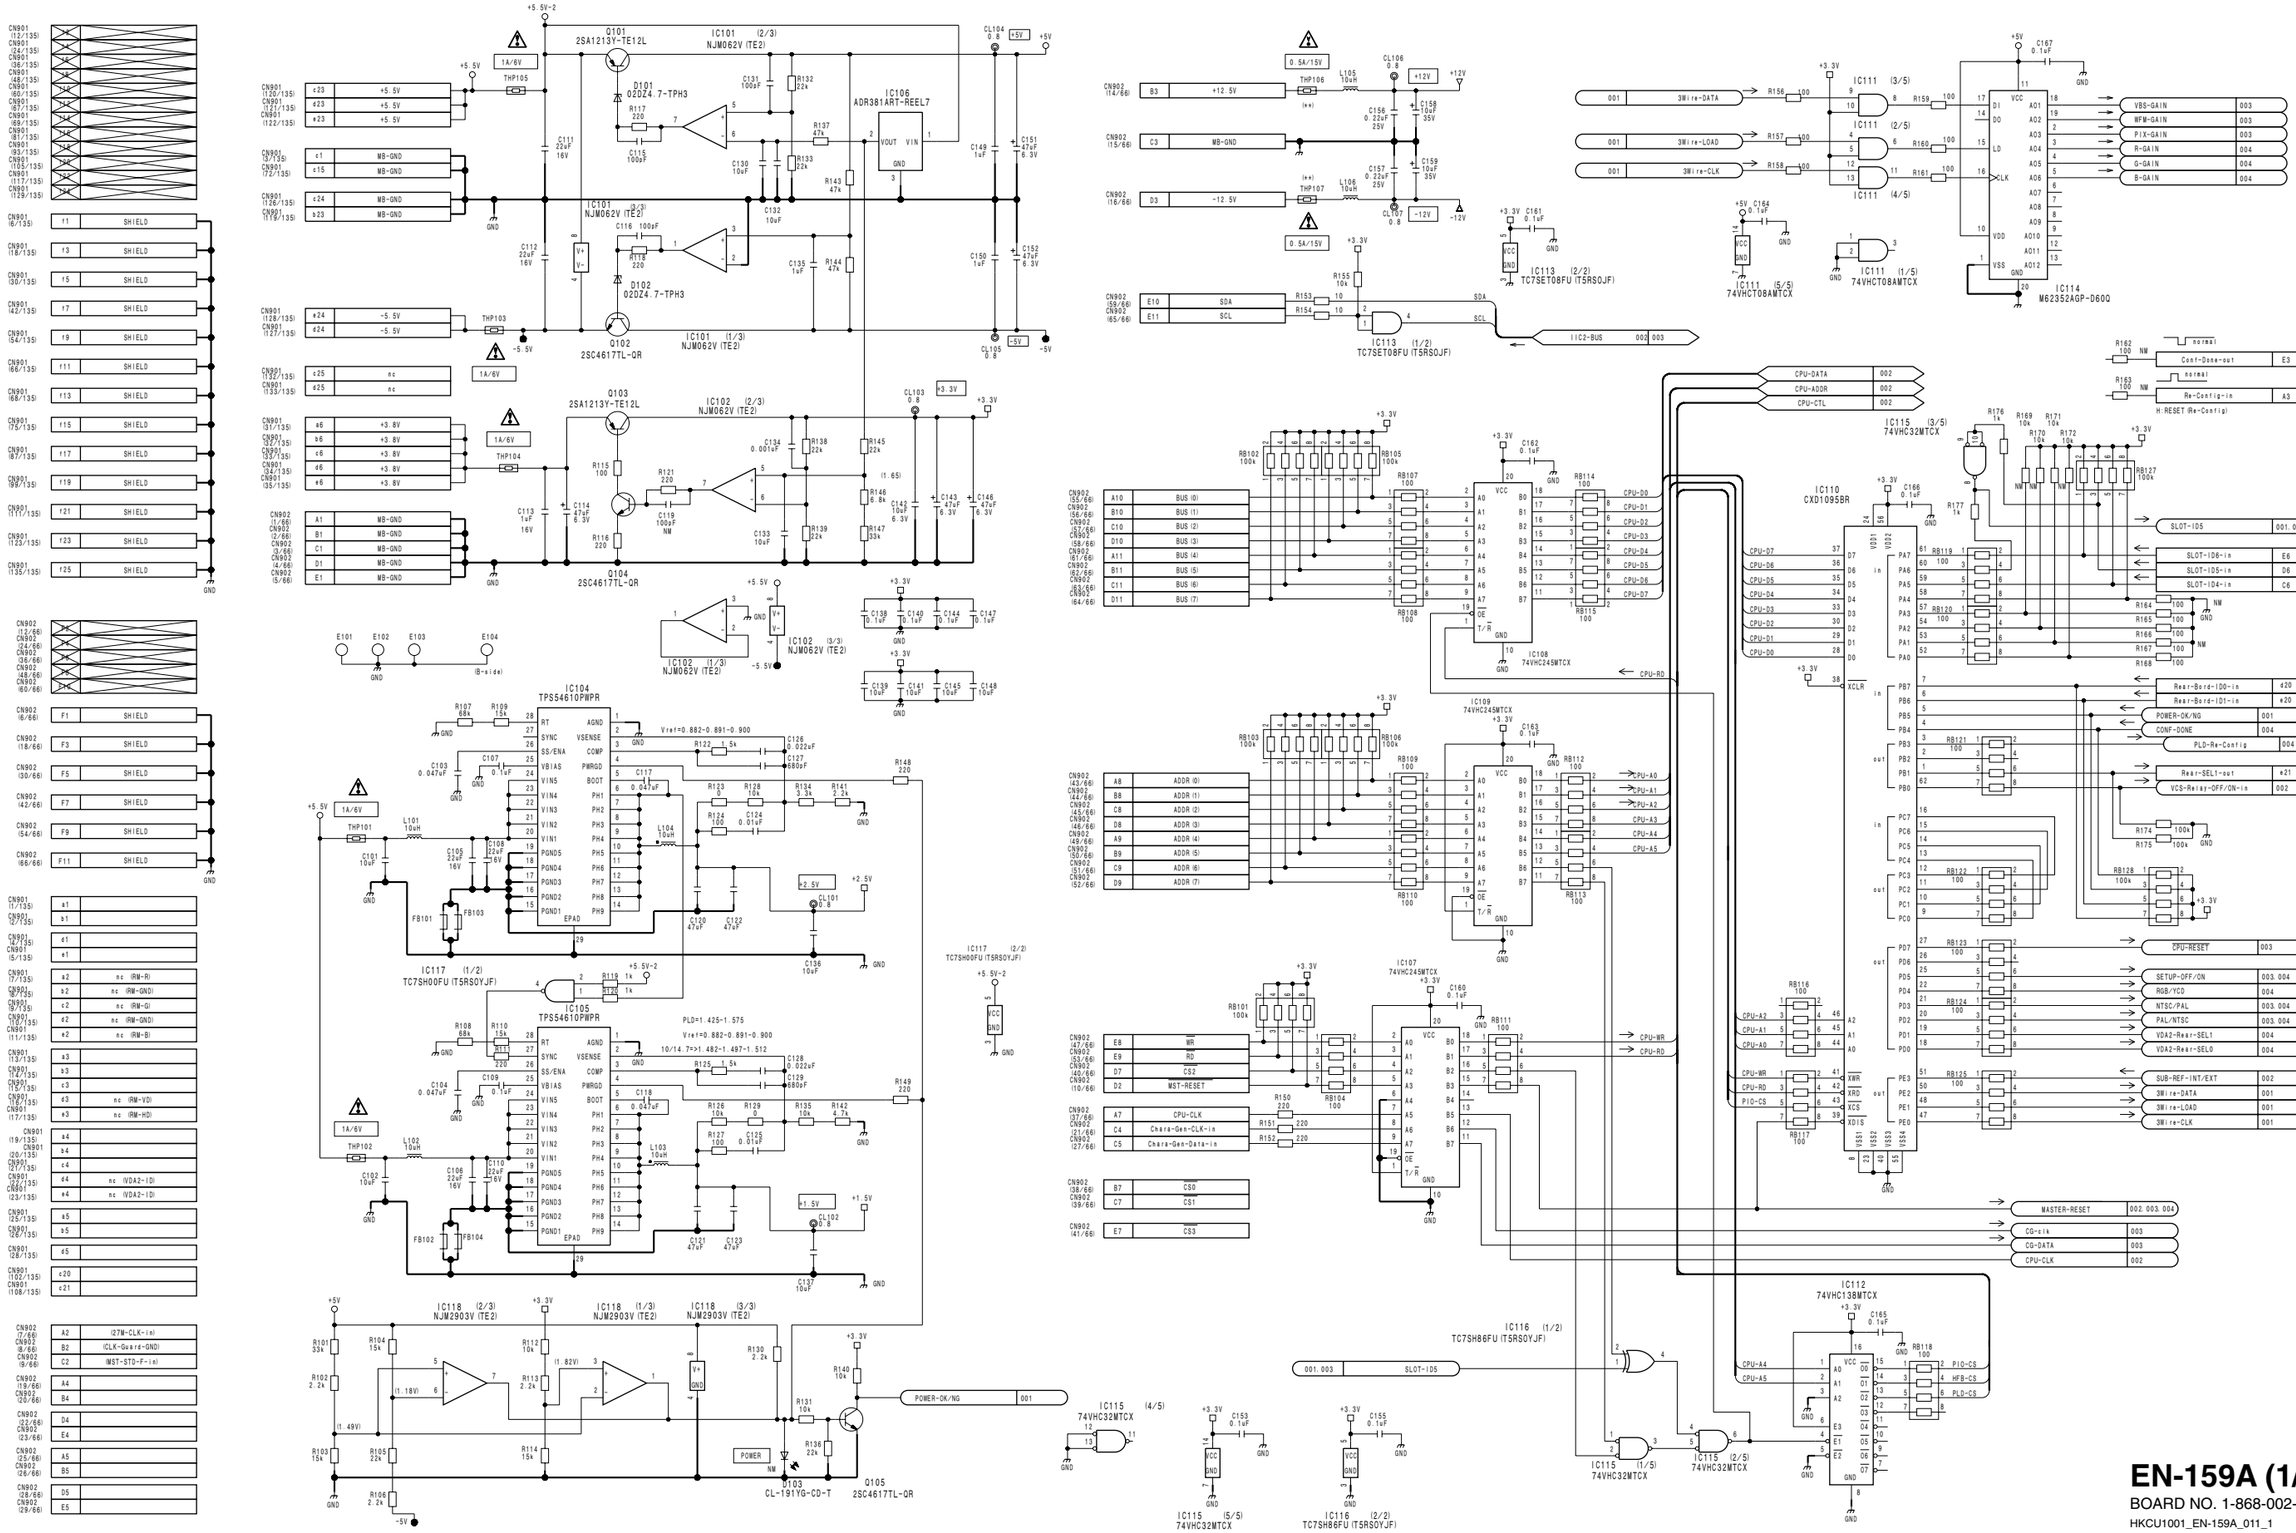

EN-159A (1/4)
BOARD NO. 1-868-002-11
HKCU1001_EN-159A_011_1


EN-159A (2/4)


7-54

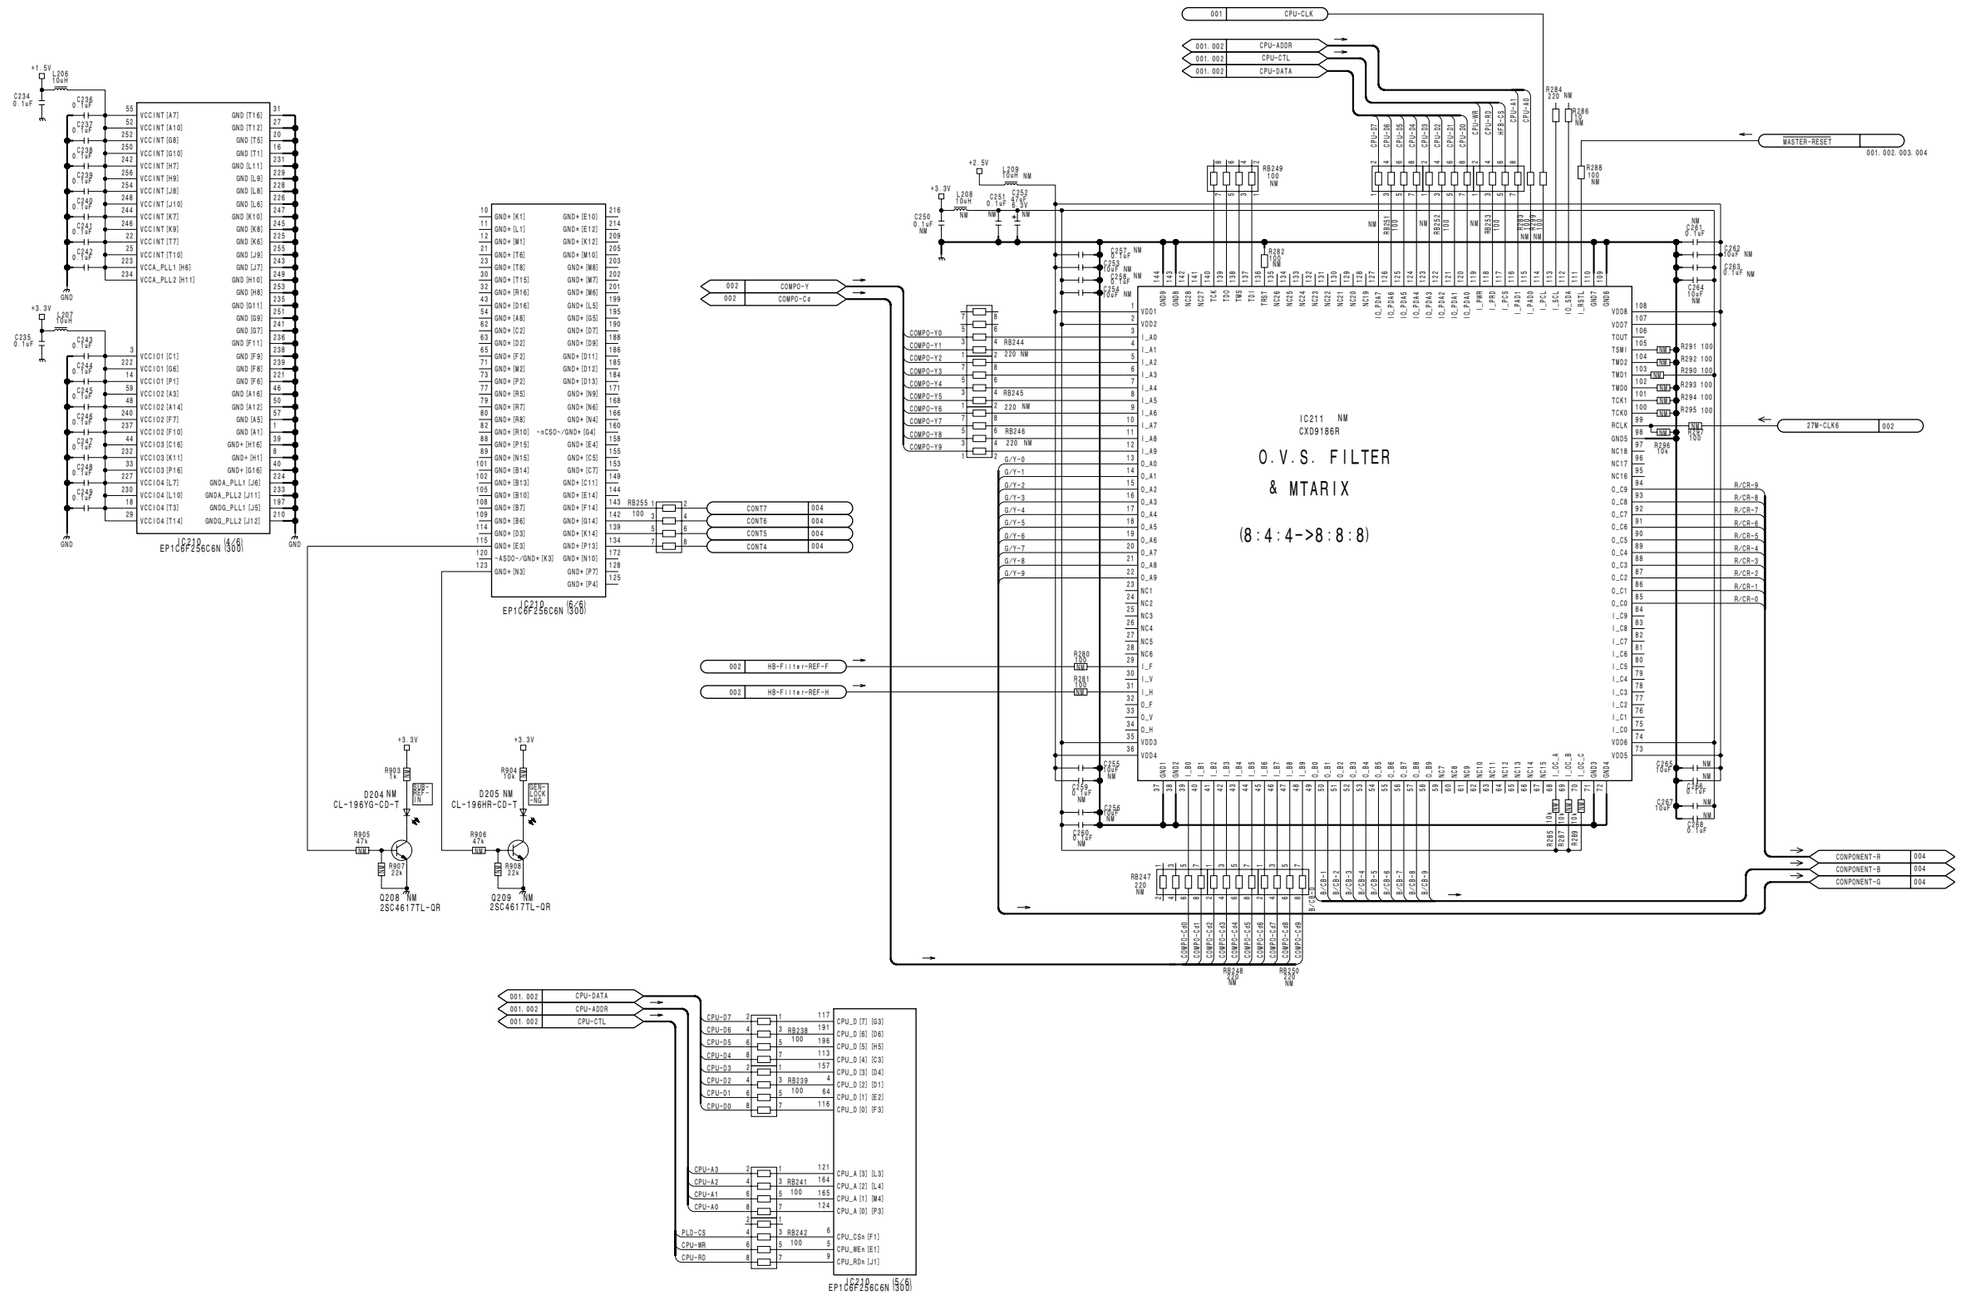

EN-159A (2/4)
BOARD NO. 1-868-002-11
HKCU1001_EN-159A_011_2


EN-159A (3/4)

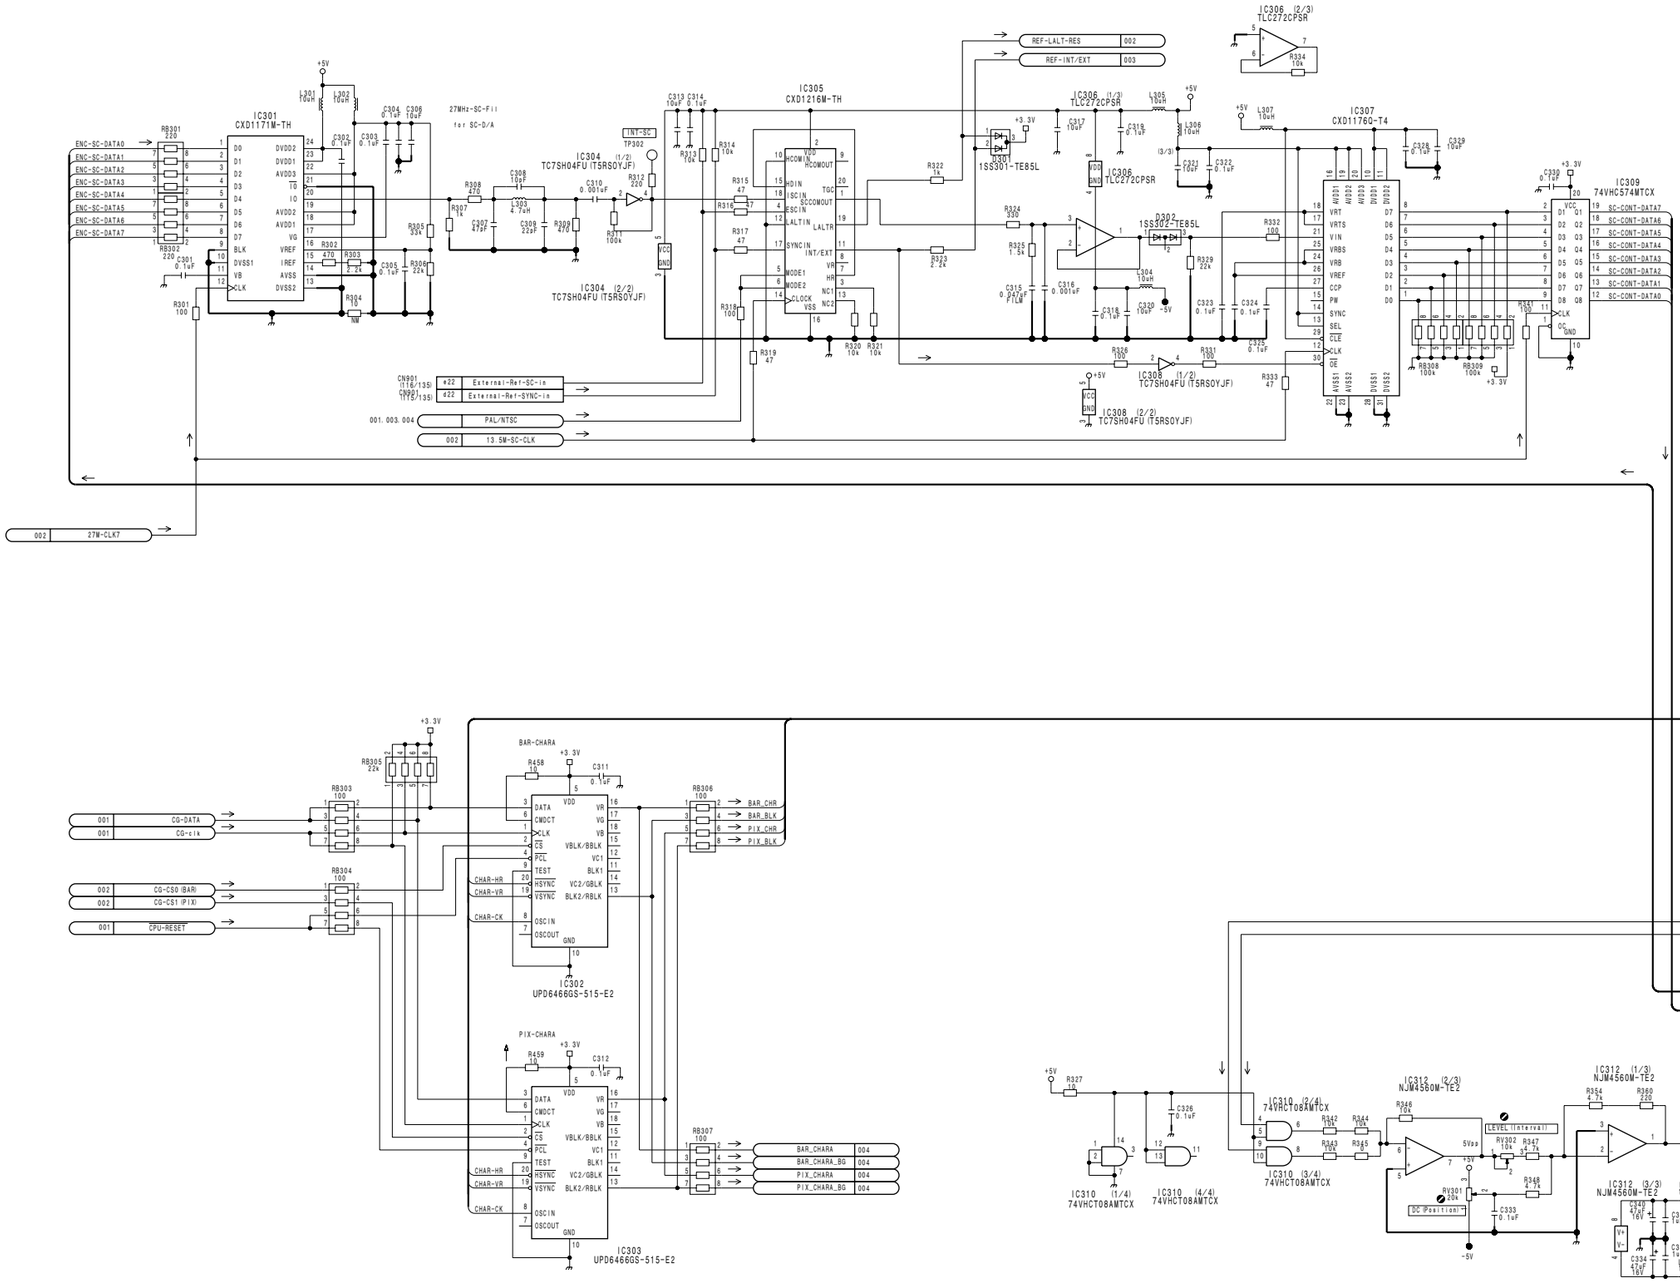

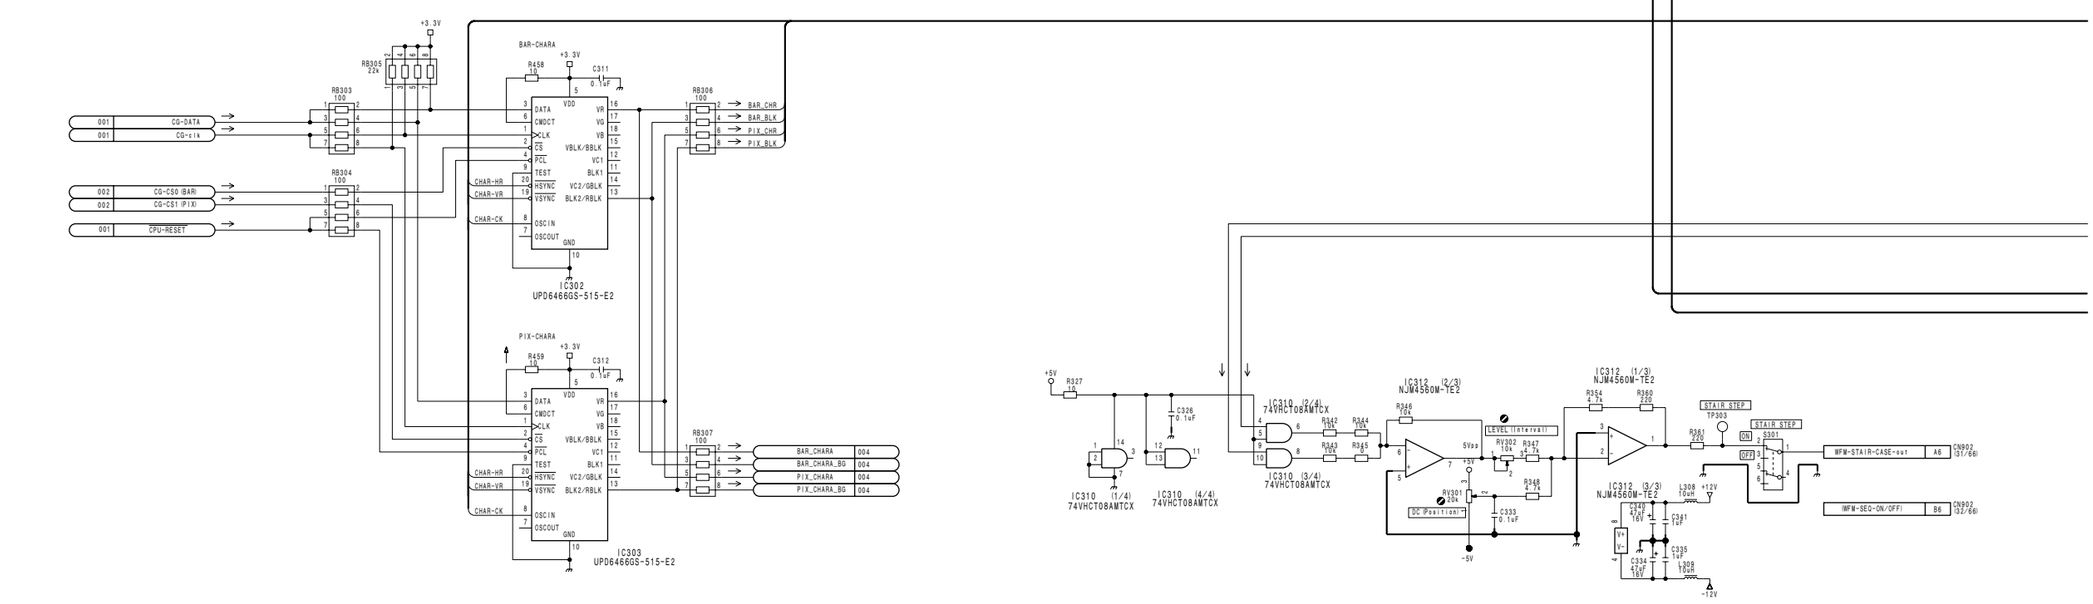

7-56

EN-159A (3/4)

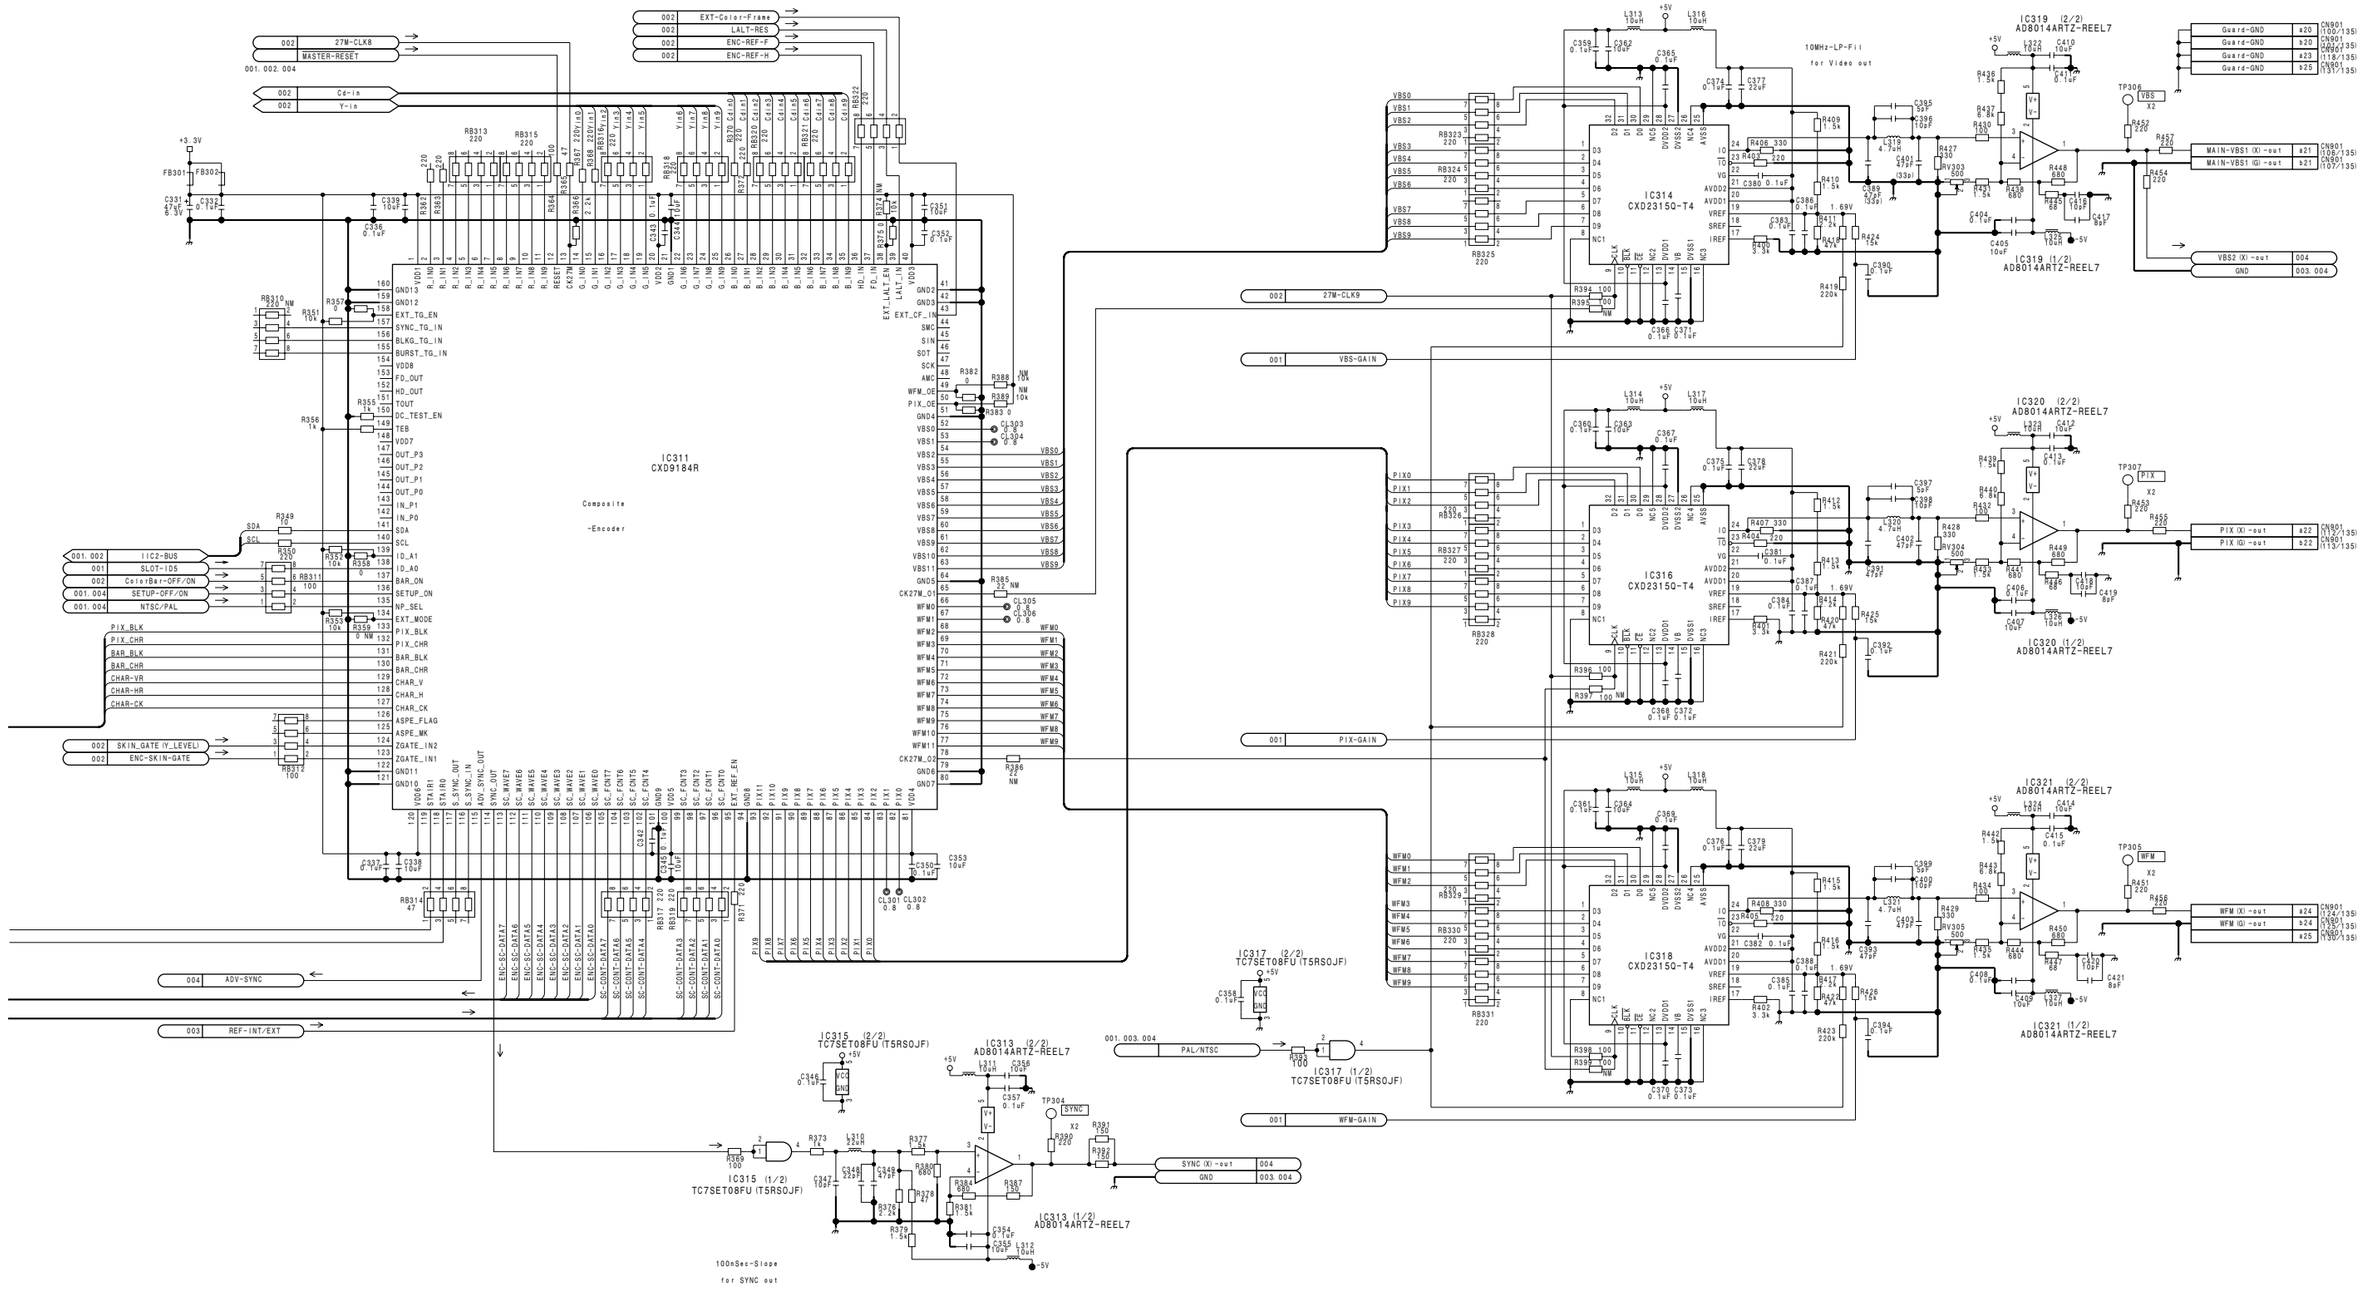


EN-159A (3/4)


BOARD NO. 1-868-002-11

HKCU1001_EN-159A_011_3

EN-159A (4/4)

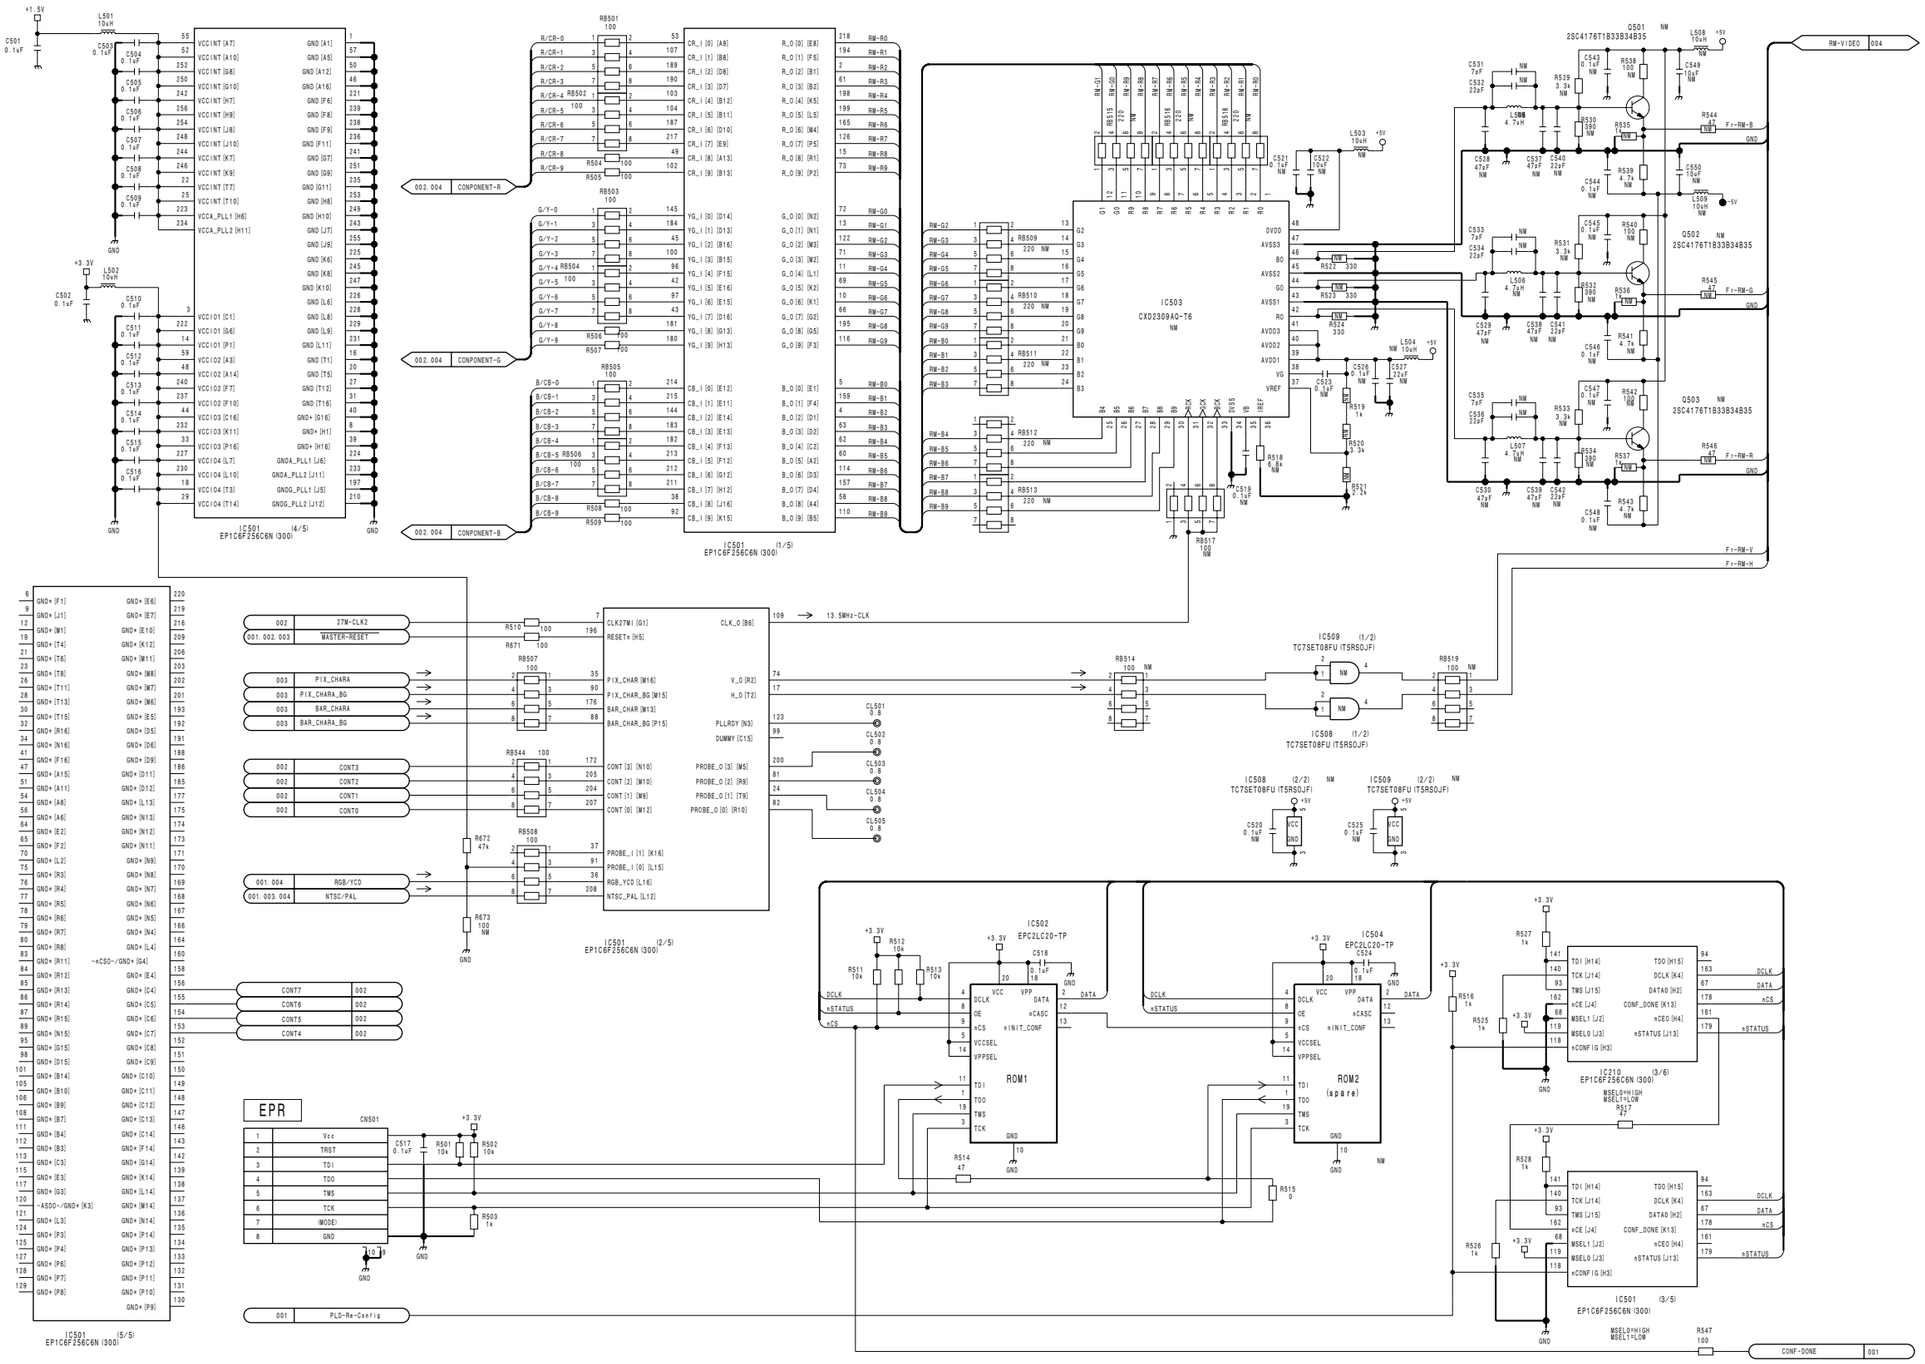

7-58

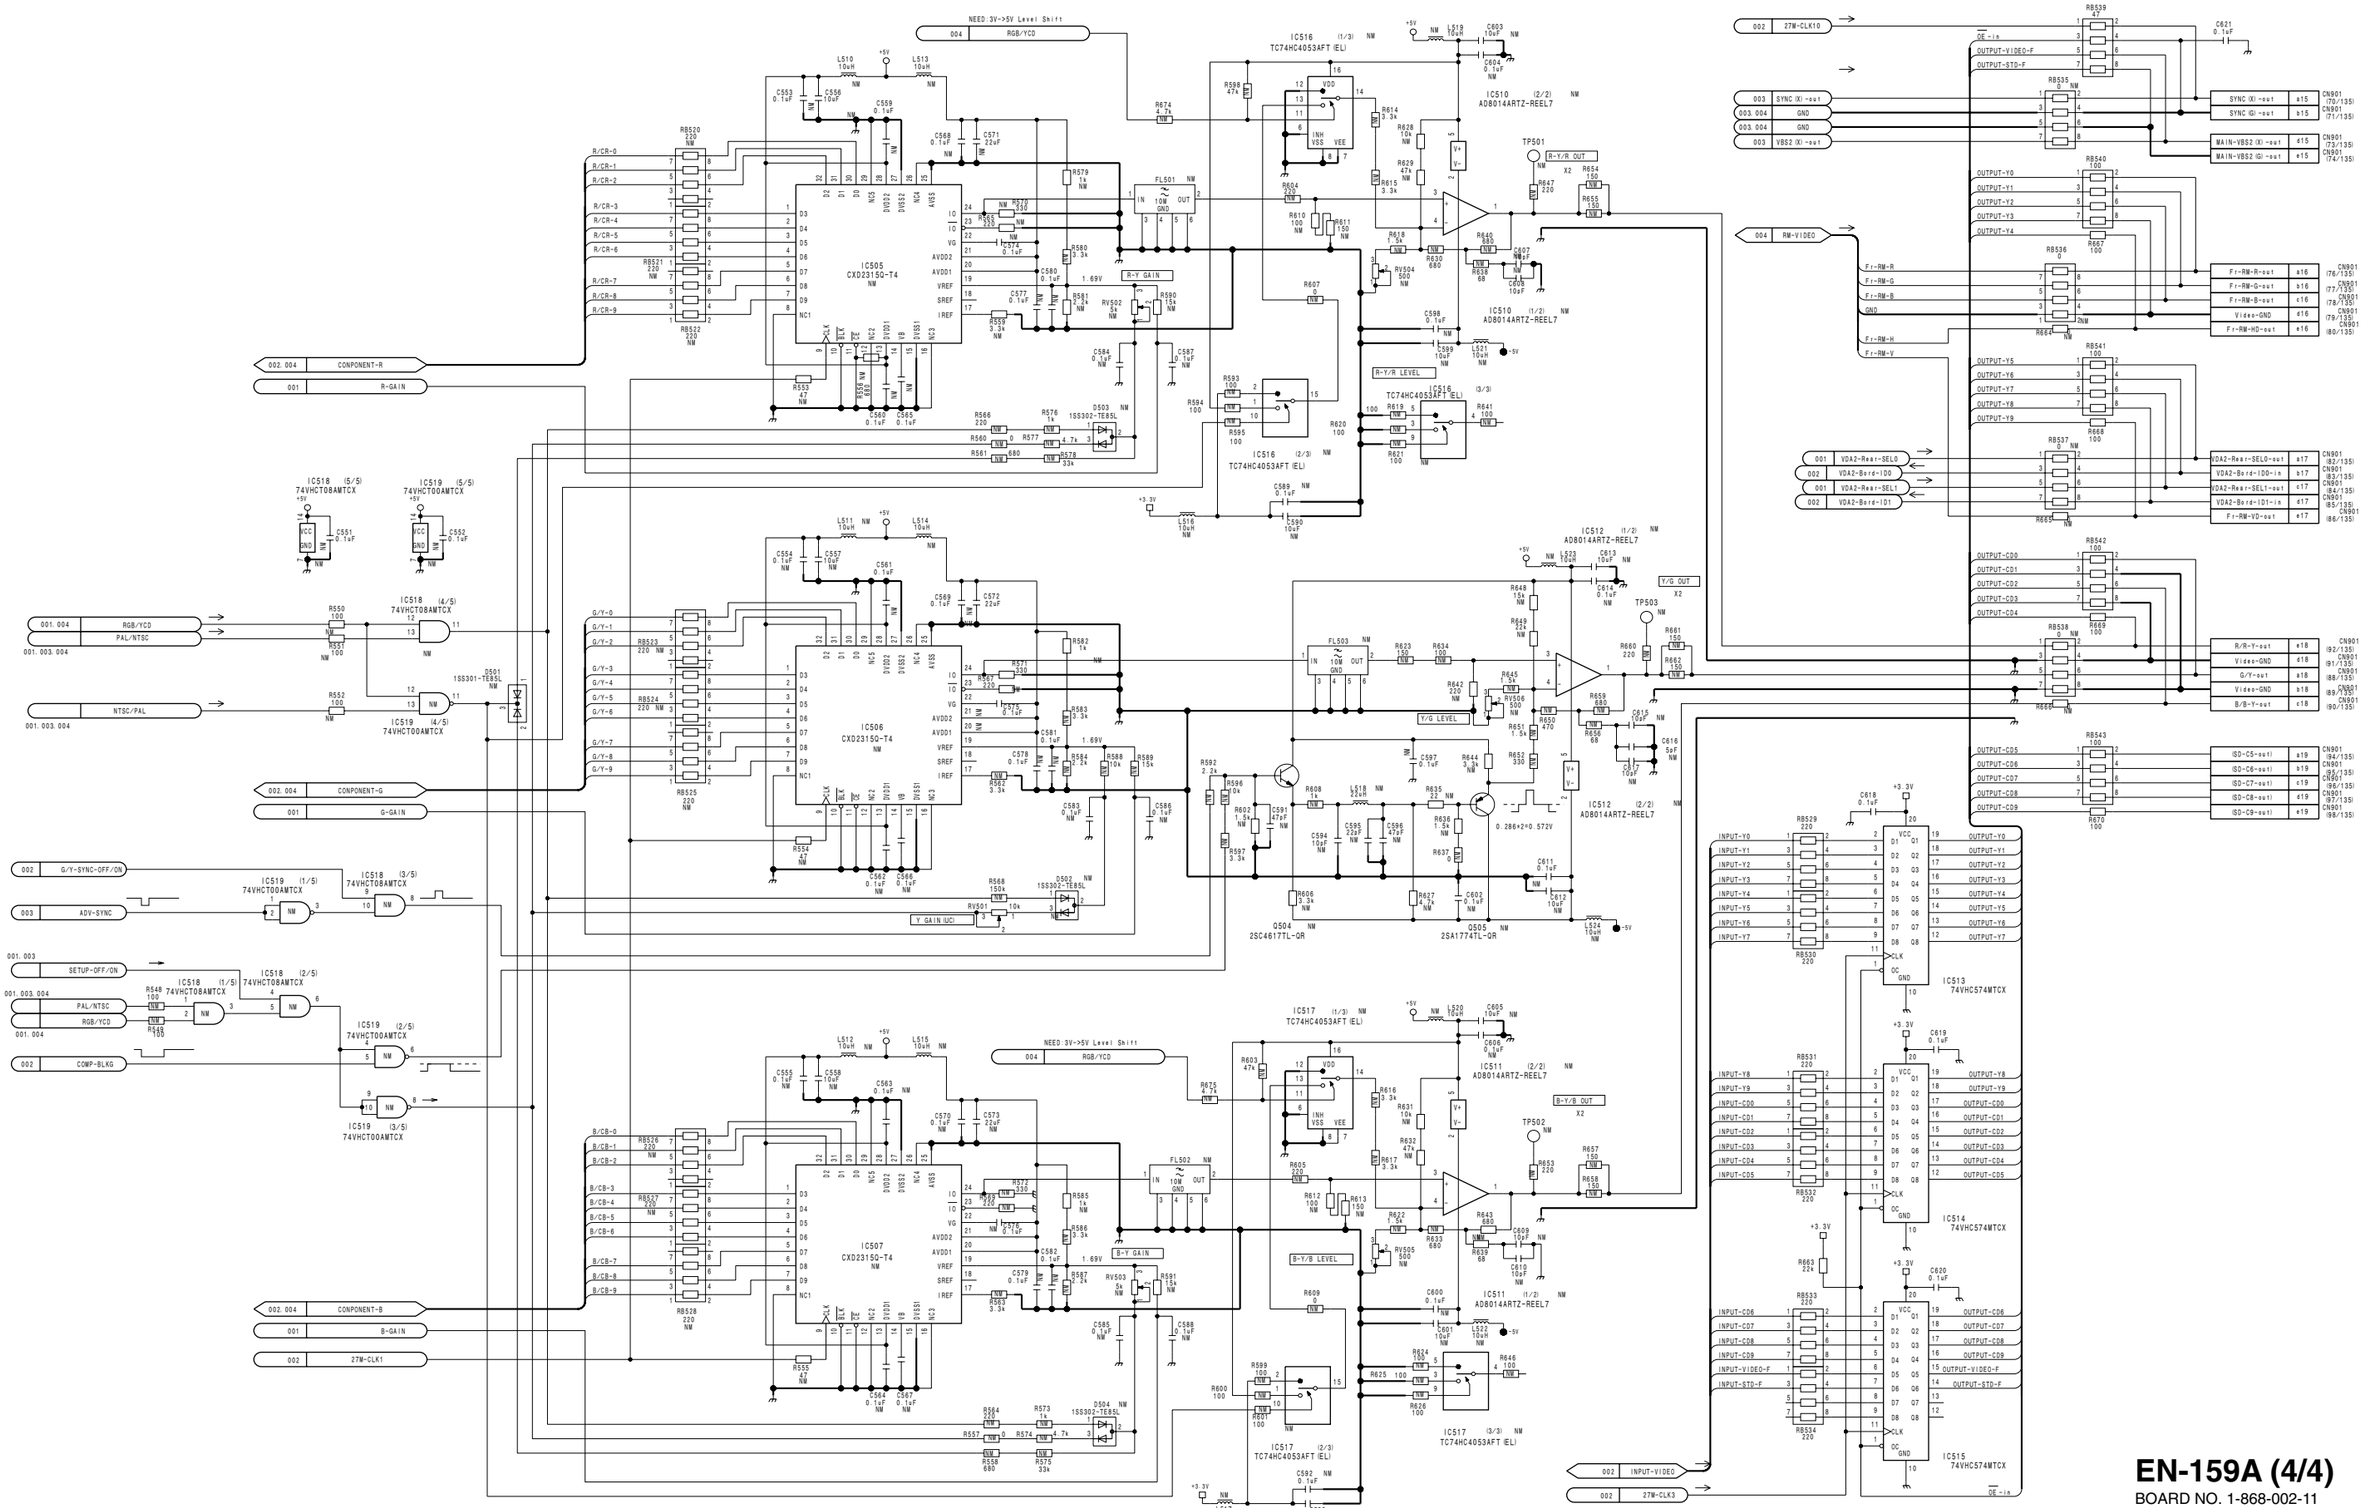


EN-159A (4/4)

BOARD NO. 1-868-002-11

HKCU1001_EN-159A_011_4

EN-159B (1/4)

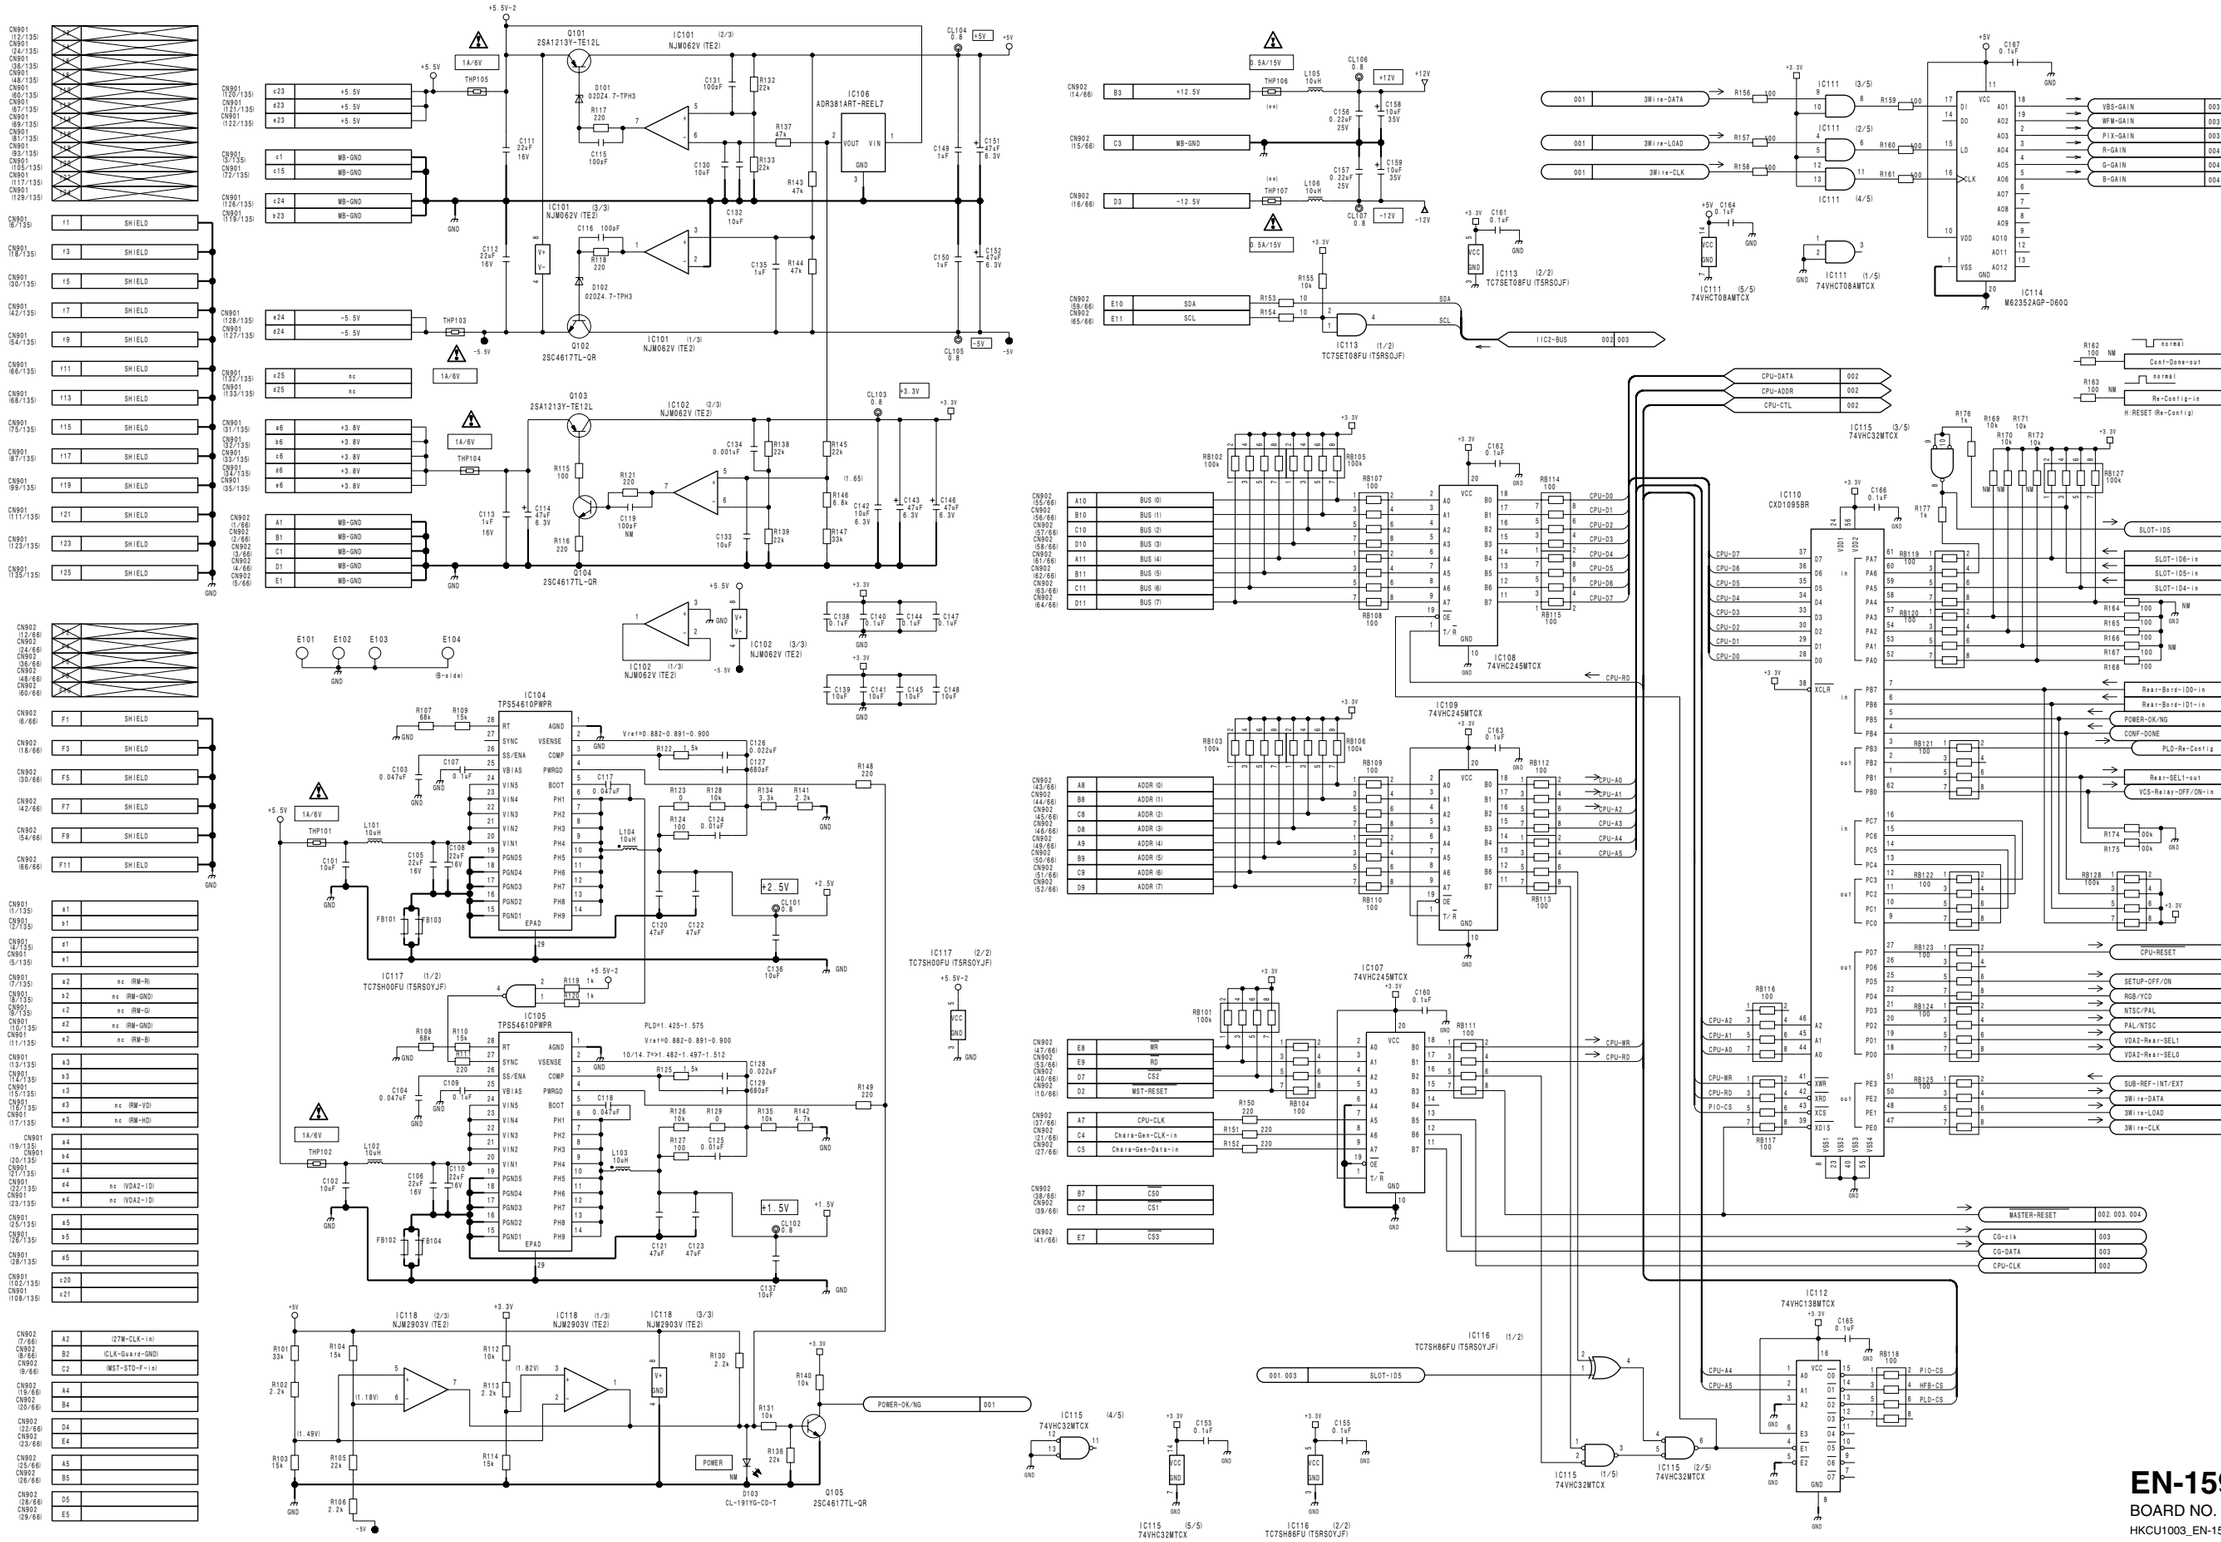


EN-159B (1/4)

BOARD NO. 1-868-002-11


HKCU1003_EN-159B_011_1

EN-159B (2/4)

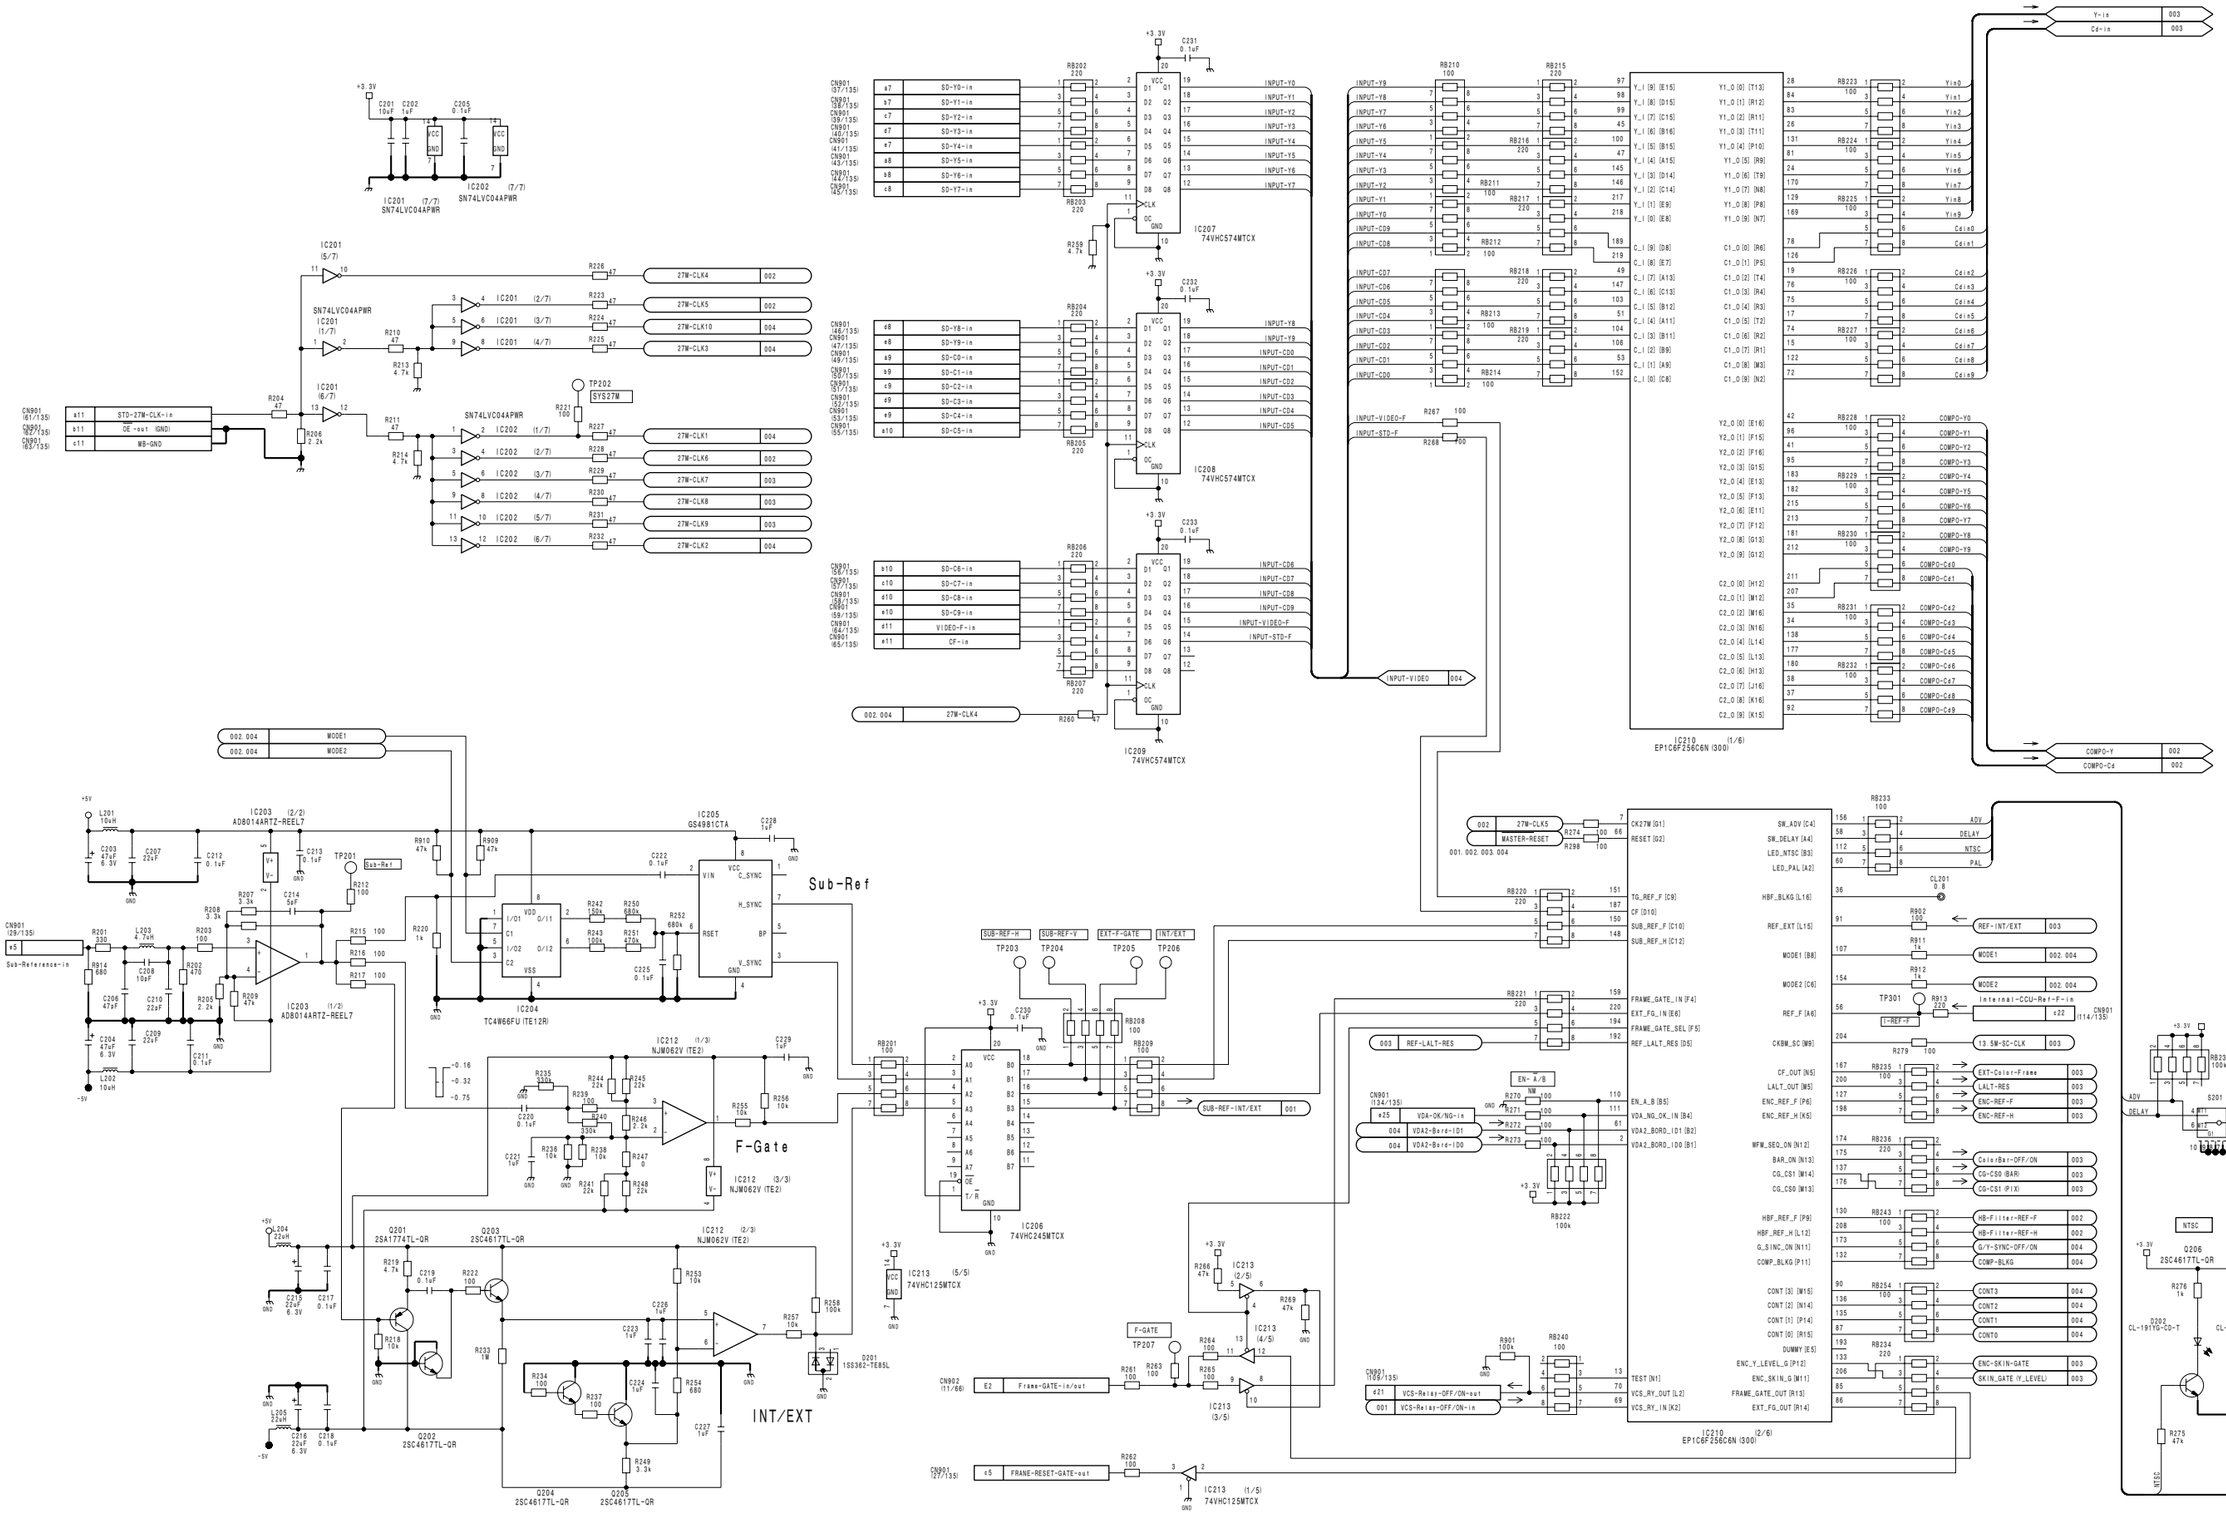


7-62

EN-159B (2/4)

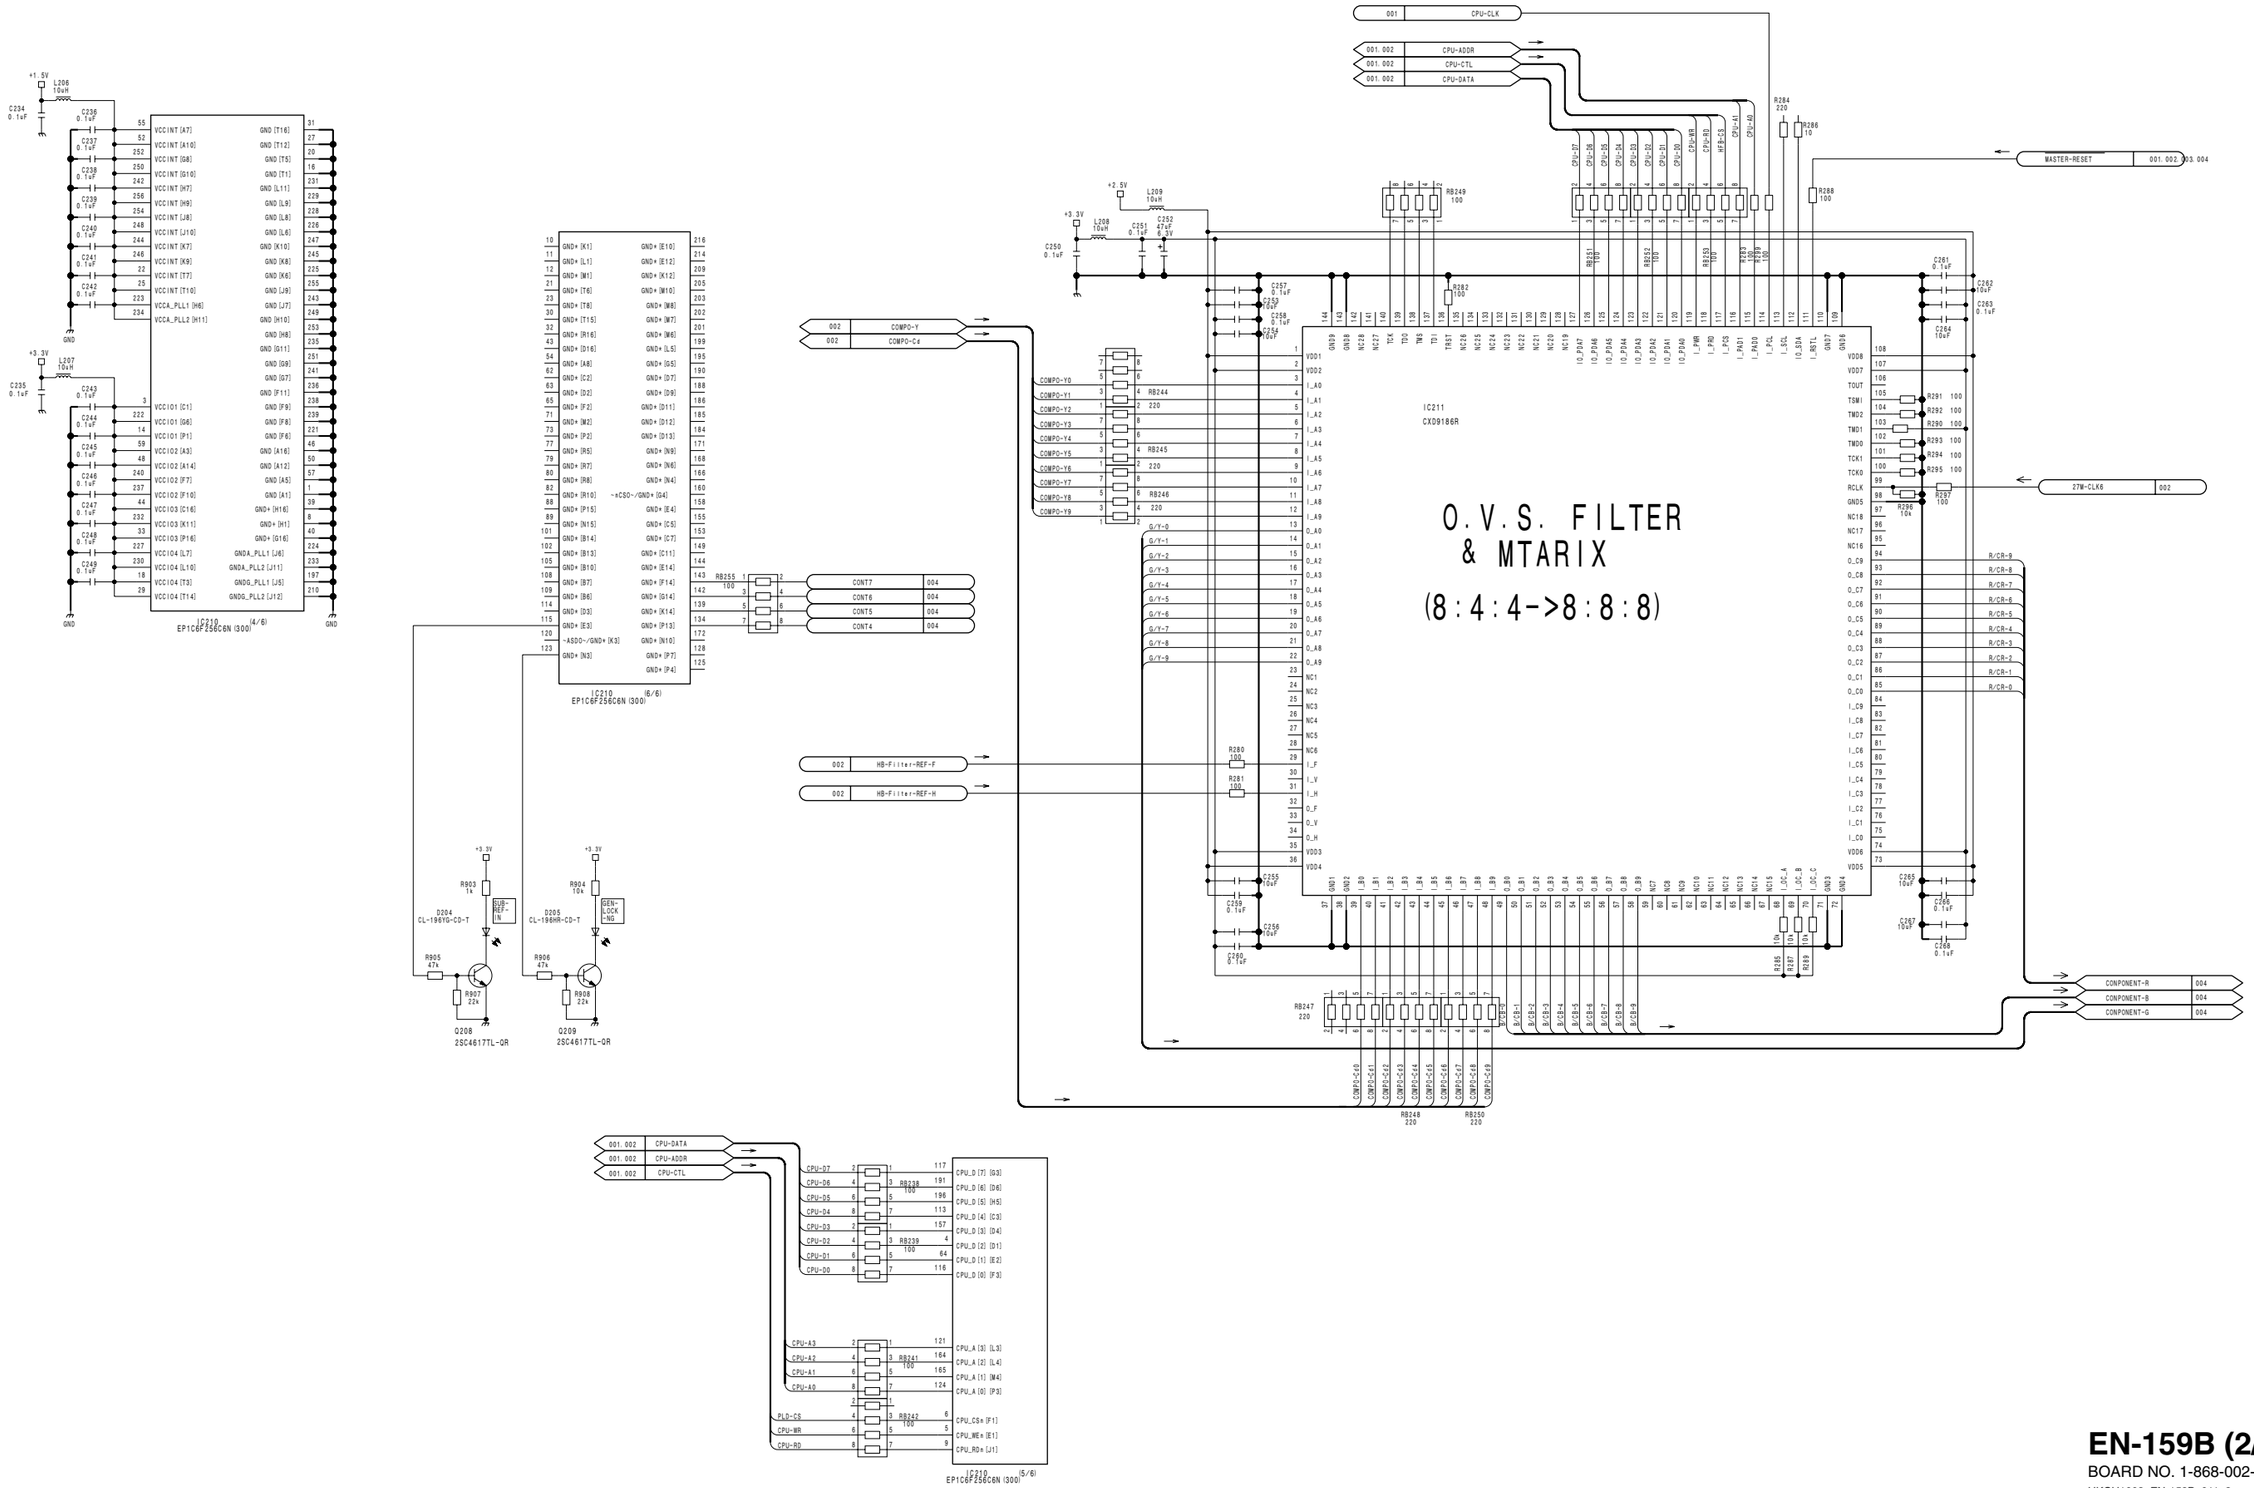

EN-159B (2/4)
BOARD NO. 1-868-002-11
HKCU1003_EN-159B_011_2

EN-159B (3/4)

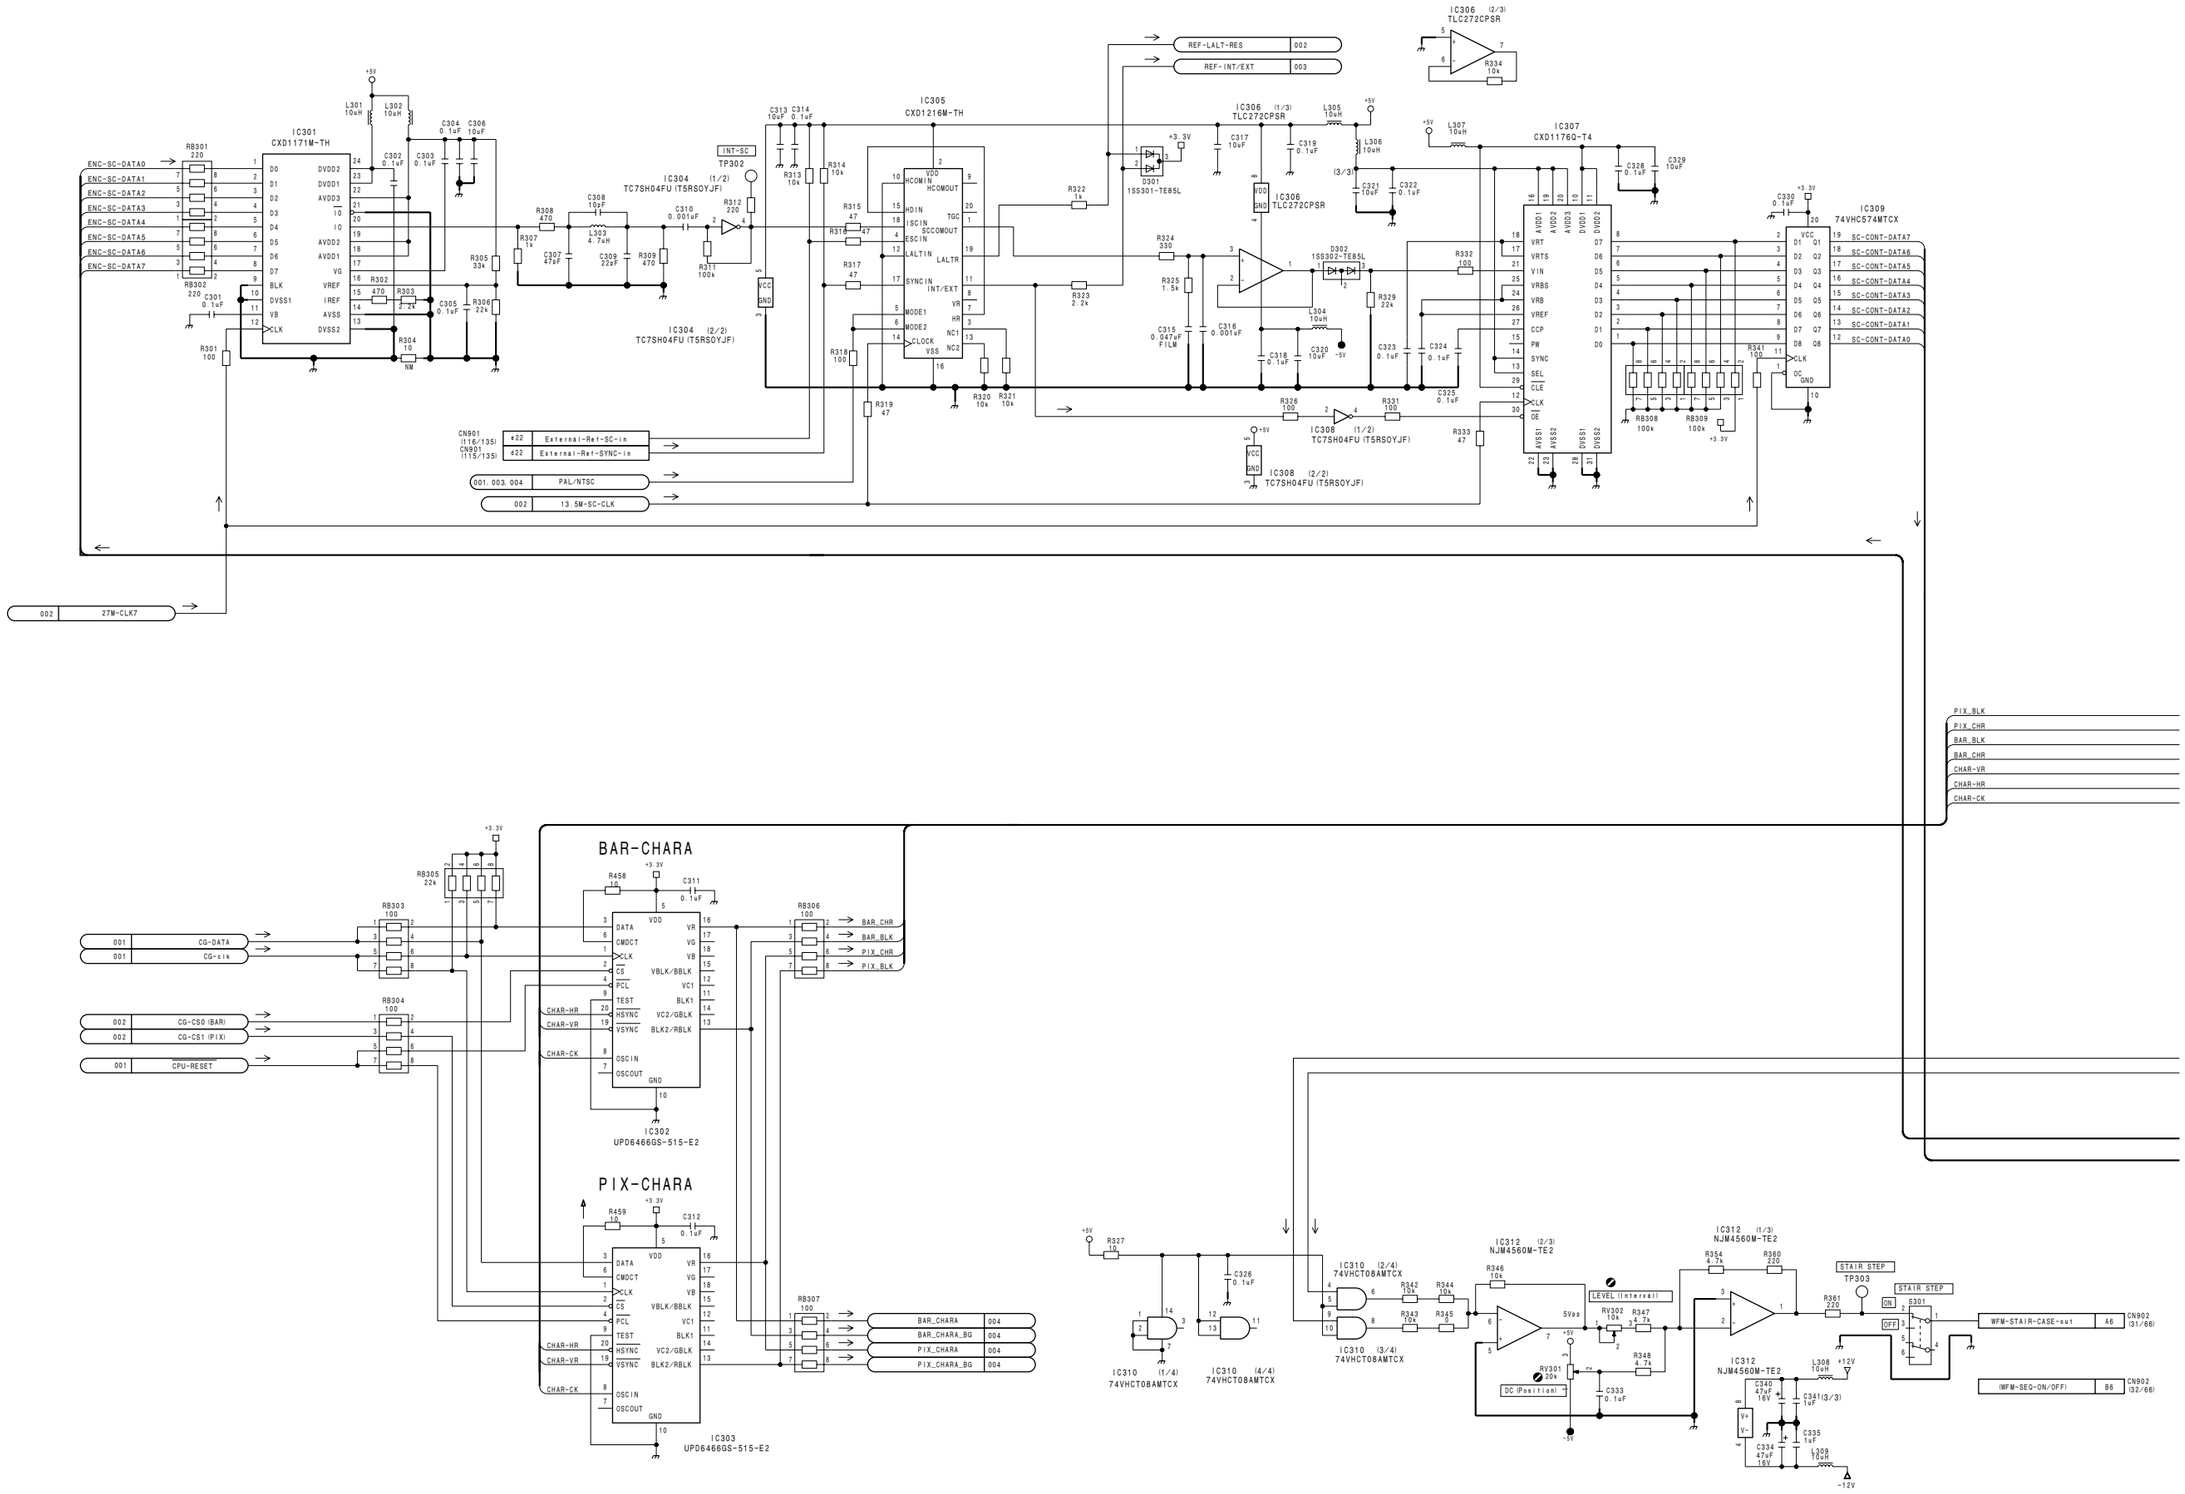


7-64

EN-159B (3/4)

Composite
-Encoder

100nSec-Slope
for SYNC out


7-65

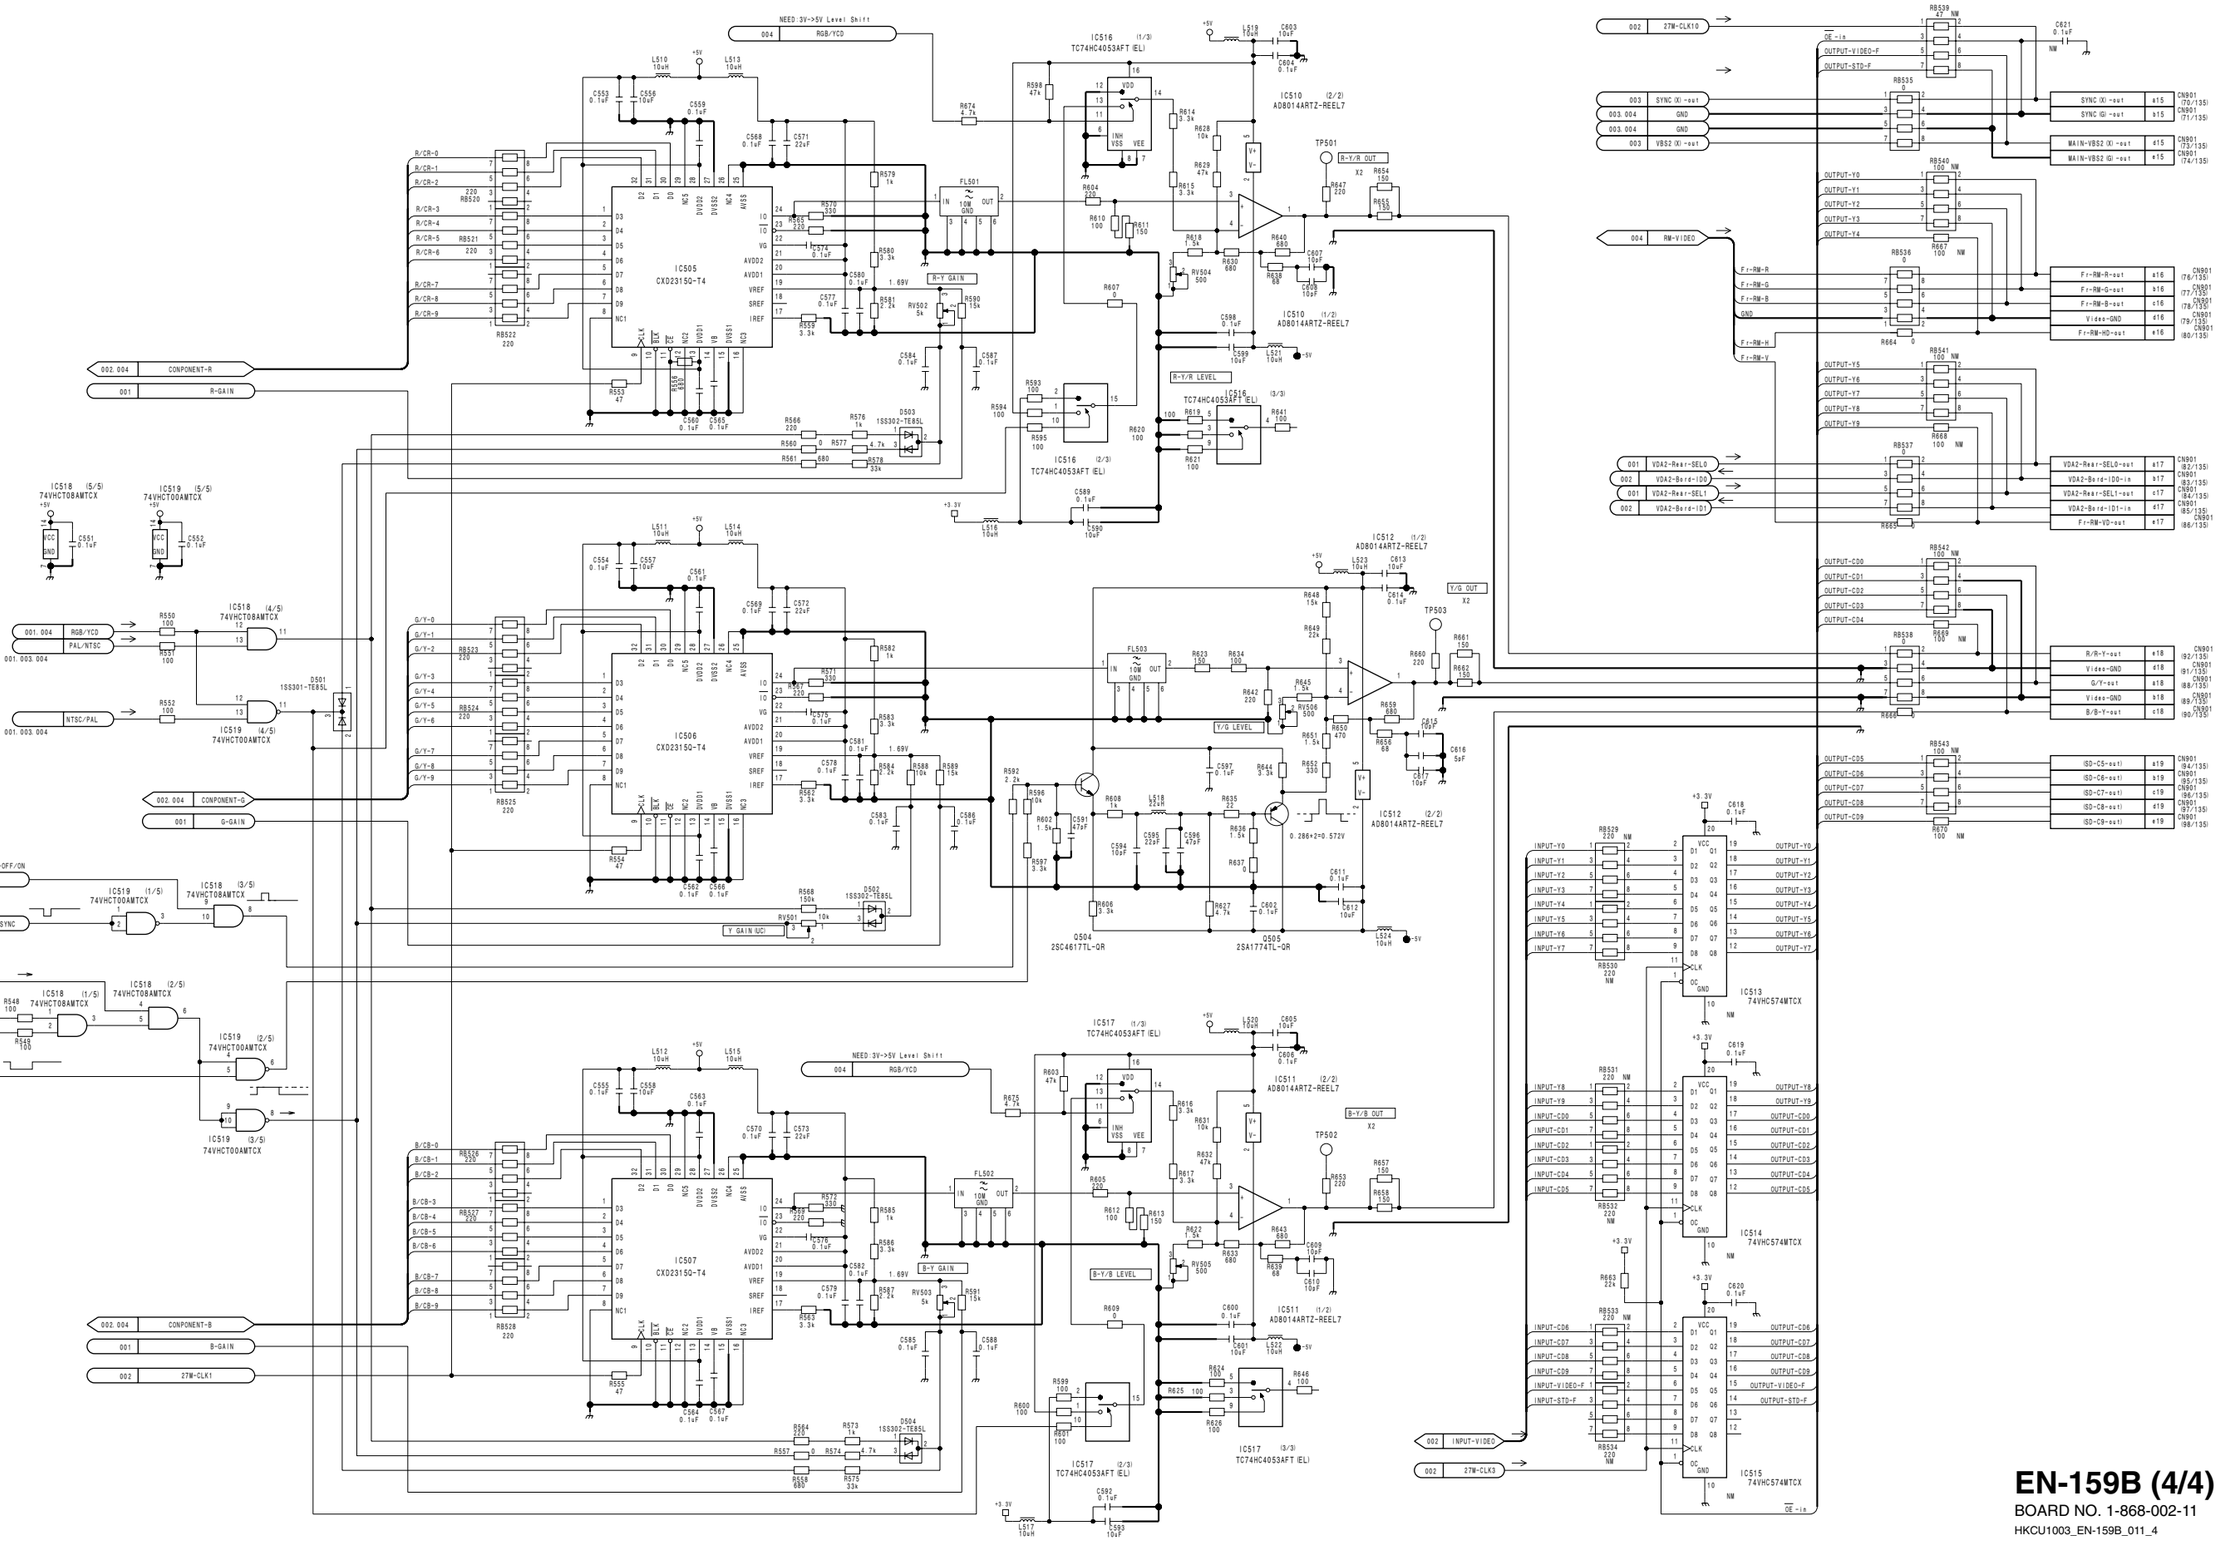

EN-159B (4/4)

BOARD NO. 1-868-002-11


HKCU1003_EN-159B_011_4

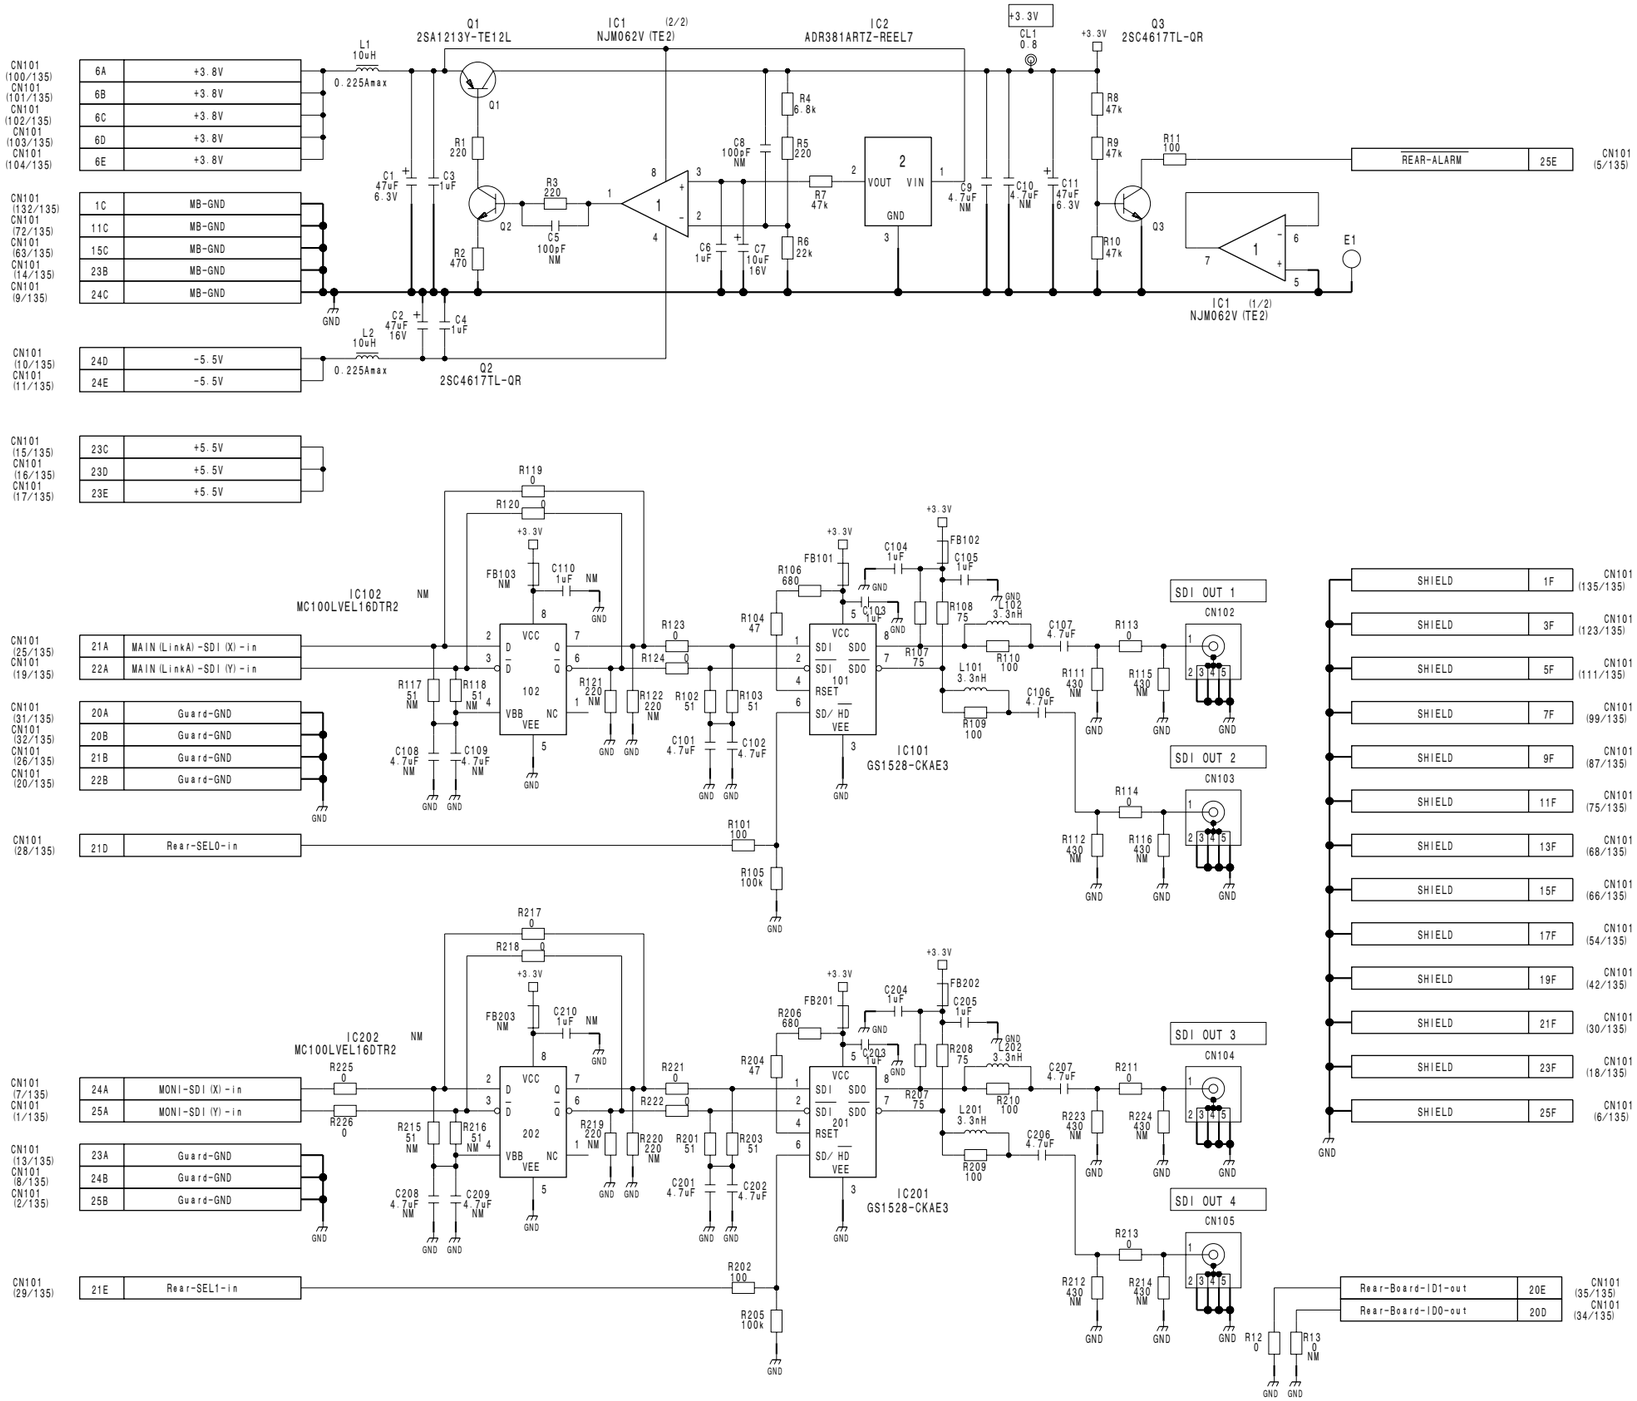


HIF-25

BOARD NO. 1-867-882-11

HDCU1000_HIF-25_011_1

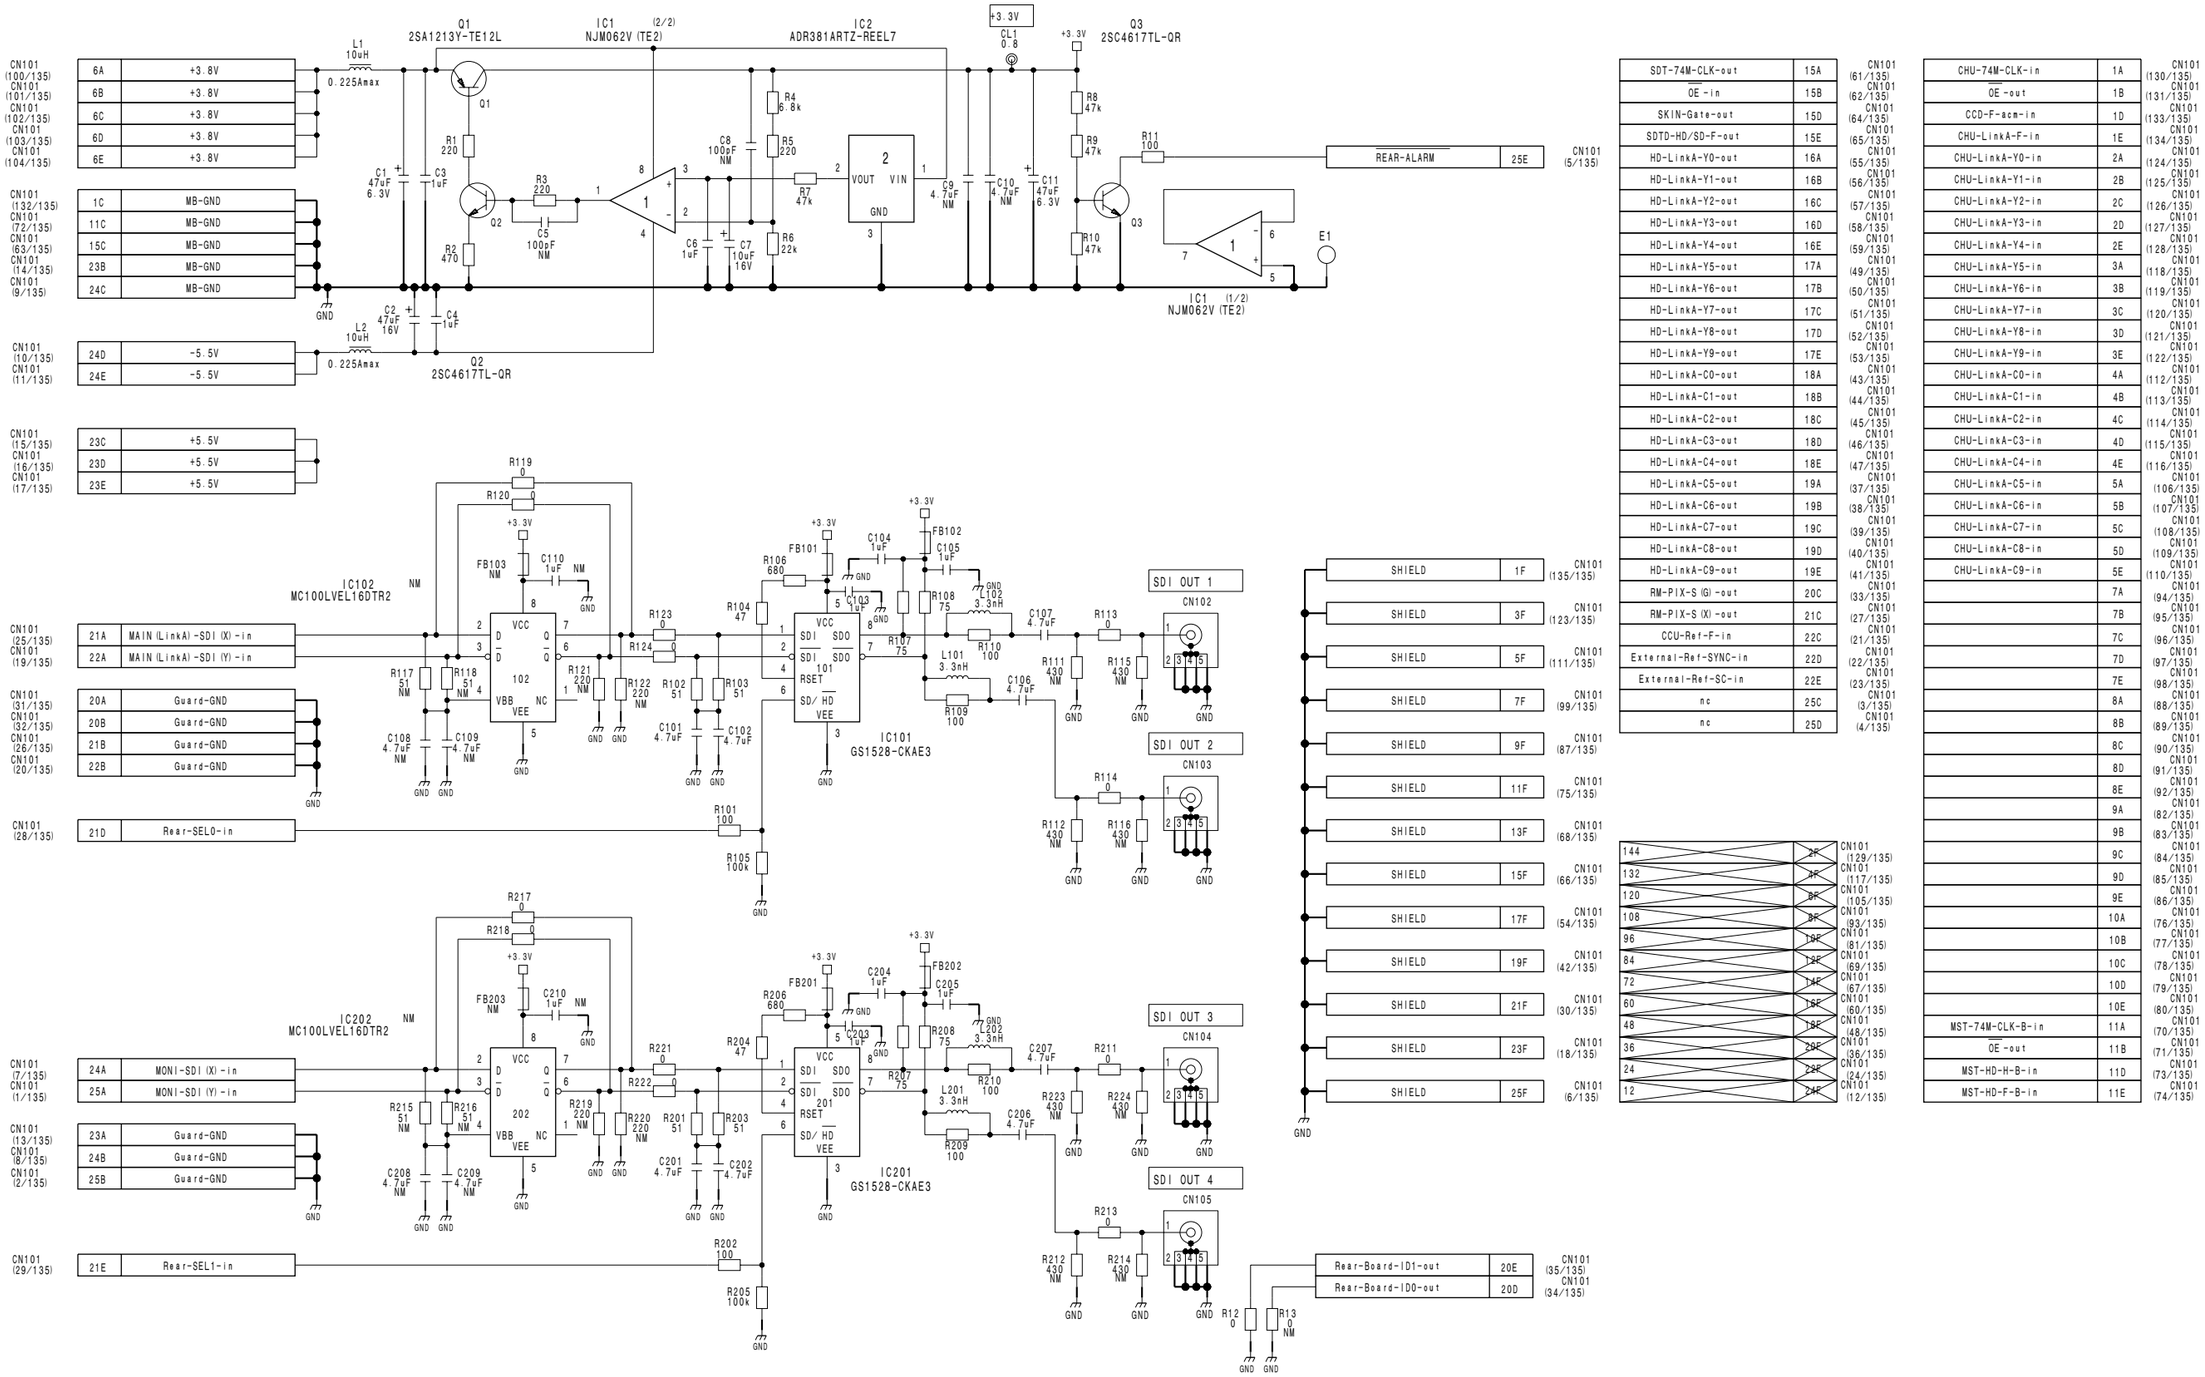



HIF-26
BOARD NO. 1-868-004-11
HKCU1005_HIF-26_011_1

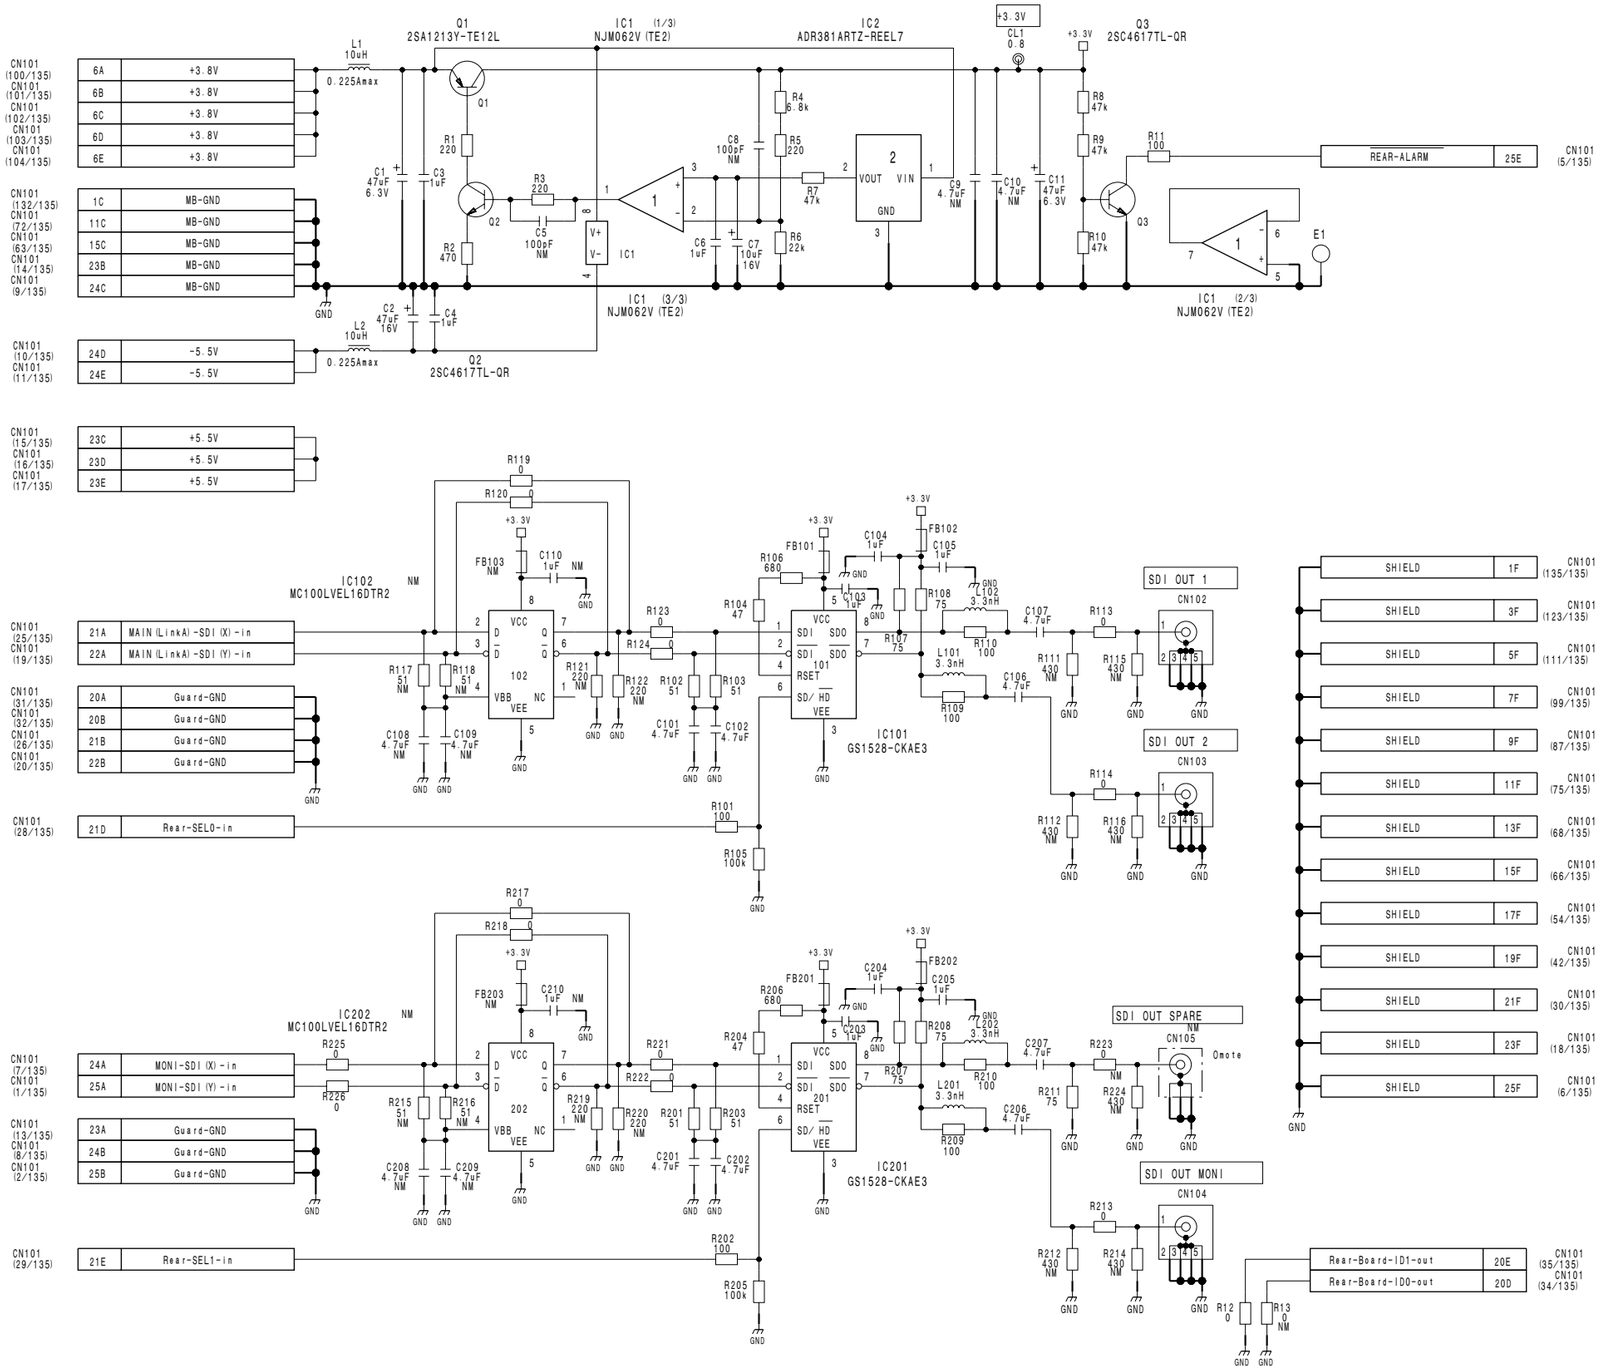

HIF-27
BOARD NO. 1-867-893-11
HDCU1500_HIF-27_011_1


MB-1071 (1/3)

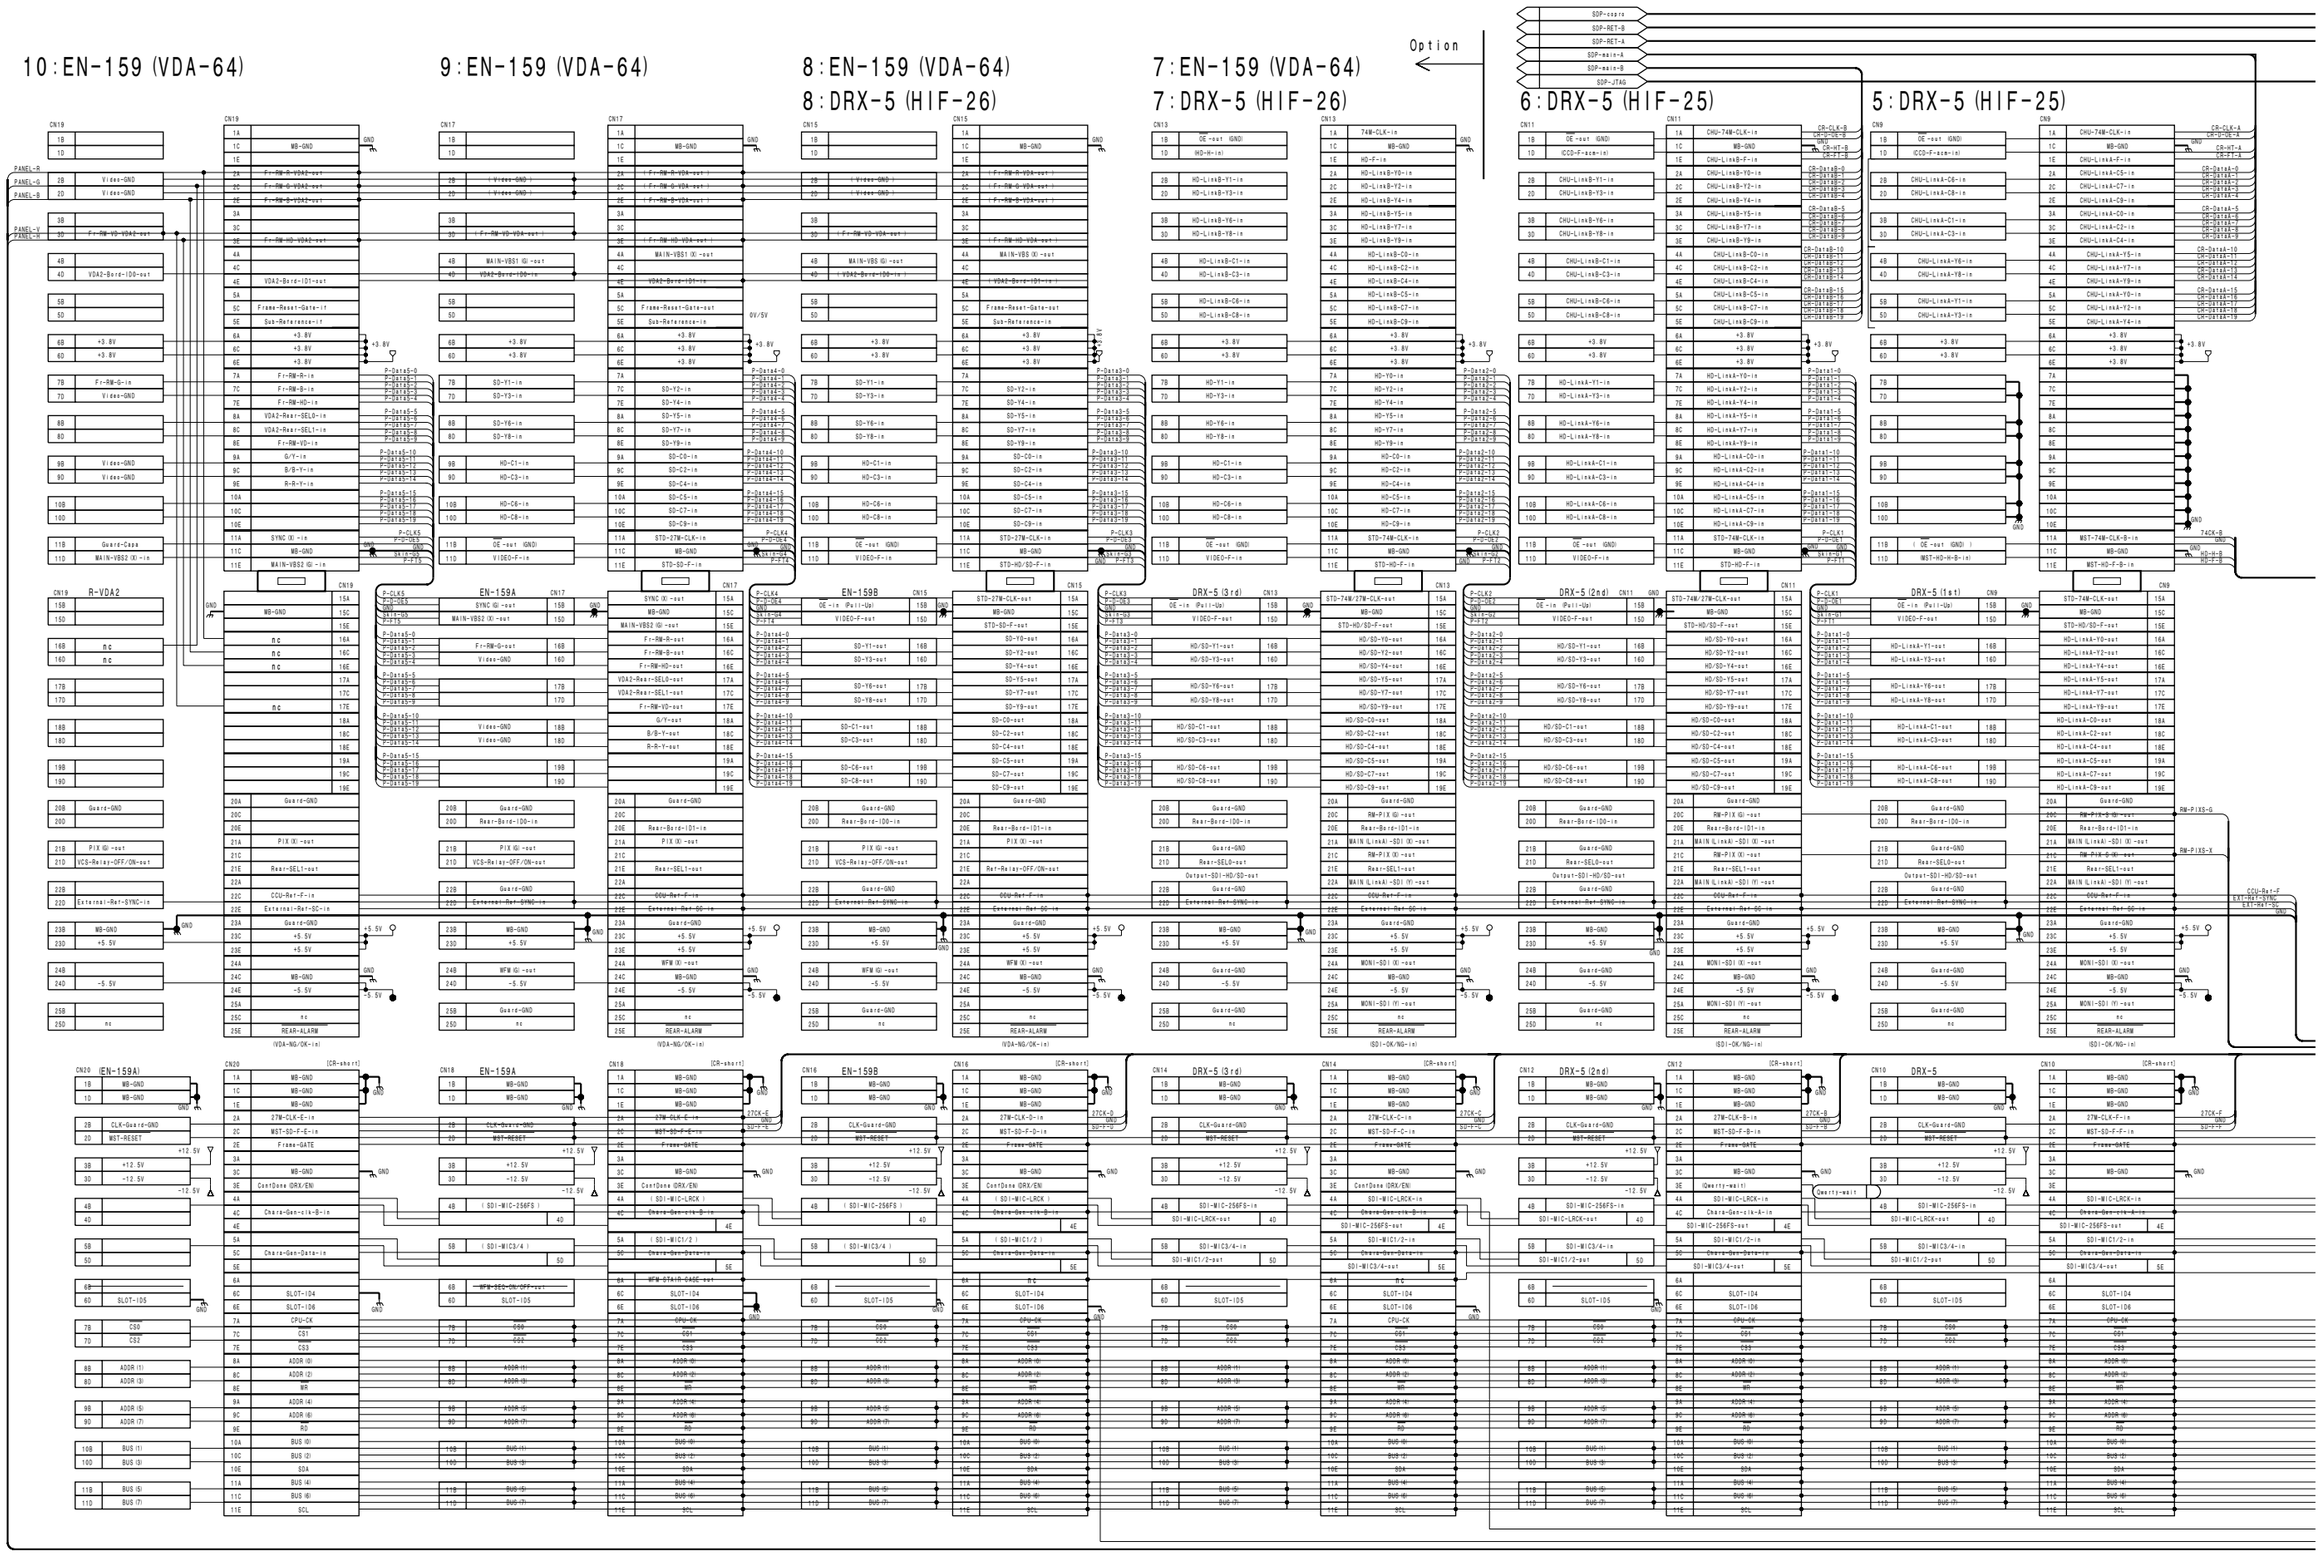
10:EN-159 (VDA-64)
9:EN-159 (VDA-64)
8:EN-159 (VDA-64)
8:DRX-5 (HIF-26)
7:EN-159 (VDA-64)
7:DRX-5 (HIF-26)
Option
6:DRX-5 (HIF-25)
5:DRX-5 (HIF-25)
SOP-cssrn
SOP-RET-B
SOP-RET-A
SOP-main-A
SOP-main-B
SOP-JTAG
PANEL-R
PANEL-G
PANEL-B
PANEL-Y
PANEL-H
R-VDA2
EN-159A
EN-159B
DRX-5 (3rd)
DRX-5 (2nd)
DRX-5 (1st)
(EN-159A)
(VDA-NG/OK-in)
(SDI-OK/NG-in)
7-72
7-72
MM/HDCDU1000 Series

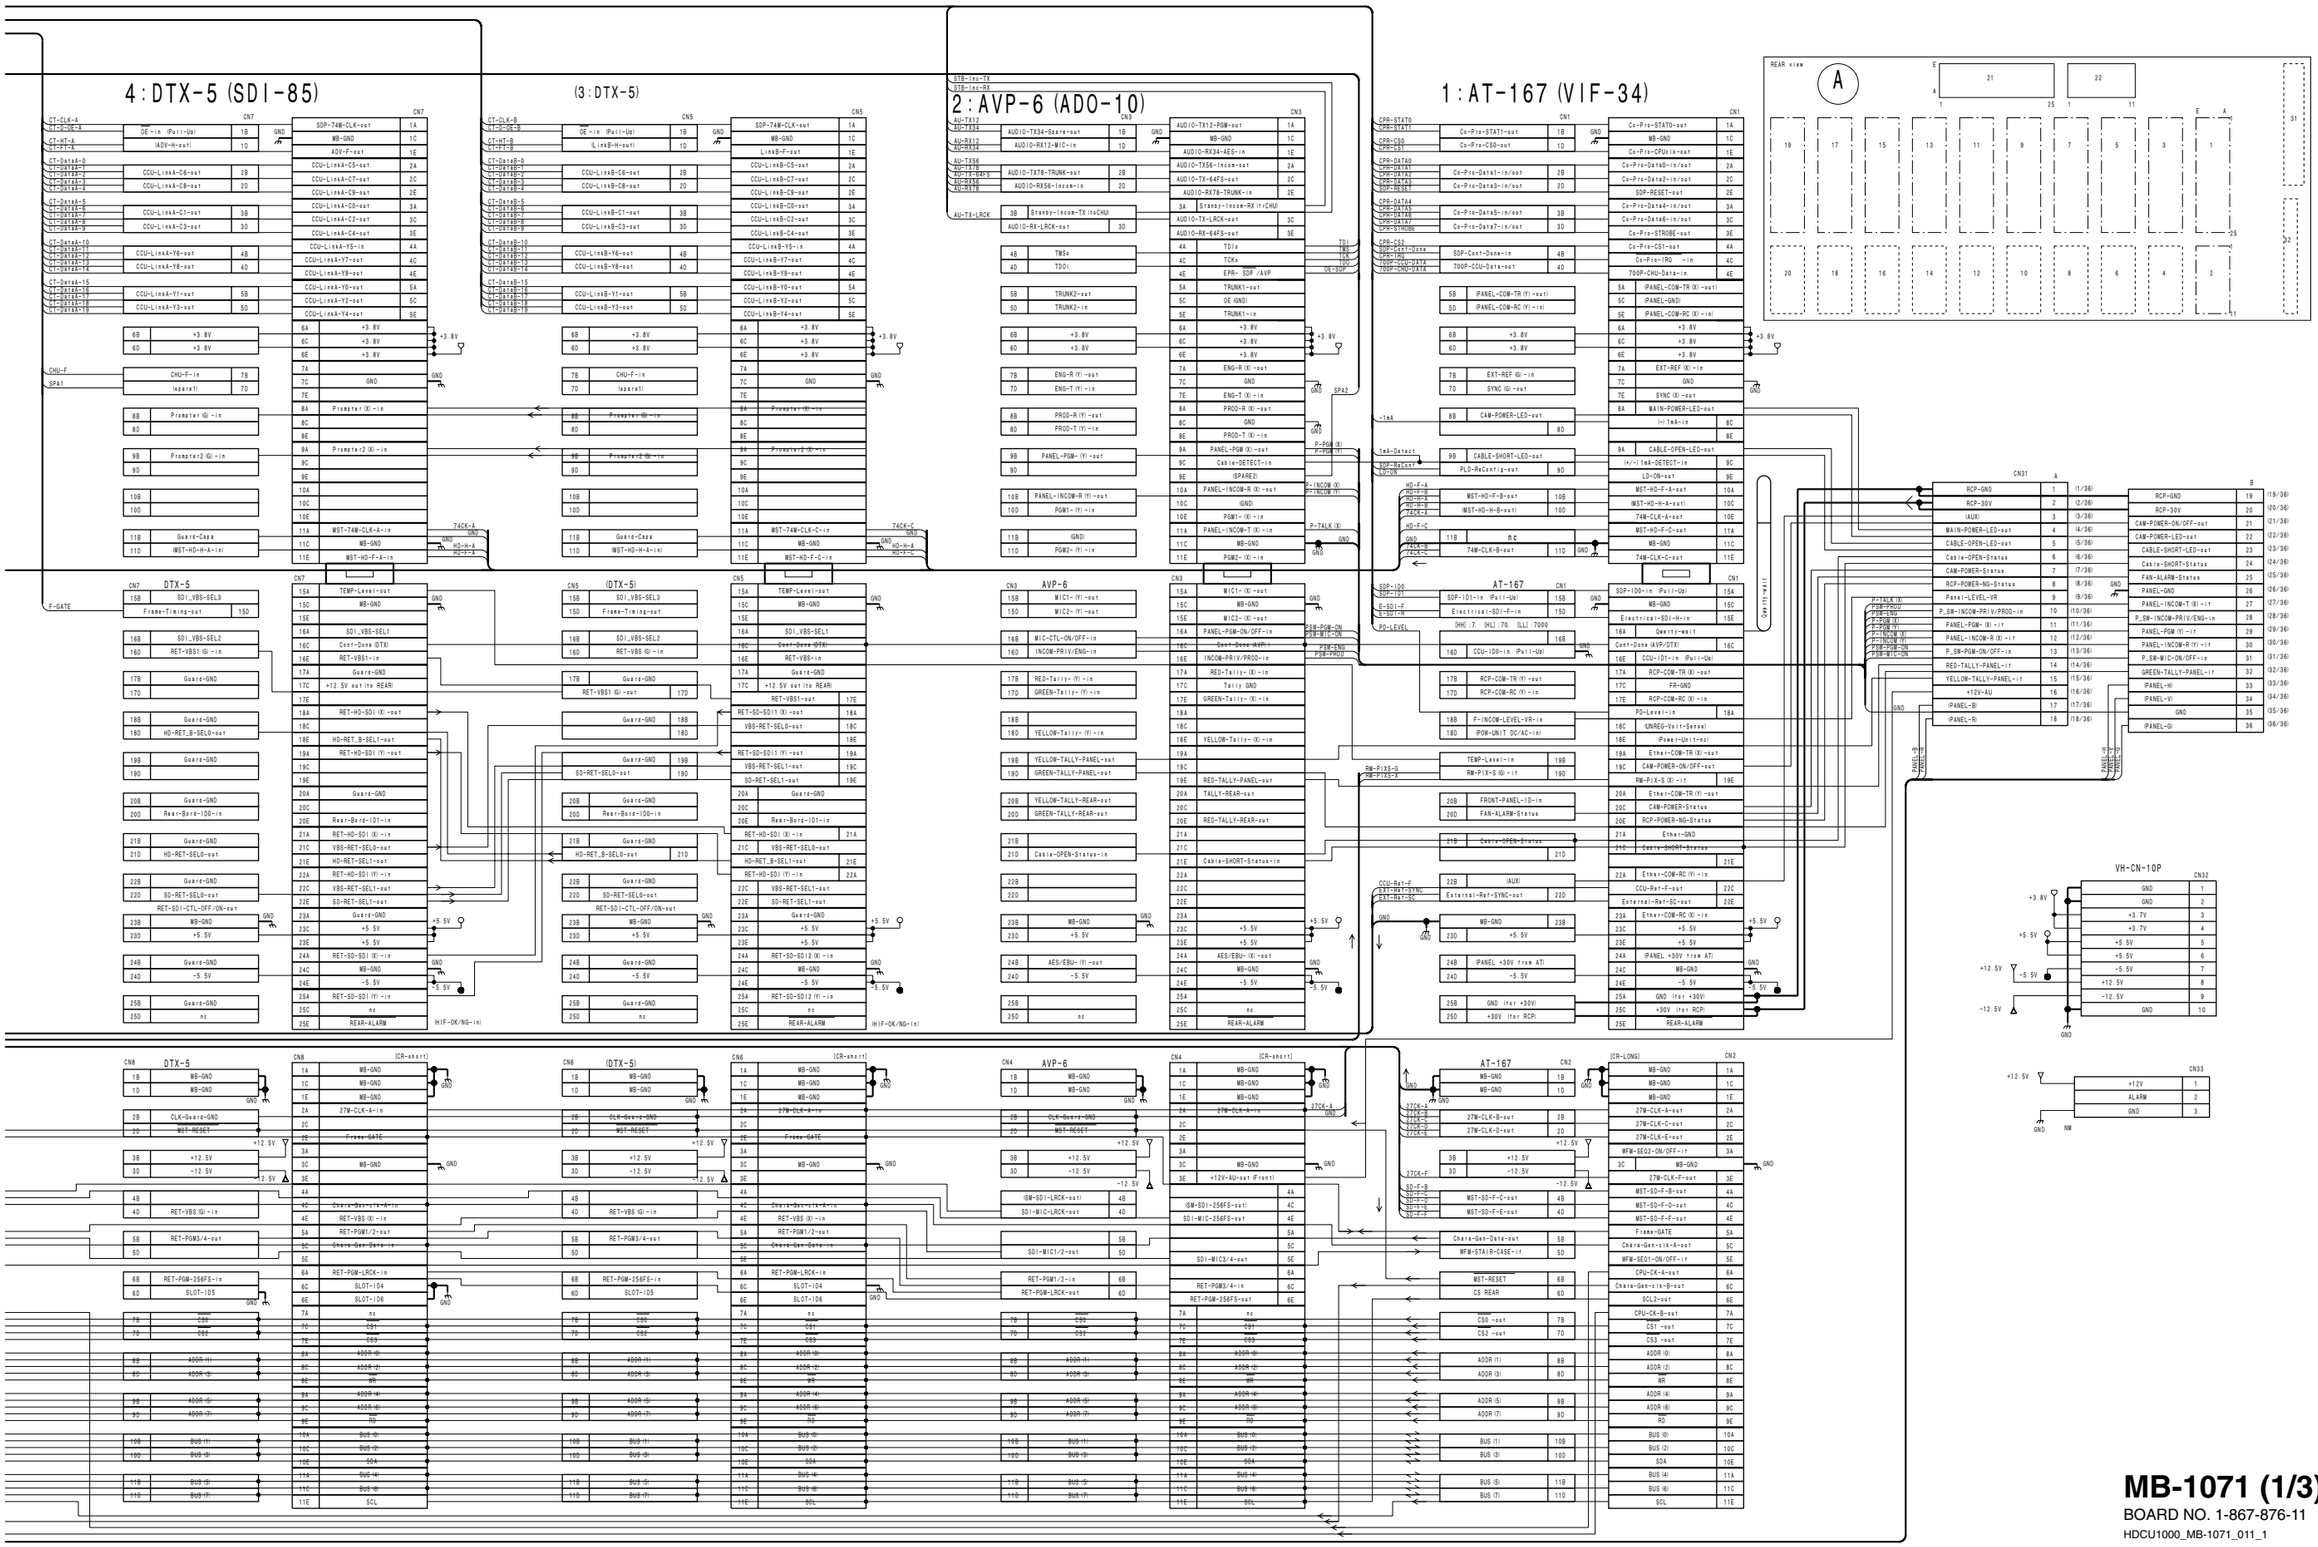

MB-1071 (1/3)
BOARD NO. 1-867-876-11
HDCU1000_MB-1071_011_1


MB-1071 (2/3)

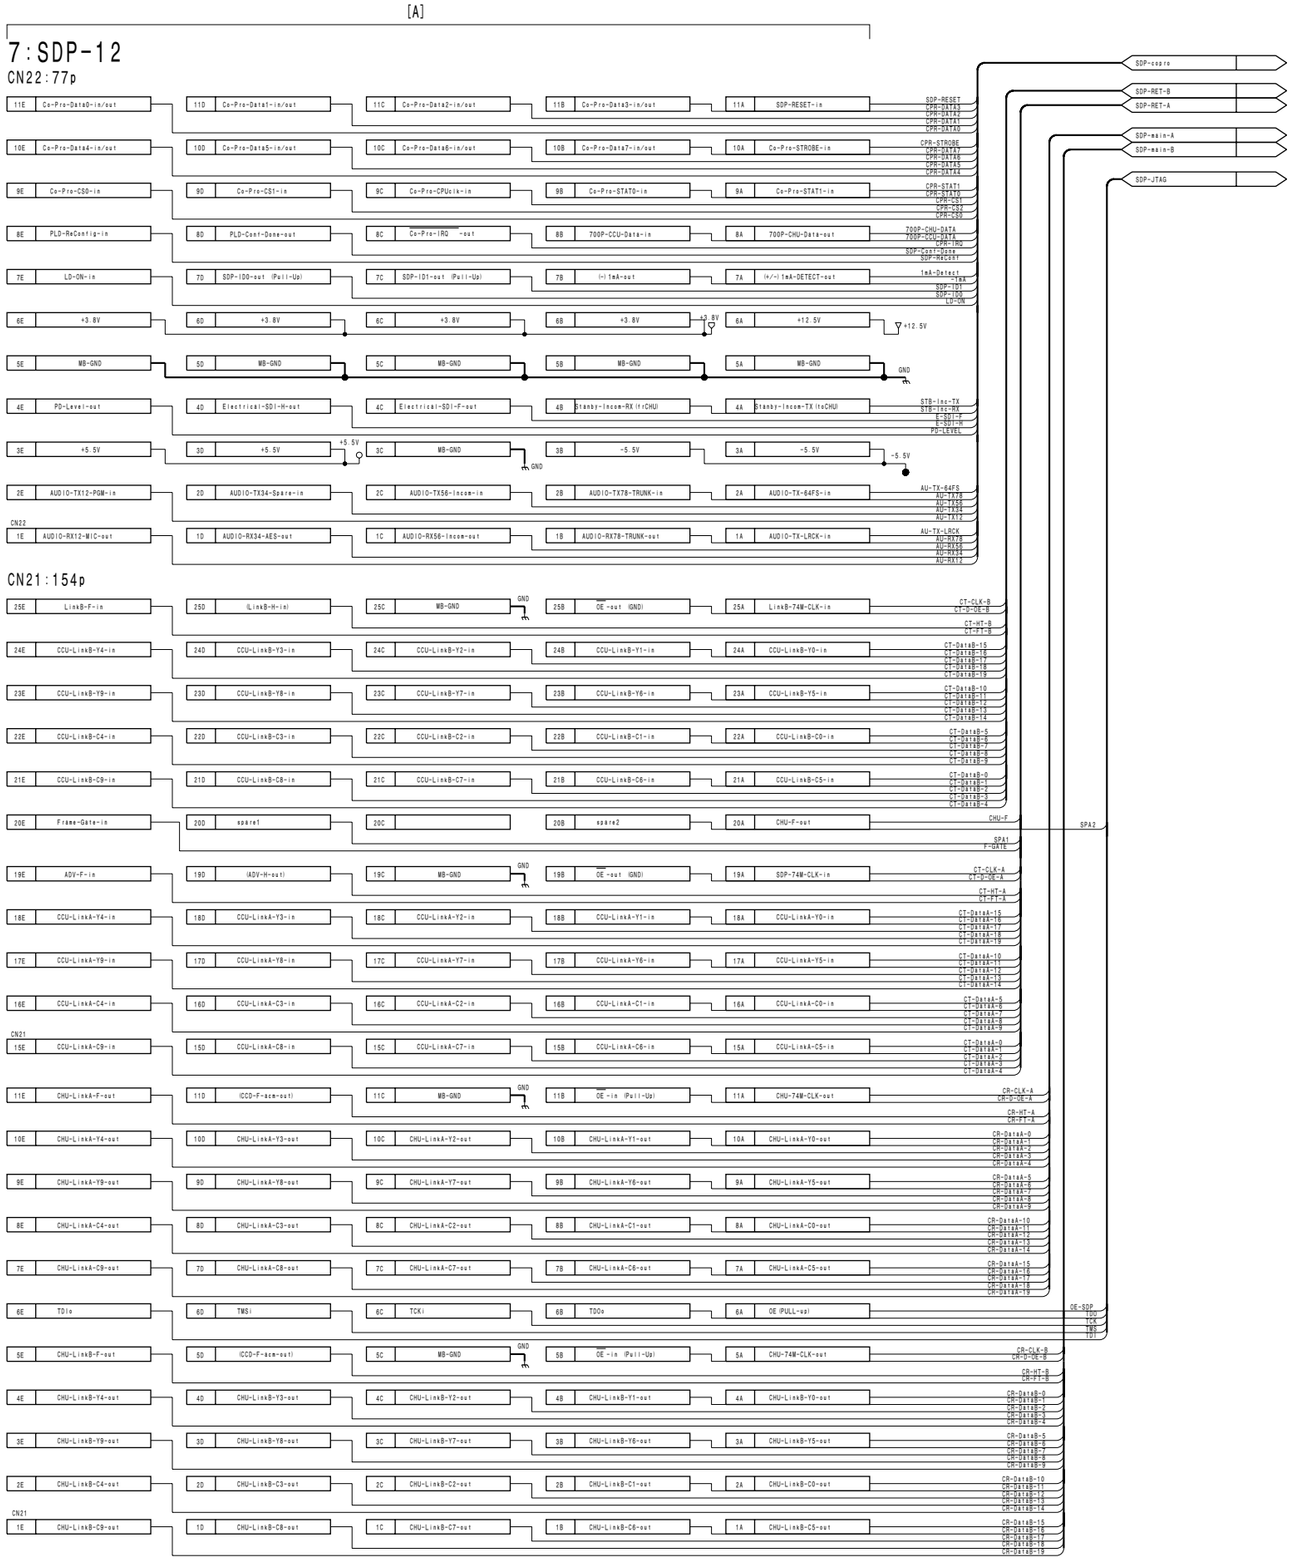

7-74


MB-1071 (2/3)
BOARD NO. 1-867-876-11
HDCU1000_MB-1071_011_2

MB-1071 (3/3)

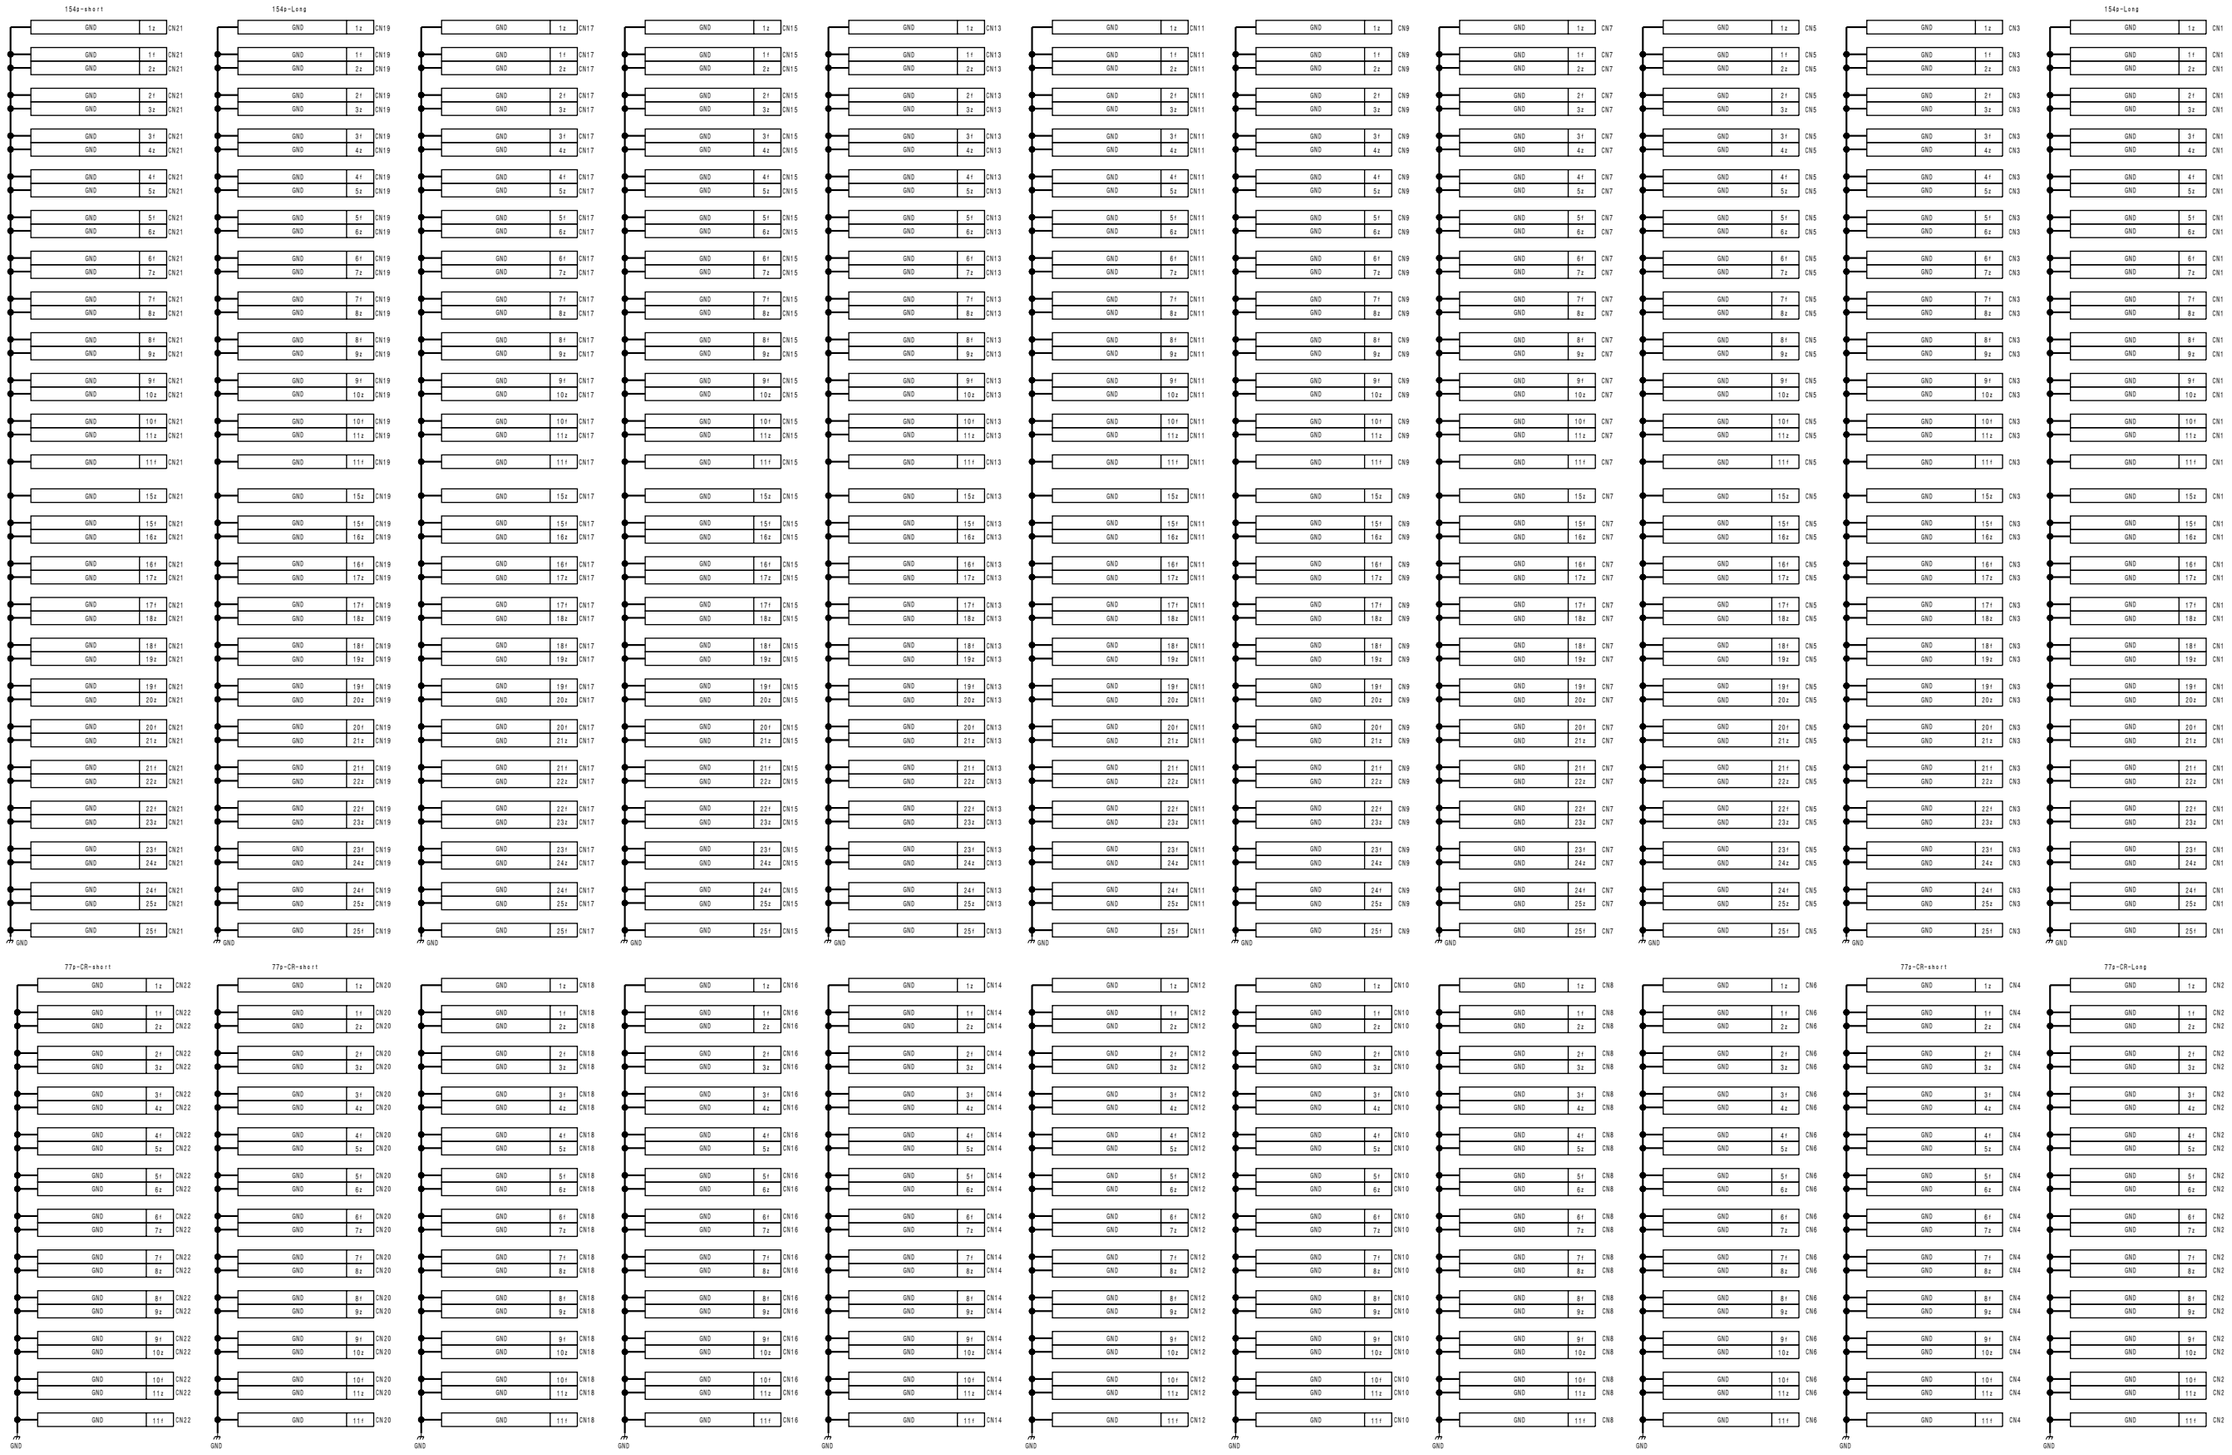


MB-1071 (3/3)
BOARD NO. 1-867-876-11
HDCU1000_MB-1071_011_3

MB-1072 (1/2)

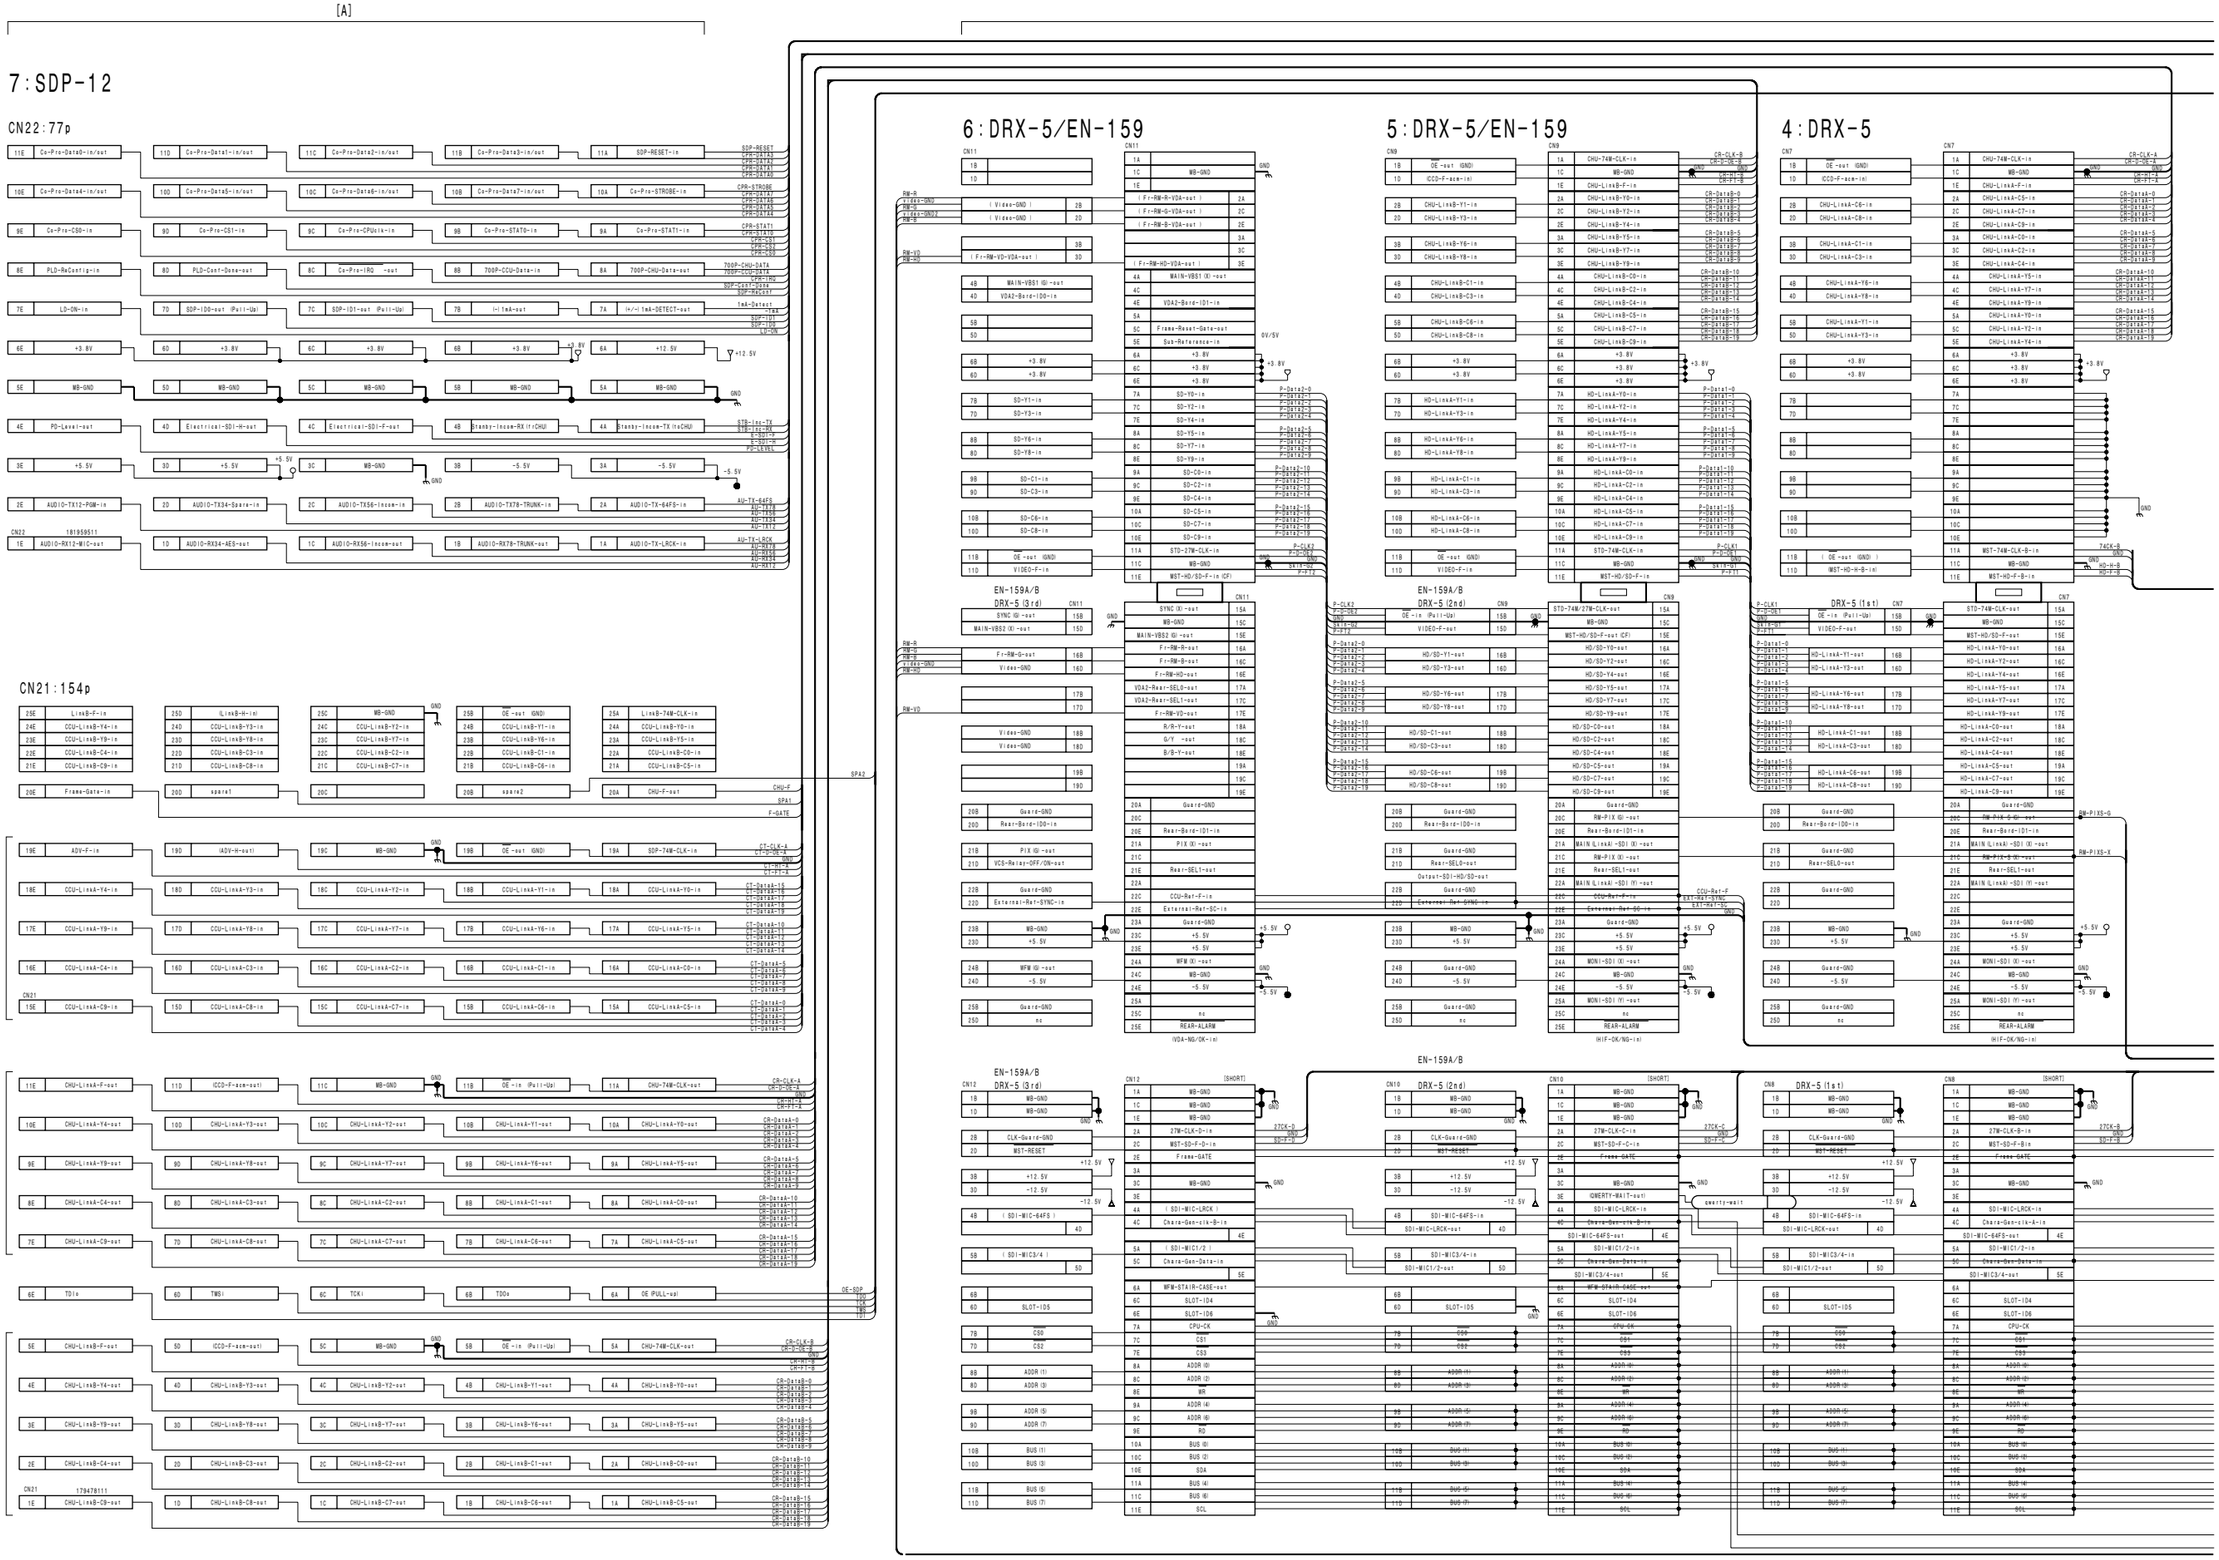

7-76

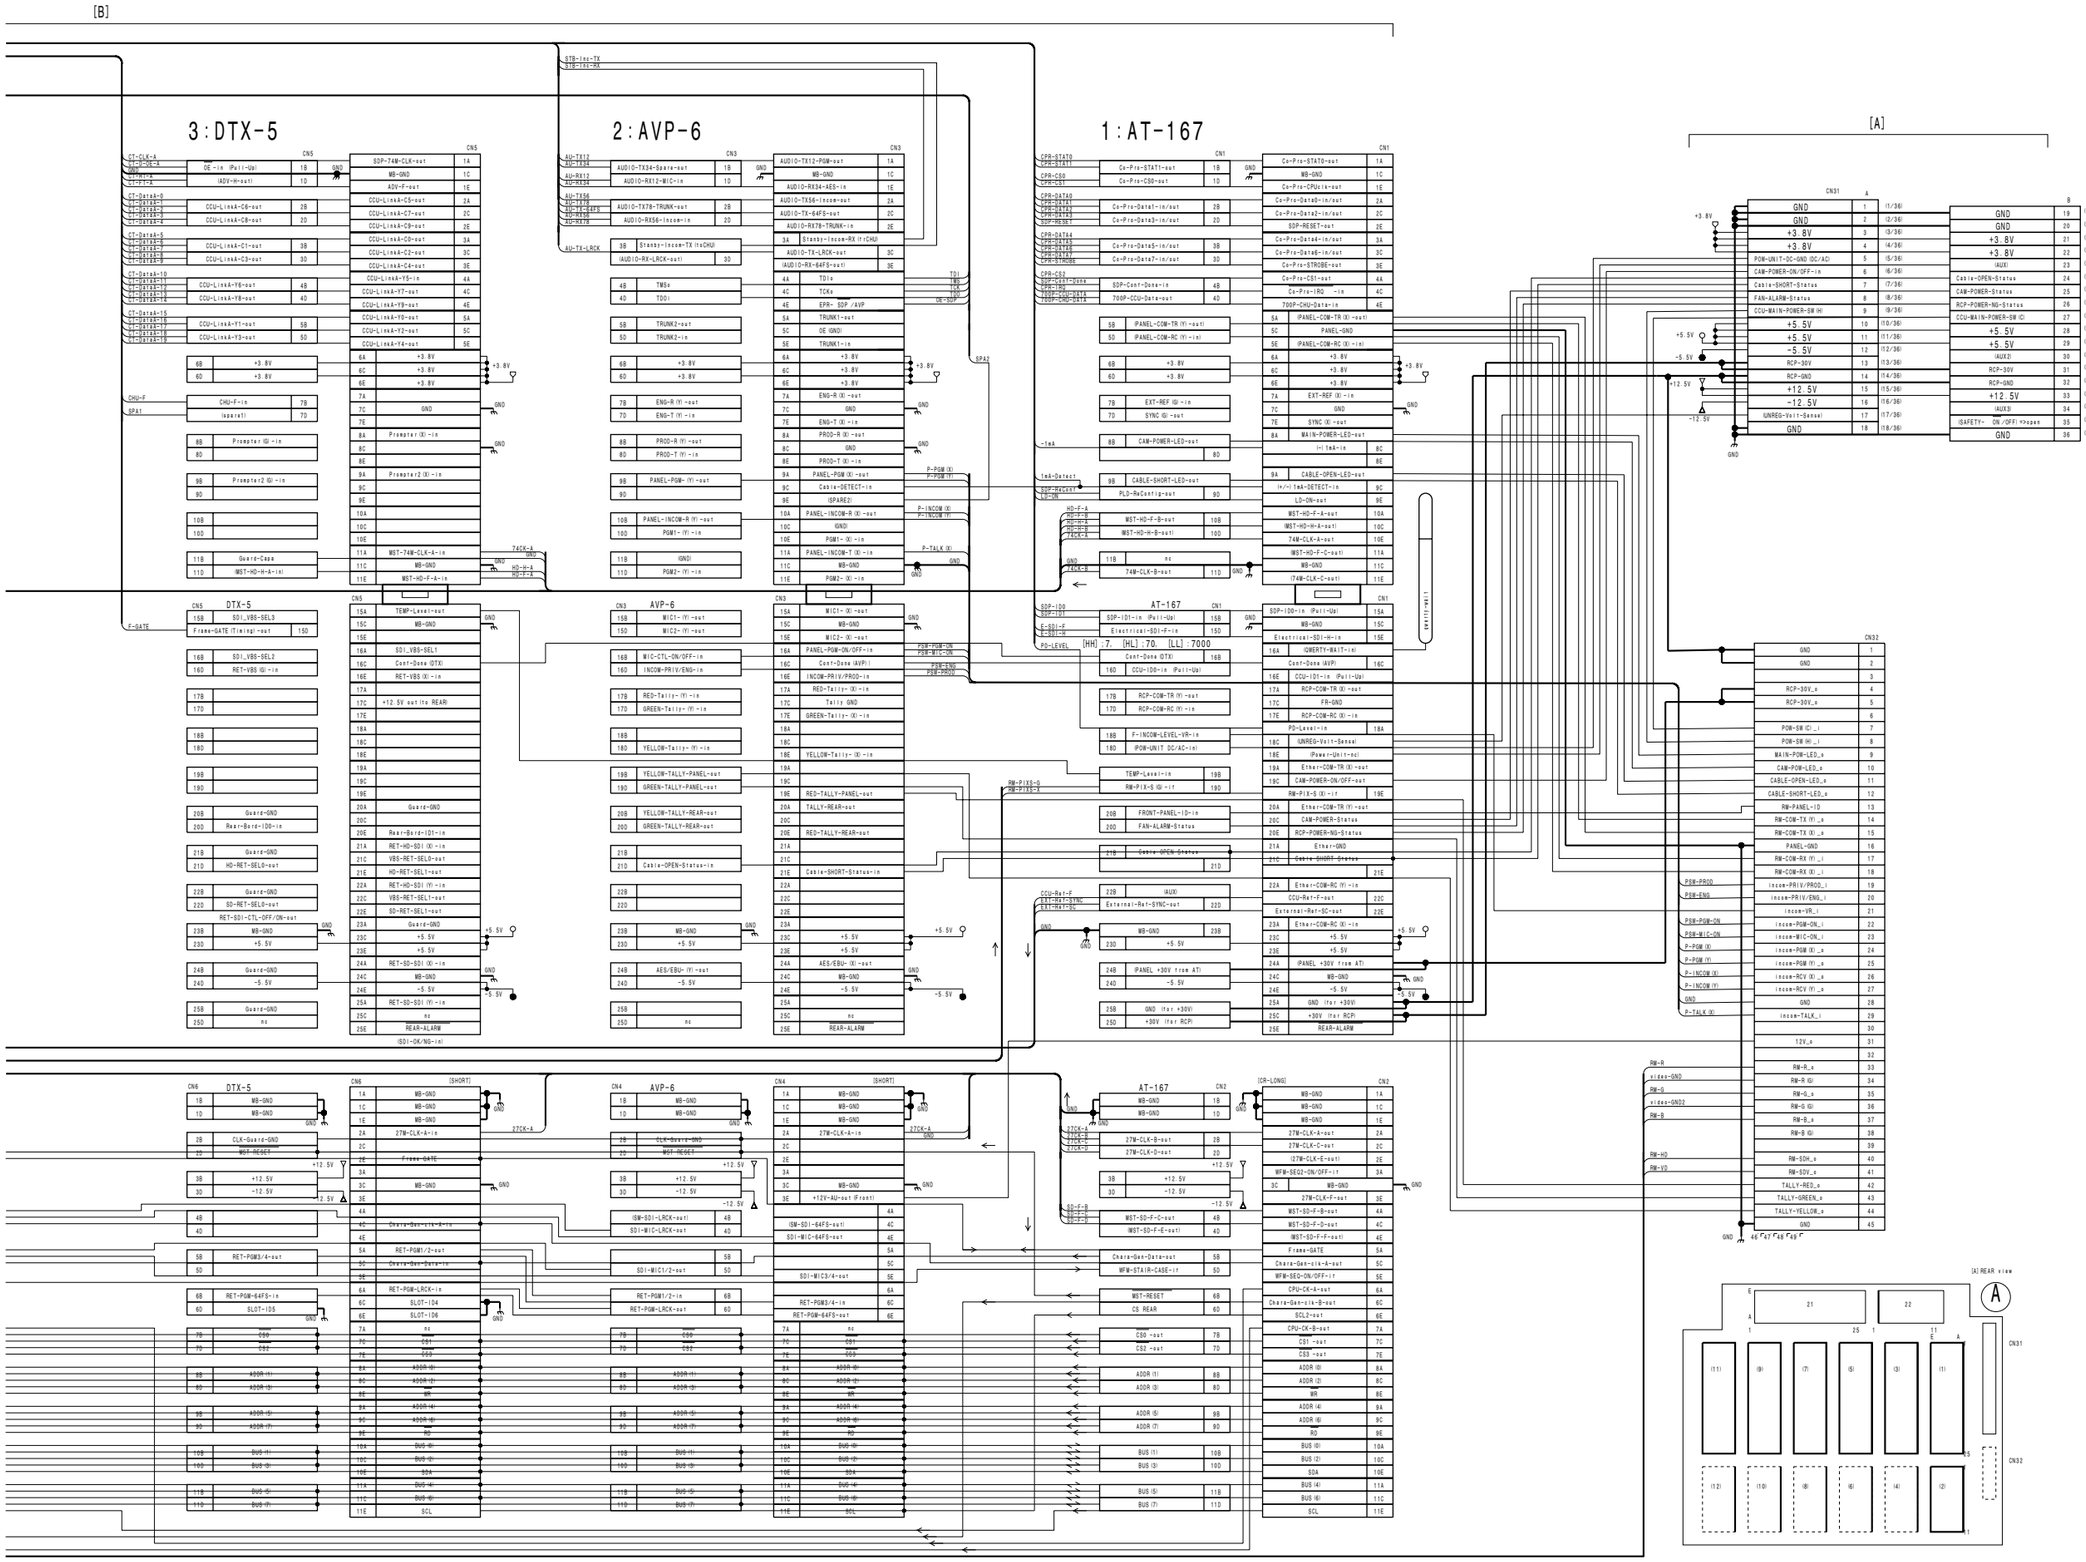


MB-1072 (1/2)

BOARD NO. 1-867-892-11

HDCU1500_MB-1072_011_1


MB-1072 (2/2)

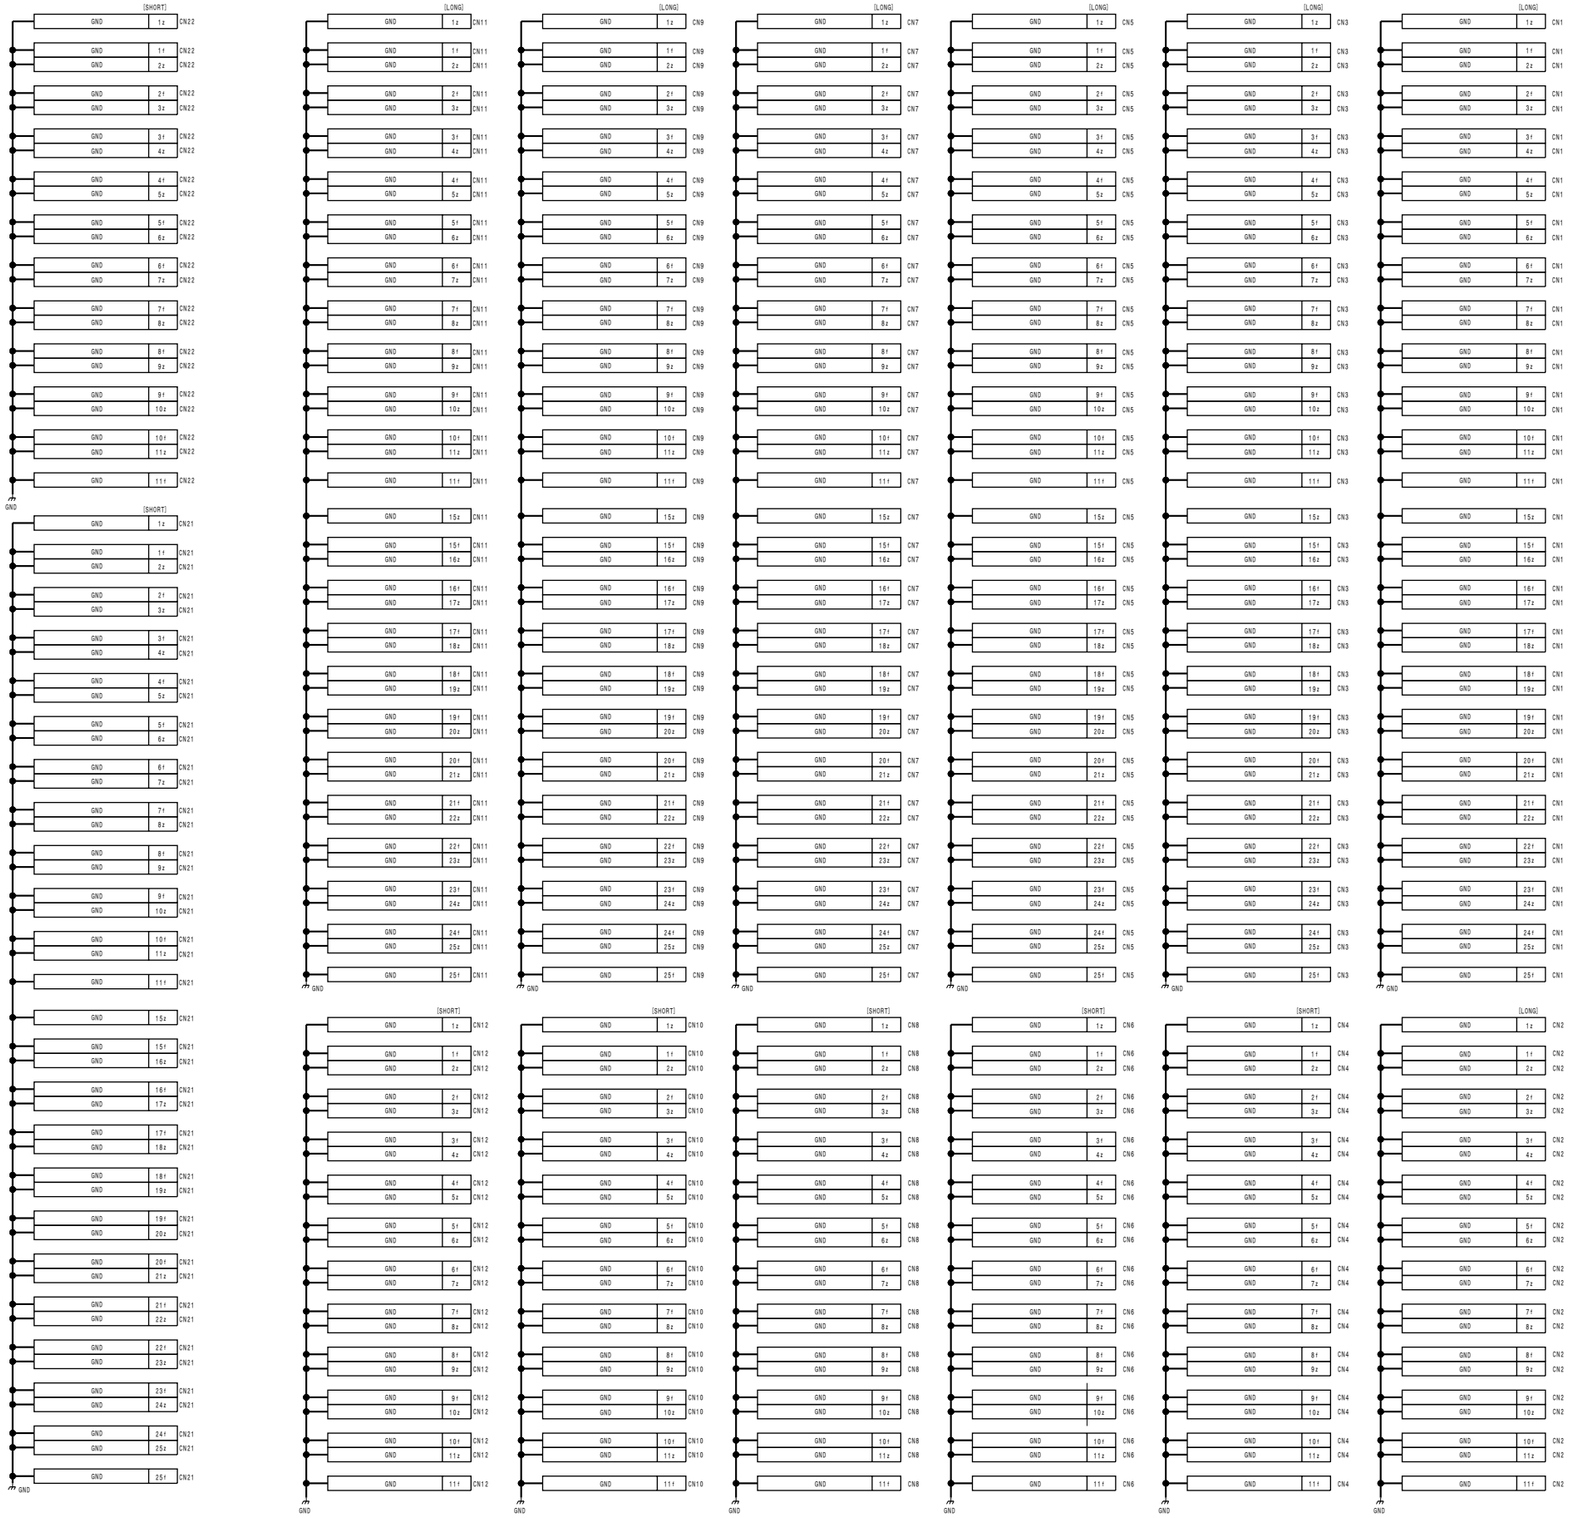

MB-1072 (2/2)

BOARD NO. 1-867-892-11

HDCU1500_MB-1072_011_2

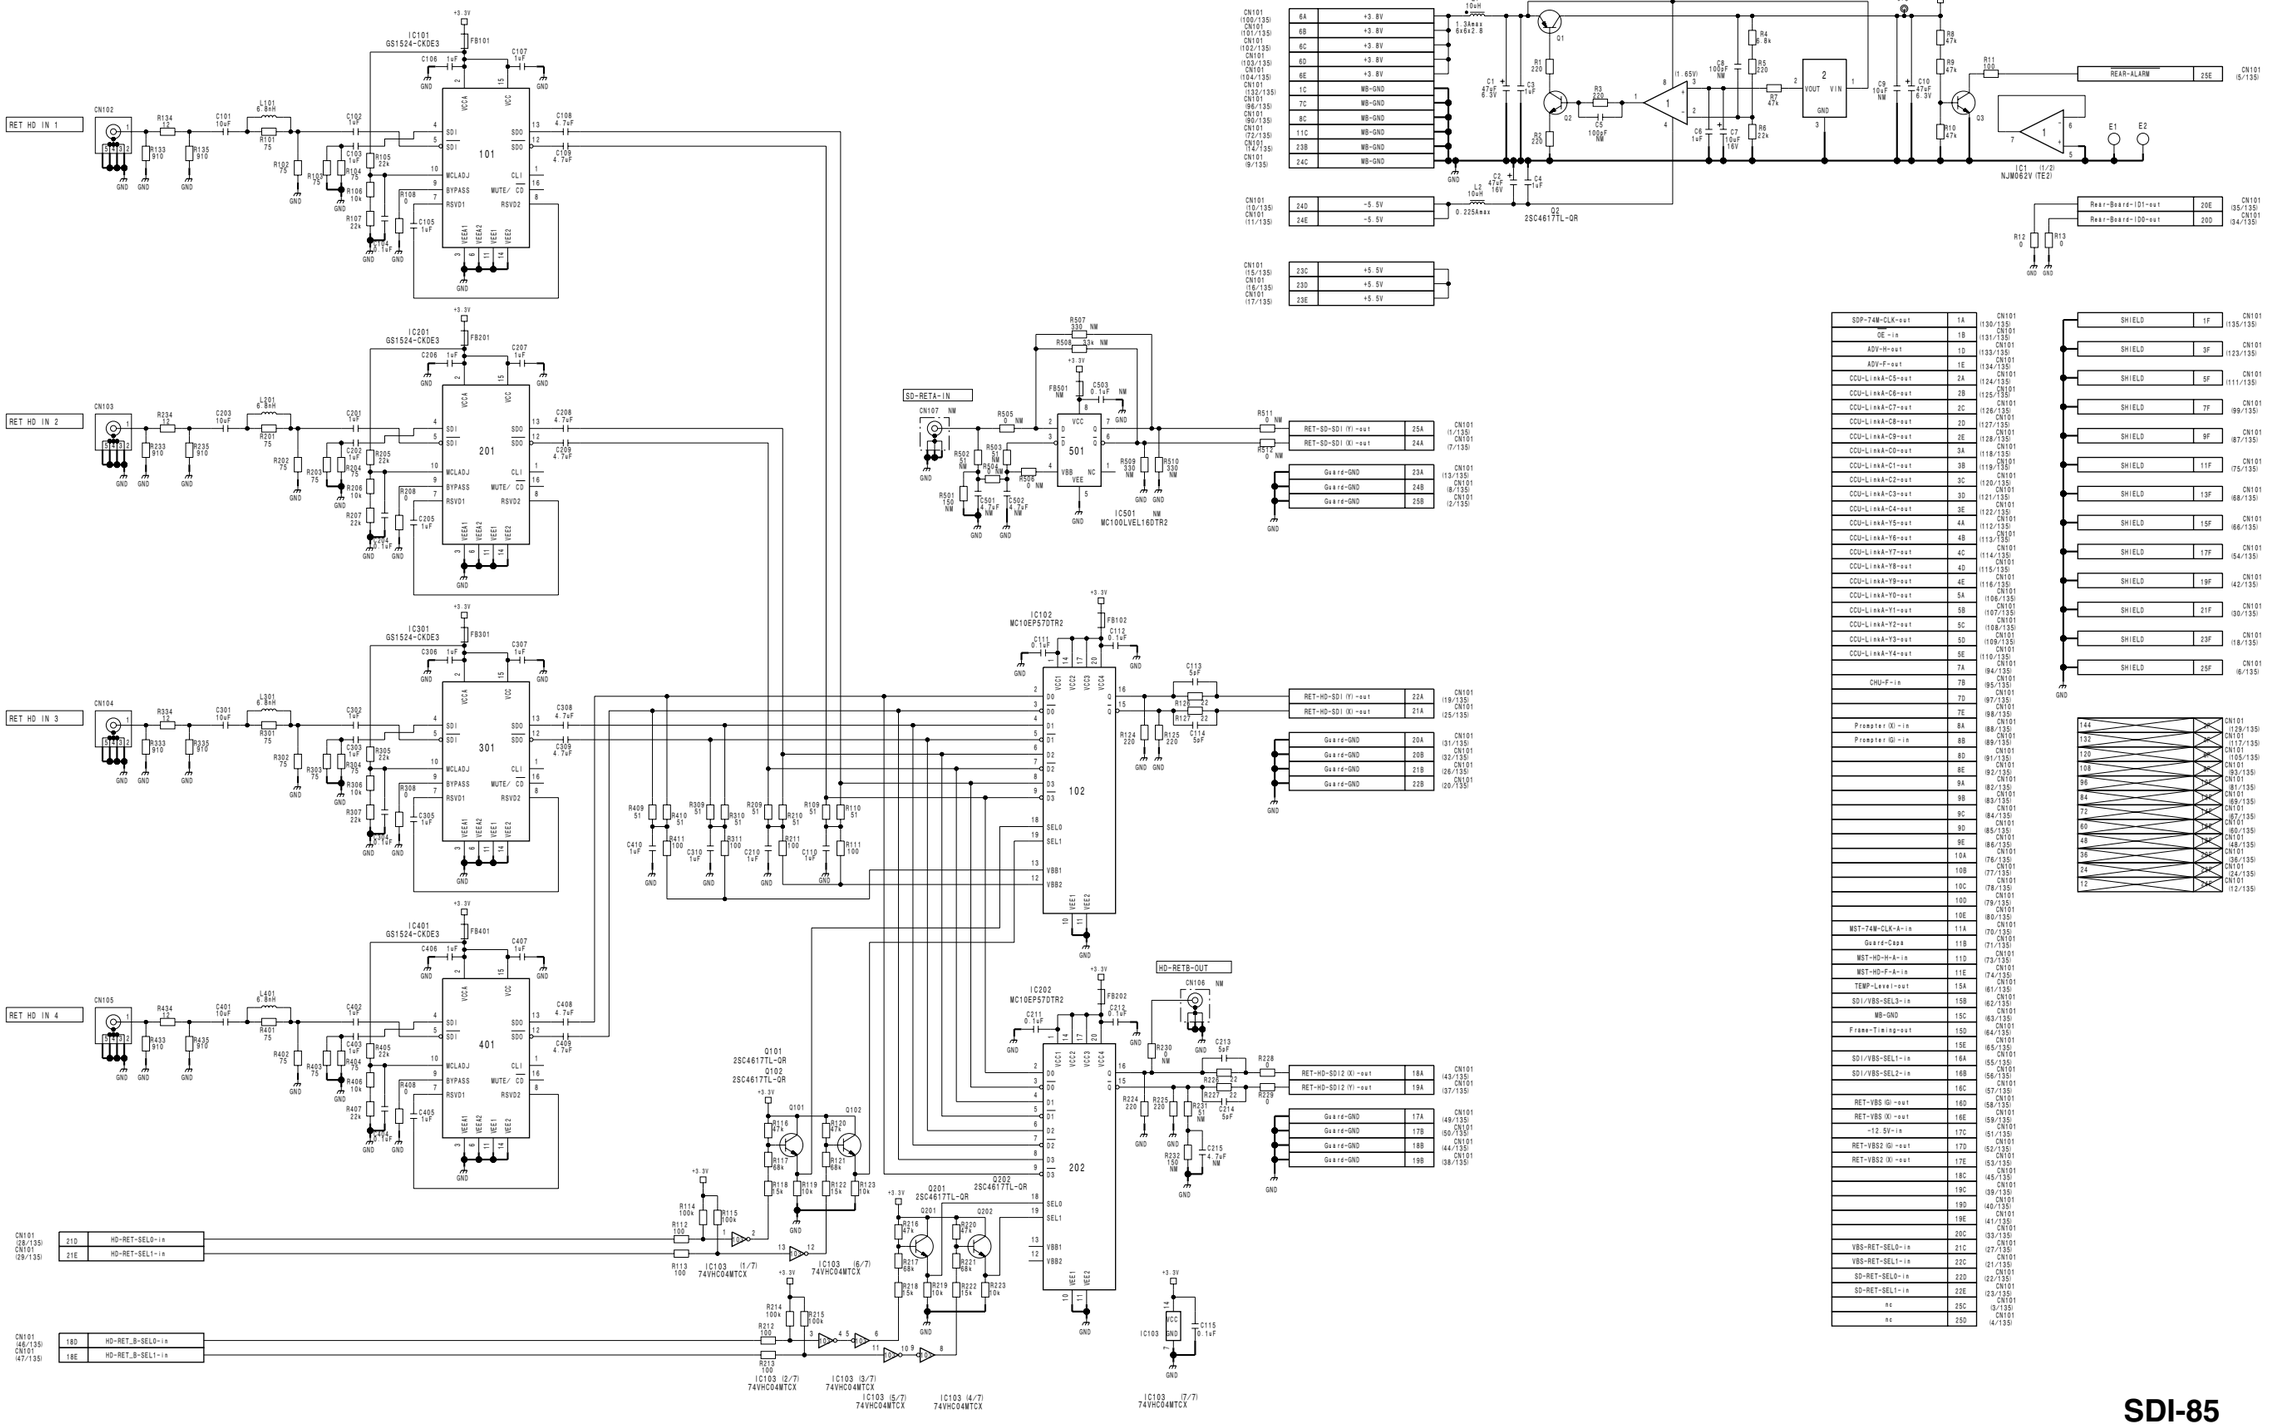


MM/HDCU1000 Series

SDI-85

BOARD NO. 1-867-883-11


HDCU1000_SDI-85_011_1

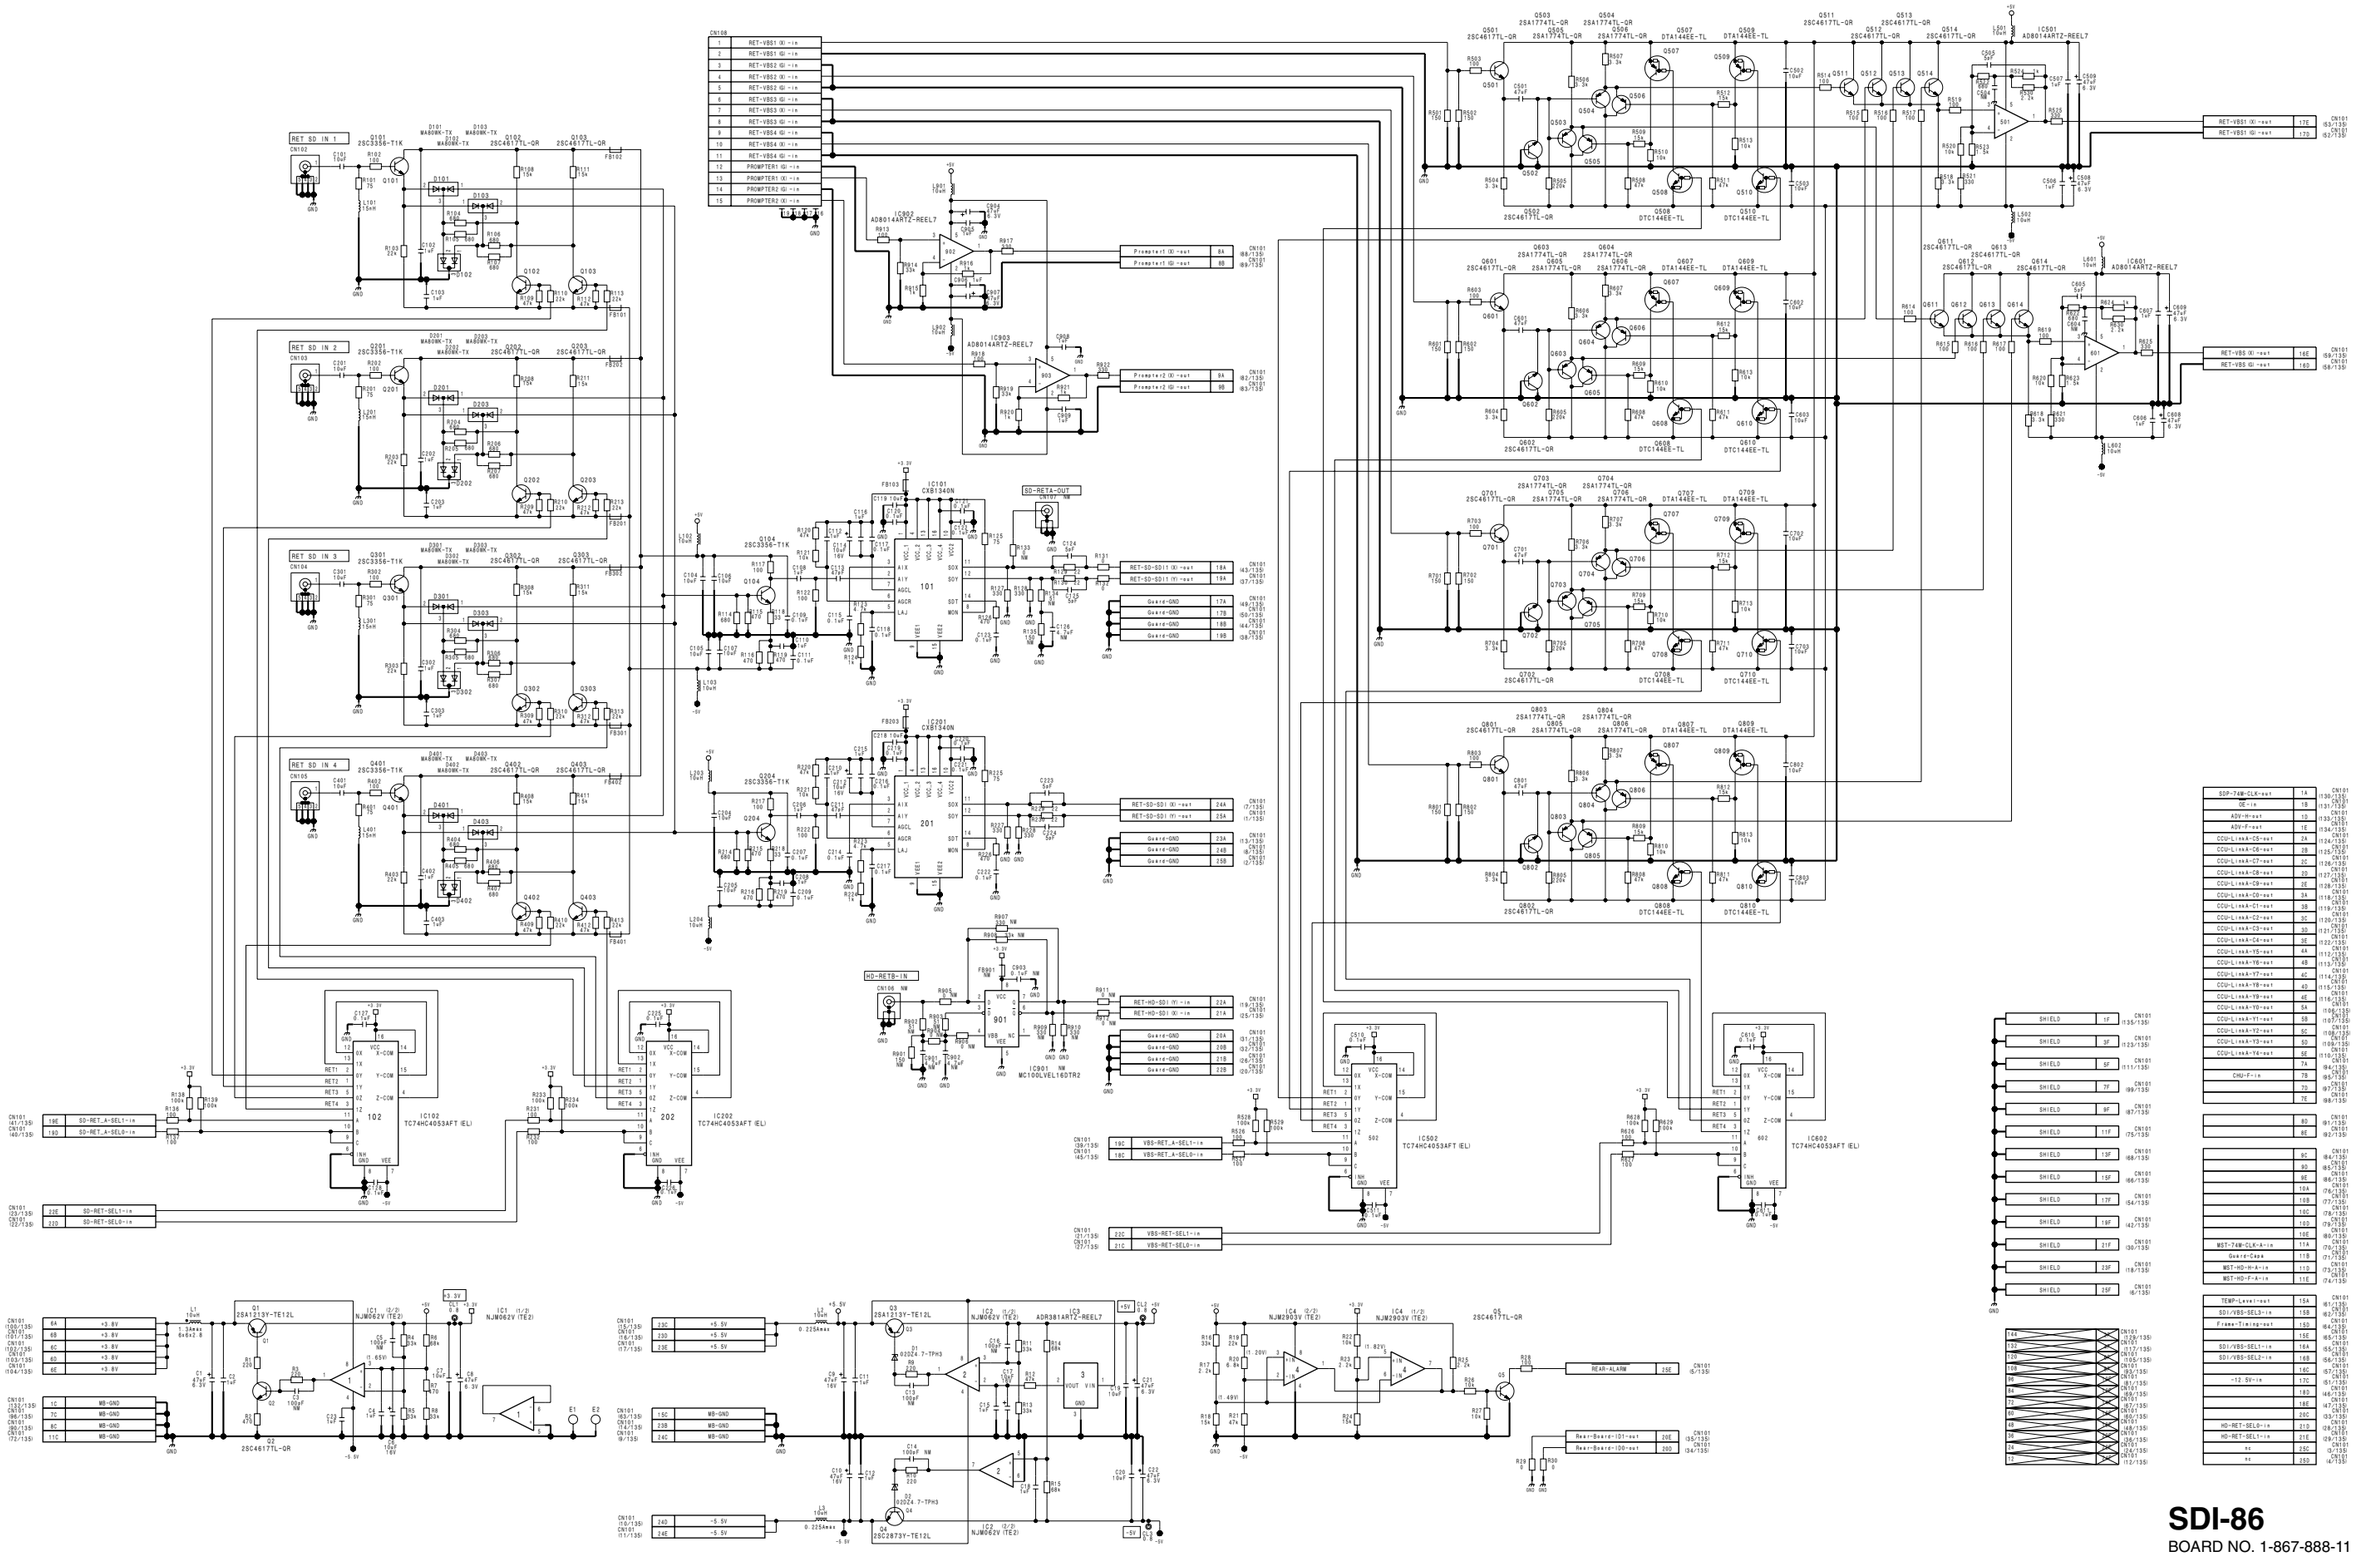

SDI-86

BOARD NO. 1-867-888-11

HDCU1000_SDI-86_011_1

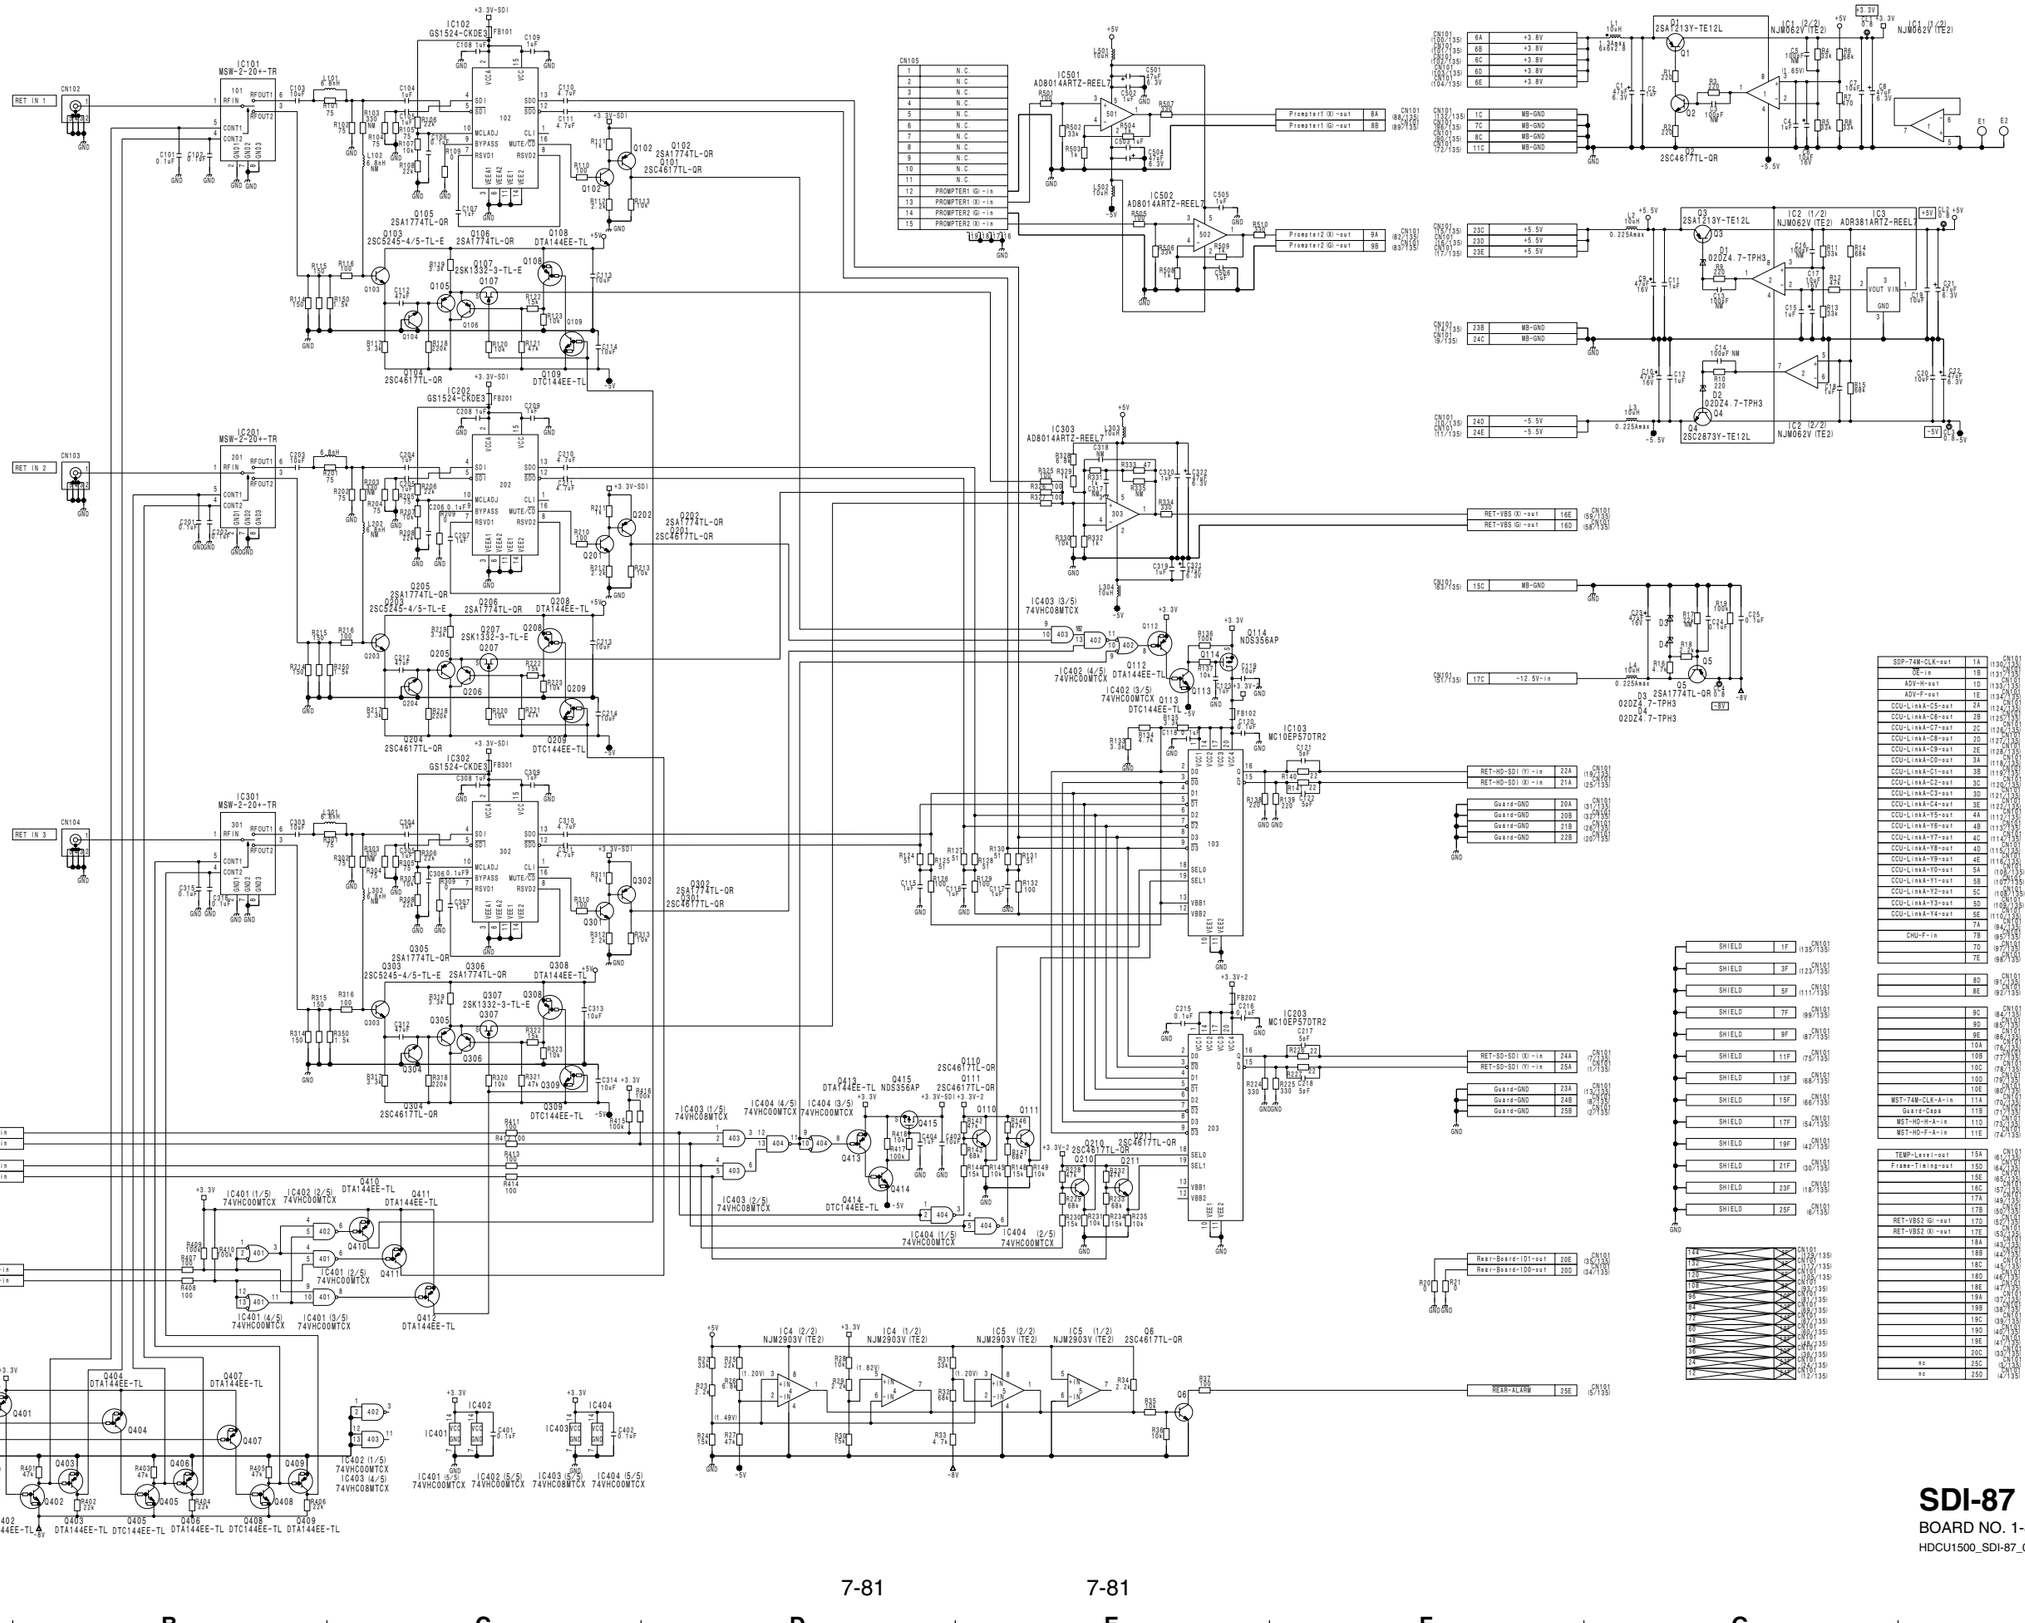


SDP-74M-CLK-out	1A	CN101 (13C/135)
DE-in	1B	(13C/135)
ADV-H-out	1D	(13C/135)
ADV-F-out	1E	(13C/135)
CCU-LinkA-C5-out	2A	(12C/135)
CCU-LinkA-C6-out	2B	(12C/135)
CCU-LinkA-C7-out	2C	(12C/135)
CCU-LinkA-C8-out	2D	(12C/135)
CCU-LinkA-C9-out	2E	(12C/135)
CCU-LinkA-C0-out	3A	(11C/135)
CCU-LinkA-C1-out	3B	(11C/135)
CCU-LinkA-C2-out	3C	(12C/135)
CCU-LinkA-C3-out	3D	(12C/135)
CCU-LinkA-C4-out	3E	(12C/135)
CCU-LinkA-Y5-out	4A	(11C/135)
CCU-LinkA-Y6-out	4B	(11C/135)
CCU-LinkA-Y7-out	4C	(11C/135)
CCU-LinkA-Y8-out	4D	(11C/135)
CCU-LinkA-Y9-out	4E	(11C/135)
CCU-LinkA-Y0-out	5A	(10C/135)
CCU-LinkA-Y1-out	5B	(10C/135)
CCU-LinkA-Y2-out	5C	(10C/135)
CCU-LinkA-Y3-out	5D	(10C/135)
CCU-LinkA-Y4-out	5E	(11C/135)
CHU-F-in	7A	(9C/135)
	7B	(9C/135)
	7D	(9C/135)
	7E	(9C/135)
	8D	(9C/135)
	8E	(9C/135)
	9C	(8C/135)
	9D	(8C/135)
	9E	(8C/135)
	10A	(7C/135)
	10B	(7C/135)
	10C	(7C/135)
	10D	(8C/135)
	10E	(8C/135)
MST-74M-CLK-A-in	11A	(7C/135)
Guard-Caps	11B	(7C/135)
MST-HD-H-A-in	11D	(6C/135)
MST-HD-F-A-in	11E	(7C/135)
TEMP-Level-out	15A	(6C/135)
Frame-Timing-out	15D	(6C/135)
	15E	(6C/135)
	16C	(5C/135)
	17A	(4C/135)
	17B	(5C/135)
	17D	(5C/135)
RET-VBS2 (G) -out	17E	(5C/135)
RET-VBS2 (X) -out	18A	(4C/135)
	18B	(4C/135)
	18C	(4C/135)
	18D	(4C/135)
	18E	(4C/135)
	19A	(3C/135)
	19B	(3C/135)
	19C	(3C/135)
	19D	(4C/135)
	19E	(4C/135)
	20C	(3C/135)
nc	25C	(2C/135)
nc	25D	(2C/135)

SDI-87

BOARD NO. 1-867-894-11


HDCU1500_SDI-87_011_1


SDP-12 (1/3)
SUFFIX: -12

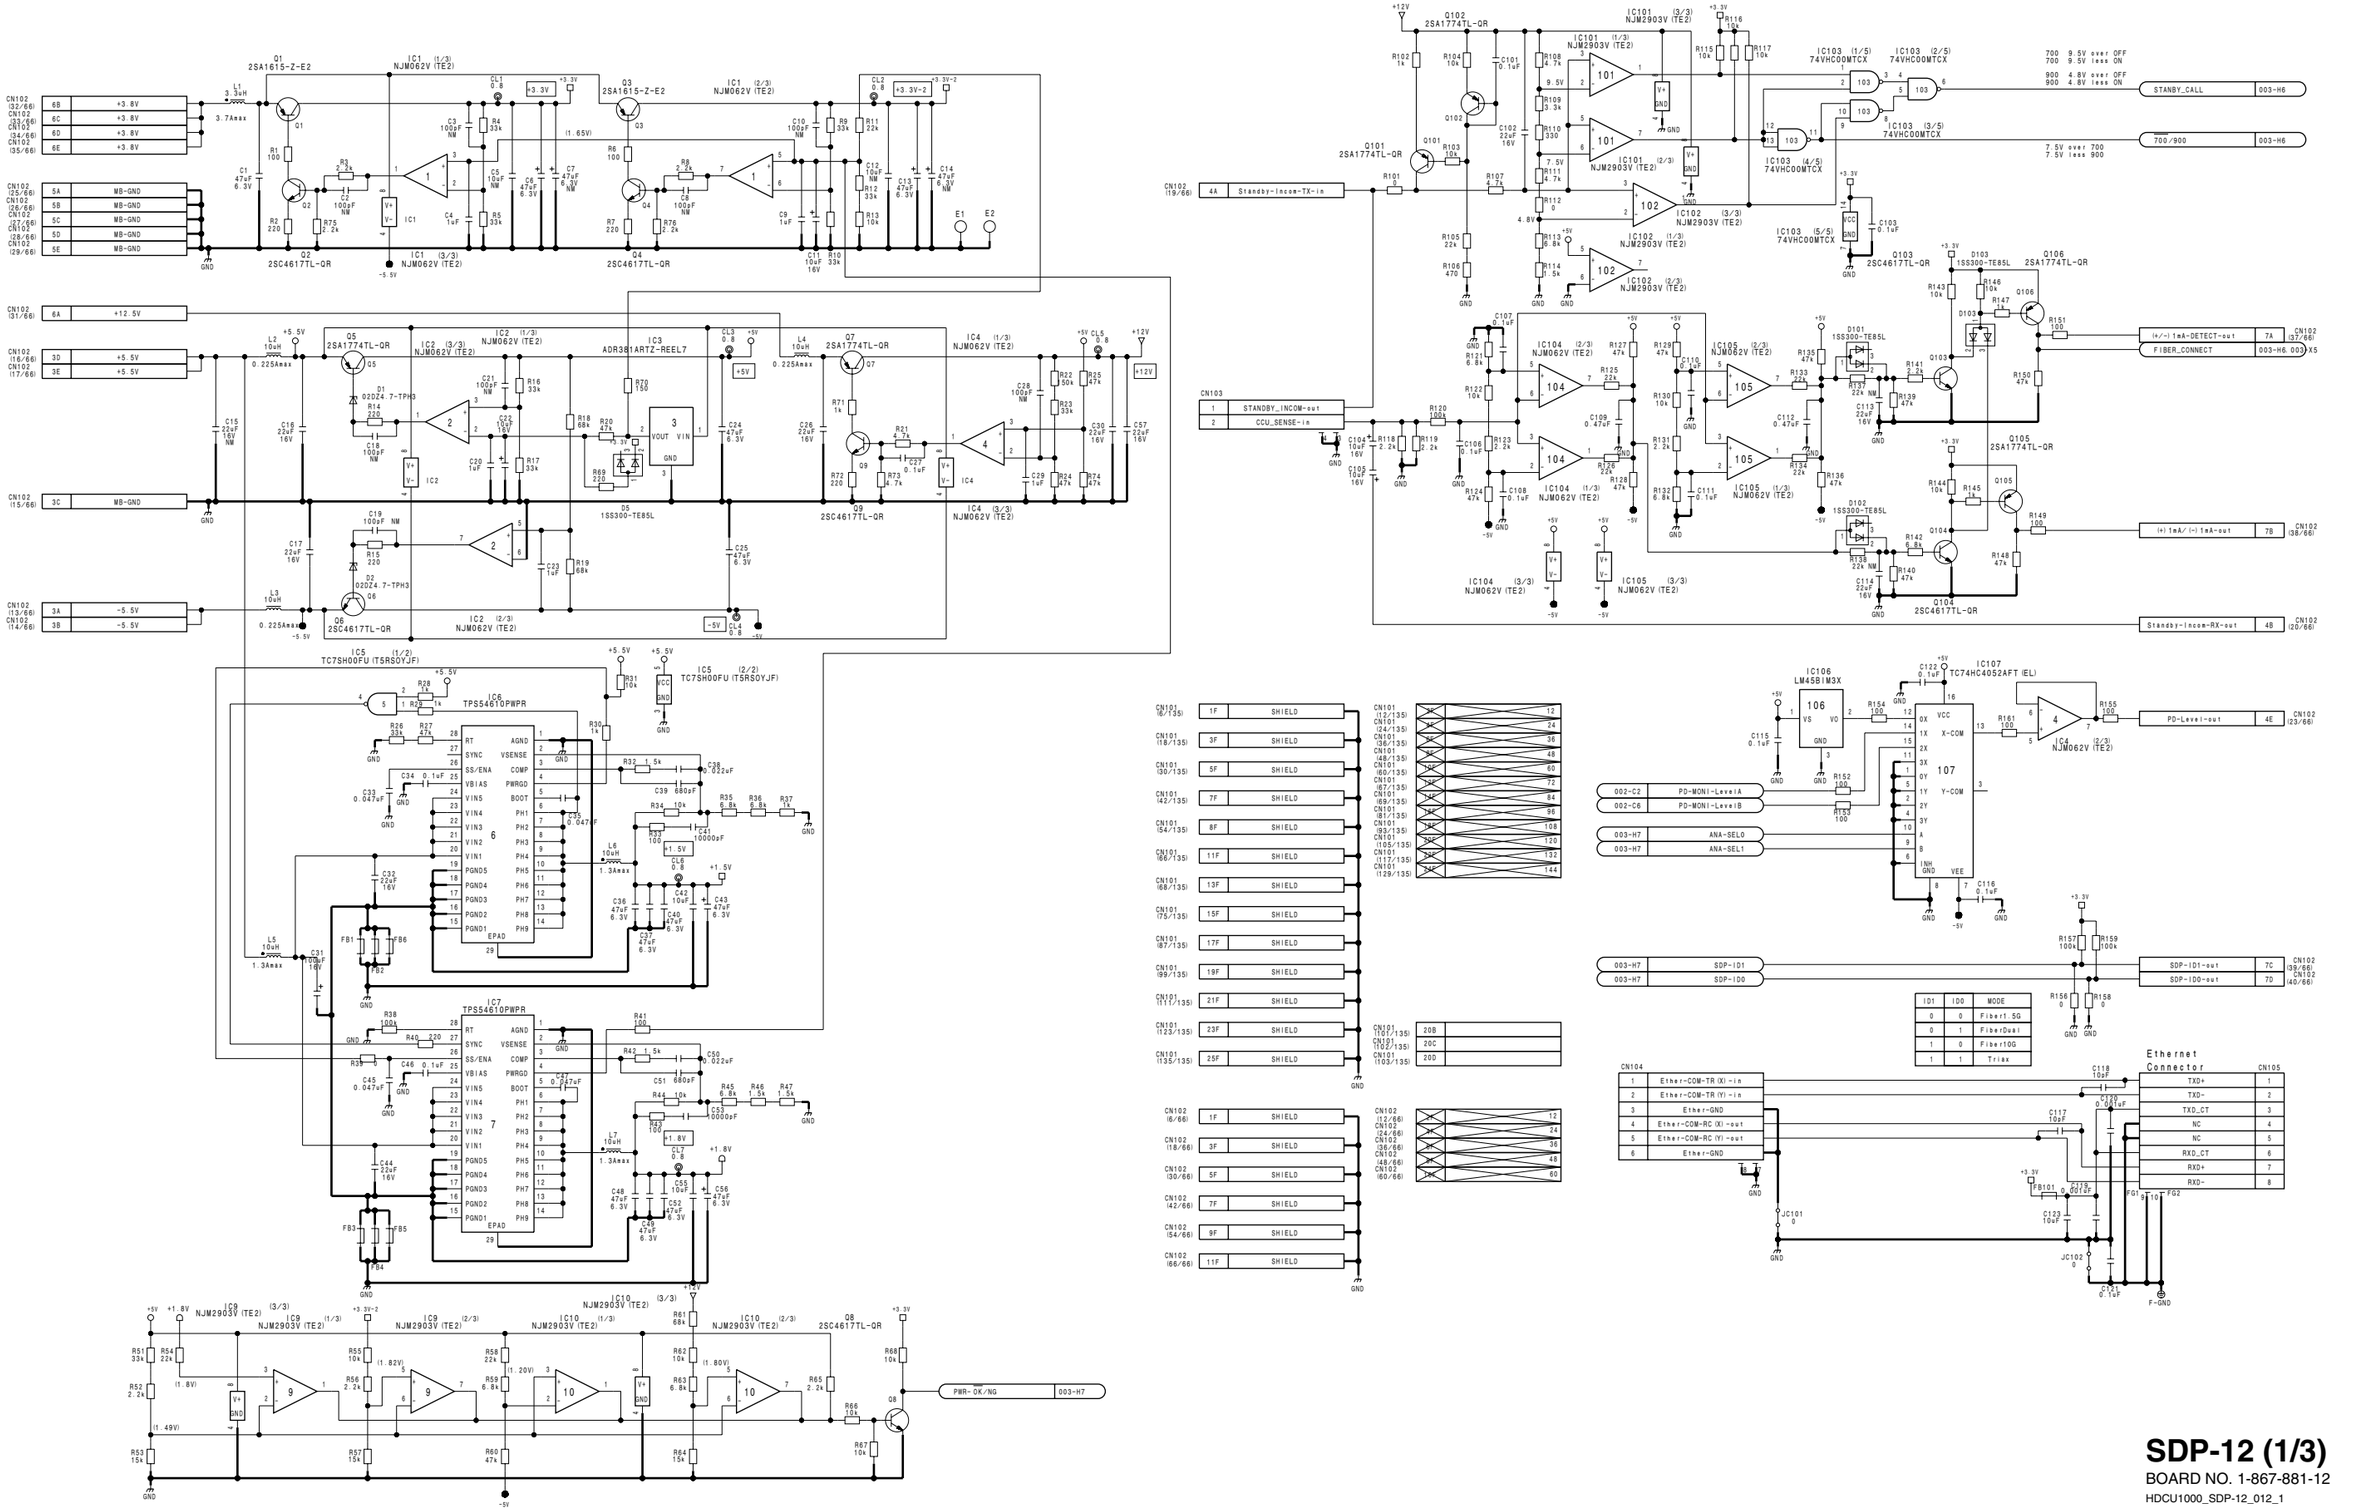

7-83

SDP-12 (1/3)
BOARD NO. 1-867-881-12
HDCU1000_SDP-12_012_1

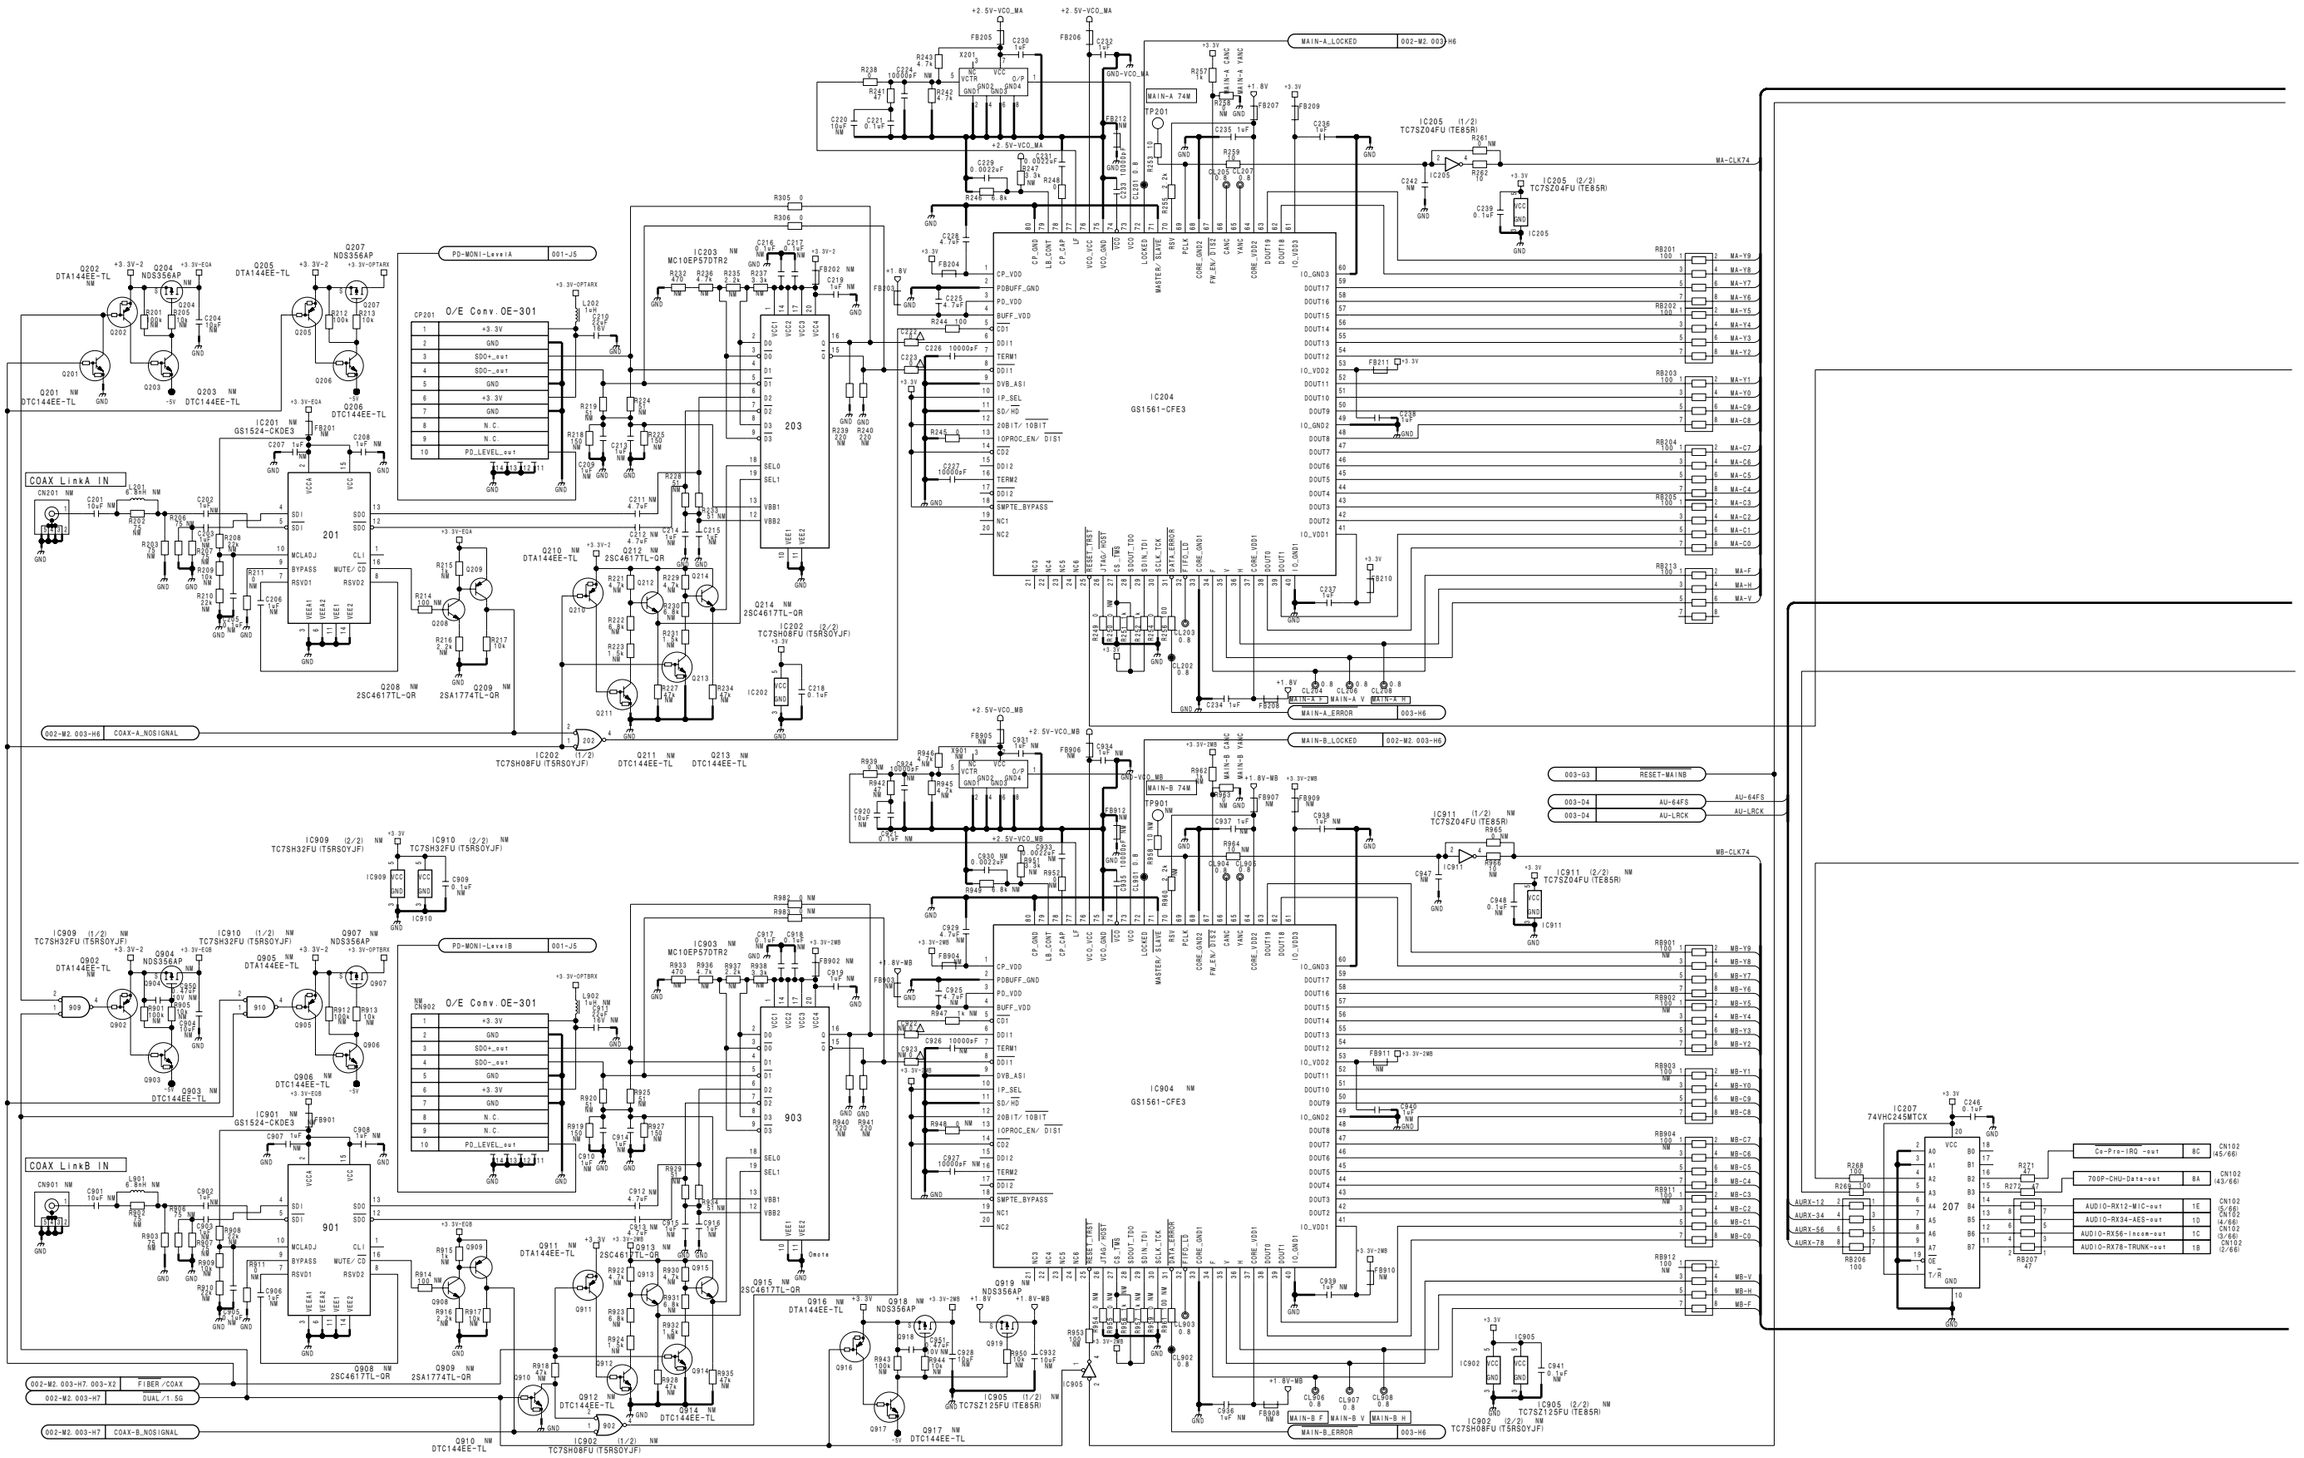
IC204 GS1561-CFE3
IC904 GS1561-CFE3
IC203 MC10EP57DTR2
IC903 MC10EP57DTR2
IC201 GS1524-CKDE3
IC901 GS1524-CKDE3
O/E Conv.OE-301
CP201
CN902
PD-MONI-LevelA
PD-MONI-LevelB
COAX LinkA IN
COAX LinkB IN
MAIN-A 74M
MAIN-B 74M
MAIN-A_LOCKED
MAIN-B_LOCKED
MAIN-A_ERROR
MAIN-B_ERROR
RESET-MAINB
AU-64FS
AU-LRCK
MA-CLK74
MB-CLK74
Cs-Pro-IRQ -out
700P-CHU-Data-out
AUDIO-RX12-MIC-out
AUDIO-RX34-AES-out
AUDIO-RX56-Incom-out
AUDIO-RX78-TRUNK-out
FIBER /COAX
DUAL /1.5G
COAX-A_NOSIGNAL
COAX-B_NOSIGNAL

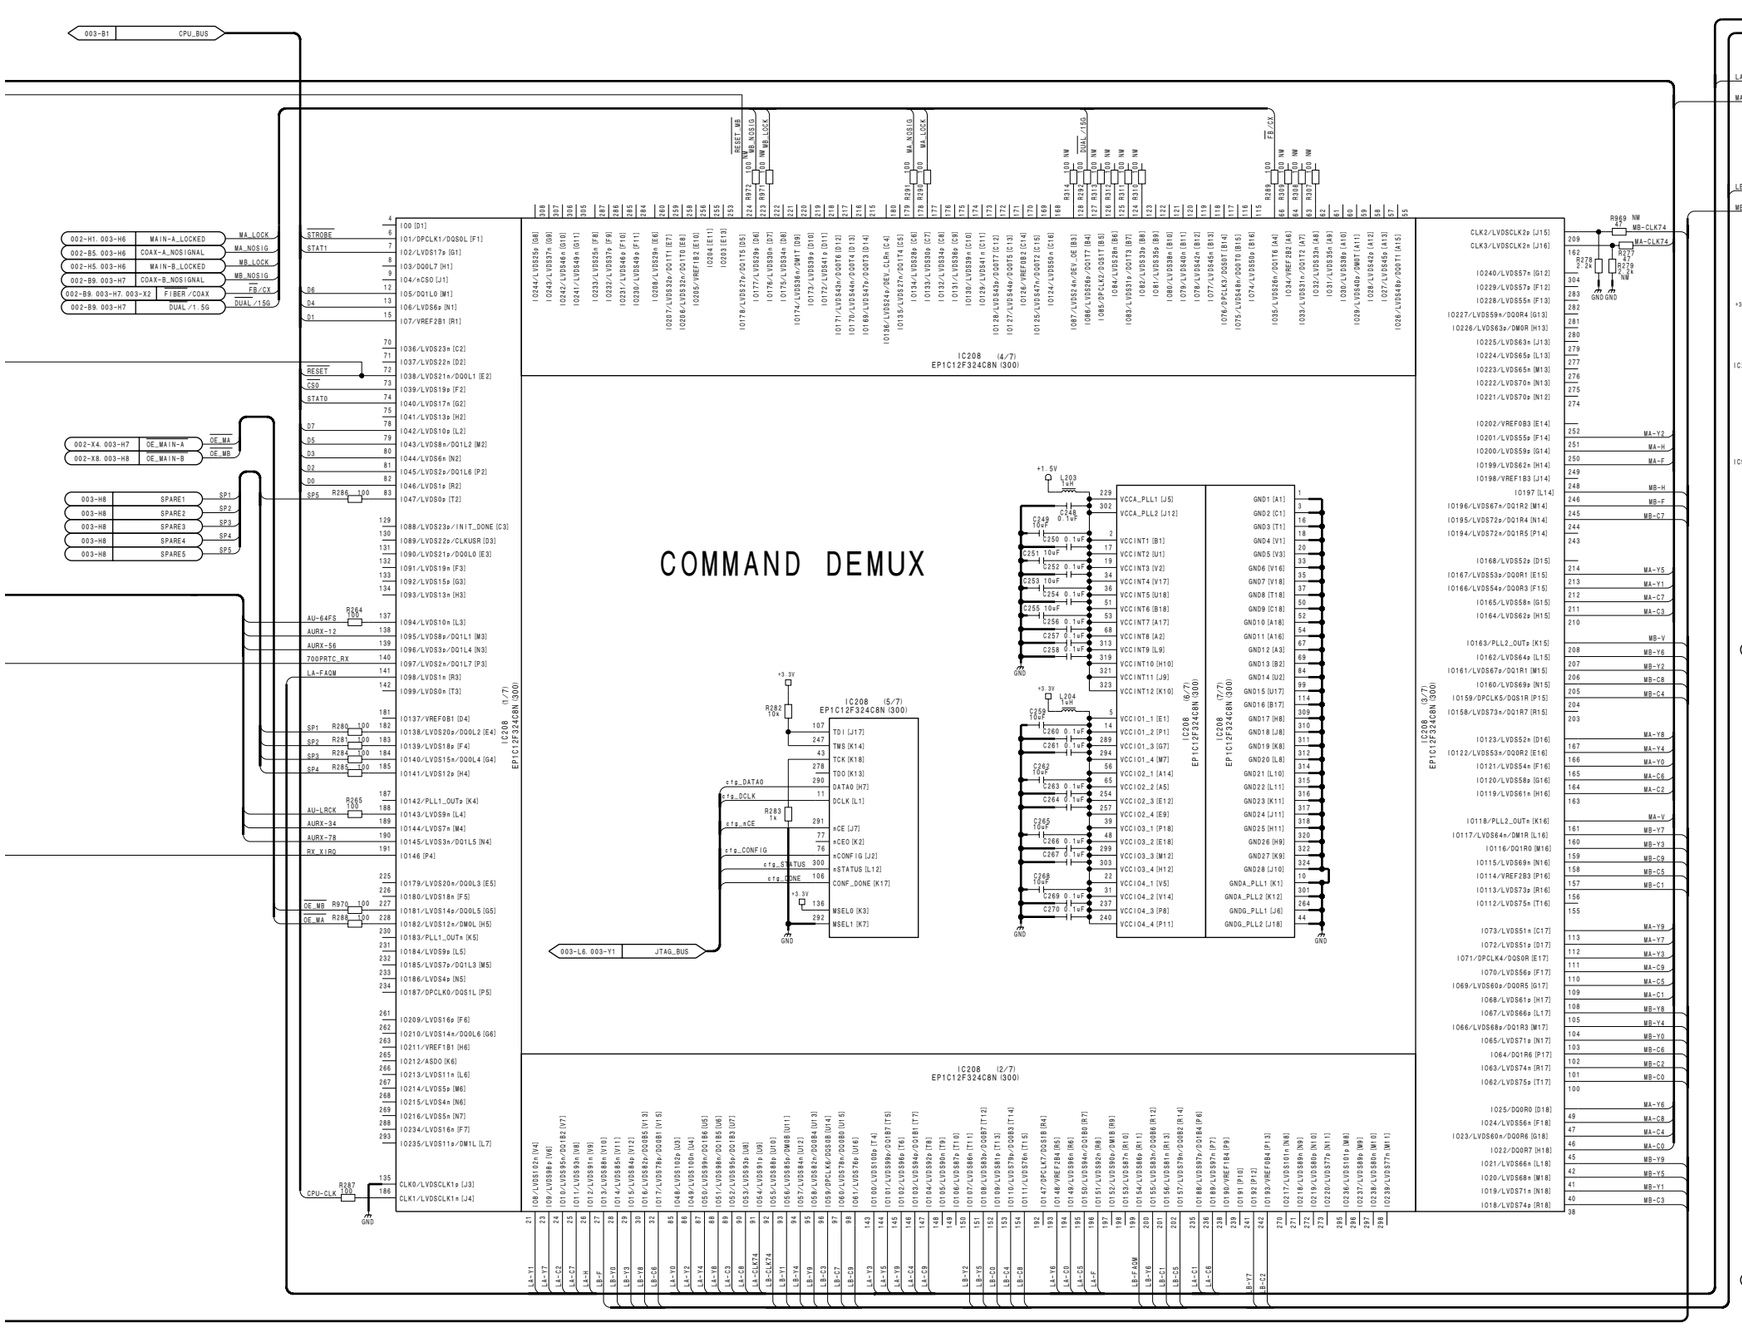


SDP-12 (2/3)

BOARD NO. 1-867-881-12

HDCU1000_SDP-12_012_2


COMMAND MUX


EPR

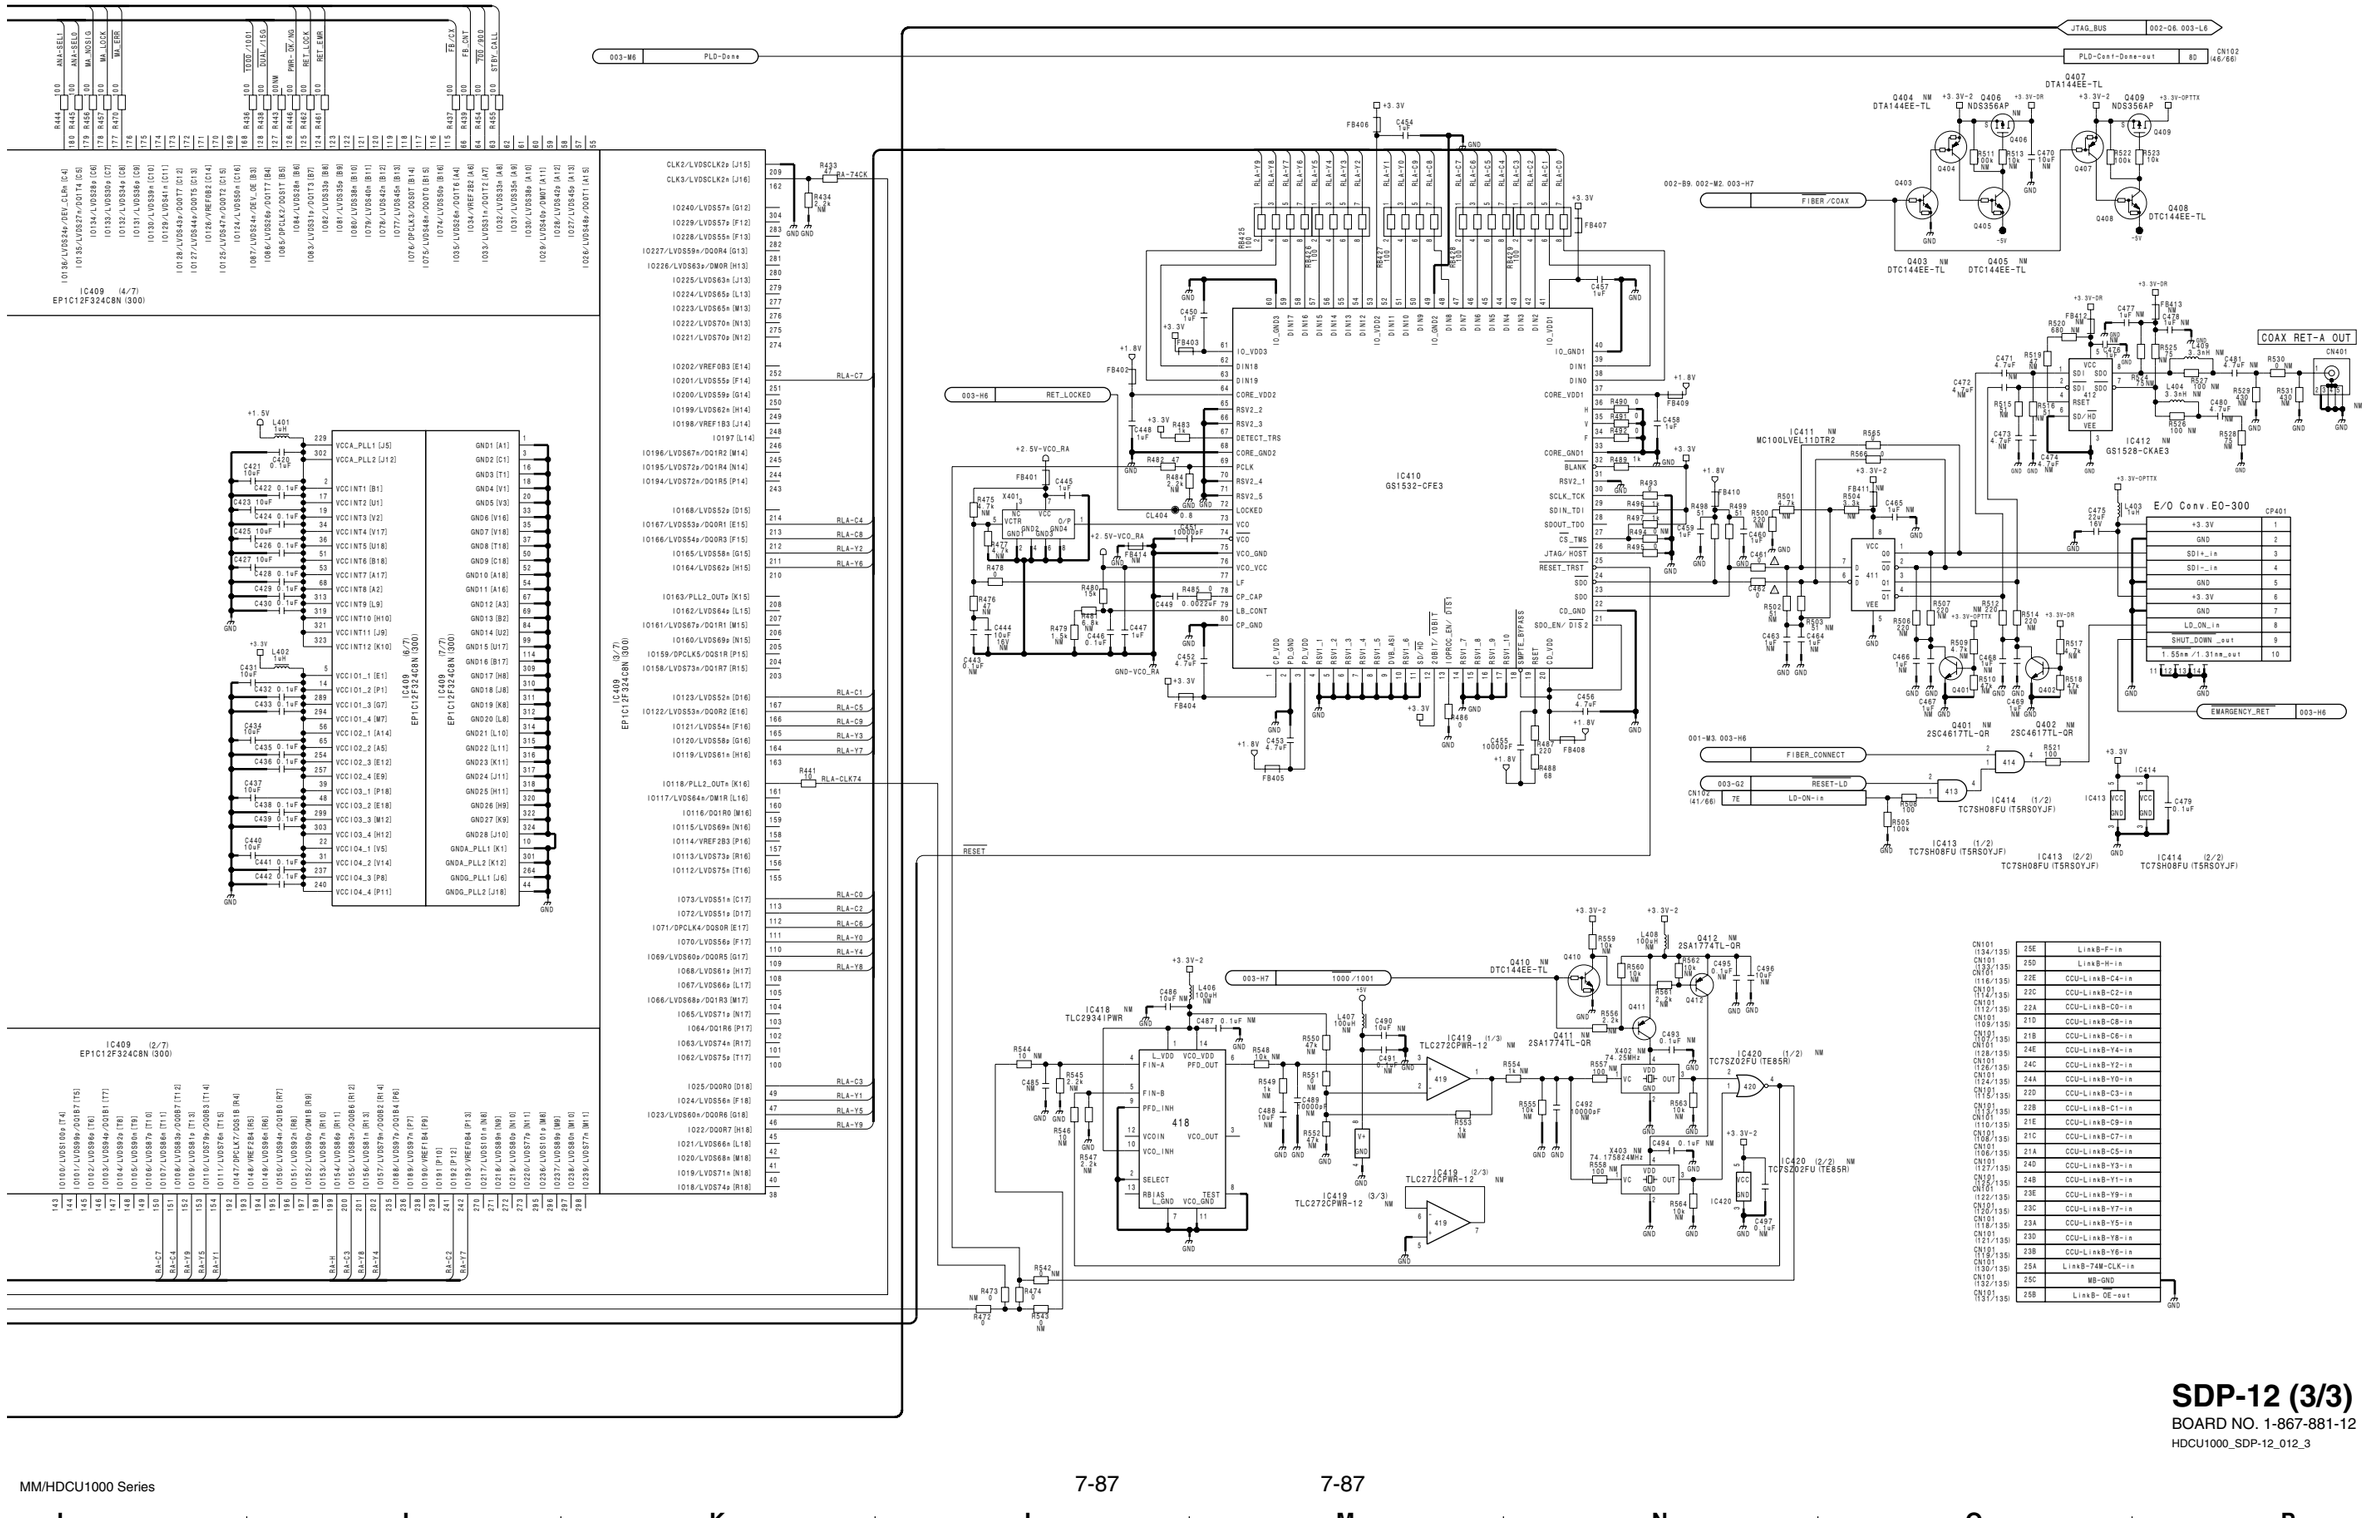
IC409 (4/7) EP1C12F324C8N (300)
IC409 (2/7) EP1C12F324C8N (300)
IC409 (3/7) EP1C12F324C8N (300)
IC409 (6/7) EP1C12F324C8N (300)
IC409 (7/7) EP1C12F324C8N (300)
IC410 GS1532-CFE3
IC411 MC100LVEL11DTR2
IC412 GS1528-CKAE3
IC414 (1/2) TC7SH08FU (T5RSOYJF)
IC414 (2/2) TC7SH08FU (T5RSOYJF)
IC413 (1/2) TC7SH08FU (T5RSOYJF)
IC413 (2/2) TC7SH08FU (T5RSOYJF)
IC418 TLC29341PWR
IC419 (1/3) TLC272CPWR-12
IC419 (2/3) TLC272CPWR-12
IC419 (3/3) TLC272CPWR-12
IC420 (1/2) TC7SZ02FU (TE85R)
IC420 (2/2) TC7SZ02FU (TE85R)
E/O Conv.EO-300
COAX RET-A OUT
EMERGENCY_RET
FIBER /COAX
FIBER_CONNECT
RESET-LD
LD-ON-in
RET_LOCKED
RESET
PLD-Done
PLD-Conf-Done-out
JTAG_BUS
002-Q6.003-L6
002-B9.002-M2.003-H7
003-M6
003-H6
001-M3.003-H6
003-G2
003-H7
1000/1001
CN102 (46/66)
CN112 (41/66)
CN101 (134/135)
CN101 (133/135)
CN101 (116/135)
CN101 (114/135)
CN101 (112/135)
CN101 (109/135)
CN101 (107/135)
CN101 (128/135)
CN101 (126/135)
CN101 (124/135)
CN101 (123/135)
CN101 (122/135)
CN101 (120/135)
CN101 (118/135)
CN101 (121/135)
CN101 (116/135)
CN101 (130/135)
CN101 (132/135)
CN101 (131/135)
CN401
CP401
25E LinkB-F-in
25D LinkB-H-in
22E CCU-LinkB-C4-in
22C CCU-LinkB-C2-in
22A CCU-LinkB-C0-in
21D CCU-LinkB-C8-in
21B CCU-LinkB-C6-in
24E CCU-LinkB-Y4-in
24C CCU-LinkB-Y2-in
24A CCU-LinkB-Y0-in
22D CCU-LinkB-C3-in
22B CCU-LinkB-C1-in
21E CCU-LinkB-C9-in
21C CCU-LinkB-C7-in
21A CCU-LinkB-C5-in
24D CCU-LinkB-Y3-in
24B CCU-LinkB-Y1-in
23E CCU-LinkB-Y9-in
23C CCU-LinkB-Y7-in
23A CCU-LinkB-Y5-in
23D CCU-LinkB-Y8-in
23B CCU-LinkB-Y6-in
25A LinkB-74M-CLK-in
25C MB-GND
25B LinkB-OE-out
+3.3V
GND
SDI+_in
SDI-_in
+3.3V
LD_ON_in
SHUT_DOWN _out
1.55nm/1.31nm_out
RLA-C7
RLA-C4
RLA-C8
RLA-Y2
RLA-Y6
RLA-C1
RLA-C5
RLA-C9
RLA-Y3
RLA-Y7
RLA-CLK74
RLA-C0
RLA-C2
RLA-C6
RLA-Y0
RLA-Y4
RLA-Y8
RLA-C3
RLA-Y1
RLA-Y5
RLA-Y9
RLA-H4
RLA-C3
RLA-H8
RLA-H3
RLA-H7
RLA-C2
RLA-H2
RLA-H6
RLA-H1
RLA-H5
RLA-C6
RLA-H0
RLA-C7
RLA-C4
RLA-H9
RLA-C8
RLA-Y2
RLA-Y6
RLA-C1
RLA-C5
RLA-C9
RLA-Y3
RLA-Y7
RLA-CLK74
RLA-C0
RLA-C2
RLA-C6
RLA-Y0
RLA-Y4
RLA-Y8
RLA-C3
RLA-Y1
RLA-Y5
RLA-Y9

SDP-12 (1/3)
SUFFIX: -11


SDP-12 (1/3)
SUFFIX: -11

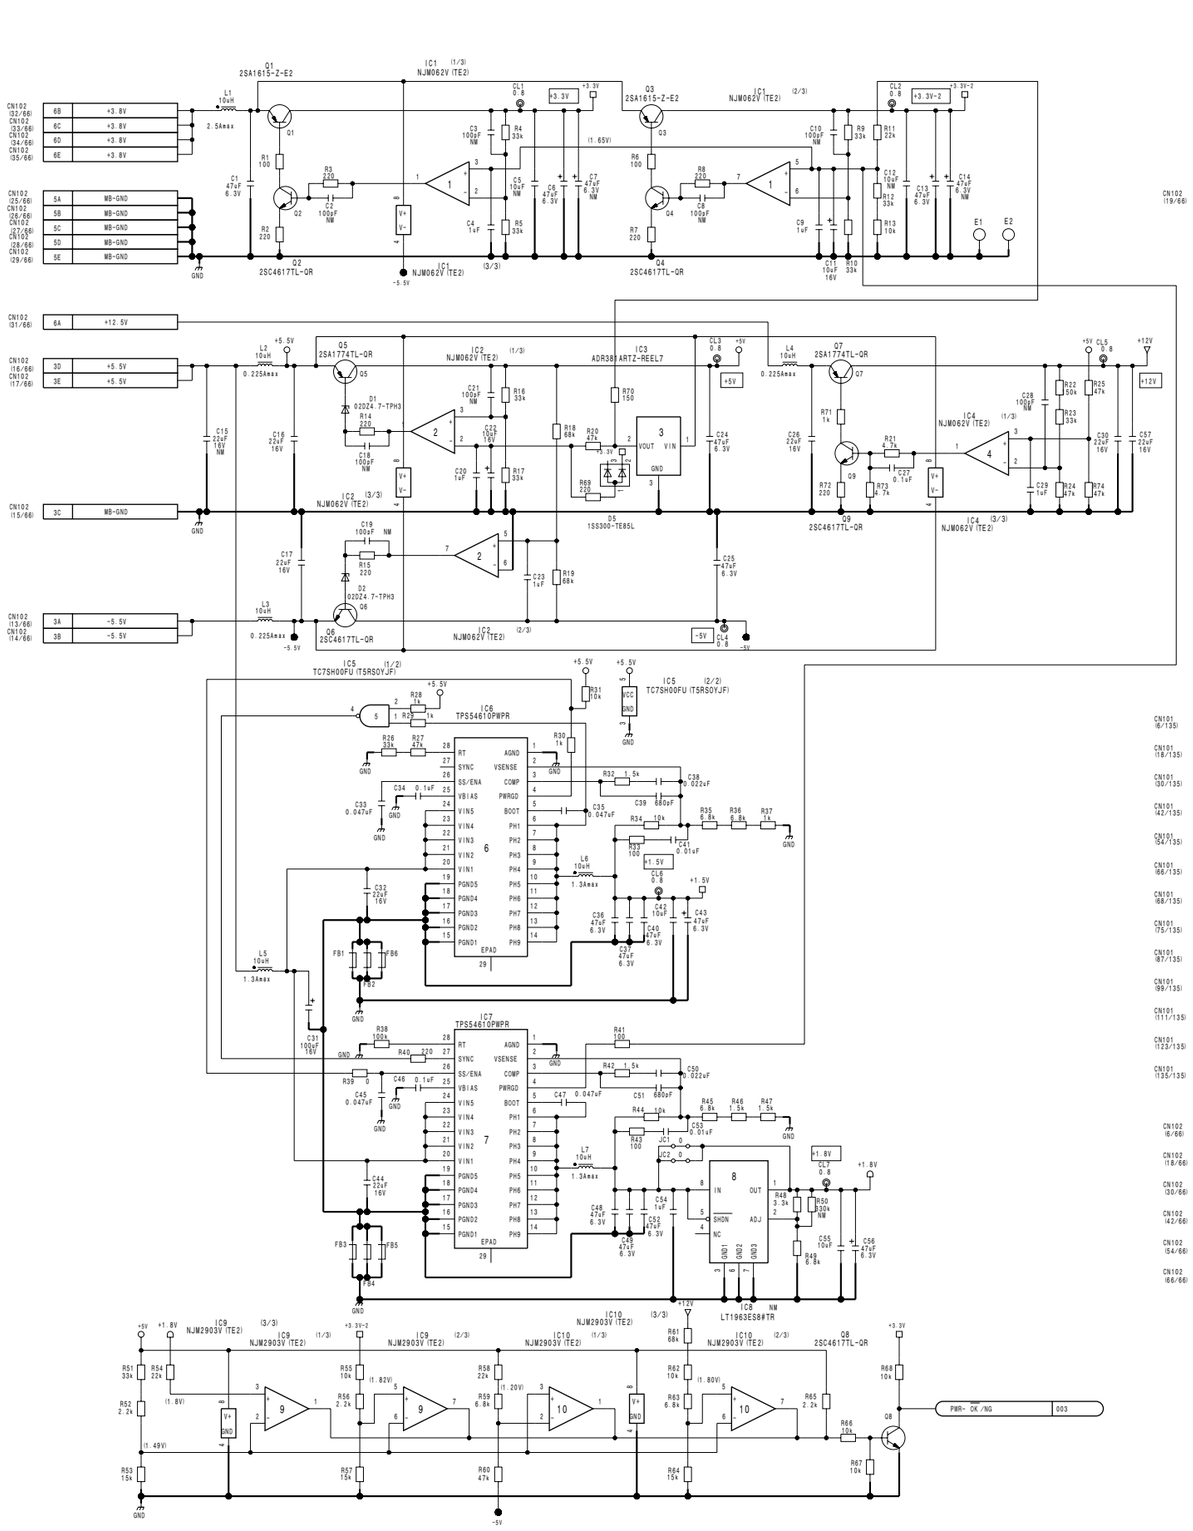

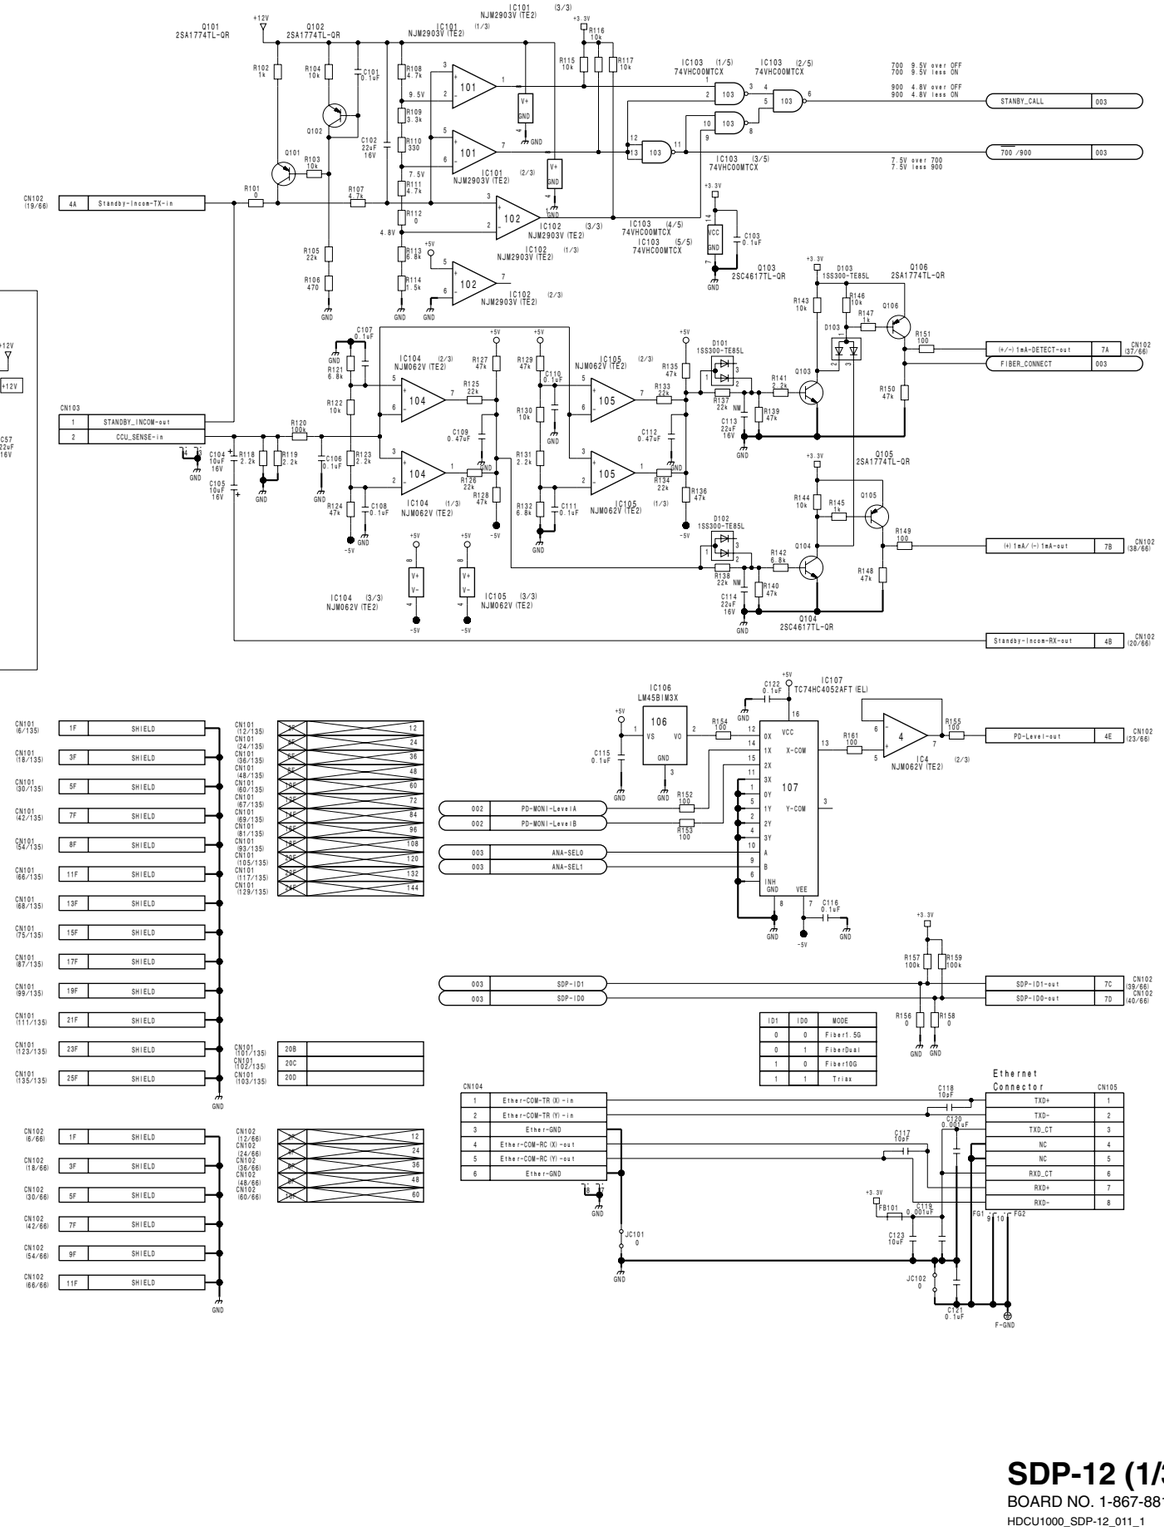

SDP-12 (1/3)
BOARD NO. 1-867-881-11
HDCU1000_SDP-12_011_1

SDP-12 (2/3) **SUFFIX: -11**

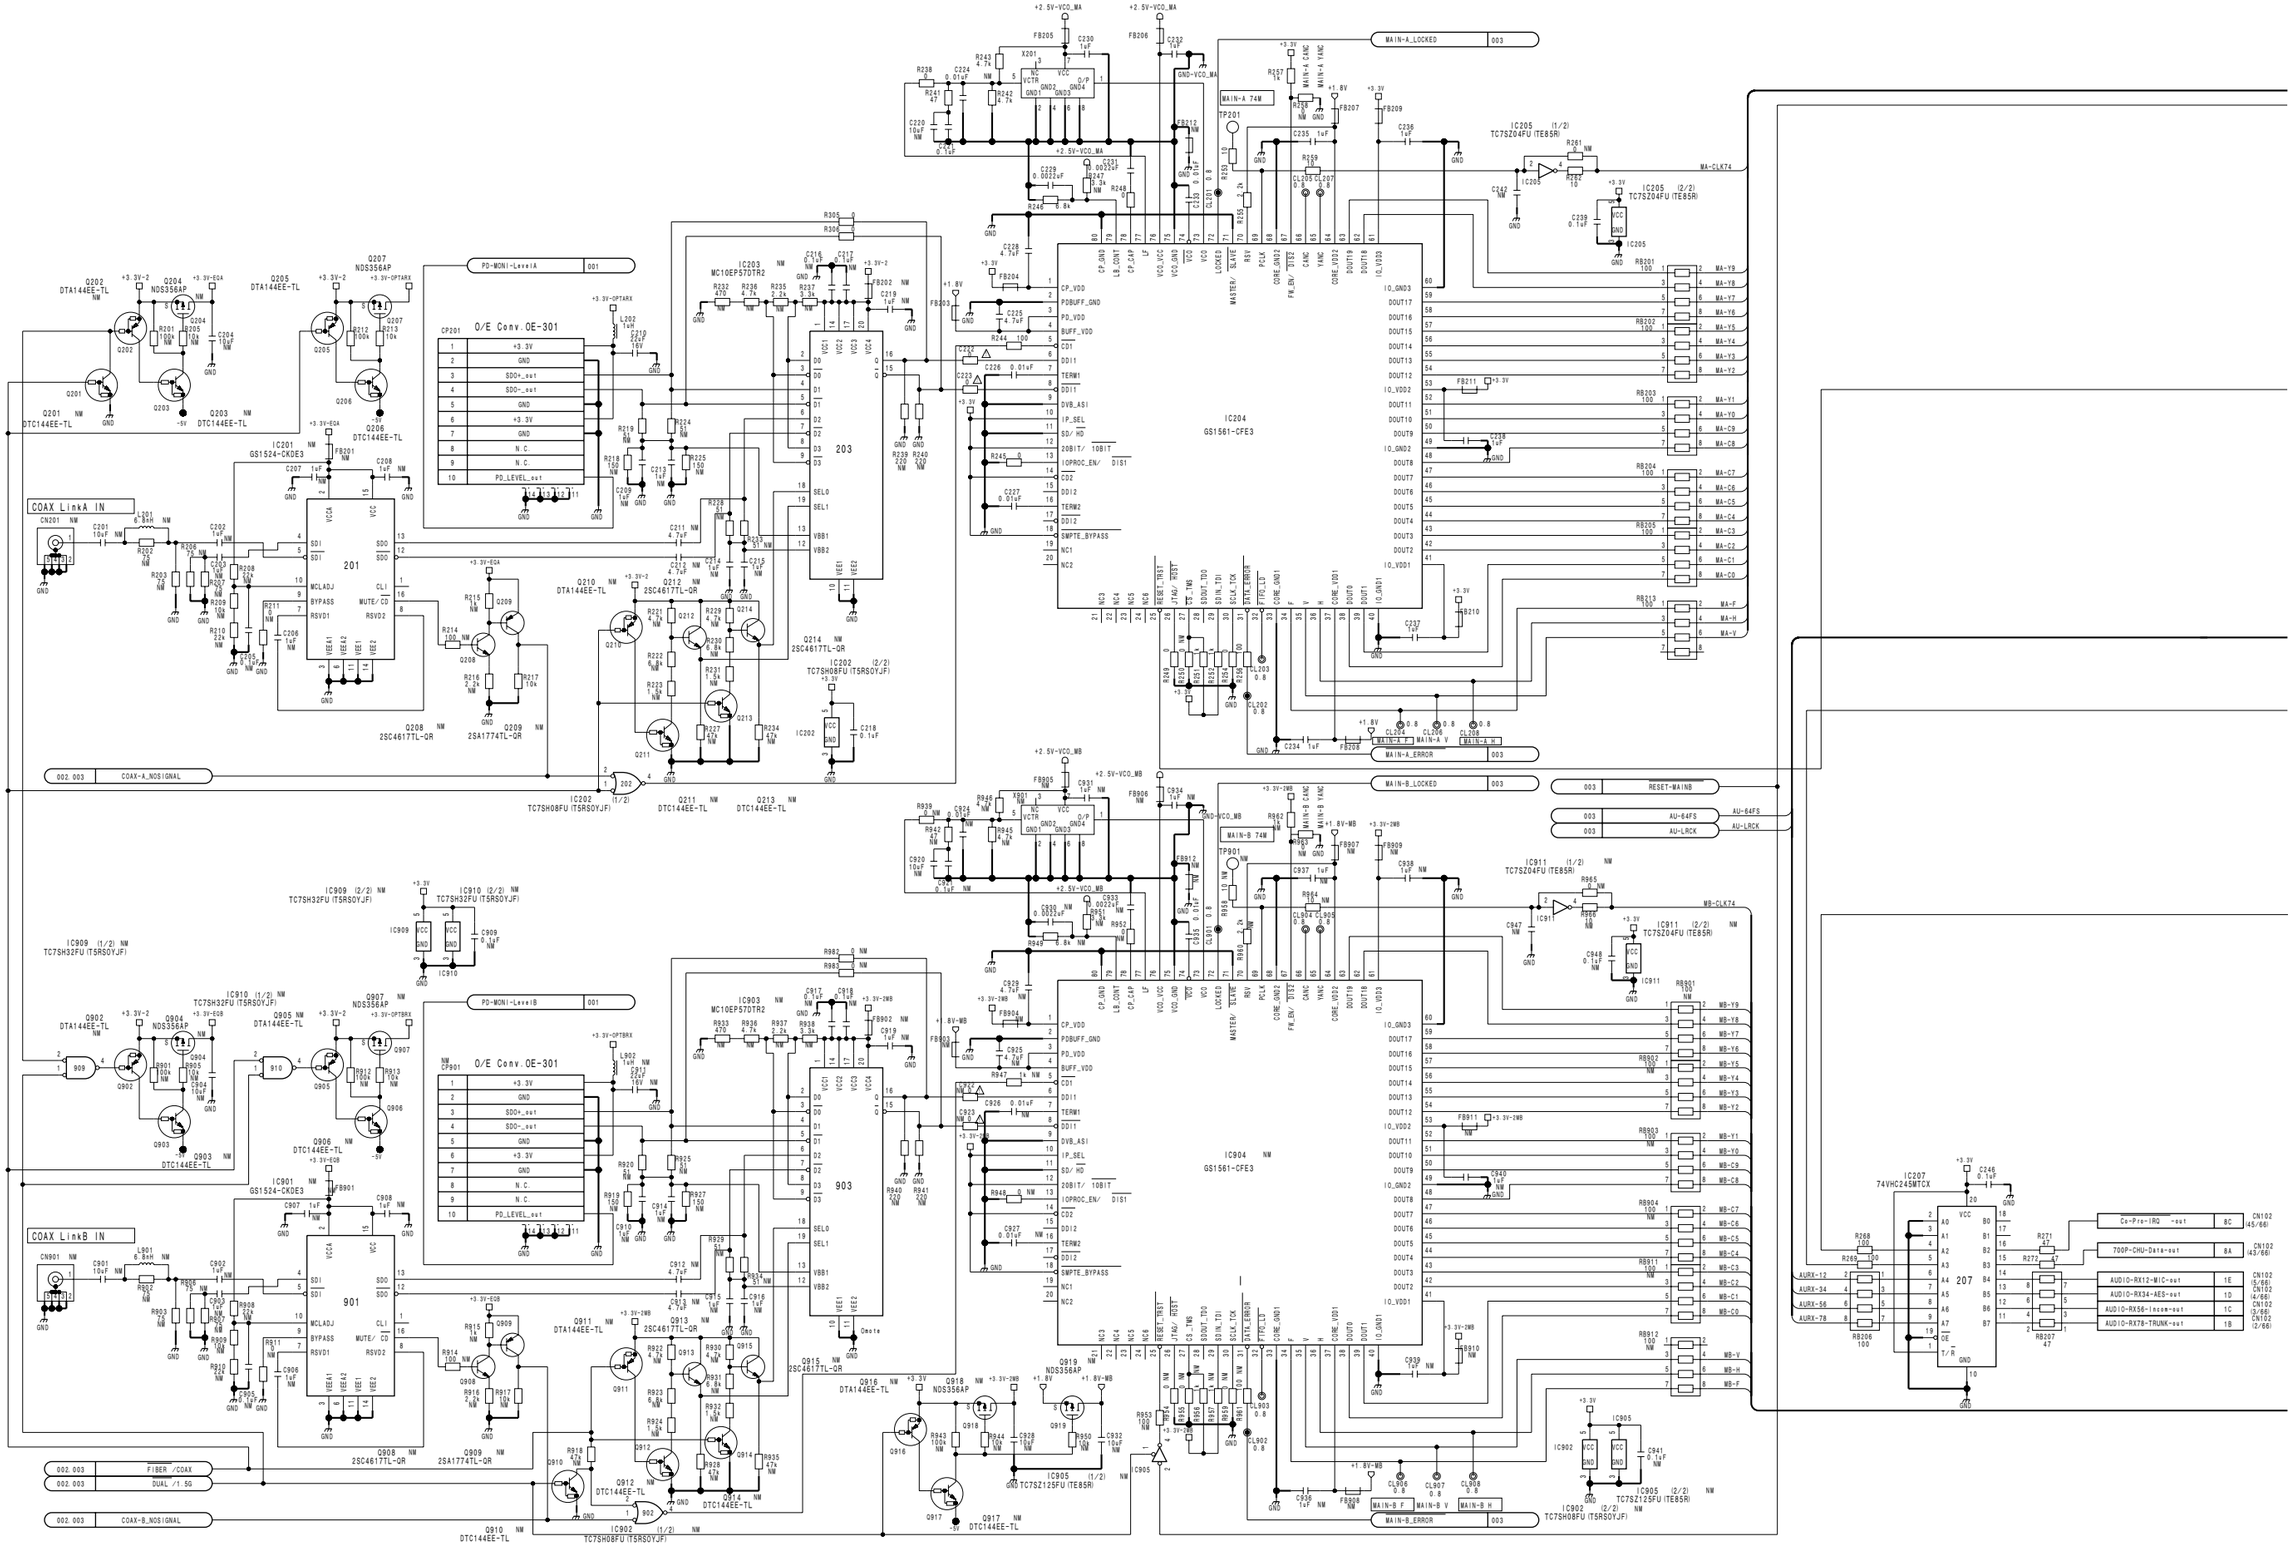

COMMAND DEMUX

IC208 (4/7) EP1C12F324C8N (300)

IC208 (5/7) EP1C12F324C8N (300)

IC208 (6/7) EP1C12F324C8N (300)

IC208 (7/7) EP1C12F324C8N (300)

IC208 (2/7) EP1C12F324C8N (300)

IC208 (1/7) EP1C12F324C8N (300)

IC209 (1/2) TC7SZ00FU (TE85R)

IC213 (1/2) TC7SZ00FU (TE85R)

IC912 (1/2) NM TC7SZ00FU (TE85R)

IC913 (1/2) NM TC7SZ00FU (TE85R)

IC209 (2/2) TC7SZ00FU (TE85R)

IC213 (2/2) TC7SZ00FU (TE85R)

IC912 (2/2) NM TC7SZ00FU (TE85R)

IC913 (2/2) NM TC7SZ00FU (TE85R)

IC210 SN74LVC574APWR

IC211 SN74LVC574APWR

IC212 SN74LVC574APWR

IC906 NM SN74LVC574APWR

IC907 NM SN74LVC574APWR

IC908 NM SN74LVC574APWR

SDP-12 (2/3)
BOARD NO. 1-867-881-11
HDCU1000_SDP-12_011_2


SDP-12 (3/3) **SUFFIX: -11**

COMMAND MUX


EPR


SDP-12 (3/3)
SUFFIX: -11


SDP-12 (3/3)
SUFFIX: -11

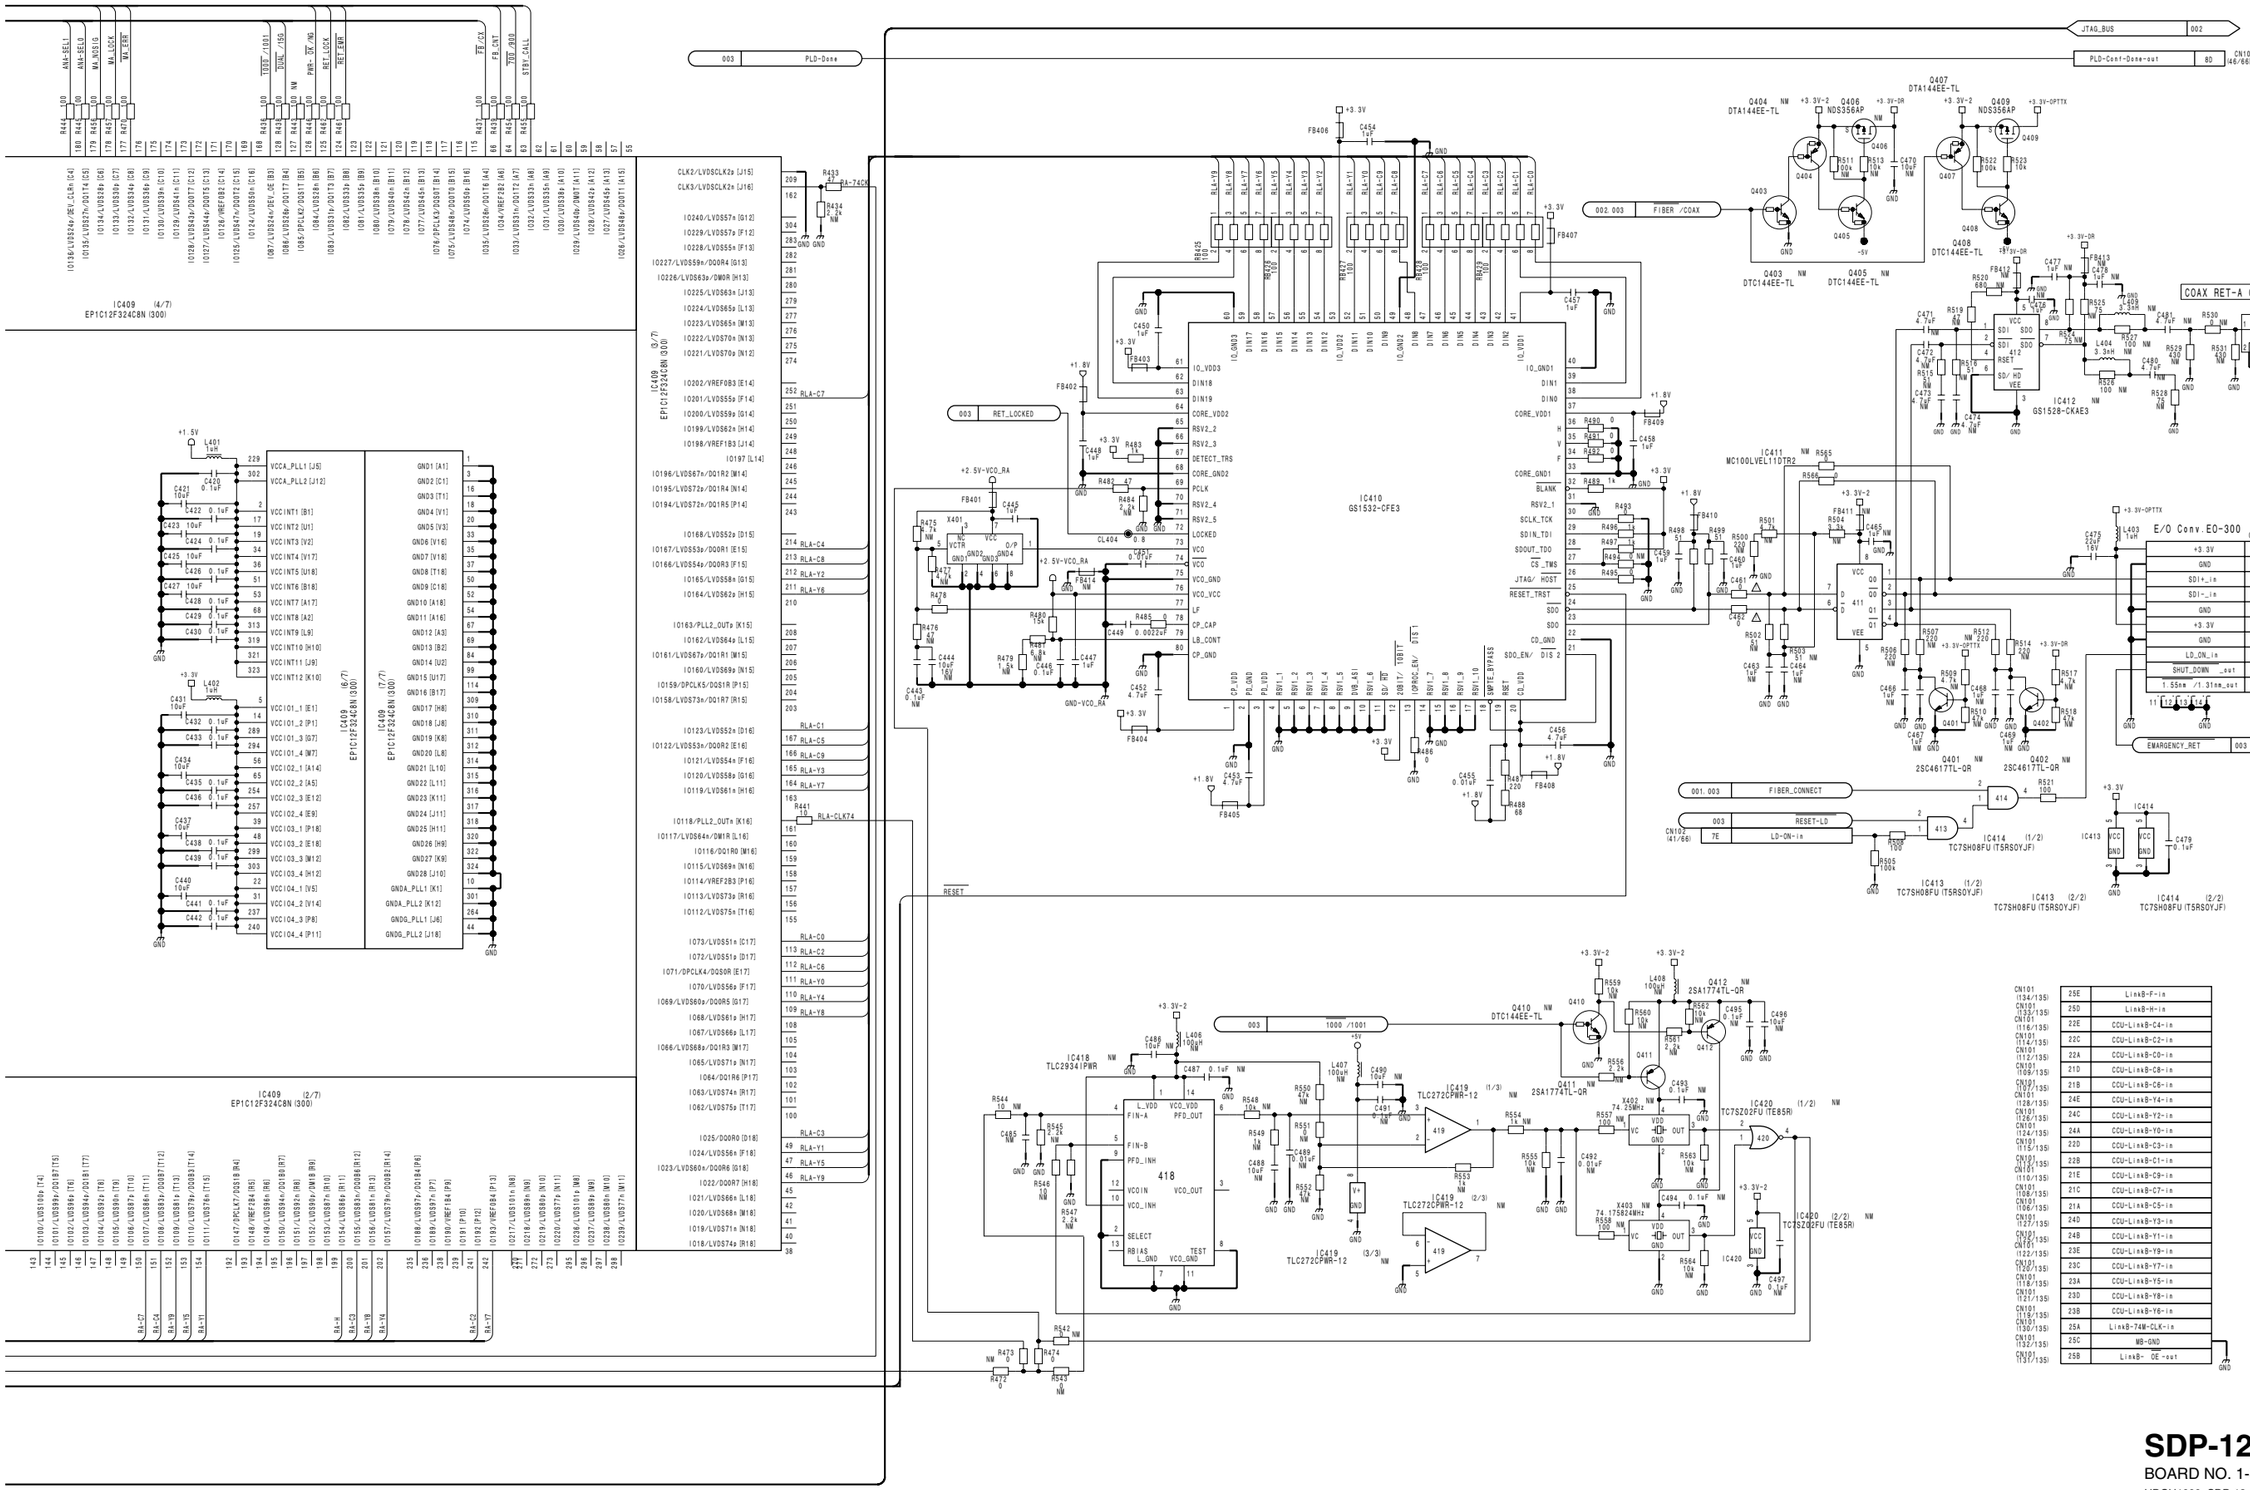


SDP-12 (3/3)
BOARD NO. 1-867-881-11
HDCU1000_SDP-12_011_3

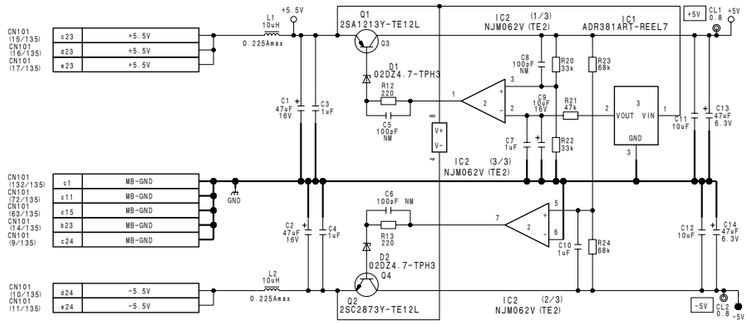





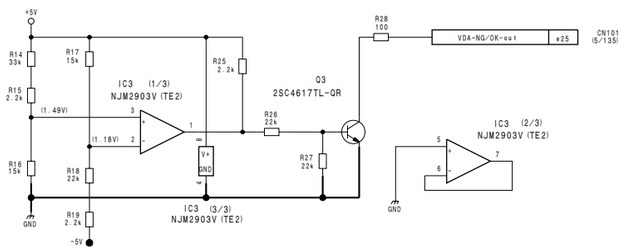


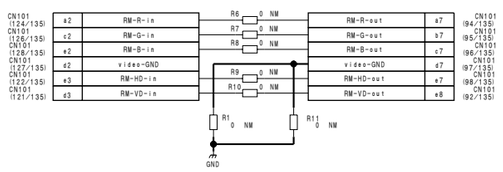





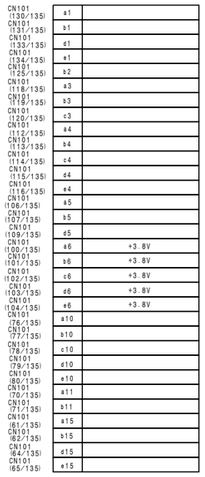

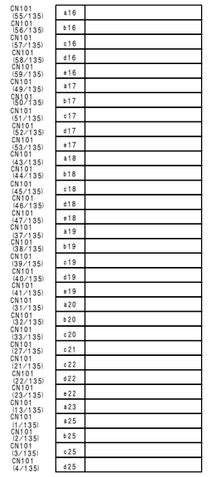

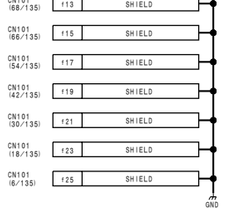

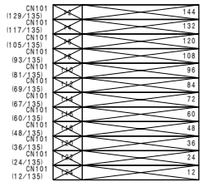


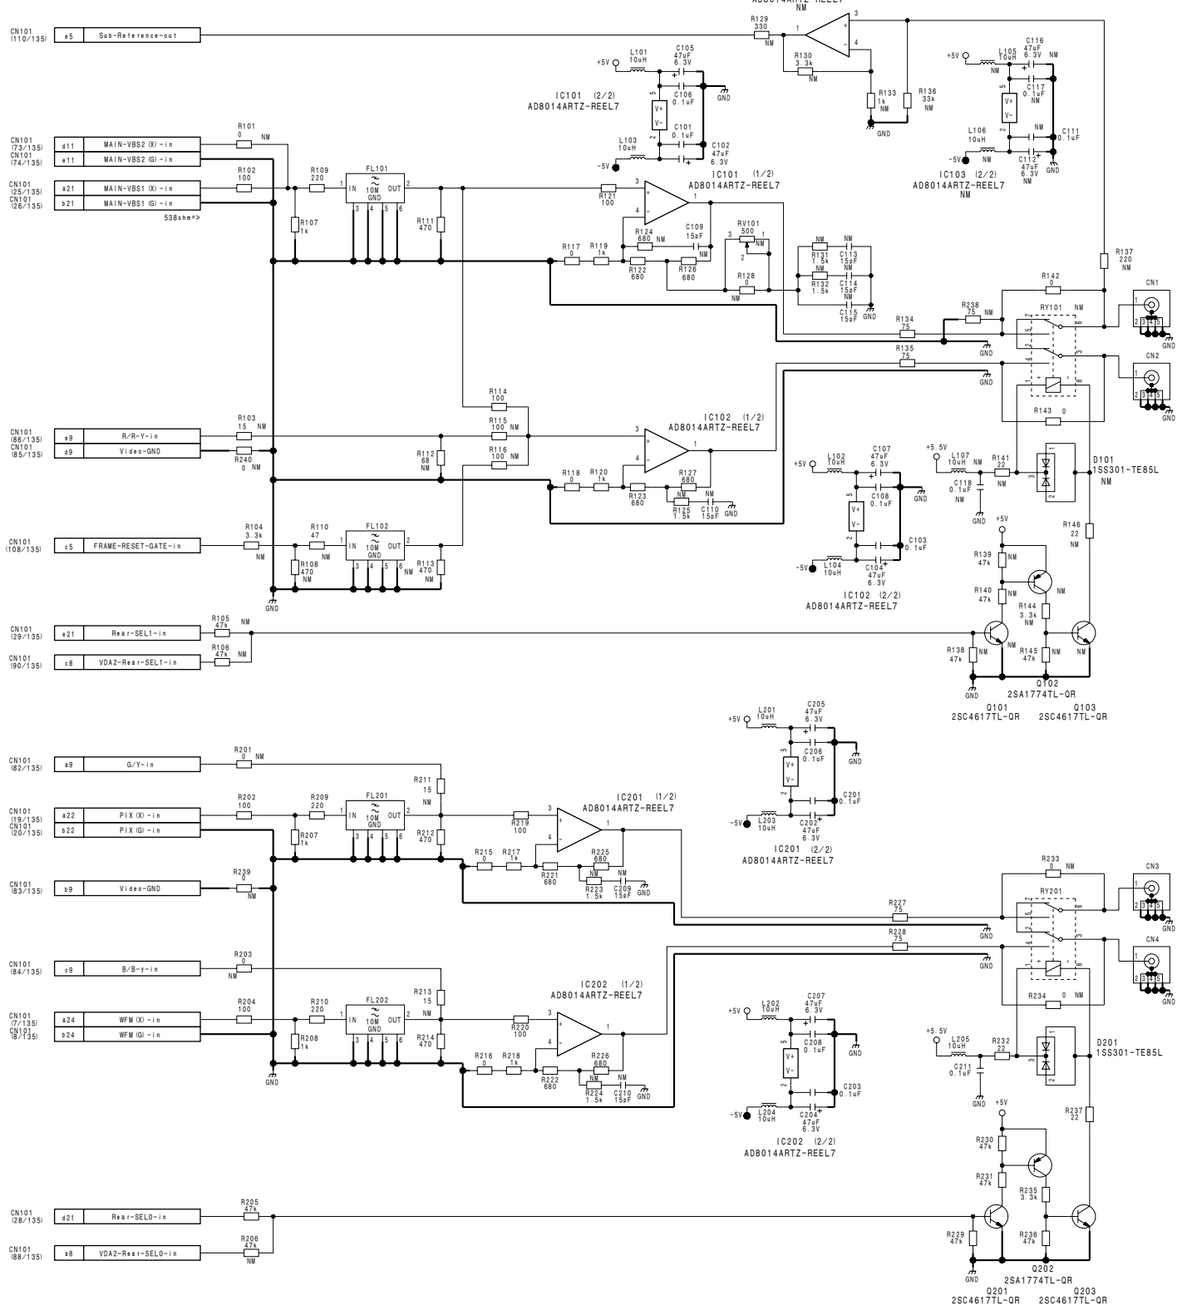

VDA-64A

BOARD NO. 1-868-003-11


HKCU1001_VDA-64A_011_1

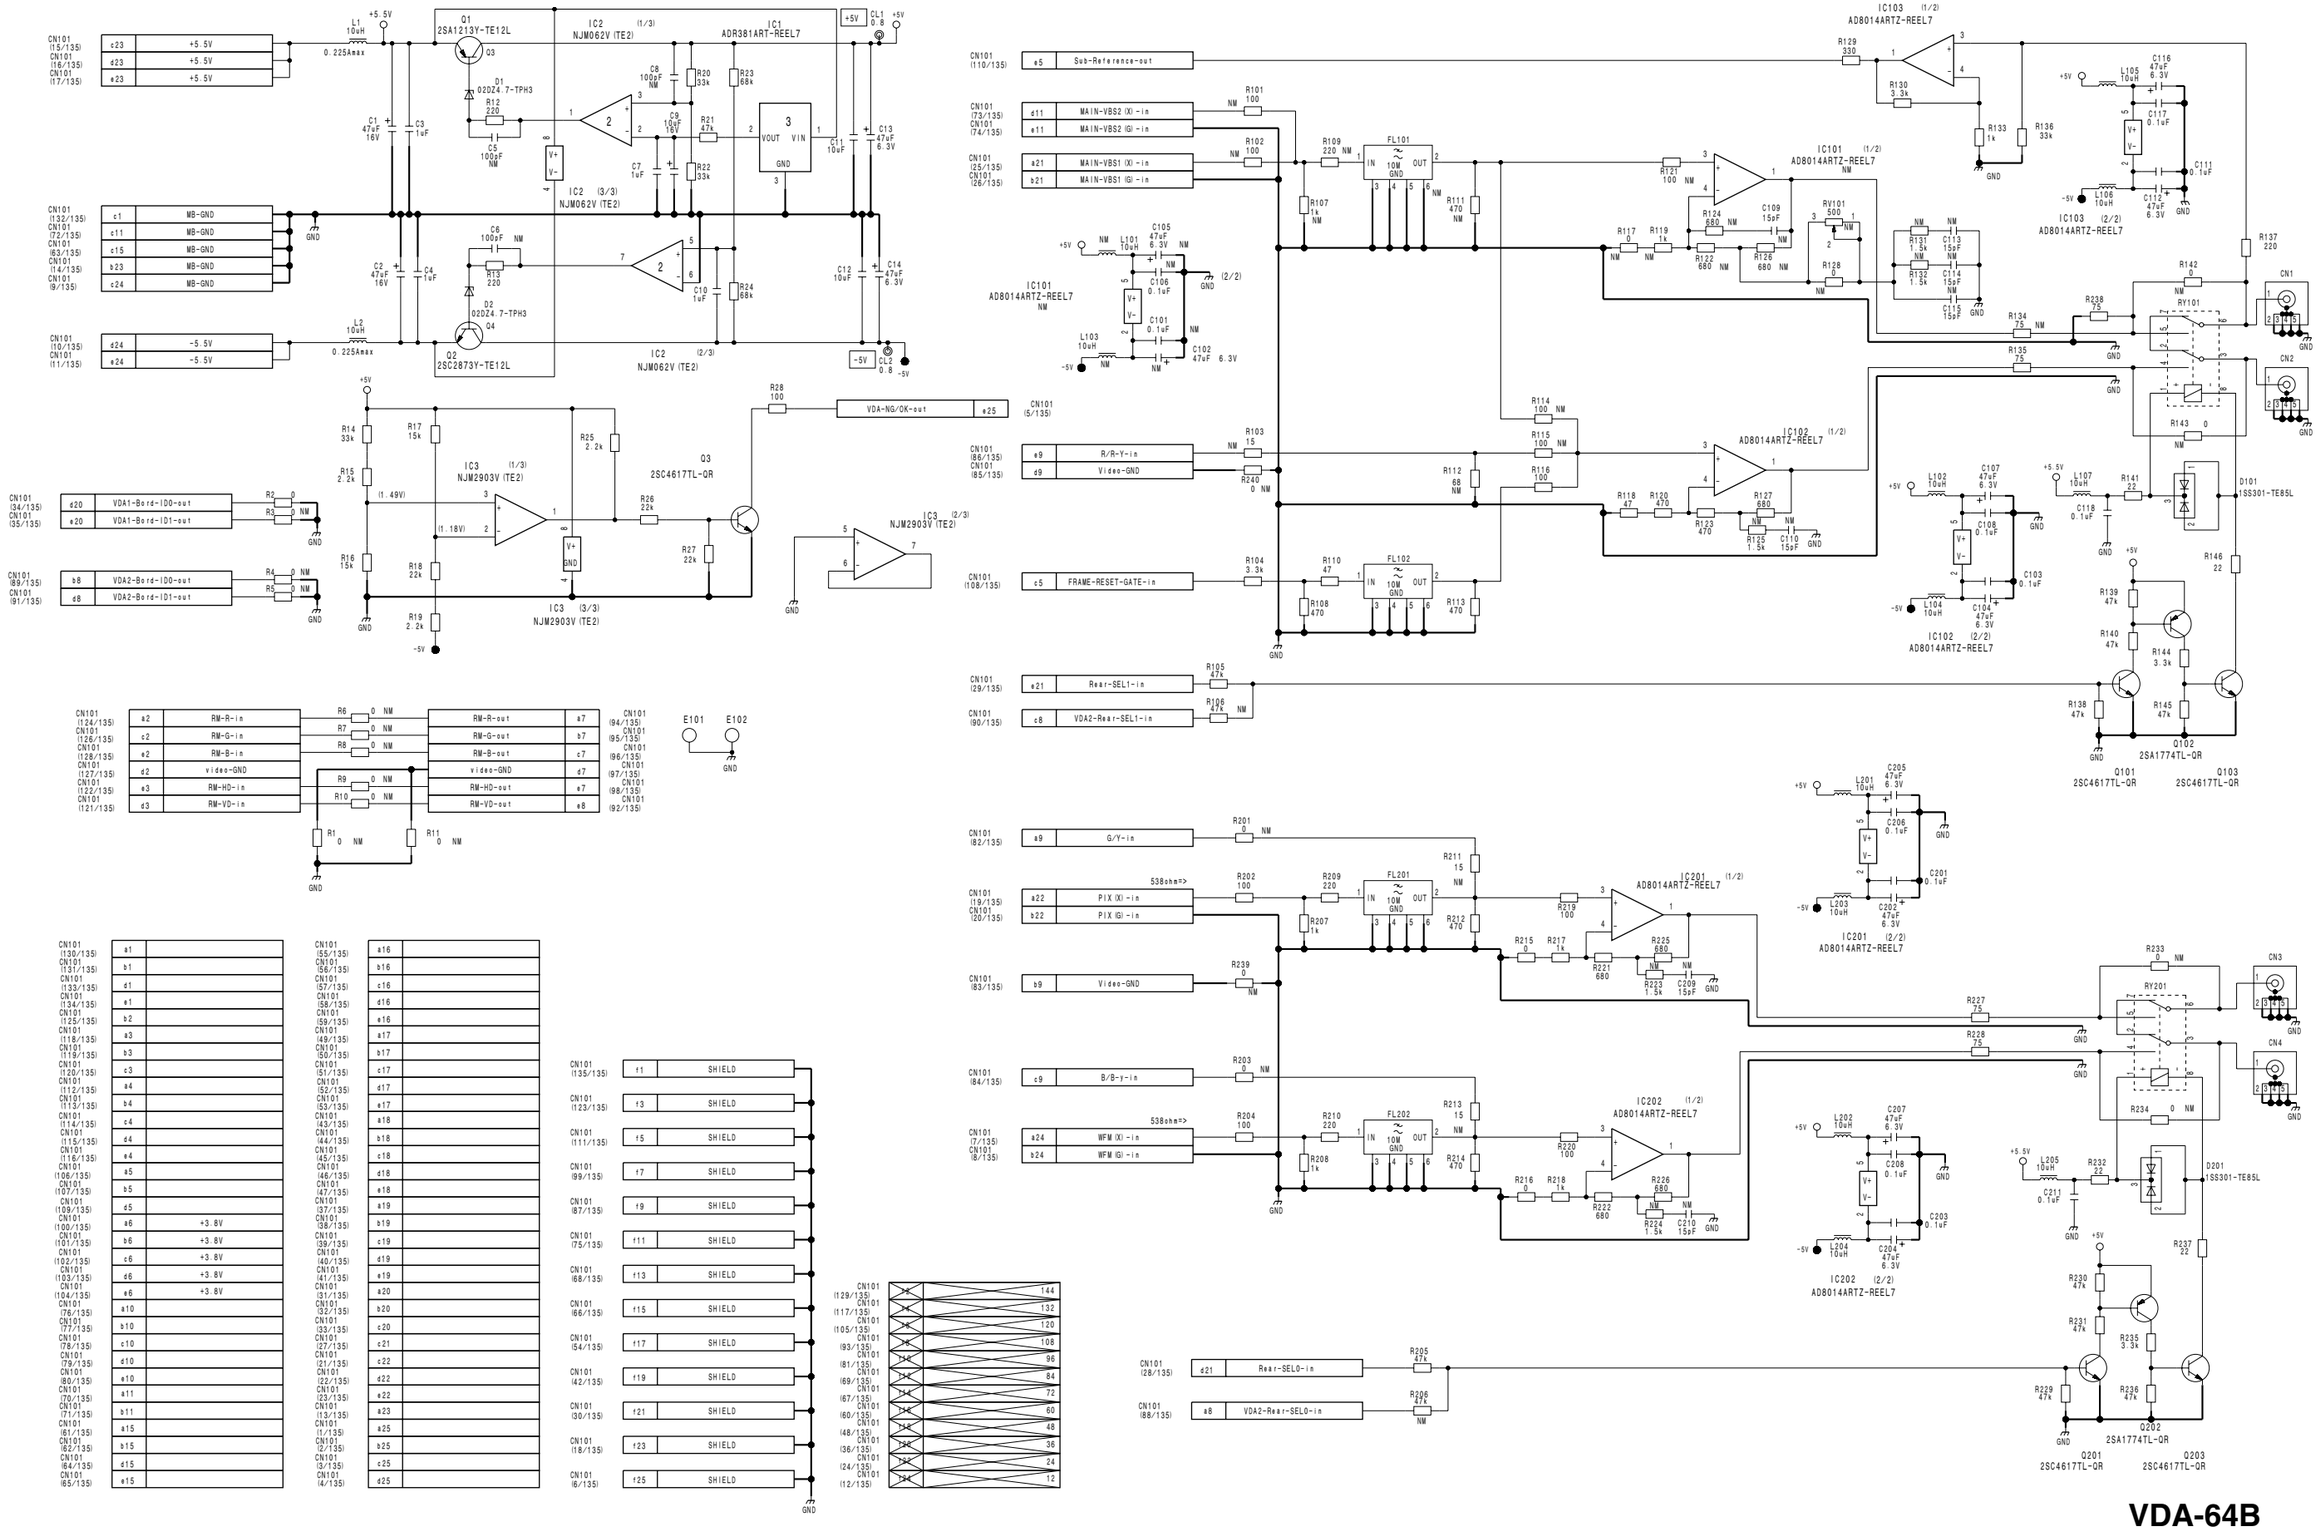



VDA-64B


BOARD NO. 1-868-003-11


HKCU1003_VDA-64B_011_1

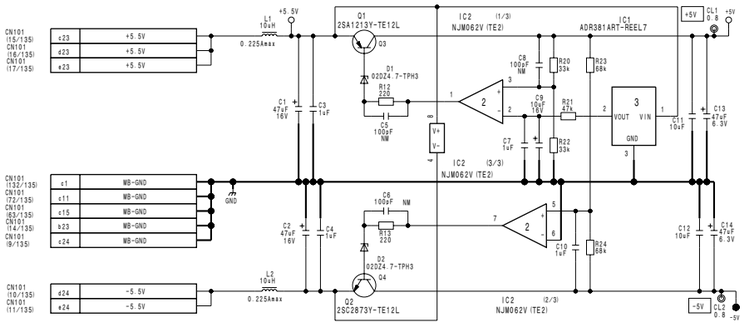


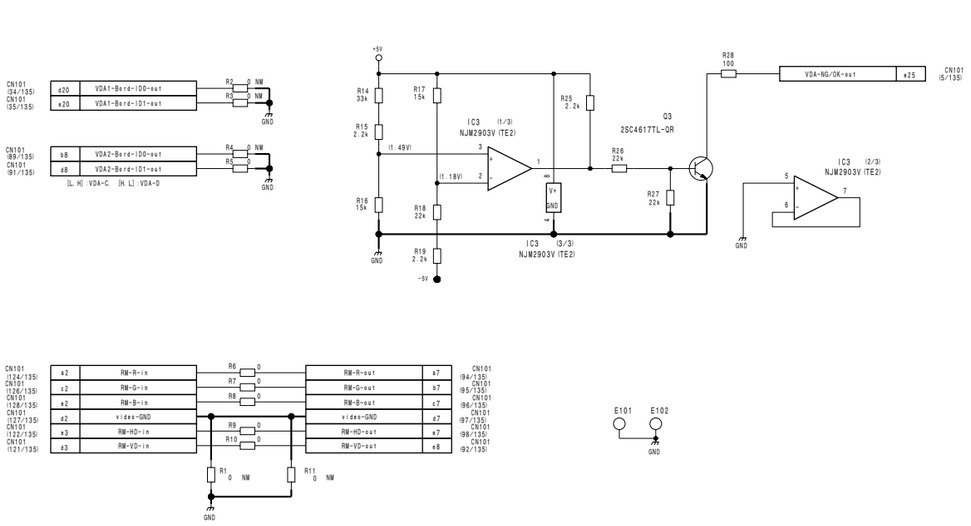

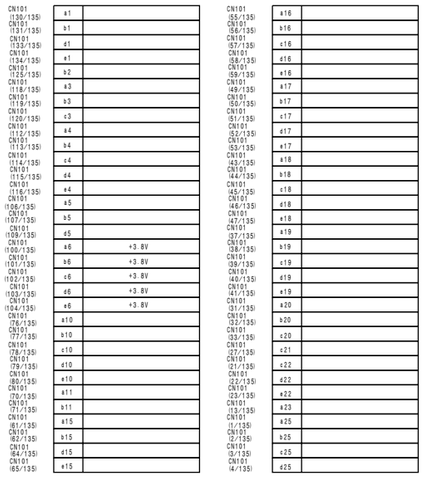

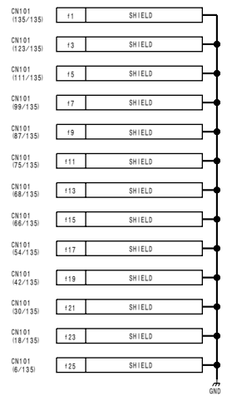

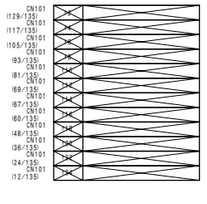


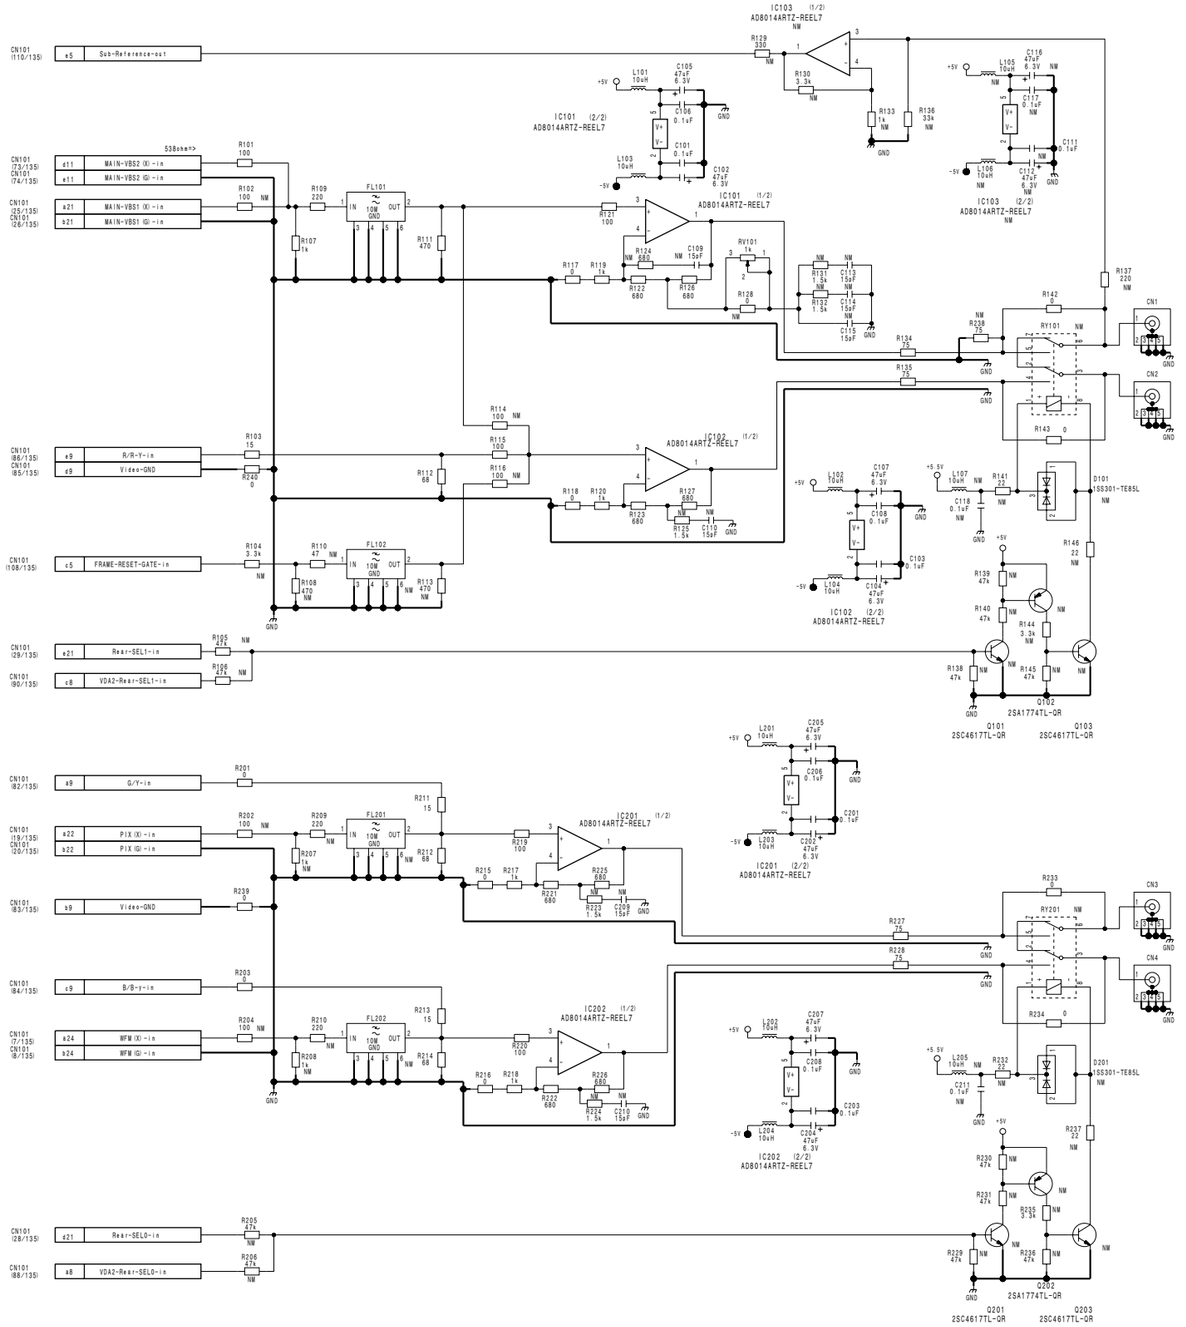

VDA-64C

BOARD NO. 1-868-003-11

HKCU1003_VDA-64C_011_1

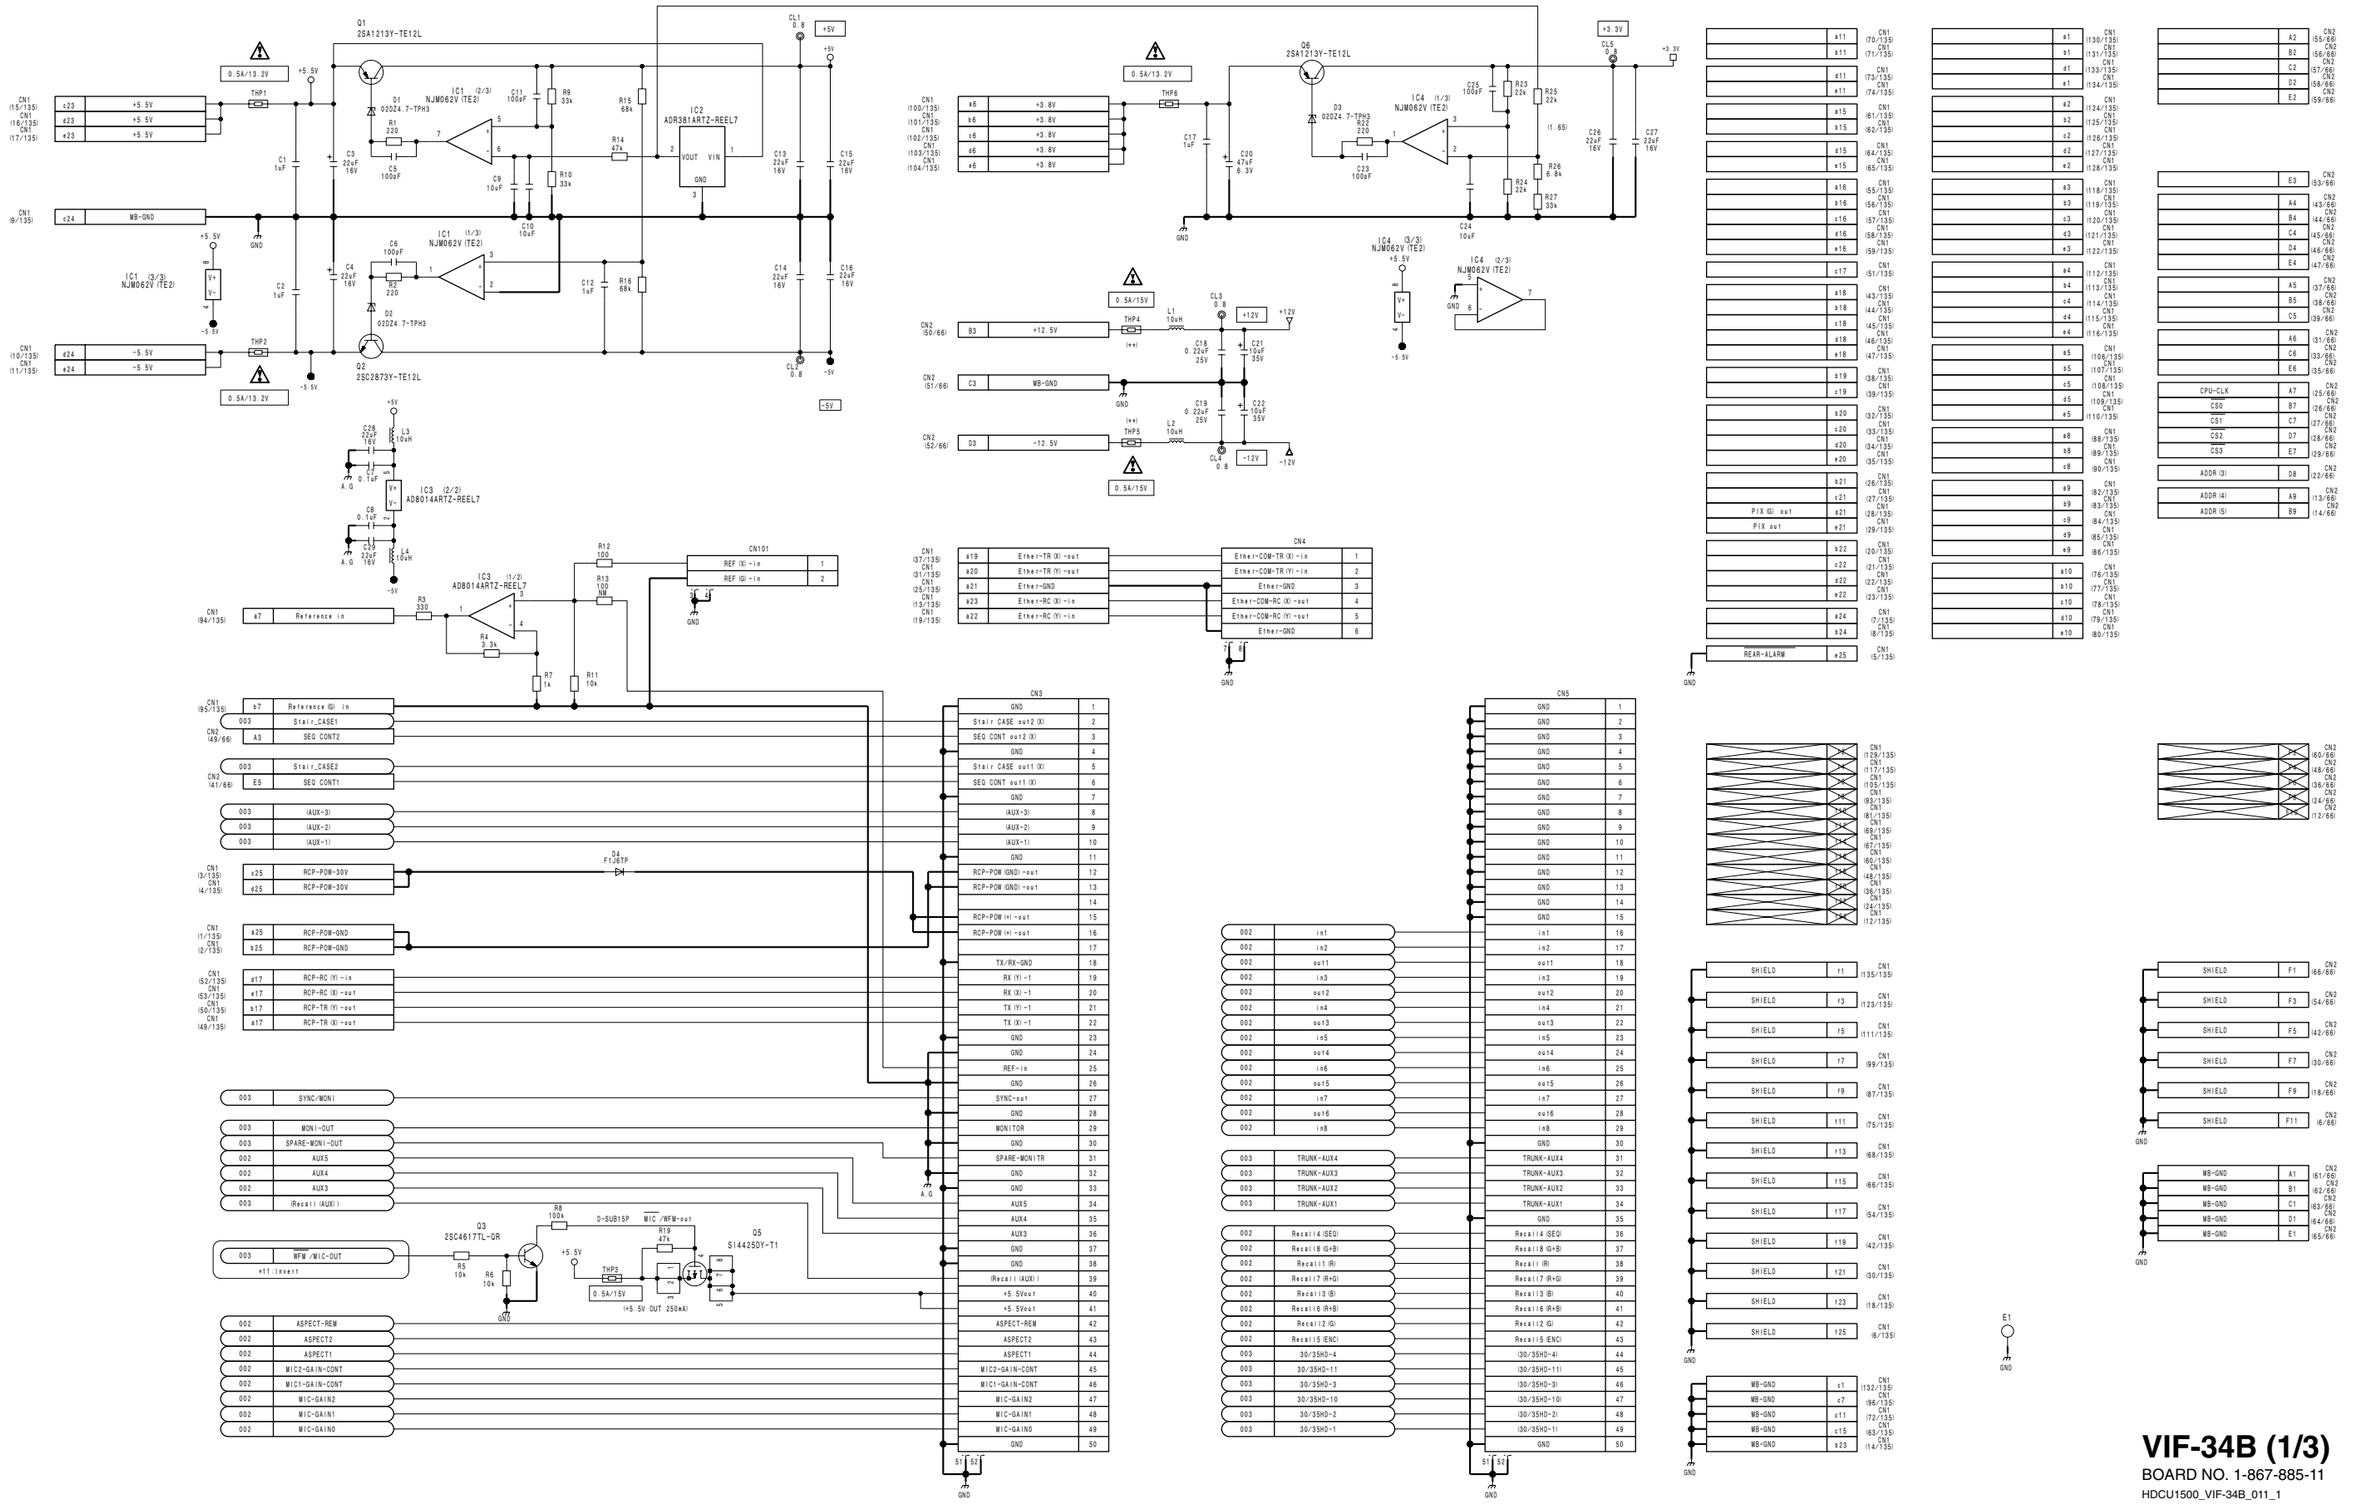


VIF-34B (1/3)

BOARD NO. 1-867-885-11

HDCU1500_VIF-34B_011_1

VIF-34B (2/3)

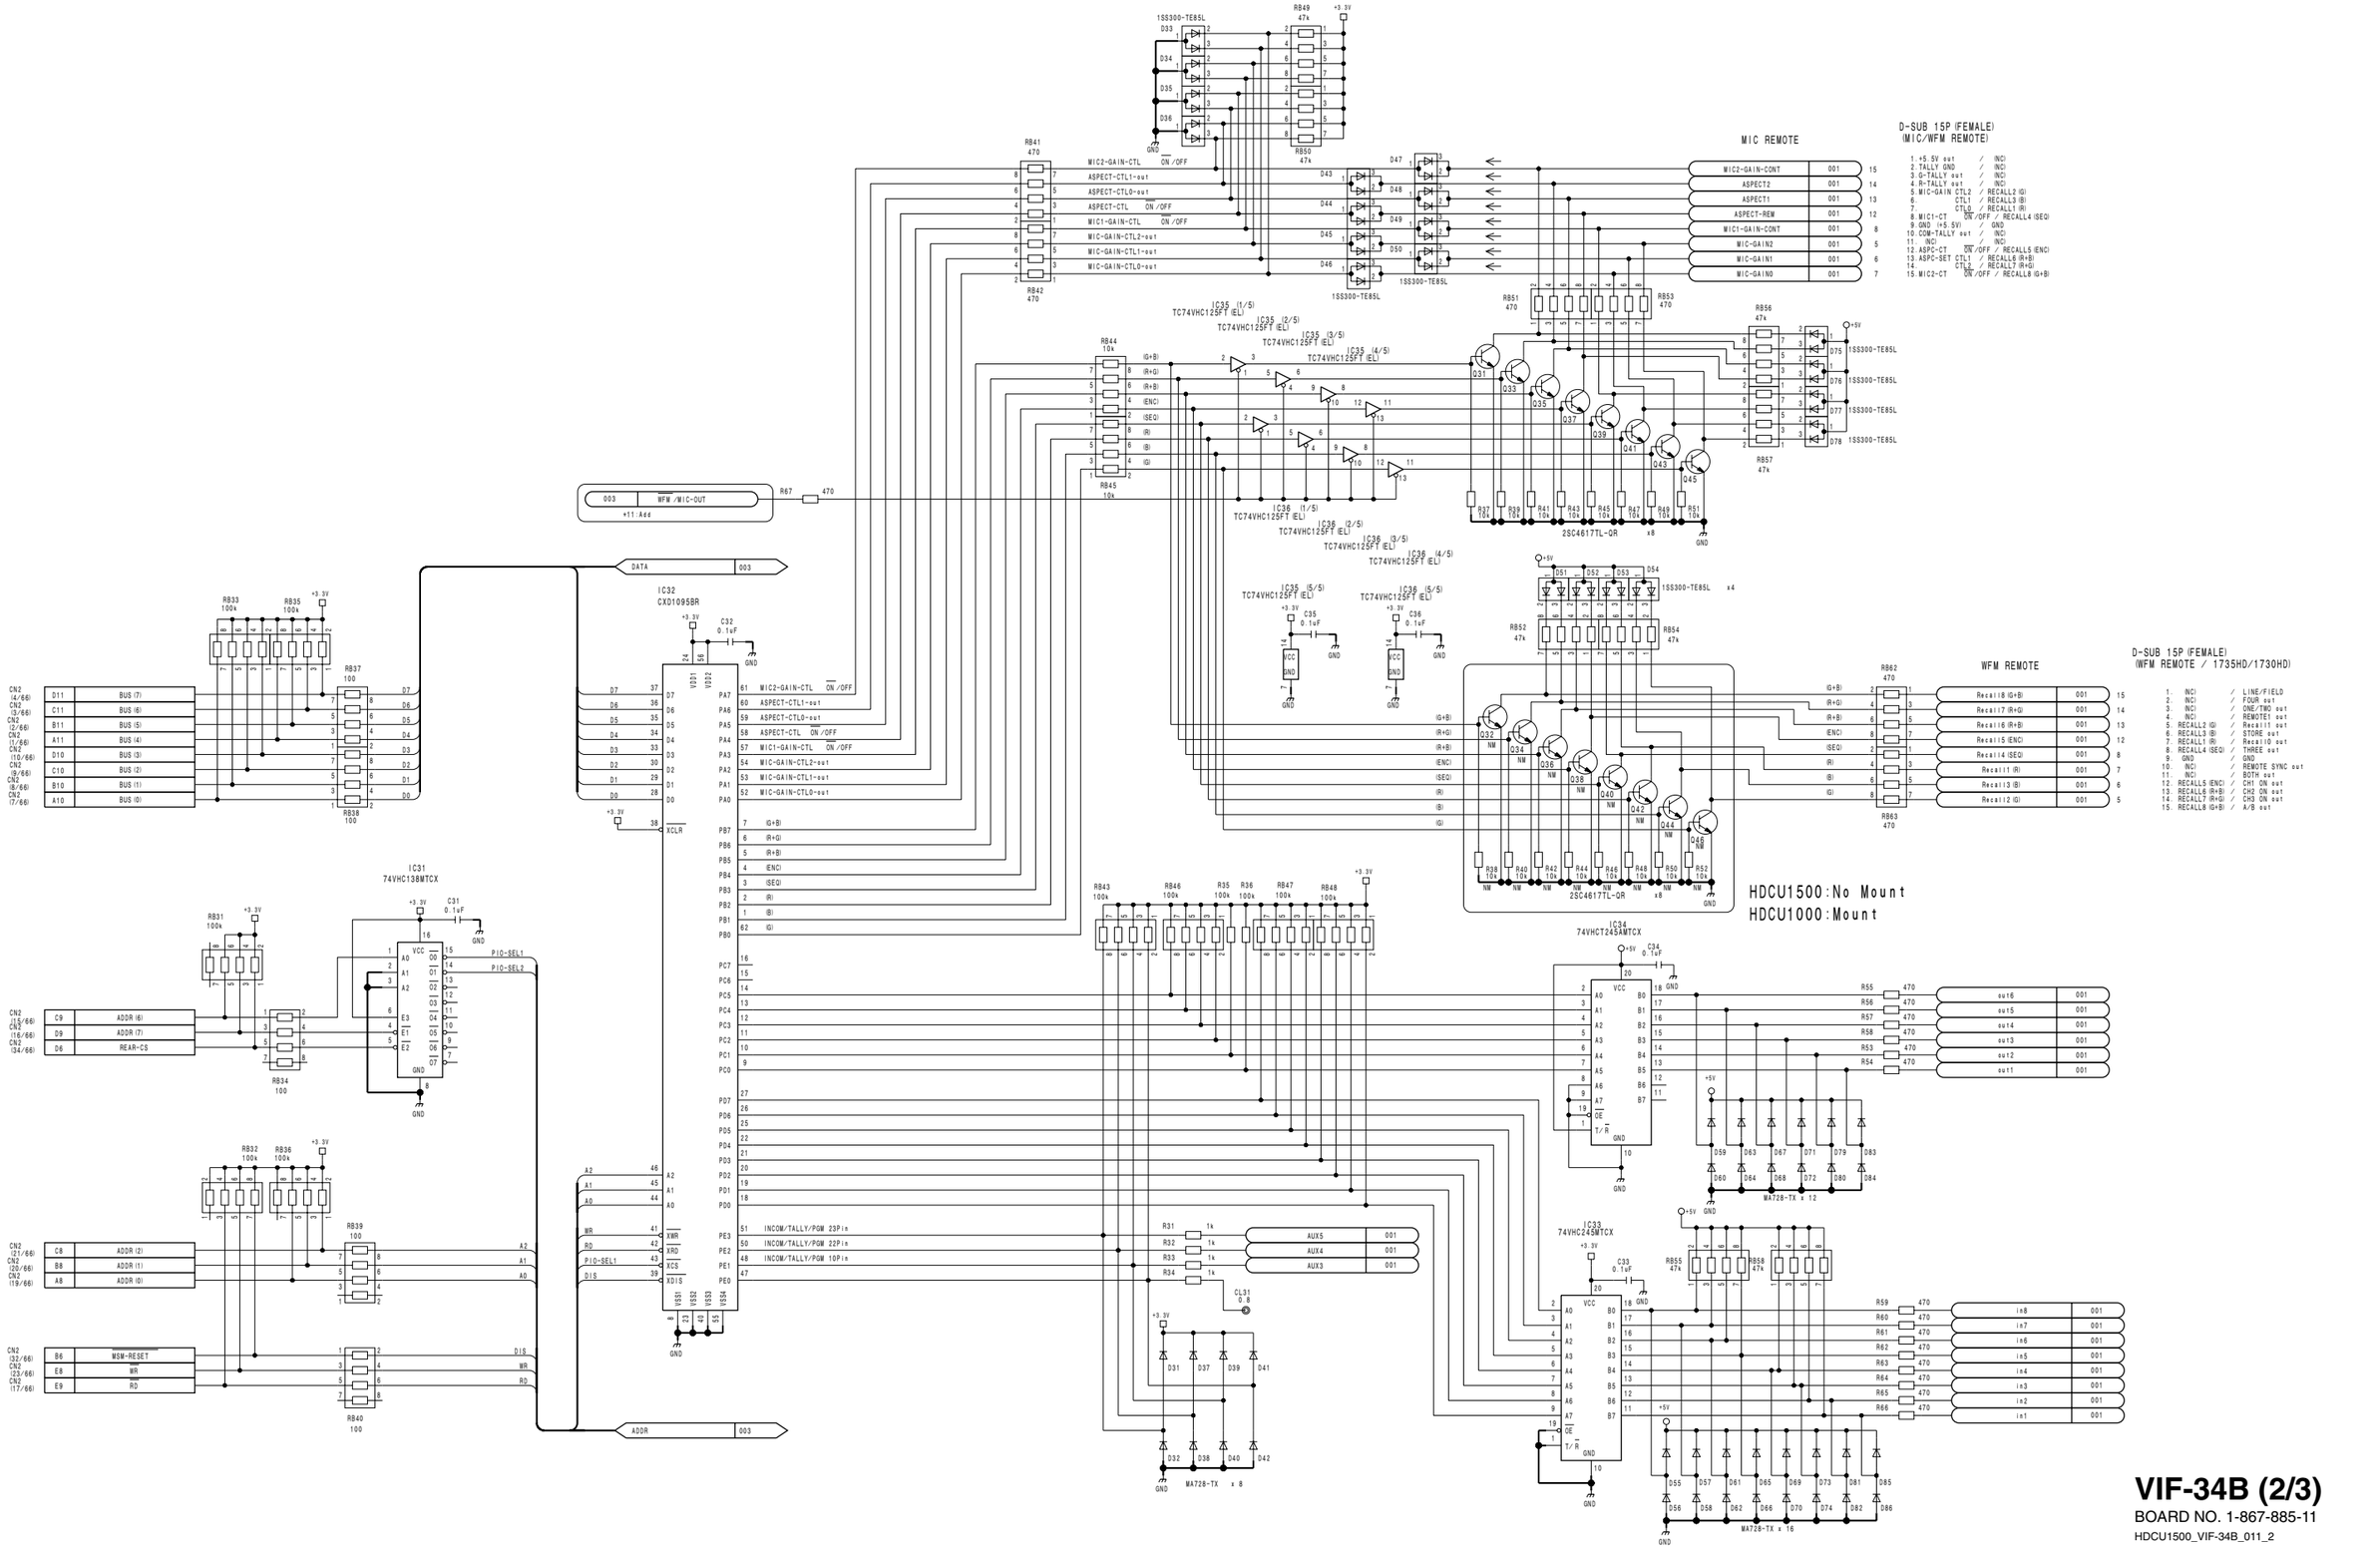


VIF-34B (2/3)

BOARD NO. 1-867-885-11

HDCU1500_VIF-34B_011_2


VIF-34B (3/3)

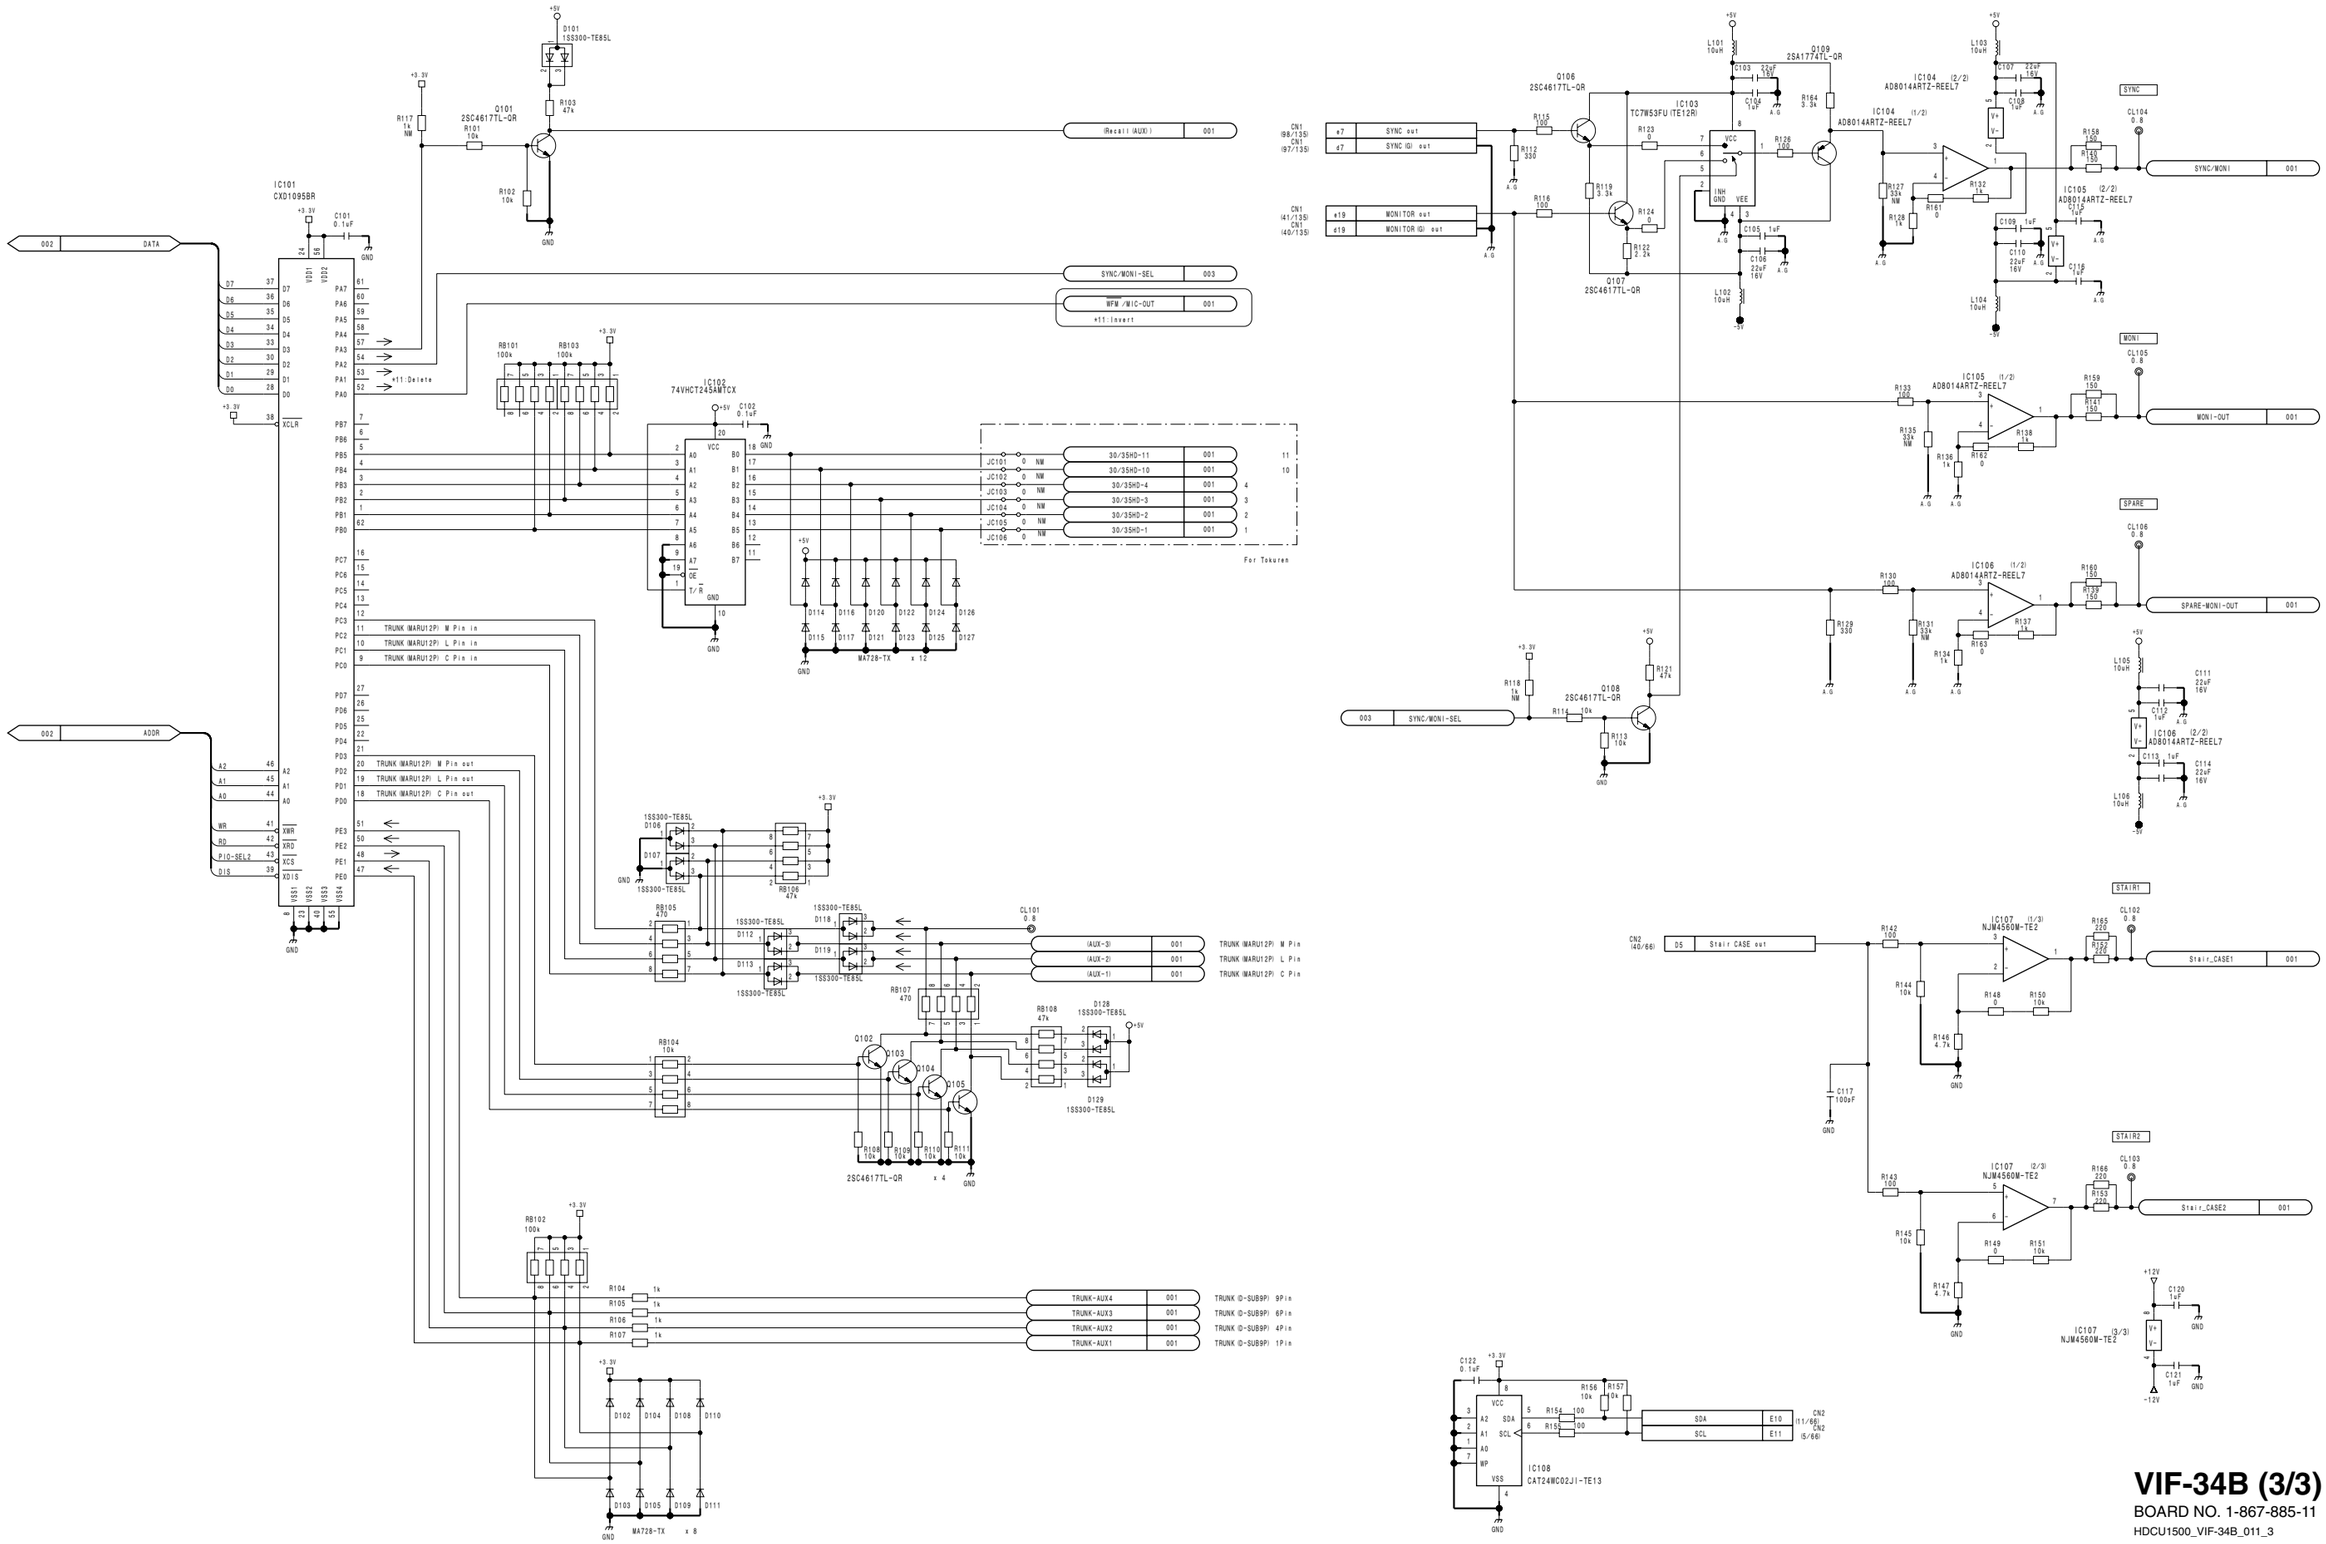



VIF-34B (3/3)


BOARD NO. 1-867-885-11


HDCU1500_VIF-34B_011_3

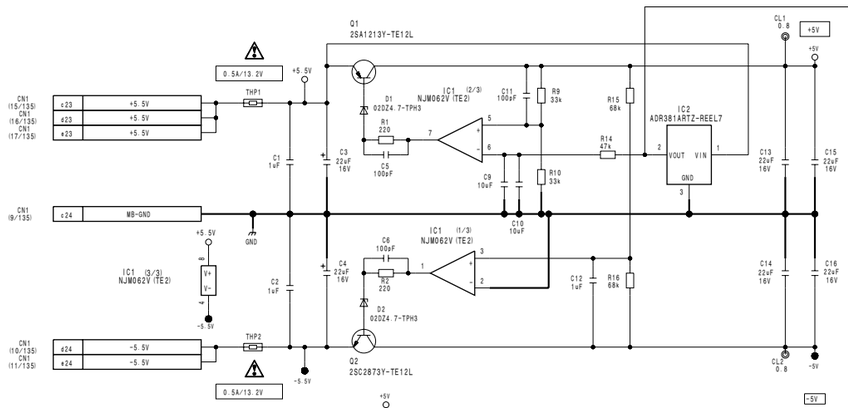


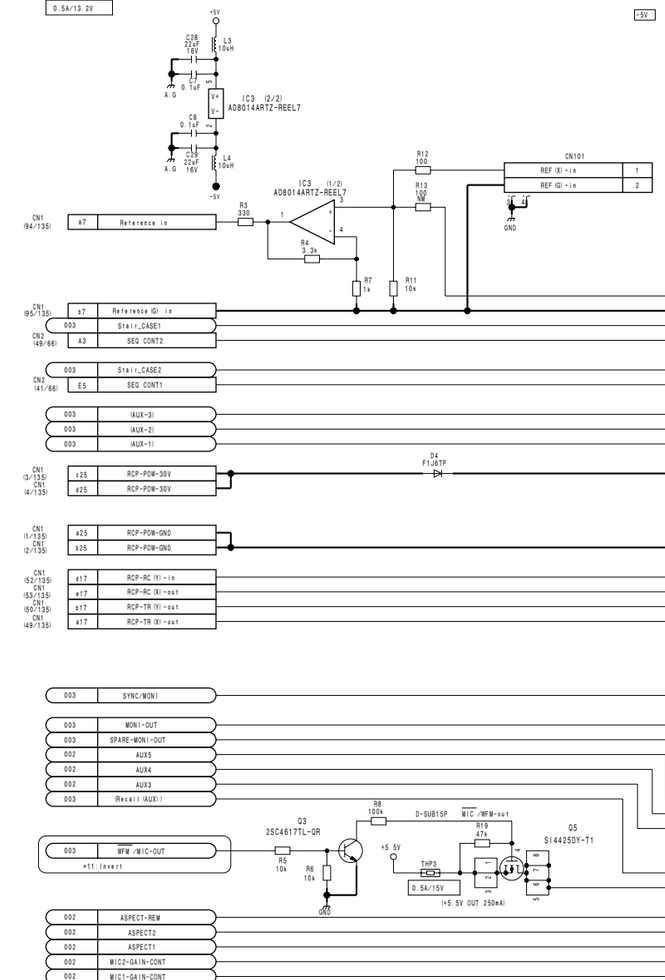


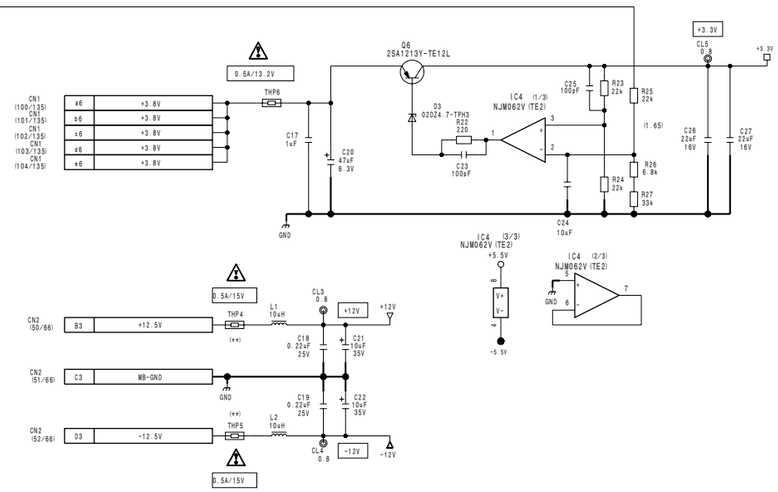


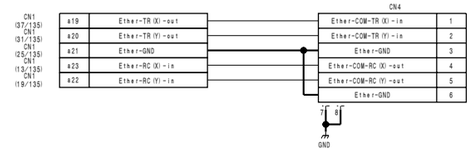


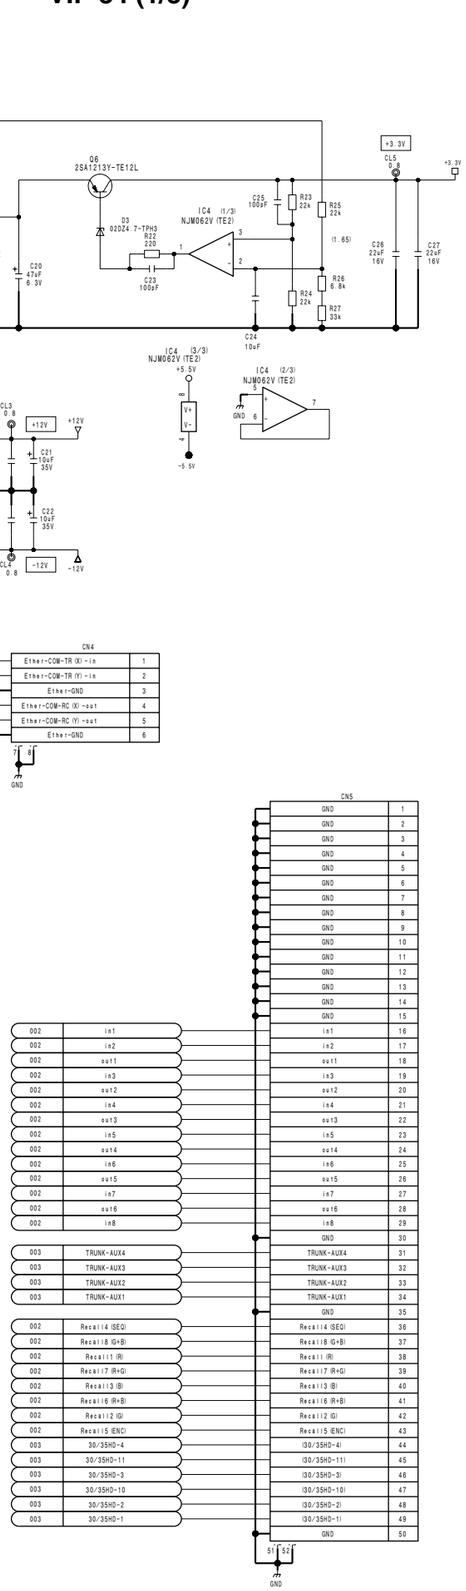


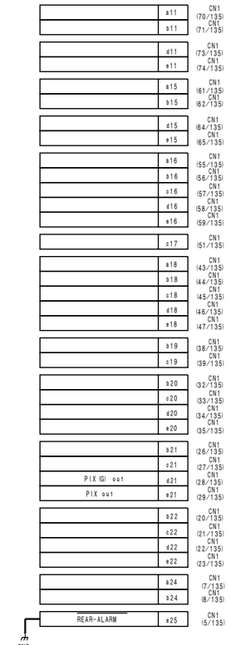

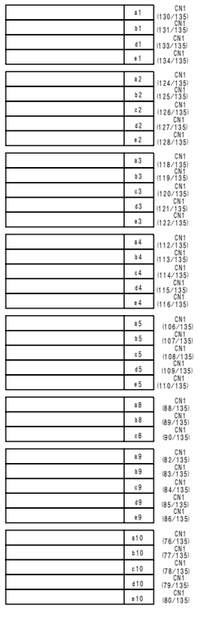

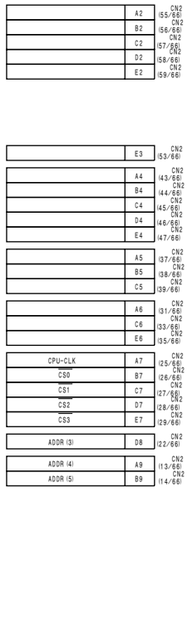

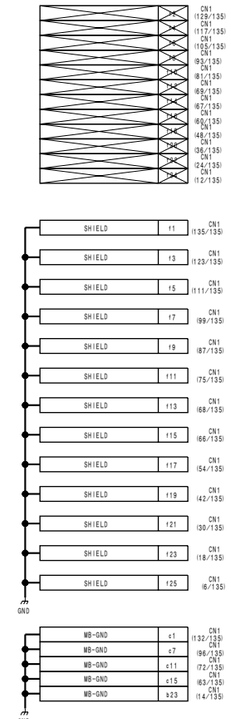

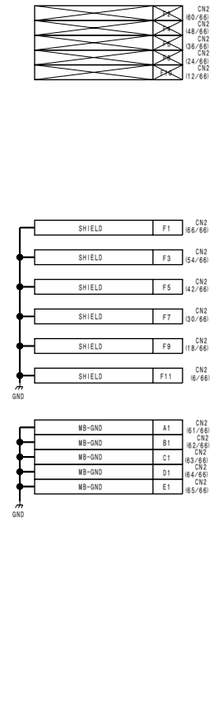


VIF-34 (1/3)

BOARD NO. 1-867-885-11

HDCU1000_VIF-34_011_1


VIF-34 (2/3)

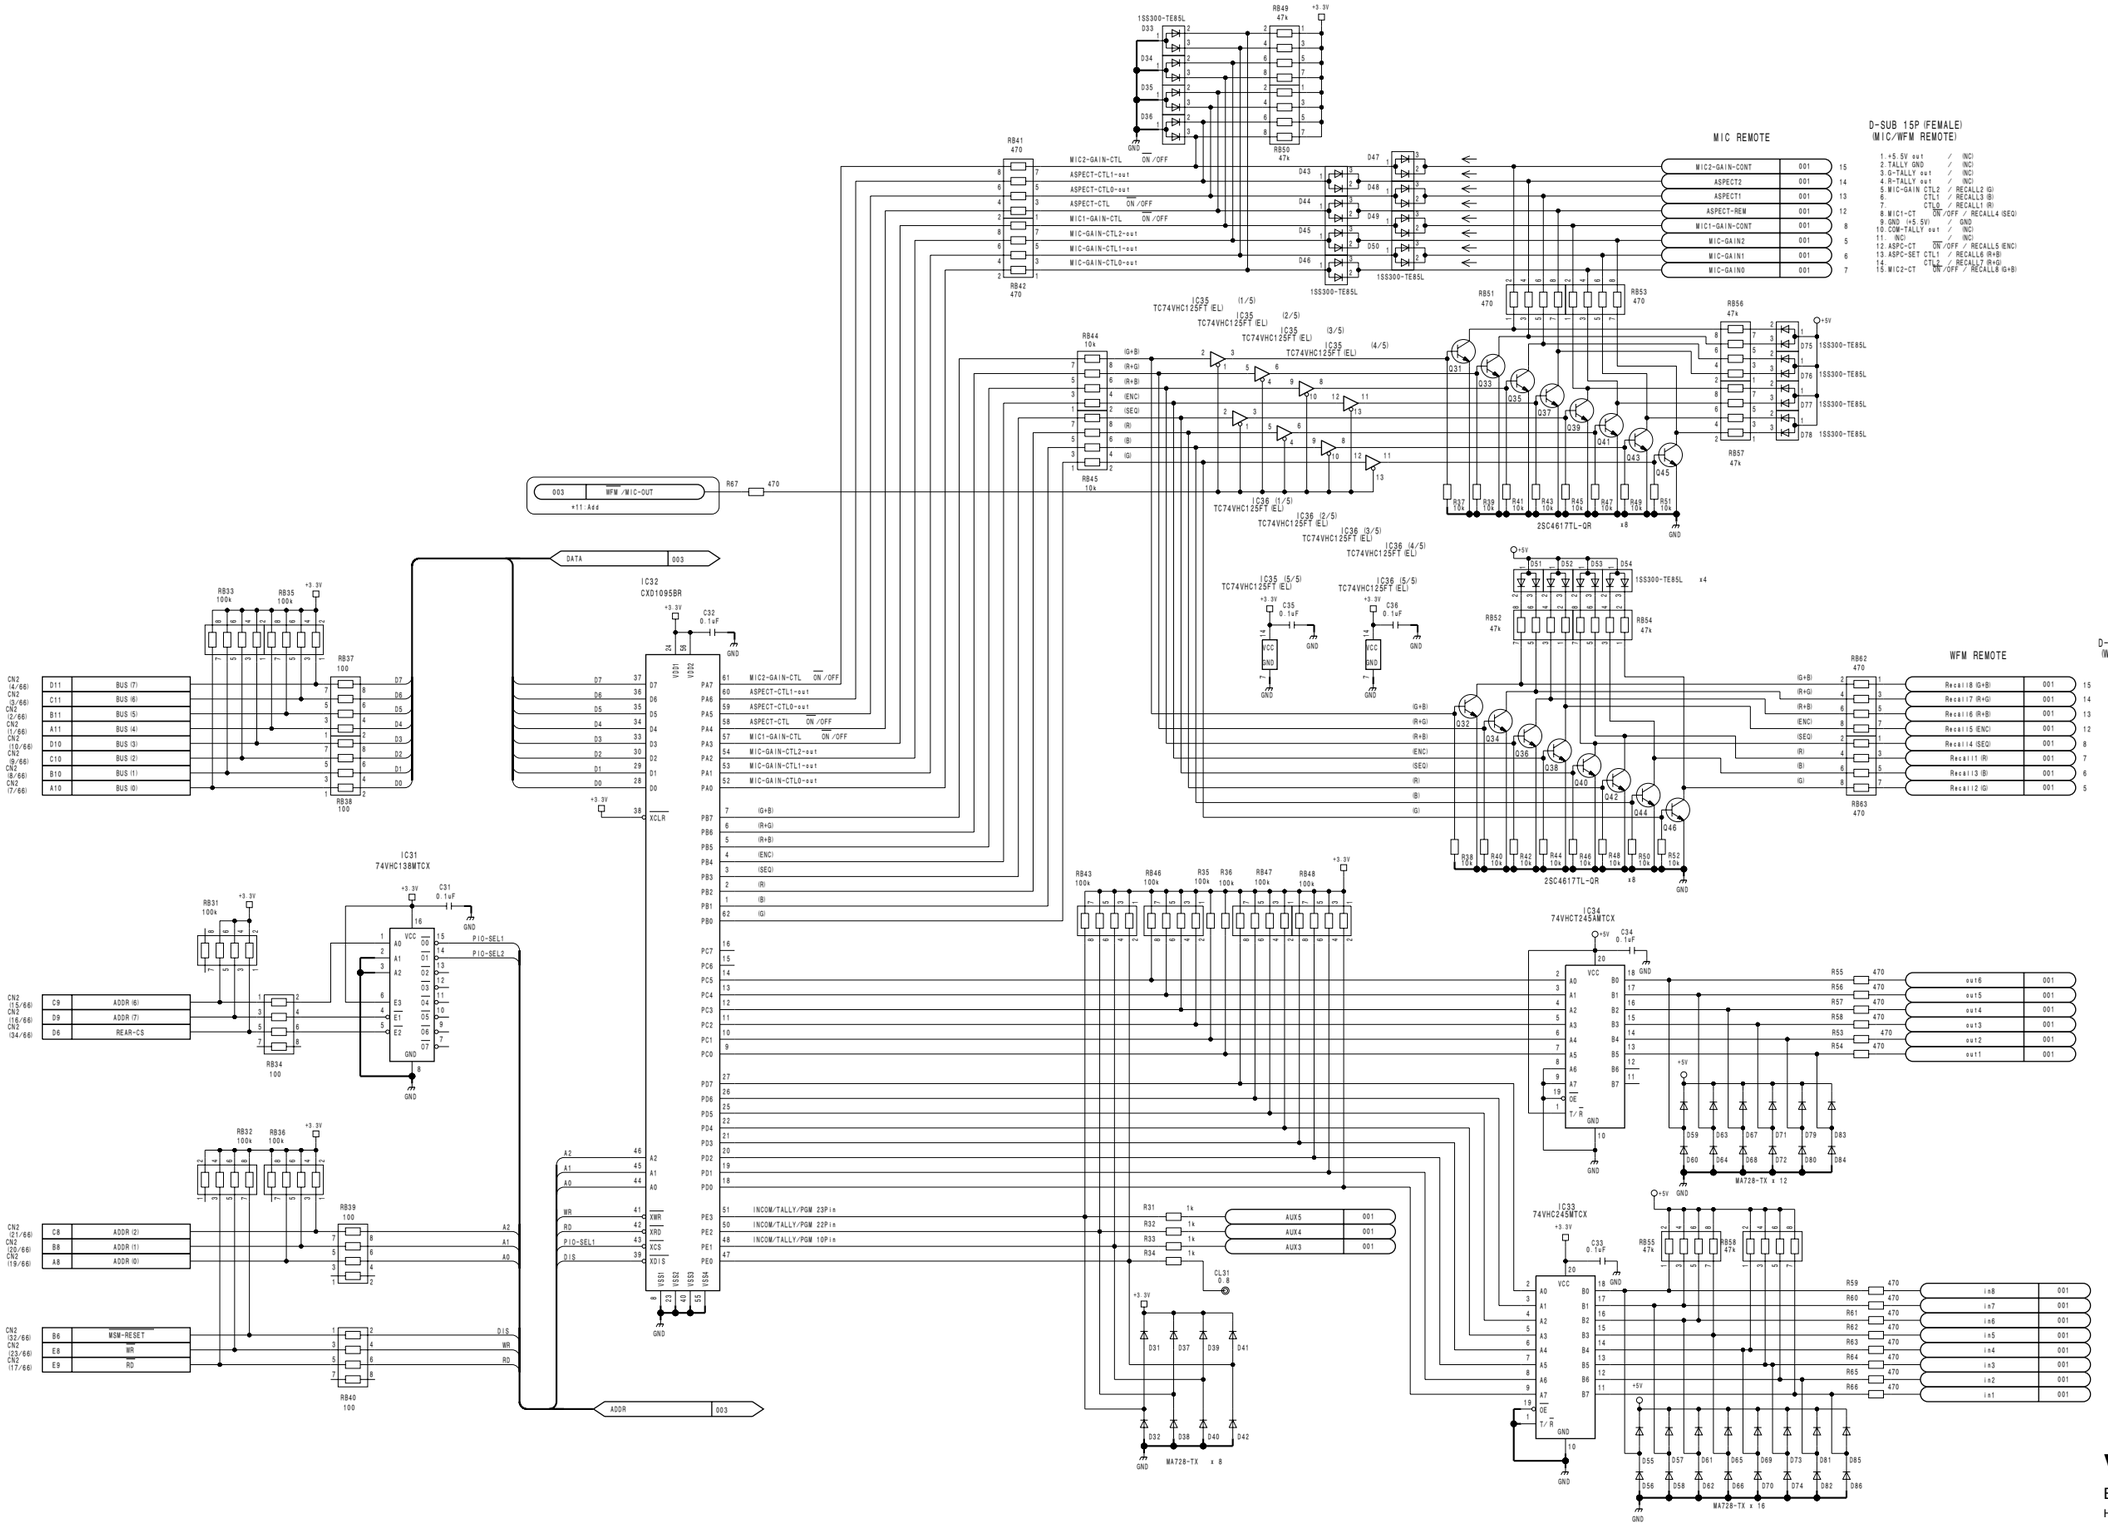

7-102

VIF-34 (2/3)
BOARD NO. 1-867-885-11
HDCU1000_VIF-34_011_2

VIF-34 (3/3)

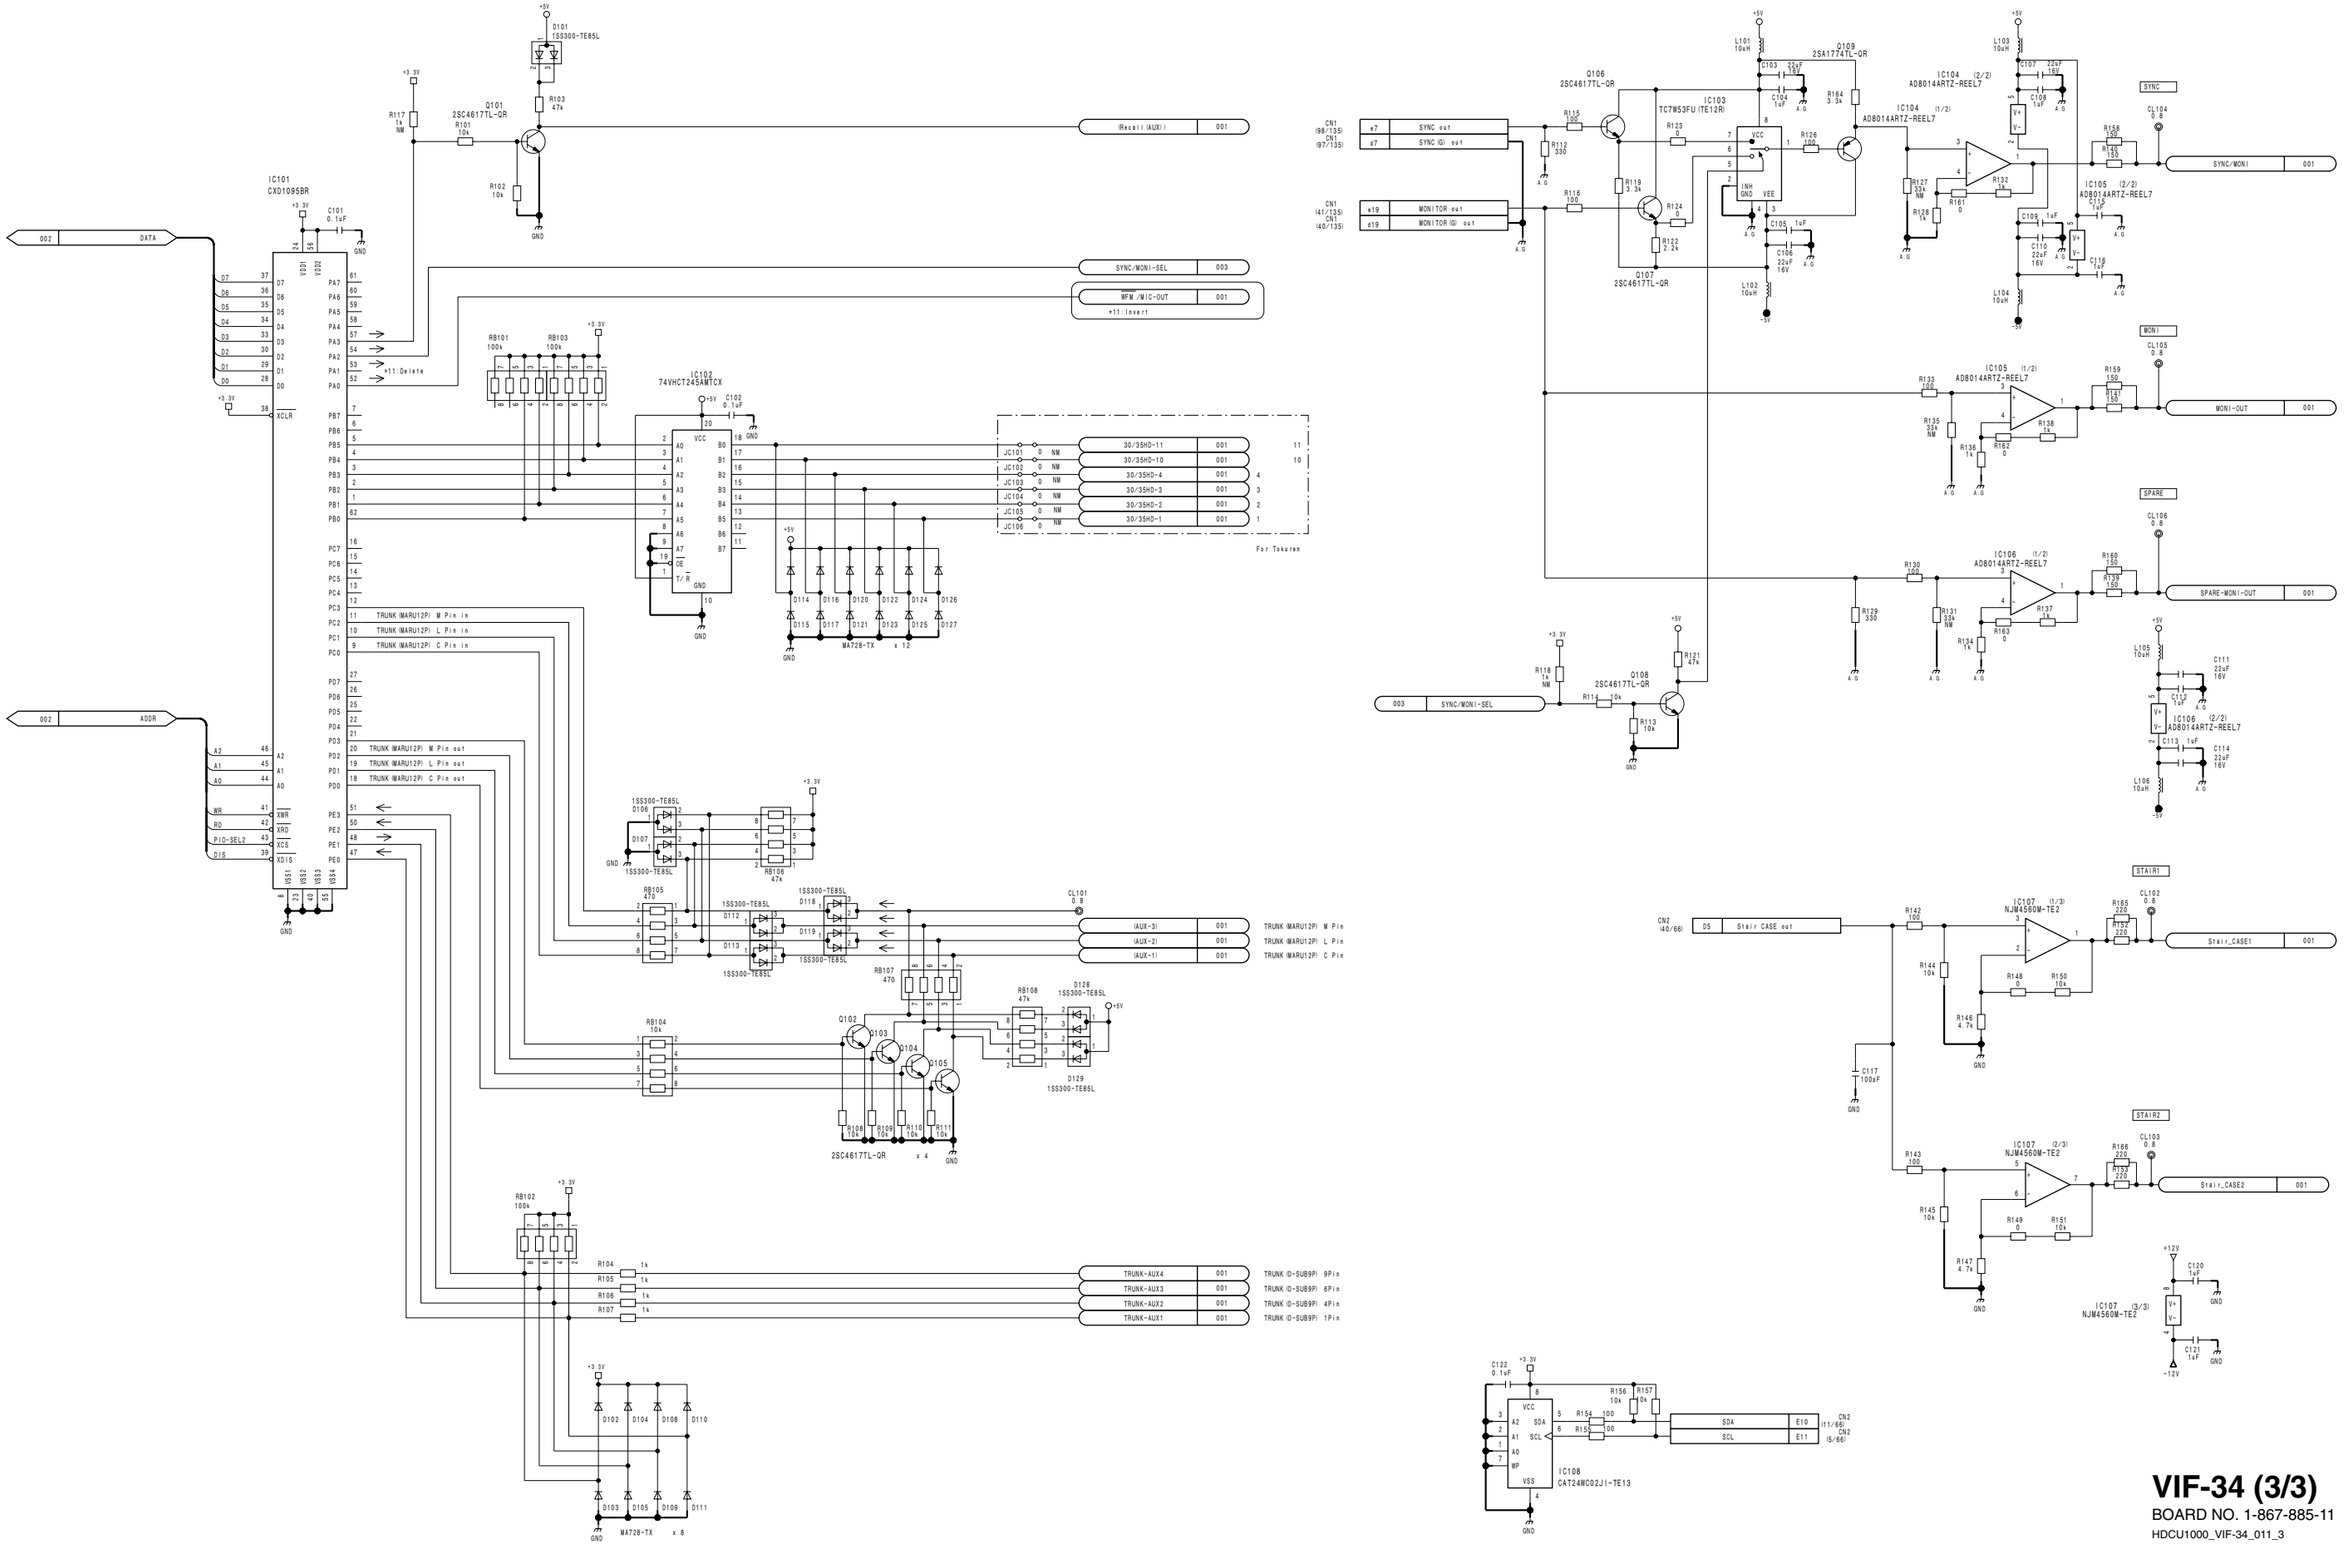


VIF-34 (3/3)

BOARD NO. 1-867-885-11


HDCU1000_VIF-34_011_3

Frame Wiring (HDCU1000)

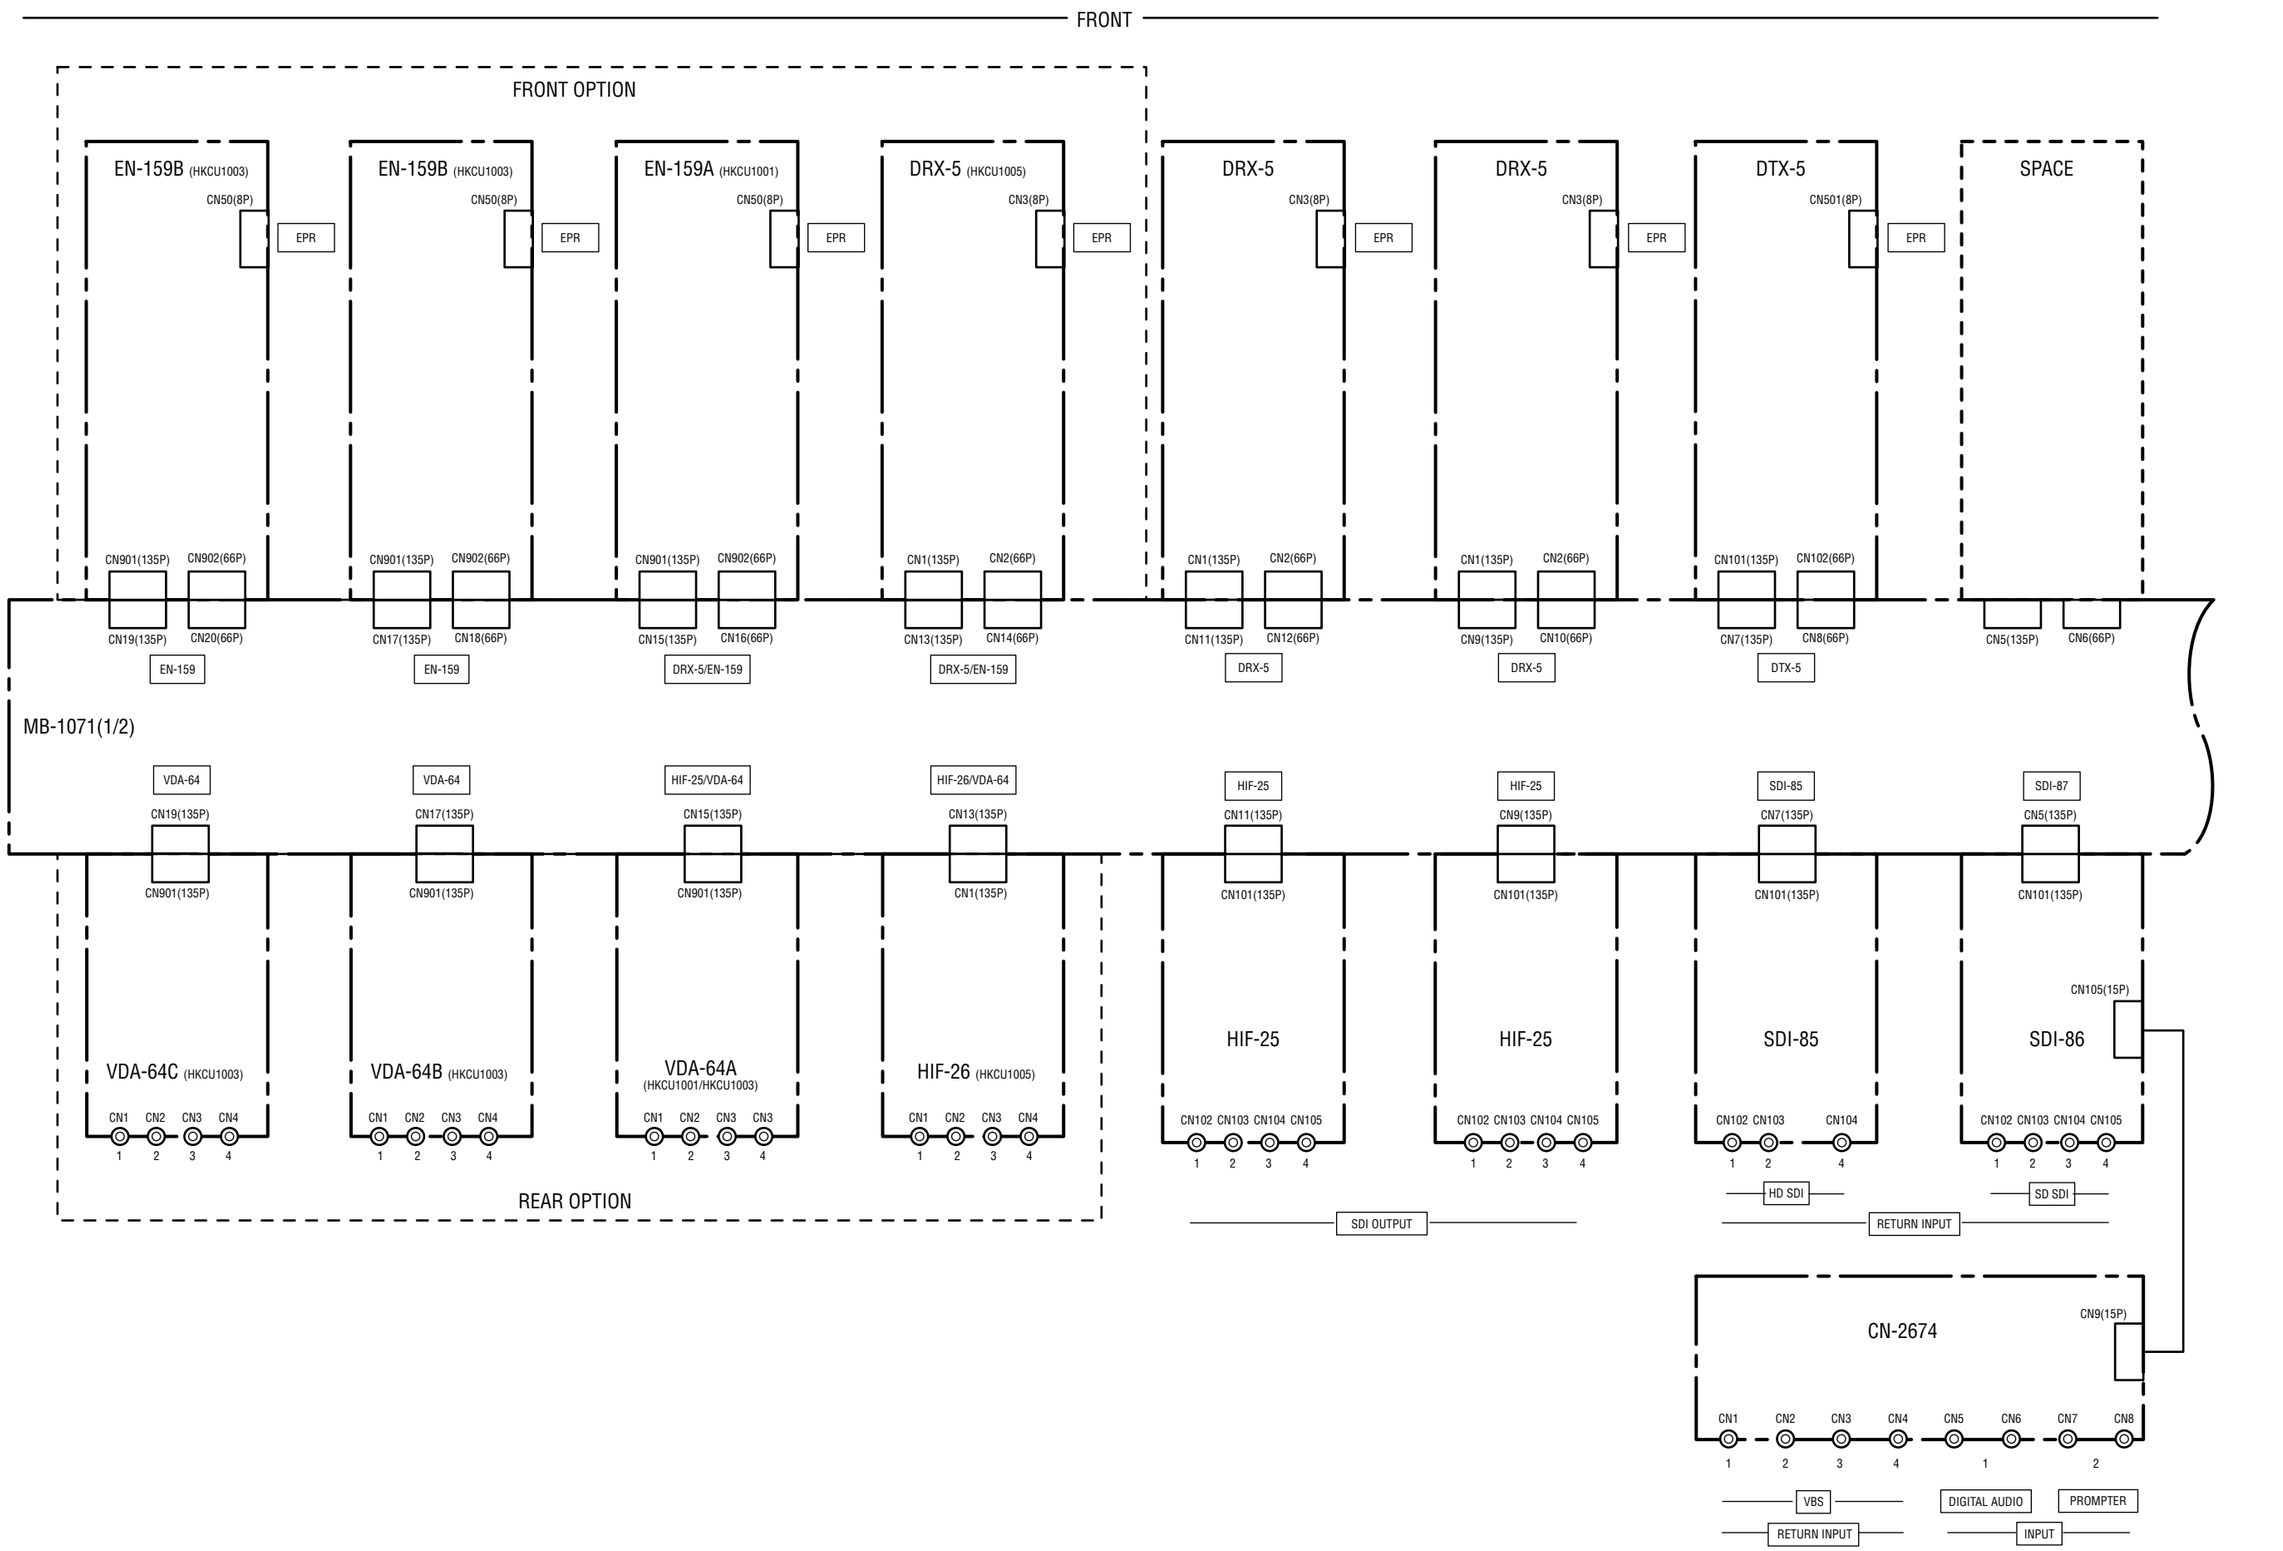


7-104


Frame Wiring (HDCU1000)

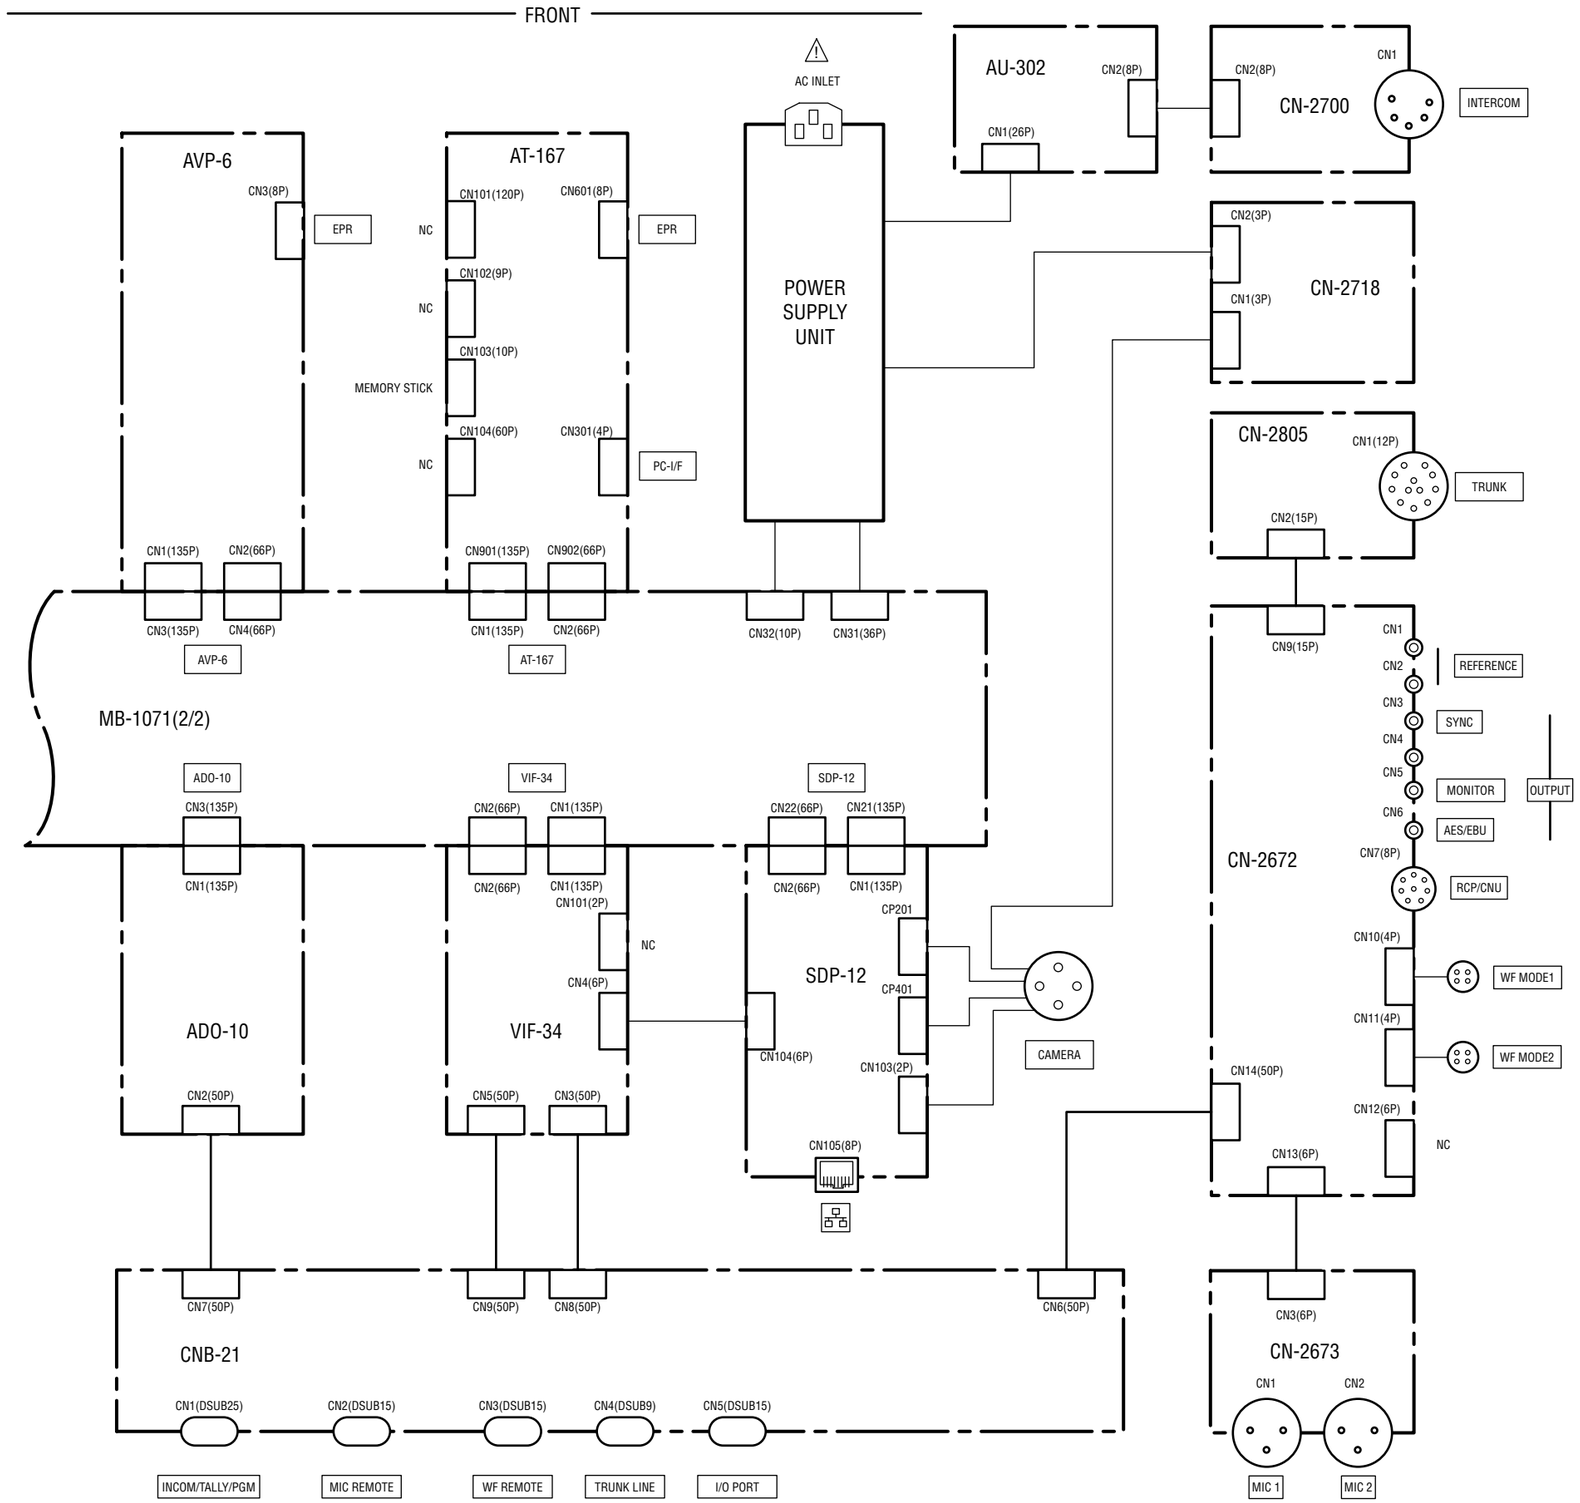

Frame Wiring (HDCU1000)

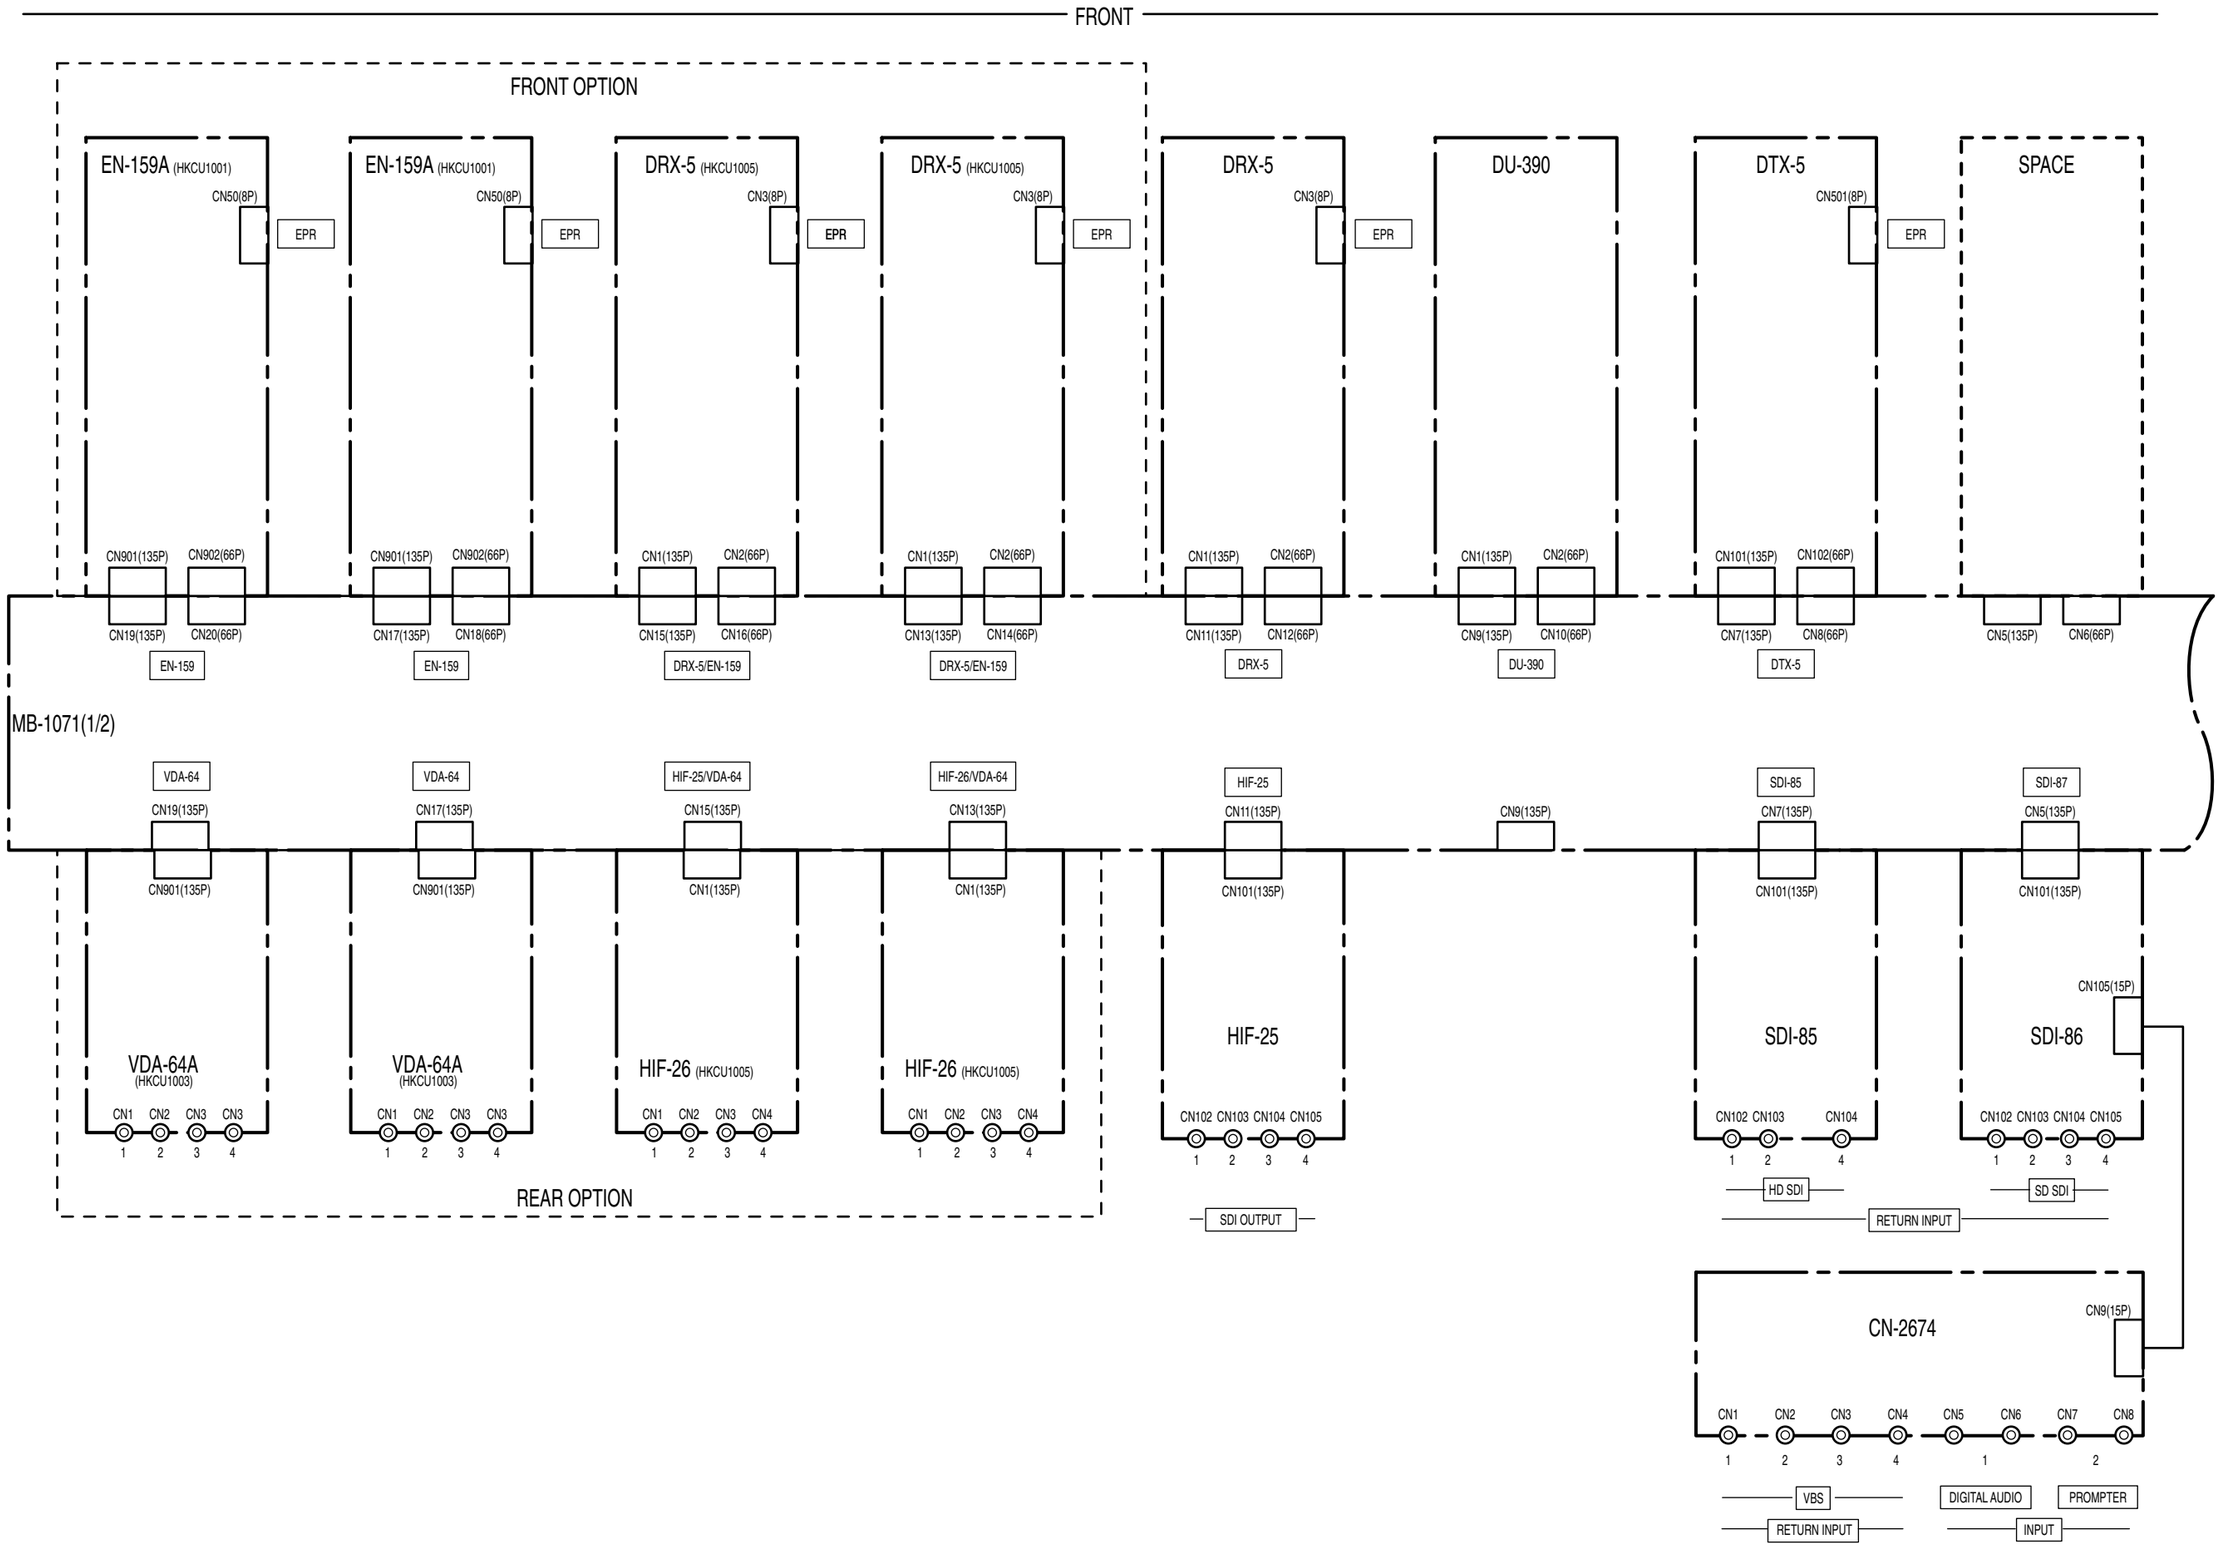
FRONT
FRONT OPTION
EN-159A (HKCU1001)
CN50(8P)
EPR
CN901(135P)
CN902(66P)
CN19(135P)
CN20(66P)
EN-159
EN-159A (HKCU1001)
CN50(8P)
EPR
CN901(135P)
CN902(66P)
CN17(135P)
CN18(66P)
EN-159
DRX-5 (HKCU1005)
CN3(8P)
EPR
CN1(135P)
CN2(66P)
CN15(135P)
CN16(66P)
DRX-5/EN-159
DRX-5 (HKCU1005)
CN3(8P)
EPR
CN1(135P)
CN2(66P)
CN13(135P)
CN14(66P)
DRX-5/EN-159
DRX-5
CN3(8P)
EPR
CN1(135P)
CN2(66P)
CN11(135P)
CN12(66P)
DRX-5
DU-390
CN1(135P)
CN2(66P)
CN9(135P)
CN10(66P)
DU-390
DTX-5
CN501(8P)
EPR
CN101(135P)
CN102(66P)
CN7(135P)
CN8(66P)
DTX-5
SPACE
CN5(135P)
CN6(66P)
MB-1071(1/2)
VDA-64
CN19(135P)
CN901(135P)
VDA-64A
(HKCU1003)
CN1 CN2 CN3 CN3
1 2 3 4
VDA-64
CN17(135P)
CN901(135P)
VDA-64A
(HKCU1003)
CN1 CN2 CN3 CN3
1 2 3 4
HIF-25/VDA-64
CN15(135P)
CN1(135P)
HIF-26 (HKCU1005)
CN1 CN2 CN3 CN4
1 2 3 4
HIF-26/VDA-64
CN13(135P)
CN1(135P)
HIF-26 (HKCU1005)
CN1 CN2 CN3 CN4
1 2 3 4
REAR OPTION
HIF-25
CN11(135P)
CN101(135P)
HIF-25
CN102 CN103 CN104 CN105
1 2 3 4
SDI OUTPUT
CN9(135P)
SDI-85
CN7(135P)
CN101(135P)
SDI-85
CN102 CN103 CN104
1 2 4
HD SDI
RETURN INPUT
SDI-87
CN5(135P)
CN101(135P)
CN105(15P)
SDI-86
CN102 CN103 CN104 CN105
1 2 3 4
SD SDI
CN-2674
CN9(15P)
CN1 CN2 CN3 CN4 CN5 CN6 CN7 CN8
1 2 3 4 1 2
VBS
RETURN INPUT
DIGITAL AUDIO
INPUT
PROMPTER

Frame Wiring (HDCU1080)

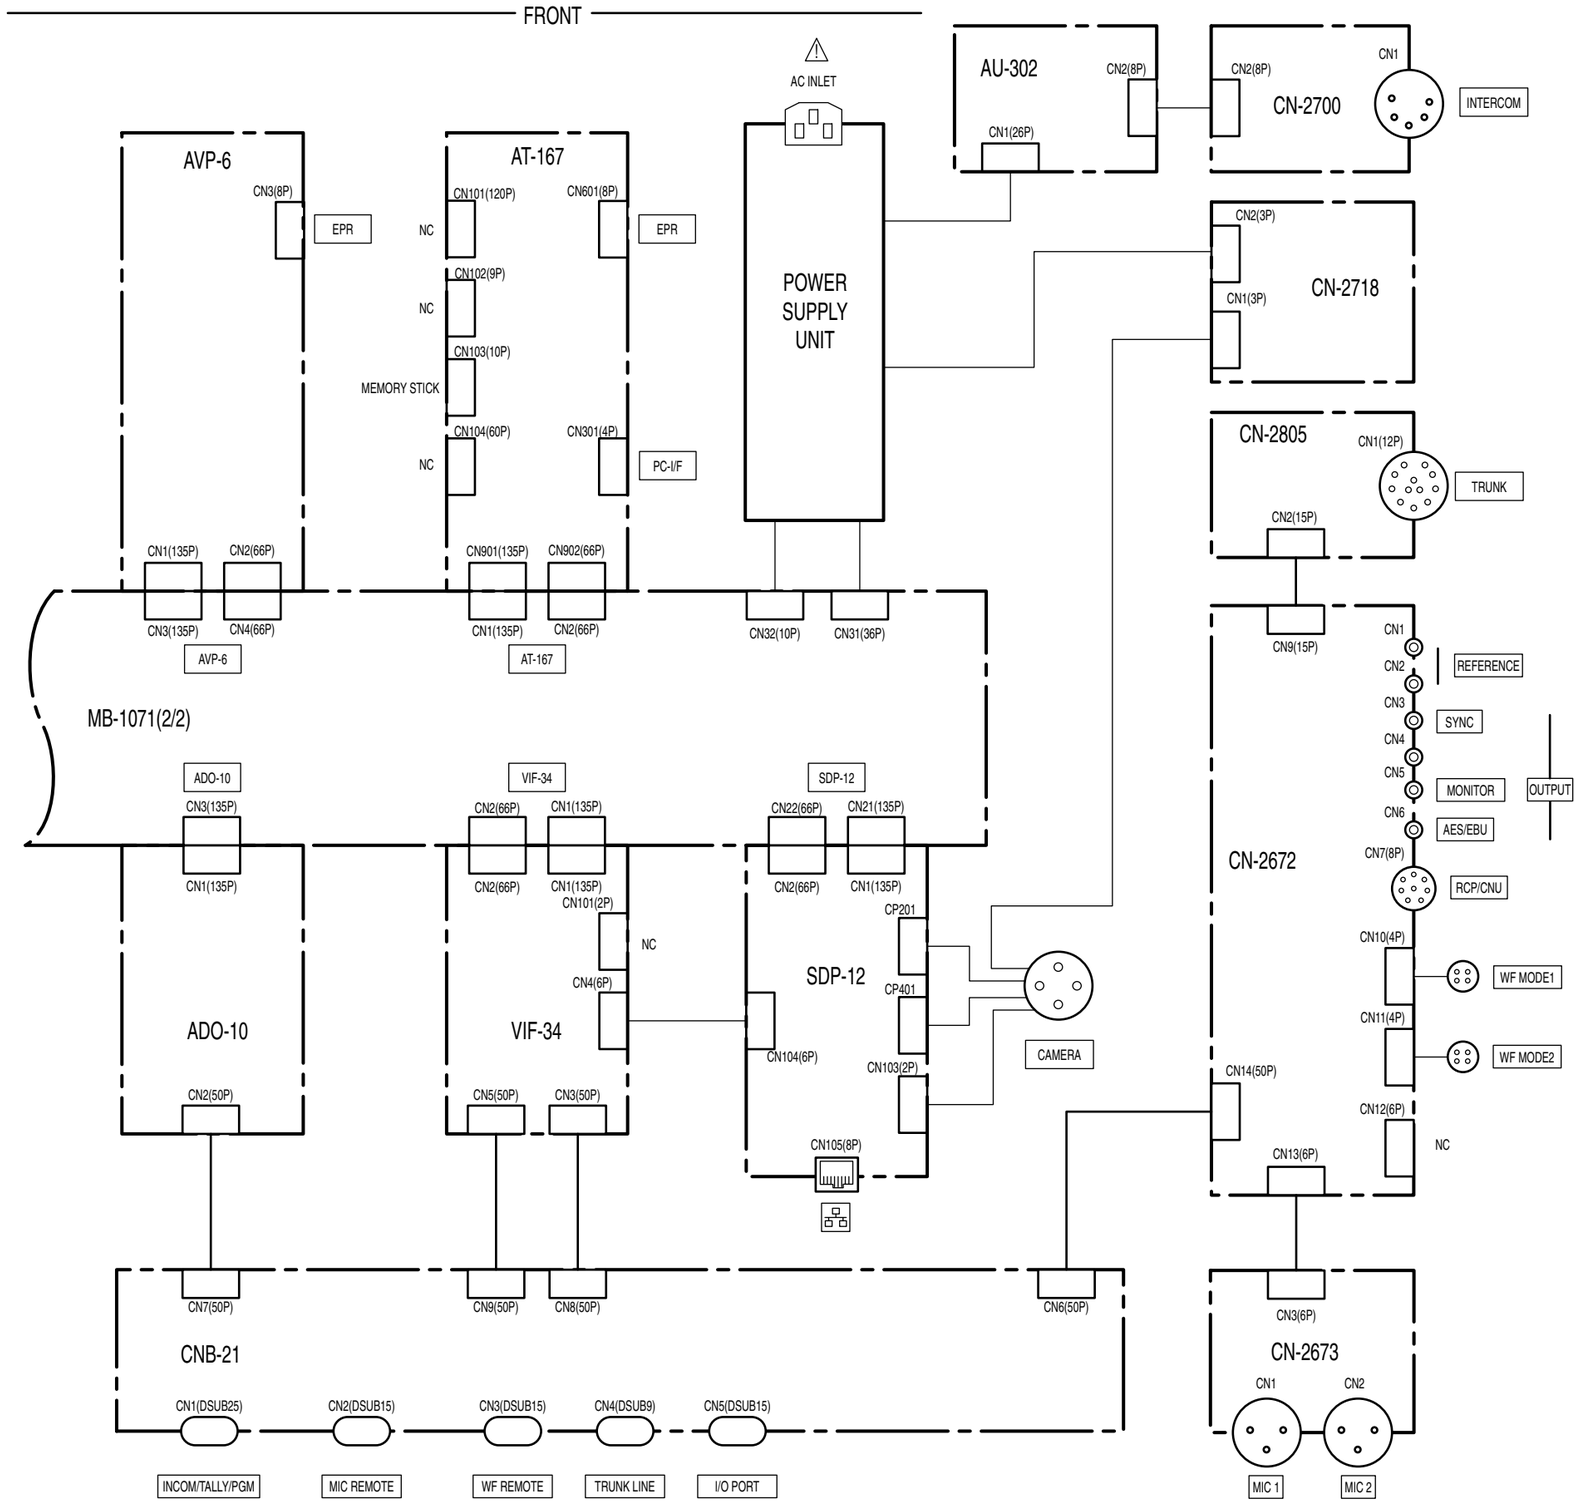

Frame Wiring (HDCU1080)

Frame Wiring (HDCU1500)

Frame Wiring (HDCU1500)

Section 8
Board Layouts

Index

Board Name	Page
ADO-10	8-3
AT-167	8-2
AU-302	8-3
AU-303/303G	8-3
AVP-6	8-4
CN-2672	8-5
CN-2673	8-5
CN-2674	8-5
CN-2675	8-5
CN-2676	8-5
CN-2677	8-5
CN-2678	8-5
CN-2700	8-6
CN-2718	8-6
CN-2805	8-6
CNB-21	8-6
CNB-22	8-10
DRX-5	8-7
DTX-5	8-8
DU-390	8-12
EN-159A	8-9
EN-159B	8-9
HIF-25	8-10
HIF-26	8-11
HIF-27	8-11
MB-1071	8-12
MB-1072	8-13
SDI-85	8-13
SDI-86	8-14
SDI-87	8-14
SDP-12	8-15
VDA-64A	8-16
VDA-64B	8-16
VDA-64C	8-16
VIF-34B	8-16
VIF-34	8-16

Board List

Board Name	HDCU1000	HDCU1080	HDCU1500	HKCU1001	HKCU1003	HKCU1005
ADO-10/10G*	○	○	○	–	–	–
AT-167	○	○	○	–	–	–
AU-302	○	○	–	–	–	–
AU-303/303G*	–	–	○	–	–	–
AVP-6	○	○	○	–	–	–
CN-2672/2672G*	○	○	–	–	–	–
CN-2673	○	○	–	–	–	–
CN-2674/2674G*	○	○	–	–	–	–
CN-2675/2675G*	–	–	○	–	–	–
CN-2676	–	–	○	–	–	–
CN-2677/2677G*	–	–	○	–	–	–
CN-2678	–	–	○	–	–	–
CN-2700	○	○	–	–	–	–
CN-2718	○	○	–	–	–	–
CN-2805/2805G*	○	○	–	–	–	–
CNB-21/21G*	○	○	–	–	–	–
CNB-22/22G*	–	–	○	–	–	–
DRX-5	○	○	○	–	–	○
DTX-5	○	○	○	–	–	–
DU-390	–	○	–	○	–	–
EN-159A	–	–	–	○	–	–
EN-159B	–	–	–	–	○	–
HIF-25	○	○	–	–	–	–
HIF-26	–	–	–	–	–	○
HIF-27	–	–	○	–	–	–
MB-1071	○	○	–	–	–	–
MB-1072/1072G*	–	–	○	–	–	–
SDI-85	○	○	–	–	–	–
SDI-86/86G*	○	○	–	–	–	–
SDI-87/87G*	–	–	○	–	–	–
SDP-12/12C	○	○	○	–	–	–
VDA-64A	–	–	–	○	○	–
VDA-64B	–	–	–	–	○	–
VDA-64C	–	–	–	–	○	–
VIF-34B/34BG*	–	–	○	–	–	–
VIF-34/34G*	○	○	–	–	–	–


注意

＊印の基板は2種類ありますが，マニュアル内の記載では簡素化するため基板名には“G”を付けていません。


Note

The board with an asterisk (*) has two types. However, the board name in the manual does not have “G” at the end for simplification.

8-1

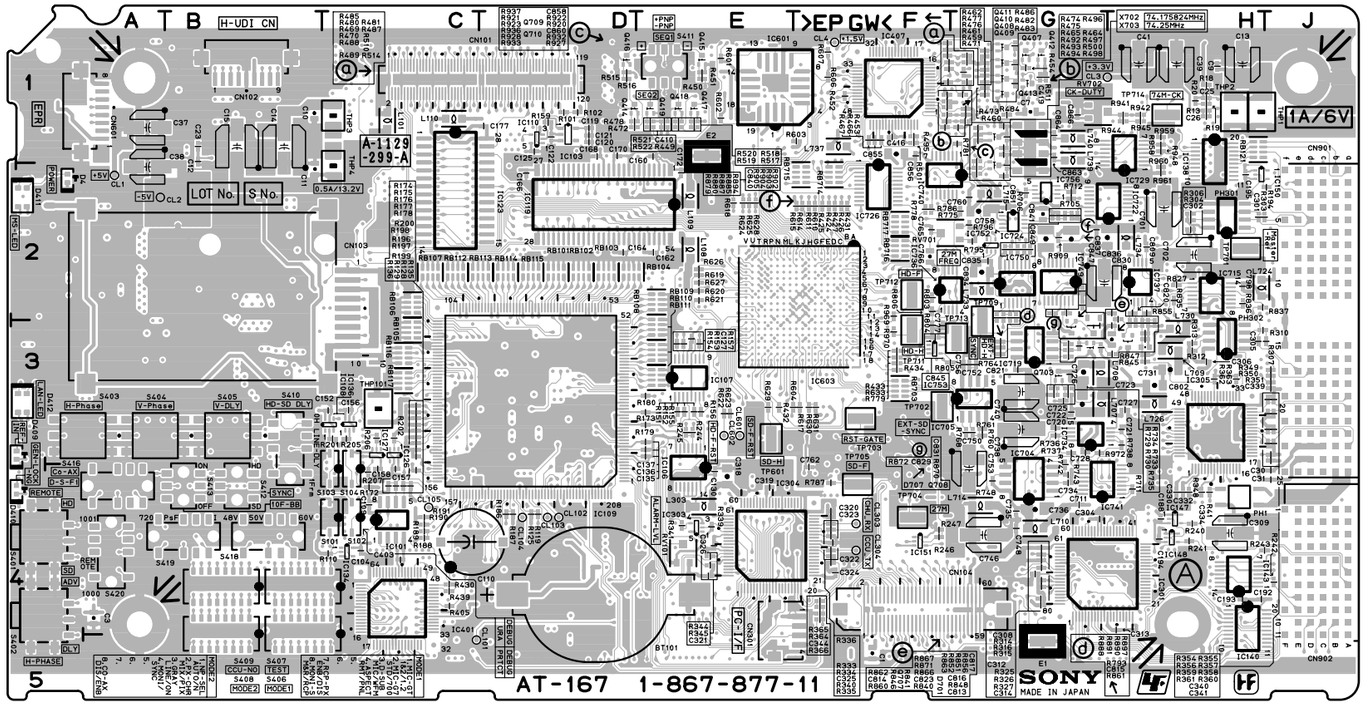

AT-167 -A SIDE-
SUFFIX: -11, 12

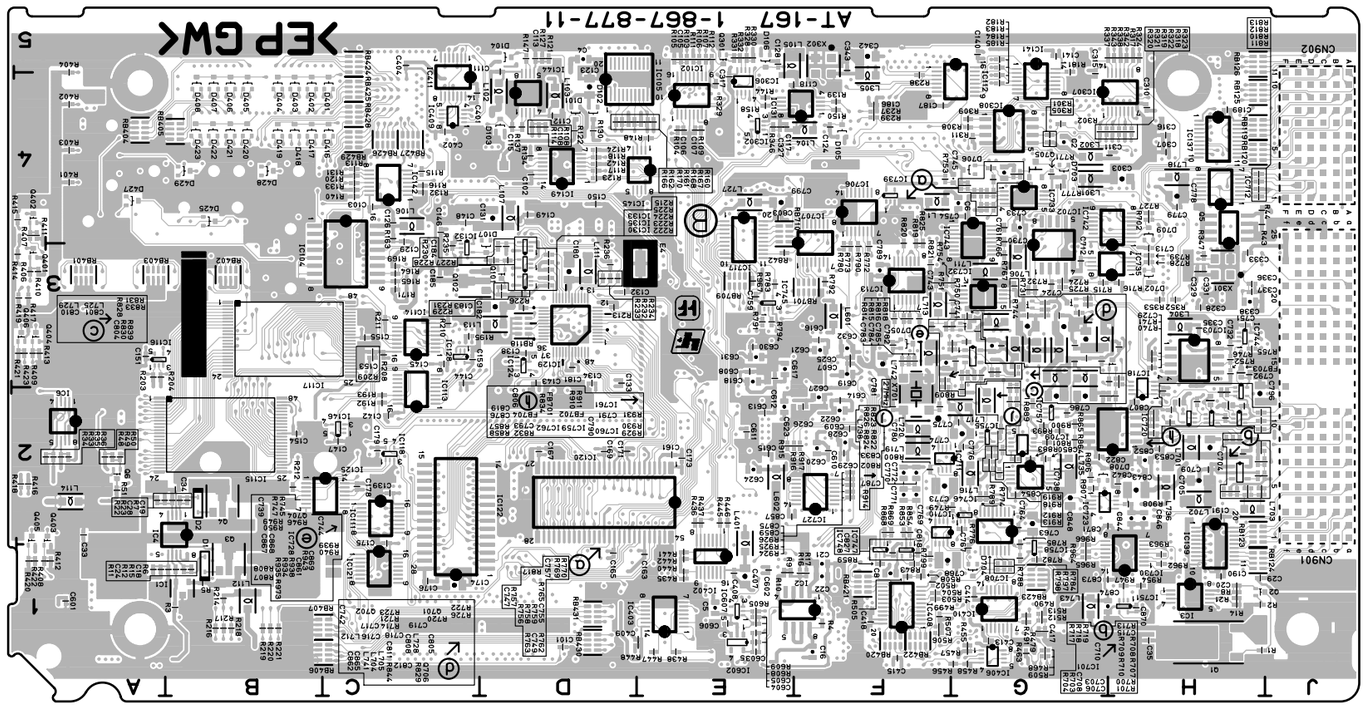


AT-167 -B SIDE-
SUFFIX: -11, 12


AT-167 (1-867-877-11, 12)
---

*:B SIDE


BT101	D4	IC106	E3	IC726	F2	L735	*G2	TP703	F3		
		IC107	E3	IC727	*F2	L736	*H2	TP704	F4		
CL1	A2	IC108	C3	IC728	*G3	L737	F1	TP705	F4		
CL2	A2	IC109	D3	IC729	H2	L738	*G2	TP709	G3		
CL3	G1	IC110	D1	IC730	*H1	L739	G1	TP711	F3		
CL4	F1	IC111	*C2	IC732	*G3	L740	G1	TP712	F2		
CL101	C5	IC112	*F5	IC733	*G4	L741	*G3	TP713	G3		
CL102	D4	IC113	*C2	IC734	H3	L742	*F3	TP714	H1		
CL103	D4	IC114	*C3	IC735	*H3	L743	*G1				
CL104	D4	IC115	*B2	IC736	F2			X301	*H3		
CL105	C4	IC116	*A3	IC737	H2	PH1	H4	X302	*F5		
CL303	F4	IC117	*B3	IC738	*G2	PH301	H2	X701	*F2		
CL304	F4	IC118	*C2	IC739	*F4	PH302	H3	X702	G1		
CL601	E3	IC119	E2	IC740	G1			X703	G1		
CL602	E3	IC120	*E2	IC741	H4	Q1	*H1				
		IC121	*C1	IC742	*H4	Q2	*H1				
CN101	D1	IC122	*D1	IC743	*G4	Q3	*B1				
CN102	B1	IC123	C1	IC744	*H3	Q4	*B2				
CN103	B2	IC124	*D3	IC745	*E3	Q5	*H4				
CN104	F4	IC125	*B2	IC746	*G2	Q6	*A2				
CN301	E4	IC126	C3	IC747	*F1	Q101	*D3				
CN601	A1	IC127	C3	IC748	*F1	Q102	*C3				
CN901	J3	IC128	*C3	IC749	G2	Q301	*E5				
CN902	J5	IC129	*D3	IC750	G2	Q401	*A3				
		IC130	*D3	IC751	*H1	Q402	*A4				
D1	*B1	IC131	*F4	IC752	G2	Q403	*A2				
D2	*B2	IC132	*C3	IC753	F3	Q404	*A3				
D4	A2	IC133	*D3	IC755	*G2	Q405	*A2				
D101	*D4	IC134	C4	IC756	G2	Q406	*A3				
D102	*D4	IC135	*D3	IC757	*G2	Q407	G1				
D103	*D4	IC136	C3	IC758	*G1	Q408	G1				
D104	*D5	IC137	*H4	IC759	*H2	Q409	G1				
D105	*F4	IC138	H1	IC760	*H2	Q410	G1				
D106	*E5	IC139	*H2	IC761	*H2	Q411	G1				
D107	*D3	IC140	H4	IC762	*H2	Q412	G1				
D401	*C4	IC141	*G5			Q413	G1				
D402	*B4	IC142	*C4	L1	*F4	Q414	D1				
D403	*B4	IC143	H4	L101	C1	Q415	E1				
D404	*B4	IC144	*D4	L102	*D4	Q416	D1				
D405	*B4	IC145	*E4	L103	*D4	Q417	E1				
D406	*B4	IC146	*C2	L104	*F4	Q418	E1				
D407	*B4	IC147	H4	L105	*E5	Q419	E1				
D408	*B4	IC148	H4	L106	*C4	Q701	*G3				
D409	A3	IC149	*D4	L107	*D4	Q702	*G3				
D410	A4	IC150	H2	L108	E2	Q703	G3				
D411	A2	IC151	F4	L109	E2	Q704	*G3				
D412	A3	IC301	G4	L110	C1	Q705	*G4				
D416	*C4	IC302	*E4	L111	*D3	Q706	*H3				
D417	*B4	IC303	E4	L112	*B1	Q707	G3				
D418	*B4	IC304	E4	L113	*D3	Q708	G3				
D419	*B4	IC305	H3	L114	*A2	Q709	G1				
D420	*B4	IC306	*E4	L301	*G4	Q710	G2				
D421	*B4	IC307	*G4	L302	*G4						
D422	*B4	IC308	*G4	L303	E4	RV101	E4				
D423	*B4	IC401	C4	L304	*H3	RV701	F2				
D425	*B4	IC402	*E2	L305	*F4	RV702	G1				
D427	*A4	IC403	*E1	L401	*E2						
D428	*B4	IC406	*G1	L601	*F3	S101	C4				
D429	*B4	IC407	F1	L602	*E2	S102	C4				
D701	H3	IC408	*F1	L701	*H2	S103	C4				
D702	*H3	IC409	*C4	L702	*H2	S104	C4				
D703	*G4	IC410	*G1	L703	*H2	S401	A4				
D704	*G1	IC411	*C5	L704	*G3	S402	A4				
D705	*F3	IC601	E1	L705	*G3	S403	A3				
D706	*G4	IC602	*E1	L706	*G3	S404	A3				
D707	G3	IC603	F2	L707	G3	S405	B3				
D708	*G2	IC607	*E1	L708	G3	S406	B4				
D709	*H4	IC701	*H2	L709	H3	S407	B4				
		IC702	*G3	L710	G4	S408	B4				
E1	G5	IC703	*H3	L711	*G3	S409	B4				
E2	E1	IC704	G4	L712	*G3	S410	B3				
E4	*E3	IC705	G3	L713	*F3	S411	E1				
		IC706	*F4	L714	G4	S412	B4				
FB701	*H2	IC707	*F3	L715	G2	S413	B4				
FB702	*H2	IC708	*G2	L716	*G2	S416	A4				
FB703	*H3	IC709	*G2	L717	*G2	S418	B4				
FB704	*H2	IC710	*F2	L718	*H4	S419	B4				
		IC711	*F2	L719	*F2	S420	A4				
IC1	*B1	IC712	*H4	L720	*F2						
IC2	*F1	IC713	*F3	L724	H2	THP1	H1				
IC3	*H1	IC715	H2	L725	*G3	THP2	H1				
IC4	*B2	IC717	*E4	L726	H3	THP3	C1				
IC6	*A2	IC718	*H2	L727	*E4	THP4	C2				
IC101	C4	IC719	G3	L728	*G3	THP101	C3				
IC102	*E4	IC720	*H2	L729	*G3						
IC103	D1	IC722	H2	L730	H3	TP601	E3				
IC104	*B4	IC723	*G2	L733	G2	TP701	H2				
IC105	*D4	IC724	G2	L734	H2	TP702	F3				

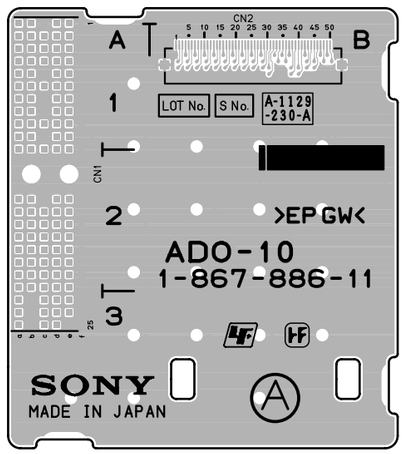


ADO-10 -A SIDE-
SUFFIX: -11

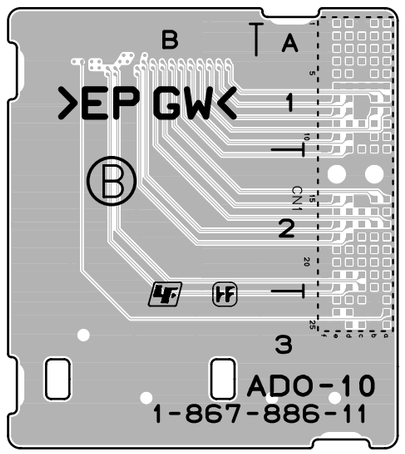

ADO-10 -B SIDE-
SUFFIX: -11

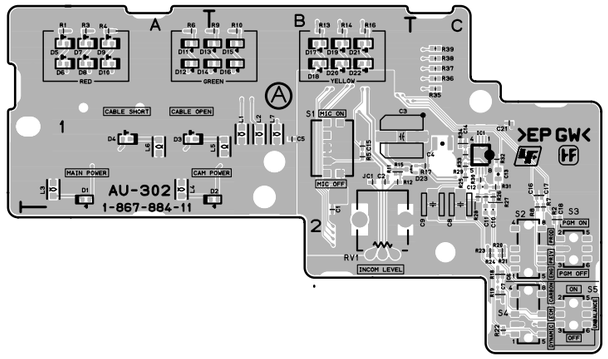

AU-302 -A SIDE-
SUFFIX: -11, 12

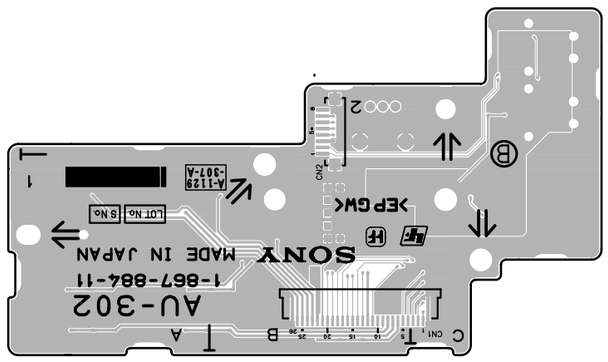

AU-302 -B SIDE-
SUFFIX: -11, 12

```
-----------------------
AU-302 (1-867-884-11, 12)
-----------------------

*:B SIDE

CN1     *B1
CN2     *B2


D1       A1
D2       B1
D3       A1
D4       A1
D5       A1
D6       A1
D7       A1
D8       A1
D9       A1
D10      A1
D11      A1
D12      A1
D13      B1
D14      B1
D15      B1
D16      B1
D17      B1
D18      B1
D19      B1
D20      B1
D21      B1
D22      B1
D23      C1

IC1      C1


RV1      B2

S1       B1
S2       C2
S3       C2
S4       C2
S5       C2
```


ADO-10, AU-302, AU-303, AU-303G

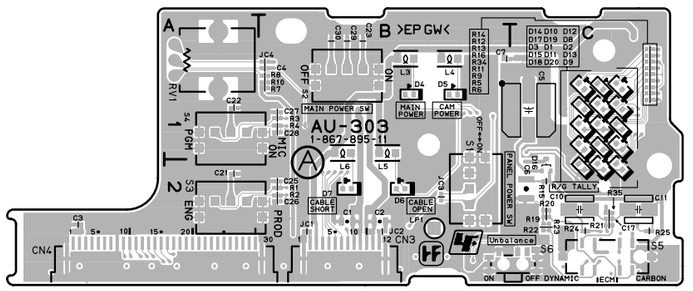

AU-303
-A SIDE-
SUFFIX: -11

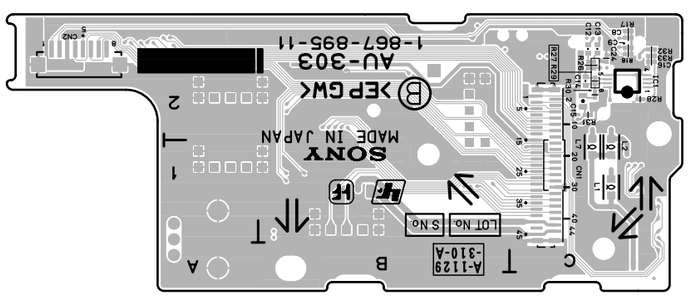

AU-303
-B SIDE-
SUFFIX: -11


```
-----------------------
AU-303 (1-867-895-11)
-----------------------

*:B SIDE


CN1     *C1      LP1      B2
CN2     *A2
CN3      B2      RV1      A1
CN4      A2
                 S1       B2
D1       C1      S2       B1
D2       C1      S3       A2
D3       C1      S4       A1
D4       B1      S5       C2
D5       B1      S6       C2
D6       B2
D7       B2
D8       C1
D9       C2
D10      C1
D11      C1
D12      C1
D13      C1
D14      C1
D15      C1
D16      C2
D17      C1
D18      C2
D19      C1
D20      C2

IC1     *C2

L1      *C1
L2      *C1
L3       B1
L4       B1
L5       B1
L6       B1
L7      *C1
```

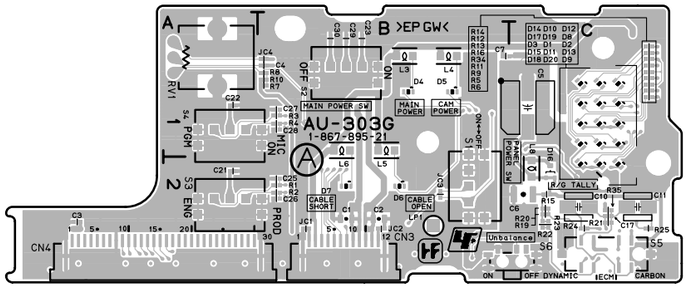

AU-303G
-A SIDE-
SUFFIX: -21

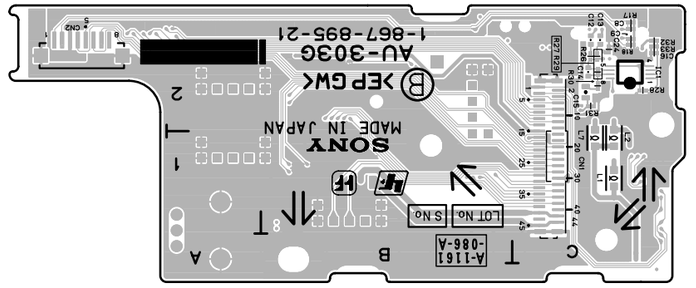

AU-303G
-B SIDE-
SUFFIX: -21


```
-----------------------
AU-303G (1-867-895-21)
-----------------------

*:B SIDE


CN1     *C1      LP1      B2
CN2     *A2
CN3      B2      RV1      A1
CN4      A2
                 S1       B2
D1       C1      S2       B1
D2       C1      S3       A2
D3       C1      S4       A1
D4       B1      S5       C2
D5       B1      S6       C2
D6       B2
D7       B2
D8       C1
D9       C2
D10      C1
D11      C1
D12      C1
D13      C1
D14      C1
D15      C1
D16      C2
D17      C1
D18      C2
D19      C1
D20      C2

IC1     *C2

L1      *C1
L2      *C1
L3       B1
L4       B1
L5       B1
L6       B1
L7      *C1
```

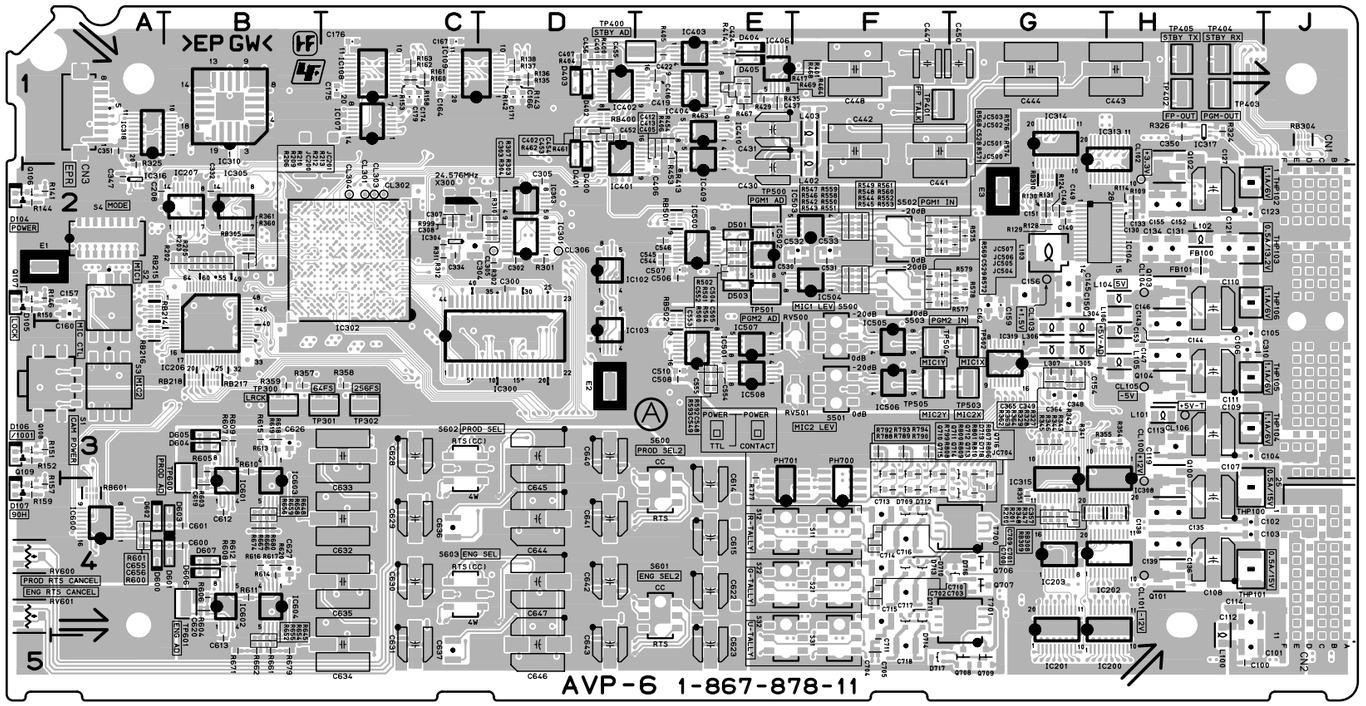

AVP-6 -A SIDE-
SUFFIX: -11, 12

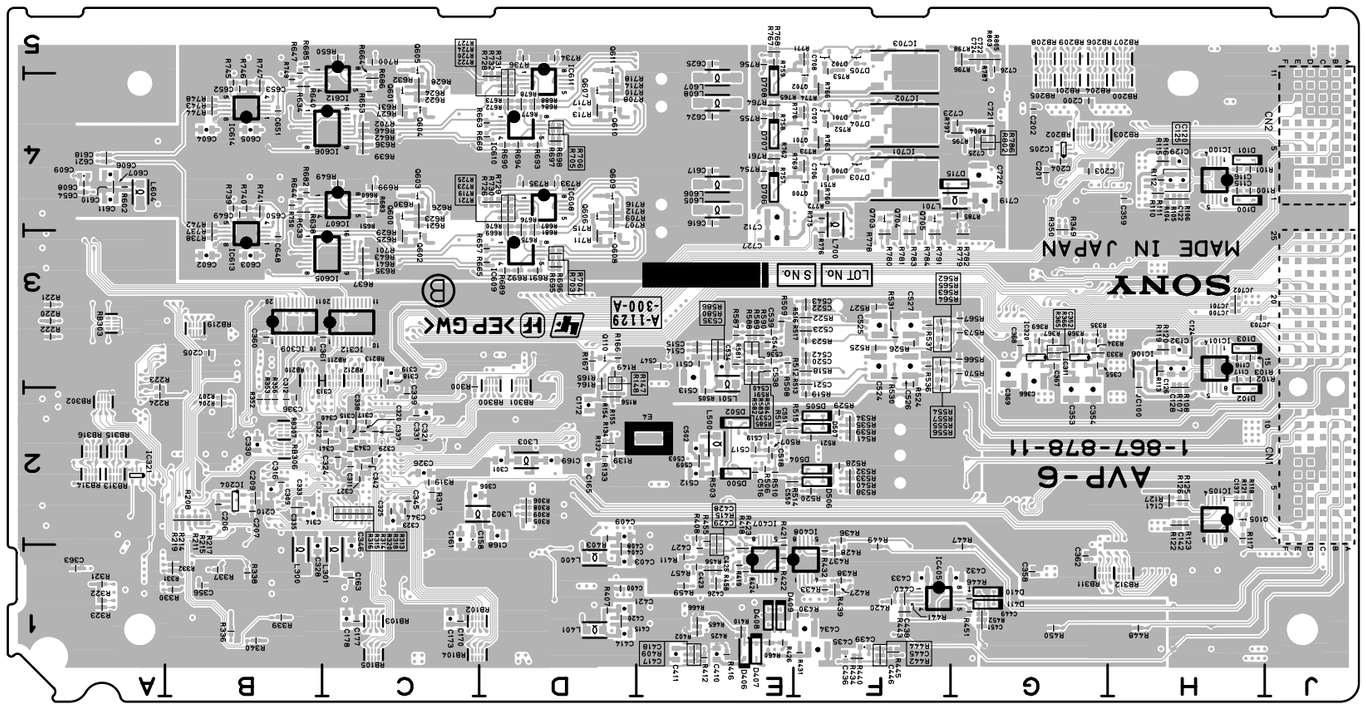


AVP-6 -B SIDE-
SUFFIX: -11, 12

AVP-6 (1-867-878-11, 12)
---


*:B SIDE

CL100	H4	IC107	C1	L604	*A4	TP302	C3
CL101	H4	IC108	C1	L605	*E4	TP400	E1
CL102	H2	IC109	D1	L606	*E4	TP401	F1
CL103	G2	IC200	G5	L607	*E4	TP402	H1
CL104	H2	IC201	G5	L608	*E4	TP403	H1
CL105	H3	IC202	G4	L700	*F4	TP404	H1
CL106	H3	IC203	G4	L701	*G4	TP405	H1
CL301	C2	IC204	*B2			TP500	E2
CL302	C2	IC205	*G4	PH700	F4	TP501	E2
CL303	C2	IC206	B3	PH701	E4	TP502	G3
CL304	C2	IC207	B2			TP503	G3
CL305	D2	IC300	C3	Q1	E1	TP504	F3
CL306	D2	IC301	D2	Q100	H4	TP505	F3
		IC302	C2	Q101	H4	TP600	B4
CN1	J3	IC303	D2	Q102	H2	TP601	B4
CN2	J5	IC304	C2	Q103	H2		
CN3	A1	IC305	B2	Q104	H3	X300	C2
		IC308	H3	Q105	*H2		
D100	*H4	IC309	*B3	Q106	A2		
D101	*H4	IC310	B1	Q107	A2		
D102	*H2	IC311	*G3	Q108	A3		
D103	*H3	IC312	*C3	Q109	A4		
D104	A2	IC313	G2	Q110	*D3		
D105	A2	IC314	G1	Q600	*C4		
D106	A3	IC315	G3	Q601	*C4		
D107	A4	IC316	A2	Q602	*C3		
D400	D1	IC317	H1	Q603	*C4		
D401	D1	IC318	B1	Q604	*C4		
D402	D1	IC319	G3	Q605	*C5		
D403	D1	IC320	*G3	Q606	*D4		
D404	E1	IC321	*A2	Q607	*D4		
D405	E1	IC401	D1	Q608	*D3		
D406	*E1	IC402	D1	Q609	*D4		
D407	*E1	IC403	E1	Q610	*D4		
D408	*E1	IC404	E1	Q611	*D5		
D409	*E1	IC405	*F1	Q700	*F4		
D410	*G1	IC406	E1	Q701	*F4		
D411	*G1	IC407	*E1	Q702	*F4		
D500	*E2	IC408	*F1	Q703	*F4		
D501	E2	IC409	E2	Q704	*F4		
D502	*E2	IC410	E1	Q705	*F4		
D503	E2	IC500	E2	Q706	G4		
D504	*F2	IC501	E3	Q707	G4		
D505	*F2	IC502	E2	Q708	G5		
D506	*F2	IC503	F2	Q709	G5		
D507	*F2	IC504	F2	Q710	F3		
D600	A4	IC505	F3	Q711	F3		
D601	B4	IC506	F3	Q712	F3		
D602	A4	IC507	E3	Q713	F4		
D603	B4	IC508	E3	Q714	F4		
D604	B3	IC600	A4	Q715	F4		
D605	B3	IC601	B4	Q716	G3		
D606	B4	IC602	B4				
D607	B4	IC603	B3	RV500	F3		
D700	*F4	IC604	B4	RV501	F3		
D701	*F4	IC605	*B3	RV600	A4		
D702	*F5	IC606	*B4	RV601	A4		
D703	*F4	IC607	*B4				
D704	*F4	IC608	*D4	S1	A3		
D705	*F5	IC609	*D3	S2	A2		
D706	*E4	IC610	*D4	S3	A3		
D707	*E4	IC611	*D4	S4	A2		
D708	*E4	IC612	*B5	S11	F4		
D709	F4	IC613	*B3	S12	E4		
D710	F4	IC614	*B4	S21	F4		
D711	F4	IC701	*F4	S22	E4		
D712	F4	IC702	*F4	S31	F5		
D713	F4	IC703	*F5	S32	E5		
D714	F4			S500	F3		
D715	*G4	L100	H5	S501	F3		
D716	G4	L101	H3	S502	F2		
D717	F5	L102	H2	S503	F2		
D718	G4	L103	G2	S600	E4		
D719	G3	L104	H2	S601	E4		
		L105	H3	S602	C3		
E1	A2	L106	H3	S603	C4		
E2	D3	L300	*B1				
E3	G2	L301	*C1	T700	G4		
E4	*E2	L302	*C2	T701	G4		
		L303	*D2				
FB100	H2	L304	G3	THP100	H4		
FB101	H2	L305	G3	THP101	H4		
		L306	G3	THP102	H2		
IC100	*H4	L307	G3	THP103	H2		
IC101	*H3	L400	*D1	THP104	H3		
IC102	D2	L401	*D1	THP105	H3		
IC103	D3	L402	F2	THP106	H2		
IC104	G2	L403	F1				
IC105	*H2	L500	*E2	TP300	B3		
IC106	*H3	L501	*E3	TP301	C3		


CN-2672, CN-2673, CN-2674, CN-2675, CN-2676, CN-2677, CN-2678

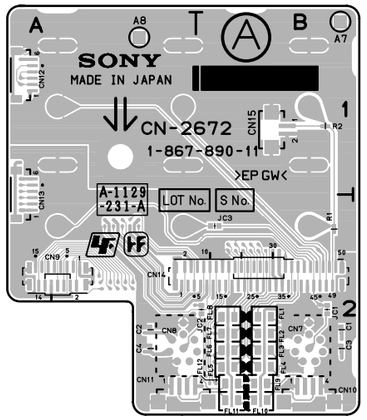


CN-2672 -A SIDE-
SUFFIX: -11

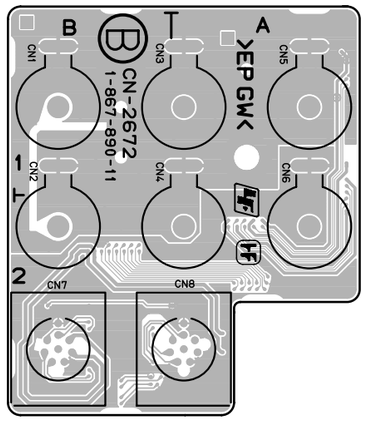


CN-2672 -B SIDE-
SUFFIX: -11

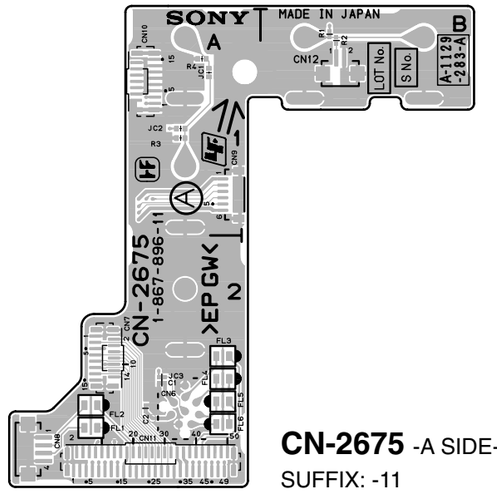


CN-2675 -A SIDE-
SUFFIX: -11

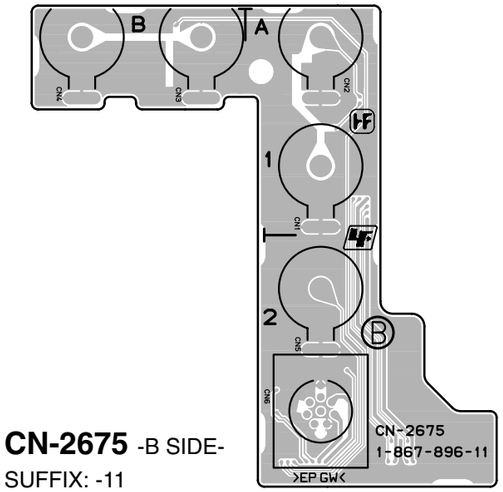


CN-2675 -B SIDE-
SUFFIX: -11

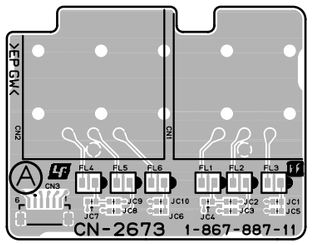


CN-2673 -A SIDE-
SUFFIX: -11

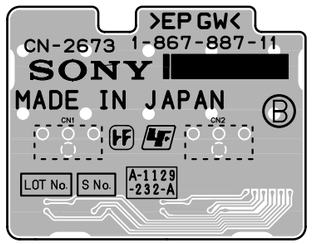


CN-2673 -B SIDE-
SUFFIX: -11

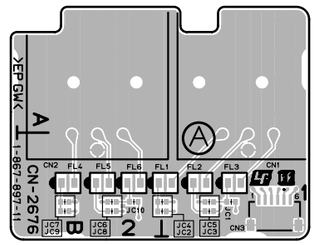


CN-2676 -A SIDE-
SUFFIX: -11

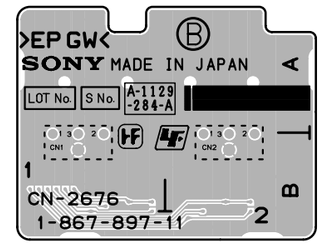


CN-2676 -B SIDE-
SUFFIX: -11

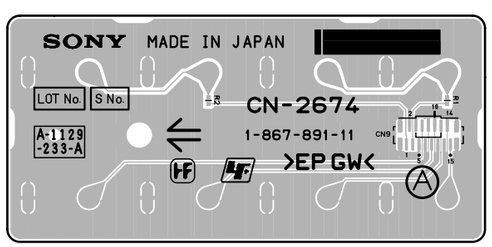

CN-2674 -A SIDE-
SUFFIX: -11

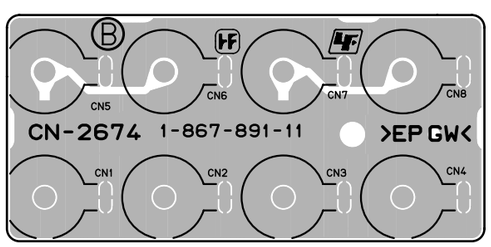

CN-2674 -B SIDE-
SUFFIX: -11

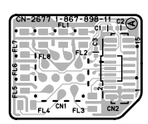


CN-2677 -A SIDE-
SUFFIX: -11



CN-2677 -B SIDE-
SUFFIX: -11



CN-2678 -A SIDE-
SUFFIX: -11

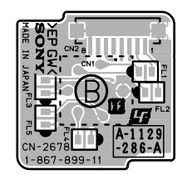


CN-2678 -B SIDE-
SUFFIX: -11


CN-2700, CN-2718, CN-2805, CNB-21




CN-2700 -A SIDE-
SUFFIX: -11

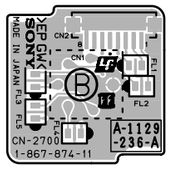


CN-2700 -B SIDE-
SUFFIX: -11

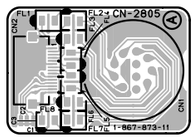


CN-2805 -A SIDE-
SUFFIX: -11

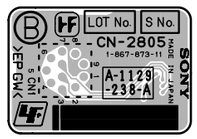


CN-2805 -B SIDE-
SUFFIX: -11

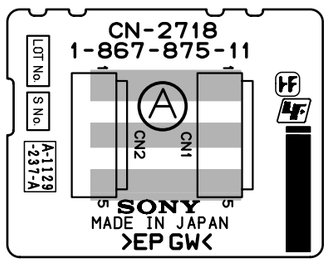


CN-2718 -A SIDE-
SUFFIX: -11

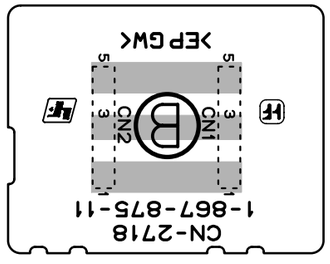

CN-2718 -B SIDE-
SUFFIX: -11

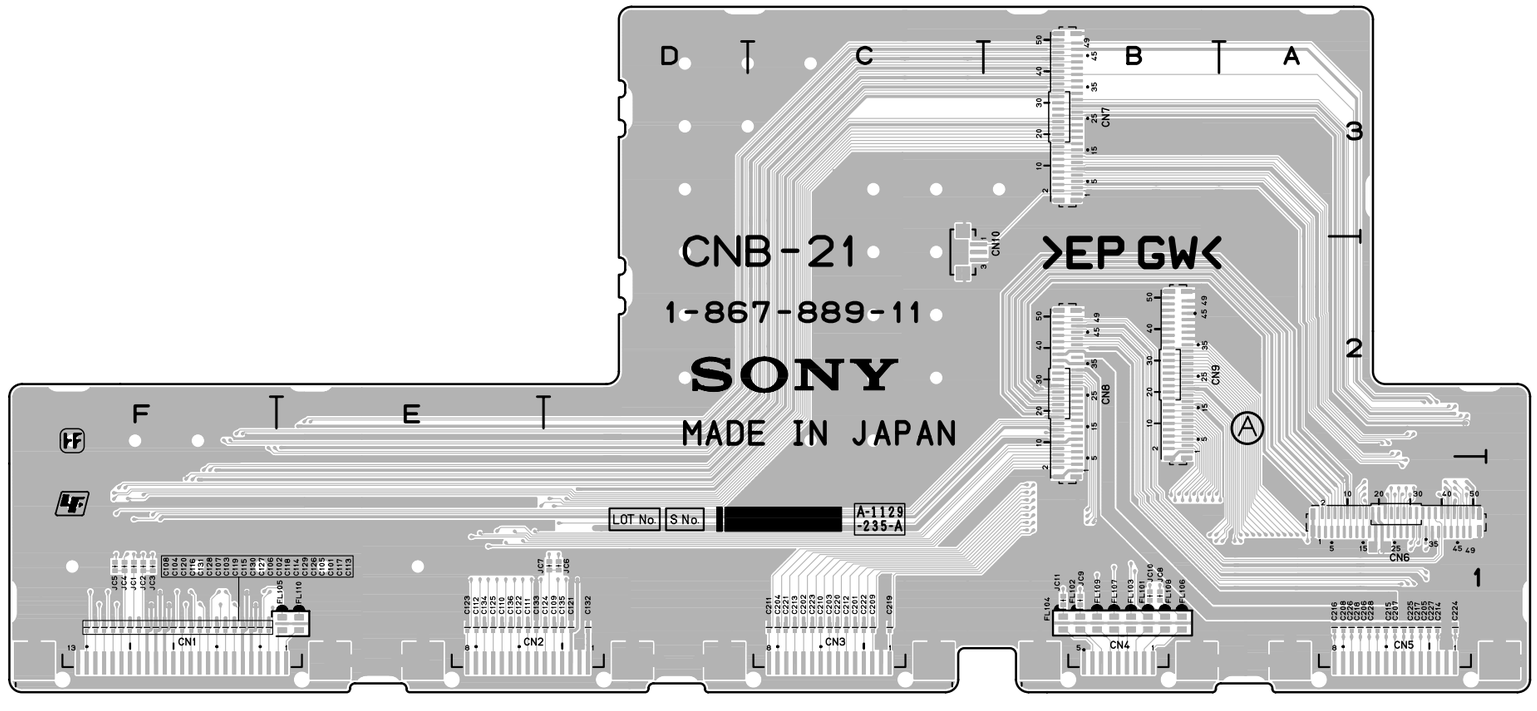


CNB-21 -A SIDE-
SUFFIX: -11

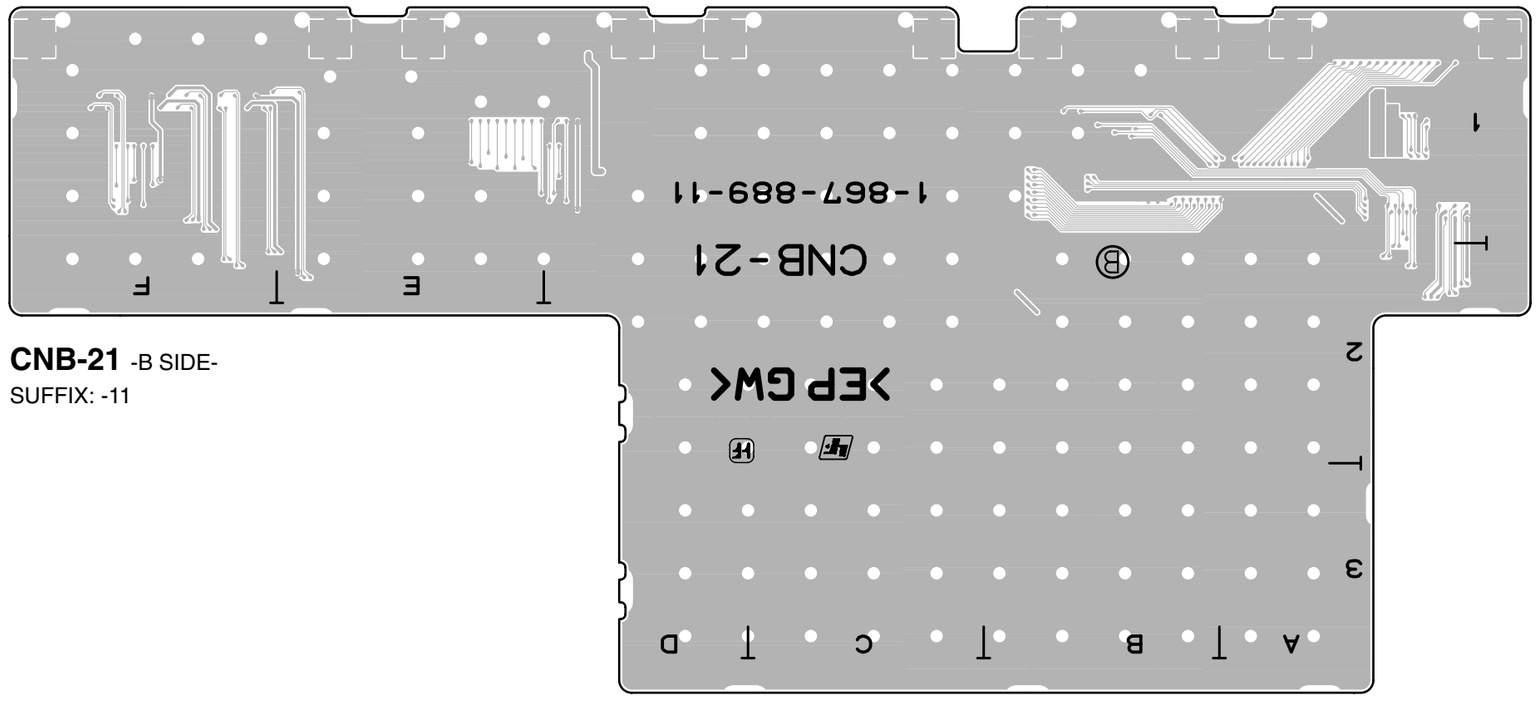


CNB-21 -B SIDE-
SUFFIX: -11

8-6

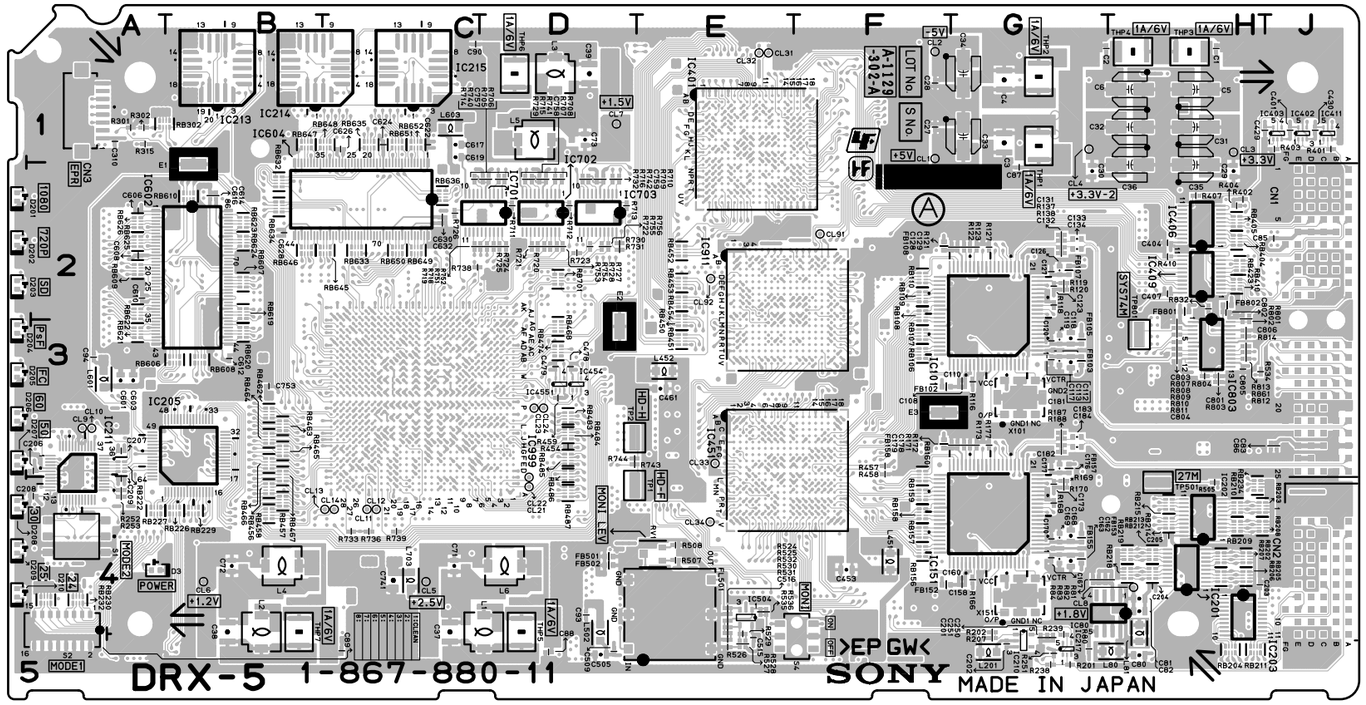

DRX-5 -A SIDE-
SUFFIX: -11, 12

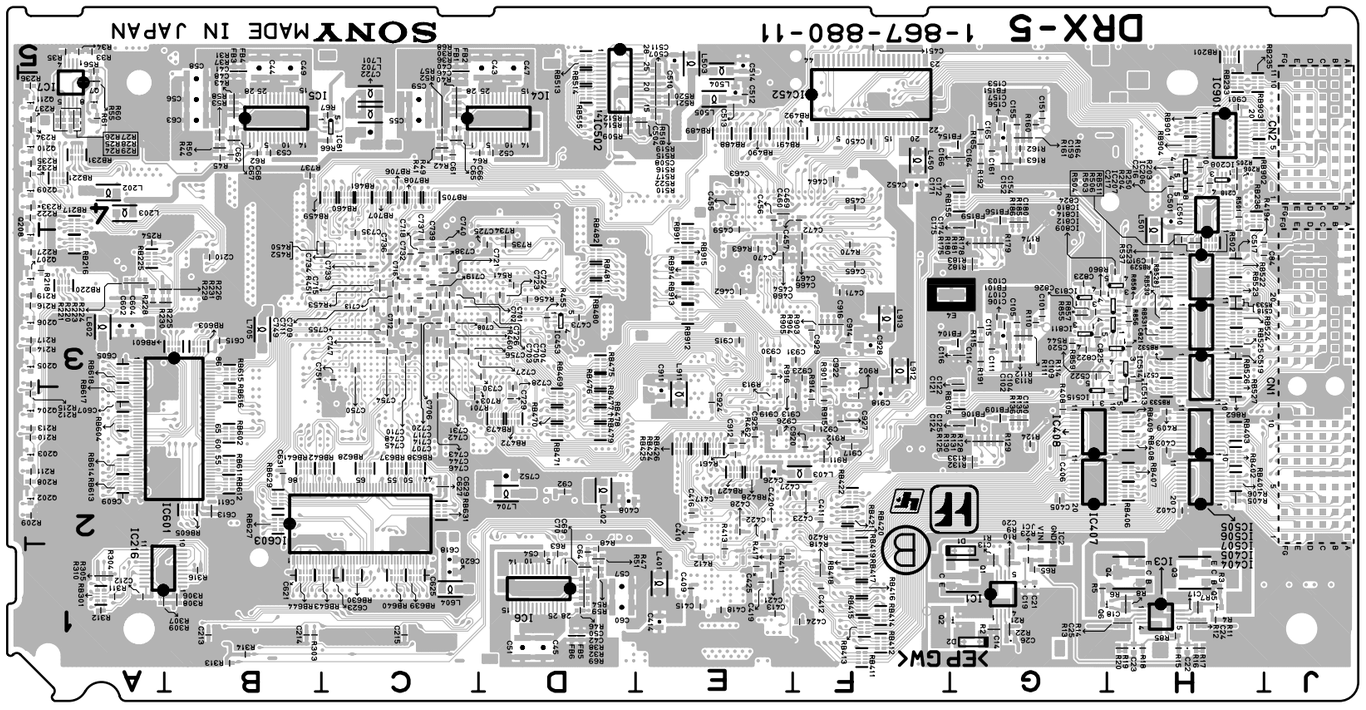


DRX-5 -B SIDE-
SUFFIX: -11, 12


DRX-5 (1-867-880-11, 12)
---

*:B SIDE

CL1	F1	IC201	H4	Q1	*G1
CL2	F1	IC202	H4	Q2	*G1
CL3	H1	IC203	H4	Q3	*H1
CL4	G1	IC205	B3	Q4	*H1
CL5	C4	IC206	*H4	Q5	*H1
CL6	B4	IC207	*H4	Q6	*G1
CL7	D1	IC208	*H4	Q7	*A4
CL8	H4	IC210	G5	Q202	*A2
CL9	A3	IC211	A3	Q203	*A2
CL10	A3	IC213	B1	Q204	*A2
CL11	C4	IC214	B1	Q205	*A3
CL12	C4	IC215	C1	Q206	*A3
CL13	C4	IC216	*B1	Q207	*A3
CL14	C4	IC217	G5	Q208	*A3
CL21	D4	IC401	E1	Q209	*A4
CL22	D4	IC402	J1	Q210	*A4
CL23	D3	IC403	J1	Q211	*A4
CL24	D3	IC404	*H2		
CL31	E1	IC405	*H2	RV1	E4
CL32	E1	IC406	H2		
CL33	E3	IC407	*H2	S1	A4
CL34	E4	IC408	*H2	S2	A4
CL91	F2	IC409	H2	S4	F5
CL92	E2	IC411	J1		
		IC451	E3	THP1	G1
CN1	J3	IC452	*F4	THP2	G1
CN2	J5	IC453	*D3	THP3	H1
CN3	A1	IC454	D3	THP4	H1
		IC455	D3	THP5	D4
D1	*G1	IC502	*D5	THP6	D1
D2	*G1	IC504	E4	THP7	B4
D3	A4	IC505	*H3		
D201	A2	IC506	*H3	TP1	D4
D202	A2	IC507	*H3	TP2	D3
D203	A2	IC510	*H4	TP501	H4
D204	A3	IC513	*H2	TP801	H3
D205	A3	IC514	*H3		
D206	A3	IC515	*G2	X101	G3
D207	A3	IC601	*A3	X151	G4
D208	A4	IC602	A2		
D209	A4	IC603	*B1		
D210	A4	IC604	C2		
		IC701	D2		
E1	B2	IC702	D2		
E2	D3	IC703	D2		
E3	F3	IC803	H3		
E4	*G3	IC809	*H3		
		IC810	*H3		
FB1	*C5	IC811	*G3		
FB2	*C5	IC812	*H3		
FB3	*B5	IC813	*G3		
FB4	*B5	IC814	*H3		
FB5	*D1	IC901	*H4		
FB6	*D1	IC911	E2		
FB101	*G3	IC999	C3		
FB102	F3				
FB103	G3	L1	D4		
FB104	*G3	L2	B4		
FB105	G3	L3	D1		
FB106	*G2	L4	B4		
FB107	G2	L5	D1		
FB108	F2	L6	D4		
FB109	*G2	L80	H5		
FB151	*G4	L81	H4		
FB152	F4	L201	G5		
FB153	G4	L202	*A4		
FB154	*G4	L203	*A4		
FB155	G4	L401	*E1		
FB156	*G4	L402	*D2		
FB157	G3	L403	*F2		
FB158	F3	L450	*F4		
FB159	*G4	L451	F4		
FB501	D4	L452	E3		
FB502	D4	L501	*H3		
FB801	H2	L502	D4		
FB802	H2	L503	*E5		
		L504	*E5		
FL501	E4	L505	*E4		
		L601	A3		
IC1	*G1	L602	*A3		
IC2	*G1	L603	C1		
IC3	*H1	L604	*C1		
IC4	*C4	L701	*C4		
IC5	*B4	L702	*C4		
IC6	*D1	L703	C4		
IC7	*A5	L704	*D2		
IC80	H4	L705	*B3		
IC81	*C4	L911	*E2		
IC101	G2	L912	*F3		
IC151	G4	L913	*F3		

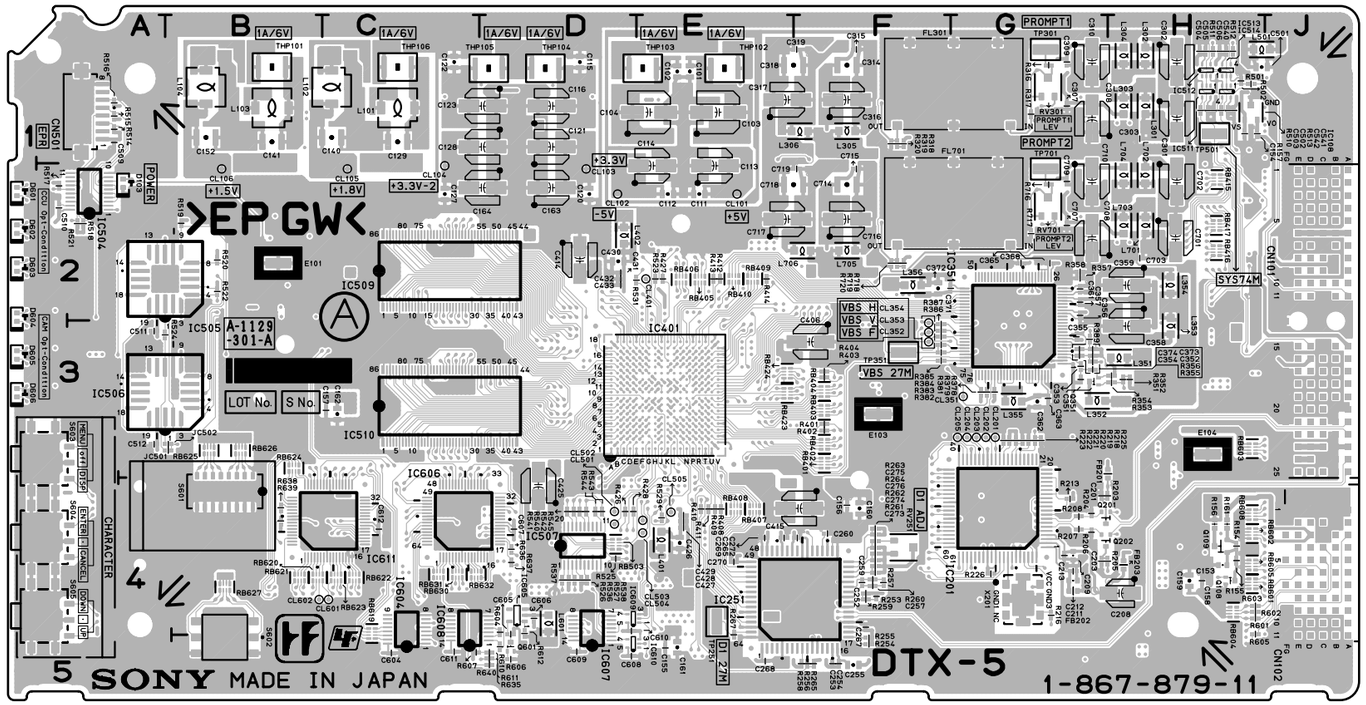

DTX-5 -A SIDE-
SUFFIX: -11

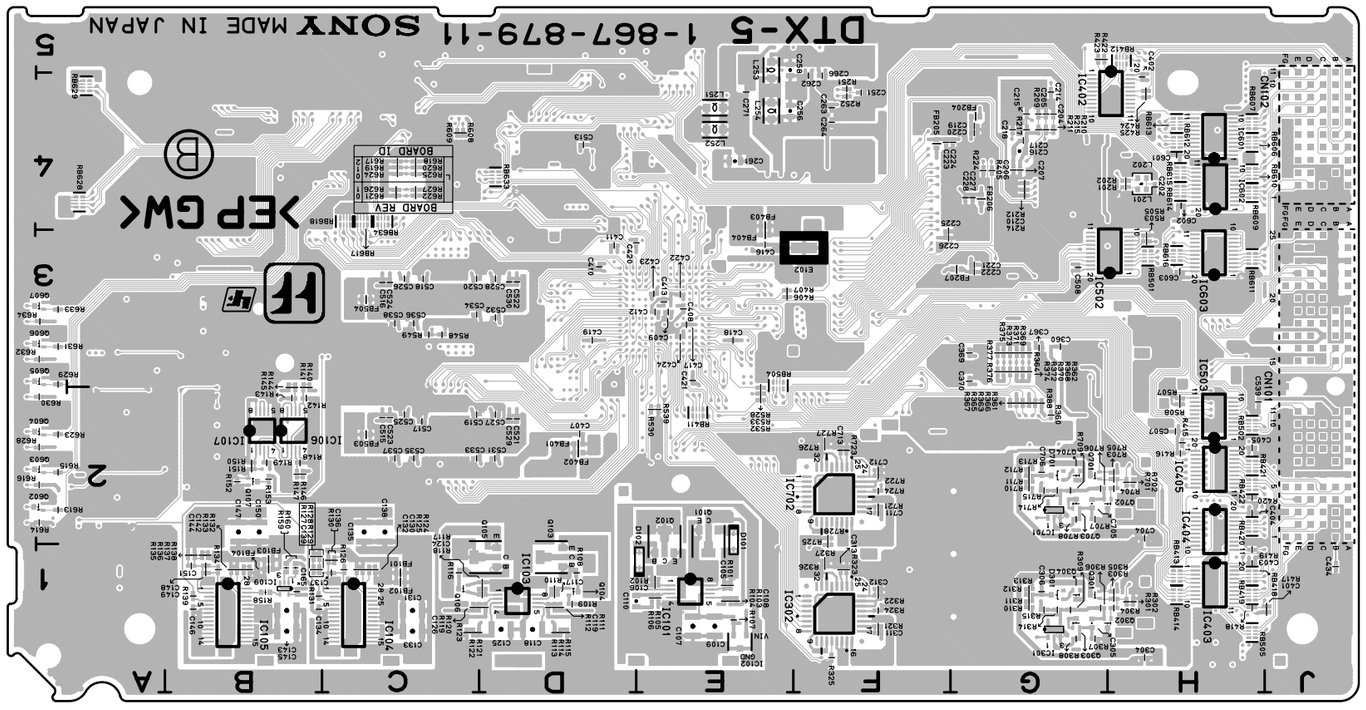


DTX-5 -B SIDE-
SUFFIX: -11


DTX-5 (1-867-879-11)
---

*:B SIDE

CL101	E2	IC509	C2	THP101	B1
CL102	D2	IC510	C3	THP102	E1
CL103	D2	IC511	H1	THP103	E1
CL104	C2	IC512	H1	THP104	D1
CL105	C2	IC513	H1	THP105	D1
CL106	B2	IC514	H1	THP106	C1
CL201	G3	IC601	*H4		
CL202	G3	IC602	*H4	TP251	E4
CL203	G3	IC603	*H3	TP301	G1
CL204	G3	IC604	C5	TP351	F3
CL205	G3	IC605	D4	TP501	H1
CL351	G3	IC606	C4	TP701	G2
CL352	F3	IC607	D5		
CL353	F3	IC608	D5	X201	G4
CL354	F3	IC609	D4		
CL401	E2	IC610	D5		
CL501	D4	IC611	C4		
CL502	D4	IC701	*G2		
CL503	E4	IC702	*F2		
CL504	E4				
CL505	E4	L101	C1		
CL601	C4	L102	C1		
CL602	B4	L103	B1		
		L104	B1		
CN101	J3	L201	*H4		
CN102	J5	L202	*H4		
CN501	A1	L251	*E4		
		L252	*E4		
D101	*E2	L253	*E5		
D102	*E1	L254	*E4		
D103	A2	L301	H1		
D301	*G1	L302	H1		
D601	A2	L303	H1		
D602	A2	L304	H1		
D603	A2	L305	F1		
D604	A2	L306	F1		
D605	A3	L351	H3		
D606	A3	L352	G3		
D701	*G2	L353	H3		
		L354	H2		
E101	B2	L355	G3		
E102	*F3	L356	F2		
E103	F3	L401	E4		
E104	H3	L402	D2		
		L501	H1		
FB101	*C1	L601	D4		
FB102	*C1	L701	H2		
FB103	*B1	L702	H2		
FB104	*B1	L703	H2		
FB201	G3	L704	H2		
FB202	G4	L705	F2		
FB203	H4	L706	F2		
FB204	*G4				
FB205	*F4	Q101	*E2		
FB206	*G4	Q102	*E2		
FB207	*G3	Q103	*D1		
FB401	*D2	Q104	*D1		
FB402	*D2	Q105	*D1		
FB403	*E4	Q106	*C1		
FB404	*E3	Q107	*B2		
FB503	*C2	Q108	H4		
FB504	*C3	Q109	H4		
		Q201	G4		
FL301	G1	Q202	G4		
FL701	G2	Q301	*G1		
		Q302	*G1		
IC101	*E1	Q303	*G1		
IC102	*E1	Q304	*G1		
IC103	*D1	Q351	G3		
IC104	*C1	Q601	D5		
IC105	*B1	Q602	*A2		
IC106	*B2	Q603	*A2		
IC107	*B2	Q604	*A2		
IC108	H1	Q605	*A3		
IC109	*B1	Q606	*A3		
IC201	G4	Q607	*A3		
IC251	F4	Q701	*G2		
IC301	*G1	Q702	*G2		
IC302	*F1	Q703	*G2		
IC351	G3	Q704	*G2		
IC401	E3				
IC402	*G4	RV251	F4		
IC403	*H1	RV301	G1		
IC404	*H2	RV701	G2		
IC405	*H2				
IC502	*H3	S601	B4		
IC503	*H2	S602	B5		
IC504	A2	S603	A3		
IC505	A2	S604	A4		
IC506	A3	S605	A4		
IC507	D4				

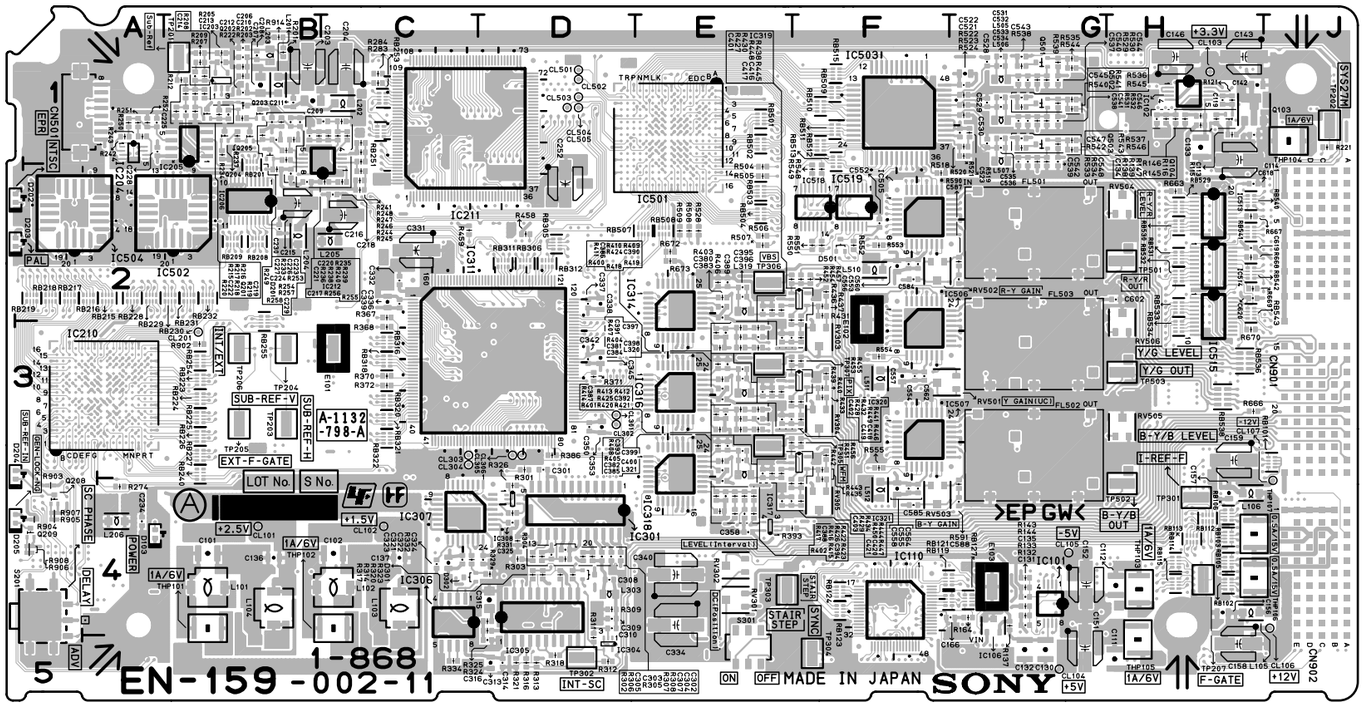

EN-159A
EN-159B -A SIDE-
SUFFIX: -11

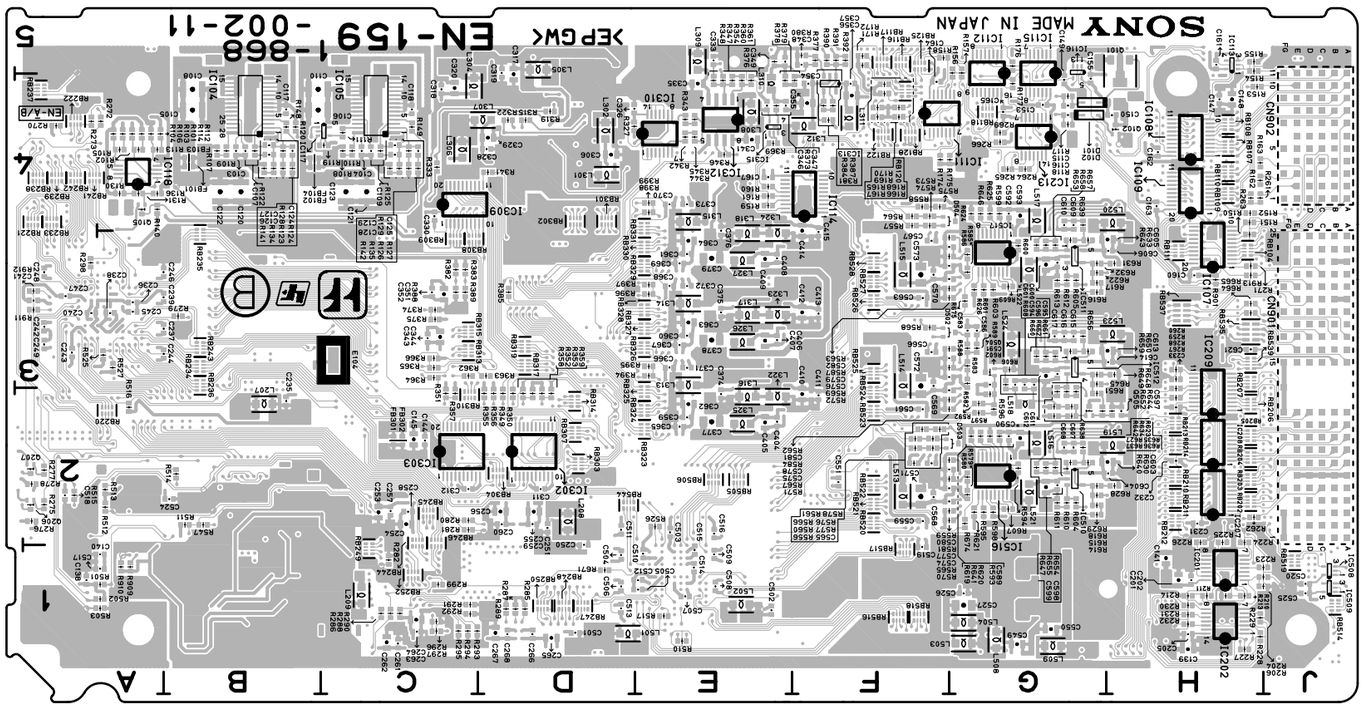


EN-159A
EN-159B -B SIDE-
SUFFIX: -11

EN-159A, EN-159B (1-868-002-11)
---


*:B SIDE

CL101	B4	IC306	C4	L513	*F2
CL102	C4	IC307	C4	L514	*F3
CL103	H1	IC308	D4	L515	*F3
CL104	G5	IC309	*C4	L516	*G2
CL105	G4	IC310	*E4	L517	*G4
CL106	J4	IC311	D3	L518	*G2
CL107	J4	IC312	*E4	L519	*H2
CL201	B3	IC313	*F4	L520	*H4
CL301	D3	IC314	E2	L521	*G2
CL302	D3	IC315	*E4	L522	*G3
CL303	C3	IC316	E3	L523	*H3
CL304	C3	IC317	E4	L524	*G3
CL305	D3	IC318	E3		
CL306	D3	IC319	F2	Q101	*H5
CL501	D1	IC320	F3	Q102	*H4
CL502	D1	IC321	F3	Q103	H1
CL503	D1	IC501	E1	Q104	H1
CL504	D1	IC502	B2	Q105	*A4
CL505	D1	IC503	F1	Q201	B1
		IC504	A2	Q202	B1
CN501	A1	IC505	F2	Q203	B1
CN901	J3	IC506	F3	Q204	B1
CN902	J5	IC507	F3	Q205	B1
		IC508	*J1	Q206	*A2
D101	*G4	IC509	*J1	Q207	*A2
D102	*G4	IC510	*G2	Q208	A4
D103	A4	IC511	*G3	Q209	A4
D201	B1	IC512	*G3	Q501	G1
D202	A2	IC513	H2	Q502	G1
D203	A2	IC514	H2	Q503	G1
D204	A3	IC515	H2	Q504	*G3
D205	A4	IC516	*G2	Q505	*G2
D301	D4	IC517	*G3		
D302	C4	IC518	F2	RV301	E4
D501	F2	IC519	F2	RV302	E4
D502	*F3			RV303	F3
D503	*G2	L101	B4	RV304	F3
D504	*F4	L102	C4	RV305	F4
		L103	C4	RV501	F3
E101	C3	L104	B4	RV502	F2
E102	F2	L105	H4	RV503	F4
E103	G4	L106	H4	RV504	H2
E104	*C3	L201	B1	RV505	H3
		L202	C1	RV506	H3
FB101	*B4	L203	B1		
FB102	*B4	L204	B2	S201	A4
FB103	*B4	L205	C2	S301	E5
FB104	*B4	L206	A4		
FB301	*C2	L207	*B2	THP101	B4
FB302	*C2	L208	*D2	THP102	C4
		L209	*C1	THP103	H4
FL501	G2	L301	*D4	THP104	J1
FL502	G3	L302	*D4	THP105	H5
FL503	G3	L303	D4	THP106	H4
		L304	*C4	THP107	H4
IC101	G4	L305	*D5		
IC102	H1	L306	*C4	TP201	B1
IC104	*B4	L307	*D4	TP202	J1
IC105	*C4	L308	*E4	TP203	B3
IC106	G4	L309	*E5	TP204	B3
IC107	*H3	L310	*E4	TP205	B3
IC108	*H4	L311	*F4	TP206	B3
IC109	*H4	L312	*F4	TP207	H4
IC110	F4	L313	*E3	TP301	H4
IC111	*F4	L314	*E3	TP302	D5
IC112	*G5	L315	*E4	TP303	E4
IC113	*H5	L316	*E2	TP304	F5
IC114	*F4	L317	*E3	TP305	E3
IC115	*G5	L318	*E3	TP306	E2
IC116	*G5	L319	E2	TP307	E3
IC117	*C4	L320	E3	TP501	H2
IC118	*A4	L321	E3	TP502	H4
IC201	*H1	L322	*E2	TP503	H3
IC202	*H1	L323	*E3		
IC203	B1	L324	*E3		
IC204	A1	L325	*E2		
IC205	B1	L326	*E3		
IC206	B2	L327	*E3		
IC207	*H2	L501	*D1		
IC208	*H2	L502	*E1		
IC209	*H2	L503	*G1		
IC210	A3	L504	*G1		
IC211	C1	L505	G1		
IC212	C2	L506	G1		
IC213	*G4	L507	G1		
IC301	D4	L508	*G1		
IC302	*D2	L509	*G1		
IC303	*C2	L510	F2		
IC304	D5	L511	F3		
IC305	D5	L512	F4		


CNB-22, HIF-25

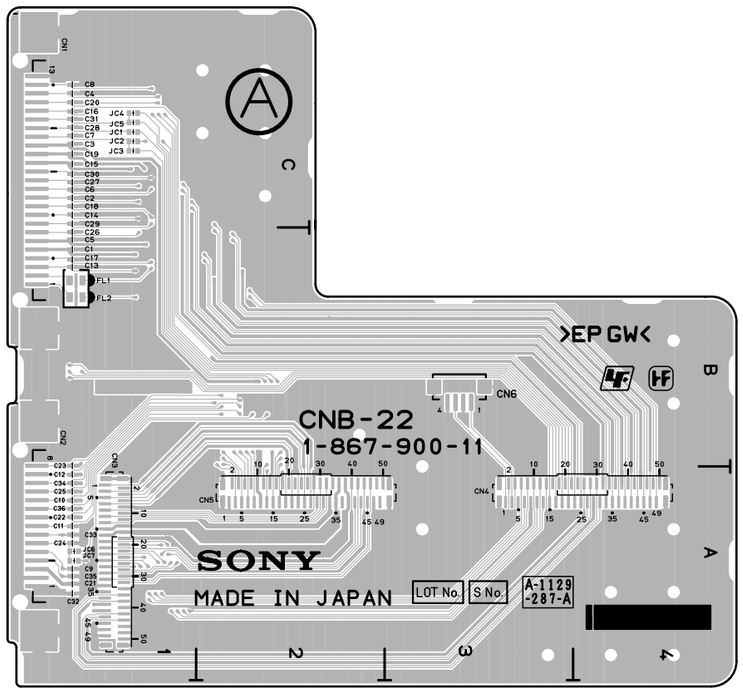


CNB-22 -A SIDE-
SUFFIX: -11

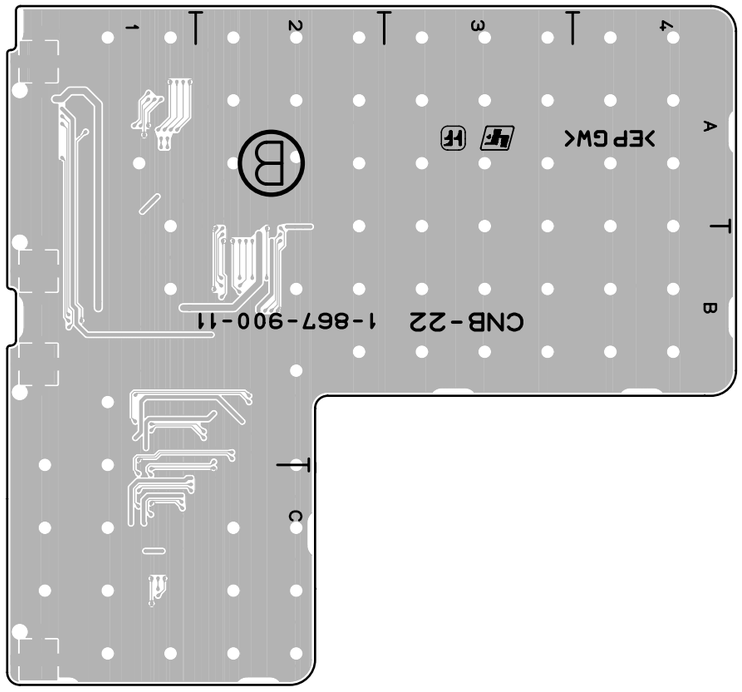

CNB-22 -B SIDE-
SUFFIX: -11

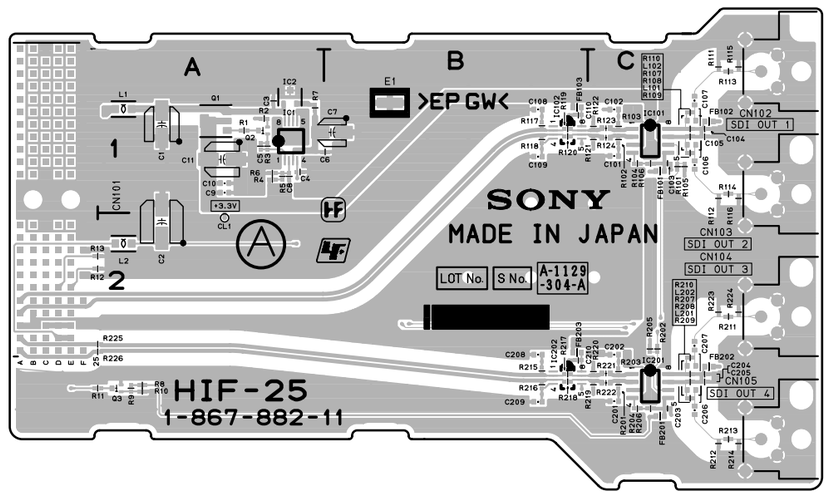

HIF-25 -A SIDE-
SUFFIX: -11

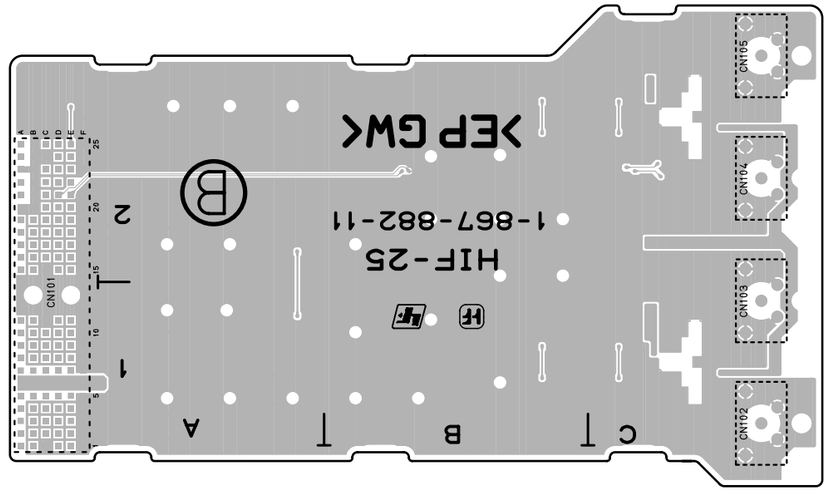


HIF-25 -B SIDE-
SUFFIX: -11

HIF-25 (1-867-882-11)	
CL1	A2
CN101	A1
CN102	C1
CN103	C1
CN104	C2
CN105	C2
E1	B1
FB101	C1
FB102	C1
FB103	B1
FB201	C2
FB202	C2
FB203	B2
IC1	A1
IC2	A1
IC101	C1
IC102	B1
IC201	C2
IC202	B2
L1	A1
L2	A2
L101	C1
L102	C1
L201	C2
L202	C2
Q1	A1
Q2	A1
Q3	A2

8-10

HIF-26, HIF-27

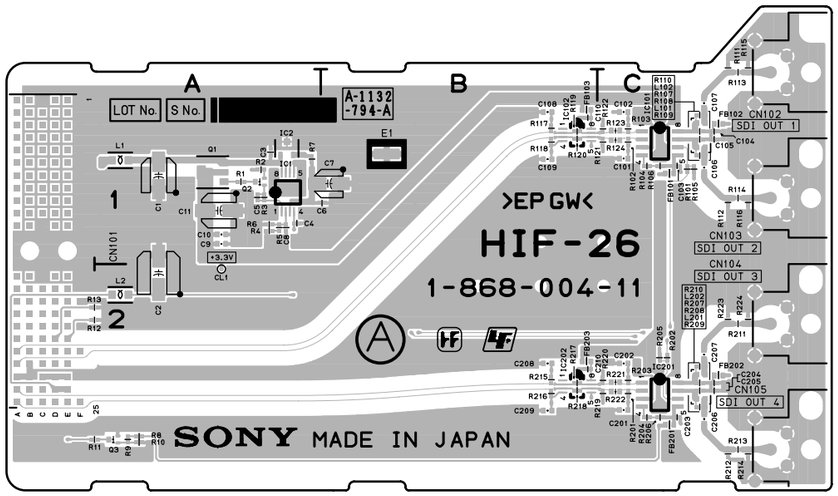

HIF-26 -A SIDE-
SUFFIX: -11

```
--------------------
HIF-26 (1-868-004-11)
--------------------

CL1     A2

CN101   A1
CN102   C1
CN103   C1
CN104   C2
CN105   C2


E1      B1

FB101   C1
FB102   C1
FB103   B1
FB201   C2
FB202   C2
FB203   B2

IC1     A1
IC2     A1
IC101   C1
IC102   B1
IC201   C2
IC202   B2

L1      A1
L2      A2
L101    C1
L102    C1
L201    C2
L202    C2

Q1      A1
Q2      A1
Q3      A2
```

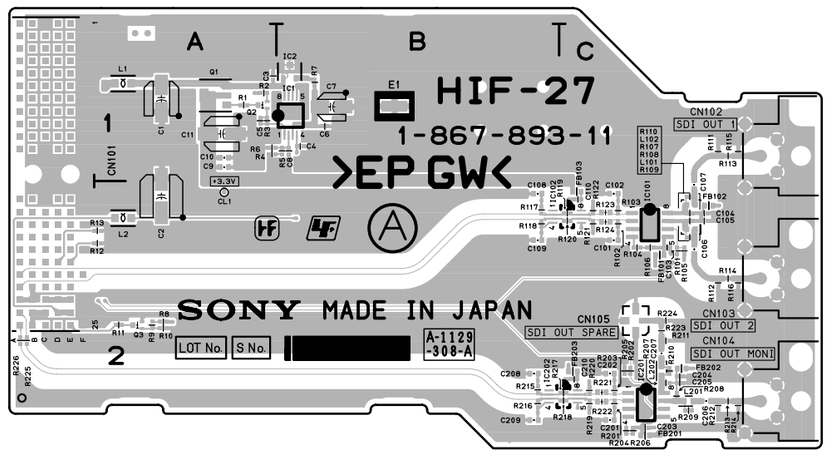

HIF-27 -A SIDE-
SUFFIX: -11

```
--------------------
HIF-27 (1-867-893-11)
--------------------

CL1     A2

CN101   A1
CN102   C1
CN103   C2
CN104   C2
CN105   C2


E1      B1

FB101   C2
FB102   C2
FB103   C2
FB201   C2
FB202   C2
FB203   C2


IC1     B1
IC2     B1
IC101   C2
IC102   B2
IC201   C2
IC202   B2

L1      A1
L2      A2
L101    C2
L102    C2
L201    C2
L202    C2


Q1      A1
Q2      A1
Q3      A2
```

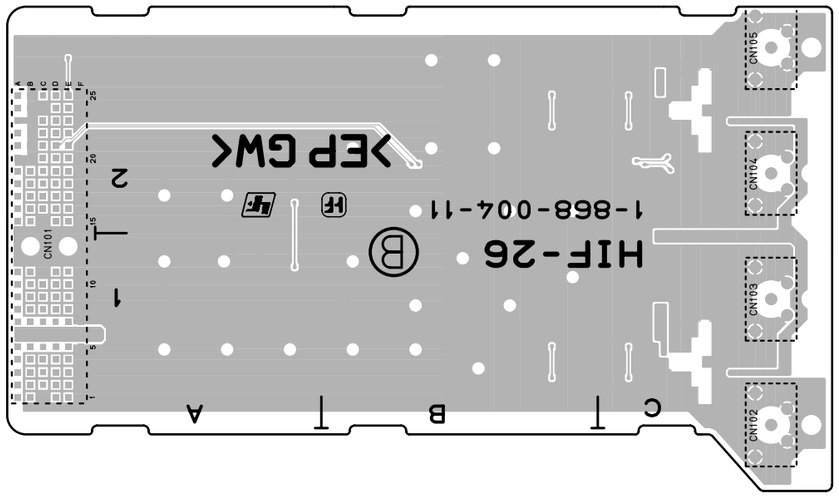


HIF-26 -B SIDE-
SUFFIX: -11

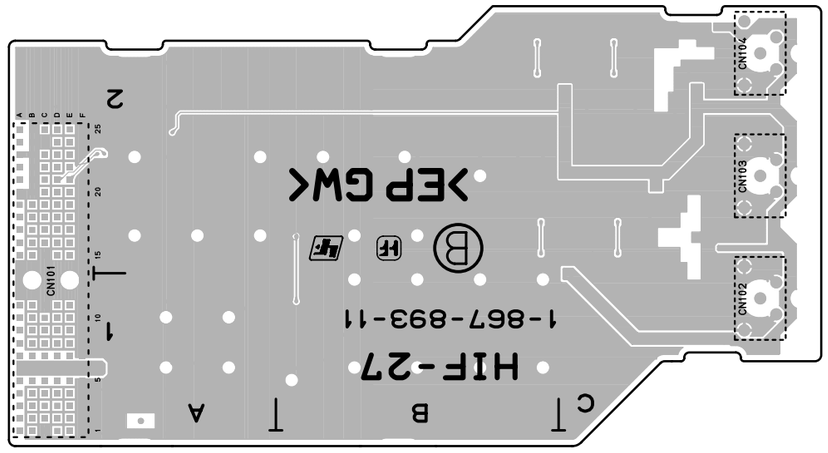


HIF-27 -B SIDE-
SUFFIX: -11

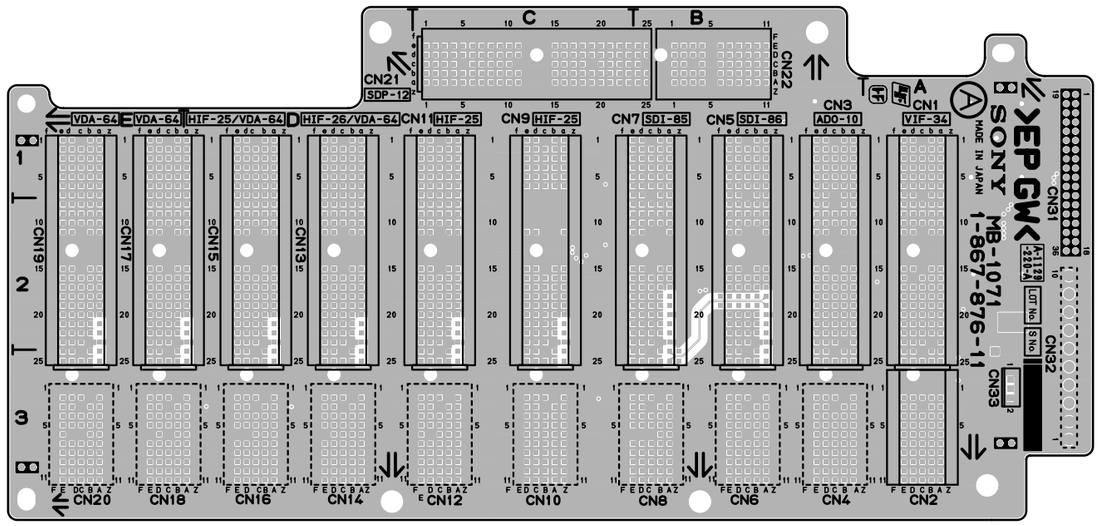


MB-1071 -A SIDE-
SUFFIX: -11

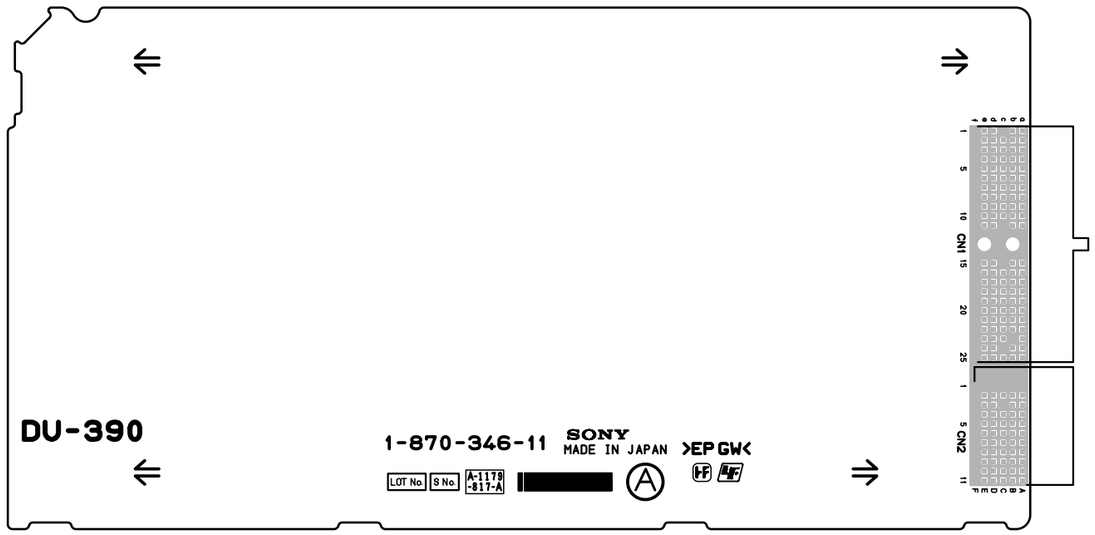

DU-390 -A SIDE-
SUFFIX: -11

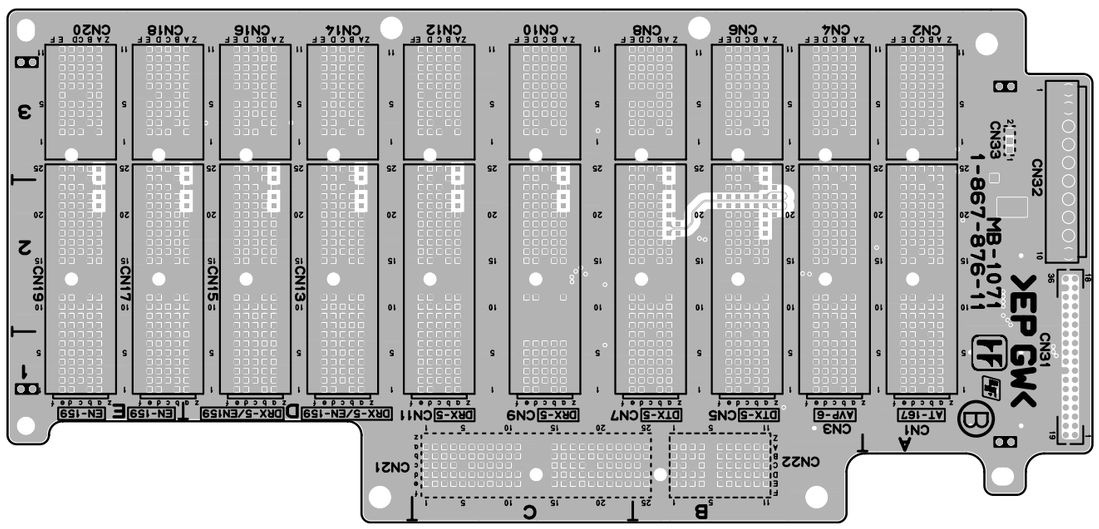


MB-1071 -B SIDE-
SUFFIX: -11

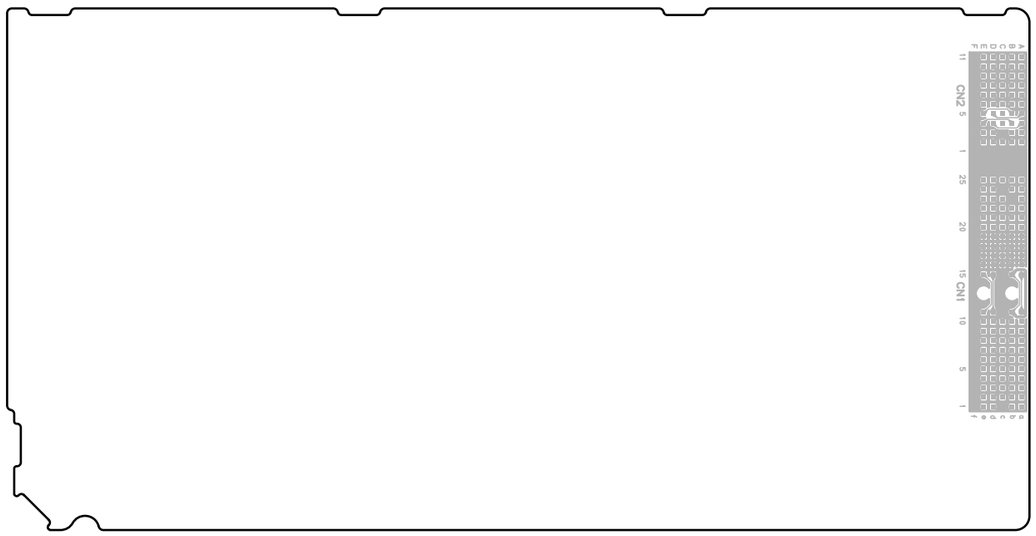


DU-390 -B SIDE-
SUFFIX: -11

MB-1072, SDI-85

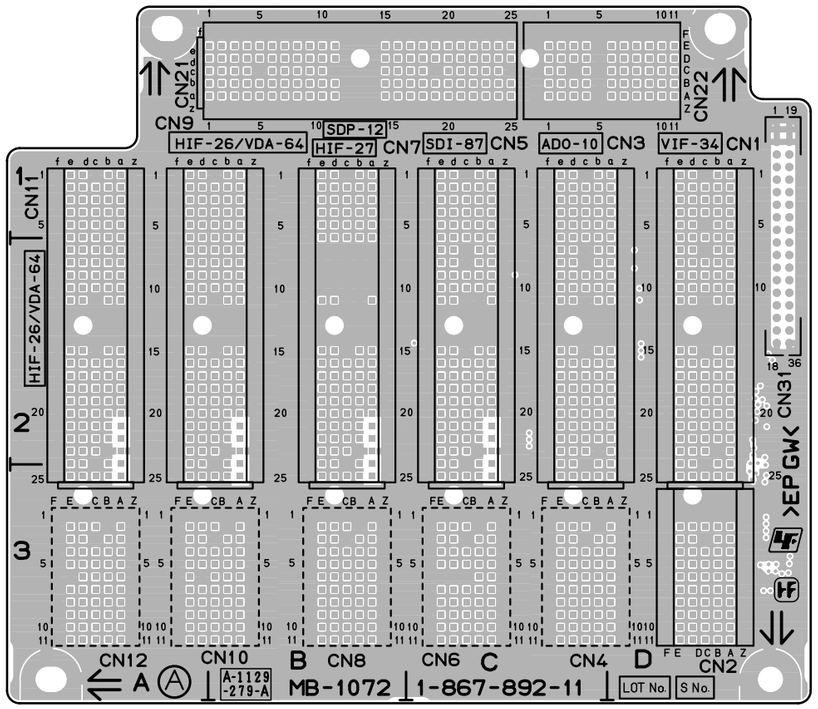

MB-1072 -A SIDE-
SUFFIX: -11

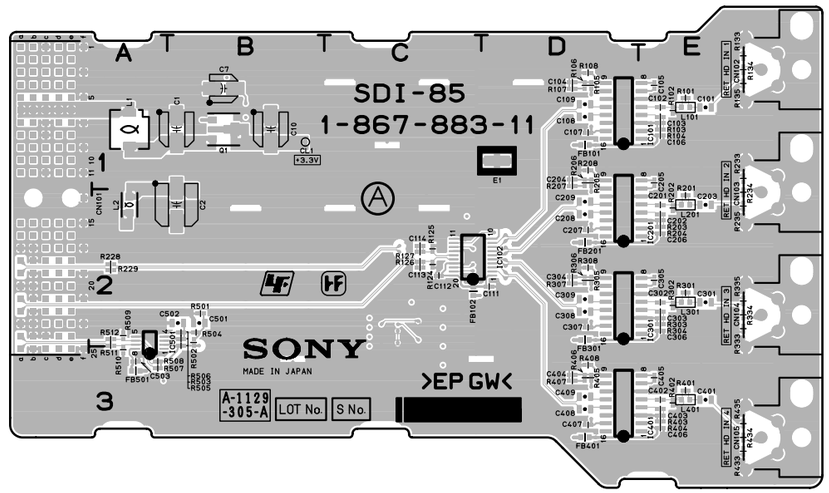

SDI-85 -A SIDE-
SUFFIX: -11

```
---------------------
SDI-85 (1-867-883-11)
---------------------

*:B SIDE

CL1      B1

CN101    A2
CN102    E1
CN103    E2
CN104    E2
CN105    E3
CN106   *C2
CN107   *B2


E1       D1
E2      *D1

FB101    D1
FB102    C2
FB201    D2
FB202   *C2
FB301    D2
FB401    D3
FB501    A3


IC1     *B1
IC2     *B1
IC101    E1
IC102    D2
IC103   *C3
IC201    E2
IC202   *D2
IC301    E2
IC401    E3
IC501    A3

L1       A1
L2       A2
L101     E1
L201     E2
L301     E2
L401     E3

Q1       B1
Q2      *B1
Q3      *A3
Q101    *C3
Q102    *C2
Q201    *C2
Q202    *C2
```

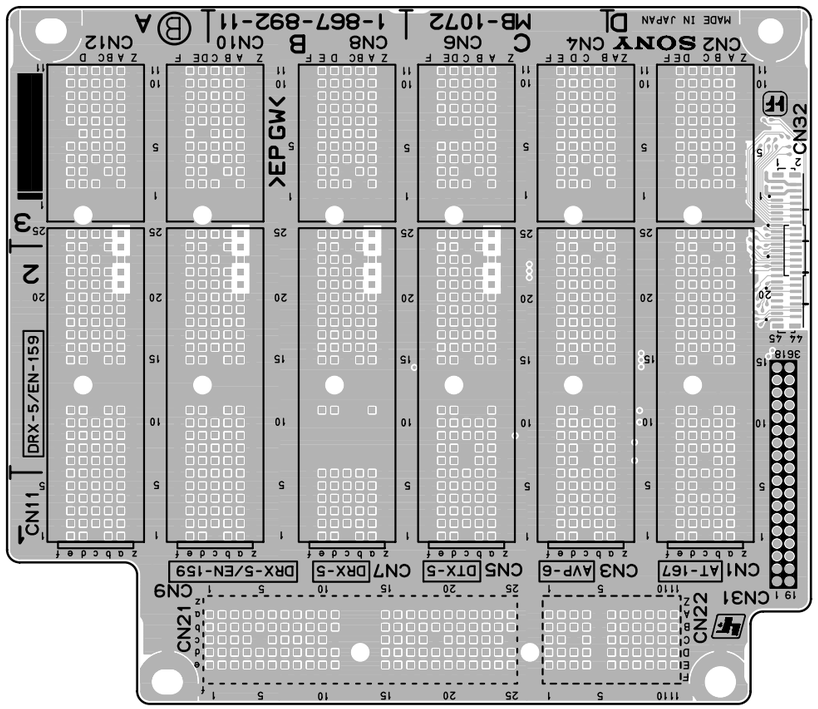


MB-1072 -B SIDE-
SUFFIX: -11

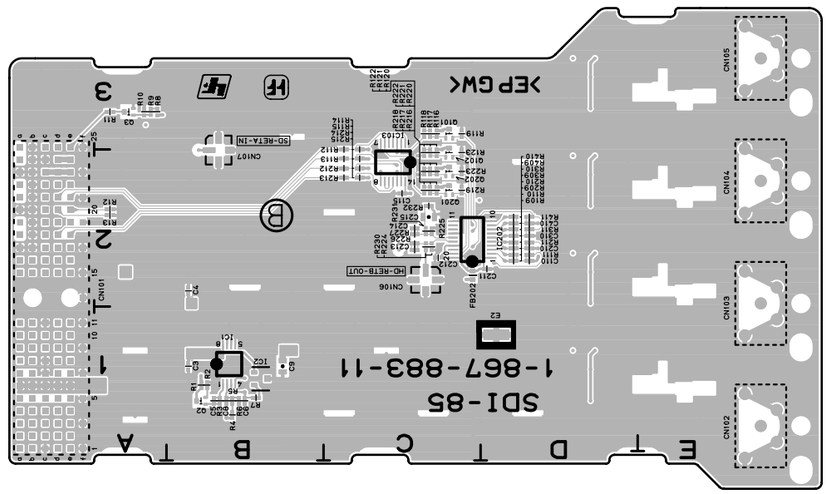

SDI-85 -B SIDE-
SUFFIX: -11

SDI-86, SDI-87

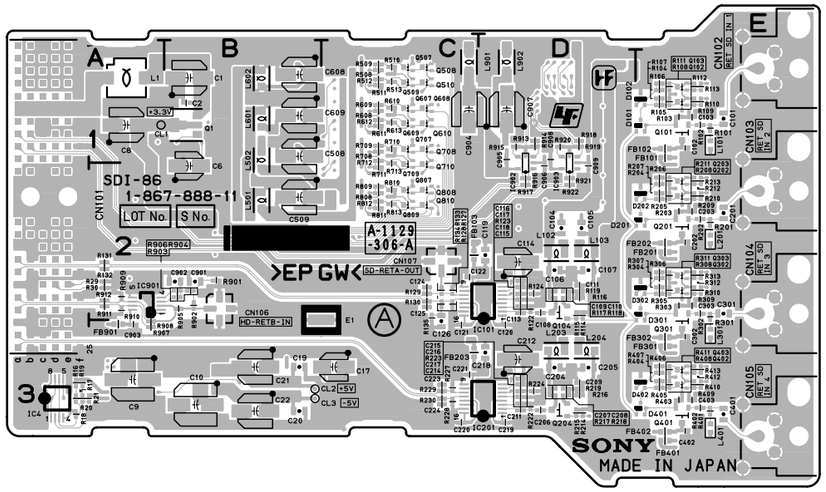


SDI-86 -A SIDE-
SUFFIX: -11


SDI-86 (1-867-888-11)
---

*:B SIDE

CL1	A1	Q1	B1
CL2	B3	Q2	*B1
CL3	B3	Q3	*B3
		Q4	*B3
CN101	A2	Q5	*A3
CN102	E1	Q101	E1
CN103	E2	Q102	E1
CN104	E2	Q103	E1
CN105	E3	Q104	D2
CN106	B2	Q201	E2
CN107	C2	Q202	E2
CN108	*D1	Q203	E2
		Q204	D3
D1	*B3	Q301	E3
D2	*B3	Q302	E2
D101	E1	Q303	E2
D102	E1	Q401	E3
D103	*E1	Q402	E3
D201	E2	Q403	E3
D202	E2	Q501	*C1
D203	*E2	Q502	*C1
D301	E2	Q503	*C1
D302	E2	Q504	*C1
D303	*E2	Q505	*C1
D401	E3	Q506	*C1
D402	E3	Q507	C1
D403	*E3	Q508	C1
		Q509	C1
E1	B3	Q510	C1
E2	*C2	Q511	*B1
		Q512	*B2
FB101	E1	Q513	*B2
FB102	E1	Q514	*B2
FB103	C2	Q601	*C1
FB201	E2	Q602	*C1
FB202	E2	Q603	*C1
FB203	C3	Q604	*C1
FB301	E3	Q605	*C1
FB302	E3	Q606	*C1
FB401	E3	Q607	C1
FB402	E3	Q608	C1
FB901	A3	Q609	C1
		Q610	C1
IC1	*B1	Q611	*B1
IC2	*B3	Q612	*B1
IC3	*C3	Q613	*B1
IC4	A3	Q614	*B1
IC101	D2	Q701	*C2
IC102	*D1	Q702	*C1
IC201	D3	Q703	*C1
IC202	*D1	Q704	*C2
IC501	*B2	Q705	*C1
IC502	*B2	Q706	*C2
IC601	*B1	Q707	C1
IC602	*B2	Q708	C1
IC901	A2	Q709	C2
IC902	D2	Q710	C2
IC903	D2	Q801	*C2
		Q802	*C2
L1	A1	Q803	*C2
L2	*A3	Q804	*C2
L3	*A3	Q805	*C2
L101	E1	Q806	*C2
L102	D2	Q807	C2
L103	D2	Q808	C2
L201	E2	Q809	C2
L203	D3	Q810	C2
L204	D3		
L301	E3		
L401	E3		
L501	B2		
L502	B1		
L601	B1		
L602	B1		
L901	C1		
L902	D1		

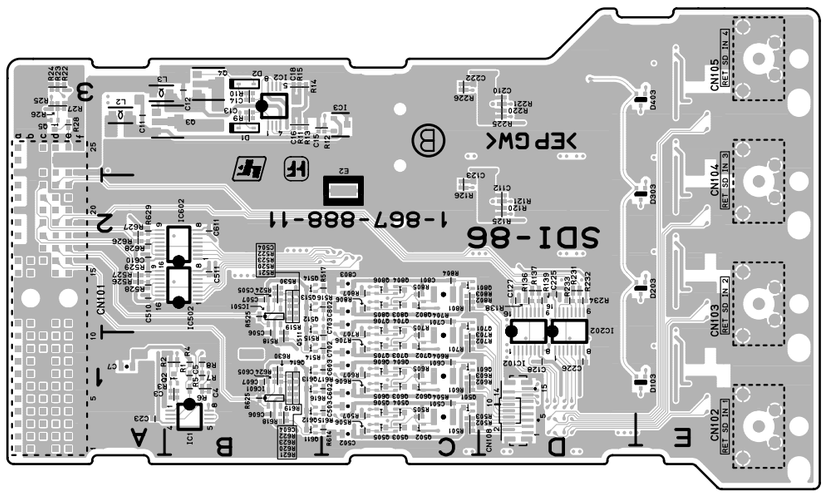

SDI-86 -B SIDE-
SUFFIX: -11

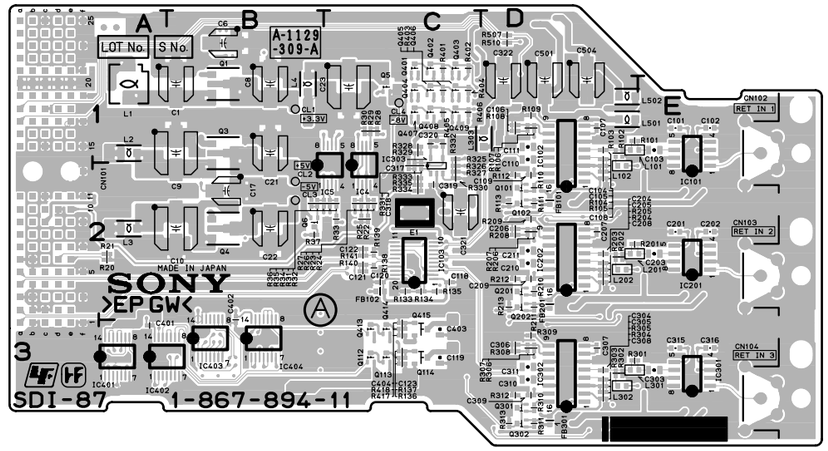


SDI-87 -A SIDE-
SUFFIX: -11

SDI-87 (1-867-894-11)
---


*:B SIDE

CL1	B1	Q1	B1
CL1	B1	Q2	*B1
CL2	B2	Q3	B1
CL3	B2	Q4	B2
CL4	C1	Q5	C1
		Q6	B2
CN101	A2	Q101	D2
CN102	E1	Q102	D2
CN103	E2	Q103	*E2
CN104	E3	Q104	*E2
CN105	*D1	Q105	*D2
		Q106	*D2
D1	*B1	Q107	*D2
D2	*B2	Q108	*D2
D3	*C1	Q109	*D2
D4	*C1	Q110	*C3
		Q111	*C3
E1	C2	Q112	C3
E2	*C2	Q113	C3
		Q114	C3
FB101	D2	Q201	D2
FB102	C2	Q202	D2
FB201	D2	Q203	*E2
FB202	*C2	Q204	*E2
FB301	D3	Q205	*D2
		Q206	*D2
IC1	*B1	Q207	*D2
IC2	*B2	Q208	*D2
IC3	*B2	Q209	*D2
IC4	C2	Q210	*C2
IC5	B2	Q211	*C3
IC101	E2	Q301	D3
IC102	D2	Q302	D3
IC103	C2	Q303	*E3
IC201	E2	Q304	*E3
IC202	D2	Q305	*D3
IC203	*C2	Q306	*D3
IC301	E3	Q307	*D3
IC302	D3	Q308	*D3
IC303	C2	Q309	*D3
IC401	A3	Q401	C1
IC402	A3	Q402	C1
IC403	B3	Q403	C1
IC404	B3	Q404	C1
IC501	*D1	Q405	C1
IC502	*D1	Q406	C1
		Q407	C1
L1	A1	Q408	C1
L2	A1	Q409	C1
L3	A2	Q410	*B3
L4	B1	Q411	*B3
L101	D1	Q412	*B3
L102	D2	Q413	C3
L201	D2	Q414	C3
L202	D2	Q415	C3
L301	D3		
L302	D3		
L303	D1		
L304	*C2		
L501	D1		
L502	D1		

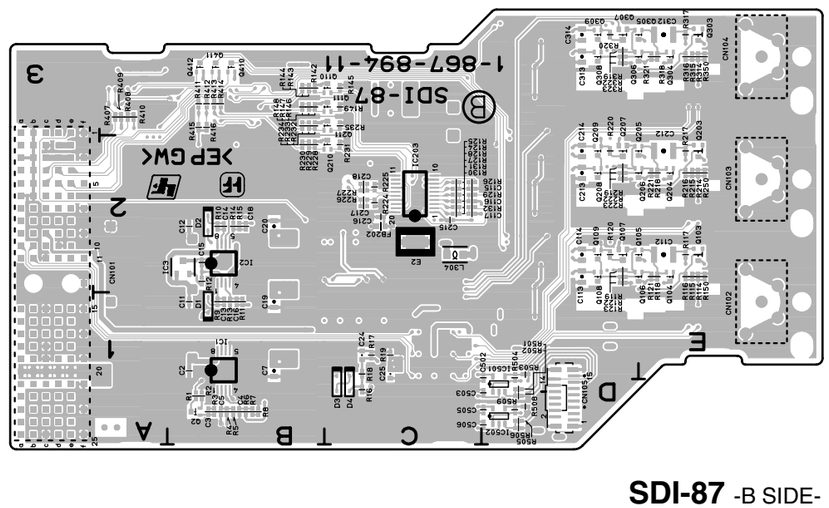


SDI-87 -B SIDE-
SUFFIX: -11

8-14

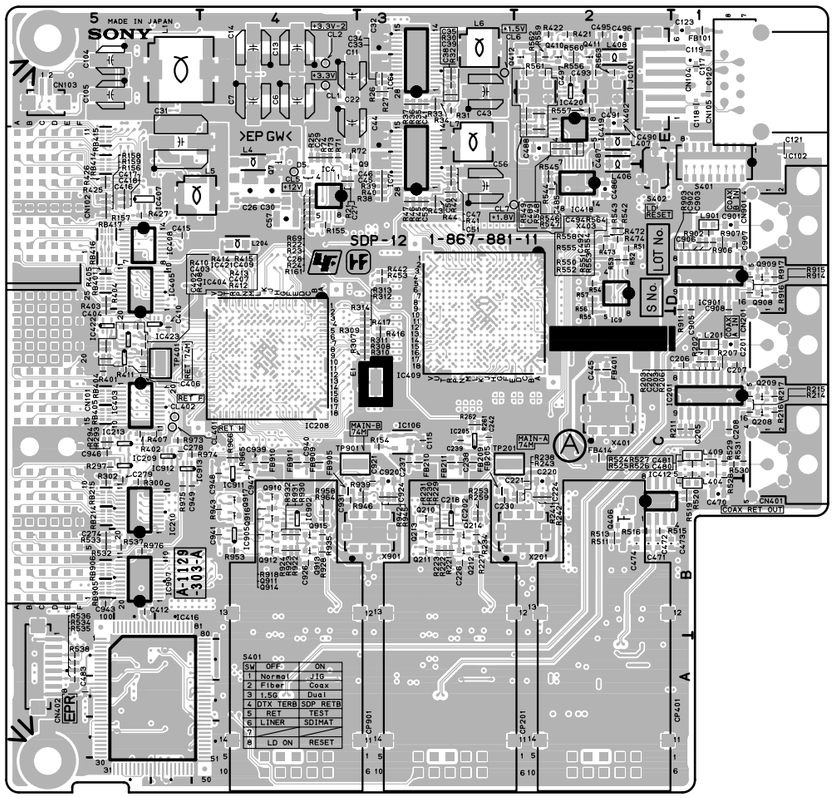

SDP-12 -A SIDE-
SUFFIX: -11, 12

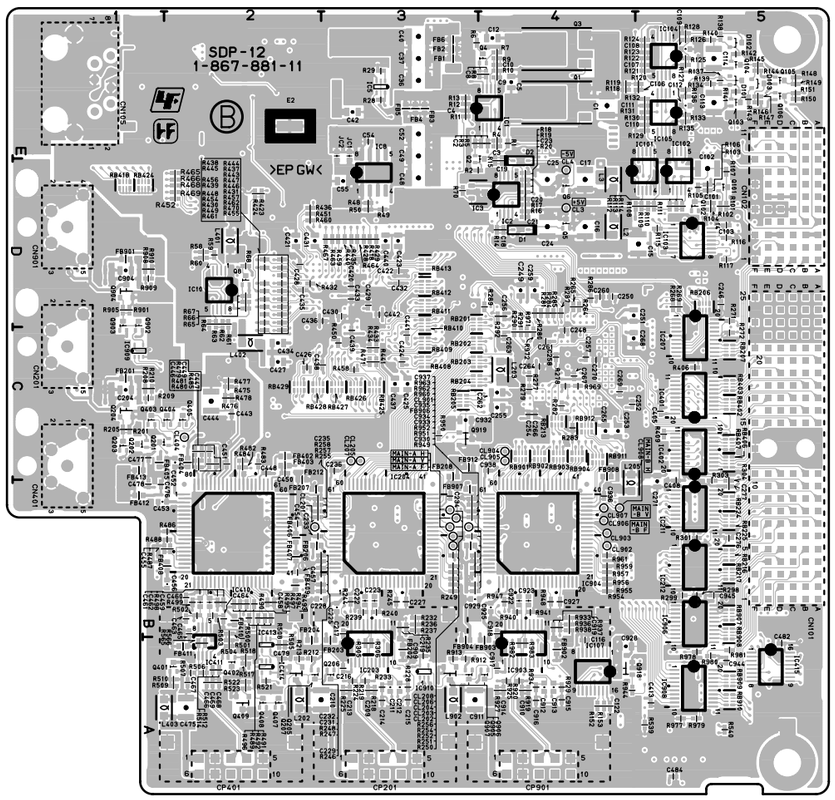


SDP-12 -B SIDE-
SUFFIX: -11, 12

SDP-12 (1-867-881-11, 12)
---

*:B SIDE

CL1	E4	CN402	A5	FB211	C3	IC6	E3	IC412	B2	L203	*C4	Q206	*A3	Q915	B4
CL2	E4	CN901	D1	FB212	*C2	IC7	D3	IC413	*A2	L204	D4	Q207	*A2	Q916	B4
CL3	*D4			FB401	C2	IC8	*D3	IC414	*A2	L205	*B4	Q208	C1	Q917	B4
CL4	*D4	CP201	B3	FB402	*C2	IC9	D2	IC415	*A5	L401	*D2	Q209	C1	Q918	*A4
CL5	D4	CP401	B2	FB403	*C2	IC10	*D2	IC416	A5	L402	*C2	Q210	B3	Q919	*C3
CL6	E3	CP901	B4	FB404	*C2	IC101	*D5	IC418	E2	L403	*A1	Q211	B3		
CL7	D2			FB405	*C1	IC102	*D5	IC419	E2	L404	B1	Q212	B3	S401	E1
CL201	*B2	D1	*D4	FB406	*B2	IC103	*D5	IC420	E2	L406	E2	Q213	B3	S402	D2
CL202	*B3	D2	*E4	FB407	*B2	IC104	*E5	IC421	C5	L407	E2	Q214	B3		
CL203	*B3	D5	D4	FB408	*B2	IC105	*E5	IC422	C5	L408	E2	Q401	*A2	TP201	C3
CL204	*B3	D101	*E5	FB409	*B2	IC106	C3	IC423	C5	L409	C1	Q402	*A2	TP401	C5
CL205	*C3	D102	*E5	FB410	*B2	IC107	*A4	IC901	D1	L901	D1	Q403	*C1	TP901	C4
CL206	*B3	D103	*E5	FB411	*A2	IC201	C1	IC902	B4	L902	*A3	Q404	*C2		
CL207	*C3			FB412	*B1	IC202	B3	IC903	*A4			Q405	*C2	X201	B2
CL208	*B3	E1	C3	FB413	*C1	IC203	*A3	IC904	*B4	Q1	*E4	Q406	B2	X401	C2
CL401	C5	E2	*E2	FB414	C2	IC204	*B3	IC905	B4	Q2	*E4	Q407	*A2	X402	E2
CL402	C5			FB901	*D1	IC205	C3	IC906	*B5	Q3	*E4	Q408	*A2	X403	E2
CL404	*C2	FB1	*E3	FB902	*A4	IC207	*C5	IC907	B5	Q4	*E4	Q409	*A2	X901	B3
CL901	*B3	FB2	*E3	FB903	*A4	IC208	C4	IC908	*A5	Q5	*D4	Q410	E2		
CL902	*B4	FB3	*E3	FB904	*A3	IC209	C5	IC909	*C1	Q6	*D4	Q411	E2		
CL903	*B4	FB4	*E3	FB905	B4	IC210	B5	IC910	*A3	Q7	E4	Q412	E2		
CL904	*C4	FB5	*E3	FB906	*B3	IC211	*B5	IC911	C4	Q8	*D2	Q902	*C1		
CL905	*C4	FB6	*E3	FB907	*B3	IC212	*B5	IC912	C5	Q9	D4	Q903	*C1		
CL906	*B4	FB101	E1	FB908	*C4	IC213	C5	IC913	C5	Q101	*D5	Q904	*D1		
CL907	*B4	FB201	*C1	FB909	C4	IC401	*C5			Q102	*D5	Q905	*A3		
CL908	*B4	FB202	*A3	FB910	C4	IC402	*C5	L1	E5	Q103	*E5	Q906	*A4		
		FB203	*A3	FB911	C4	IC403	C5	L2	*D4	Q104	*E5	Q907	*A3		
CN101	C5	FB204	*A2	FB912	*C3	IC404	C5	L3	*D4	Q105	*E5	Q908	D1		
CN102	E5	FB205	B3			IC405	D5	L4	E4	Q106	*E5	Q909	D1		
CN103	E5	FB206	*B2	IC1	*E4	IC407	D5	L5	D5	Q201	*C1	Q910	B4		
CN104	E2	FB207	*B2	IC2	*D4	IC408	D5	L6	E3	Q202	*C1	Q911	B4		
CN105	E1	FB208	*C3	IC3	*D3	IC409	C3	L7	E3	Q203	*C1	Q912	B4		
CN201	C1	FB209	C3	IC4	D4	IC410	*B2	L201	C1	Q204	*C1	Q913	B4		
CN401	C1	FB210	C3	IC5	*E3	IC411	*A2	L202	*A2	Q205	*A2	Q914	B4		

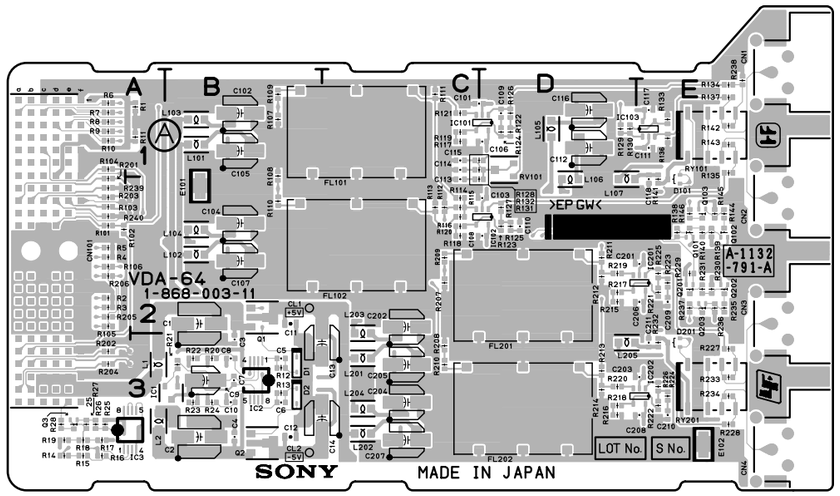


VDA-64A
VDA-64B
VDA-64C -A SIDE-

SUFFIX: -11, 12

VDA-64A
VDA-64B
VDA-64C (1-868-003-11, 12)
---

*:B SIDE


CL1	B2
CL2	B3
CN1	E1
CN2	E2
CN3	E2
CN4	E3
CN101	A2
D1	B3
D2	B3
D101	E2
D201	E3
E101	B2
E102	E3
FL101	C1
FL102	C2
FL201	D2
FL202	D3
IC1	B3
IC2	B3
IC3	A3
IC101	D1
IC102	D2
IC103	E1
IC201	E2
IC202	E3
L1	A3
L2	A3
L101	B1
L102	B2
L103	B1
L104	B2
L105	D1
L106	D2
L107	D2
L201	C3
L202	C3
L203	C3
L204	C3
L205	D3
Q1	B2
Q2	B3
Q3	A3
Q101	E2
Q102	E2
Q103	E2
Q201	E2
Q202	E2
Q203	E2
RV101	D1
RY101	E1
RY201	E3

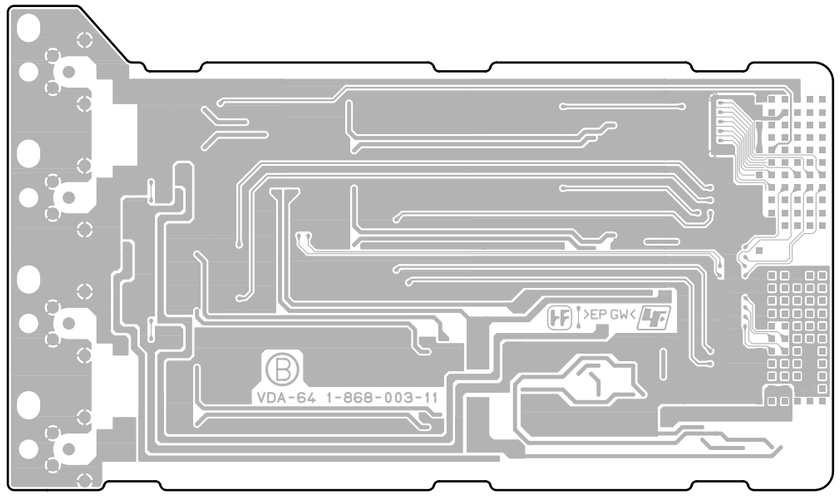

VDA-64A
VDA-64B
VDA-64C -B SIDE-

SUFFIX: -11, 12

VDA-64A, VDA-64B, VDA-64C, VIF-34, VIF-34B

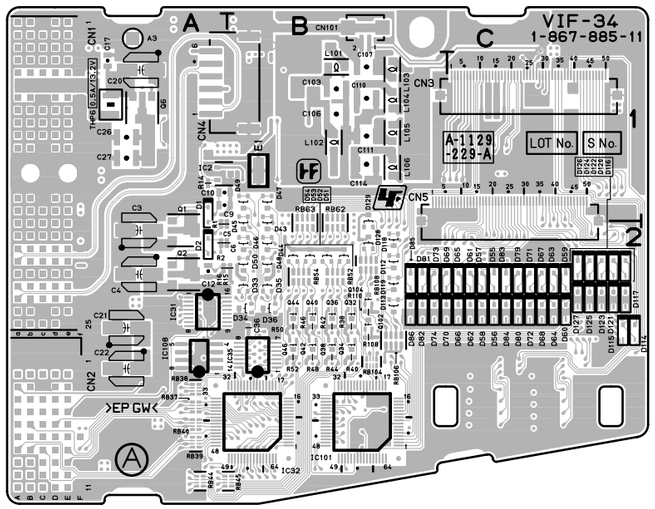


VIF-34
VIF-34B -A SIDE-

SUFFIX: -11

VIF-34
VIF-34B (1-867-885-11)
---

*:B SIDE

		D105	*C2	Q107	*B1
CL1	*A1	D106	*B2	Q108	*B1
CL2	*A2	D107	*B2	Q109	*B1
CL3	*A2	D108	*C2		
CL4	*A2	D109	*C2	THP1	*A2
CL5	*A1	D110	*C2	THP2	*A2
CL31	*C2	D111	*C2	THP3	*C1
CL101	*B2	D112	B2	THP4	*A2
CL102	*A2	D113	B2	THP5	*A2
CL103	*A2	D114	C2	THP6	A1
CL104	*B1	D115	C2		
CL105	*B1	D116	C2		
CL106	*B1	D117	C2		
		D118	B2		
CN1	A1	D119	B2		
CN2	A2	D120	C2		
CN3	C1	D121	C2		
CN4	B1	D122	C2		
CN5	C1	D123	C2		
CN101	B1	D124	C2		
		D125	C2		
D1	A1	D126	C2		
D2	A2	D127	C2		
D3	*A1	D128	B2		
D4	*C1	D129	B2		
D31	*C2				
D32	*C2	E1	B1		
D33	B2				
D34	B2	IC1	*A2		
D35	B2	IC2	A1		
D36	B2	IC3	*C1		
D37	*C2	IC4	*A1		
D38	*C2	IC31	A2		
D39	*C2	IC32	B2		
D40	*C2	IC33	*C2		
D41	*C2	IC34	*C2		
D42	*C2	IC35	B2		
D43	B2	IC36	*B2		
D44	B2	IC101	B2		
D45	B2	IC102	*C2		
D46	B2	IC103	*B1		
D47	B1	IC104	*B1		
D48	B2	IC105	*B1		
D49	B1	IC106	*B1		
D50	B2	IC107	*A2		
D51	B2	IC108	A2		
D52	B2				
D53	B2	L1	*A2		
D54	B2	L2	*A2		
D55	C2	L3	*C1		
D56	C2	L4	*C1		
D57	C2	L101	B1		
D58	C2	L102	B1		
D59	C2	L103	B1		
D60	C2	L104	B1		
D61	C2	L105	B1		
D62	C2	L106	B1		
D63	C2				
D64	C2	Q1	A2		
D65	C2	Q2	A2		
D66	C2	Q3	*C1		
D67	C2	Q5	*C1		
D68	C2	Q6	A1		
D69	B2	Q31	*B2		
D70	B2	Q32	B2		
D71	C2	Q33	*B2		
D72	C2	Q34	B2		
D73	B2	Q35	*B2		
D74	B2	Q36	B2		
D75	*B2	Q37	*B2		
D76	*B2	Q38	B2		
D77	*B2	Q39	*B2		
D78	*B2	Q40	B2		
D79	C2	Q41	*B2		
D80	C2	Q42	B2		
D81	B2	Q43	*B2		
D82	B2	Q44	B2		
D83	C2	Q45	*B2		
D84	C2	Q46	B2		
D85	B2	Q101	*B2		
D86	B2	Q102	B2		
D101	*B2	Q103	*B2		
D102	*C2	Q104	B2		
D103	*C2	Q105	*B2		
D104	*C2	Q106	*B1		

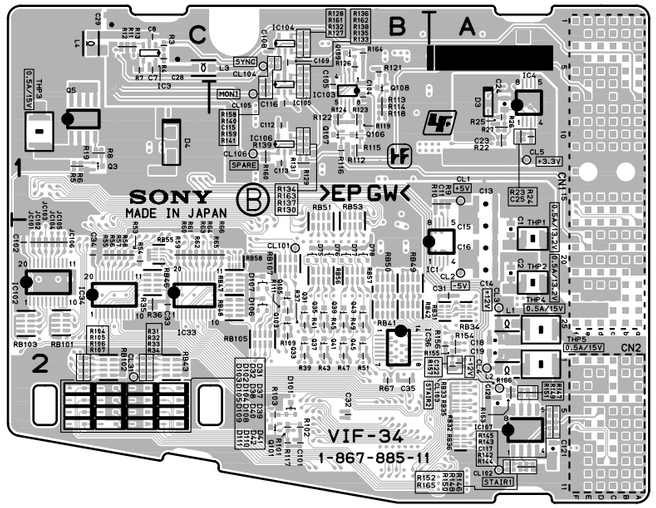

VIF-34
VIF-34B -B SIDE-

SUFFIX: -11

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

Check the metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 3.5 mA. Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 5.25 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 20 V AC range are suitable. (See Fig. A)

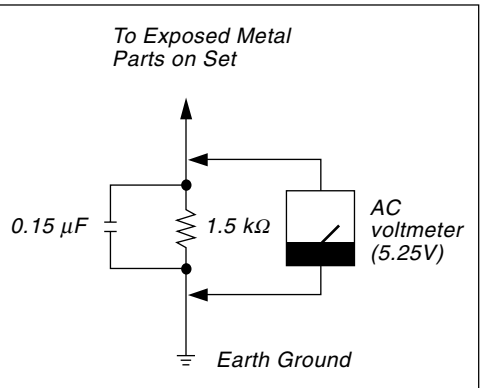


Fig A. Using an AC voltmeter to check AC leakage.

HDCU1000 (UC)
HDCU1000 (J)
HDCU1000 (CE)
HDCU1080 (CN)
HDCU1500 (SY)
HDCU1500 (J)
HKCU1001 (SY)
HKCU1003 (SY)
HKCU1005 (SY) J, E
9-968-208-02

Sony Corporation

Printed in Japan
2006. 6 16
©2005