

Cinedeck

RX3G - ZX^{20, 40, 45} - MX

USER GUIDE - Cinedeck Version 4.5 13126



Contacting Cinedeck

General Information:

For non-support general inquiries, please contact us at: info@cinedeck.com

You can also call:
+1 888-390-4460
Some international locations do not allow dialing a US toll free number, in that case call:
+1 646-642-6985

Additionally, the [Cinedeck website](#) has a significant array of resources including brochures, where to buy, video tutorials and technical documents.

Support:

Technical Support office hours are 9am-6pm US Eastern Time, but we generally respond to support requests from 8am to midnight, 7 days a week, and at odd hours of the night. Response time is generally within minutes during business hours.

To initiate a support request, it is preferred that you fill out the support form on the Cinedeck website: <http://cinedeck.com/support/>

The direct support email address is: support@cinedeck.com

Phone support can be reached at +1 888-390-4460 (option 2). If you do not reach us, please do leave a message, indicate your version number and as much relevant informations as possible and use the above noted support form as we do endeavor to respond ASAP within the expanded hours noted above.

Some international locations do not allow dialing a US toll free number, in that case call: +1 646-642-6985

Please Note! It is generally essential and helpful to have as much information as possible about the nature of the problem and the setup involved, including; Cinedeck model, Cinedeck software version {Prefs page}, the relevant log files {C:\cinedeck\logs}, Cinedeck settings such as codec, wrapper, storage in use and all related equipment being used; source/camera settings, audio embedders, timecode source, etc. If you are using an esoteric piece of equipment in the signal chain, it is critical that we know so we can make a correct diagnosis.

Is it plugged in? Often the simplest things can make life difficult... Always check the basics! Are power, cabling and signal paths all confirmed to be good?

Table of Contents - Cinedeck User Guide

Contacting Cinedeck	2
Table of Contents - Cinedeck User Guide	3
1.0 Introduction	27
1.1 About This Manual	27
1.2 Copyright and Trademarks	28
1.3 Safety Information	28
1.4 FCC and CE Information	29
1.5 Cinedeck Product Overview	30
2.0 What's in the Box	33
2.1 Cinedeck RX3G	33
2.2 Cinedeck MX	34
2.3 Cinedeck ZX	35
2.4 Features	36
2.4.1 Hardware	36
2.4.2 Software	36
2.4.3 -	36
3.0 Installation	37
3.1 Important	37
3.2 Connecting your deck	38
3.2.1 Audio connections	39
3.2.2 AES - BNC to XLR	40
3.2.3 -	40

3.3 Recording destinations	41
3.3.1 SSDs	42
3.3.2 USB & eSATA	43
3.3.3 Network Storage	45
3.3.4 DAS Storage	46
3.3.5 -	46
3.4 RX3G front panel	47
1- Headphone	48
2- eSATA port	48
3- USB port	48
4- Power button	48
5- future use	48
6- Drive tray	48
7- Drive lock & ejector	48
8- LCD Display	48
3.5 RX3G back panel	49
9- AUX 1/2 out	50
10- DC power	50
11- eSATA ports	50
12- USB3 ports	50
13- HDMI for GUI	50
14- RS-232 ports	50
15- RS-422 ports	50
16- Monitor Out	50
17- DVI for GUI	50
18- VGA for GUI	50
19- AES In & Out	50
20- Timecode option	51

	21- RS-422 out.	51
	22- Gb lan / USB2 ports.	51
	23- Analog in.	51
	24- LTC in/loop	51
	25- Reference In.	51
	26- Video Out	51
	27- Video In.	51
3.6 MX front panel.		52
	28- LCD control panel.	53
	29- LCD display.	53
	30- Card readers	53
	31- eSATA port	53
	32- USB3 ports	53
	33- Control panel.	53
	34- Headphone	53
	35- Drive lock and ejector	53
	36- Drive tray	53
	37- Power button	53
3.6.1 MX control panel.		54
	38- jog shuttle knob	55
	39- select open	55
	40- set in	55
	41- prev clip	55
	42- frame +1 load clip	55
	43- reverse play.	55
	44- record.	55
	45- rewind	55
	46- shift.	55

47- <i>led indicators</i>	55
48- <i>ch 1 on air</i>	56
49- <i>ch 2 lock UI</i>	56
50- <i>ch 3</i>	56
51- <i>ch 4</i>	56
52- <i>full/mini full scrn</i>	56
53- <i>loop ping pong</i>	56
54- <i>back.</i>	56
55- <i>pause</i>	56
56- <i>forward fast</i>	57
57- <i>play</i>	57
58- <i>frame +1 load pl</i>	57
59- <i>next clip</i>	57
60- <i>set out</i>	57
3.6.2 -	58
3.7 MX Back panel.	59
61- <i>Video in 3&4.</i>	60
62- <i>Video out 3&4.</i>	60
63- <i>Super out 3&4</i>	60
64- <i>Aux out 3/4</i>	60
65- <i>Reference in 3 & 4.</i>	60
66- <i>Video I/O 1 & 2</i>	60
67- <i>RS-422 ports</i>	60
68- <i>Monitor out</i>	60
69- <i>Redundant power</i>	60
70- <i>Power supply alarm ignore</i>	60
71- <i>Master timecode in & out</i>	61
72- <i>USB2 ports</i>	61

	73- Gb Ethernet	61
	74- USB3 ports	61
	75- AES in & out 1-16	61
	76- Analog line in	61
	77- Optional network.	61
	78- AES in & out 17-32.	61
	79- LTC 1 & 2 in/loop.	61
	80- LTC 3 & 4 in/loop.	62
	81- DVI/HDMI for GUI.	62
	82- eSATA ports.	62
3.8 ZX Front panel.		63
	83- Power and drive access door.	64
	84- Door lock	64
	85- Drive trays.	64
	86- Power button	64
	87- USB port.	64
3.9 ZX Back panel		65
	88- Video in 3&4.	66
	89- Video out 3&4.	66
	90- Aux out 3/4	66
	91- LTC 3&4 in/loop	66
	92- Video in 1&2.	66
	93- Video out 1&2.	66
	94- Aux out 1/2	66
	95- LTC 1&2 in/loop	66
	96- Reference in 1&2.	66
	97- Reference in 3&4.	66
	98- monitor out	66

99- RS-422 ports	66
100- Master timecode in & out.	67
101- Redundant power	67
102- Power supply alarm ignore	67
103- AES in & out 1-16.	67
104- USB2 ports.	67
105- Gb ethernet	67
106- USB3 ports.	67
107- Analog line in	67
108- DVI/HDMI for GUI.	67
109- optional network	68
110- eSATA ports	68
3.10 Inserting & ejecting drives	69
4.0 Accessories	71
4.1 Drive docks	71
4.2 Rack mount kits.	72
4.3 Control panels.	73
5.0 User Interface	74
5.1 UI Introduction.	74
5.2 UI explained	75
5.3 Keyboard shortcuts.	77
5.4 Powering on	82
5.5 Desktop details	83
5.5.1 On-screen keyboard	83
5.5.2 Touchscreen setup	84
5.5.3 HotSwap!	84

5.5.4 -	84
5.6 Settings - exporting / importing	85
5.7 Multi view screen description	87
5.8 Multi view screen.	88
111- Single view toggle	89
112- remote indicator	89
113- sync indicator.	89
114- master space/time	89
115- signal indicator	89
116- proxy space/time.	89
117- timecode	89
118- timecode source	89
119- redundant master space/time	90
120- start & elapsed time	90
121- redundant proxy space/time.	90
122- record button	90
123- gang button	90
124- RS-422 button.	90
125- SDI char button.	90
126- UI overlays & LUT button	91
127- setup button.	91
128- stop button	91
129- encode overview.	91
130- play button.	91
131- error log button.	91
132- audio meters	91
133- background (bg) button	91
134- P button.	92

135- <i>M</i> button	92
5.9 Single channel view	93
136- <i>multi view toggle</i>	94
137- <i>lock</i>	94
138- <i>tcp remote</i>	94
139- <i>elapsed time</i>	94
140- <i>start</i>	94
141- <i>file TC source</i>	94
142- <i>timecode</i>	94
143- <i>end</i>	94
144- <i>record mode</i>	94
145- <i>422 mode</i>	94
146- <i>record</i>	94
147- <i>gang</i>	95
148- <i>LUT</i>	95
149- <i>char out</i>	95
150- <i>overlays</i>	95
151- <i>analysis</i>	95
152- <i>100%</i>	95
153- <i>full screen</i>	95
154- <i>setup</i>	95
155- <i>stop</i>	96
156- <i>encode overview</i>	96
157- <i>play</i>	96
158- <i>error log</i>	96
159- <i>audio meters</i>	96
160- <i>bg</i>	96
161- <i>P</i>	97

162- <i>M</i>	97
163- <i>remote</i>	97
164- <i>sync</i>	97
165- <i>signal</i>	97
5.10 Headphone Monitor Controls	98
5.11 Record Modes	99
5.11.1 Normal	99
5.11.2 Pause	99
5.11.3 Pause & Seek in File	101
5.11.4 Insert Baseband	103
5.11.5 Insert Baseband Master	105
166- <i>device control</i>	106
167- <i>record mode</i>	106
168- <i>RS-422 mode</i>	106
169- <i>edit point display</i>	106
170- <i>edit point controls</i>	106
171- <i>edit mode</i>	106
172- <i>preview ee/pb</i>	106
173- <i>preview edit</i>	107
174- <i>edit start tc</i>	107
175- <i>file tc display</i>	107
176- <i>create blank tape</i>	107
177- <i>trim file</i>	107
178- <i>target file info</i>	107
179- <i>open file to edit</i>	107
180- <i>audio src</i>	107
181- <i>disable remote track arm</i>	107
182- <i>set up source>file mapping</i>	107

183- file audio overview	107
5.11.6 Insert Audio Matrix	108
5.11.7 -	108
5.12 Create Black File	109
5.13 Character Out Customization	110
5.14 Overlay Customization	111
5.15 Video Analysis Tools	112
5.16 Setup tabs explained	113
5.17 Overview tab	114
184- channel toggle	115
185- page tabs	115
186- current project	115
187- current scene	115
188- current sub-scene	115
189- tape/reel ID	115
190- input settings	116
191- master encoder settings	116
192- master file destinations	116
193- proxy encoder settings	116
194- proxy file destinations	116
195- name	116
196- label	116
197- preview	116
198- preview LUT	116
199- burn LUT	116
200- copy to other channels	116
201- save and close	117
202- segment mode	117

203- drop & loss stop	117
5.18 Project manager	118
204- page tabs.	119
205- project list	119
206- manage projects button	119
207- project metadata button	119
208- name	119
209- label	119
210- project <> channel assignment.	120
211- cancel button	120
212- save & close button	120
213- apply button	120
214- project list scroll	120
5.18.1 Path & file names explained	121
5.18.2 Path & file name templates	123
215- page tabs.	124
216- current project display	124
217- start take#	124
218- start roll#.	124
219- channel assignments	125
220- cancel button	125
221- save & close button	125
222- edit user wildcards.	125
223- show wildcards	125
224- reset to defaults	125
225- tape/reel id.	126
226- file name	126
227- redundant path	126

228- <i>primary path</i>	126
229- <i>global wildcards</i>	126
230- <i>all encoders use same templates</i>	126
231- <i>master</i>	126
232- <i>proxy</i>	126
5.18.3 Path editor	127
233- <i>current project</i>	128
234- <i>template</i>	128
235- <i>expansion</i>	128
236- <i>wildcard shortcuts</i>	128
237- <i>on screen keyboard</i>	128
238- <i>cancel button</i>	128
239- <i>save & close button</i>	128
5.18.4 File name editor	129
240- <i>current project</i>	130
241- <i>template</i>	130
242- <i>expansion</i>	130
243- <i>wildcard shortcuts</i>	130
244- <i>on screen keyboard</i>	130
245- <i>cancel button</i>	130
246- <i>save & close button</i>	130
5.18.5 Edit user & global wildcards	131
247- <i>title</i>	132
248- <i>expansion</i>	132
249- <i>variable</i>	132
250- <i>on screen keyboard</i>	132
251- <i>cancel button</i>	132
252- <i>save & close button</i>	132

5.18.6 Scenes list	133
253- <i>page tabs</i>	134
254- <i>current project display</i>	134
255- <i>scenes list</i>	134
256- <i>manage scenes button</i>	134
257- <i>scene metadata</i>	134
258- <i>channel assignments</i>	135
259- <i>cancel button</i>	135
260- <i>save & close button</i>	135
261- <i>scene list scroll</i>	135
5.18.7 Sub-scenes & User Lists	136
5.18.8 -	136
5.19 Input tab	137
262- <i>page tabs</i>	138
263- <i>res-resolution</i>	138
264- <i>fps-frame rate</i>	138
265- <i>format</i>	138
266- <i>transport</i>	138
267- <i>source</i>	138
268- <i>audio</i>	138
269- <i>preview</i>	139
270- <i>signal loss behavior</i>	139
271- <i>frame drop behavior</i>	140
272- <i>channel toggle</i>	140
273- <i>sync</i>	140
274- <i>save and close</i>	140
275- <i>copy settings from</i>	141
276- <i>copy to other channels</i>	141

	277- audio delay	142
	278- sync	142
	279- signal	142
	280- auto detect.	142
	5.19.1 Audio delay	143
	5.19.2 -	143
	5.20 Master tab	144
	281- page tabs.	146
	282- codec	146
	283- quality.	146
	284- wrapper.	147
	285- audio	147
	286- timecode	148
	287- segment	148
	288- write	149
	289- primary	149
	290- secondary	149
	291- channel toggle	149
	292- video burn	149
	293- closed captions.	149
	294- vbr enable	150
	295- endian type	150
	296- encoder enable	150
	297- use mxf clip folders	150
	298- encoder name.	150
	299- use record TC offset.	150
	300- record mode.	150
	301- copy to other channels	151

	302- save and close	151
	303- generate xml.	151
5.21 Proxy tab		152
	304- page tabs.	153
	305- codec	153
	306- quality.	153
	307- wrapper.	154
	308- audio	154
	309- timecode	154
	310- segment	154
	311- write	155
	312- primary	155
	313- secondary	155
	314- channel toggle	155
	315- video burn	155
	316- lut	156
	317- save and close	156
	318- copy to other channels	156
	319- generate xml.	157
	320- use record tc offset	157
	321- encoder name.	157
	322- vbr enable	157
	323- endian type	158
	324- use mxf clip folders	158
	325- encoder enable	158
5.22 Audio routing		159
	326- source and encode display	160
	327- input meters	160

328- <i>source to destination selector</i>	160
329- <i>delay</i>	160
330- <i>presets</i>	160
331- <i>copy settings</i>	161
332- <i>undo all</i>	161
333- <i>save/back</i>	161
334- <i>additional channels toggle</i>	162
335- <i>channel toggle</i>	162
336- <i>switch to</i>	162
5.23 Video Burn Settings	163
337- <i>input id tab</i>	164
338- <i>video burn</i>	164
339- <i>position</i>	164
340- <i>safe %</i>	164
341- <i>size</i>	164
342- <i>text</i>	164
343- <i>block</i>	165
344- <i>encoder burn timecode source</i>	165
345- <i>user text</i>	165
346- <i>properties panel area</i>	165
347- <i>cancel</i>	165
348- <i>save and close</i>	165
5.24 TC & Automation tab	166
349- <i>page tabs</i>	167
350- <i>record control</i>	167
351- <i>external device via SDI</i>	167
352- <i>EDL</i>	168
353- <i>input rec-run TC</i>	168

354- preroll	169
355- master clock mode	169
356- gen tc mode	169
357- gen tc source	170
358- Special timecode modes	171
359- channel toggle	171
360- tc offsets	172
361- df / ndf	172
362- save and close	172
5.24.1 TC offsets	173
5.24.2 EDL editor	174
363- edl name	175
364- file name	175
365- proxy name	175
366- in tc	175
367- out tc	175
368- duration	175
369- keypad	175
370- df ndf	175
371- cancel enter	175
372- undo cancel \ save and close	176
373- file	176
374- delete current	176
375- insert before	176
376- insert after	177
377- append	177
378- events list scroll	177
379- out tc	177

380- <i>in tc</i>	177
381- <i>edl events</i>	177
5.24.3 Sample EDL	178
5.24.4 -	178
5.25 Prefs tab	179
382- <i>page tabs</i>	180
383- <i>recording</i>	180
384- <i>remote control</i>	181
385- <i>444 output</i>	181
386- <i>prefs</i>	182
387- <i>ui mode</i>	182
388- <i>application</i>	182
389- <i>misc</i>	183
390- <i>licenses</i>	183
391- <i>channel toggle</i>	183
392- <i>system</i>	184
393- <i>use old drive mapping</i>	184
394- <i>save and close</i>	184
395- <i>ip address</i>	184
396- <i>support info</i>	184
5.25.1 UI mode	185
5.25.2 -	185
5.26 4K / UHD mode	186
5.27 V1 Signal Generator tab	190
6.0 Recording	192
6.1 Recording, multi view	193
397- <i>single view toggle</i>	194

398- <i>master & proxy - space / time</i>	194
399- <i>start & elapsed time</i>	194
400- <i>record button</i>	194
401- <i>gang button</i>	195
402- <i>frame buffer indicator</i>	195
403- <i>encode overview</i>	195
404- <i>stop button</i>	195
6.2 Recording, single channel view	196
405- <i>multi view toggle</i>	197
406- <i>lock</i>	197
407- <i>elapsed</i>	197
408- <i>start</i>	197
409- <i>end</i>	197
410- <i>record button</i>	198
411- <i>gang button</i>	198
412- <i>frame buffer indicator</i>	199
413- <i>encode overview</i>	199
414- <i>stop button</i>	199
6.3 -	200
7.0 Playback	201
7.1 Playback, multi view	202
415- <i>multi view toggle</i>	203
416- <i>start end</i>	203
417- <i>elapsed time</i>	203
418- <i>in out</i>	203
419- <i>touch transport</i>	203
420- <i>file</i>	203

421- <i>play head</i>	203
422- <i>file info</i>	203
423- <i>open</i>	203
424- <i>transport controls</i>	204
425- <i>back</i>	204
7.1.1 Playback, touch transport	205
7.1.2 -	206
7.2 Playback, single channel view	207
426- <i>multi view toggle</i>	208
427- <i>dur</i>	208
428- <i>start</i>	208
429- <i>elapsed time</i>	208
430- <i>end</i>	208
431- <i>rem</i>	208
432- <i>file</i>	208
433- <i>play head</i>	208
434- <i>open clip</i>	208
435- <i>transport controls</i>	209
436- <i>edit points</i>	210
437- <i>back</i>	210
438- <i>file info</i>	210
439- <i>p not psf</i>	210
7.3 Clip manager	211
440- <i>page tabs</i>	212
441- <i>disk list</i>	212
442- <i>folder</i>	212
443- <i>folder</i>	212
444- <i>clip list</i>	212

	445- sort controls	212
	446- scroll columns	212
	447- play selected	213
	448- play all in folder	213
	449- find media	213
	450- manage disk	214
	451- manage folder	215
	452- manage clips	216
	453- select all	216
	454- select none	216
	455- add to playlist	217
	456- back	217
	457- list view toggle	217
7.4 Playlist manager		218
	458- page tabs	219
	459- disk list	219
	460- folders	219
	461- playlists list	219
	462- sort controls	219
	463- select buttons	219
	464- play selected	219
	465- play all in folder	219
	466- edit selected playlist	219
	467- manage playlists	220
	468- list view toggle	220
	469- export	220
	470- back	220
7.4.1 Playlist editor		221

471- editor view	222
472- preview	222
473- clip - position timecode.	222
474- clip name.	222
475- clip thumbnail.	222
476- clip timecode	222
477- clip thumbnail scroll.	222
478- playlist timecode	222
479- manage assets	223
480- playlist settings.	223
481- edit selected clip	223
482- duplicate selected	223
483- move selected.	223
484- timecode display.	224
485- export.	224
486- cancel.	224
487- save and close	224
488- output 23.98 as 59i.	224
489- playlist settings overview	224
7.4.2 Playlist settings	225
490- playlist timecode type.	226
491- playlist timecode settings	226
492- frame rate	226
493- p/psf.	226
494- cancel.	226
495- save and close	226
7.5 -	227
7.5.1 -	227

8.0 Remote control	228
8.1 Device Manager	229
8.2 RS-422 - COM port setup	230
8.3 RS-422 Cables & pin-outs	233
8.4 Avid Digital Cut	234
8.4.1 Cinedeck settings	234
8.4.2 Media Composer settings	235
8.4.3 AMP protocol	236
8.4.4 Using VNC applications	237
8.4.5 -	238
9.0 Service & Trouble	239
9.1 Best practices	239
9.2 Touchscreen calibration	241
9.3 Important drive information	242
9.4 Installing SSDs	243
9.5 Initializing new drives	244
9.6 Reinitializing SSDs	249
9.7 Formatting drives	252
9.8 Disk caching settings	253
9.9 Changing drive letters	255
9.10 Error Checking	257
9.11 Secure erase	259
9.12 Updates	262
9.13 Create a restore point	262
9.14 Cinedeck Update installation	266
9.15 Using a Restore Point	270
9.16 Bluefish update	273

9.17 Restore factory image	275
9.18 Update a USB restore key	276
9.19 Create USB restore key	277
9.20 Create system image	281
10.0 FAQ & Features	282
10.1 FAQ > Features	282
10.2 -	297
11.0 Specifications	298
11.1 Basic specifications	298
11.2 Codecs & wrappers	305
11.3 Data rates	332
11.4 Storage calculator	343
12.0 Index	344

1.0 Introduction

1.1 About This Manual

Note: This manual primarily reflects the state of Cinedeck hardware and software as of the date and version number noted on the cover and in the page footers however, because of the many customer specific customizations and minor updates, some sections will vary slightly from your system and the stated version. This manual will be updated as new features are implemented and will not necessarily reflect legacy information.

What's in the manual:

This user manual describes the functions available in the Cinedeck software, as well as relevant information regarding upgrades, hardware information such as pin definitions for connectors, interaction with 3rd party software such as NLEs, and further technical information of interest to users.

For a good initial understanding, there are several overview sections which should be reviewed:

["1.5 Cinedeck Product Overview" on page 30](#)

["3.0 Installation" on page 37](#)

["5.1 UI Introduction" on page 74](#)

How to use this manual:

The manual is divided into multiple sections. The first two chapters after the table of contents (which, in PDF form, employs hyperlinks) are an introduction and overview of what comes with each machine.

The following chapters, which include physical descriptions for each deck and user interface details, make extensive use of captions for each control and connection. Captions include a caption ID and page numbers, directing the reader to descriptions and operational explanations. When viewed as a PDF, the captions employ hyperlinks to provide direct navigation to the relevant details. Additionally, Pressing "ALT+Left Arrow" or "ALT+Right Arrow" will navigate backwards and forwards through previously viewed pages. Towards the end of the manual are several sections with specifications, appendices of useful information and a section describing each feature and frequently asked questions.

1.2 Copyright and Trademarks

All trademarks are the property of their respective owners.

Cinedeck is a trademark of Cine Design Group LLC
ProRes is a trademark of Apple Computer Corporation
Avid Media Composer is a trademark of Avid Technology, Inc.
DNxHD is a trademark of Avid Technology, Inc.
Windows is a trademark of Microsoft Corporation
Premiere is a trademark of Adobe Corporation

All other tradenames referenced are service marks, trademarks, or registered trademarks of their respective companies.

1.3 Safety Information

WARNING: Take care of your Cinedeck as you would cameras and other sensitive electronic equipment. Take care especially to keep water and moisture away from the unit. Getting your Cinedeck wet will void the warranty and **COULD CAUSE ELECTRIC SHOCK!**

WARNING: Your Cinedeck needs ventilation for safe operation. **DO NOT** block the front or rear of the unit as this will restrict airflow, causing it to overheat, potentially damaging the unit and voiding the warranty.

1.4 FCC and CE Information

Caution: The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Class B Statement: This equipment has been tested and found to comply with limits for Class B digital device pursuant to Part 15 of Federal Communications Commission (FCC) rules.

CC and CE Compliance Statement: This equipment has been tested and found to comply with the limits of the European Council Directive on the approximation of the law of the member states related to electromagnetic compatibility (89/336/EEC) according to EN 55022 Class B.

These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which receiver is connected

1.5 Cinedeck Product Overview

In the most basic sense, Cinedecks are video production ingest and playout appliances. They can initially be described as tape deck replacements in that you can drop one in place of a tape deck, use the existing connections and put it to work but your Cinedeck's features and functions go far beyond what traditional tape decks have ever offered.

Multi-channel ingest and playback using the storage destinations, native codecs and file types which best fit your workflow remain the core benefits of Cinedeck recorders however simplicity is key in today's demanding production environments. Cinedecks Plug & Play nature, supported by an intuitive, easy to navigate user interface with a full array of analysis tools, allows you to quickly setup and manage your sessions. This is enhanced by the project orientation of your Cinedeck. Leveraging the Cinedeck project based design allows you to have, as needed, full channel flexibility allowing completely separate settings between channels or uniform and simultaneous changes across multiple channels.

CODECS

First and foremost, Cinedecks provide native support for a broad selection of codecs and file wrappers and the list is continuously being added to. Of course where appropriate you can optionally select from multiple file wrappers such as; true native Avid OP-Atom MXF, MOV, MXF OP-1A and others.

Coming in a later release, Cinedeck plans to enhance the product line with RAW recording.

Additionally, Cinedecks handle 422 or 444 color sampling and bit depths of 8bit and 10bit to render your content as accurately as possible.

STORAGE

In many modes, Cinedecks offer the ability to write both master and proxy files for each input and when it comes to writing your files, no other product comes close to Cinedecks flexibility of recording; internally, to local attached drives and to network storage.

For internal recording, Cinedeck relies on standard 2.5" SSDs mounted in 'dual drive' removable and hot swappable carriers or sleds. You have the option of utilizing one or more internal drives as needed for your

Cinedeck Product Overview / cont...

particular production and the available desktop and installable docks with SATA connectivity give you instant high-speed access to your content. Of course additional drive carriers or sleds are available and installing drives in the sleds is simply a matter of a few screws.

Before going further with the many other storage options it is important to understand Cinedecks redundant record capability. Cinedecks offer the ability to connect and record to multiple destinations. See ["3.3 Recording destinations" on page 41](#).

For many inputs, Cinedeck can not only write a Master and a Proxy, the file writes can be redundant meaning two of each file can be written wherever you need them. And by redundant we don't mean a copy, we mean two concurrent and totally separate file writes of each file.

By leveraging this redundant capability you can, for example, have a safe copy in the machine and a network copy, instantly available for editing or a customer take away copy as soon as "Stop" is pressed. The options are virtually limitless.

SSD drives are recommended for internal recording however, each Cinedeck also has a multitude of USB and SATA connections, allowing the use of direct attached storage so for example recordings can be made to USB3 drives as well as external eSATA devices such as RAID arrays.

Direct to network recording is one of the most important Cinedeck features.

Cinedecks run on Windows7 embedded. One of the advantages to being on a Windows platform is Cinedeck can leverage the internal networking capability and where appropriate, 3rd party support for Windows so if you have a SAN system which provides a Windows client, that client can likely run on the Cinedeck, allowing direct to SAN recording with all of the advantages of being a true SAN client.

Whether it is Avid ISIS, Harmonic MediaGrid, Facilis Terablock or another network storage solution, the advantages and efficiencies realized for multi-cam and other edit hungry productions by providing instant access to new content, can be easily measured in real and significant cost savings.

Especially when recording to local attached and network destinations, it is important to understand bitrate, multi-write capability and bandwidth and to thoroughly test your environment before deploying your workflow

Cinedeck Product Overview / cont...

on a production.

In general, when recording to an appropriate destination across a LAN dedicated for video, standard gigabit is fine for the normal compressed formats such as ProRes or DNxHD. Conversely, it goes without saying that you will never achieve the maximum theoretical throughput to any destination or device and recording an uncompressed HD stream across a standard gigabit network will not be successful, however there are many more subtle variables when selecting an external destination such as pipe size, network traffic, multiuser and multi-read/write capability, etc. *Thorough testing cannot be emphasized enough.*

Cinedecks provide dual 1Gb LAN connections which can be “teamed” if your network supports that. Some Cinedeck models also have an available PCIe slot for installing a 10Gb Ethernet card, 8 or 16Gb Fiber Channel card or direct attached storage adapter, to support high bitrate sessions.

2.0 What's in the Box

2.1 Cinedeck RX3G

Cinedeck RX3G is the solution for productions where space and weight are at a premium. Taking its cue from fully loaded MX, the rugged, milled-aluminum case is built to withstand environments that are on-the-move like OB vans or flight packs. Weighing around 12lbs (5.5kg) and measuring 4RU at half-rack width, RX3G brings tons of functionality in a small footprint.



Built-in to the front panel are;

- User interface touch display which can be tilted
- A eSATA and USB port
- Two removable drive trays, each of which can hold two SATA drives
- A headphone jack

Internally, RX3G provides two full duplex 3G channels, a full selection of master formats, accompanied by an H.264 proxy and most of the available Cinedeck features.

In HD and SD mode, RX3G can record master and proxy for each channel.

With the 4K mode option, RX3G can play a single channel of 4K.

RX3G comes with;

- Two AC to DC power supplies with localized power cables
- A touch screen stylus
- One USB software installation disk (Restore disk)
- If you purchased accessories such as media drives or a rack kit with your Cinedeck, they will be included in a separate box

Please check to ensure that all expected contents are included. In the event something is missing, please immediately contact your reseller or Cinedeck Support: See ["Contacting Cinedeck" on page 2](#)

2.2 Cinedeck MX

MX is the flagship four-channel recorder. Built in to the front panel are;

- User interface touch display which can be tilted
- Solid state memory card readers for P2, SxS and compact flash
- A eSATA and USB ports
- A tactile jog/shuttle control
- Touch panel controls
- Four removable drive trays, each of which can hold two SATA drives
- Dual mini and ¼" headphone jacks
- Dual headphone volume controls



Internally, MX provides four full duplex 3G channels with the full selection of master and proxy formats, high-bandwidth network capabilities and most of the available Cinedeck features.

In HD and SD mode, MX records master and proxy for each channel.

With the 4K mode option, MX simultaneously records 4K files, HD master files, HD proxy files and h.264 streamable files, with or without LUT applied.

MX comes with;

- Localized power cables
- A touch screen stylus
- One USB software installation disk (Restore disk)
- If you purchased accessories such as media drives or a rack kit with your Cinedeck, they will be included in a separate box.

Please check to ensure that all expected contents are included. In the event something is missing, please immediately contact your reseller or Cinedeck Support: See ["Contacting Cinedeck" on page 2](#)

2.3 Cinedeck ZX

ZX is a modular design based on MX. Primarily for rack-mount installations, Cinedeck ZX lets you choose from a broad selection of software toolsets and hardware configurations, to build a cost effective system that meets your specific ingest, playback and transcoding needs. As a result, not all ZX systems have the same features but you always have the ability to add extra capabilities if your workflow changes.



Built-behind the front panel are;

- Two USB ports
- Four removable drive trays, each of which can hold two SATA drives

ZX is available in three base models:

- ZX²⁰ is a two channel system
- ZX⁴⁰ is a four channel system which, when fully loaded, most closely matches MX
- ZX⁴⁵ is a four channel system, which in terms of pure processing power, is a step above MX

Internally, ZX provides two or four full duplex 3G channels, with an optional selection of master and proxy formats and high-bandwidth network capabilities.

In HD and SD mode ZX records master and proxy for each channel.

With the appropriate options, ZX records 4K files up to 60p, along with HD master files, HD proxy files and h.264 streamable files, with or without LUT applied.

ZX comes with;

- Localized power cables
- One USB software installation disk (Restore disk)
- If you purchased accessories such as media drives or a rack kit with your Cinedeck, they will be included in a separate box

Please check to ensure that all expected contents are included. In the event something is missing, please immediately contact your reseller or Cinedeck Support: See ["Contacting Cinedeck" on page 2](#)

2.4 Features

2.4.1 Hardware

The overall design and build of each Cinedeck model is oriented towards professional video production and while the current Cinedeck generation comes in different forms with some hardware differences, at their heart they are all very similar. Much of the hardware is "off-the shelf" which allows Cinedeck designers to quickly respond as improved technology comes available. Starting at the basics, there are many options available for video input and output processing but the quality of the actual image which comes through today's cards differs significantly. The current Cinedeck generation are all based on Bluefish video I/O processing cards which were selected for their clean video I/O, access to the complete signal path and their responsive and active interest in supplying a quality product.

There are also some custom hardware elements; not so visible electronic components such as the RS-422 board and very visible parts like the tilt displays, control panels and the stainless steel back panels.

2.4.2 Software

The user interface is what really makes a Cinedeck unique. The interface has been in development since 2010 and most users agree that it is very effective and easy to navigate, making what can be quite a complicated process, quick and easy.

It is also important to note that the Cinedeck application is running on top of a Windows 7 embedded installation. The discussion will go on forever as to the plus and minus points of Windows but for the purposes of a versatile system such as a Cinedeck, there are significant advantages in terms of storage flexibility and the capability to be integrated into larger system environments.

For a complete overview of the many features available in your Cinedeck, please refer to: ["10.0 FAQ & Features" on page 282](#)

Cinedeck hope your experience with our decks is positive and appreciate any comments you may have so please feel free to contact us. See ["Contacting Cinedeck" on page 2](#)

3.0 Installation

3.1 Important

Storage: Cinedecks are primarily SOLID STATE recorders; recording should always be to Solid State Drives (SSDs) mounted in the internal removable drive bays. Currently Cinedeck support the Samsung 840pro, 850pro and EVO SSD drives. USB and eSATA are available for media offload but due to the vast number of variables involved in different mechanical hard drives and external enclosures, Cinedeck do not recommend recording to these external drives.

Network connectivity may be used for recording, but performance will vary depending on network topology, network storage device performance, network and server traffic, etc. It is critical that an IT professional be involved in the configuration and support of any network infrastructure.

Performance claims are based upon recording to internal SSD media.

It is very strongly recommended that any workflow be thoroughly tested before use in a mission-critical production environment.

While “spinning drives” and network recording may be used, Cinedeck does not in any way guarantee that performance of such recording media (including SANs, external RAID arrays, etc.), will be adequate to take advantage of the features of a Cinedeck.

It is up to the end user to understand the risks and to have the technical expertise on hand to properly take advantage of recording media other than the internal SSDs.

3.2 Connecting your deck

In many respects, the initial setup of a Cinedeck is no different than a traditional tape deck and also, like a tape deck, some care needs to be taken during the installation process.

Cinedecks are not terribly heavy but the physical location is still very important. Install the Cinedeck in a protected and stable environment, such as in a rack, on a table, etc., where the deck can not fall or be otherwise susceptible to undesirable environmental or hazardous conditions. As with any electronic equipment, it is important that the area have sufficient ventilation and be a reasonable temperature. Use common sense; if you are not comfortable because of the temperature or humidity, the environment is likely not appropriate for your equipment either so special care should be taken.

Assure there is a stable and clean power source. Because Cinedeck recorders use auto switching redundant power, it is preferred to have power coming from two independent sources. The use of a UPS (uninterruptible power supply) is also highly recommended to help prevent data loss.

Cinedecks use standard professional video and IT interconnects. Make any appropriate video, audio, reference, network and control connections, assuring that the cables are in good operational condition. This is of particular importance as digital signals are very susceptible to intermittent data loss caused by cable issues which can greatly complicate troubleshooting.

Refer to the rest of this chapter to learn about the various external parts of your Cinedeck.

3.2.1 Audio connections

Your Cinedeck can utilize several different audio sources.

Most common is recording “embedded” audio which is coming into the deck on a SDI BNC connection. In this situation the system can accept up to 16 audio channels with each video.

AES is also commonly utilized and each channel pair can accept up to 8 AES channels, also on BNC connections.

It is also possible to use analog audio.

Analog can be connected via the motherboard rear mounted unbalanced mini jack. See the appropriate rear panel description for your deck and [“268- audio” on page 138](#) in the user interface input menu setup section.

There are also a number of ways to connect balanced audio sources.

The best and often lowest cost solution is to use an analog to digital AES adapter. There are many on the market but one example is the AJA ADA4 4-Channel A/D & D/A Converter. In all cases, these small converter boxes provide a simple and fairly foolproof direct connection for analog audio sources.

Another excellent but more expensive option would be an analog to SDI embedder. These small converter boxes accept analog audio and SDI video sources and merge the audio into the video ancillary data track. They are also simple and fairly foolproof and there are also many of these on the market.



Lastly, a XLR or TRS balanced audio pair can be introduced to the system using a Focusrite 2i2 USB audio adapter.




Keep in mind that, especially when your audio is traveling via a different path from the video, audio<>video timing issues can arise. This can generally be managed internally via Cinedeck’s the audio delay. See [“5.19.1 Audio delay” on page 143](#)

For additional information on any of these solutions, contact Cinedeck support. See [“Contacting Cinedeck” on page 2](#)

3.2.2 AES - BNC to XLR

Cinedecks utilize BNC coaxial connections for AES in and out while some of your other equipment may use XLR connectors. It is very simple to make up basic interconnect or adapter cables to go from XLR to BNC. Coaxial cable should be used in place of twisted pair for these cables - The theory is that, although unbalanced, the high density coaxial shield acts as a Faraday cage, protecting the signals. The pin connections are shown below.

Especially for longer distances, balanced connections are recommended. You may consider using XLR to BNC (110 ohm > 75 ohm) impedance matching transformer / adapters, similar to the Neutrik NADITBNC, NADITBNC-MX and Canare BCJ-XJ-TRB or other more specialized transmitter/receiver modules.

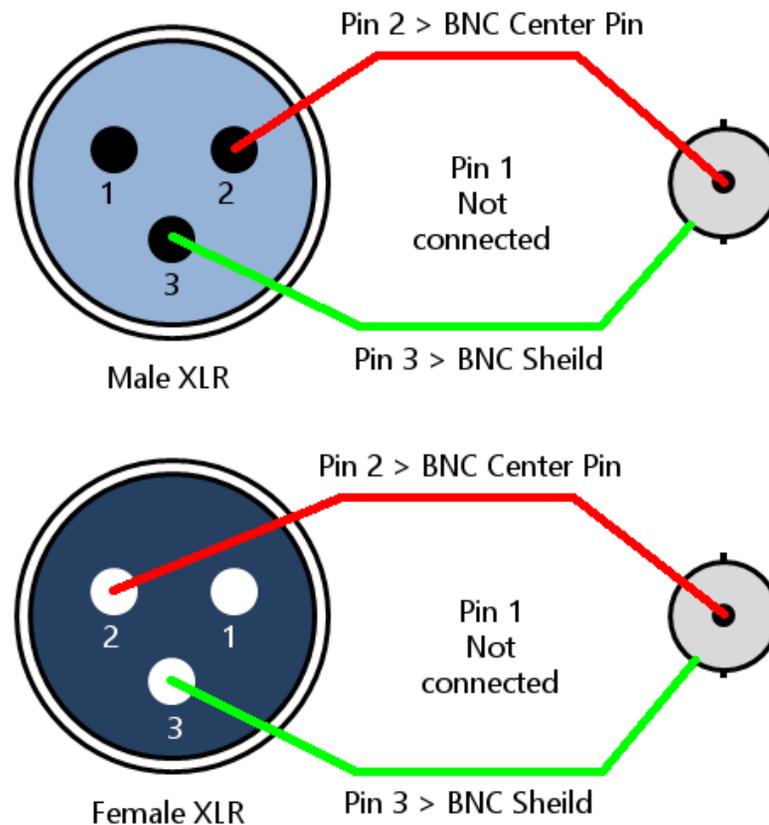

3.3 Recording destinations

All Cinedecks can write video and audio recordings as files to low cost and commonly available non-proprietary 2.5" SSD SATA drives.

Cinedeck SSD drives are mounted in removable, hot-swappable, dual drive cartridges or 'sleds' (RX and newer). Additional sleds as well as portable and installable receiving chassis are available to enable easy 'sneaker-net' workflows.

Currently, Cinedeck only recommend and support Samsung 840 Pro, 850 Pro and EVO series SSD drives.

For recording and playback, all Cinedecks can also utilize external USB* and / or eSATA* and / or network storage including NAS (network attached storage) and SAN (storage area network) systems requiring client software. Additionally, the Cinedeck operating system can be setup to support iSCSI file systems. Cinedecks are Windows 7 Embedded based so fully support SMB shares and client software is often available for SAN installations.

Some Cinedeck recorders have an available PCIe slot for 8Gb / 16Gb fiber or 10Gb Ethernet cards as well as direct attached storage such as the drive arrays from Dulce Systems.

Important: All external and network recording devices and plans should be extremely well tested before utilizing in a production environments.

***Note:** Drive assemblies of the same model from the same manufacturer can differ in firmware and internal hardware used so successful tests are drive specific and as such do not guarantee successful recordings with other units.

3.3.1 SSDs

Don't skimp on drives to save a few cents: The use of unsupported drives to save a little money per GB has a poor cost-benefit ratio when what is at stake is generally the recording of an extremely costly production. Make a backup recording. Even if it's just to the in-camera recording card. If a shoot is important, always have a backup plan.

For the reasons outlined above and below in this manual, SSDs are the only supported/warranted recording media and currently Cinedeck only recommend recording internally to the Samsung SSDs listed below.

The Cinedeck development team can absolutely confirm that not all SSDs are created equal and SSD specifications as advertised by manufacturers can be extremely misleading. Real-time video recording, especially multi-stream writing, is unlike any other use-case and in general, most SSD drives are not optimized for best performance in this very specific case. Also, some drives have appalling failure rates. For instance, Cinedeck had drives provided from a manufacturer for testing which had a 100% failure rate within 6 months. This does not mean they all necessarily completely stopped working but they could no longer reliably record video.

In our very extensive experience, as of this writing the only thoroughly reliable SSDs are the Samsung drives noted. They are competitively priced and have a very low failure rate even compared to so-called "enterprise-level" SSDs which tend to cost 3-10 times as much per GB.

Some customers have used other drives with success, but Cinedeck will not warrant or support issues arising from use of SSDs other than the Samsung drives listed.

Supported SSDs:
Samsung 840 Pro series (excellent price/capacity)
Samsung 850 Pro series (highest performance, longest warranty)
Samsung EVO (best price/capacity)

3.3.2 USB & eSATA

The use of external hard drives should be undertaken with extreme caution for a few reasons:

- “Traditional” spinning disks are extremely poor at recording video, especially more than one stream at a time, and “disk speed tests” like those from Black Magic and AJA are largely meaningless since they only test raw throughput to one file for a relatively short period.

Spinning hard disks have a physical head that moves around the platter when writing a file. If the drive is fragmented or more than one file is being written, it must jump around constantly to keep updating the file(s). With a format like MXF OpAtom where there are many individual files being written for each clip, the write head can very quickly become overwhelmed and be unable to update all the files quickly enough to keep up, even if the individual data rates are low.

A good example is XDCAM HD OpAtom and a JFIF proxy, each with 8ch of audio, with a total data rate of about 60Mbps. Two inputs with 20 files per input equals 40 files being written to the same drive. Despite the fact that the total data rate being written is only around 14MB/sec, far less than the sustained file transfer speed of a modern 7200RPM spinning disk, the physical head will be incredibly stressed as it attempts to keep up with updating 40 individual files in real time, pushing it close to or over the edge.

- External hard disk performance is also heavily dependent on the hardware controller (and its firmware). Some manufacturers’ controllers are much better than others at handling the kind of sustained data rates and file system overhead required for video recording. Thus the same physical hard drive in two different enclosures may perform with very different results.

RAID arrays can mitigate I/O and throughput issues by spreading file writes across two or more physical drives so if experimenting with external drives, a RAID can be a better approach however extensive testing is still required.

- Hard drive enclosure manufacturers also change the specifications and internal components of their products without necessarily making such changes obvious with a change in product model name or in the product documentation. In short, Model X may have different hardware controllers, firmware, drive interfaces, and drives depending on when or where it was manufactured or simply by component availability at the time. In practice this means that two of the “same” drive may not have the same performance despite outward appearances.

Recording destinations / USB & eSATA cont...

- Lastly, the Windows system can contribute to drive performance or lack thereof. In earlier years, both USB3 and eSATA were plagued by issues in firmware, drivers and controller hardware. Most of those early issues have been resolved however, in general, USB3 is still not as responsive as eSATA. Throughput is about the same but latency and multi-write capability is still better on eSATA. However, eSATA can be more easily disturbed by connector and cable issues. The eSATA connector design is less than perfect so extreme care must be taken to assure they are well seated and that they are not disturbed while connected.

As a result of the above...

Cinedeck do not recommend recording to USB and eSATA external drives. While many customers use them regularly or even exclusively without issues, problems resulting from their use are not covered by warranty or support.

With these clear warnings in mind... Based on customer experience and internal testing, The following drives have been found to perform well:

Avastor HDX 1500
CalDigit AVPro , AV Drive or VR2 Drive
Drobo 5D USB3/Thunderbolt

If your workflow requires using these external drive systems, Cinedeck suggest reviewing the "Spinning Disk Drive Guide" available on the Cinedeck website.

3.3.3 Network Storage

Recording to a SAN or other network-based solution requires adequate infrastructure and staff with the IT knowledge and experience with each system to configure and maintain it properly. Your Cinedeck supports 1Gb networking and some Cinedecks can be configured with a Fibre Channel or 10Gb Ethernet host adapter for use with higher-speed networks.

SAN-based recording can be extremely efficient and cost-effective, especially for long-form multi-camera shows with tight editing deadlines, or in a facility where direct access to recorded media is required.

Because the various Cinedeck platforms are Windows 7-based, generally very little setup is required on the Cinedeck side for operation with a SAN. The network environment and any SAN client software, needs to be installed and configured properly by an IT professional.

There are some important issues to keep in mind:

- 1) recording over a network can create a large single point of failure
- 2) network topology and 3rd party software (SAN clients and managers) add additional levels of maintenance, support

The list grows constantly however, some NAS and SAN solution manufacturers whose products are known to be used with Cinedeck products include:

Avid ISIS

Drobo

Facilis TerraBlock

Harmonic Omneon Mediagrid

SNS Storage Network Solutions

3.3.4 DAS Storage

If you have a need for local attached removable storage but need higher bandwidth than USB or eSATA and would prefer a system designed for higher performance, another option may be DAS (Direct Attached Storage).

DAS utilizes a custom PCIe adapter card which connects directly to an external drive system. Because the card is tied directly to the PCIe bus, the bandwidth can be very high. DAS generally utilizes a RAID array, leveraging the high bus bandwidth to deliver high I/O performance accompanied by excellent file security.

Additionally, some DAS systems such as those from Dulce can also integrate a network adapter so while the Cinedeck may only have one available PCIe slot, the installation of the DAS adapter will not necessarily eliminate the addition of a network card.

The list too will grow however one manufacturer with DAS products known to be used with Cinedecks is Dulce Systems.




3.4 RX3G front panel



RX3G front panel / - cont...

Name	Location	Description
1- HEADPHONE	3.4 RX3G front panel - (p.47)	1/8" mini jack for use with standard stereo headphones.
2- eSATA PORT	3.4 RX3G front panel - (p.47)	* In the default factory configuration, this front port is disabled. RX3G has a total of five internal SATA ports, the first four of which are by default used for the SSD drive trays. The fifth SATA port is connected to eSATA 1 on the rear panel. The front eSATA and rear eSATA 2 connectors can be enabled by swapping cables internally. Please contact Cinedeck Support for more information.
3- USB PORT	3.4 RX3G front panel - (p.47)	Standard USB2 data port
4- POWER BUTTON	3.4 RX3G front panel - (p.47)	In the default configuration, the power button requires a momentary push for turning the RX3G on and off and glows blue when the system is running. The systems can also manually be placed into Windows sleep mode. In this state, the power button will blink slowly. Pressing the power button will wake the system.
5- FUTURE USE	3.4 RX3G front panel - (p.47)	Six pin Lemo connector for future features
6- DRIVE TRAY	3.4 RX3G front panel - (p.47)	RX3G can hold two removable drive trays. All current Cinedecks utilize these removable drive trays, sometimes called sleds or carriers. Each tray can hold two SATA SSD drives. See "3.10 Inserting & ejecting drives" on page 69 and "3.3.1 SSDs" on page 42 The trays are also available separately.
7- DRIVE LOCK & EJECTOR	3.4 RX3G front panel - (p.47)	Cinedecks are configured by default with twist-lock drive retainers but key-lock retainers are available upon request with your initial order. See "3.10 Inserting & ejecting drives" on page 69
8- LCD DISPLAY	3.4 RX3G front panel - (p.47)	1024 x 600 Touch Screen Display for user interface manipulation and video preview of record and playback signals. This screen can be tilted to allow better viewing at low angles. The same signals see on this screen can simultaneously be displayed on a monitor connected to any one of the GUI display ports. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.

3.5 RX3G back panel

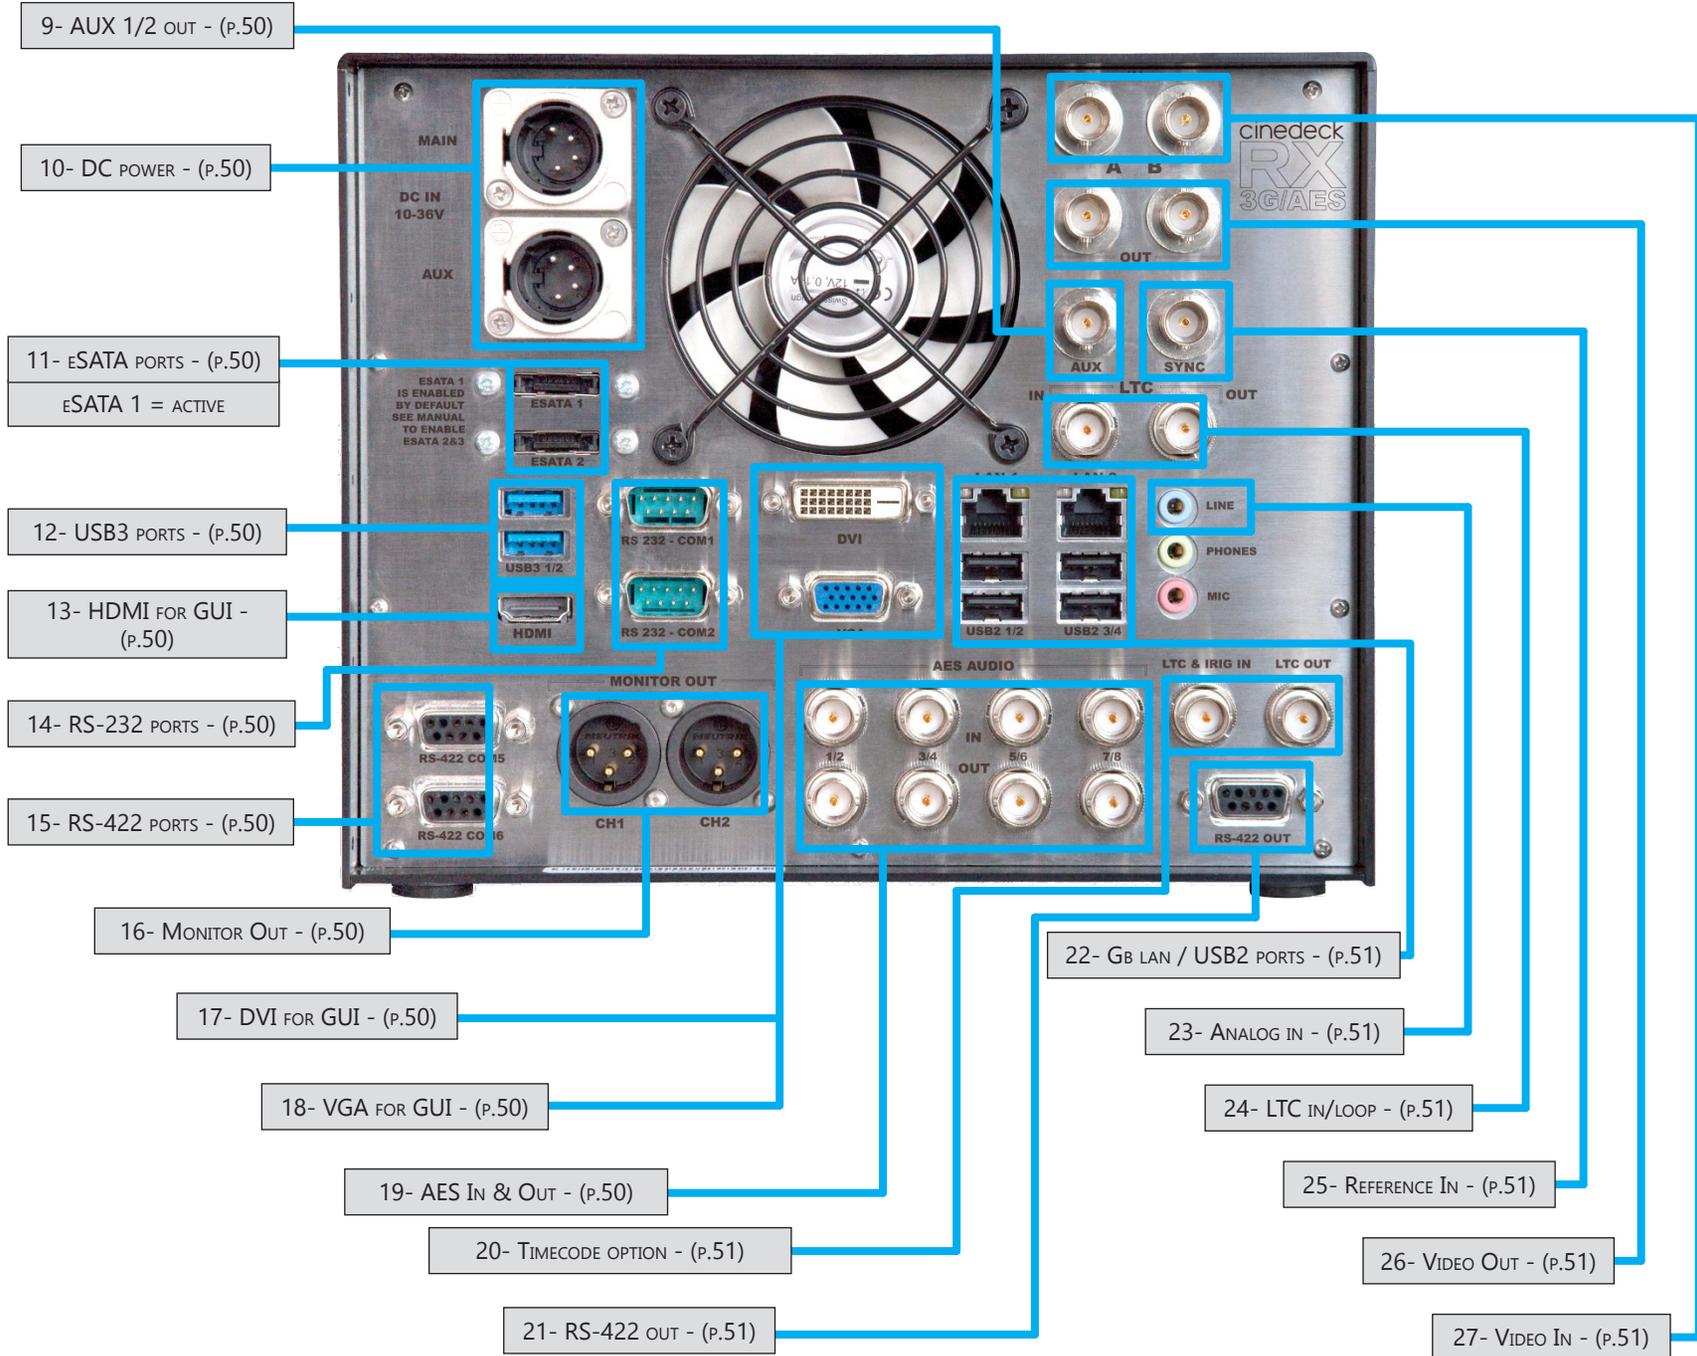

Installation

RX3G back panel


RX3G back panel / - cont...

Name	Location	Description
9- AUX 1/2 OUT	3.5 RX3G back panel - (p.49)	AUX video out is a secondary output of either channel 1 or channel 2. The signal source selection can be defined on the "prefs" page of some systems.
10- DC POWER	3.5 RX3G back panel - (p.49)	RX3G has dual, wide range, DC inputs via XLR male connectors. Either input can be used to operate the deck as they are auto switching. It is recommended to always have power supplied to both inputs from separate power sources.
11- eSATA PORTS	3.5 RX3G back panel - (p.49)	* In the default factory configuration, eSATA 2 on the back panel is disabled. RX3G has a total of five internal SATA ports, the first four of which are by default used for the SSD drive trays. The fifth SATA port is connected to eSATA 1 on the rear panel. The front eSATA and rear eSATA 2 connectors can be enabled by swapping cables internally. Please contact Cinedeck Support for more information.
12- USB3 PORTS	3.5 RX3G back panel - (p.49)	Standard USB3 data ports. It is recommended to use USB2 ports when restoring a system from the USB restore key.
13- HDMI FOR GUI	3.5 RX3G back panel - (p.49)	The RX3G user interface can simultaneously be displayed on most HDMI monitors. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.
14- RS-232 PORTS	3.5 RX3G back panel - (p.49)	For remote control of most "broadcast" equipment, RS-422 will be used. These ports can be used for connections between a Cinedeck and another computer workstation such as an Avid or FCP system, eliminating the need for a RS-422 adapter.
15- RS-422 PORTS	3.5 RX3G back panel - (p.49)	One port per HD/SD channel. Each port can be used for remote control between a tape deck or other professional device and a Cinedeck channel. The ports are bi-directional allowing "master mode" for the Cinedeck to control attached devices or "slave mode" allowing external devices to control the Cinedeck.
16- MONITOR OUT	3.5 RX3G back panel - (p.49)	3-pin XLR Line-Level analog audio monitor output. One output per channel.
17- DVI FOR GUI	3.5 RX3G back panel - (p.49)	The RX3G user interface can simultaneously be displayed on most DVI monitors. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.
18- VGA FOR GUI	3.5 RX3G back panel - (p.49)	The RX3G user interface can simultaneously be displayed on most VGA monitors. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.
19- AES IN & OUT	3.5 RX3G back panel - (p.49)	BNC AES audio in and out connectors where each connection carries two AES channels.

RX3G back panel / - cont...

Name	Location	Description
20- TIMECODE OPTION	3.5 RX3G back panel - (p.49)	<p>The RX3G timecode option provides three additional features.</p> <ul style="list-style-type: none"> • Jam Sync - Similar to a camera, a timecode source can be momentarily connected to this LTC input and RX3G will sync the internal generator to that timecode. • Timecode Out - With the timecode option, RX3G can generate and send timecode to other connected devices such as cameras, eliminating the need to have a separate timecode generator, for example in a fly-pack type of configuration. • IRIG-B Timecode support - Allows RX3G to receive a IRIG-B timecode source from an external IRIG-B timecode generator (not included) and use that timecode data internally as a replacement for standard SMPTE timecode. <p>You can confirm if your RX3G has the Timecode option if the BNC connectors are included on the back panel and by checking in Windows Device Manager. If 'AEC Time Code device' is listed, the deck has the option.</p>
21- RS-422 OUT	3.5 RX3G back panel - (p.49)	Unused
22- GB LAN / USB2 PORTS	3.5 RX3G back panel - (p.49)	<p>Two standard Gb Ethernet ports. Ports can be teamed in networks which support teamed connections.</p> <p>Four standard USB2 data connections.</p>
23- ANALOG IN	3.5 RX3G back panel - (p.49)	An unbalanced analog line level audio input which can be used for recording stereo scratch audio.
24- LTC IN/LOOP	3.5 RX3G back panel - (p.49)	LTC (linear time code) input for use with a house supplied timecode signal. Signals which are input are passed to the out connector.
25- REFERENCE IN	3.5 RX3G back panel - (p.49)	For external reference, Cinedecks will lock to either standard color burst/black burst or Tri-level sync. In "Auto" mode, if no external reference is available, the deck will default to internal sync or video input. In dual-link, when referencing to incoming video, reference can be selected from the A or B input.
26- VIDEO OUT	3.5 RX3G back panel - (p.49)	Channel 1 and 2, 3G video outputs. Can be paired and function as dual-link output. Can optionally carry a video super with transport status, etc.
27- VIDEO IN	3.5 RX3G back panel - (p.49)	Channel 1 and 2, 3G video inputs. Each video input can accept up to 16 channels of SDI embedded audio. Can be paired and function as dual-link input.

3.6 MX front panel

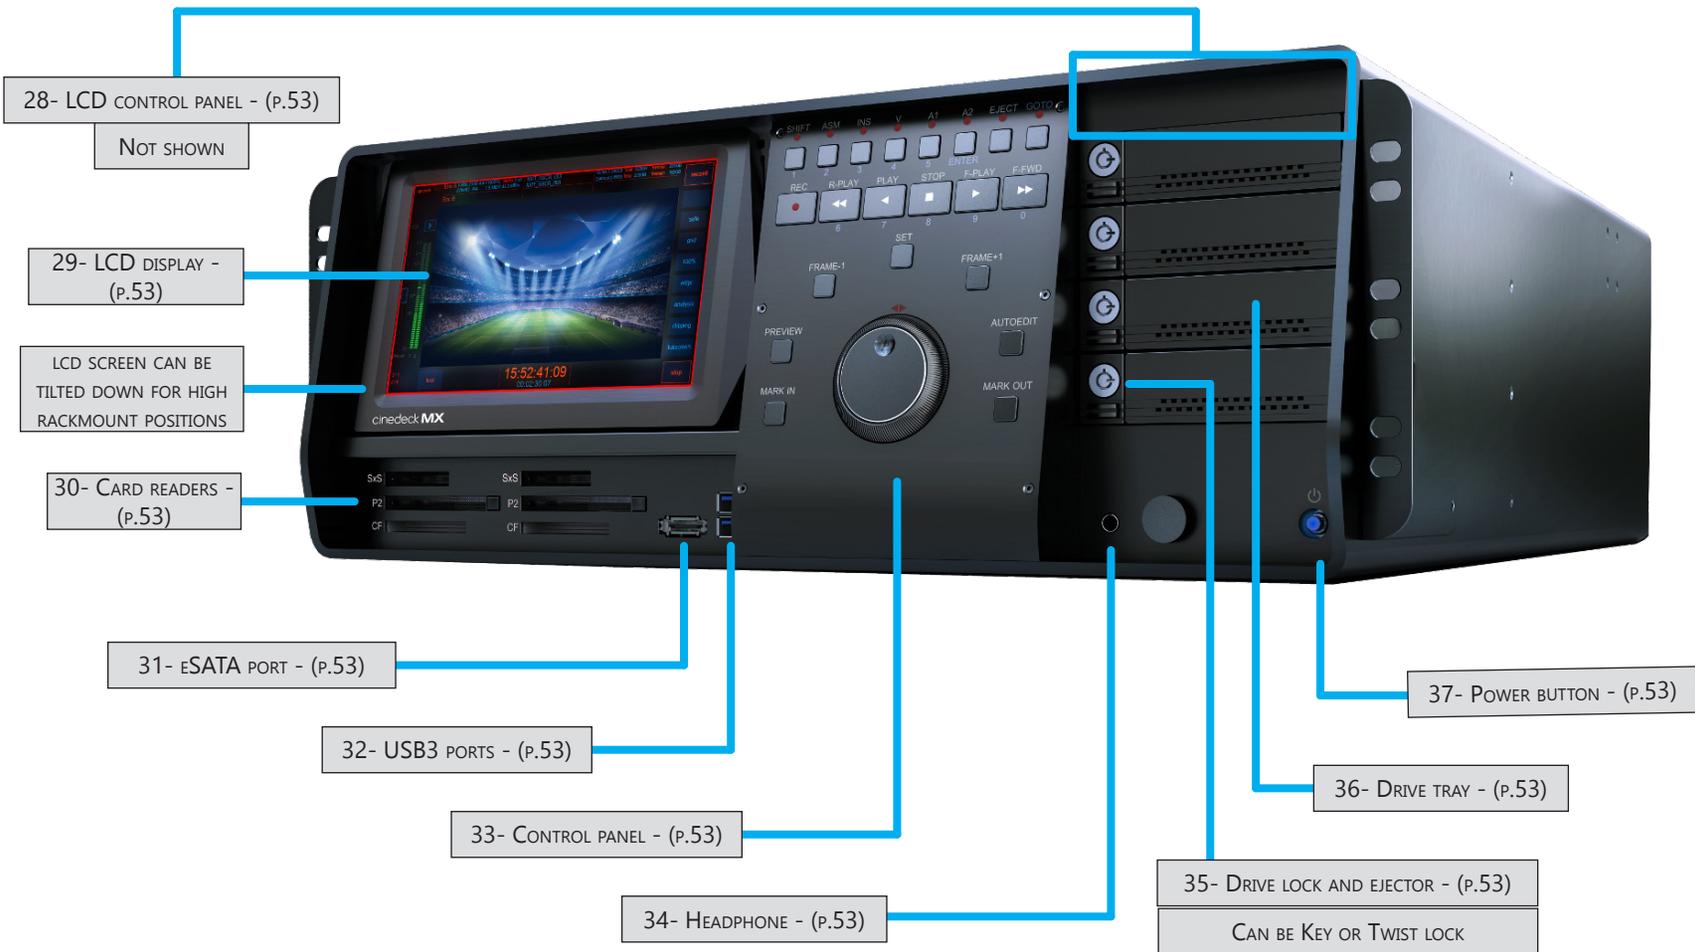


MX front panel / - cont...

Name	Location	Description
28- LCD CONTROL PANEL	3.6 MX front panel - (p.52)	The MX LCD control panel has a LCD dimmer control and three pushbuttons; display off/on toggle, menu access, selection and adjustment for size, etc..
29- LCD DISPLAY	3.6 MX front panel - (p.52)	1024 x 600 Touch Screen Display for user interface manipulation and video preview of record and playback signals. This screen can be tilted to allow better viewing at low angles. The same signals see on this screen can simultaneously be displayed on a monitor connected to any one of the GUI display ports. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.
30- CARD READERS	3.6 MX front panel - (p.52)	Sony SxS, Panasonic P2 and Compact flash cards may be inserted for direct playback and file management tasks such as copying data to local or network storage. The Cinedeck will not write data to these cards with compatible file and folder structures seen on natively written camera cards.
31- eSATA PORT	3.6 MX front panel - (p.52)	MX has a total of four eSATA ports, three on the rear panel, one on the front panel.
32- USB3 PORTS	3.6 MX front panel - (p.52)	Standard USB3 port. It is recommended to use a rear USB2 port when restoring a system from the USB system key.
33- CONTROL PANEL	3.6 MX front panel - (p.52)	Tactile machine interface control panel for transport control and channel selection. See MX control panel for more information.
34- HEADPHONE	3.6 MX front panel - (p.52)	The image shown may not match your unit. Most MX systems have two mini and two 1/4" headphone jacks and two volume controls for audio monitoring.
35- DRIVE LOCK AND EJECTOR	3.6 MX front panel - (p.52)	Cinedecks are configured by default with twist-lock drive retainers but key-lock retainers are available upon request with your initial order. See "3.10 Inserting & ejecting drives" on page 69
36- DRIVE TRAY	3.6 MX front panel - (p.52)	MX can hold four removable drive trays. All current Cinedecks utilize these removable drive trays, sometimes called sleds or carriers. Each tray can hold two SATA SSD drives. See "3.10 Inserting & ejecting drives" on page 69 and "3.3.1 SSDs" on page 42 . The trays are also available separately.
37- POWER BUTTON	3.6 MX front panel - (p.52)	In the default configuration, the power button requires a momentary push for turning the RX3G on and off and glows blue when the system is running. The systems can also manually be placed into Windows sleep mode. In this state, the power button will blink slowly. Pressing the power button will wake the system.

3.6.1 MX control panel

MX is a recording and playback appliance which provides the familiarity of a traditional tape machine by including a full tactile jog-shuttle control panel and marries that with all of the unique Cinedeck capabilities. The control panel three access methods: direct or single button commands such as play, and shuttle, assignment functions such as first selecting Ch1 and then pressing stop to stop a recording and shift functions (labeled in blue) like "shift + loop" to activate "ping pong" playback.

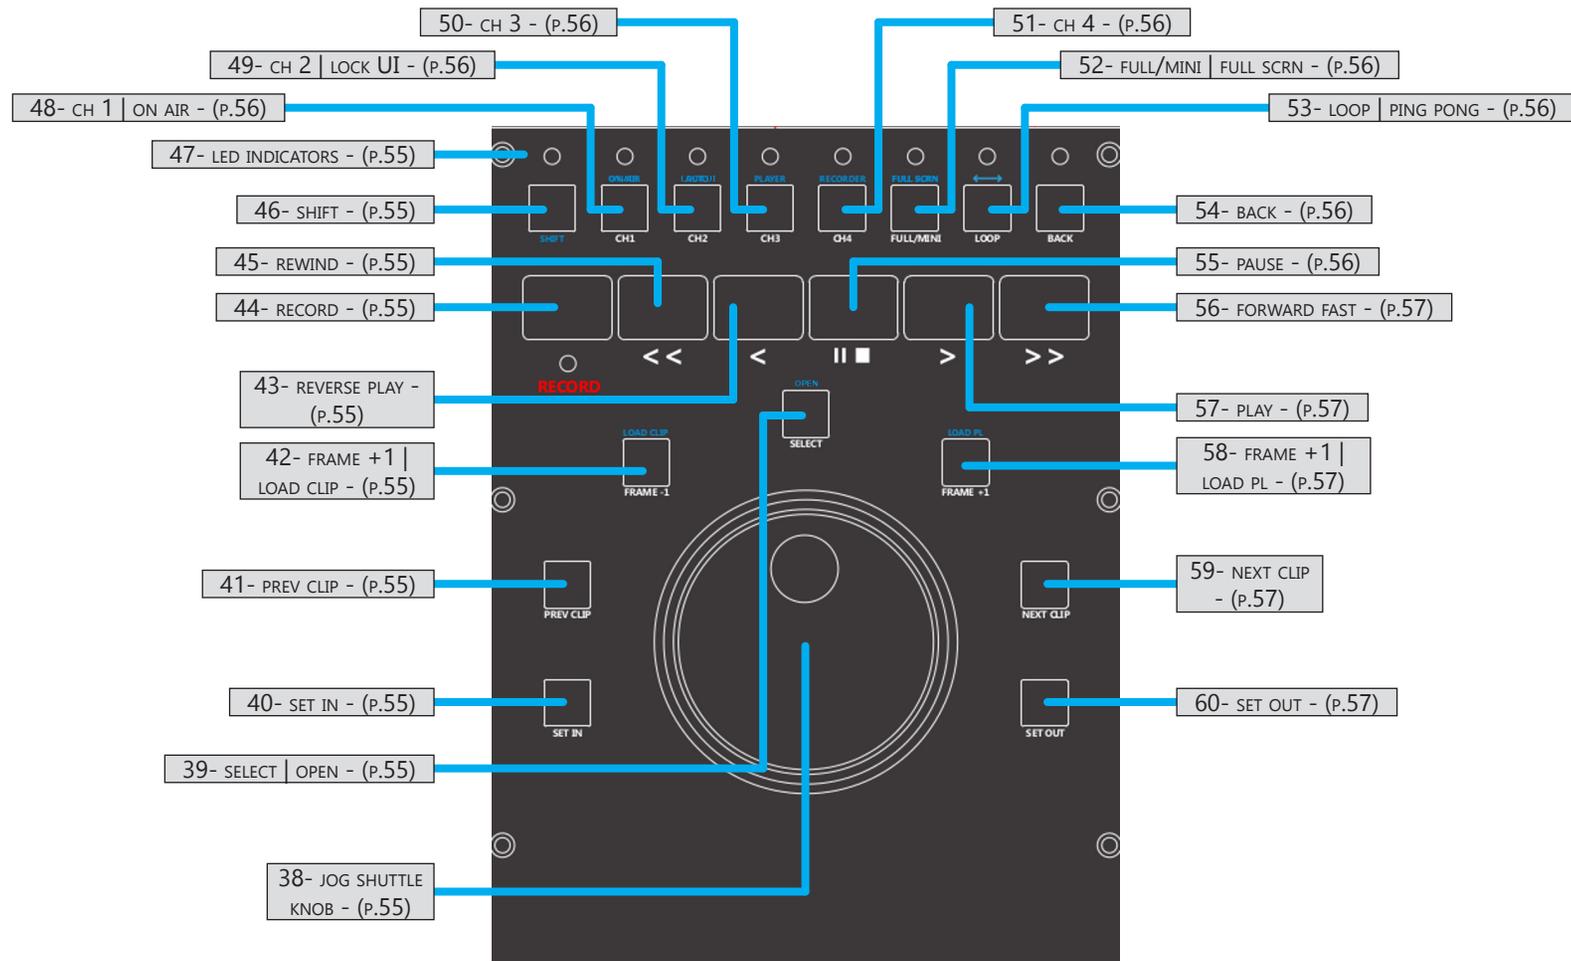

MX front panel / MX control panel cont...

Name	Location	Description
38- JOG SHUTTLE KNOB	"3.6.1 MX control panel" on page 54	The MX jog /shuttle knob has two rotating parts, an inner disc with finger dent which can be a continuously rotated and an outer ring which moves about ninety degrees in each direction from the middle parked position. View video frames slowly, frame by frame, by rotating the inner jog disc clockwise and counter-clockwise. Clockwise rotations move forward in time. Shuttle forward and reverse, to 20x speed, by rotating the outer ring clockwise and counter-clockwise. Rotating in a clockwise direction moves forward in time.
39- SELECT OPEN	"3.6.1 MX control panel" on page 54	A dual function button. When shift is pressed first, opens selected clip or playlist.
40- SET IN	"3.6.1 MX control panel" on page 54	When playing a clip or playlist and when working in the clip editor, in-points can be directly set using "set-In".
41- PREV CLIP	"3.6.1 MX control panel" on page 54	When viewing a playlist or multiple clips are loaded for playback, pressing "prev clip" moves the playhead to the previous clip.
42- FRAME +1 LOAD CLIP	"3.6.1 MX control panel" on page 54	A dual function button. In play mode, "frame + 1" moves playback of the current file forward one frame at a time. If shift is pressed first, clip manager is opened.
43- REVERSE PLAY	"3.6.1 MX control panel" on page 54	Plays the current file in reverse at 1x speed.
44- RECORD	"3.6.1 MX control panel" on page 54	Starts recording on the assigned channel. It is required to press a channel number on the top row and then press record to trigger recording on that channel.
45- REWIND	"3.6.1 MX control panel" on page 54	Rewinds at 20x
46- SHIFT	"3.6.1 MX control panel" on page 54	The "shift" button must be pressed first to access any of the blue shift functions.
47- LED INDICATORS	"3.6.1 MX control panel" on page 54	There are LED lamps positioned above the buttons to indicate which are active.

Installation

MX front panel

MX control panel

MX front panel / MX control panel cont...

Name	Location	Description
48- CH 1 ON AIR	"3.6.1 MX control panel" on page 54	A dual function button. In normal mode, pressing "ch 1" assigns that channel to the control panel. Once assigned, recording can be triggered and all transport controls are active for this channel. If "shift" is pressed before pressing "ch 1", "on-air" mode can be toggled on and off. When "on air" is active, no changes to channel settings are possible except headphone monitoring selections. Any other screen or control panel actions will trigger an "on air" warning message.
49- CH 2 LOCK UI	"3.6.1 MX control panel" on page 54	A dual function button. In normal mode, pressing "ch 2" assigns that channel to the control panel. Once assigned, recording can be triggered and all transport controls are active for this channel. If "shift" is pressed before pressing "ch 2", the touchscreen interface can be locked or unlocked. If locked, touching the screen will trigger an on screen "locked" warning. Lock mode is primarily for use with the MX control panel which allows switching channels while in lock mode.
50- CH 3	"3.6.1 MX control panel" on page 54	Pressing "ch 3" assigns that channel to the control panel. Once assigned, recording can be triggered and all transport controls are active for this channel.
51- CH 4	"3.6.1 MX control panel" on page 54	Pressing "ch 4" assigns that channel to the control panel. Once assigned, recording can be triggered and all transport controls are active for this channel.
52- FULL/MINI FULL SCRN	"3.6.1 MX control panel" on page 54	A dual function button. Pressing this button or pressing shift and then pressing this button, toggles the user interface between multi channel view and single channel view.
53- LOOP PING PONG	"3.6.1 MX control panel" on page 54	A dual function button. Pressing "loop" toggles loop playback mode on and off. Loop playback plays a file, files or playlist continuously in the selected play direction. Pressing shift and then "loop", toggles ping pong playback on and off. Ping pong playback plays the loaded file, files or playlist continuously from start to end to start.
54- BACK	"3.6.1 MX control panel" on page 54	Goes back to the previous screen
55- PAUSE	"3.6.1 MX control panel" on page 54	Pause stops playback but keeps the file loaded.

Installation

MX front panel

MX control panel

MX front panel / MX control panel cont...

Name	Location	Description
56- FORWARD FAST	"3.6.1 MX control panel" on page 54	Fast forwards the loaded file at 20x.
57- PLAY	"3.6.1 MX control panel" on page 54	Plays the current file forward at 1x speed.
58- FRAME +1 LOAD PL	"3.6.1 MX control panel" on page 54	A dual function button. In play mode, "frame + 1" moves playback of the current file forward one frame at a time. If "shift" is press first, playlist manager is opened.
59- NEXT CLIP	"3.6.1 MX control panel" on page 54	When viewing a playlist or multiple clips are loaded for playback, pressing "next clip" moves the playhead to the next clip.
60- SET OUT	"3.6.1 MX control panel" on page 54	When playing a clip or playlist and when working in the clip editor, out-points can be directly set using "set-out".

Installation

MX front panel

MX control panel

3.6.2 -

This Page intentionally left blank.

3.7 MX Back panel

61- VIDEO IN 3&4 - (p.60)

62- VIDEO OUT 3&4 - (p.60)

63- SUPER OUT 3&4 - (p.60)

64- AUX OUT 3/4 - (p.60)

65- REFERENCE IN 3 & 4 - (p.60)

66- VIDEO I/O 1 & 2 - (p.60)

67- RS-422 PORTS - (p.60)

68- MONITOR OUT - (p.60)

69- REDUNDANT POWER - (p.60)

70- POWER SUPPLY ALARM IGNORE - (p.60)

71- MASTER TIMECODE IN & OUT - (p.61)

72- USB2 PORTS - (p.61)

73- Gb ETHERNET - (p.61)

74- USB3 PORTS - (p.61)

75- AES IN & OUT 1-16 - (p.61)

76- ANALOG LINE IN - (p.61)

77- OPTIONAL NETWORK - (p.61)

78- AES IN & OUT 17-32 - (p.61)

79- LTC 1 & 2 IN/LOOP - (p.61)

80- LTC 3 & 4 IN/LOOP - (p.62)

81- DVI/HDMI FOR GUI - (p.62)

82- eSATA PORTS - (p.62)



Installation

MX Back panel

MX Back panel / - cont...

Name	Location	Description
61- VIDEO IN 3&4	3.7 MX Back panel - (p.59)	3G video inputs. Each video input can accept up to 16 channels of SDI embedded audio. Can be paired and function as dual-link input. All 4 inputs can be combined as 4K/UHD input.
62- VIDEO OUT 3&4	3.7 MX Back panel - (p.59)	3G video outputs. Can be paired and function as dual-link output. All 4 outputs can be combined as 4K/UHD output.
63- SUPER OUT 3&4	3.7 MX Back panel - (p.59)	HD/SD video outputs. Can carry video super with machine status, etc.
64- AUX OUT 3/4	3.7 MX Back panel - (p.59)	AUX video out is a secondary output of either channel 1 or channel 2. The signal source selection can be defined on the "prefs" page of some systems.
65- REFERENCE IN 3 & 4	3.7 MX Back panel - (p.59)	For external reference, Cinedecks will lock to either standard color burst/black burst or Tri-level sync. In "Auto" mode, if no external reference is available, the deck will default to internal sync or video input. In dual-link, when referencing to incoming video, reference can be selected from the A or B input.
66- VIDEO I/O 1 & 2	3.7 MX Back panel - (p.59)	Same layout as Video 3 & 4, 38-42.
67- RS-422 PORTS	3.7 MX Back panel - (p.59)	One port per HD/SD channel. Each port can be used for remote control between a tape deck or other professional device and a Cinedeck channel. The ports are bi-directional allowing "master mode" for the Cinedeck to control attached devices or "slave mode" allowing external devices to control the Cinedeck.
68- MONITOR OUT	3.7 MX Back panel - (p.59)	3-pin XLR analog audio monitor output. One output per channel.
69- REDUNDANT POWER	3.7 MX Back panel - (p.59)	Dual, multi-voltage AC to DC power supplies. Either power supply can be used to operate the deck as they are auto switching. It is recommended to always have power supplied to both inputs from separate power sources.
70- POWER SUPPLY ALARM IGNORE	3.7 MX Back panel - (p.59)	If the deck is powered up with just one power supply connected or if a power supply fails, a high pitch alarm will sound. Pressing the button will quiet the alarm.


MX Back panel / - cont...

Name	Location	Description
71- MASTER TIMECODE IN & OUT	3.7 MX Back panel - (p.59)	<p>The master timecode input provides four functions:</p> <ul style="list-style-type: none"> • Single timecode source - When selected on the master encode page of the user interface, timecode fed to the master timecode input is directed to all 4 channels. • Jam Sync - Similar to a camera, a timecode source can be momentarily connected to this LTC input and MX will sync the internal generator to that timecode. • Timecode Out - MX can generate and send timecode to other connected devices such as cameras, eliminating the need to have a separate timecode generator, for example in a fly-pack type of configuration. • IRIG-B Timecode support - Allows MX to receive a IRIG-B timecode source from an external IRIG-B timecode generator (not included) and use that timecode data internally as a replacement for standard SMPTE timecode.
72- USB2 PORTS	3.7 MX Back panel - (p.59)	Standard USB2 ports. It is recommended to use a USB2 port when restoring a system from the USB system key.
73- GB ETHERNET	3.7 MX Back panel - (p.59)	Two standard Gb Ethernet ports. Ports can be teamed in networks which support teamed connections.
74- USB3 PORTS	3.7 MX Back panel - (p.59)	Standard USB3 data ports. It is recommended to use USB2 ports when restoring a system from the USB restore key.
75- AES IN & OUT 1-16	3.7 MX Back panel - (p.59)	8 AES channels per channel pair. Each BNC connection carries two AES channels.
76- ANALOG LINE IN	3.7 MX Back panel - (p.59)	An unbalanced analog line level audio input which can be used for recording stereo scratch audio.
77- OPTIONAL NETWORK	3.7 MX Back panel - (p.59)	PCIe slot for installation of a 10Gb Ethernet card, 8 or 16Gb Fiber Channel card or direct attached storage adapter.
78- AES IN & OUT 17-32	3.7 MX Back panel - (p.59)	An additional 16 AES channels can optionally be addressed via D-sub connectors.
79- LTC 1 & 2 IN/ LOOP	3.7 MX Back panel - (p.59)	LTC (linear time code) input to channels 1 and 2 for use with a house supplied timecode signal. Signals which are input are passed to the out connector.

MX Back panel / - cont...

Name	Location	Description
80- LTC 3 & 4 IN/ LOOP	3.7 MX Back panel - (p.59)	LTC (linear time code) input to channels 3 and 4 for use with a house supplied timecode signal. Signals which are input are passed to the out connector.
81- DVI/HDMI FOR GUI	3.7 MX Back panel - (p.59)	The MX user interface can simultaneously be displayed on most DVI or HDMI monitors. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.
82- eSATA PORTS	3.7 MX Back panel - (p.59)	MX has a total of four eSATA ports, three on the rear panel, one on the front panel.

3.8 ZX Front panel

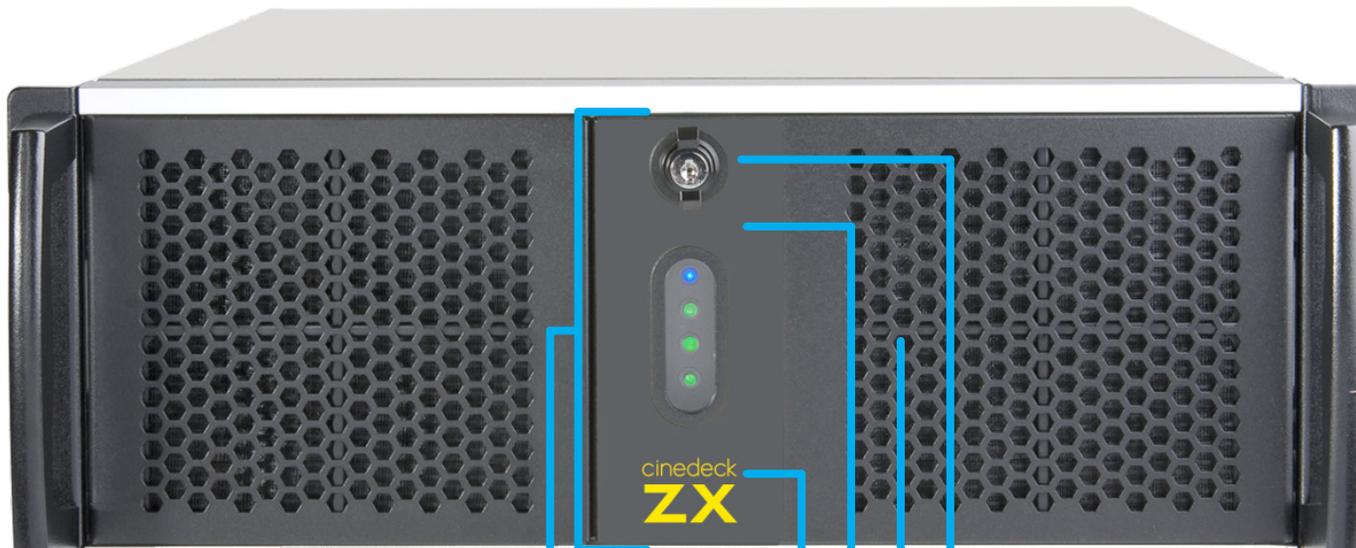

83- POWER AND DRIVE ACCESS DOOR
- (p.64)

84- DOOR LOCK - (p.64)

85- DRIVE TRAYS - (p.64)
BEHIND DOOR

86- POWER BUTTON - (p.64)
BEHIND DOOR

87- USB PORT - (p.64)
BEHIND DOOR


ZX Front panel / - cont...

Name	Location	Description
83- POWER AND DRIVE ACCESS DOOR	3.8 ZX Front panel - (p.63)	The right hand door covers the power rocker switch and provides access to the drive trays and a USB port.
84- DOOR LOCK	3.8 ZX Front panel - (p.63)	Key lockable latch. Turn to the right to open.
85- DRIVE TRAYS	3.8 ZX Front panel - (p.63)	ZX can hold four removable drive trays. All current Cinedecks utilize these removable drive trays, sometimes called sleds or carriers. Each tray can hold two SATA SSD drives. The trays are also available separately. See "3.10 Inserting & ejecting drives" on page 69 and "3.3.1 SSDs" on page 42 The trays are also available separately.
86- POWER BUTTON	3.8 ZX Front panel - (p.63)	In the default configuration, the spring loaded power rocker switch requires a momentary push down for turning ZX on and off. The lamps below the power button glow when the system is running
87- USB PORT	3.8 ZX Front panel - (p.63)	Standard USB2 port.

3.9 ZX Back panel

ZX has three base models and is a modular system so the back panel on your ZX may differ from the ZX40 shown however much of the connectivity is the same. If there are questions, please contact Cinedeck directly.

See ["Contacting Cinedeck" on page 2](#)

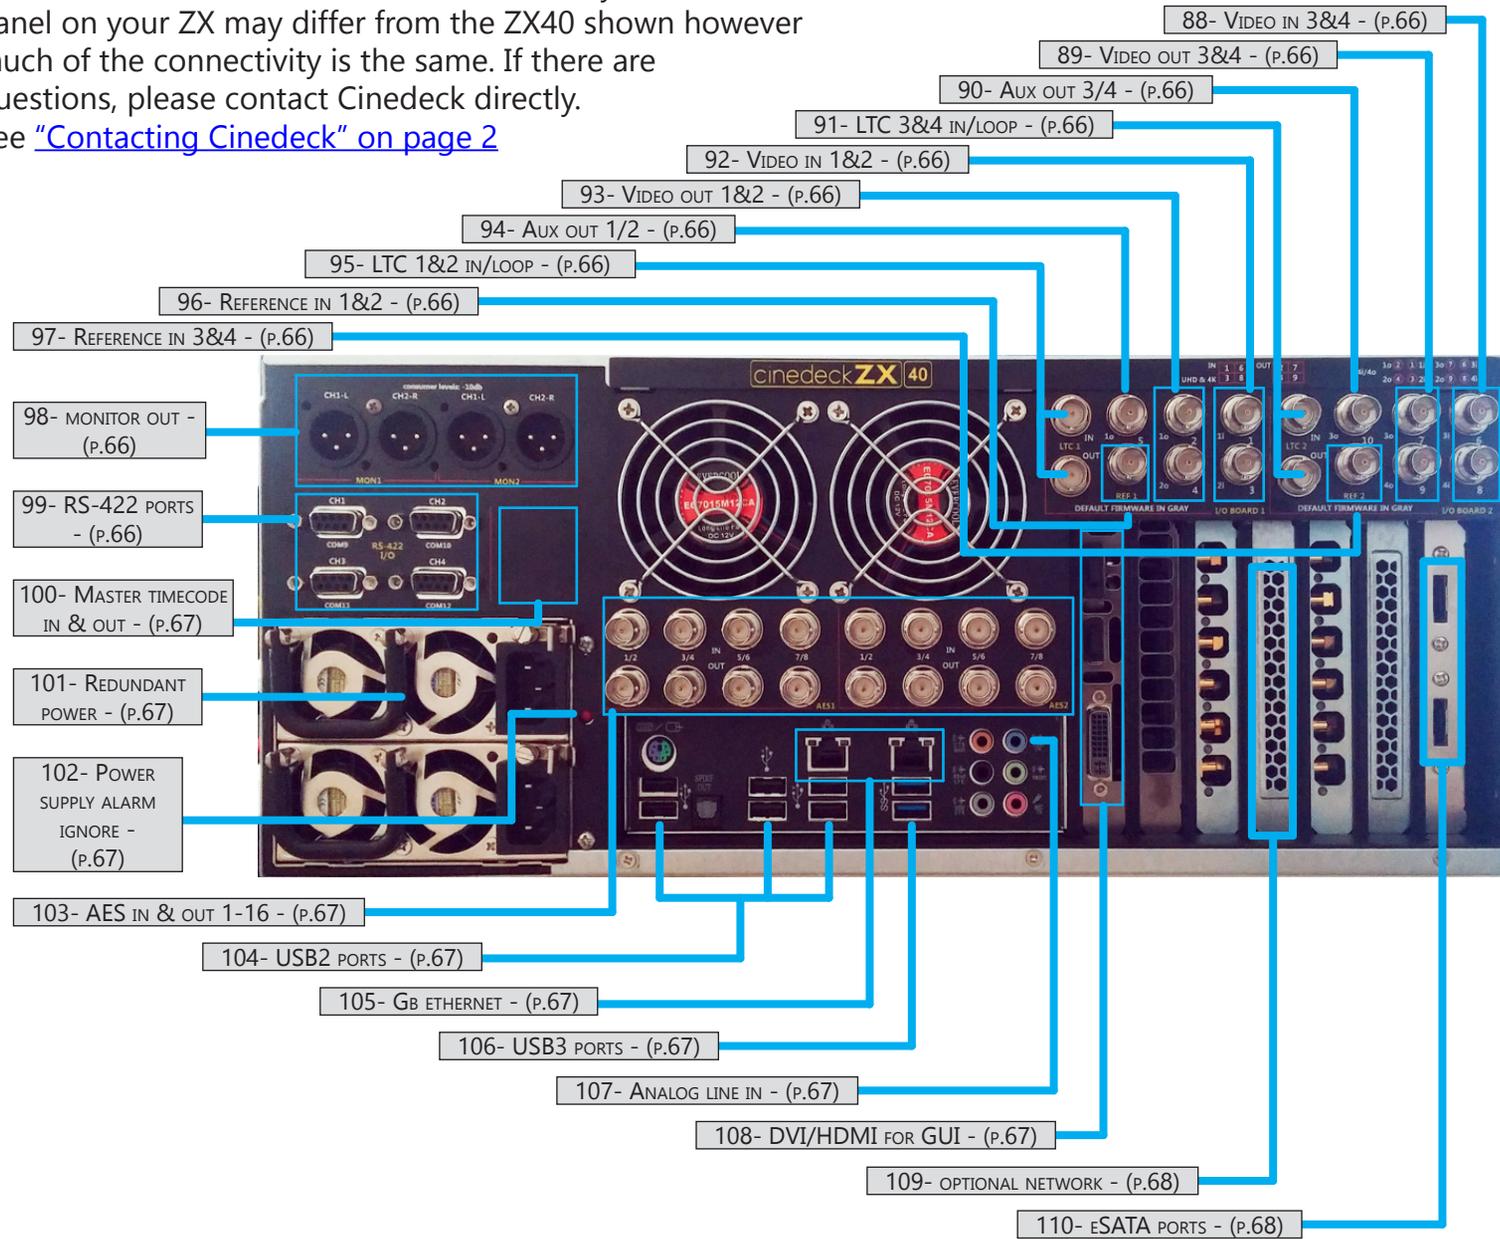

ZX Back panel / - cont...

Name	Location	Description
88- VIDEO IN 3&4	3.9 ZX Back panel - (p.65)	3G video inputs. Each video input can accept up to 16 channels of SDI embedded audio. Can be paired and function as dual-link input. All 4 inputs can be combined as 4K/UHD input.
89- VIDEO OUT 3&4	3.9 ZX Back panel - (p.65)	3G video outputs. Can be paired and function as dual-link output. All 4 outputs can be combined as 4K/UHD output.
90- AUX OUT 3/4	3.9 ZX Back panel - (p.65)	AUX video out is a secondary output of either channel 1 or channel 2. The signal source selection can be defined on the "prefs" page of some systems.
91- LTC 3&4 IN/ LOOP	3.9 ZX Back panel - (p.65)	LTC (linear time code) input to channels 3 and 4 for use with a house supplied timecode signal. Signals which are input are passed to the out connector.
92- VIDEO IN 1&2	3.9 ZX Back panel - (p.65)	3G video inputs. Each video input can accept up to 16 channels of SDI embedded audio. Can be paired and function as dual-link input. All 4 inputs can be combined as 4K/UHD input.
93- VIDEO OUT 1&2	3.9 ZX Back panel - (p.65)	3G video outputs. Can be paired and function as dual-link output. All 4 outputs can be combined as 4K/UHD output.
94- AUX OUT 1/2	3.9 ZX Back panel - (p.65)	AUX video out is a secondary output of either channel 1 or channel 2. The signal source selection can be defined on the "prefs" page of some systems.
95- LTC 1&2 IN/ LOOP	3.9 ZX Back panel - (p.65)	LTC (linear time code) input to channels 1 and 2 for use with a house supplied timecode signal. Signals which are input are passed to the out connector.
96- REFERENCE IN 1&2	3.9 ZX Back panel - (p.65)	For external reference, Cinedecks will lock to either standard color burst/black burst or Tri-level sync. In "Auto" mode, if no external reference is available, the deck will default to internal sync or video input. In dual-link, when referencing to incoming video, reference can be selected from the A or B input.
97- REFERENCE IN 3&4	3.9 ZX Back panel - (p.65)	For external reference, Cinedecks will lock to either standard color burst/black burst or Tri-level sync. In "Auto" mode, if no external reference is available, the deck will default to internal sync or video input. In dual-link, when referencing to incoming video, reference can be selected from the A or B input.
98- MONITOR OUT	3.9 ZX Back panel - (p.65)	3-pin XLR analog audio monitor output. One output per channel.
99- RS-422 PORTS	3.9 ZX Back panel - (p.65)	One port per HD/SD channel. Each port can be used for remote control between a tape deck or other professional device and a Cinedeck channel. The ports are bi-directional allowing "master mode" for the Cinedeck to control attached devices or "slave mode" allowing external devices to control the Cinedeck.

ZX Back panel / - cont...

Name	Location	Description
100- MASTER TIMECODE IN & OUT	3.9 ZX Back panel - (p.65)	<p>The master timecode input provides four functions:</p> <ul style="list-style-type: none"> • Single timecode source - When selected on the master encode page of the user interface, timecode fed to the master timecode input is directed to all 4 channels. • Jam Sync - Similar to a camera, a timecode source can be momentarily connected to this LTC input and MX will sync the internal generator to that timecode. • Timecode Out - MX can generate and send timecode to other connected devices such as cameras, eliminating the need to have a separate timecode generator, for example in a fly-pack type of configuration. • IRIG-B Timecode support - Allows MX to receive a IRIG-B timecode source from an external IRIG-B timecode generator (not included) and use that timecode data internally as a replacement for standard SMPTE timecode.
101- REDUNDANT POWER	3.9 ZX Back panel - (p.65)	Dual, multi-voltage AC to DC power supplies. Either power supply can be used to operate the deck as they are auto switching. It is recommended to always have power supplied to both inputs from separate power sources.
102- POWER SUPPLY ALARM IGNORE	3.9 ZX Back panel - (p.65)	If the deck is powered up with just one power supply connected or if a power supply fails, a high pitch alarm will sound. Pressing the button will quiet the alarm.
103- AES IN & OUT 1-16	3.9 ZX Back panel - (p.65)	8 AES channels per channel pair. Each BNC connection carries two AES channels.
104- USB2 PORTS	3.9 ZX Back panel - (p.65)	Standard USB 2 ports
105- GB ETHERNET	3.9 ZX Back panel - (p.65)	Two standard Gb Ethernet ports. Ports can be teamed in networks which support teamed connections.
106- USB3 PORTS	3.9 ZX Back panel - (p.65)	Standard USB3 ports
107- ANALOG LINE IN	3.9 ZX Back panel - (p.65)	An unbalanced analog line level audio input which can be used for recording stereo scratch audio.
108- DVI/HDMI FOR GUI	3.9 ZX Back panel - (p.65)	The ZX user interface can be displayed on most DVI or HDMI monitors. You may need to access the Windows "Screen Resolution" settings to properly configure your external display.

ZX Back panel / - cont...

Name	Location	Description
109- OPTIONAL NETWORK	3.9 ZX Back panel - (p.65)	PCIe slot for installation of a 10Gb Ethernet card, 8 or 16Gb Fiber Channel card or direct attached storage adapter.
110- eSATA PORTS	3.9 ZX Back panel - (p.65)	ZX can have a total of six, rear mounted eSATA ports.

3.10 Inserting & ejecting drives

Before removing media drives from a Cinedeck, they should first be ejected from the operating system. This can be done from the user interface via "clip manager" or from the Windows desktop via HotSwap.

To eject drives when the Cinedeck application is running:

Press "play" on the main multi or single screen view of the user interface to access "clip manager". In "clip



manager", select the drive to be ejected and select  from the "manage disk" menu.

(For additional details, see ["7.3 Clip manager" on page 211](#))

To eject drives from the Windows desktop:

Click the HotSwap! icon  in the System Tray and select the drive you want to eject. After a few moments, a message will appear indicating "Safe to Hotswap" which means the drive can be removed.


(For additional details, see ["5.5.3 HotSwap!" on page 84](#))

Remember that Cinedeck SSDs are often installed in pairs, two drives in a sled, so be sure to check and if necessary eject both drives before removing the drive carrier.

The lock assembly consists of a twist or key lock and a drive ejector button. A twist lock is shown right and a key lock is shown below. Your system may have either.

To remove a drive:

- If your system has twist locks, press the knob in gently, turn to the left until the knob clicks into the vertical position and release the knob.

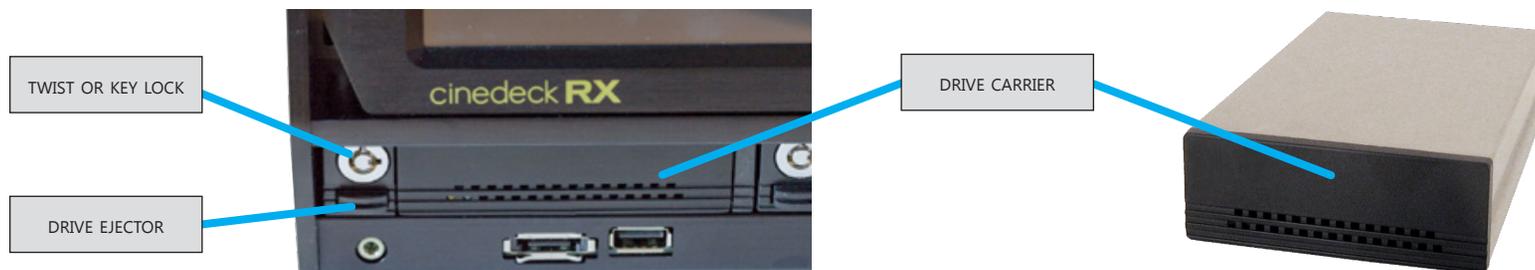

Inserting & ejecting drives / - cont...

- If your system has key locks, insert the key with the small pin locator pointing to the right, press the key in and gently, turn to the left until the key is vertical.
- Gently press the drive ejector until a click is heard.
- Release the drive ejector, allowing it to extend out fully.
- Press the drive ejector firmly but slowly in to eject the drive from the deck.

To install a drive:

- If your system has twist locks, press the knob in gently and assure it is fully turned to the left and vertical.
- If your system has key locks, assure the locator slots are vertical or insert the key with the locator pin pointing to the right, press the key in and gently, turn to the left until the key is vertical.
- Push the drive tray into the slot firmly, until it is flush with the front panel of the deck.
- If your system has twist locks, press the knob in gently, turn to the right until the knob clicks into the horizontal position and release the knob.
- If your system has key locks, insert the key with the small pin locator pointing up, press the key in and gently, turn to the right until the key is horizontal.



4.0 Accessories

4.1 Drive docks

For use in "sneaker-net" and other mobile applications, all Cinedecks make use of hot-swappable drive carriers. Each carrier can hold two SSD drives.

The #15001 carriers are available separately and there are several receiving docs which connect to computer workstations via SATA;

- 15000 Internal dock - Designed to fit a standard 3.5" drive bay in a typical PC workstation has two SATA connections and a power connection.
- 15002 Drive carrier and internal dock set - Includes the above dock plus a drive carrier
- 15003 Rugged dock kit - Includes a drive carrier, power supply and two eSATA cables

The docks are all available with twist lock (shown) or key lock. Contact Cinedeck for additional information.




15001 DRIVE CARRIER

15002 DRIVE DOCK & CARRIER



15000 DRIVE DOCK

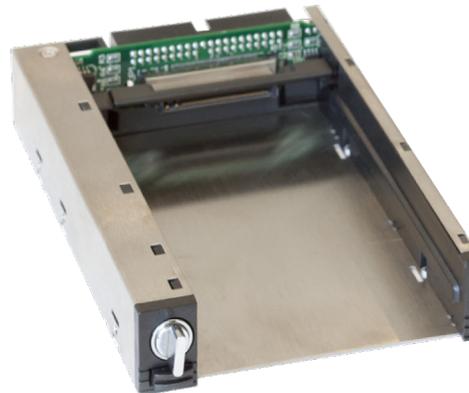

15001 RUGGED DOCK KIT



4.2 Rack mount kits

RX3G, MX and ZX can all be mounted in standard 19" equipment racks. For RX, there are two rack kits available, a single machine kit with blank panel (shown) and a dual, side by side kit.



The MX and ZX rack kits come with rack ears and side rack rails.



4.3 Control panels

Cinedecks can be controlled by an array of remote panels connected by USB and RS-422. Additionally, ZX can be optionally equipped with a surface mount version of the MX tactile control panel.

Third party controllers include;

X-Keys Jog-Shuttle XK-12 controller by PI Engineering (www.xkeys.com)

Shuttle Xpress and ShuttlePro V2 by Contour Designs (www.contourdesigns.com)

Logitech R800 remote (www.logitech.com)

RS-422 Device controllers include DNF ST100 and ST400 and those by JLC Cooper, Lance Design, etc.



X-KEYS XK-12



LOGITECH R800



CONTOUR DESIGNS
SHUTTLE XPRESS



DNF ST300



5.0 User Interface

5.1 UI Introduction

The Cinedeck user interface is uniquely designed to provide ease of access and operation for professional and novice alike. After connecting and powering on your Cinedeck, there are generally just three things you must do before you can make a recording;

- Set the input to match your source - this is generally done using "auto detect" on the input setup page
- Select a master and optionally proxy codec with wrapper and
- Designate a file destination drive - both of which are accomplished on the master and proxy setup pages.

Of course, Cinedeck systems go far beyond simply recording.

Those operators who have traditional video workflow experience combined with an understanding of the IT aspects of modern video technology such as codecs, wrappers and network access, will have no problem navigating and setting up a Cinedeck however, it is useful to have a basic understanding of the system...

The user interface is designed to be used by touchscreen or with a mouse. A USB keyboard is also very helpful for data entry and system operation. Operation is the same whether you are using the built-in display or an external display with a mouse.

Most important is that Cinedecks are project-centric meaning that for setup, everything you do is related to a project which is associated to one or more channels. For example, if all four channels of a MX are associated to the same project and you change the channel 3 codec from AVC-Intra to ProRes, all four channels are switched to ProRes. Conversely, if all four channels need different codecs, you assign each channel to its own project.

The other important aspect is that while there is a default naming convention, Cinedecks impose virtually no limitations on folder and file naming. To streamline setup, names which are editable such as "project" and "input" are represented as "wildcards" (variables) which can be easily integrated into your folder and file naming structure along with various run-time date and time elements.

A good understanding of the Project window, which is accessed via the main "overview" screen, is key to acquiring files which fit your desired workflow.

5.2 UI explained

Cinedecks utilize a GUI (graphical user interface) which consists of several basic areas;

- The main / multi view screen which, depending on the Cinedeck model and mode, can be one, two or 4 quadrants.
- A single channel view.
- Multiple setup pages, primarily accessed by tabs across the top of the setup screen.
- A clip manager screen.
- The playlist manager and associated playlist editor.

Some color generalizations:

- **Bright orange** items and **bright orange bordered buttons** are active.
- Bright **aqua-green** items and bright aqua-green bordered **buttons** are inactive but available.
- **Yellow** items are informational.
- Dim items and buttons are not available or not relevant.

MULTI CHANNEL VIEW



SINGLE CHANNEL VIEW



SETUP



CLIP MANAGER



PLAYLIST MANAGER



PLAYLIST EDITOR



User Interface

UI explained

UI explained / - cont...

Beyond touching or clicking, the Cinedeck user interface also makes use of long presses (you might call these shift functions) and screen hot spots. Additionally, there are a number of keyboard shortcuts and bar-code readers can be utilized for data entry.

The most notable long press action is to stop a recording. When a system is recording and setup with the default "prefs" configuration, simply clicking stop will have no effect. A long press of about 2 seconds is required to stop the recording. This eliminates accidental stops, particularly with touch screen systems. There are other long press functions which will be noted throughout the manual.

Screen hot spots are areas of a screen which, when touched, will direct the operator directly to the related setup area or which display additional information. Both will be detailed more fully in this manual but as an example, touching the file information at the bottom of this screen, changes the display from showing the selected master and proxy encode details and file names to the folder path and duration. Touching that area again will toggle to show the current project name, scene and sub-scene names.

If your facility uses bar-codes and, for example, are transferring tapes to files, an appropriate HID compatible bar-code reader can be used to enter data into selected fields such as file name, directly from the bar-code information.



5.3 Keyboard shortcuts

The Cinedeck user interface can be driven to a great extent using shortcut key presses on an attached USB keyboard.

Press control plus K “Control+K” to open this on-screen listing of available shortcuts.

As can be seen from this screen, the available shortcuts are different based on the operating mode and visible screen but some general shortcuts such as “Enter” to save and return to the previous screen and “Escape” to cancel changes and return to the previous screen remain available across most screens.

UI general:

- Ctrl+K = show/hide keyboard shortcuts
- Alt+K = toggle use onscreen keyboard
- Ctrl+Enter = show/hide mouse
- Alt+Enter = UI as window/fixed
- 1-4 = select channel by number
- Tab = select next channel
- Ctrl+Tab = select prev channel
- F1 = switch all channels to playback
- F2 = switch gang mode normal all/off all
- F3 = switch all channels to preview
- F4 = switch gang mode normal all/staggered all/off all
- Enter = save and back
- Esc = cancel/back without saving
- Left/Right = go left/right on tabs view

Record view:

- Ctrl+S = stop record
- Alt+P = open project manager
- Alt+N = open path & templates
- Alt+S = open scenes list
- Alt+U = open sub-scenes list
- Ctrl+W = define user wildcards
- Ctrl+E = open EDL editor
- N = next scene
- P = previous scene
- Ctrl+N = next sub-scene
- Ctrl+P = previous sub-scene
- Ctrl+R = next roll
- Ctrl+Shift+R = previous roll
- Ctrl+D = delete last recorded
- S = setup view
- Alt+G = global wildcards
- F8 = start record for all channels
- Ctrl+F8 = stop record for all channels
- F9 = start record for 1, 2 channels
- Ctrl+F9 = stop record for 1, 2 channels
- F11 = start record for 1 channels
- Ctrl+F11 = stop record for 1 channels
- F12 = start record for 2 channels
- Ctrl+F12 = stop record for 2 channels
- Alt+1-3 = select user list by number

Playback view:

- Space = play/pause
- Left / - / , = step backward
- Held Down Left = play reverse
- Right / = / . = step forward
- Held Down Right = play
- Shift+< = go to 10 frames backward
- Shift+> = go to 10 frames forward
- Up = go to previous clip (for playlists only)
- Down = go to next clip (for playlists only)
- ; = go to start
- ' = go to end
- I = set in point
- Alt+I = clear in point
- Ctrl+I = go in point
- O = set out point
- Alt+O / [= clear out point
- Ctrl+O /] = go out point
- L = shuttle forward (multiple press to increase speed)
- K = pause
- T = enable/disable touch transport
- R = remote
- J = shuttle reverse (multiple press to increase speed)
- Ctrl+Alt+P = show playlist settings (for playlists only)

Project settings:

- Ctrl+N = new project
- Ctrl+R = rename project
- Ctrl+M = edit project metadata
- Ctrl+I = import project
- Ctrl+E = export project
- Alt+W = project wildcards
- Del = delete project

Scenes list:

- Arrows and mouse wheel scroll = navigate scenes
- Del = delete scene
- Ctrl+N = new scene
- Ctrl+M = edit scene metadata
- Ctrl+I = import scenes list
- Ctrl+E = export scenes list

Clip/playlist manager:

- Ctrl+A = select all
- Ctrl+D = select none
- F5 = scan for media

Playlist edit:

- Left = move clip left
- Right = move clip right
- W = add asset before selected
- E = add asset after selected
- Y = switch to playlist preview

record
gang
RS422
SDI char
UI overlays & LUT
setup
stop
close

Keyboard shortcuts / - cont...

User Interface General Shortcuts	Available in:	Description
Control+K	most screens	Toggle the display of the keyboard shortcuts overview screen
Alt+K	"	Toggles between using the on-screen keyboard or direct field typing, for data entry areas such as creating file names
Control+Enter	"	Toggles showing or hiding the mouse cursor
Alt+Enter	"	Toggles the user interface window mode. Normally the Cinedeck interface runs full screen, pressing Alt+Enter puts the interface into a standard MS Windows re-sizable frame
Number keys 1, 2, 3 4,	"	Directly selects the active and visible channel by number. The numbers above the QWERTY keys or the numeric keypad can be used
Tab	"	Selects / displays the next channel
Control+Tab	"	Selects / displays the previous channel
F1	"	Switch all channels to playback mode
F2	"	Toggle gang mode 'normal' On/Off for all channels
F3	"	Switch all channels to preview - EtoE mode
F4	"	Toggle gang mode 'staggered' On/Off for all channels
Enter	"	Save any changes and return to the previous screen
Escape	"	Cancel any changes and return to the previous screen
Right and Left arrow	Setup screens	Switch to next or previous tab in setup screens

Keyboard shortcuts / - cont...

Project Settings Shortcuts	Available in:	Description
Control+N	Project manager	Create new project
Control+R	"	Rename current project
Control+M	"	Edit project metadata such as director and director of photography
Control+I	"	Import current project
Control+E	"	Export current project
Alt+W	"	Open 'user wildcards' management
Alt+G	"	Open 'global wildcards' management
Control+L	path & filename templates	Lock current selected project
Control+U	path & filename templates	Unlock current selected project
DEL	Project manager	Delete selected project

Scenes List Shortcuts	Available in:	Description
Arrow keys and mouse scroll wheel	Scene list manager	Navigate scenes list
Del	"	Delete selected scene
Control+N	"	Create new scene
Control+M	"	Edit scene metadata
Control+I	"	Import scenes list
Control+E	"	Export scenes list

Keyboard shortcuts / - cont...

Record / Preview Shortcuts	Available in:	Description
Control+S	Record View	Stops recording on all channels
Alt+P	"	Open project manager main page
Alt+N	"	Open path & templates screen for folder and file naming
Alt+S	"	Open scenes list manager
Alt+U		Open sub-scenes list manager
Alt+W		Open 'user wildcards' manager
Alt+G		Open 'global wildcards' management
Ctrl+E		Opens EDL Editor
N		Switch naming to next scene name
P		Switch naming to previous scene name
Ctrl+N		Switch naming to next sub-scene name
Ctrl+P		Switch naming to previous sub-scene name
Ctrl+R		Increment naming to next roll number
Ctrl+Shift+R		Increment naming to previous roll number
Ctrl+D		Delete last recorded clip on all channels
S		Go to Setup
F8		Start recording on all channels
Ctrl+F8		Stop recording on all channels
Alt+1, 2 or 3		Open list manager for user list 1, 2 or 3 respectively

Clip & Playlist Manager Shortcuts	Available in:	Description
Control+A	Clip & Playlist manager	Select all clips
Control+D	"	Select no clips
F5	"	Scan selected drive or folder for media

Keyboard shortcuts / - cont...

Playback Shortcuts	Available in:	Description
Space bar	Playback view	Toggle play and pause
Left arrow or "-" key	"	Step backwards one frame
Left arrow (long press)		Play 1x speed backwards
Right arrow or "=" key	"	Step forwards one frame
Right arrow (long press)		Play 1x speed forwards
Shift+ <		Step backwards 10 frames
Shift+ >		Step forwards 10 frames
Up arrow	Playback/Playlist	GoTo previous clip
Down arrow	Playback/Playlist	GoTo next clip
; (semi-colon)	"	GoTo start of clip
' (apostrophe)	"	GoTo end of clip
I	"	Set in-point
Alt+I		Clear in-point
Ctrl+I		Go to in-point
O	"	Set out-point
Alt+O		Clear out-point
Ctrl+O		Go to out-point
J		Play in reverse (Multiple presses increases speed)
K		Pause playback
L	"	Play forward (Multiple presses increases speed)
T	"	Enable / disable touch transport
Control+Alt+P	Playback/Playlist	Show playlist settings

Playlist Shortcuts	Available in:	Description
Left Arrow	Playlist Editor	Move selected clip left
Right Arrow	"	Move selected clip to right
W	"	Add clip asset before selected clip
E	"	Add clip asset after selected clip
Y	"	Switch to playlist preview screen

5.4 Powering on

For the location of the power button on your specific Cinedeck, please refer to the appropriate front panel description in chapter [“3.0 Installation” on page 37](#).

Current Cinedecks run a Windows 7 embedded operating system, installed on a separate SSD, set as drive c:\. After pressing the power button, the Cinedeck will go through several internal BIOS and hardware related checks and then boot into Windows. From the factory, most Cinedecks boot to the Windows desktop however RX3G may boot directly into the Cinedeck application. If your system has, for example, been setup to operate in your facilities domain, you may need a password in order to access the desktop or start the Cinedeck application. If a password is required, contact your engineering or IT staff responsible for your production systems. If no keyboard is available, see [“5.5.1 On-screen keyboard” on page 83](#)

All Cinedeck desktops look similar and from here, many of the standard Windows programs such as Windows Explorer are available.

If you need to setup network connections, it is best to do so before starting the Cinedeck application.



To start the Cinedeck from the desktop, locate and double click the Cinedeck short cut.

If this is your first experience with a Cinedeck, please review the next section first before starting the Cinedeck application.

5.5 Desktop details


5.5.1 On-screen keyboard

Your system may have additional options but all systems include several useful links on the desktop.

First, if you have a touch screen system and are stuck at the Windows login without a USB keyboard on hand,



Click the "Ease of Access" icon found at the lower left of the Windows log-in screen.

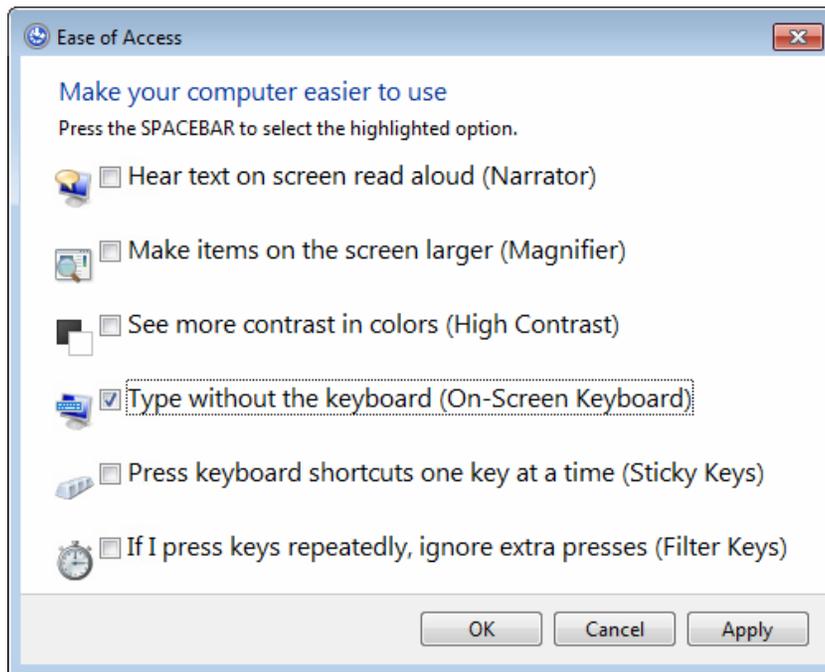

From the Ease of access menu, touch "Type without keyboard" and select "OK". The keyboard will open.

Touch to select the password field and then use the keyboard to fill in the data.

Once you are at the Windows desktop...



This shortcut starts the on-screen keyboard which is usable across the Windows environment. As noted above, for systems with touch screens, the keyboard can also be accessed from the Windows log-on screen to allow the entering of a password without a USB keyboard attached.

5.5.2 Touchscreen setup



The touchscreen shortcut opens the properties and adjustment application for calibrating the built-in user interface touch display available on RX3G and MX systems.

See ["9.2 Touchscreen calibration" on page 241](#)

5.5.3 HotSwap!



The system Tray located on the Windows Task Bar includes several items including access to the SATA drive hot-swap system.



SATA HotSwap allows easy disconnect and removal of SATA drives connected to the Cinedeck system from the Windows desktop.

(Drives can also be ejected from within the Cinedeck user interface. See ["450- manage disk" on page 214](#))

To remove a drive from the system, click the HotSwap! icon and select the drive you want to eject. After a few moments, a message will appear indicating "Safe to Hotswap" which means the drive can be removed.

When preparing to remove a SSD, keep in mind that your Cinedeck may have two drives installed in the tray you want to remove so be sure to eject both drives.

When connecting a new SATA drive the system will generally automatically detect it however occasionally, it may be necessary to force the system to rescan for new hardware to make the drive accessible.

To do this, right click the HotSwap icon and select "Scan for hardware changes".

Important! If you do not see the HotSwap! icon in your system tray, please contact Cinedeck support as this is an important background service which should be running on all systems.

5.6 Settings - exporting / importing

In many areas of the Cinedeck system such as project settings, scene names, LUT and so on, it is possible to save, export and/or import data. While the specifics of the data can change the procedure for saving, naming and importing remains the same.

Some settings are by default saved in a sub folder of the Cinedeck install folder; c:\cinedeck. For example, project settings are by default saved in c:\cinedeck\projects. That is the projects folder under the main Cinedeck folder. LUT files are also by default, looked for in the "LUT" folder under c:\cinedeck.

But all of the files you might need to work with can be saved to or retrieved from your preferred media and location such as one of your media drives, a network folder or simply a newly inserted USB memory stick.

Most often, you will have access to the various save functions via a menu located at the lower left of the screen.



As an example, these are the functions available from "manage projects". All options will not be available on every menu but they are all similar.

Whether you select "save as" or "export", the procedure is the same and is made in two steps however "save as" places the file in the default folder location while export provides full flexibility as to the destination used.

1. At the next dialog after you select "save as" or "export", you must enter a name in the "name" field. This can be any standard name acceptable to Windows but again, for word separation it is recommended to use "_" or "-" and not spaces.

Once you have entered a name with either the on-screen or USB keyboard and selected "save and close",

2. Select a destination drive and folder at the left and once the file destination drive and folder are determined, select save at the bottom right and you are done.

Importing a file such as a scenes list or opening a file such as a LUT is the same procedure in reverse.

- Select "import" or "open"
- Navigate to the source drive and folder and select the required file
- Select open or import

There are a few important things to note;

Settings - exporting / importing / - cont...

When importing lists such as scenes or sub-scenes, the import will overwrite any existing list items you currently have associated with that project.

When opening LUT files, it is recommended to first copy the required LUT files onto a drive which will always be available to the system. The easiest is to use the default location, c:\cinedeck\LUT. This is the LUT folder in the main c:\cinedeck install folder and is the location which will first open when you look for LUT files.

Cinedeck uses several specific file name extensions for Cinedeck specific files. Be aware that there is always the possibility that other applications on your system will also use the same file extension. This not an issue unless you accidentally tell Windows to always use some particular application for opening that file type. In that case, files may no longer automatically open in that other application. For example, if you were to tell Windows to always open .txt files with Excell, Notepad would no longer automatically be used.

The main file extensions used within the Cinedeck system are:

- *.cdl - Cinedeck EDL (edit decision list) - plain comma delineated ASCII text file
CMX 3600 EDLs can also be imported
- *.csv - can be imported as EDL
- *.csl - Cinedeck scenes and sub-scenes list (XML format)
- cinedeck.db - a sql databased used to track content
- *.dmp - Crash dump files
- prefs.ini - holds basic system and mode parameters (If deleted, this file will be rebuilt on restart)
- *.xml - XML formatted project files, channel files, etc
- *.txt - Log files are saved as txt files
- *.cube - Cinedecks currently only recognize .cube LUT files

5.7 Multi view screen description




cinedeckRX3G To start the Cinedeck from the desktop, locate and double click the Cinedeck short cut. This will open the main, multi view screen with the channels in standby.

In standard SD/HD mode, there is one quadrant for each channel so depending on your Cinedeck model, there will be two or four quadrants. Below is the dual channel view from a RX3G.

Surrounding each channel video preview, are multiple data areas for immediate access to the most important details and buttons for accessing the most important functions. Note the **yellow** border around the right channel which indicates it is the selected channel, the channel with the focus.



5.8 Multi view screen

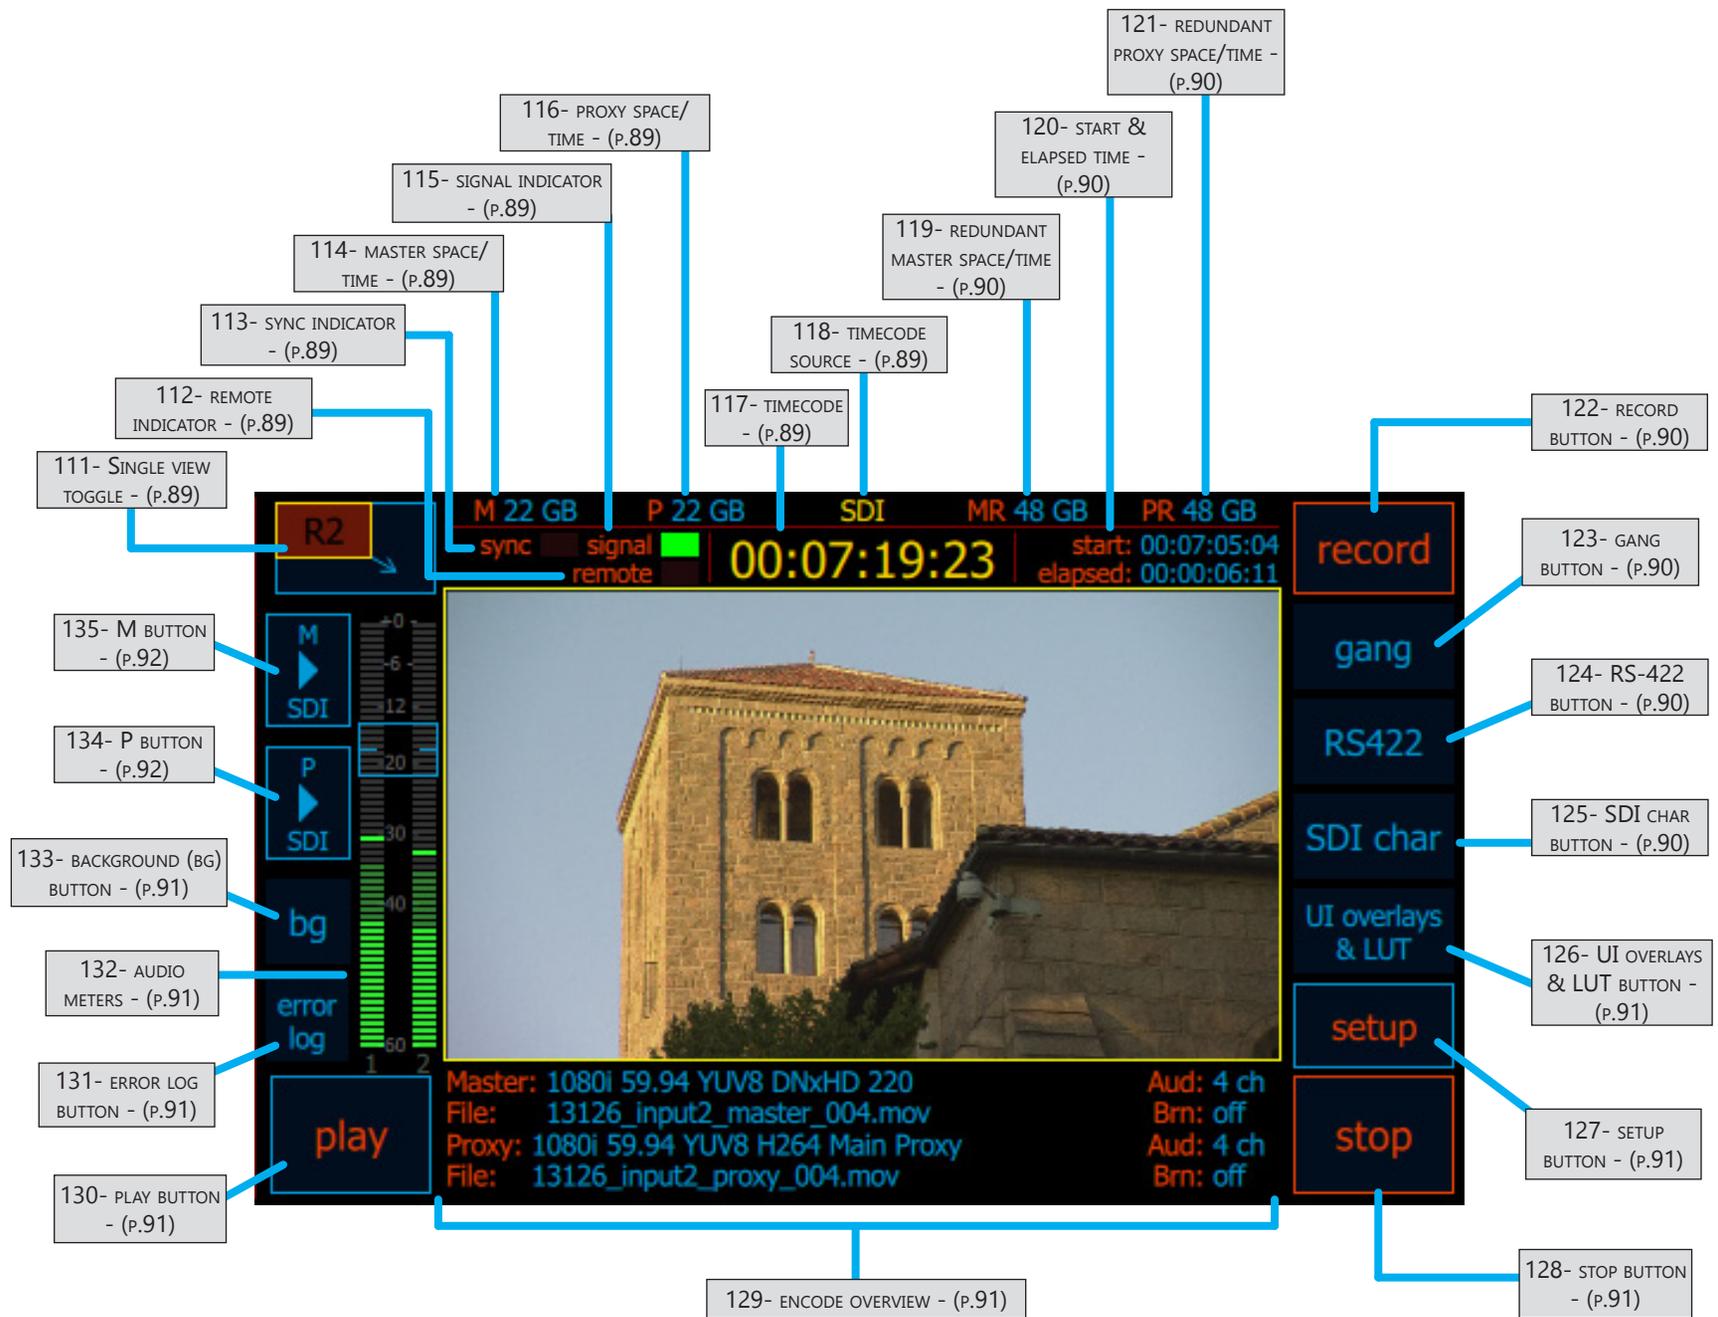

Multi view screen / - cont...

Name	Location	Description
111- SINGLE VIEW TOGGLE	5.8 Multi view screen - (p.88)	The single view toggle, switches the user interface between multi view and single channel view. Additional information and tools such as waveform and vectorscope are available in single channel view. Additionally, because of the increased screen space, setting up on-screen overlays such as aspect ratio is easier in single view.
112- REMOTE INDICATOR	5.8 Multi view screen - (p.88)	The remote indicator will light green when the associated channel detects a RS-422 connection.
113- SYNC INDICATOR	5.8 Multi view screen - (p.88)	The sync indicator will light green when an external a black-burst or tri-level sync reference signal is detected. The sync settings are available on the input page of the setup screen. For normal operation, sync is set to auto. In auto mode, internal reference is used unless the external signal is detected. See "273- sync" on page 140
114- MASTER SPACE/TIME	5.8 Multi view screen - (p.88)	In standby mode, master space/time displays the available space on the designated destination drive. When recording, the display will auto toggle between remaining space and approximate remaining time, based on the selected encode bitrate. Note; the system is unaware if other channels are being written to the same destination drive so the available time estimate may need to be divided to accurately reflect remaining time.
115- SIGNALINDICATOR	5.8 Multi view screen - (p.88)	The signal indicator will light green when the system detects and is set properly to match an incoming signal.
116- PROXY SPACE/TIME	5.8 Multi view screen - (p.88)	In standby mode, proxy space/time displays the available space on the designated destination drive. When recording, the display will auto toggle between remaining space and approximate remaining time, based on the selected encode bitrate. Note; the system is unaware if other channels are being written to the same destination drive so the available time estimate may need to be divided to accurately reflect remaining time.
117- TIMECODE	5.8 Multi view screen - (p.88)	The primary timecode display shows the current timecode which will be recorded.
118- TIMECODESOURCE	5.8 Multi view screen - (p.88)	Timecode source indicates where the timecode is coming from. Possible sources include, SDI (serial digital embedded timecode), GEN (internal generated timecode, LTC (linear timecode fro external source)

Multi view screen / - cont...

Name	Location	Description
119- REDUNDANT MASTER SPACE/TIME	5.8 Multi view screen - (p.88)	In standby mode, redundant master space/time displays the available space on the designated secondary destination drive. When recording, the display will auto toggle between remaining space and approximate remaining time, based on the selected encode bitrate. Note; the system is unaware if other channels are being written to the same destination drive so the available time estimate may need to be divided to accurately reflect remaining time.
120- START & ELAPSED TIME	5.8 Multi view screen - (p.88)	Indicates the start timecode of the current recording and the elapsed time of the current recording.
121- REDUNDANT PROXY SPACE/TIME	5.8 Multi view screen - (p.88)	In standby mode, redundant proxy space/time displays the available space on the designated secondary destination drive. When recording, the display will auto toggle between remaining space and approximate remaining time, based on the selected encode bitrate. Note; the system is unaware if other channels are being written to the same destination drive so the available time estimate may need to be divided to accurately reflect remaining time.
122- RECORD BUTTON	5.8 Multi view screen - (p.88)	Activates recording. <ul style="list-style-type: none"> • In Gang mode, recording will be triggered on multiple channels. • In EDL record mode, this button will display and load the first EDL event. • Depending on the mode, after recording starts, the button name can change.
123- GANG BUTTON	5.8 Multi view screen - (p.88)	Besides off, Gang record mode has two modes, normal which simultaneously triggers all selected channels and staggered which triggers each selected channel separately after a user defined time delay. This is primarily used when writing to spinning disc systems to allow the drive heads time to recover between I/O requests.
124- RS-422BUTTON	5.8 Multi view screen - (p.88)	RS-422 selects remote control modes between off, master, slave and VDCP slave. RS-422 modes can be set independently for each channel. <ul style="list-style-type: none"> • Select master mode to control a connected device from the Cinedeck. • Slave and VDCP slave, allow external systems to control the selected channel.
125- SDI CHAR BUTTON	5.8 Multi view screen - (p.88)	SDI char toggles the character and information overlay output on and off for the user interface video display and the SDI out. Setup opens a setup screen for customizing the character output. (See "5.13 Character Out Customization" on page 110)

Multi view screen / - cont...

Name	Location	Description
126- UI OVERLAYS & LUT BUTTON	5.8 Multi view screen - (p.88)	UI overlays & LUT accesses on/off toggle and setup buttons for selecting an on-screen color LUT. LUT files can be loaded from any connected drive. When active, this preview LUT has no effect on recorded video. This control also accesses on/off toggle buttons for on screen overlays; aspect ratio borders, aspect ratio letterbox shading, safe area borders, grid /crosshairs. Setup for these on-screen overlays can be accessed from single channel view. (See "111- Single view toggle" on page 89 and "5.14 Overlay Customization" on page 111)
127- SETUP BUTTON	5.8 Multi view screen - (p.88)	Setup takes you to the initial channel overview page and all setup screens. (See "5.16 Setup tabs explained" on page 113)
128- STOP BUTTON	5.8 Multi view screen - (p.88)	Pressing stop ends a current recording. Note that by default, stopping a recording requires a long press of about 3 seconds which helps prevent accidental stops. If gang is in use, all selected channels will stop.
129- ENCODE OVERVIEW	5.8 Multi view screen - (p.88)	When touched or clicked, the encode overview region shows one of three screens; <ol style="list-style-type: none"> 1. The default view displays current input, codec and file name settings for the master and proxy with the number of audio channels and character burn status. 2. The second view displays the destination folder path and when recording, the approximate encode data rate for the master and proxy are shown. 3. View three shows the current project and list names such as scene and sub scene.
130- PLAY BUTTON	5.8 Multi view screen - (p.88)	The play button will load and play the most recently recorded clip. If nothing is in the "last play" memory, pressing play will go directly to the clip manager. If a clip is loaded for playback, the play button is renamed "open" and when pressed will open the clip manager.
131- ERROR LOG BUTTON	5.8 Multi view screen - (p.88)	<div style="text-align: right; margin-bottom: 5px;">  </div> Error log opens a sub-menu with controls for; <ul style="list-style-type: none"> • dismissing the most recent warning for the selected channel • dismissing all warnings for the selected channel • opening the log of recent errors • dismissing all errors on all channels
132- AUDIO METERS	5.8 Multi view screen - (p.88)	The audio meters reflect the average audio levels for the selected channel pair.
133- BACKGROUND (BG) BUTTON	5.8 Multi view screen - (p.88)	The bg button toggles a dark background on and off to better separate the on-screen audio meters from the underlying video.

Multi view screen / - cont...

Name	Location	Description
134- P BUTTON	5.8 Multi view screen - (p.88)	The P button toggles the on screen overlay of the proxy encode audio channels. When this overlay is active it is possible to select a different channel pair for monitoring. A long press opens the headphone monitor control screen (see "5.10 Headphone Monitor Controls" on page 98).
135- M BUTTON	5.8 Multi view screen - (p.88)	The M button toggles the on screen overlay of the master encode audio channels. When this overlay is active it is possible to select a different channel pair for monitoring. A long press opens the headphone monitor control screen (see "5.10 Headphone Monitor Controls" on page 98).

5.9 Single channel view



User Interface

Single channel view

Single channel view / - cont...

Name	Location	Description
136- MULTI VIEW TOGGLE	5.9 Single channel view - (p.93)	The multi view toggle, switches the user interface between single view and multi channel view. Additional information and tools such as waveform and vectorscope are available in single channel view. Additionally, because of the increased screen space, setting up on-screen overlays such as aspect ratio is easier in single view.
137- LOCK	5.9 Single channel view - (p.93)	Locks/Unlocks touch screen. Primarily for use in conjunction with MX tactile control panel which provides direct access to other channels, whether locked or unlocked.
138- TCP REMOTE	5.9 Single channel view - (p.93)	Future function.
139- ELAPSED TIME	5.9 Single channel view - (p.93)	Although not labeled, this timecode display indicates the elapsed time of the current recording.
140- START	5.9 Single channel view - (p.93)	Indicates the start timecode of the current or most recent recording.
141- FILE TC SOURCE	5.9 Single channel view - (p.93)	File TC source indicates where the timecode is coming from which will be written to the file. Possible sources include, SDI (serial digital embedded timecode), GEN (internal generated timecode, LTC (linear timecode fro external source)
142- TIMECODE	5.9 Single channel view - (p.93)	The primary timecode display shows the current timecode which will be recorded.
143- END	5.9 Single channel view - (p.93)	Indicates the end timecode of the previous or most recent recording.
144- RECORD MODE	5.9 Single channel view - (p.93)	Selects between recording modes: (See "5.11 Record Modes" on page 99) <ul style="list-style-type: none"> • "normal" - Used for standard recording • "pause" mode - Ingest stops but the file is not closed. • "pause & seek in file" Ingest stops, the file is not closed, an in-point can be set • "insert baseband" - Allows inserting audio and video into a flat file.
145- 422 MODE	5.9 Single channel view - (p.93)	RS-422 selects remote control modes between off, master, slave and VDCP slave. RS-422 modes can be set independently for each channel. <ul style="list-style-type: none"> • Select master mode to control a connected device from the Cinedeck. • Slave and VDCP slave, allow external systems to control the selected channel.
146- RECORD	5.9 Single channel view - (p.93)	Activates recording. <ul style="list-style-type: none"> • In Gang mode, recording will be triggered on multiple channels. • In EDL record mode, this button will display and load the first EDL event. • Depending on the mode, after recording starts, the button name can change.

Single channel view / - cont...

Name	Location	Description
147- GANG	5.9 Single channel view - (p.93)	Besides off, Gang record mode has two modes, normal which simultaneously triggers all selected channels and staggered which triggers each selected channel separately after a user defined time delay. This is primarily used when writing to spinning disc systems to allow the drive heads time to recover between I/O requests.
148- LUT	5.9 Single channel view - (p.93)	LUT accesses on/off toggle and setup buttons for selecting an on-screen color LUT. LUT files can be loaded from any connected drive. When active, this preview LUT has no effect on recorded video.
149- CHAR OUT	5.9 Single channel view - (p.93)	Char out toggles the character and information overlay output on and off for the user interface video display and the SDI out. A long press provides access to "setup" which opens a setup screen for customizing the character output. (See "5.13 Character Out Customization" on page 110)
150- OVERLAYS	5.9 Single channel view - (p.93)	The overlays button accesses on/off toggle buttons and settings for on screen overlays; aspect ratio borders, aspect ratio letterbox shading, safe area borders, grids and crosshairs. (See "5.14 Overlay Customization" on page 111)
151- ANALYSIS	5.9 Single channel view - (p.93)	The analysis button accesses on/off toggle buttons and settings for the on screen video tools; waveform , vectorscope, histogram, clipping, edge detect and setup for the clipping level. The waveform display can be switched between a 0-255 digital scale, -20-120 IRE scale and a 0%-100% percentage scale. The waveform and histogram displays can be switched between Y - luminance, R - Red, G - Green, B - Blue and full RGB parade modes. All of the scopes can be viewed as full screen or 1/4 screen overlay. (See "5.15 Video Analysis Tools" on page 112)
152- 100%	5.9 Single channel view - (p.93)	100% toggles the on screen video preview between full image and zoom mode. Normally the entire image from the source is displayed however at just 1024 wide, the Cinedeck on-board display is not a native HD panel. Zoom mode provides 4x image magnification which allows more accurate visual analysis of image detail, focus, etc.
153- FULL SCREEN	5.9 Single channel view - (p.93)	Full screen toggles between single channel view with controls around the perimeter to a view which allows the preview video to take the entire display. The on-screen controls switch to a momentary mode and fade out after a few seconds. Touching the screen brings the controls into view again.
154- SETUP	5.9 Single channel view - (p.93)	Setup takes you to the initial channel overview page and all setup screens. (See "5.16 Setup tabs explained" on page 113)

Single channel view / - cont...


Name	Location	Description
155- STOP	5.9 Single channel view - (p.93)	Pressing stop ends a current recording. Note that by default, stopping a recording requires a long press of about 3 seconds which helps prevent accidental stops. If gang is in use, all selected channels will stop.
156- ENCODE OVERVIEW	5.9 Single channel view - (p.93)	<p>Primarily, the encode overview region shows (from left to right) the current file name settings for the master and proxy and if activated, the current file name settings for the redundant (copy) master and proxy. The overview displays codec and input settings for the master and proxy encodes and in several columns indicates:</p> <ul style="list-style-type: none"> • "audio" - The number of audio channels being recorded • "a/d" - If delay is active for one or more audio channels • "LUT" - If a file is being recorded with a color LUT applied • "Brn" - If a character burn is being applied to the video • "slate" - If slate information is included in the clip • "disk" - The size of the destination disc • "remain" - The remaining space on the destination disc • And when recording, the area between "slate" and "disk" opens up to reveal a data rate display for each encode. <p>Additionally, when touched or clicked, the left region of the encode overview displays the destination folder path for each file.</p>
157- PLAY	5.9 Single channel view - (p.93)	The play button will load and play the most recently recorded clip. If nothing is in the "last play" memory, pressing play will go directly to the clip manager. If a clip is loaded for playback, the play button is renamed "open" and when pressed will open the clip manager.
158- ERROR LOG	5.9 Single channel view - (p.93)	<p>Error log opens a sub-menu with controls for;</p>  <ul style="list-style-type: none"> • dismissing the most recent warning for the selected channel • dismissing all warnings for the selected channel • opening the log of recent errors • dismissing all errors on all channels
159- AUDIO METERS	5.9 Single channel view - (p.93)	The audio meters reflect the average audio levels for the selected channel pair.
160- BG	5.9 Single channel view - (p.93)	The bg button toggles a dark background on and off to better separate the on-screen audio meters from the underlying video.

Single channel view / - cont...

Name	Location	Description
161- P	5.9 Single channel view - (p.93)	The P button toggles the on screen overlay of the proxy encode audio channels. When this overlay is active it is possible to select a different channel pair for monitoring. A long press opens the headphone monitor control screen (see "5.10 Headphone Monitor Controls" on page 98).
162- M	5.9 Single channel view - (p.93)	The M button toggles the on screen overlay of the master encode audio channels. When this overlay is active it is possible to select a different channel pair for monitoring. A long press opens the headphone monitor control screen (see "5.10 Headphone Monitor Controls" on page 98).
163- REMOTE	5.9 Single channel view - (p.93)	The remote indicator will light green when the associated channel detects a RS-422 connection.
164- SYNC	5.9 Single channel view - (p.93)	The sync indicator will light green when an external a black-burst or tri-level sync reference signal is detected. The sync settings are available on the input page of the setup screen. For normal operation, sync is set to auto. In auto mode, internal reference is used unless the external signal is detected. See "273- sync" on page 140
165- SIGNAL	5.9 Single channel view - (p.93)	The signal indicator will light green when the system detects and is set properly to match an incoming signal.

5.10 Headphone Monitor Controls

The headphone monitor control panel is used to select the channel pair being monitored and adjust left and right audio levels.

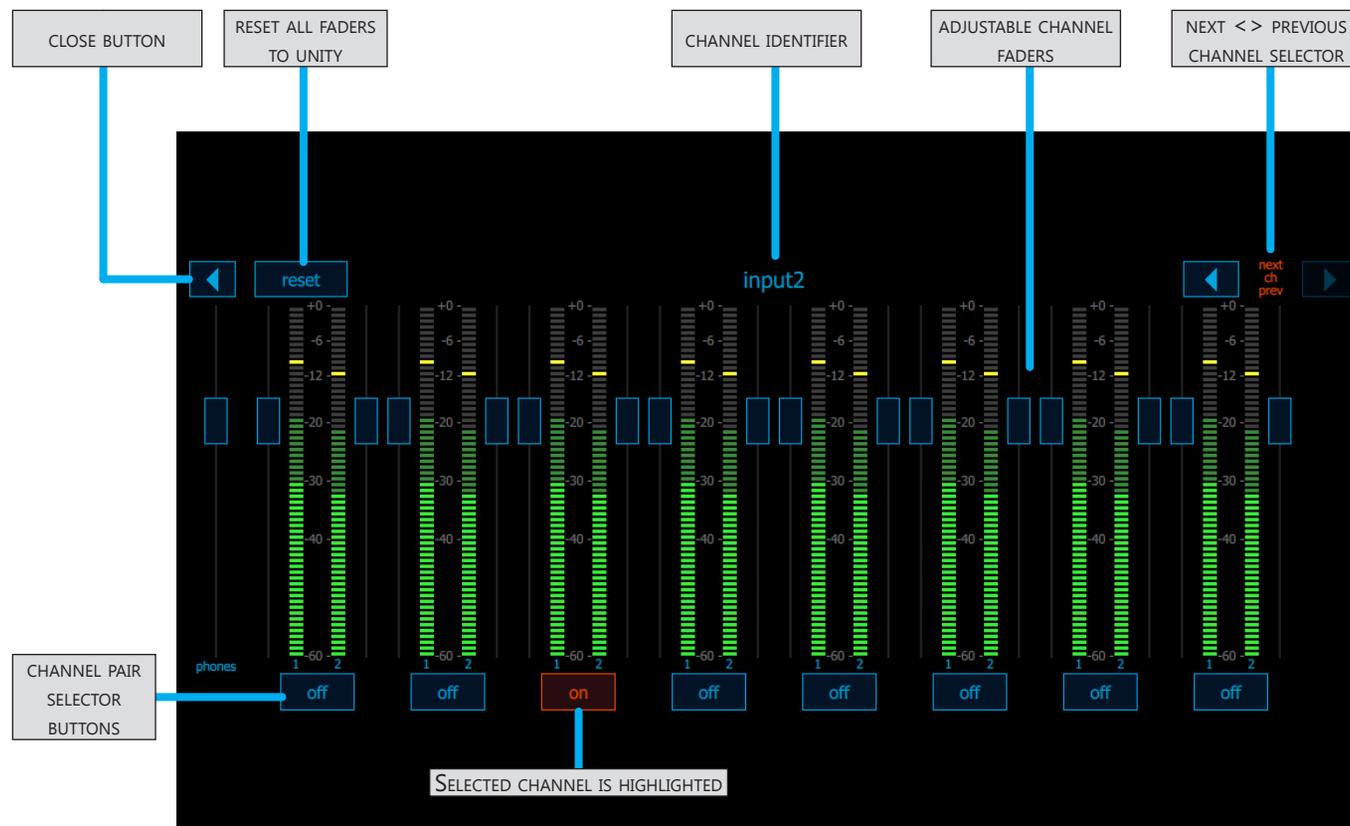

5.11 Record Modes

Record mode selects between the different recording capabilities such as pause and insert, which should not be confused with "UI mode" which selects between formats and different basic I/O settings such as HD and 4K. For additional information on UI mode, see ["5.25.1 UI mode" on page 185](#)

- "normal" - Used for standard recording
- "pause" mode - Ingest stops but the file is not closed.
- "pause & seek in file" Ingest stops, the file is not closed, an in-point can be set
- "insert baseband" - Allows inserting audio and video into a flat file.

5.11.1 Normal

Normal record mode is used for typical single and multi-channel recording and playback tasks.

5.11.2 Pause

Pause record mode is used in situations where a long recording session will be broken up by periods where no useful action is occurring. Typically in such situations, recording will be stopped but each normal stop start generates a new file which is sometimes undesirable. When in pause mode, the record button changes to "pause" and the system functions much like a traditional analog tape recorder.



In pause mode, before initial recording starts, the record button is in its normal condition.



After recording starts, the record button changes to a "pause" button.



When "pause" is pressed, ingest is halted, the file remains in an open but static state and the record/pause button changes name to "resume".




When in resume, the record (red border) indicator will blink on and off, indicating that record mode is still active but ingest has been paused.

Record Modes / Pause cont...

It is also important to understand that when "pause" is active, it is active for all channels associated to the selected project. Also, "pause" can be used in conjunction with gang mode so you can control multiple channels in pause mode simultaneously.

PAUSE RECORD ACTIVE AND
PAUSED FOR TWO CHANNELS

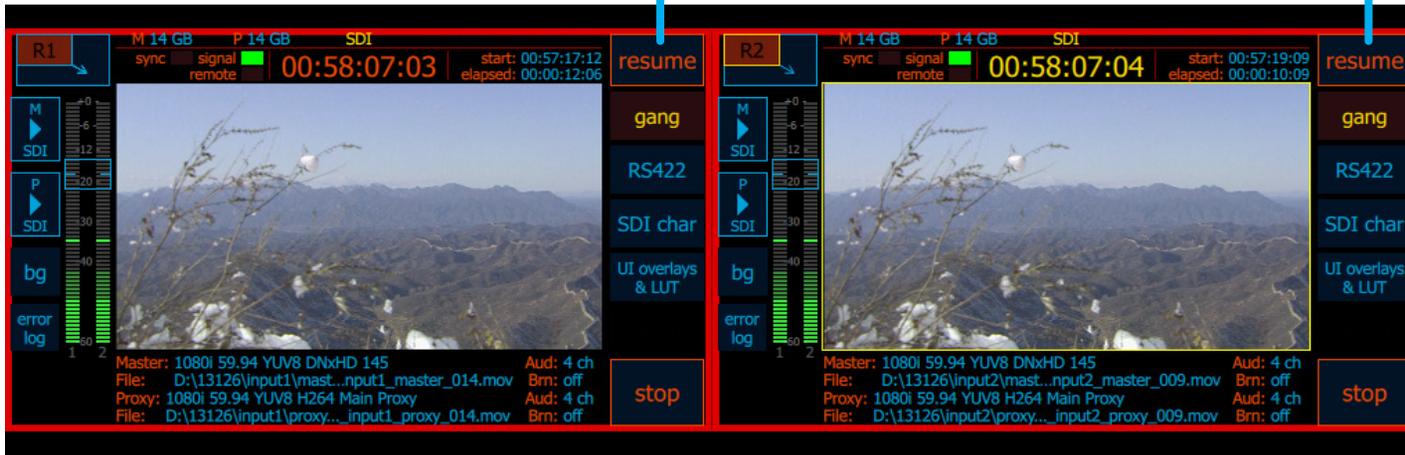

User Interface

Record Modes

Pause

Record Modes / Pause & Seek in File cont...

5.11.3 Pause & Seek in File



Pause & Seek in File is similar to “pause” mode but pause & seek in file also mimics the “assemble edit mode” commonly used on a tape machine. In “pause & seek”, when pause is pressed, ingest is halted and the file remains open like in standard “pause” mode. Then the recently recorded

portion of the file is loaded into the special play mode window with active transport controls.

Multiple channels can be controlled in Pause & Seek mode making it possible for example, to simultaneously build a show master while keeping a few ISO channels in sync with the master or for creating multiple masters with different codec and wrapper combinations.

Pause & Seek in File operation is straightforward:

- Put the channel(s) in gang record mode and start recording
- Pause the recording(s)
- Put the channel(s) into gang play and cue one of the channels to a starting point in the recorded content
- Take the channel(s) out of pause and continue the recording(s)
- After multiple pause and record events, stop is pressed to close the file(s) and recording is complete.

Note: Currently Pause & Seek in File is supported with the MOV (quicktime) wrapper recording ProRes, DNxHD and AVC-Intra. Additional wrappers and codecs will be added in future releases.

PAUSE & SEEK IN FILE - STANDBY
TRANSPORT CONTROLS INACTIVE




PAUSE & SEEK IN FILE - RECORDING
TRANSPORT CONTROLS INACTIVE



Record Modes / Pause & Seek in File cont...

Once loaded in play mode, it is possible to play and scrub the file to select an in-point within the recorded content. After the in-point is selected, "resume" can be pressed to continue recording from that in-point. This pause and seek process can be repeated many times. Only when the final recording is complete is stop pressed to close the file.

Remember: Just like assemble edit on tape, resuming a recording in Pause & Seek mode after an in-point is set will permanently replace all of the content after the in-point with new content.

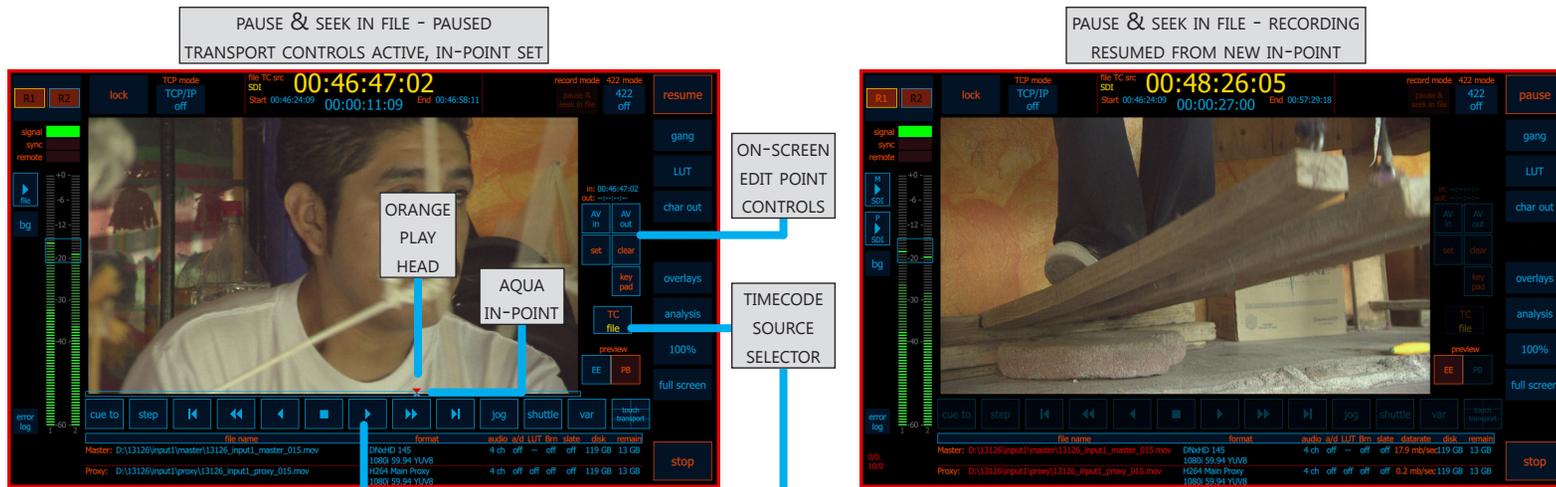

WHEN "PAUSE" IS ACTIVE, THE TRANSPORT CONTROLS CAN BE USED TO PLAY THE FILE AND THE PLAY-HEAD CAN BE DRAGGED TO SCRUB THE CLIP. USE ON-SCREEN BUTTONS OR KEYBOARD SHORTCUTS TO CONTROL TRANSPORT AND SET EDIT POINTS.

TC file	file	input	TC file	TC input	DIFFERENT WRAPPERS CAN HANDLE TIMECODE DIFFERENTLY - MOST ONLY NOTATE THE STARTING TIMECODE AND THE DURATION OR TOTAL NUMBER OF FRAMES WHICH MEANS TIMECODE WILL NORMALLY BE CONTIGUOUS ACROSS EDITS. MOV (QUICKTIME) INCLUDES A TIMECODE TRACK SO CAN CONTAIN NONCONTIGUOUS TIMECODE. IF NONCONTIGUOUS (SOURCE TIMECODE) IS REQUIRED INSTEAD OF CONTIGUOUS (RECORD TIMECODE), SELECT INPUT FROM THE TIMECODE SELECTOR MENU.

User Interface
Record Modes
Pause & Seek in File

Record Modes / Insert Baseband cont...


5.11.4 Insert Baseband



Insert Baseband mode allows the replacement of content in any selected region of many closed file types. The user can open a file on the Cinedeck, set an in and out point, along with the appropriate video and or audio channels which need replacing and trigger insert recording to fill in the selected area, with whatever is coming into the SDI input. Inserts can be video, audio, or audio with video.

Cinedeck Insert Edit currently supports ProRes, DNxHD and AVC-Intra, in a MOV (quicktime), MXF Op1a, or MXF OpAtom wrapper. Target files can be Cinedeck generated or come from elsewhere however ProRes files which were generated elsewhere likely need to be re-wrapped as ProRes is normally VBR (variable bit rate) and the insert process requires the content to be CBR (constant bit rate).

This is a fast file copy process which is done from Cinedeck's clip manager. (See ["452- manage clips" on page 216](#) under Clip Manager)

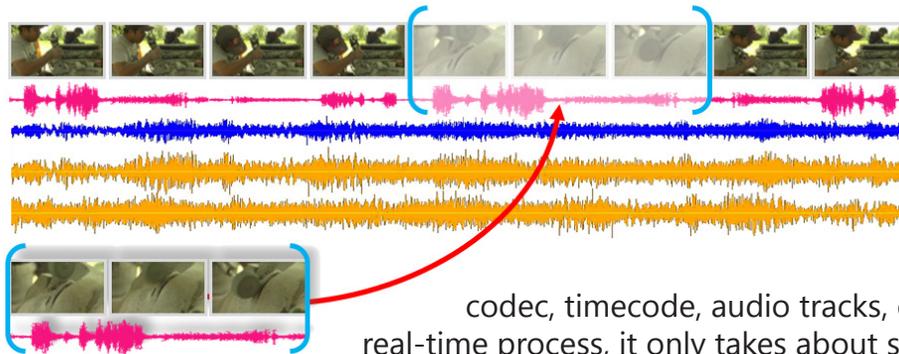

Inserting into a prerecorded file is analogous to inserting into a prerecorded tape and the same analogy of working with a pre-blacked or pre-stripped tape also exists in the file world with Cinedeck's ability to create a blacked-file. Just like a tape, when you create a "blacked file", you pre-stripe it with format,

codec, timecode, audio tracks, etc.. A big difference is that instead of it being a real-time process, it only takes about six minutes to create an hour blacked file.

Although the process is fast, just like tape, you can also have some pre-blacked-files on disk and simply copy one to your workspace. Then, just like with a blacked tape, you use Cinedeck insert editing to fill in the blanks. (See: ["5.12 Create Black File" on page 109](#))

When building a show "live-to-file", there are two advantages to working with a pre-stripped file as compared to Pause & Seek.

- With Pause & Seek there is no pre-roll. You can easily count down to the start but baseband insert mode does pre-roll like tape, which will be very familiar to studio personnel.
- When using the pre-stripped file, you can start and stop your work anytime, while Pause & Seek requires the deck to stay on and the file to remain open.

Record Modes / Insert Baseband cont...



Insert editing can be done between two channels on the Cinedeck (one Cinedeck source channel and one Cinedeck record/target channel) or by connecting the Cinedeck to an external source player such as a tape machine or edit system (one remote player/source channel and one Cinedeck recorder/target channel). In both of these situations,

the target, the file which will receive the insert, is opened on the Cinedeck.



Whether working channel to channel or from a separate source machine to the Cinedeck, the operator can control the player channel / machine via RS-422, using the controls provided on the Cinedeck target channel interface.

In the case of a non-linear system like Media Composer, the insert process can be controlled entirely from the Digital Cut tool, exactly as it would be with a tape machine, except you are writing to a preexisting file instead of a tape.



User Interface

Record Modes

Insert Baseband

5.11.5 Insert Baseband Master

Insert editing can be controlled in single channel view or multichannel view, there are a few important things to remember:

- Assign your Cinedeck channels to separate projects, particularly the master and confirm project settings.
- While any transport controls can be used for playing, shuttling, etc., edit points for the source should be set via the controlling Cinedeck record channel, either using a keyboard or the on-screen buttons.
- When in single channel view and you want to look at a local Cinedeck source channel directly, it is easiest to use the TAB key on a keyboard to switch screens.
- **control remote** To some users, the on-screen master channel indicators for local and remote seen in multi channel view, may seem reversed. Just remember, the text indicates the channel you will view if you click the button, not what is currently selected so "control remote" will switch to the remote device.

ONLY THE UNIQUE CONTROLS SEEN IN SINGLE CHANNEL VIEW DURING INSERT MODE WILL BE DESCRIBED HERE. SEE "5.9 SINGLE CHANNEL VIEW" ON PAGE 93 FOR OTHER DESCRIPTIONS). EDIT OPERATION IS THE SAME IN MULTI-CHANNEL VIEW BUT BECAUSE OF THE REDUCED SCREEN SPACE, THERE IS LESS DETAIL.

The screenshot shows the Cinedeck software interface in Insert Baseband Master mode. The central display shows a video preview of a stone building. The interface is surrounded by various control panels and buttons, each labeled with a callout box:

- 166- DEVICE CONTROL - (p.106)**: Points to the top left control area.
- 167- RECORD MODE - (p.106)**: Points to the top center control area.
- 168- RS-422 MODE - (p.106)**: Points to the top right control area.
- 169- EDIT POINT DISPLAY - (p.106)**: Points to the 'gang' button on the right side.
- 170- EDIT POINT CONTROLS - (p.106)**: Points to the 'char out' button on the right side.
- 171- EDIT MODE - (p.106)**: Points to the 'analysis' button on the right side.
- 172- PREVIEW EE/PB - (p.106)**: Points to the 'preview' button on the right side.
- 173- PREVIEW EDIT - (p.107)**: Points to the 'EE' and 'PB' buttons on the right side.
- 174- EDIT START TC - (p.107)**: Points to the 'edit start TC, tape/reel ID' button at the bottom right.
- 175- FILE TC DISPLAY - (p.107)**: Points to the 'start' button at the bottom center.
- 176- CREATE BLANK TAPE - (p.107)**: Points to the 'create blank "tape"' button at the bottom center.
- 177- TRIM FILE - (p.107)**: Points to the 'trim file' button at the bottom center.
- 178- TARGET FILE INFO - (p.107)**: Points to the 'File' field in the file information section at the bottom.
- 179- OPEN FILE TO EDIT - (p.107)**: Points to the 'open file to edit' button at the bottom left.
- 180- AUDIO SRC - (p.107)**: Points to the 'audio src' button on the left side.
- 181- DISABLE REMOTE TRACK ARM - (p.107)**: Points to the 'disable remote track arm' button on the left side.
- 182- SET UP SOURCE > FILE MAPPING - (p.107)**: Points to the 'set up source > file mapping' button on the left side.
- 183- FILE AUDIO OVERVIEW - (p.107)**: Points to the 'file audio' button on the left side.

Record Modes / Insert Baseband Master cont...

Name	Location	Description
166- DEVICE CONTROL	"5.11.5 Insert Baseband Master" on page 105	 <p>The device control selector is used to designate whether the user interface is focused on and controlling the local master / recorder or the source player. The orange highlighted selection is active.</p>
167- RECORD MODE	"5.11.5 Insert Baseband Master" on page 105	<p>Selects between recording modes: (See "5.11 Record Modes" on page 99)</p> <ul style="list-style-type: none"> • "normal" - Used for standard recording • "pause" mode - Ingest stops but the file is not closed. • "pause & seek in file" Ingest stops, the file is not closed, an in-point can be set • "insert baseband" - Allows inserting audio and video into a flat file.
168- RS-422 MODE	"5.11.5 Insert Baseband Master" on page 105	<p>RS-422 selects remote control modes between off, master, slave and VDCP slave. RS-422 modes can be set independently for each channel.</p> <ul style="list-style-type: none"> • Select master mode to control a connected device from the Cinedeck. • Slave and VDCP slave, allow external systems to control the selected channel.
169- EDIT POINT DISPLAY	"5.11.5 Insert Baseband Master" on page 105	Shows the in and out points set for the target file.
170- EDIT POINT CONTROLS	"5.11.5 Insert Baseband Master" on page 105	 <p>The on-screen edit point controls can be used for setting and clearing the edit points for the target file loaded in the master channel.</p> <p>Click "set" and then "in" to set the in-point Click "set" and "out" to set the out-point Click clear and the respective in or out to delete that point</p> <p>To manually set edit points, click keypad Select "use src tc" to optionally write the source timecode into the destination file</p>
171- EDIT MODE	"5.11.5 Insert Baseband Master" on page 105	 <p>Use the edit mode controls to select between inserting video, audio or video plus audio. Unlike a tape machine, "assemble" in this context simply simultaneously selects both video and audio to be inserted. The only tape like assemble edit function with files is pause and pause & seek. (See "5.11.2 Pause" on page 99 and "5.11.3 Pause & Seek in File" on page 101)</p>
172- PREVIEW EE/PB	"5.11.5 Insert Baseband Master" on page 105	The preview button toggles the master preview display between the playback target file view to the incoming source video and audio (EtoE = electronics to electronics).

User Interface

Record Modes

Insert Baseband Master

Record Modes / Insert Baseband Master cont...

Name	Location	Description
173- PREVIEW EDIT	"5.11.5 Insert Baseband Master" on page 105	Select preview edit to disable file write mode and view a simulation of the proposed edit.
174- EDIT START TC	"5.11.5 Insert Baseband Master" on page 105	Select edit start TC, tape reel ID to rewrite (re-stripe) the target file timecode based on a user entered timecode or back-timed based on the position of the playhead. For example, if the current file starts at 0:00:00 but you would prefer it to start at 58:30:00, simply change the timecode display and click save.
175- FILE TC DISPLAY	"5.11.5 Insert Baseband Master" on page 105	Indicates the start and end timecode for the loaded master (target) file.
176- CREATE BLANK TAPE	"5.11.5 Insert Baseband Master" on page 105	Creating a blank file is analogous to blacking or pre-stripping a tape. Open the dialog and select the appropriate settings and number of audio channels required for your edit/recording session. (See "5.12 Create Black File" on page 109)
177- TRIM FILE	"5.11.5 Insert Baseband Master" on page 105	Future Function
178- TARGET FILE INFO	"5.11.5 Insert Baseband Master" on page 105	Displays the name and format details of the loaded target file.
179- OPEN FILE TO EDIT	"5.11.5 Insert Baseband Master" on page 105	Like the play button, this opens clip manager for selecting and opening the target file. Only one clip can be opened at a time.
180- AUDIO SRC		 <p>Provides direct selection to the SDI or AES inputs to be used for the audio portion of any insert edits.</p>
181- DISABLE REMOTE TRACK ARM		Some external systems such as Avid Media Composer can independently select which audio channels are active for inserting. Disabling Remote Track Arm prevents this external control.
182- SET UP SOURCE> FILE MAPPING		Similar to the audio matrix on the encode pages, this button accesses a control panel for enabling or disabling independent tracks in the target file and selecting which source channels are directed to which tracks in the target file. (See "5.11.6 Insert Audio Matrix" on page 108 for detail)
183- FILE AUDIO OVERVIEW		This matrix display shows the current audio channel selections. Highlighted channels are available to be used. Yellow highlighted channels are currently active.

User Interface

Record Modes

Insert Baseband Master

5.11.6 Insert Audio Matrix

The Insert edit source to file mapping screen is used to route incoming channels to file channels as well as to activate or deactivate file channels, controlling whether they are available to be inserted into.

The screenshot shows the 'Insert Audio Matrix' interface. On the left, there are two vertical audio meters labeled 'AUDIO METERS - INDICATE LEVELS FOR AUDIO COMING IN VIA SDI OR AES'. The main area is a 'SOURCE SELECTOR MATRIX - AVAILABLE FOR EACH CHANNEL' which is a 5x5 grid of buttons. The columns are labeled 'S', '200 Hz', '400 Hz', '600 Hz', '800 Hz', and '1 kHz'. The rows are labeled '1,2 kHz', '27', '21', '15', '9', and '3'. A tooltip points to the '2' button in the second row, second column, with the text: 'CLICK A SOURCE CHANNEL TO OPEN THE SOURCE SELECTOR MATRIX AND SELECT AN INCOMING CHANNEL'. Below the matrix is a 'routing of source audio channels to file audio channels' section with a 'src' row (1-10) and a 'file' row (1-32). Below that is a 'selection of FILE channels for insert' section with a row of 32 buttons, each labeled 'no' or 'yes'. A 'save and close' button is in the bottom right. A note at the bottom states: 'channels selected for insert WILL BE OVERWRITTEN for the duration of the insert'.

SOURCE SELECTOR MATRIX - AVAILABLE FOR EACH CHANNEL

AUDIO METERS - INDICATE LEVELS FOR AUDIO COMING IN VIA SDI OR AES

SOURCE TO FILE SELECTORS

AVAILABLE FILE CHANNEL INDICATORS

CLICK TO DISABLE / ENABLE FILE CHANNELS YES = ENABLED NO = DISABLED

CLICK A SOURCE CHANNEL TO OPEN THE SOURCE SELECTOR MATRIX AND SELECT AN INCOMING CHANNEL

channels selected for insert WILL BE OVERWRITTEN for the duration of the insert

save and close

5.12 Create Black File

When you create a “blacked file”, you pre-stripe it with format, codec, timecode, audio tracks, etc.

- Working from left to right, select resolution, frame rate, etc.
- Select “channel count” to add audio channels.
- You must use the TC calculator to set the timecode parameters for your blacked file.
- Select a “file location” and give your new file a name.
- Finally, press “generate file” to create the black file

The main interface is titled "create 'tape' for insert edit". It features a grid of settings for resolution, fps, codec, color space, quality, wrapper, audio, and TC. Callouts point to various settings: RESOLUTION, FRAME RATE, CODEC, COLOR DEPTH, ENCODE QUALITY, FILE WRAPPER, AUDIO CHANNELS, TIMECODE CALCULATOR, and FILE LOCATION SAVE AS. The audio section shows "channel count 10" selected. The TC section shows "edit" and "[select]" buttons. At the bottom, there are "generate file" and "back" buttons, and "GENERATE FILE" and "BACK - CLOSE" buttons.

Two inset panels are shown:

- Channel Count Panel:** Shows "channel count (0-32)" with a value of 10. It includes a numeric keypad (1-9, 0, del), a "clear" button, and "cancel" and "save and close" buttons.
- Timecode Calculator Panel:** Shows "start TC" (00:58:30:00), "end TC" (01:30:30:00), and "duration" (00:32:00:00). It includes a numeric keypad, "drop frame" and "non-drop frame" options, and "cancel" and "save and close" buttons.

In the timecode calculator, you need to set two parameters:

- Set the start timecode and set either the end timecode or the duration.
- You also have an option to select between drop or non-drop frame timecode.

5.13 Character Out Customization

Access for customizing the character overlay output can be found via the SDI character/character out buttons on the multi and single channel view. Character output can be customized for each channel independently. From here you can add or remove metadata and system information from the overlay. Data display blocks can be dragged with a mouse to any area on the screen.

Note: The character overlay output is displayed both on the SDI output of the selected channel and the Cinedeck video preview.

The screenshot shows the 'Character Out Customization' window. On the left is a control panel with sections for 'data', 'color/size', and 'position'. The 'data' section includes 'status', 'timecode', 'remaining timecode', 'file name', 'user text', 'audio levels master', and 'audio levels proxy'. The 'color/size' section includes 'text color', 'text size', 'backg color', 'backg width', 'backg height', and 'opacity'. The 'position' section includes 'user text' and 'encoder burn timecode source'. At the bottom are buttons for 'SDI', 'V 1/2 LTC', 'gen', 'snap', 'cancel', and 'save and close'. The main preview area shows a video frame with a character overlay. Callouts explain various features: 'DATA TOGGLES' (click a selector to toggle display information on or off), 'THE STATUS DISPLAY' (colors and sizes can be adjusted via this control panel), 'STATUS INCLUDES THE CHANNEL IDENTIFIER AND ITS CURRENT STATUS', 'TIMECODE INCLUDES CURRENT TIMECODE WITH STATUS', 'REMAINING TIMECODE (FUTURE FUNCTION)', 'TOGGLES FILE NAME DISPLAY', 'TOGGLE TO DISPLAY USER ENTERED TEXT (TEXT IS ENTERED BELOW)', 'TOGGLE DISPLAY OF MASTER & PROXY AUDIO LEVELS', 'CLICK TO OPEN ON-SCREEN KEYBOARD', 'FILE NAME DISPLAY', 'AUDIO METERS DISPLAY', 'STATUS INDICATES PLAY, CHANNEL 1, PAUSED AND TIMECODE', 'USER TEXT DISPLAY', 'User entered text', 'drag to change position', and 'TO HELP WITH ALIGNMENT, TURN ON "SNAP" TO ACTIVATE AN INVISIBLE ALIGNMENT GRID WHICH DISPLAY ELEMENTS WILL SNAP TO WHEN MOVED'.

5.14 Overlay Customization

T B A

5.15 Video Analysis Tools

Access to the video analysis tools is only available from the single channel view but the tools are available during record and playback. Tools include; waveform, vectorscope, histogram, edge detect and clipping

WAVEFORM - Y, R, G, B OR PARADE (AS SHOWN)

COLOR SELECTOR

CHANGE SCALE TO DIGITAL % IRE

ANALYSIS TOOLS MENU ACCESS BUTTON

HISTOGRAM

EDGE DETECT (AKA FOCUS ASSIST)

OVERLAY TOGGLE

SCOPES CAN BE FULL SCREEN OR OVERLAY

VECTORSCOPE

CLIPPING

CLIPPING SETUP

Analysis

clipping cutoff %

90%

5.16 Setup tabs explained

System setup is managed via a series of tabbed screens, accessed via the “setup” button found on both the multi view and single-channel screens. When setup is opened, settings for the current channel are displayed and the initial screen which appears is the “overview” tab.

It bears repeating that Cinedeck setup is project centric so most changes on the various setup screens are saved as part of the current project and effect whichever channels are associated to the current project. Additionally, setup tends to be a left to right process, starting on the Overview page where the project is selected and then stepping through “input”, “master” codec selection, “proxy” codec selection, and possibly some specific timecode and record trigger changes made on the “TC & automation” page. Lastly, it should be noted that previous settings (changes you have already made) filter what is available for the settings you are currently adjusting.

An example; you have already selected 1080i 59.94 10bit as the input and you want to select XDCAM HD as the master codec but you find that the quality settings are not available. This is because XDCAM HD is an 8bit only codec. Had 8bit been selected as the color depth of the input, the quality settings would be available.

Additional tabs not necessarily directly related to a specific project but which certainly effect deck operation are the “prefs” tab (See [“5.25 Prefs tab” on page 179](#)) and the V1 signal generator (See [“5.27 V1 Signal Generator tab” on page 190](#)).

As a final point, there are some settings which are not necessarily recalled with the project settings and there are a few settings which are channel specific and so can be changed for each channel independently. The most important settings to check are the destination drive selections because drive letters can change at startup.

Important! Microsoft Windows assigns drive letters at system startup based upon what is connected at the time so it is always necessary to confirm the drive destination for each encode.

5.17 Overview tab

The overview page plays two important roles, it provides a full overview of the setup for the selected channel (there is a channel selector at the top right) and it provides access to project management for adjusting folder and file naming and scene / sub-scene management.

Click the current project name to access project and scene management.

The screenshot shows the Overview tab interface with the following callouts:

- 185- PAGE TABS - (p.115)
- 186- CURRENT PROJECT - (p.115)
- 187- CURRENT SCENE - (p.115)
- 188- CURRENT SUB-SCENE - (p.115)
- 189- TAPE/REEL ID - (p.115)
- 184- CHANNEL TOGGLE - (p.115)
- 190- INPUT SETTINGS - (p.116)
- 191- MASTER ENCODER SETTINGS - (p.116)
- 192- MASTER FILE DESTINATIONS - (p.116)
- 193- PROXY ENCODER SETTINGS - (p.116)
- 194- PROXY FILE DESTINATIONS - (p.116)
- 195- NAME - (p.116)
- 196- LABEL - (p.116)
- 197- PREVIEW - (p.116)
- 199- BURN LUT - (p.116)
- 198- PREVIEW LUT - (p.116)
- 200- COPY TO OTHER CHANNELS - (p.116)
- 201- SAVE AND CLOSE - (p.117)
- 202- SEGMENT MODE - (p.117)
- 203- DROP & LOSS STOP - (p.117)

Overview tab / - cont...

Name	Location	Description
184- CHANNEL TOGGLE	5.17 Overview tab - (p.114)	The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.
185- PAGE TABS	5.17 Overview tab - (p.114)	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.
186- CURRENT PROJECT	5.17 Overview tab - (p.114)	Current project displays the active project for the selected channel and is a variable, often used in folder and file names. Clicking here provides access to the project manager where projects are assigned to channels, new projects can be created and projects can be imported and exported. This is also where folder and file naming is managed. Additionally, user lists, scenes and sub-scenes are accessed via project manager. (See "5.18 Project manager" on page 118)
187- CURRENT SCENE	5.17 Overview tab - (p.114)	Current scene displays the active scene for the selected channel and is a variable, often used in folder and file names. Clicking here provides direct access to the scenes list associated with the active project for the selected channel, where scenes can be selected and managed; new scenes can be created, scene lists can be imported and exported, etc. (See "5.18 Project manager" on page 118)
188- CURRENT SUB-SCENE	5.17 Overview tab - (p.114)	Current sub-scene displays the active sub-scene for the selected channel and is a variable, often used in folder and file names. Clicking here provides direct access to the sub-scenes list associated with the active project for the selected channel, where sub-scenes can be selected and managed; new sub-scenes can be created, sub-scene lists can be imported and exported, etc. (See "5.18 Project manager" on page 118)
189- TAPE/REEL ID	5.17 Overview tab - (p.114)	Displays the tape/reel ID variables and value for the selected channel and is a variable, often used in folder and file names. Clicking here takes you directly to the "path & file names" settings associated with the active project for the selected channel, where the tape/reel ID can be adjusted. (See "5.18 Project manager" on page 118)

Overview tab / - cont...

Name	Location	Description
190- INPUT SETTINGS	5.17 Overview tab - (p.114)	Displays all of the input settings for the selected channel. Clicking the various data areas provides direct access to the relevant settings page, ie, touching "resolution" switches to the input page where input settings can be adjusted and touching "auto-rec" switches to TC & automation.
191- MASTER ENCODER SETTINGS	5.17 Overview tab - (p.114)	The master encoder region displays all of the settings related to the master encode. Clicking in this area switches to the master encode setup page.
192- MASTER FILE DESTINATIONS	5.17 Overview tab - (p.114)	The master file destinations section displays the selected destination drive, folder and file naming variables and text related to the master primary and redundant encodes. Clicking in this area switches to the master encode page.
193- PROXY ENCODER SETTINGS	5.17 Overview tab - (p.114)	The proxy encoder region displays all of the settings related to the proxy encode. Clicking in this area switches to the proxy encode setup page.
194- PROXY FILE DESTINATIONS	5.17 Overview tab - (p.114)	The proxy file destinations section displays the selected destination drive, folder and file naming variables and text related to the proxy primary and redundant encodes. Clicking in this area switches to the proxy encode page.
195- NAME	5.17 Overview tab - (p.114)	Name reflects the channel name variable or wild-card shown also at the top of the setup screen in the page tab bar. The input name variable can also be used in folder and file names. By default these are sequentially named, input 1, input 2, etc. Click here to open an on-screen keyboard to change the name.
196- LABEL	5.17 Overview tab - (p.114)	Label is an additional channel specific metadata field which can be used in folder and file naming. By default these are sequentially named, input 1, input 2, etc. Click here to open an on-screen keyboard to change the name.
197- PREVIEW	5.17 Overview tab - (p.114)	Preview is a thumbnail of that channels active video. The thumbnails can also be clicked to toggle between channels displayed. The orange bordered channels is the selected channel.
198- PREVIEW LUT	5.17 Overview tab - (p.114)	Preview LUT indicates if a LUT is active on the Cinedeck user interface video preview for the selected channel and if so, displays the LUT name.
199- BURN LUT	5.17 Overview tab - (p.114)	Burn LUT indicates if a LUT is being used to color process the recorded proxy for the selected channel and if so, displays the LUT name.
200- COPY TO OTHER CHANNELS	5.17 Overview tab - (p.114)	Copy to other channels allows copying channel independent settings such as audio channel selection and routing and file destination drive from the selected channel to one or more other channels.

Overview tab / - cont...


Name	Location	Description
201- SAVE AND CLOSE	5.17 Overview tab - (p.114)	Pressing save and close, confirms any changes, closes the setup screens and returns to the previous multi or single channel view.
202- SEGMENT MODE	5.17 Overview tab - (p.114)	Segment mode indicates if one of the file segment modes is active for that channel and encode and if increment mode is selected, displays the preset segment duration.
203- DROP & LOSS STOP	5.17 Overview tab - (p.114)	The orange text in this area indicates what will occur if the system detects a dropped frame. If "drop stop" is orange the system will stop recording. Otherwise it will ignore the dropped frame and continue. When orange, "last on loss" indicates that if the input signal is lost, recording will continue.

5.18 Project manager


Cinedecks are project-centric meaning that settings are auto saved to a project which is associated to one or more channels. Multiple channels which require the same settings would normally be associated with a single project while channels requiring unique settings would be associated to their own independent projects.

In other words, if all four channels of a deck are associated to the same project and you change the codec on one channel, the codec for the other three channels is simultaneously changed. To change settings for just a single channel, that channel would need to be associated to its own project.

Project Manager is accessed from the overview page (["186- current project" on page 115](#)), is where the basics are taken care of.

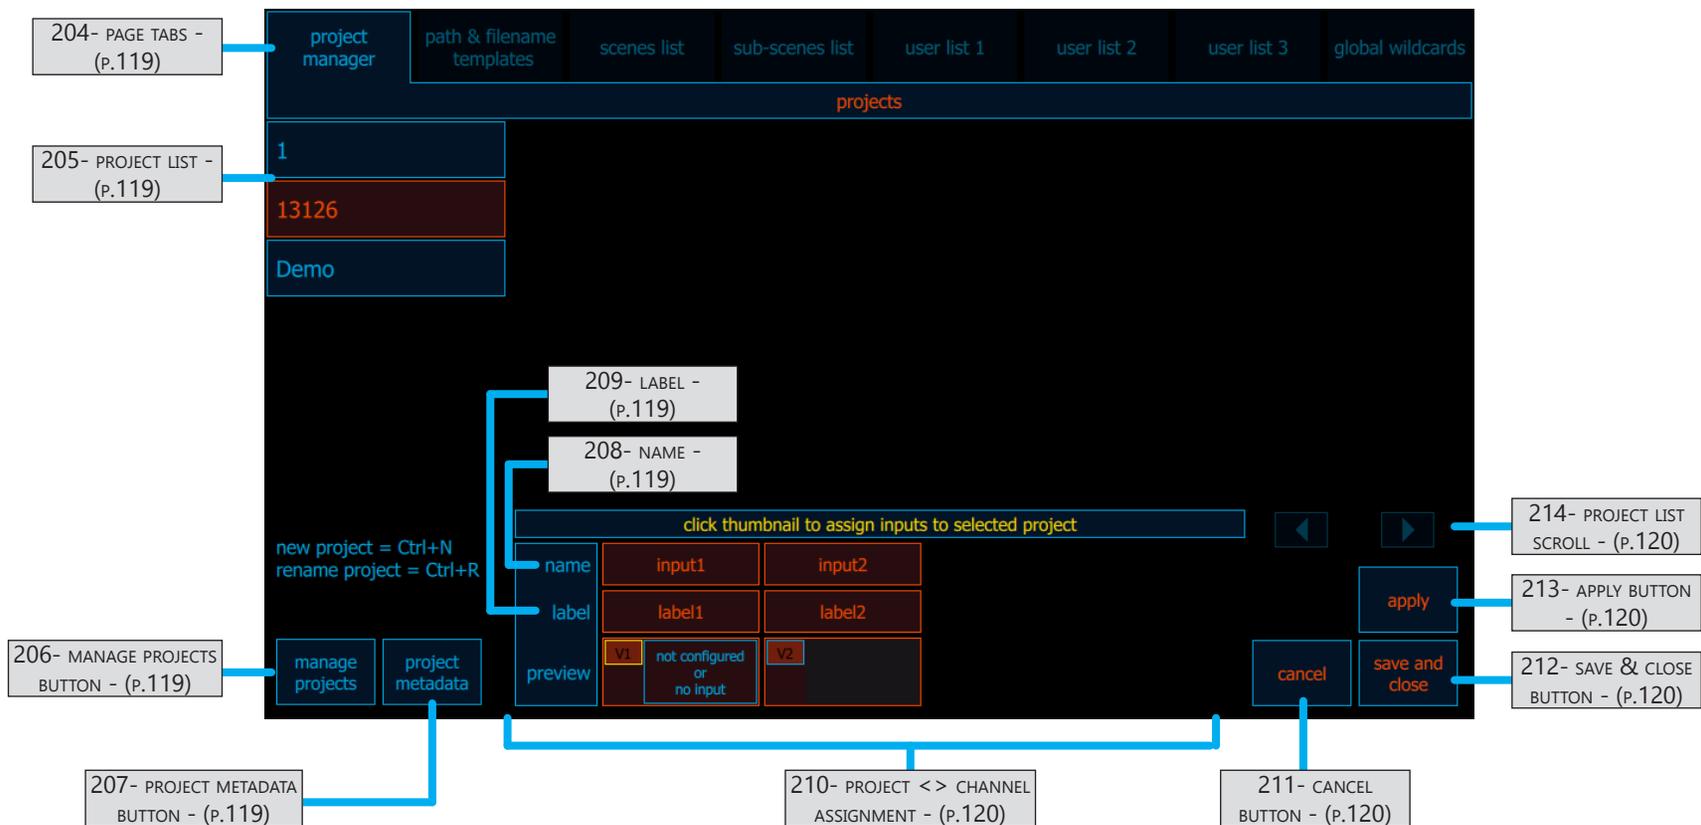

Project manager / - cont...

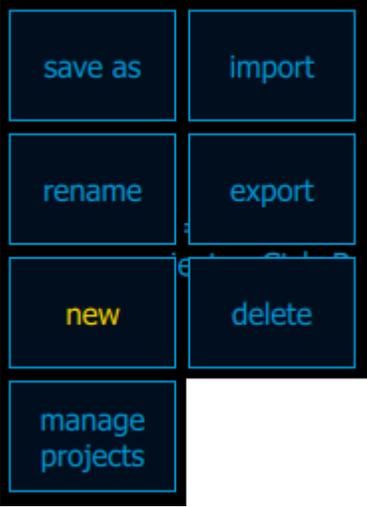Name	Location	Description
204- PAGE TABS	5.18 Project manager - (p.118)	The selector tabs are always visible in the project manager setup area. These can be clicked to provide direct access to each setup section.
205- PROJECT LIST	5.18 Project manager - (p.118)	The project list displays all of the currently available projects. The selected project is colored and bordered orange.
206- MANAGE PROJECTS BUTTON	5.18 Project manager - (p.118)	 <p>Manage products provides access to;</p> <ul style="list-style-type: none"> • Creating a new project - Projects are by default automatically saved in the "projects" folder located in the Cinedeck install folder. This is usually; c:\cinedeck\projects. • Deleting the selected project • Renaming the selected project • Exporting the selected project - Exporting a project is simply saving the project in a user selected destination with the current name. • Saving the selected project with a new name • Importing a previously saved project <p>Note that projects can not be deleted or renamed if there is content associated with the project.</p>
207- PROJECT METADATA BUTTON	5.18 Project manager - (p.118)	The project metadata button opens a small pop-up window for entering/editing project related metadata.
208- NAME	5.18 Project manager - (p.118)	The name reflects the channel name variable or wild-card shown also at the top of the setup screen in the page tab bar. The input name variable can also be used in folder and file names. By default these are sequentially named, input 1, input 2, etc. Click here to open an on-screen keyboard to change the name. (This name can also be changed on the project overview page)
209- LABEL	5.18 Project manager - (p.118)	The label is an additional channel specific metadata field which can be used in folder and file naming. By default these are sequentially named, input 1, input 2, etc. Click here to open an on-screen keyboard to change the name. (This name can also be changed on the project overview page)

Project manager / - cont...

Name	Location	Description
210- PROJECT <> CHANNEL ASSIGNMENT	5.18 Project manager - (p.118)	<p style="text-align: center;">click thumbnail to assign inputs to selected project</p>  <p>This critical section which is visible on all project management related screens is where you can see which channels are associated to the currently selected project and assign one or more channels to a selected project.</p> <p>To associate channels to projects;</p> <ol style="list-style-type: none"> 1. Select a project in the project list 2. Select one or more channels by clicking the video preview thumbnail (orange indicates a channel is selected, aqua-blue is available but not selected) In this image, channel 1 is assigned to the current project while channel 2 is not 3. Press Apply or Save & Close to assign the selected channel(s) to the selected project
211- CANCEL BUTTON	5.18 Project manager - (p.118)	Cancel any changes and return to the previous screen
212- SAVE & CLOSE BUTTON	5.18 Project manager - (p.118)	Pressing save and close, confirms any changes, closes the project setup screens and returns to the main setup area.
213- APPLY BUTTON	5.18 Project manager - (p.118)	Confirms any changes and stays on the current screen.
214- PROJECT LIST SCROLL	5.18 Project manager - (p.118)	The project screen can display thirty projects. If more than thirty projects are on a system the project list scroll arrows will be available to scroll the list left and right.

5.18.1 Path & file names explained

Folder and file names are made up from a broad selection of wildcards such as “project” (%P), as well as user entered text. Some wildcards are maintained and updated by the system such as “take number” %t. Others contain project/settings based data such as “input”. There are also user and global wildcards which contain more general user created info such as a show ID. (See the next page for more detail on wildcards)

Cinedeck places no restrictions on how or what you name your content however there are some good practices, recommendations and Windows system limitations.

It can be technically argued to be a slightly different character count but for our purposes, the Windows operating system effectively restricts the total path and file name to a maximum of 255 characters after the drive letter, ie;

X:\a_maximum\of_255_characters\and_system_characters\including_name_and_file.extension.

It is recommended to always use an auto incrementing element in your file name such as take number to assure that each clip gets a unique name during your recording session. Duplicate names will not overwrite existing content however they will prevent recording.

The default naming template includes an incrementing take number.

For readability and future manageability it is a good practice to keep the folder and file length as short as is practical by using abbreviations and phonetics while still maintaining a very human readable name. Careful use of upper and lower case characters can also help. Additionally, it is recommended to not use spaces in file or folder names. Spaces in folder and file names can make them incompatible with computer systems which may

project manager	path & filename templates	scenes list	sub-scenes list	user list 1	user list 2	user list 3	global wildcards
current project		current expansion		template (click to edit)			
project	13126	all encoders use same templates		master		proxy	
scene	scene1	primary path		\13126\input2\master		\\%P\\%I\\%E	
sub-scene	sub1	redundant path		\13126\input2\master		\\%P\\%I\\%E	
		file name		13126_input2_master_001		%P_%I_%E_%t	
		tape/reel ID		13126_input2		%P_%I	
		start take #	1	start roll #	1	edit user wildcards	show wildcards
				copy templates to	copy templates from	reset to defaults	
13126, scene1 & sub1 currently assigned to inputs:							
input1 label1		input2 label2					
not configured or no input		not configured or no input					
						cancel	save and close

5.18.2 Path & file name templates

The path and file naming templates page is where you manage folder and file naming for your project. It is important to note that the various lists; scenes, sub-scenes and user lists 1, 2 & 3, are project based wildcard elements that can be included in your names. They can then be toggled through during your recording session to quickly and accurately name specific content. Note also that there are six additional "global wildcards" which are user generated and available across all projects.

The screenshot shows the 'path & filename templates' window. The interface is divided into several sections:


- Navigation:** 'project manager', 'path & filename templates', 'scenes list', 'sub-scenes list', 'user list 1', 'user list 2', 'user list 3', and 'global wildcards'.
- Project Information:** 'current project' (Demo), 'current expansion' (master, proxy), and 'template (click to edit)'.
- Scene/Expansion Selection:** 'project Demo', 'scene scene1', and 'sub-scene sub1'.
- Template Configuration:**
 - primary path:** \Demo\input2\master (linked to 228- PRIMARY PATH - (p.126))
 - redundant path:** \Demo\input2\master (linked to 227- REDUNDANT PATH - (p.126))
 - file name:** Demo_input2_master_001 (linked to 226- FILE NAME - (p.126))
 - tape/reel ID:** Demo_input2 (linked to 225- TAPE/REEL ID - (p.126))
 - start take #:** 1 (linked to 217- START TAKE# - (p.124))
 - start roll #:** 1 (linked to 218- START ROLL# - (p.124))
 - edit user wildcards** (linked to 222- EDIT USER WILDCARDS - (p.125))
 - show wildcards** (linked to 223- SHOW WILDCARDS - (p.125))
 - copy templates to** and **copy templates from** buttons.
 - reset to defaults** (linked to 224- RESET TO DEFAULTS - (p.125))
- Channel Assignments:** 'Demo, scene1 & sub1 currently assigned to inputs:' with 'input1 label1' (not configured) and 'input2 label2' (V2) (linked to 219- CHANNEL ASSIGNMENTS - (p.125)).
- Buttons:** 'lock project', 'cancel' (linked to 220- CANCEL BUTTON - (p.125)), and 'save and close' (linked to 221- SAVE & CLOSE BUTTON - (p.125)).
- Global Wildcards:** '229- GLOBAL WILDCARDS - (p.126)'.
- Other Callouts:**
 - 230- ALL ENCODERS USE SAME TEMPLATES - (p.126)
 - 231- MASTER - (p.126)
 - 232- PROXY - (p.126)
 - 215- PAGE TABS - (p.124)
 - 216- CURRENT PROJECT DISPLAY - (p.124)

User Interface


Project manager

Path & file name templates

Project manager / Path & file name templates cont...

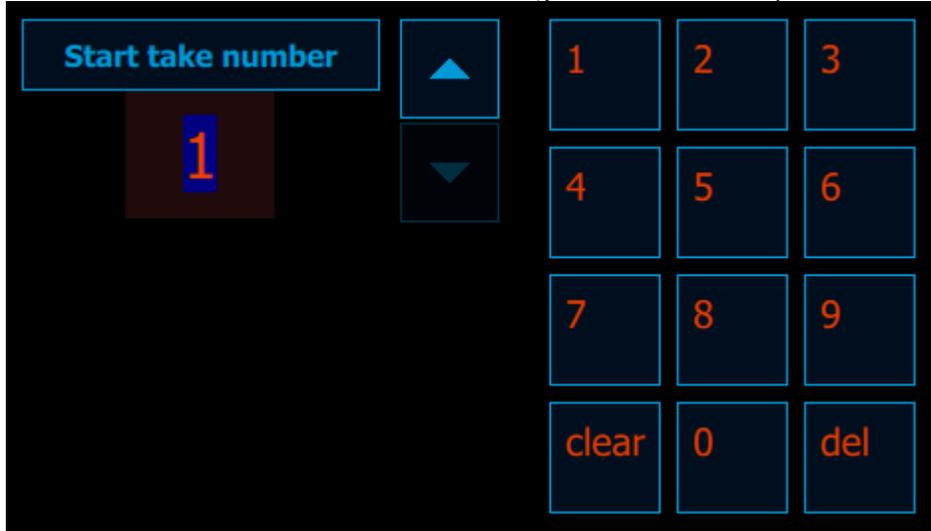Name	Location	Description
215- PAGE TABS	5.18.2 Path & file name templates - (p.123)	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.
216- CURRENT PROJECT DISPLAY	5.18.2 Path & file name templates - (p.123)	The current project display indicates the selected project for which you would be changing folder and file naming. Although they may not be included in the current naming structure, this display also indicates the current selected scene and sub-scene.
217- START TAKE#	5.18.2 Path & file name templates - (p.123)	<p>By default, Cinedeck file names leverage an auto-incrementing take number which, when no identically named content is in the destination folder, will start at 001. An alternative user defined starting number can be specified here.</p>  <p>Click the up > < down arrows to increment or directly enter a number with the keypad.</p> <p>Press save and close   at the lower right of the screen to confirm and close the keypad.</p>
218- START ROLL#	5.18.2 Path & file name templates - (p.123)	Cinedeck file names can leverage an auto-incrementing roll number which, when no identically named content is in the destination folder, will start at 001. An alternative user defined starting roll number can be specified here using the same procedure as for start take#. See "217- start take#" on page 124

Project manager / Path & file name templates cont...

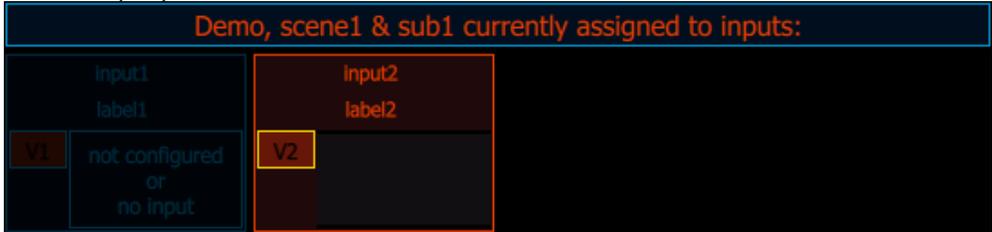Name	Location	Description																																								
219- CHANNEL ASSIGNMENTS	5.18.2 Path & file name templates - (p.123)	<p>The channel assignment display shows which channels are associated to the currently selected project.</p>  <p>(Orange indicates the channel is associated to the selected project. Dim channels are assigned to other projects)</p>																																								
220- CANCEL BUTTON	5.18.2 Path & file name templates - (p.123)	Cancel any changes and return to the previous screen.																																								
221- SAVE & CLOSE BUTTON	5.18.2 Path & file name templates - (p.123)	Pressing save and close, confirms any changes, closes the project setup screens and returns to the main setup area.																																								
222- EDIT USER WILDCARDS	5.18.2 Path & file name templates - (p.123)	Along with the many system provided wildcards or variables, users can also create six of their own project based wildcards for regularly used data such as a show number or program ID. User wildcards have a title or name which is displayed in the wildcard list and an expansion, the actual data associated to the name which is inserted into a name at record time. See "5.18.5 Edit user & global wildcards" on page 131																																								
223- SHOW WILDCARDS	5.18.2 Path & file name templates - (p.123)	<p>Opens a pop-up window with a list of wildcards or variables. Especially useful if you have opted in "prefs" to not use the on-screen keyboard.</p> <table border="1"> <thead> <tr> <th>general</th> <th>date</th> <th>time</th> <th>user</th> </tr> </thead> <tbody> <tr> <td>%P = project</td> <td>%C = 8 digit start TC</td> <td>%D = date (YYYYMMDD)</td> <td>%T = time (HHMMSS)</td> </tr> <tr> <td>%I = input</td> <td>%x = "_proxy"</td> <td>%Y = 4 digit year</td> <td>%H = 2 digit hour (0-23)</td> </tr> <tr> <td>%l = input label</td> <td>%y = 2 digit year</td> <td>%m = 2 digit minute</td> <td>%3 = [none]</td> </tr> <tr> <td>%E = encoder</td> <td>%M = 2 digit month</td> <td>%s = 2 digit second</td> <td>%4 = [none]</td> </tr> <tr> <td>%S = scene</td> <td>%d = 2 digit day</td> <td>%W = day of week</td> <td>%5 = [none]</td> </tr> <tr> <td>%u = sub-scene</td> <td></td> <td>%w = day of week (short)</td> <td>%6 = [none]</td> </tr> <tr> <td>%t = take number</td> <td></td> <td></td> <td>%7 = [none]</td> </tr> <tr> <td>%R = roll number</td> <td></td> <td></td> <td>%8 = [none]</td> </tr> <tr> <td></td> <td></td> <td></td> <td>%9 = [none]</td> </tr> </tbody> </table>	general	date	time	user	%P = project	%C = 8 digit start TC	%D = date (YYYYMMDD)	%T = time (HHMMSS)	%I = input	%x = "_proxy"	%Y = 4 digit year	%H = 2 digit hour (0-23)	%l = input label	%y = 2 digit year	%m = 2 digit minute	%3 = [none]	%E = encoder	%M = 2 digit month	%s = 2 digit second	%4 = [none]	%S = scene	%d = 2 digit day	%W = day of week	%5 = [none]	%u = sub-scene		%w = day of week (short)	%6 = [none]	%t = take number			%7 = [none]	%R = roll number			%8 = [none]				%9 = [none]
general	date	time	user																																							
%P = project	%C = 8 digit start TC	%D = date (YYYYMMDD)	%T = time (HHMMSS)																																							
%I = input	%x = "_proxy"	%Y = 4 digit year	%H = 2 digit hour (0-23)																																							
%l = input label	%y = 2 digit year	%m = 2 digit minute	%3 = [none]																																							
%E = encoder	%M = 2 digit month	%s = 2 digit second	%4 = [none]																																							
%S = scene	%d = 2 digit day	%W = day of week	%5 = [none]																																							
%u = sub-scene		%w = day of week (short)	%6 = [none]																																							
%t = take number			%7 = [none]																																							
%R = roll number			%8 = [none]																																							
			%9 = [none]																																							
224- RESET TO DEFAULTS	5.18.2 Path & file name templates - (p.123)	Pressing here will reset all of the path and file naming templates to the standard layout and wildcard selections.																																								

User Interface

Project manager

Path & file name templates

Project manager / Path & file name templates cont...

Name	Location	Description
225- TAPE/REEL ID	5.18.2 Path & file name templates - (p.123)	Displays the current name template for the tape or reel ID. Click here to customize the tape or reel ID name associated with each recorded clip. Note that tape/reel ID uses the same procedures and variables available for file names. See "5.18.4 File name editor" on page 129
226- FILE NAME	5.18.2 Path & file name templates - (p.123)	Displays the file name and file name template. Click here to customize the file name to be used for each recorded clip. See "5.18.4 File name editor" on page 129
227- REDUNDANT PATH	5.18.2 Path & file name templates - (p.123)	Displays the folder structure (path) and path template which will be used for redundant files if redundant file writing is active. Click the template area to customize the redundant folder structure. See "5.18.3 Path editor" on page 127
228- PRIMARY PATH	5.18.2 Path & file name templates - (p.123)	Displays the folder structure (path) and path template which will be used for primary files. Click the template area to customize the primary file folder structure. See "5.18.3 Path editor" on page 127
229- GLOBAL WILDCARDS	5.18.2 Path & file name templates - (p.123)	Accompanying the many system and project based wildcards, the Cinedeck system also has six global wildcards which are static, meaning they are available for regularly used data that is common between projects such as a facility or department ID. Like user wildcards, global wildcards have a title which identifies the wildcard in the wildcard list and an expansion, the data associated to the title which is inserted into a name at record time. See "5.18.5 Edit user & global wildcards" on page 131
230- ALL ENCODERS USE SAME TEMPLATES	5.18.2 Path & file name templates - (p.123)	When this button is orange (active), file naming for related slave encodes such as a proxy, follow the master file naming template. When inactive, (aqua), all related encodes can have their own file naming template.
231- MASTER	5.18.2 Path & file name templates - (p.123)	This switches the template overview to display the master file path and name details. If "all encoders use same templates" is active, the other tabs are not relevant.
232- PROXY	5.18.2 Path & file name templates - (p.123)	When "all encoders use same templates" is active , these additional tabs are not relevant as the master template dictates all path and file names. When "all encoders use same templates" is not active, this and other related encoder tabs which are visible in other modes, switch the template overview to display and allow editing the proxy and other related encode file path and name details.

User Interface

Project manager

Path & file name templates

5.18.3 Path editor

You use the path editor to create the folder structure where your files will be written. The interface for naming folders and files uses the same basic procedure, the difference being that some variables or wildcards may not be available.

The upper "template" field is where you enter the wildcards and text which forms the name.

Select wildcards using the "wildcard shortcut" buttons or directly type them in along with any other required text using the on-screen or an attached USB keyboard. You can also utilize Windows copy & paste in the template field.

The screenshot shows the Path Editor interface. At the top, there are two input fields: "template" containing the wildcard string `\%P\%I\%E` and "expansion" containing the path `\DemoShow\input2\master`. Below these fields is a row of "wildcard shortcut" buttons: Project, Scene, Sub-Scene, Input Name, Input Label, Encoder, Proxy, and 8 digit start TC. Underneath are buttons for "user 1" through "user 9", and "DP", followed by five "user 1" buttons. A virtual keyboard is displayed below, with keys for backslash, digits 1-0, del, letters q-w-e-r-t-y-u-i-o-p, clear, shift, a-s-d-f-g-h-j-k-l-+, z-x-c-v-b-n-m, ., -, and space. At the bottom right are "cancel" and "save and close" buttons. Callout boxes on the left point to the "DemoShow" label (233- CURRENT PROJECT - (p.128)), the "template" field (234- TEMPLATE - (p.128)), the "expansion" field (235- EXPANSION - (p.128)), and the virtual keyboard (237- ON SCREEN KEYBOARD - (p.128)). Callout boxes on the right point to the "cancel" button (238- CANCEL BUTTON - (p.128)) and the "save and close" button (239- SAVE & CLOSE BUTTON - (p.128)).

Note: Where possible, wildcard information is filled in but some data such as start time code is not available until recording starts so will be displayed as the same variable entered in the above template.

Project manager / Path editor cont...

Name	Location	Description
233- CURRENT PROJECT	5.18.3 Path editor - (p.127)	Displays the project name you are currently editing.
234- TEMPLATE	5.18.3 Path editor - (p.127)	This is an editable field which displays the text template used to form the name you are creating. Any letter preceded by the “%” symbol is a wildcard or variable which will be filled in when recording is activated.
235- EXPANSION	5.18.3 Path editor - (p.127)	The expansion display shows the full name as described by the template above. Where possible, wildcard information is filled in but some data such as start time code is not available until recording starts so will be displayed as the same variable entered in the above template.
236- WILDCARD SHORTCUTS	5.18.3 Path editor - (p.127)	The wildcard shortcut buttons provide easy access to the various record-time wildcards. Press a button and the appropriate variable is inserted into your template at the current cursor position.
237- ON SCREEN KEYBOARD	5.18.3 Path editor - (p.127)	<p>The on-screen keyboard can be used with a mouse or by presses when a touch screen is available. It works in a similar fashion to a standard USB keyboard with the following exceptions:</p> <ul style="list-style-type: none"> • The “del” key functions as backspace, deleting characters to the left of the cursor • The “clear” key deletes all text in the current field • The “shift” key functions as a shift lock toggle; On is all caps, Off is all lower case • Depending on the preference set on the “prefs” setup page, space bar will place a underscore character in place of a space
238- CANCEL BUTTON	5.18.3 Path editor - (p.127)	Cancel any changes and return to the previous screen.
239- SAVE & CLOSE BUTTON	5.18.3 Path editor - (p.127)	Pressing save and close, confirms any changes, closes the project setup screens and returns to the main setup area.

5.18.4 File name editor

The file name editor is where you create the structure to determine your file names. All naming of folders, files, etc. uses the same basic procedure, the difference being that some variables or wildcards may not be available. The upper "template" field is where you enter the wildcards and text which forms the name. You may select wildcards using the "wildcard shortcut" buttons or directly type them in along with any other required text using the on-screen or an attached USB keyboard. You can also utilize Windows copy & paste in the template field.

The screenshot shows the File Name Editor interface. At the top, there is a 'MyProject' label. Below it are two input fields: 'template' containing '%P_%I_%E_%t' and 'expansion' containing 'MyProject_input1_master_001'. A grid of 'wildcard shortcuts' is displayed below, including categories like Project, Scene, Sub-Scene, Input Name, Input Label, Encoder, Proxy, 8 digit start TC, Take counter, Roll counter, user 1-6, date in Unix/US/EU format, 4/2 digit year, 2 digit month/day, 6 digit time, 2 digit hour/minute/second, and day of week. Below the shortcuts is an on-screen keyboard with keys for numbers 1-0, letters q-w, e-r, t-y, u-i, o-p, shift, a-s, d-f, g-h, j-k, l+, z-x, c-v, b-n, m, ., -, and space. At the bottom right are 'cancel' and 'save and close' buttons. Callouts on the left side point to: 240- CURRENT PROJECT - (p.130) pointing to the 'MyProject' label; 241- TEMPLATE - (p.130) pointing to the template field; 242- EXPANSION - (p.130) pointing to the expansion field; 243- WILDCARD SHORTCUTS - (p.130) pointing to the grid of shortcuts; and 244- ON SCREEN KEYBOARD - (p.130) pointing to the keyboard. Callouts at the bottom right point to: 245- CANCEL BUTTON - (p.130) pointing to the 'cancel' button; and 246- SAVE & CLOSE BUTTON - (p.130) pointing to the 'save and close' button.

240- CURRENT PROJECT - (p.130)

241- TEMPLATE - (p.130)

242- EXPANSION - (p.130)

243- WILDCARD SHORTCUTS - (p.130)

244- ON SCREEN KEYBOARD - (p.130)

245- CANCEL BUTTON - (p.130)

246- SAVE & CLOSE BUTTON - (p.130)

Note: Where possible, wildcard information is filled in but some data such as start time code is not available until recording starts so will be displayed as the same variable entered in the above template.

Project manager / File name editor cont...

Name	Location	Description
240- CURRENT PROJECT	5.18.4 File name editor - (p.129)	Displays the project name you are currently editing.
241- TEMPLATE	5.18.4 File name editor - (p.129)	This is an editable field which displays the text template used to form the name you are creating. Any letter preceded by the “%” symbol is a wildcard or variable which will be filled in when recording is activated.
242- EXPANSION	5.18.4 File name editor - (p.129)	The expansion display shows the full name as described by the template above. Where possible, wildcard information is filled in but some data such as start time code is not available until recording starts so will be displayed as the same variable entered in the above template.
243- WILDCARD SHORTCUTS	5.18.4 File name editor - (p.129)	The wildcard shortcut buttons provide easy access to the various record-time wildcards. Press a button and the appropriate variable is inserted into your template at the current cursor position.
244- ON SCREEN KEYBOARD	5.18.4 File name editor - (p.129)	The on-screen keyboard can be used with a mouse or by presses when a touch screen is available. It works in a similar fashion to a standard USB keyboard with the following exceptions: <ul style="list-style-type: none"> • The “del” key functions as backspace, deleting characters to the left of the cursor • The “clear” key deletes all text in the current field • The “shift” key functions as a shift lock toggle; On is all caps, Off is all lower case • Depending on the preference set on the “prefs” setup page, space bar will place a underscore character in place of a space
245- CANCEL BUTTON	5.18.4 File name editor - (p.129)	Cancel any changes and return to the previous screen.
246- SAVE & CLOSE BUTTON	5.18.4 File name editor - (p.129)	Pressing save and close, confirms any changes, closes the project setup screens and returns to the main setup area.

5.18.5 Edit user & global wildcards

The Cinedeck system has many wildcards which can insert real-time data into your folder and file names. User wildcards answer the need for project specific data which is repeatedly required while the similar global wildcards contain data which would be used across many projects. Any text can be added to a these wildcards such as a show ID, program number, directors name, facility or department name or ID, etc. You can select wildcards with shortcut buttons at the top of the path and file name editors.

The wildcard title field is used to name a wildcard and is shown on the on-screen keyboard to identify the wildcard and the expansion is the text you want inserted in your folder or file name.

The diagram illustrates the Wildcard Management Screens, divided into two main sections: User Wildcard Management and Global Wildcard Management. Both screens feature a table with columns for 'wildcard', 'expansion', and 'title'. The User Wildcard Management screen shows wildcards %1 through %6, each with an expansion of '[none]' and a title like 'user 1' through 'user 6'. The Global Wildcard Management screen shows wildcards %A through %L, each with an expansion of '[none]' and a title like 'user 10' through 'user 15'. An on-screen keyboard is overlaid on the screens, with callouts for '250- ON SCREEN KEYBOARD - (p.132)'. A 'cancel' button is labeled '251- CANCEL BUTTON - (p.132)' and a 'save and close' button is labeled '252- SAVE & CLOSE BUTTON - (p.132)'. The top of the Global Wildcard Management screen has a menu with options: 'cones list', 'user list 1', 'user list 2', 'user list 3', and 'global wildcards'. The bottom of the Global Wildcard Management screen has 'cancel' and 'save and close' buttons.

247- TITLE - (p.132)

248- EXPANSION - (p.132)

249- VARIABLE - (p.132)

250- ON SCREEN KEYBOARD - (p.132)

251- CANCEL BUTTON - (p.132)

252- SAVE & CLOSE BUTTON - (p.132)

USER WILDCARD MANAGEMENT SCREEN

GLOBAL WILDCARD MANAGEMENT SCREEN

wildcard	expansion	title	wildcard	expansion	title
%1	[none]	user 1	%4	[none]	user 4
%2	[none]	user 2	%5	[none]	user 5
%3	[none]	user 3	%6	[none]	user 6

wildcard	expansion	title	wildcard	expansion	title
%A	[none]	user 10	%J	[none]	user 13
%B	[none]	user 11	%K	[none]	user 14
%F	[none]	user 12	%L	[none]	user 15

Project manager / Edit user & global wildcards cont...

Name	Location	Description
247- TITLE	5.18.5 Edit user & global wildcards - (p.131)	The title is the text which will be displayed on the shortcut button in the path and file name editing interfaces. These buttons are not terribly large so this text needs to be short and concise yet still give meaning. You might for example use ShowID. If you find you don't like the name you have selected, you can change this at any time.
248- EXPANSION	5.18.5 Edit user & global wildcards - (p.131)	The expansion field is where you enter the text you want inserted into your folder or file names. Using the above example, the show ID might be Ep21NY which would mean Episode 21 New York.
249- VARIABLE	5.18.5 Edit user & global wildcards - (p.131)	The % symbol and the number 1 through 6 are the variables which actually carry the expansion text so when you use %1 in a file name, the text "Ep21NY" is inserted.
250- ON SCREEN KEYBOARD	5.18.5 Edit user & global wildcards - (p.131)	The on-screen keyboard can be used with a mouse or by presses when a touch screen is available. It works in a similar fashion to a standard USB keyboard with the following exceptions: <ul style="list-style-type: none"> • The "del" key functions as backspace, deleting characters to the left of the cursor • The "clear" key deletes all text in the current field • The "shift" key functions as a shift lock toggle; On is all caps, Off is all lower case • Depending on the preference set on the "prefs" setup page, space bar will place a underscore character in place of a space
251- CANCEL BUTTON	5.18.5 Edit user & global wildcards - (p.131)	Cancel any changes and return to the previous screen.
252- SAVE & CLOSE BUTTON	5.18.5 Edit user & global wildcards - (p.131)	Pressing save and close, confirms any changes, closes the project setup screens and returns to the main setup area.

User Interface

Project manager

Edit user & global wildcards


5.18.6 Scenes list

The scenes list page is used for creating, editing, importing and exporting scenes which are name elements which can optionally be used in folder and file names. They are particularly useful in that multiple scene names can be created in advance and then, during a production, the current scene can be quickly selected by toggling through the list using keyboard shortcut keys. Projects can effectively have an unlimited number of scenes and sub-scenes. See ["5.18.7 Sub-scenes & User Lists" on page 136](#)


Each scene and sub-scene can also have metadata associated to it such as day, night, etc. This metadata is primarily meant for "slate" burn-in, an upcoming feature for automatically adding a slate at the head of each clip recording for a user defined number of frames.



Project manager / Scenes list cont...

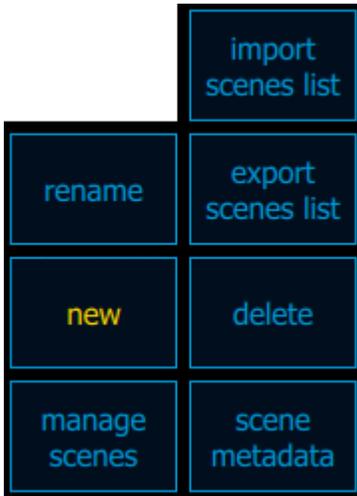Name	Location	Description
253- PAGE TABS	5.18.6 Scenes list - (p.133)	The selector tabs are always visible in the project manager setup area. These can be clicked to provide direct access to each setup section.
254- CURRENT PROJECT DISPLAY	5.18.6 Scenes list - (p.133)	The current project display indicates the selected project for which you would be managing scenes.
255- SCENES LIST	5.18.6 Scenes list - (p.133)	The scenes list displays all of the currently available scenes. The selected scene is colored and bordered orange . If you are using the scene wildcard in your folder or file naming, select a scene and then "save and close" to designate that scene as the current scene to be used in the name of the next recording. Scenes can also be selected using shortcut keys on a USB keyboard from the main multi view and single channels views. See "5.3 Keyboard shortcuts" on page 77
256- MANAGE SCENES BUTTON	5.18.6 Scenes list - (p.133)	 <p>Manage scenes provides access to;</p> <ul style="list-style-type: none"> • Creating new scenes • Deleting the selected scene • Renaming the selected scene • Exporting the current scenes list - When exporting a scenes list, you can save it in any destination and you must provide a name. Scenes lists use the .csl extension • Importing scenes list - Scenes lists are actually xml files with a .csl extension. Standard ASCII text files which contain just scene names, one on each line, with the .txt extension can also be imported.
257- SCENE METADATA	5.18.6 Scenes list - (p.133)	The scene metadata button opens a small pop-up window for selecting/changing preset scene related metadata such as slate number, day, night, etc.

Project manager / Scenes list cont...

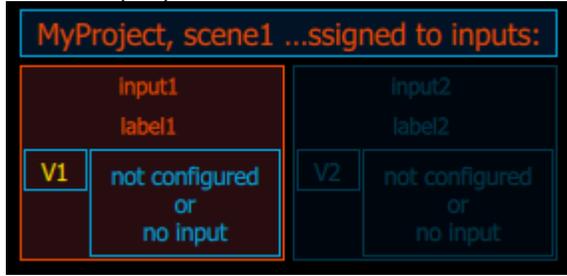Name	Location	Description
258- CHANNEL ASSIGNMENTS	5.18.6 Scenes list - (p.133)	<p>The channel assignment display shows which channels are associated to the currently selected project.</p>  <p>(Orange indicates the channel is associated to the selected project. Dim channels are assigned to other projects)</p>
259- CANCEL BUTTON	5.18.6 Scenes list - (p.133)	Cancel any changes and return to the previous screen.
260- SAVE & CLOSE BUTTON	5.18.6 Scenes list - (p.133)	Pressing save and close, confirms any changes, closes the project setup screens and returns to the main setup area.
261- SCENE LIST SCROLL	5.18.6 Scenes list - (p.133)	The scene list can display thirty scenes. If more than thirty scenes are on in a project, the scene list scroll arrows will be available to scroll the list left and right.

5.18.7 Sub-scenes & User Lists

In addition to scenes, project manager provides sub-scenes and user lists, all name elements to optionally use in folder and file names. The layout and usage of the user lists and the sub-scenes list is identical to the scenes list except that user lists do not have any metadata options. Like scenes, sub-scenes and user lists can be created in advance and then used during production.

The metadata for sub-scenes (not user lists) is primarily meant for "slate" burn-in, an upcoming feature for automatically adding a slate at the head of each clip recording for a user defined number of frames. Each scene in a project can effectively have an unlimited number of sub-scenes.

253- PAGE TABS - (p.134)

254- CURRENT PROJECT DISPLAY - (p.134)

255- SCENES LIST - (p.134)

256- MANAGE SCENES BUTTON - (p.134)

257- SCENE METADATA - (p.134)

258- CHANNEL ASSIGNMENTS - (p.135)

259- CANCEL BUTTON - (p.135)

260- SAVE & CLOSE BUTTON - (p.135)

261- SCENE LIST SCROLL - (p.135)

USER LISTS

project manager path & filename templates scenes list sub-scenes list user list 1 user list 2 user list 3 global wildcards

DemoShow sub-scenes

sub1 sub2 sub3

new sub-scene = Ctrl+N
rename sub-scene = Ctrl+R

manage sub-scenes sub-scene metadata

DemoShow, scene 2 & sub1 currently assigned to inputs:

input1 label1	input2 label2
not configured or no input	not configured or no input

cancel save and close


Note: 257- scene metadata - (p.134)

5.19 Input tab

The input page is the first real setup screen in the left to right setup sequence and the settings you change here are for all channels associated to the current project. If you have all channels associated to the current project, you will just do this once. Otherwise, you will perform these steps for each project.

To begin setup, your cables should already be connected;

Press "auto detect" - This will provide initial input settings. You can then make fine adjustments such as selecting 10bit if you know you have 10bit source and select your audio source; SDI, AES, Analog. See the specific control descriptions for details.

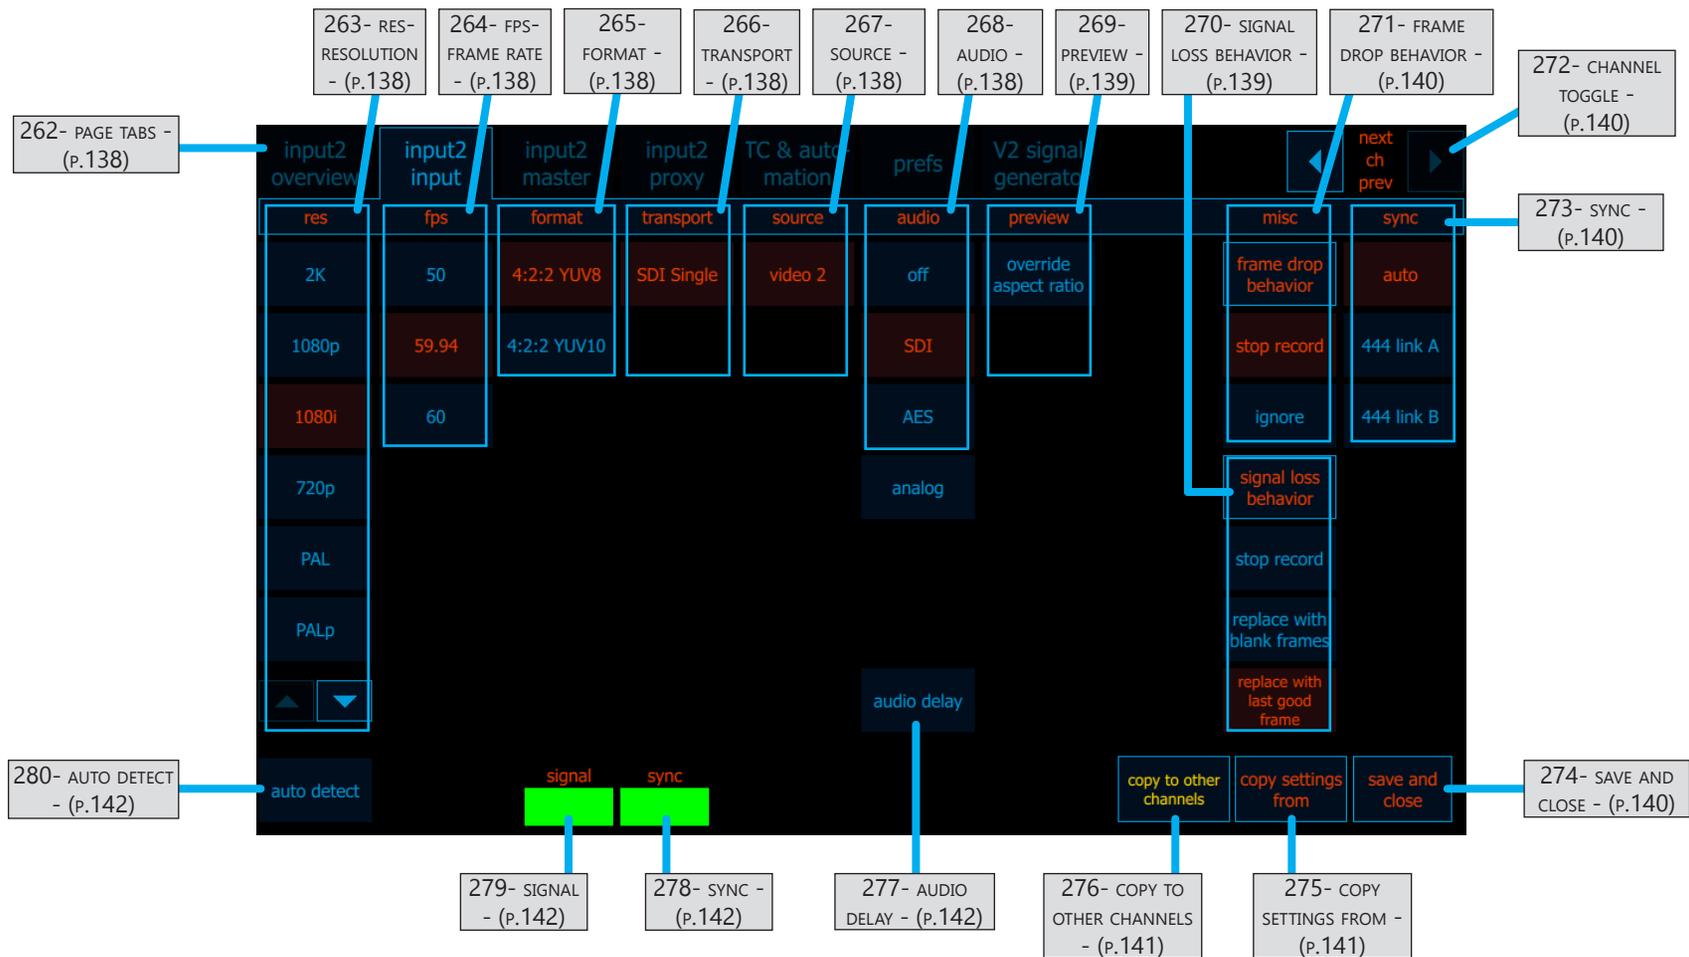

Input tab / - cont...

Name	Location	Description
262- PAGE TABS	5.19 Input tab - (p.137)	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.
263- RES-RESOLUTION	5.19 Input tab - (p.137)	You can view and select the input resolution in this vertical listing. When you selected "auto detect" the input resolution should have been detected and a green lamp should be illuminated at the bottom of the screen. If not, confirm that there is actually a signal and that the BNC connection is good. For situations where you do not yet have an active source, you can manually select the appropriate resolution.
264- FPS-FRAME RATE	5.19 Input tab - (p.137)	Cinedecks support all standard video frame rates and as with resolution, this too should have been detected by "auto detect".
265- FORMAT	5.19 Input tab - (p.137)	The format or color bit depth can be adjusted as needed however do keep in mind that not all codecs support all bit depths. For example, although your video source may be 10bit, if you plan to encode XDCAM HD, this must remain as 8bit as XDCAM HD is an 8bit only codec.
266- TRANSPORT	5.19 Input tab - (p.137)	The input type or signal transport should also have been detected and will normally be SDI however this too can be adjusted to your specific needs and different settings will be available in different modes.
267- SOURCE	5.19 Input tab - (p.137)	Displays the local input number based on the system mode, ie, 1.5g, Dual Link, etc.
268- AUDIO	5.19 Input tab - (p.137)	Audio source can be switched between off, SDI, AES and on some systems, Analog. Cinedecks support up to 16 channels of embedded SDI audio, 8 AES channels for each video pair and analog audio can be sourced from the rear mounted motherboard line-level mini jack or a Focusrite 2i2 Analog > USB adapter.



Input tab / - cont...

Name	Location	Description
269- PREVIEW	5.19 Input tab - (p.137)	 <p>The preview setting drives two distinctly different functions.</p> <ol style="list-style-type: none"> 1) It forces the CineDeck user interface video preview to format the displayed image with a particular aspect ratio. 2) When recording, it sets a flag in the recorded file to tell systems such as editors that the content is actually that aspect ratio. <p>Both of these are particularly useful when working with SD video that is 16x9 and not 4x3.</p>
270- SIGNAL LOSS BEHAVIOR	5.19 Input tab - (p.137)	<p>It is also possible that during a session, the video input will be lost. This is also most commonly caused by external factors such as a broken cable, power being lost at the source equipment, unstable or uncontrolled satellite sources and so on.</p> <p>You can also select the behavior in the case of lost video;</p> <p>The recording can be stopped which might be used in a monitored situation where there are many incoming lines and only a few source devices.</p> <p>More common however would be to force the recording to continue so images will immediately be recorded when the picture is restored.</p> <p>In this case you can select to record black while there is no source or to record a freeze frame of the last good captured frame.</p> <p>The recommended setting is black to make it clear to any observer that there is no useful signal being recorded.</p>

Input tab / - cont...

Name	Location	Description
271- FRAME DROP BEHAVIOR	5.19 Input tab - (p.137)	<p>On a system that is running properly in a good environment it should not happen but it is possible that during a session a frame of video will be lost. Although not common with a clean system, dropped frames can be caused by many factors. The most common are external such as poor video cables and connections, unstable video sources, power surges and dirty power, unstable sync and so on. It is also possible that the Cinedeck has a more local issue such as a storage problem, failing I/O card or a card which has worked itself loose in transport.</p> <p>You have an option as to how you want your Cinedeck to respond if a dropped frame is detected, it can stop recording or not.</p> <p>It is generally recommended to set the system to "ignore". You will still receive a warning so can always manually stop but in general, one dropped frame should not halt a production.</p>
272- CHANNEL TOGGLE	5.19 Input tab - (p.137)	<p>The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.</p>
273- SYNC	5.19 Input tab - (p.137)	<p>Cinedecks are capable of using tri-level or black burst reference or sync sources. When set to "auto" and no external reference is connected, the system will lock to the incoming video source.</p> <p>When set to auto and there is either tri-level sync or black burst, the system will lock to the external source and the "sync" light on the main display will light green, indicating a external reference is in use.</p> <p>Additionally, for using the input a reference when the source is dual-link, the user can manually select whether the A input or B input should be used as the reference source.</p>
274- SAVE AND CLOSE	5.19 Input tab - (p.137)	<p>Pressing save and close, confirms any changes, closes the setup screens and returns to the previous multi or single channel view.</p>

Input tab / - cont...

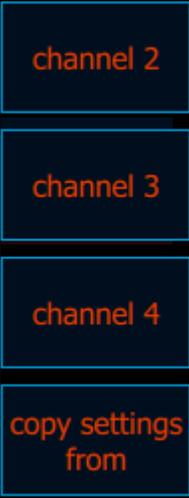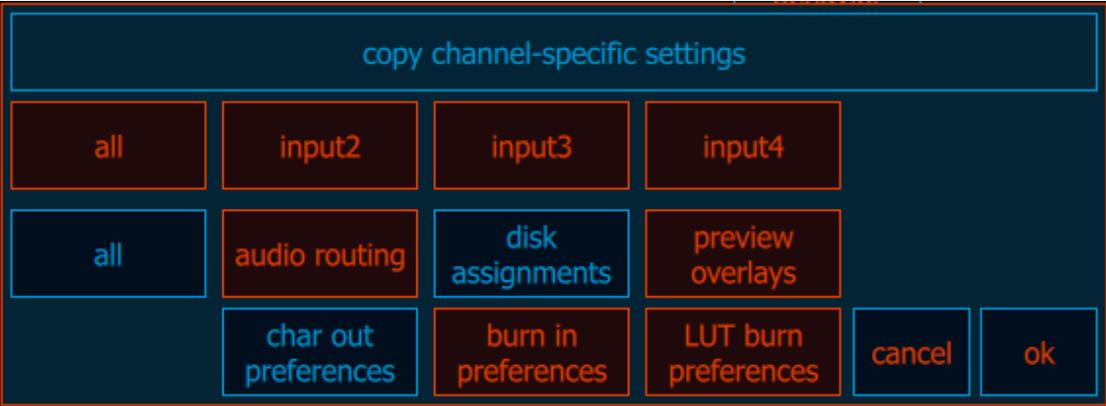Name	Location	Description
275- COPY SETTINGS FROM	5.19 Input tab - (p.137)	 <p>channel 2 channel 3 channel 4 copy settings from</p> <p>"copy settings from" provides a quick process for duplicating the settings from one channel to the currently selected channel. This method is essentially the reverse of the more flexible "copy settings to other channels", the description of which follows.</p>
276- COPY TO OTHER CHANNELS	5.19 Input tab - (p.137)	 <p>copy channel-specific settings</p> <p>all input2 input3 input4 all audio routing disk assignments preview overlays char out preferences burn in preferences LUT burn preferences cancel ok</p> <p>"copy to other channels" opens this sub-menu which allows copying or pushing, channel independent settings such as audio channel selection & routing and file destination drive, from the selected channel to one or more other channels. In the above image, the orange highlighted channel 1 settings will be copied to channels 2, 3 and 4. If for example, you also wanted to copy drive destinations from channel 1, you would press disk assignments to include them.</p>

Input tab / - cont...

Name	Location	Description
277- AUDIO DELAY	5.19 Input tab - (p.137)	It is not uncommon to route the source video through one or more processing systems before directing it to the recorder. Each step along the way can significantly delay the arrival of the video at the recorder. In contrast, the audio may not be processed at all. This can result in a noticeable timing difference between the video and audio. While technically a video issue, correcting it requires delaying the audio. The Cinedeck has the ability to independently delay each incoming audio channel by up to 999 milliseconds (about one second). The "audio delay" button opens an audio delay overview screen where each audio channel can be delayed. Divide 1000 by your frame rate to determine the needed per frame millisecond delay. See "5.19.1 Audio delay" on page 143 .
278- SYNC	5.19 Input tab - (p.137)	The sync lamp will be green when the Cinedeck detects an appropriate reference signal at the sync connection.
279- SIGNAL	5.19 Input tab - (p.137)	The signal lamp will be green when the Cinedeck detects an appropriate input signal.
280- AUTO DETECT	5.19 Input tab - (p.137)	When pressed, the channel input will automatically be configured for the source.

5.19.1 Audio delay

Each incoming audio channel can be independent delayed by up to 999 milliseconds (about one second). Clicking on the delay display below each channel opens the audio delay interface. Click the arrows to increment or type the required delay in the ms field.

The screenshot shows the 'input1 audio delay' interface. At the top, there are navigation arrows and 'next ch' / 'prev' buttons. Below are 16 vertical level meters for audio inputs, labeled 'Input 1' through '16'. Below each meter is a 'delay (ms)' display, currently showing '00'. A 'save/back' button is in the bottom right. A yellow warning 'delay affect recording!!!' is at the bottom center. Callouts point to 'CHANNEL DISPLAY', 'AUDIO INPUTS', 'CHANNEL DELAY DISPLAY', and 'INCREMENT ARROWS'.

This close-up shows the 'audio input delay' interface. It features a large '0 ms' display with a blue cursor over the '0'. Below it is the text 'affects recorded files!!!'. To the right are two blue arrows for incrementing. Below the arrows is a numeric keypad with buttons for 1-9, 'clear', '0', and 'del'. Callouts point to 'MS DELAY FIELD' and 'INCREMENT ARROWS'.

1000 divided by your frame rate determines the per-frame millisecond delay.

Frame Rate	Delay / Frame
23.98	41.70141785
24	41.66666667
25	40
29.97	33.36670003
30	33.33333333
50	20
59.94	16.68335002
60	16.66666667

5.20 Master tab

The master page is where you set all of the master file encode parameters such as codec, wrapper, timecode source, etc. To do so it is very important to understand the difference between the codec, the quality or bit rate and the wrapper. See ["10.1 FAQ > Features" on page 282](#).

Generally you make selections starting at the left as each selection can have a filtering effect on the available options.

See the screen shots on this and the next page to locate specific controls.

The screenshot shows the Master tab interface with various controls and callouts:

- 281- PAGE TABS - (p.146)**: Points to the top navigation tabs: input2 overview, input2 input, input2 master, input2 proxy, TC & automation, prefs, V2 signal generato, next ch, prev.
- 282- CODEC - (p.146)**: Points to the codec dropdown menu.
- 283- QUALITY - (p.146)**: Points to the quality dropdown menu.
- 284- WRAPPER - (p.147)**: Points to the wrapper dropdown menu.
- 285- AUDIO - (p.147)**: Points to the audio dropdown menu.
- 286- TIMECODE - (p.148)**: Points to the TC dropdown menu.
- 287- SEGMENT - (p.148)**: Points to the segment dropdown menu.
- 288- WRITE - (p.149)**: Points to the write dropdown menu.
- 289- PRIMARY - (p.149)**: Points to the primary project path override dropdown menu.
- 290- SECONDARY - (p.149)**: Points to the secondary project path override dropdown menu.
- 291- CHANNEL TOGGLE - (p.149)**: Points to the next ch and prev buttons.
- 292- VIDEO BURN - (p.149)**: Points to the video burn dropdown menu.
- 293- CLOSED CAPTIONS - (p.149)**: Points to the closed captions dropdown menu.
- 294- VBR ENABLE - (p.150)**: Points to the VBR enable checkbox.
- 295- ENDIAN TYPE - (p.150)**: Points to the Endian Type dropdown menu.
- NOT ALL CINEDECK SYSTEMS HAVE ALL MASTER CODECS AND WRAPPERS**: A yellow box pointing to the codec and wrapper options.
- ! Windows assigns drive letters at startup. Confirm destination drives before each session.**: A red-bordered box pointing to the project path override options.
- ! See next page for additional controls.**: A red-bordered box at the bottom center.

The interface includes a grid of controls for codec, quality, wrapper, audio, TC, segment, write, primary, secondary, and video burn. It also features a grid for audio channels (1-32) and a grid for TC channels (1-32). The bottom of the interface has buttons for 'copy to other channels' and 'save and close'.

Master tab / - cont...

The upper portion of the master page contains the key settings for your master encode while the lower half adds several modifiers and utility functions.

! See previous page for additional controls.

The screenshot shows the Master tab interface with the following settings and callouts:

- 296- ENCODER ENABLE - (p.150)**: Callout to the 'encoder enable' button, which is currently set to 'enabled'.
- 297- USE MXF CLIP FOLDERS - (p.150)**: Callout to the 'use MXF clip folders' button, which is currently disabled.
- 298- ENCODER NAME - (p.150)**: Callout to the 'encoder name' field, which is currently set to '[none]'.
- 299- USE RECORD TC OFFSET - (p.150)**: Callout to the 'use record TC offset' button, which is currently disabled.
- 300- RECORD MODE - (p.150)**: Callout to the 'record mode' button, which is currently set to 'normal'.
- 301- COPY TO OTHER CHANNELS - (p.151)**: Callout to the 'copy to other channels' button, which is currently disabled.
- 302- SAVE AND CLOSE - (p.151)**: Callout to the 'save and close' button, which is currently disabled.
- 303- GENERATE XML - (p.151)**: Callout to the 'generate XML' button, which is currently disabled.

User Interface
Master tab

Master tab / - cont...

Name	Location	Description
281- PAGE TABS	5.20 Master tab - (p.144)	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.
282- CODEC	5.20 Master tab - (p.144)	<p>A great Cinedeck feature is native codec recording and workflow flexibility but selecting the right codec for the workflow is critical. There are no defaults and every codec has its advantages and disadvantages. If you do not know what edit system will be used or which codec is required, a fairly safe bet will be ProRes or DNxHD but really, you need to stop and consult with whomever will be editing the files.</p> <p>To select a codec, simply touch the one you need. If the required codec does not appear to be in the list, there may be more that will be visible if you use the arrows or your mouse scroll wheel to move through the list. Additionally, it is important to understand that the input format has an impact on what encoding is available. Not all codecs support all input types and frame rates so again, it is important to know the full workflow. See "10.1 FAQ > Features" on page 282.</p> <p>It should be noted that Cinedecks support most commonly used codecs but not all Cinedeck systems have all codecs. This is especially true for ZX which is a modular system, often purchased with a limited set of codecs. Additional workflow packages with additional codecs and wrappers are available.</p>
283- QUALITY	5.20 Master tab - (p.144)	<p>Once you have selected your desired codec, you usually need to select a quality level or bitrate. This will not be the case, for example if you select uncompressed as there is only one quality for uncompressed.</p> <p>Cinedeck encoders use the most common designations for encode quality so you should find the options familiar. Select the appropriate quality setting and move on to select a wrapper.</p> <p>If the only information visible in this column is "not available" it is because the input you are using is not supported by the selected codec. This is because, not all codecs and wrappers support all input types and frame rates so again, it is important to know the full workflow. See "10.4. What is bitrate/quality:" on page 283</p>

Master tab / - cont...

Name	Location	Description																																																																
284- WRAPPER	5.20 Master tab - (p.144)	<p>Last of the basic encode selections is the wrapper and again, Cinedecks support those most commonly used in production workflows.</p> <p>Again it is best to confirm the requirements with whomever will be editing but some generalizations can be made;</p> <p>If you are working in an Avid post environment, you would normally select "Avid MXF" as these files are wrapped in Avid's native OpAtom MXF.</p> <p>If you are working in Final Cut, you will normally want MOV wrapped files and MOV mono is generally the most useful for an edit environment.</p> <p>If you are working in an Adobe environment you might prefer MXF Op1a but MOV is also very common.</p> <p>For more information, see "10.2. What is a codec:" on page 282</p>																																																																
285- AUDIO	5.20 Master tab - (p.144)	<div data-bbox="730 695 905 1417" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; color: orange; font-weight: bold;">8ch SDI</p> <table border="1" style="width: 100%; text-align: center; border-collapse: collapse;"> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td></tr> <tr><td>9</td><td>10</td><td>11</td><td>12</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>13</td><td>14</td><td>15</td><td>16</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>17</td><td>18</td><td>19</td><td>20</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>21</td><td>22</td><td>23</td><td>24</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>25</td><td>26</td><td>27</td><td>28</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>29</td><td>30</td><td>31</td><td>32</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> </div> <p>This matrix view displays the number of audio channels selected for recording and indicates the source and destination audio channels. If the matrix is gray, the audio source selection on the input page is off.</p> <p>While SDI only supports 16 channels, some files can support up to 32 audio tracks, hence the encode settings give you direct access for creating those tracks. These tracks can be inserted into at a later point using Cinedeck's Insert-Edit.</p> <p>Click the matrix to open and adjust audio track selections and routing.</p> <p>Basically, the upper meters in the router matrix editor show the incoming audio channels for the selected source. The boxes below each channel indicate the destination tracks. Click a box below the channel 1 meter to select a source track for channel 1 and so on.</p> <p>For more detail, see "5.22 Audio routing" on page 159</p>	1	2	3	4	1	2	3	4	5	6	7	8	5	6	7	8	9	10	11	12	-	-	-	-	13	14	15	16	-	-	-	-	17	18	19	20	-	-	-	-	21	22	23	24	-	-	-	-	25	26	27	28	-	-	-	-	29	30	31	32	-	-	-	-
1	2	3	4																																																															
1	2	3	4																																																															
5	6	7	8																																																															
5	6	7	8																																																															
9	10	11	12																																																															
-	-	-	-																																																															
13	14	15	16																																																															
-	-	-	-																																																															
17	18	19	20																																																															
-	-	-	-																																																															
21	22	23	24																																																															
-	-	-	-																																																															
25	26	27	28																																																															
-	-	-	-																																																															
29	30	31	32																																																															
-	-	-	-																																																															

Master tab / - cont...

Name	Location	Description							
286- TIMECODE	5.20 Master tab - (p.144)	<p>There are several possible timecode options for your recording.</p> <ul style="list-style-type: none"> • Select "SDI" if you want to use the timecode coming into the recorder embedded in the video. • Select "LTC" 1-2 (linear time code) to use a house time code source connected to the LTC 1-2 input BNC connector. On 4 channel machines channels 3 and 4 would use the LTC 3-4 input BNC connector. • Select "master LTC" to use house timecode on the master LTC BNC connection. (Note; the master LTC input connection is optional on RX and ZX) • Select "gen" to use internally generated timecode. <p>See "5.24 TC & Automation tab" on page 166 for details on setting the timecode generator.</p>							
287- SEGMENT	5.20 Master tab - (p.144)	<table border="1" data-bbox="730 711 905 1414"> <tr><td>segment</td></tr> <tr><td>off</td></tr> <tr><td>increment</td></tr> <tr><td>duration 00:01:00:00</td></tr> <tr><td>#of segments no limit</td></tr> <tr><td>manual break</td></tr> <tr><td>TC break</td></tr> </table> <p>Some workflows, especially those with very long recording times, can benefit from breaking recordings into smaller files.</p> <div data-bbox="928 846 1841 1073" style="border: 1px solid gray; padding: 5px;"> <p>SOME IMPORTANT DETAILS: A SEGMENT IS A CLOSED, FULLY SELF CONTAINED FILE. SEGMENTED FILE NAMING INCLUDES AUTOMATIC NUMBERING TO INDICATE THE RELATION TO OTHER SEGMENTS. TIMECODE CONTINUITY IS MAINTAINED BETWEEN SEGMENTS MEANING, THE TIMECODE OF EACH SEGMENT STARTS ON THE NEXT FRAME AFTER THE PREVIOUS SEGMENT BREAKING FILES CAN BE USEFUL FOR MAKING CONTENT WHILE RECORDING IS STILL PROCEEDING, WHEN FILES ARE EVENTUALLY DESTINED FOR DRIVES WHICH HAVE FILE SIZE LIMITS, TO PROTECT CONTENT IN THE CASE OF MAJOR SYSTEM FAILURES.</p> </div> <ul style="list-style-type: none"> • Select "increment" to break files at pre-determined time intervals. Click on "duration" to open the on-screen panel and set the clip segment length. The shortest interval possible is 30 seconds. <i>If you set a limit to the number of segments, recording will stop when the segment count reaches the preset amount.</i> • Select "manual break" to allow manual breaking of files by pressing the break button on the main screen. The break button replaces the record button after recording starts. • Select "TC break" to have the system automatically generate a new file at any incoming timecode break. 	segment	off	increment	duration 00:01:00:00	#of segments no limit	manual break	TC break
segment									
off									
increment									
duration 00:01:00:00									
#of segments no limit									
manual break									
TC break									

Master tab / - cont...

Name	Location	Description
288- WRITE	5.20 Master tab - (p.144)	<p>There are several options for writing media files;</p> <ul style="list-style-type: none"> • "Single" writes the selected encode to a single destination drive • "Redundant" writes the selected encode to two drives simultaneously • "Rollover" writes the selected encode to the first selected drive and when that destination is full, it switches to the second selected destination drive. <p>See "10.48. Redundant Files:" on page 292 See "10.51. Roll-over Recording:" on page 293</p>
289- PRIMARY	5.20 Master tab - (p.144)	<p>At a minimum, "single" (see "write" above) and a primary drive must be selected for an encode to be created. This column can display many destination drives. If your preferred destination is not visible, additional drives can be moved into view with the selection up/down arrows.</p> <p>Alternatively, you can select a drive with a preexisting folder structure and override the project folder path structure (See "5.18.1 Path & file names explained" on page 121) To override project settings and manually select a drive and destination path; Press "project path override" at the top of the drive list Navigate to the desired drive and folder Press "save" to return to the master encode setup page.</p>
290- SECONDARY	5.20 Master tab - (p.144)	<p>For redundant recording, both primary and secondary destination drives must be selected. If your preferred destination is not visible, additional drives can be moved into view with the selection up/down arrows and note that any drive already selected as the primary destination, will not be available.</p> <p>As with the primary files, "project path override" is also available for secondary files.</p>
291- CHANNEL TOGGLE	5.20 Master tab - (p.144)	<p>The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.</p>
292- VIDEO BURN	5.20 Master tab - (p.144)	<p>Burn-in is primarily used on proxy files though in some cases it is also possible to apply a character burn-in to a master file.</p> <p>For additional information see "5.23 Video Burn Settings" on page 163.</p> <p>Remember, a burn-in is a permanent part of the video and can not be removed!</p>
293- CLOSED CAPTIONS	5.20 Master tab - (p.144)	<p>This toggles capture of close caption data on and off.</p> <p>Closed caption data capture is only available for MOV wrapped encodes.</p>


Master tab / - cont...

Name	Location	Description
294- VBR ENABLE	5.20 Master tab - (p.144)	Some codecs available on the Cinedeck can be encoded as either VBR (variable bit rate) or CBR (constant bit rate). This can be an important selection so if available, you should confirm with whomever will be editing or further processing the files when recording is complete. This setting will only be visible when a VBR codec is selected. See "10.4. What is bitrate/quality:" on page 283
295- ENDIAN TYPE	5.20 Master tab - (p.144)	Endian type refers to the byte order of multi-byte PCM audio samples. Big means the data is stored big-end first, little (the more common of the two) means the data is stored little-end first. Unless you know big endian is needed, leave this set to little.
296- ENCODER ENABLE		Each master and proxy encoder can be independently enabled or disabled as needed. If there is no requirement for a particular master or proxy encode, this is the way to disregard it.
297- USE MXF CLIP FOLDERS	5.20 Master tab - (p.144)	When recording OpAtom which creates independent files for each video and audio track, you have the option of placing all the files in a single folder or, for organizational purposes, placing the clips for each start/stop in separate folders. The default is to use a single folder. Note that recording to separate folders also means loading clips separately for playback.
298- ENCODER NAME	5.20 Master tab - (p.144)	Like the "name" and "label" fields, editable on the overview page, "encoder name" reflects the encoder name variable or wild-card displayed in the page tab bar. The encoder name wild-card can also be used in folder and file names. The default names in 4 channel mode are master and proxy but as with all the variables, they can be changed to meet your specific requirements. Click "encoder name" to open an on-screen keyboard to change the name.
299- USE RECORD TC OFFSET	5.20 Master tab - (p.144)	Record timecode offset provides an easy way to adjust or reset the incoming timecode but unlike generating new timecode, the recorded timecode remains based on the source timecode, keeping all of the breaks and changes. For example, your source may be arriving with timecode starting at 0:00 but because it is the fourth in a set, you want it to start at hour 4. With this setting you can apply a 4 hour offset. Another example might be a source which was recorded with time of day in a different timezone and you want the timecode to reflect GMT or your local time zone. Record timecode offset can be set independently for master and proxy encodes.
300- RECORD MODE	5.20 Master tab - (p.144)	The record mode toggle switches between "normal" and "pause" record mode. See "10.40. Pause Record:" on page 290

Master tab / - cont...

User Interface

Master tab

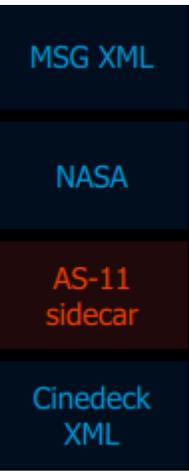Name	Location	Description
301- COPY TO OTHER CHANNELS	5.20 Master tab - (p.144)	 <p>"copy to other channels" opens this sub-menu which allows copying channel independent settings such as audio channels & routing from the selected channel to one or more other channels. In the above image, the orange highlighted channel 1 settings will be copied to channels 2, 3 and 4. If for example, you also wanted to copy drive destinations from channel 1, you would press "disk assignments" to include them. Master settings are copied to masters, proxy settings are copied to proxies.</p>
302- SAVE AND CLOSE	5.20 Master tab - (p.144)	Pressing save and close, confirms any changes, closes the setup screens and returns to the previous multi or single channel view.
303- GENERATE XML	5.20 Master tab - (p.144)	 <p>Each recording session can be accompanied by clip specific *.xml files. The completed *.xml files contain clip specific metadata which can be imported into asset managements systems and the like. After selecting an xml type, xml path override can be selected to designate a specific destination folder for the xml files.</p> <ul style="list-style-type: none"> • MSG xml generates an xml format for use by MSG • NASA is a format for use at for NASA's Orion launch system. • AS-11 sidecar generates a AS-11 compatible xml • Cinedeck xml generates a full generic xml with all data

5.21 Proxy tab

The proxy page is where you set all of the proxy file encode parameters such as codec and wrapper. Note although visible, some of the encode settings made for the master such as timecode, control the proxy encode so cannot be changed on this page.

User Interface

Proxy tab

The screenshot shows the Proxy tab interface with various settings and callouts:

- 304- PAGE TABS - (p.153)**: Points to the top navigation tabs: input2 overview, input2 input, input2 master, input2 proxy, TC & automation, prefs, V2 signal generator, and next ch prev.
- 305- CODEC - (p.153)**: Points to the codec dropdown menu.
- 306- QUALITY - (p.153)**: Points to the quality dropdown menu.
- 307- WRAPPER - (p.154)**: Points to the wrapper dropdown menu.
- 308- AUDIO - (p.154)**: Points to the audio dropdown menu.
- 309- TIMECODE - (p.154)**: Points to the TC dropdown menu.
- 310- SEGMENT - (p.154)**: Points to the segment dropdown menu.
- 311- WRITE - (p.155)**: Points to the write dropdown menu.
- 312- PRIMARY - (p.155)**: Points to the primary dropdown menu.
- 313- SECONDARY - (p.155)**: Points to the secondary dropdown menu.
- 314- CHANNEL TOGGLE - (p.155)**: Points to the next ch prev buttons.
- 315- VIDEO BURN - (p.155)**: Points to the video burn section.
- 316- LUT - (p.156)**: Points to the LUT section.
- 317- SAVE AND CLOSE - (p.156)**: Points to the save and close button.
- 318- COPY TO OTHER CHANNELS - (p.156)**: Points to the copy to other channels button.
- 319- GENERATE XML - (p.157)**: Points to the generate XML button.
- 320- USE RECORD TC OFFSET - (p.157)**: Points to the use record TC offset button.
- 321- ENCODER NAME - (p.157)**: Points to the encoder name field.
- 322- VBR ENABLE - (p.157)**: Points to the VBR enable checkbox.
- 323- ENDIAN TYPE - (p.158)**: Points to the Endian Type dropdown menu.
- 324- USE MXF CLIP FOLDERS - (p.158)**: Points to the use MXF clip folders checkbox.
- 325- ENCODER ENABLE - (p.158)**: Points to the encoder enable checkbox.

NOT ALL CINEDECK SYSTEMS HAVE ALL PROXY CODECS AND WRAPPERS

! Windows assigns drive letters at startup. Confirm destination drives before each session.

Proxy tab / - cont...

Name	Location	Description
304- PAGE TABS	5.21 Proxy tab - (p.152)	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.
305- CODEC	5.21 Proxy tab - (p.152)	<p>An advantage of Cinedeck is native codec recording and workflow flexibility but selecting the right codec for the proposed workflow is critical. There are no defaults and every codec has its advantages and disadvantages. If you do not know what edit system will be used or which codec is required, a fairly safe bet will be ProRes or DNxHD but really, you need to stop and find out what is needed.</p> <p>To select a codec, simply touch the one you need. If the required codec does not appear to be in the list, there may be more that will be visible if you use the arrows or your mouse scroll wheel to move through the list. Additionally, it is important to understand that the input format has an impact on what encoding is available. Not all codecs support all input types and frame rates so again, it is important to know the full workflow. See "10.1 FAQ > Features" on page 282.</p> <p>It should be noted that Cinedecks support most commonly used codecs but not all Cinedeck systems have all codecs. This is especially true for ZX which is a modular system, often purchased with a limited set of codecs. Additional workflow packages with additional codecs and wrappers are available.</p>
306- QUALITY	5.21 Proxy tab - (p.152)	<p>Once you have selected your desired codec, you usually need to select a quality level or bitrate. Cinedeck encoders use the most common designations for encode quality so you should find the options familiar. Select the appropriate quality setting and move on to select a wrapper. If the only information visible in this column is "not available" it is because the input you are using is not supported by the selected codec. This is because, not all codecs and wrappers support all input types and frame rates so again, it is important to know the full workflow. See "10.4. What is bitrate/quality:" on page 283</p>

Proxy tab / - cont...

Name	Location	Description																																																																
307- WRAPPER	5.21 Proxy tab - (p.152)	<p>Last of the encode selections is the wrapper and again, Cinedecks support those most commonly used in production workflows.</p> <p>Again it is better to confirm the requirements with whomever will be editing but some generalizations can be made;</p> <p>If you are working in an Avid post environment, you would normally select "Avid MXF" as these files are wrapped in Avid's OpAtom MXF.</p> <p>If you are working in Final Cut you will normally want MOV wrapped files.</p> <p>If you are working in an Adobe environment, MOV is also very common.</p> <p>For more information, see "10.2. What is a codec:" on page 282</p>																																																																
308- AUDIO	5.21 Proxy tab - (p.152)	<div style="display: flex; align-items: flex-start;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> <p style="text-align: center; color: orange; margin: 0;">8ch SDI</p> <table border="1" style="width: 100%; text-align: center; border-collapse: collapse;"> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td></tr> <tr><td>9</td><td>10</td><td>11</td><td>12</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>13</td><td>14</td><td>15</td><td>16</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>17</td><td>18</td><td>19</td><td>20</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>21</td><td>22</td><td>23</td><td>24</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>25</td><td>26</td><td>27</td><td>28</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>29</td><td>30</td><td>31</td><td>32</td></tr> <tr><td>-</td><td>-</td><td>-</td><td>-</td></tr> </table> </div> <div> <p>This matrix view displays the number of audio channels selected for recording and indicates the source and destination audio channels. If the matrix is gray, the audio source selection on the input page is off.</p> <p>While SDI only supports 16 channels, some files can support up to 32 audio tracks, hence the encode settings give you direct access for creating those tracks. These tracks can be inserted into at a later point using Cinedeck's Insert-Edit.</p> <p>Click the matrix to open and adjust audio track selections and routing.</p> <p>Basically, the upper meters in the router matrix editor show the incoming audio channels for the selected source. The boxes below each channel indicate the destination tracks. Click a box below the channel 1 meter to select a source track for channel 1 and so on.</p> <p>For more detail, see "5.22 Audio routing" on page 159</p> </div> </div>	1	2	3	4	1	2	3	4	5	6	7	8	5	6	7	8	9	10	11	12	-	-	-	-	13	14	15	16	-	-	-	-	17	18	19	20	-	-	-	-	21	22	23	24	-	-	-	-	25	26	27	28	-	-	-	-	29	30	31	32	-	-	-	-
1	2	3	4																																																															
1	2	3	4																																																															
5	6	7	8																																																															
5	6	7	8																																																															
9	10	11	12																																																															
-	-	-	-																																																															
13	14	15	16																																																															
-	-	-	-																																																															
17	18	19	20																																																															
-	-	-	-																																																															
21	22	23	24																																																															
-	-	-	-																																																															
25	26	27	28																																																															
-	-	-	-																																																															
29	30	31	32																																																															
-	-	-	-																																																															
309- TIMECODE	5.21 Proxy tab - (p.152)	Displays the timecode selected on the master page.																																																																
310- SEGMENT	5.21 Proxy tab - (p.152)	Displays the segment mode selected on the master page.																																																																

Proxy tab / - cont...

Name	Location	Description
311- WRITE	5.21 Proxy tab - (p.152)	<p>There are several options for writing media files;</p> <ul style="list-style-type: none"> • "Single" writes the selected encode to a single destination drive • "Redundant" writes the selected encode to two drives simultaneously • "Rollover" writes the selected encode to the first selected drive and when that destination is full, it switches to the second selected destination drive. <p>See "10.48. Redundant Files:" on page 292 See "10.51. Roll-over Recording:" on page 293</p>
312- PRIMARY	5.21 Proxy tab - (p.152)	<p>At a minimum, "single" (see "write" above) and a primary drive must be selected for an encode to be created. This column can display many destination drives. If your preferred destination is not visible, additional drives can be moved into view with the selection up/down arrows.</p> <p>Alternatively, you can optionally select a drive with a preexisting folder structure and override the folder path structure designed in "5.18.1 Path & file names explained" on page 121, in the project manager. To select a drive and destination path; Press "project path override" at the top of the drive list Navigate to the desired drive and folder Press "save" to return to the master encode setup page.</p>
313- SECONDARY	5.21 Proxy tab - (p.152)	<p>For redundant recording both primary and a secondary destination drives must be selected. If your preferred destination is not visible, additional drives can be moved into view with the selection up/down arrows and note that any drive already selected as the primary destination will not be visible.</p> <p>"project path override" is also available for the redundant files.</p>
314- CHANNEL TOGGLE	5.21 Proxy tab - (p.152)	<p>The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.</p>
315- VIDEO BURN	5.21 Proxy tab - (p.152)	<p>It is possible to apply a character burn-in to proxy files during recording. The burn-in can be timecode, system time, file name, etc. To apply a character burn, enable burns and follow the prompts. Press setup to customize the selection and position.</p> <p>For additional information see "5.23 Video Burn Settings" on page 163.</p> <p>Remember, a burn-in is a permanent part of the video and can not be removed!</p>

Proxy tab / - cont...

Name	Location	Description
316- LUT	5.21 Proxy tab - (p.152)	LUT is an on/off toggle to record files with or without LUT based color correction. Press setup to navigate to the drive / folder to select your saved LUT file. See "5.6 Settings - exporting / importing" on page 85 LUT correction is a permanent part of the video and can not be removed!
317- SAVE AND CLOSE	5.21 Proxy tab - (p.152)	Pressing save and close, confirms any changes, closes the setup screens and returns to the previous multi or single channel view.
318- COPY TO OTHER CHANNELS	5.21 Proxy tab - (p.152)	 <p>"copy to other channels" opens this sub-menu which allows copying channel encode independent settings such as audio channel selection & routing and file destination drive from the selected channel and encoder to one or more other channels. In the above image, the orange highlighted channel 1 settings will be copied to channels 2, 3 and 4. If for example, you also wanted to copy drive destinations from channel 1, you would press disk assignments to include them. Master settings are copied to masters and proxy settings are copied to proxy settings.</p>

Proxy tab / - cont...

Name	Location	Description
319- GENERATE XML	5.21 Proxy tab - (p.152)	<div style="display: flex; align-items: center;"> <div style="background-color: #1a2b3c; color: white; padding: 5px; margin-right: 10px;">MSG XML</div> <div style="background-color: #1a2b3c; color: white; padding: 5px; margin-right: 10px;">NASA</div> <div style="background-color: #800000; color: orange; padding: 5px; margin-right: 10px;">AS-11 sidecar</div> <div style="background-color: #1a2b3c; color: white; padding: 5px;">Cinedeck XML</div> </div> <p>Each recording session can be accompanied by clip specific *.xml files. The completed *.xml files contain clip specific metadata which can be imported into asset managements systems and the like. After selecting an xml type, xml path override can be selected to designate a specific destination folder for the xml files.</p> <ul style="list-style-type: none"> • MSG xml generates an xml format for use by MSG • NASA is a format for use at for NASA's Orion launch system. • AS-11 sidecar generates a AS-11 compatible xml • Cinedeck xml generates a full generic xml with all data
320- USE RECORD TC OFFSET	5.21 Proxy tab - (p.152)	Record timecode offset provides an easy way to adjust or reset the incoming timecode but unlike generating new timecode, the recorded timecode remains based on the source timecode, keeping all of the breaks and changes. For example, your source may be arriving with timecode starting at 0:00 but because it is the fourth in a set, you want it to start at hour 4. With this setting you can apply a 4 hour offset. Another example might be a source which was recorded with time of day in a different timezone and you want the timecode to reflect GMT or your local time zone. Record timecode offset can be set independently for master and proxy encodes.
321- ENCODER NAME	5.21 Proxy tab - (p.152)	Like the "name" and "label" fields, editable on the overview page, "encoder name" reflects the encoder name variable or wild-card displayed in the page tab bar. The encoder name wild-card can also be used in folder and file names. The default names in 4 channel mode are master and proxy but as with all the variables, they can be changed to meet your specific requirements. Click here to open an on-screen keyboard to change the name.
322- VBR ENABLE	5.21 Proxy tab - (p.152)	Some codecs available on the Cinedeck can be encoded as either VBR (variable bit rate) or CBR (constant bit rate). This can be an important selection so if available, you should confirm with whomever will be editing or further processing the files when recording is complete. This setting will only be visible when a VBR codec is selected. See "10.4. What is bitrate/quality:" on page 283


Proxy tab / - cont...

Name	Location	Description
323- ENDIAN TYPE	5.21 Proxy tab - (p.152)	Endian type refers to the byte order of multi-byte PCM audio samples. Big means the data is stored big-end first, little (the more common of the two) means the data is stored little-end first. Unless you know big endian is needed, leave this set to little.
324- USE MXF CLIP FOLDERS	5.21 Proxy tab - (p.152)	When recording OpAtom which creates independent files for each video and audio track, you have the option of placing the clips in separate folders or of placing all the media in a single folder.
325- ENCODER ENABLE	5.21 Proxy tab - (p.152)	Each master and proxy encoder can be independently enabled or disabled as needed. If there is no requirement for a particular master or proxy encode, this is the way to disregard it.

5.22 Audio routing

Audio routing works the same for master and proxy files. The only differences are the number of available audio source channels can change with the audio source and some file wrappers support fewer audio channels than others.


The upper meters indicate the sources and the row below the meters is used to select source channels to be assigned to a record channel

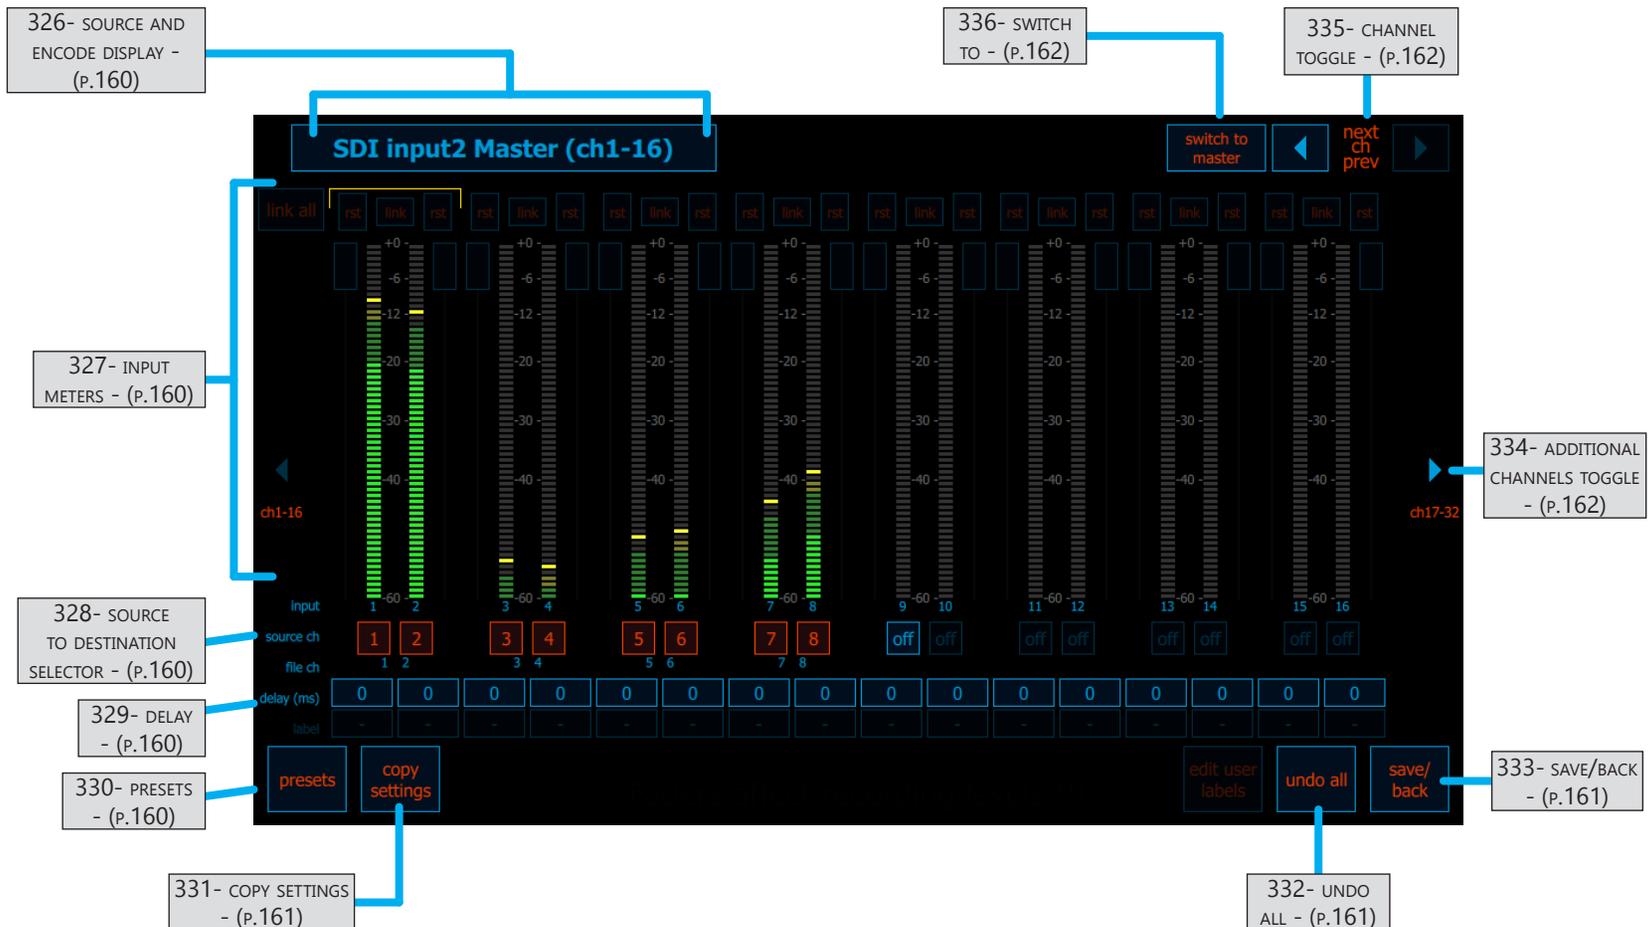

Audio routing / - cont...

Name	Location	Description
326- SOURCE AND ENCODE DISPLAY	5.22 Audio routing - (p.159)	This text display indicates three things; The audio source type; SDI, AES, Analog The channel source, ie input 1, input, 2, etc. The currently selected encode receiving routing adjustments. This case shows the audio routing for the first 16 channels of the master encode for input 2 which is using embedded SDI audio.
327- INPUT METERS	5.22 Audio routing - (p.159)	The input audio meters show real-time activity for any channels receiving audio. Note the yellow highlight at the top of the first audio pair, this indicates the audio channels currently being monitored.
328- SOURCE TO DESTINATION SELECTOR	5.22 Audio routing - (p.159)	These boxes represent each available record channel. Each record channel can record any of the source audio channels. Click the box to open this screen for selecting a source channel to be recorded.
329- DELAY	5.22 Audio routing - (p.159)	If audio delay has been set on the input page, the amount of delay will be displayed here. See "277- audio delay" on page 142
330- PRESETS	5.22 Audio routing - (p.159)	 <p>The presets menu allows easy selection of 2, 4, 6, 8, 12 or 16 channels to be recorded.</p> <p>When you select a preset, the destinations are set as pairs in sequential order so incoming channel 1 is recorded on channel 1, incoming channel 2 is recorded on channel 2 and so on up to 32 channels or the maximum number of channels supported by the currently selected file wrapper.</p> <p>Additionally, it is possible to copy the routing as already set by the related master or proxy encode and you can always manually change any of the destinations.</p>

Audio routing / - cont...

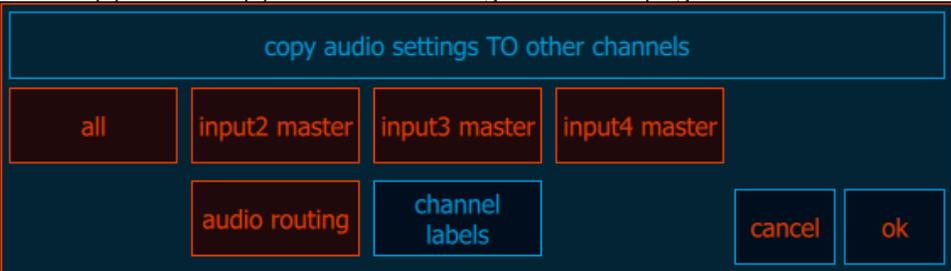Name	Location	Description
331- COPY SETTINGS	5.22 Audio routing - (p.159)	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <p>copy to</p> <p>copy from</p> <p>copy settings</p> </div> <div> <p>Audio channel routing can be selected and set independently for each channel and for each encode. To simplify setting audio for multiple channels, its is possible to copy setting to or from selected channels.</p> <p>Use "copy to" to copy the audio settings from this page to other channels.</p>  <p>Use "copy from" to copy audio settings from another channel to the current channel.</p>  </div> </div>
332- UNDO ALL	5.22 Audio routing - (p.159)	Undo all cancels all changes and returns to the encode page.
333- SAVE/BACK	5.22 Audio routing - (p.159)	Save/Back saves all changes and returns to the encode page.

Audio routing / - cont...

Name	Location	Description
334- ADDITIONAL CHANNELS TOGGLE		This control switches between the first 16 channels and the second 16 channels of audio which can be encoded. While SDI only supports 16 channels, some files can support up to 32 audio tracks, hence the router gives you direct access for managing all 32 tracks.
335- CHANNEL TOGGLE	5.22 Audio routing - (p.159)	The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.
336- SWITCH TO	5.22 Audio routing - (p.159)	Switch to is a toggle which provides direct access to either the master or the proxy for the current channel, allowing easy access for setting audio.

5.23 Video Burn Settings

It is possible to apply several different character burn-ins to files during recording. The burns can be timecode, system time, file name, etc. To apply a character burn, enable burns on the encoder page. Press setup to access this screen for customizing the selection, size, color and position of the burn elements.

Remember, a burn-in is a permanent part of the video and can not be removed!

The screenshot shows the 'input2 proxy text burns' settings screen. It features a table for configuring burn elements, a video preview window, and a control panel at the bottom.

video burn	position	safe %	size	text	block
encoder timecode	00 00 00 00	95%	24		
system time & date	00 00 00 00 00 00	95%	24		
GPS	00 00 00 00 00 00	95%	24		
filename	00 00 00 00 00 00	95%	24		

Below the table is the 'encoder burn timecode source' section with options: SDI, V 1/2 LTC, master clock, and gen.

The video preview window shows a beach scene with 'filename' at the top, 'system time & date' at the bottom left, and 'encoder timecode' at the bottom right.




The control panel at the bottom includes:

- NOT ACTIVE
- 346- PROPERTIES PANEL AREA - (p.165) (with sub-buttons: top left, top center, top right, center left, center, center right, bottom left, bottom center, bottom right)
- 347- CANCEL - (p.165)
- 348- SAVE AND CLOSE - (p.165)

Callouts on the left side of the screen point to various elements:

- 337- INPUT ID TAB - (p.164)
- 338- VIDEO BURN - (p.164)
- 339- POSITION - (p.164)
- 340- SAFE % - (p.164)
- 341- SIZE - (p.164)
- 342- TEXT - (p.164)
- 343- BLOCK - (p.165)
- 344- ENCODER BURN TIMECODE SOURCE - (p.165)

Video Burn Settings / - cont...

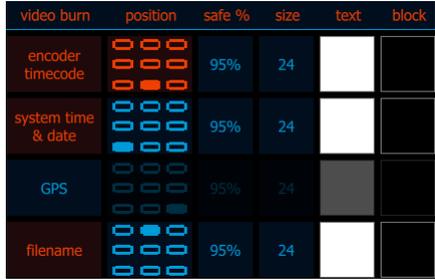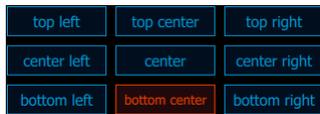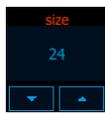Name	Location	Description
337- INPUT ID TAB	5.23 Video Burn Settings - (p.163)	Displays the relevant channel and encoder names to identify which recording the burn-in is setup is associated to.
338- VIDEO BURN	5.23 Video Burn Settings - (p.163)	 <p>The video burn selection panel is a button grid, 6 across and 4 down. In all cases, orange indicates a control is active and selected, aqua-blue indicates settings that are active and dim aqua-blue indicates settings that are off. The first column contains on/off toggles for the selected burn data. <i>The other buttons toggle various properties panels on & off for setting the selected burn property.</i></p> <p><i>(Changes can be observed on the video preview - An active signal is required)</i> <i>(Properties panels are displayed at the lower right of the setup screen)</i></p>
339- POSITION	5.23 Video Burn Settings - (p.163)	 <p>Select the "position" button to open this properties panel to place a burn into one of 9 screen positions.</p>
340- SAFE %	5.23 Video Burn Settings - (p.163)	 <p>Select "safe %" to adjust the title safe position relative to the edge of the video image.</p>
341- SIZE	5.23 Video Burn Settings - (p.163)	 <p>Select "size" to adjust the font size for a burn.</p>
342- TEXT	5.23 Video Burn Settings - (p.163)	 <p>The text color of a burn can be adjusted by clicking the respective "text" button. This opens a standard Windows color picker pop-up.</p> <p>Text also activates an opacity control in the properties panel.</p>

Video Burn Settings / - cont...


Name	Location	Description
343- BLOCK	5.23 Video Burn Settings - (p.163)	<p>The background color of a burn can be adjusted by clicking the respective "block" button. This opens a standard Windows color picker pop-up.</p>  <p>Pressing "block" also activates an opacity control in the properties panel.</p>
344- ENCODER BURN TIMECODE SOURCE	5.23 Video Burn Settings - (p.163)	<p>This control allows specific selection of the timecode source to be used for the timecode burn-in.</p> <p>The Cinedeck system can leverage multiple timecode sources and there are occasions where the burn-in should reflect a different time than the embedded timecode. Also, file wrappers like MP4 do not support timecode so selecting the timecode burn source allows MP4 files to contain a viewable timecode.</p>
345- USER TEXT	5.23 Video Burn Settings - (p.163)	Not Active
346- PROPERTIES PANEL AREA	5.23 Video Burn Settings - (p.163)	This screen region will be populated by one of several properties panels selected in the "video burn" control panel at the upper left.
347- CANCEL	5.23 Video Burn Settings - (p.163)	Cancel any changes and return to the previous screen
348- SAVE AND CLOSE	5.23 Video Burn Settings - (p.163)	Pressing save and close, confirms any changes, closes the burn setup screen and returns to the previous encoder setup screen.

5.24 TC & Automation tab

Timecode and automation includes settings for the internal timecode generator, various record trigger controls including EDL management and fine timecode offsets for each timecode source.

In free run, the internal timecode generator can start with a user defined (preset) or it can be initiated by the Windows clock and follow local time or UTC (GMT).


Record-run timecode can be traditional, contiguous timecode or, when set to "per take", automatically restart at the user defined time, often used for drama scenes where matching timecode can be useful.

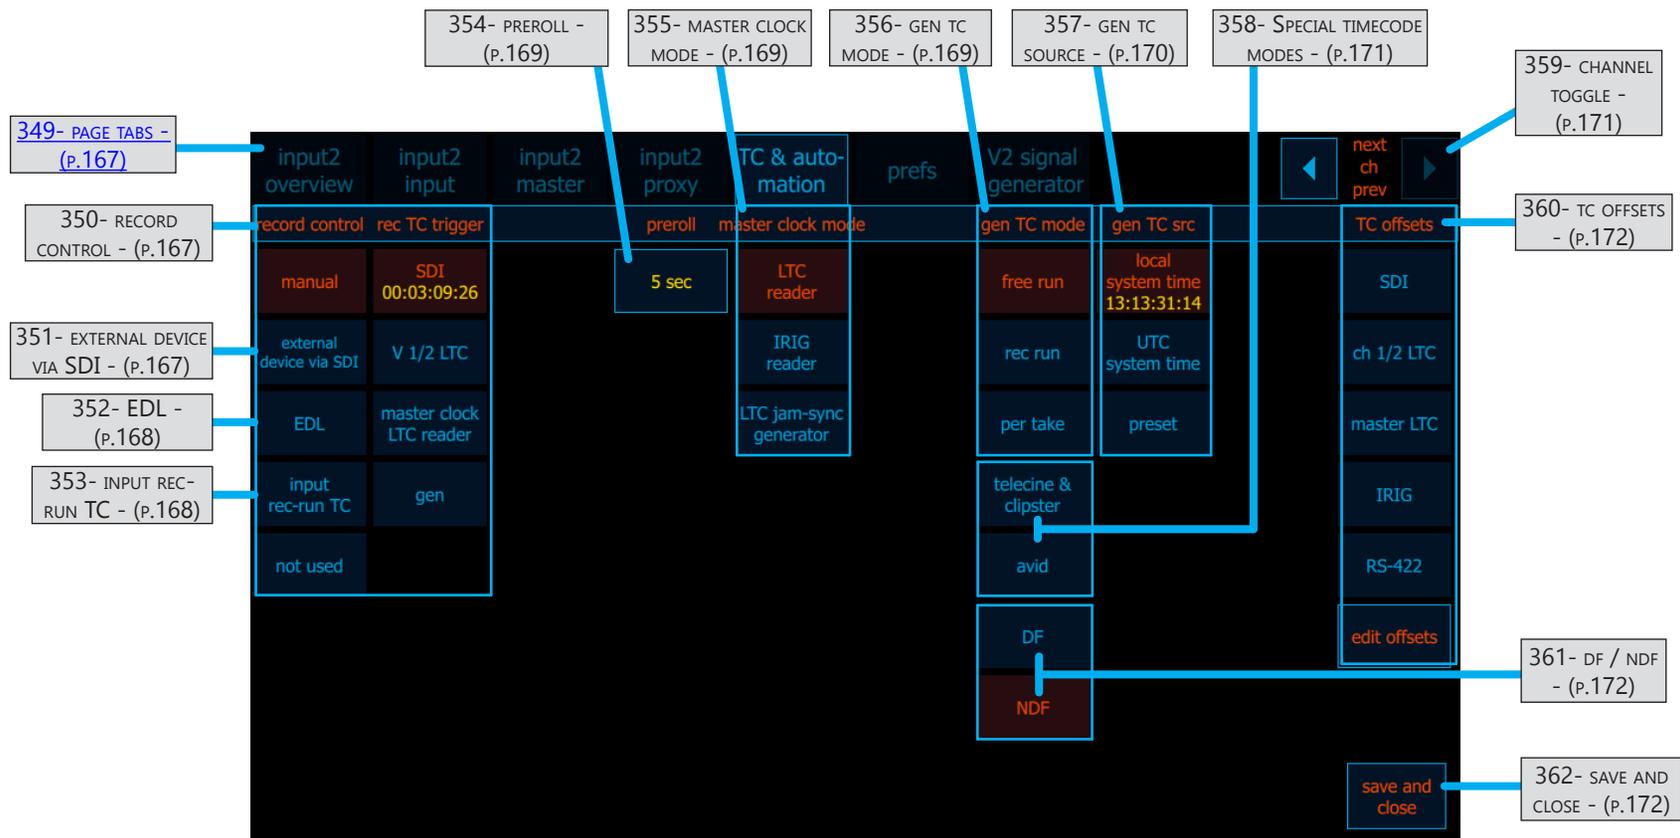

TC & Automation tab / - cont...

Name	Location	Description										
349- PAGE TABS	5.24 TC & Automation tab - (p.166)	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.										
350- RECORD CONTROL	5.24 TC & Automation tab - (p.166)	In manual mode, record control is from the front panel. Record control has several additional modes which are often linked to "rec TC trigger". Each is described below.										
351- EXTERNAL DEVICE VIA SDI	5.24 TC & Automation tab - (p.166)	<table border="1" data-bbox="730 500 1129 1044"> <thead> <tr> <th>record control</th> <th>device</th> </tr> </thead> <tbody> <tr> <td>manual</td> <td>Panasonic</td> </tr> <tr> <td>external device via SDI</td> <td>Red</td> </tr> <tr> <td>EDL</td> <td>Arri/Sony</td> </tr> <tr> <td>input rec-run TC</td> <td>Canon</td> </tr> </tbody> </table> <p>When set to "external device via SDI", the deck is set to receive record start / stop commands embedded in the SDI ancillary data stream coming from a camera. This allows the deck to slave record in sync with the camera recordings.</p> <p>If your camera is not supported, you can also slave recording by using "353- input rec-run TC" on page 168</p>	record control	device	manual	Panasonic	external device via SDI	Red	EDL	Arri/Sony	input rec-run TC	Canon
record control	device											
manual	Panasonic											
external device via SDI	Red											
EDL	Arri/Sony											
input rec-run TC	Canon											

TC & Automation tab / - cont...

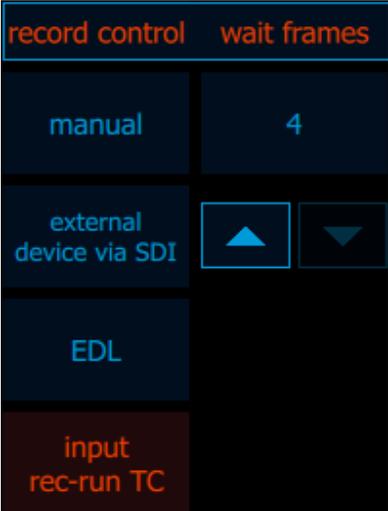Name	Location	Description
352- EDL	5.24 TC & Automation tab - (p.166)	 <p>The screenshot shows a menu with the following options: record control, file, trigger TC source, manual, [DP-01.cdl], SDI 00:01:45:00, external device via SDI, EDL editor, V 1/2 LTC, EDL, master clock LTC reader, input rec-run TC, RS-422, not used, and gen.</p> <p>When set to EDL, the deck can record and stop based on the events in the selected EDL. The selected "trigger TC source" is the timecode used to trigger the EDL events.</p> <p>When a channel is set to RS-422 master mode, RS-422 is available as a trigger.</p> <p>In addition, when in RS-422 mode, EDL mode can drive a connected tape machine, essentially operating as master in an auto-conform session.</p> <p>For additional EDL information, see "5.24.2 EDL editor" on page 174</p> <p>Also see: "354- preroll" on page 169</p>
353- INPUT REC-RUN TC	5.24 TC & Automation tab - (p.166)	 <p>The screenshot shows a menu with the following options: record control, wait frames, manual, 4, external device via SDI, EDL, and input rec-run TC.</p> <p>When set to "input rec-run TC", the deck will automatically record whenever the timecode source is incrementing. This mode can be used with cameras and other devices when another mode such as "external device via SDI" is not possible but slave recording is desired.</p> <p>A delay of a few frames can be introduced to help prevent false triggers. In this example, the deck will wait to see 4 frames of sequential timecode before starting a recording.</p>

TC & Automation tab / - cont...

Name	Location	Description
354- PREROLL	5.24 TC & Automation tab - (p.166)	The global preroll setting used in edit modes when the session is controlled by the Cinedeck.
355- MASTER CLOCK MODE	5.24 TC & Automation tab - (p.166)	 <p>This an optional section for systems with a multi-function master timecode input in addition to the standard LTC input.</p> <ul style="list-style-type: none"> • In "LTC reader" mode, the master timecode input is a basic LTC input which drives all channels vs the standard LTC inputs which drive pairs of channels. • In "IRIG mode", master timecode input feeds the signal from an IRIG-B timecode source to all channels. • In "LTC jam-sync" mode, the internal timecode clock can receive a temporary external timecode source via the master timecode input and regenerate that timecode for one or more channels, in the same way a camera might be jam-synced to match other cameras.
356- GEN TC MODE	5.24 TC & Automation tab - (p.166)	 <p>The internal timecode generator has several modes, all of which depend on the "gen TC source" selection, see: "357- gen tc source" on page 170.</p> <ul style="list-style-type: none"> • In "free run" mode, continuous timecode will be sequentially generated local or UTC (GMT) time, based on the internal system clock. Alternatively, the timecode can start at 0:00 or any other user selected "preset" time. <i>(Note: To allow time compensation, local and UTC time are offset by the preset time. The preset must be 00:00:00:00 to use actual system local or UTC time)</i> • In "rec run" (record run) mode, timecode will be sequentially generated when recording. Timecode will start at 0:00 or any other user selected "preset" time. There is a reset button to allow easy restarting the timecode to the original preset. • "per take" mode functions the same as record run however each time recording is stopped, the timecode is automatically reset to the preset starting timecode number. <p>Also see "358- Special timecode modes" on page 171</p>

TC & Automation tab / - cont...

Name	Location	Description																								
357- GEN TC SOURCE		<div style="display: flex; justify-content: space-around;"> <table border="1" style="background-color: #1a202c; color: white; font-size: 0.8em;"> <thead> <tr> <th>gen TC mode</th> <th>gen TC src</th> </tr> </thead> <tbody> <tr> <td>free run</td> <td>local system time</td> </tr> <tr> <td>rec run</td> <td>UTC system time 15:09:48:21</td> </tr> <tr> <td>per take</td> <td>preset</td> </tr> </tbody> </table> <table border="1" style="background-color: #1a202c; color: white; font-size: 0.8em;"> <thead> <tr> <th>gen TC mode</th> <th>gen TC src</th> </tr> </thead> <tbody> <tr> <td>free run</td> <td>preset 02:00:00:00</td> </tr> <tr> <td>rec run</td> <td>02:00:00:00</td> </tr> <tr> <td>per take</td> <td>reset</td> </tr> </tbody> </table> <table border="1" style="background-color: #1a202c; color: white; font-size: 0.8em;"> <thead> <tr> <th>gen TC mode</th> <th>gen TC src</th> </tr> </thead> <tbody> <tr> <td>free run</td> <td>preset 02:00:00:00</td> </tr> <tr> <td>rec run</td> <td>02:00:00:00</td> </tr> <tr> <td>per take</td> <td></td> </tr> </tbody> </table> </div> <p>As noted, "gen TC mode" and "genTC source" are related</p> <ul style="list-style-type: none"> • In "free run" mode, select "local system time" to have a free running timecode source based on the internal system clock. • In "free run" mode, select "UTC system time" to have a free running timecode source based on the internal system clock set to UTC or GMT. • In "free run" mode, select "preset" to set the internal generator manually. Preset also displays a reset button to allow restarting the free running timecode. (Note: To allow time compensation, local and UTC time are offset by the preset time so the preset must be 00:00:00:00 to use actual system local or UTC time) • To set the "rec run" starting timecode, press the middle (highlighted) timecode to open a setting panel. To reset the "rec run" timecode to the previously selected time, press "reset". • To set the "per take" starting timecode, press the lower (highlighted) timecode to open a setting panel. "per take" timecode resets to the selected time for each recording. • See "358- Special timecode modes" on page 171 for additional details. 	gen TC mode	gen TC src	free run	local system time	rec run	UTC system time 15:09:48:21	per take	preset	gen TC mode	gen TC src	free run	preset 02:00:00:00	rec run	02:00:00:00	per take	reset	gen TC mode	gen TC src	free run	preset 02:00:00:00	rec run	02:00:00:00	per take	
gen TC mode	gen TC src																									
free run	local system time																									
rec run	UTC system time 15:09:48:21																									
per take	preset																									
gen TC mode	gen TC src																									
free run	preset 02:00:00:00																									
rec run	02:00:00:00																									
per take	reset																									
gen TC mode	gen TC src																									
free run	preset 02:00:00:00																									
rec run	02:00:00:00																									
per take																										

TC & Automation tab / - cont...

Name	Location	Description												
358- SPECIAL TIMECODE MODES	5.24 TC & Automation tab - (p.166)	<table border="1" data-bbox="737 310 1131 972"> <thead> <tr> <th data-bbox="737 310 940 370">gen TC mode</th> <th data-bbox="940 310 1131 370">gen TC src</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 370 940 505">free run</td> <td data-bbox="940 370 1131 505">preset 00:00:00:00</td> </tr> <tr> <td data-bbox="737 505 940 623">rec run</td> <td data-bbox="940 505 1131 623">00:00:00:00</td> </tr> <tr> <td data-bbox="737 623 940 742">per take</td> <td data-bbox="940 623 1131 742">reset</td> </tr> <tr> <td data-bbox="737 742 940 860">telecine & clipster</td> <td data-bbox="940 742 1131 860">offset 3</td> </tr> <tr> <td data-bbox="737 860 940 972">avid</td> <td data-bbox="940 860 1131 972">3</td> </tr> </tbody> </table> <p data-bbox="1152 375 1845 477">Cinedeck has created some system specific timecode modes for control by Spirit Telecine systems, DVS Clipster workstations and Avid Media Composer.</p> <p data-bbox="1152 516 1845 732">The functions are the same as record run mode however an offset is included to allow fine tuning the relation between the Cinedeck and these systems. This background timecode prerecord countdown can be adjusted to prevent false starts.</p> <p data-bbox="1152 776 1845 948">Use with Media Composer is discussed here: "8.4 Avid Digital Cut" on page 234. If you need specifics about use with Telecine, Clipster or other outboard equipment, feel free to contact Cinedeck: "Contacting Cinedeck" on page 2</p>	gen TC mode	gen TC src	free run	preset 00:00:00:00	rec run	00:00:00:00	per take	reset	telecine & clipster	offset 3	avid	3
gen TC mode	gen TC src													
free run	preset 00:00:00:00													
rec run	00:00:00:00													
per take	reset													
telecine & clipster	offset 3													
avid	3													
359- CHANNEL TOGGLE	5.24 TC & Automation tab - (p.166)	<p data-bbox="737 997 1845 1123">The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.</p>												

TC & Automation tab / - cont...

Name	Location	Description
360- TC OFFSETS	5.24 TC & Automation tab - (p.166)	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">TC offsets</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">SDI</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">ch 1/2 LTC +3</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">master LTC</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">IRIG -0.193</div> <div style="border: 1px solid black; padding: 2px; margin-right: 10px;">RS-422 -4</div> <div style="border: 1px solid black; padding: 2px;">edit offsets</div> </div> <p>Timecode offsets provide frame based fine tuning for each timecode source to compensate for video delay and other latency issues between systems.</p> <p>The "timecode offsets" column shows any active offsets for the current channel.</p> <p>To adjust the offsets, click "edit offsets".</p> <p>For details, see "5.24.1 TC offsets" on page 173</p>
361- DF / NDF	5.24 TC & Automation tab - (p.166)	<p>Drop frame or non-drop-frame can be selected for any internally generated timecode. Non-drop frame is indicated with all colons ":"</p> <p>02:21:13:05</p> <p>Drop-frame is indicated with a semi-colon between the seconds and frames ";"</p> <p>02:21:13;05</p>
362- SAVE AND CLOSE	5.24 TC & Automation tab - (p.166)	Save and close saves all changes and returns to the TC & automation page.

5.24.1 TC offsets

With "TC offsets", (timecode offsets) it is possible to fine tune each timecode source connected to each channel of the Cinedeck to compensate for frame based timing errors such as an incoming video signal which is first being passed through a frame synchronizer where the desired timecode is not or where multiple related sources are receiving different amounts of processing, taking them out of sync with each other. In these cases you can delay or advance the timecode by the required number of frames so the timing issue can be compensated for.

Select the desired timecode source and enter the offset using a USB keyboard or press the arrows to increment the timecode offset by one frame plus or minus. If adjusting IRIG offset you may find the numeric pad easier.

The screenshot displays the 'TC offsets' configuration screen. It features five main adjustment sections, each with a title, a sign selector (-/+), a numeric display, and up/down arrows:

- SDI TC offset:** Display shows '0'. A callout box points to the '0' with the text: 'SELECT A NUMERIC FIELD AND PRESS THE ASSOCIATED ARROWS UP OR DOWN TO INCREMENT THE OFFSET'.
- IRIG offset:** Display shows '0.193'. A callout box points to the sign selector with the text: '+ OR - WILL HIGHLIGHT TO INDICATE THE OFFSET DIRECTION'.
- ch 1/2 TC offset:** Display shows '3'.
- Master LTC offset:** Display shows '0'.
- RS-422 offset:** Display shows '4'.

To the right is a numeric keypad with buttons for digits 1-9, 0, 'clear', and 'del'. A 'save and close' button is located at the bottom right of the main panel.

On the right side, a vertical sidebar titled 'TC offsets' lists the sources and their current values:

- SDI
- ch 1/2 LTC +3
- master LTC
- IRIG -0.193
- RS-422 -4
- edit offsets

Navigation elements include a 'User Interface' tab at the top, a 'TC & Automation tab' in the middle, and a 'TC offsets' tab at the bottom. A callout box at the top right reads: 'TIMECODE OFFSETS AS DISPLAYED ON THE TC & AUTOMATION MAIN PAGE'.

5.24.2 EDL editor

The EDL (edit decision list) editor is used to edit or create EDLs. It is made up of two sections, the events list (left) and the event editor (right). When you select an event in the list, its time data is automatically loaded into the event editor. To change that events details, make the changes and press "enter".

If you want to insert an event into the list; first select an event above or below where the new event should go. Then edit the data for the new event and press "insert before" or "insert after".

To add an event to the end of the list, set the data in the event editor and press "append".

Cinedeck EDLs contain start and end times and optionally a master and or proxy file name. For a sample EDL, see ["5.24.3 Sample EDL" on page 178](#)

The screenshot shows the EDL editor interface with the following components and callouts:

- 363- EDL NAME - (p.175)**: Points to the title bar "Edit EDL MyEDL.cdl*".
- 364- FILE NAME - (p.175)**: Points to the "file name" column header.
- 365- PROXY NAME - (p.175)**: Points to the "proxy name" column header.
- 366- IN TC - (p.175)**: Points to the "In TC" field in the event editor.
- 367- OUT TC - (p.175)**: Points to the "Out TC" field in the event editor.
- 368- DURATION - (p.175)**: Points to the "Duration" field in the event editor.
- 381- EDL EVENTS - (p.177)**: Points to the list of events in the table.
- 380- IN TC - (p.177)**: Points to the "in TC" column header.
- 379- OUT TC - (p.177)**: Points to the "out TC" column header.
- 378- EVENTS LIST SCROLL - (p.177)**: Points to the scroll arrows on the left of the events list.
- 369- KEYPAD - (p.175)**: Points to the numeric keypad on the right side of the event editor.
- 370- DF | NDF - (p.175)**: Points to the "DF" and "NDF" buttons in the event editor.
- 371- CANCEL | ENTER - (p.175)**: Points to the "cancel" and "enter" buttons in the event editor.
- 377- APPEND - (p.177)**: Points to the "append" button in the bottom toolbar.
- 376- INSERT AFTER - (p.177)**: Points to the "insert after" button in the bottom toolbar.
- 375- INSERT BEFORE - (p.176)**: Points to the "insert before" button in the bottom toolbar.
- 374- DELETE CURRENT - (p.176)**: Points to the "delete current" button in the bottom toolbar.
- 373- FILE - (p.176)**: Points to the "file" button in the bottom toolbar.
- 372- UNDO | CANCEL \ SAVE AND CLOSE - (p.176)**: Points to the "undo", "cancel", and "save and close" buttons in the bottom toolbar.

	in TC	out TC	file name	proxy name
1	13:45:00;10	13:55:30;00	[empty]	[empty]
2	13:56:00;10	13:56:30;00	[empty]	[empty]
3	13:57:00;10	13:57:30;00	[empty]	[empty]
4	13:58:00;10	13:58:30;00	[empty]	[empty]
5	13:59:00;10	13:59:30;00	Master Name	Proxy Name

TC & Automation tab / EDL editor cont...

Name	Location	Description
363- EDL NAME	"5.24.2 EDL editor" on page 174	Displays the name of the EDL loaded into the editor. If a new EDL is created, the display shows [new file] until the edl is saved with a name. When an EDL has been changed and not saved, an "*" is appended to the name like MyEDL.cdl*
364- FILE NAME	"5.24.2 EDL editor" on page 174	File name is an optional field which can be filled in with a clip specific file name for the master encode.
365- PROXY NAME	"5.24.2 EDL editor" on page 174	Proxy name is an optional field which can be filled in with a clip specific file name for the proxy encode.
366- IN TC	"5.24.2 EDL editor" on page 174	The EDL event editor "in TC" will initially display the starting timecode of the event selected in the event list. This time can be adjusted incrementally by highlighting the digits you want to change and using the up down arrows which appear to the right of the selected fields. The keypad at the right can be used to directly enter time data into the selected fields.
367- OUT TC	"5.24.2 EDL editor" on page 174	The EDL event editor "out TC" will initially display the ending timecode of the event selected in the event list. This time can be adjusted incrementally by highlighting the digits you want to change and using the up down arrows which appear to the right of the selected fields. The keypad at the right can be used to directly enter time data into the selected fields.
368- DURATION	"5.24.2 EDL editor" on page 174	The duration automatically updates to display the duration of the selected or edited event. The duration can also be edited. Editing duration changes the "out TC" to make the event match the duration.
369- KEYPAD	"5.24.2 EDL editor" on page 174	The keypad can be used to enter data into any selected hour, minute, second or frame time field. The highlight automatically moves to the next pair of numbers to the right as you enter each pair.
370- DF NDF	"5.24.2 EDL editor" on page 174	The timecode format of the EDL can be toggled between "DF" (drop-frame) and NDF (non-drop-frame) by selecting DF or NDF.
371- CANCEL ENTER	"5.24.2 EDL editor" on page 174	The keypad "cancel" button is a local undo for events loaded in the event editor. Pressing cancel will revert the loaded event to its original event list data. The keypad "enter" button overwrites the selected event in the events list with the data in the event editor.

TC & Automation tab / EDL editor cont...

Name	Location	Description
372- UNDO CANCEL \ SAVE AND CLOSE	"5.24.2 EDL editor" on page 174	 <p>"Undo" has a multi-level memory to remove changes and additions to EDLs one at a time. To undo all changes to the loaded EDL and close it without saving it, use "cancel". Use "save and close" to save the loaded EDL and return to the TC & automation screen.</p>
373- FILE	"5.24.2 EDL editor" on page 174	<p>The file menu provides access to saving, opening and creating new EDLs.</p>  <p>Use "save as" to save the loaded EDL with a new name Use "save" to save the loaded EDL (note a '*' next to the file name at the top left indicates a file which has not been saved) Use "open" to open an existing EDL or import a CMX 3600 EDL Use "new" to create a new EDL EDLs are saved by default in c:\cinedeck\EDL however you can save and open EDLs from any accessible drive.</p>
374- DELETE CURRENT	"5.24.2 EDL editor" on page 174	To delete the currently selected event, press "delete current".
375- INSERT BEFORE	"5.24.2 EDL editor" on page 174	New events can be added in several ways; "insert before" will insert a new event before the selected (highlighted) event using the data in the event editor.

TC & Automation tab / EDL editor cont...

Name	Location	Description
376- INSERT AFTER	"5.24.2 EDL editor" on page 174	New events can be added in several ways; "insert after" will insert a new event after the selected (highlighted) event using the data in the event editor.
377- APPEND	"5.24.2 EDL editor" on page 174	New events can be added in several ways; "append" will add a new event to the end of the list using the data in the event editor, regardless of the selected event.
378- EVENTS LIST SCROLL	"5.24.2 EDL editor" on page 174	When there are more events in a list than can be displayed on the screen, the scroll arrows can be used to move up and down through the list.
379- OUT TC	"5.24.2 EDL editor" on page 174	Each line in an EDL represents a single EDL event. Out TC displays the end timecode of the event.
380- IN TC	"5.24.2 EDL editor" on page 174	Each line in an EDL represents a single EDL event. In TC displays the starting timecode of the event.
381- EDL EVENTS	"5.24.2 EDL editor" on page 174	This list displays each EDL event where each line is a single event. An event is selected when the character color is yellow.

5.24.3 Sample EDL

Cinedeck EDLs are basic ASCII comma delineated files.

Each line in a EDL file represents a single event

Each event element is separated from its neighbor by a comma.


No leading or trailing commas or spaces should be used and no commas should be used within any text.

Additionally, the file must end with a blank line.

Each event line has a start timecode, an end timecode and optionally can have a master file name and a proxy file name. *(For events which do not have names included, the active project naming templates will be used to name the files as they are created).*

You can use the Cinedeck built-in editor for creating and editing EDLs (See: ["5.24.2 EDL editor" on page 174](#)) or any plain text editor such as notepad in Windows.


The sample EDL below has 5 events, the last of which also has the optional file names included.

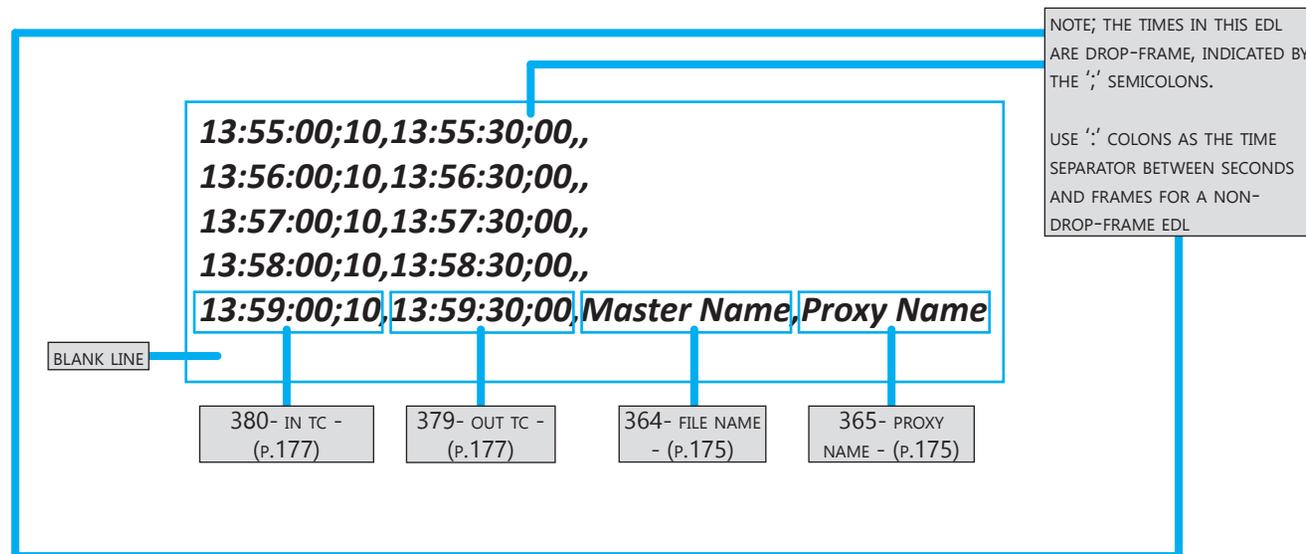


5.25 Prefs tab

Basic system configuration settings are on the preferences page. Perhaps most important is "UI mode" selection which sets the the I/O operational mode. The modes available can differ depending on the hardware and software installed however all systems have two or four channel YUV which is the standard mode for multi-channel SD/HD recording and playback.

If your system is busy recording or playing, most settings on the "prefs" page will not be available. Stop record and playback activity on all channels for preferences access.

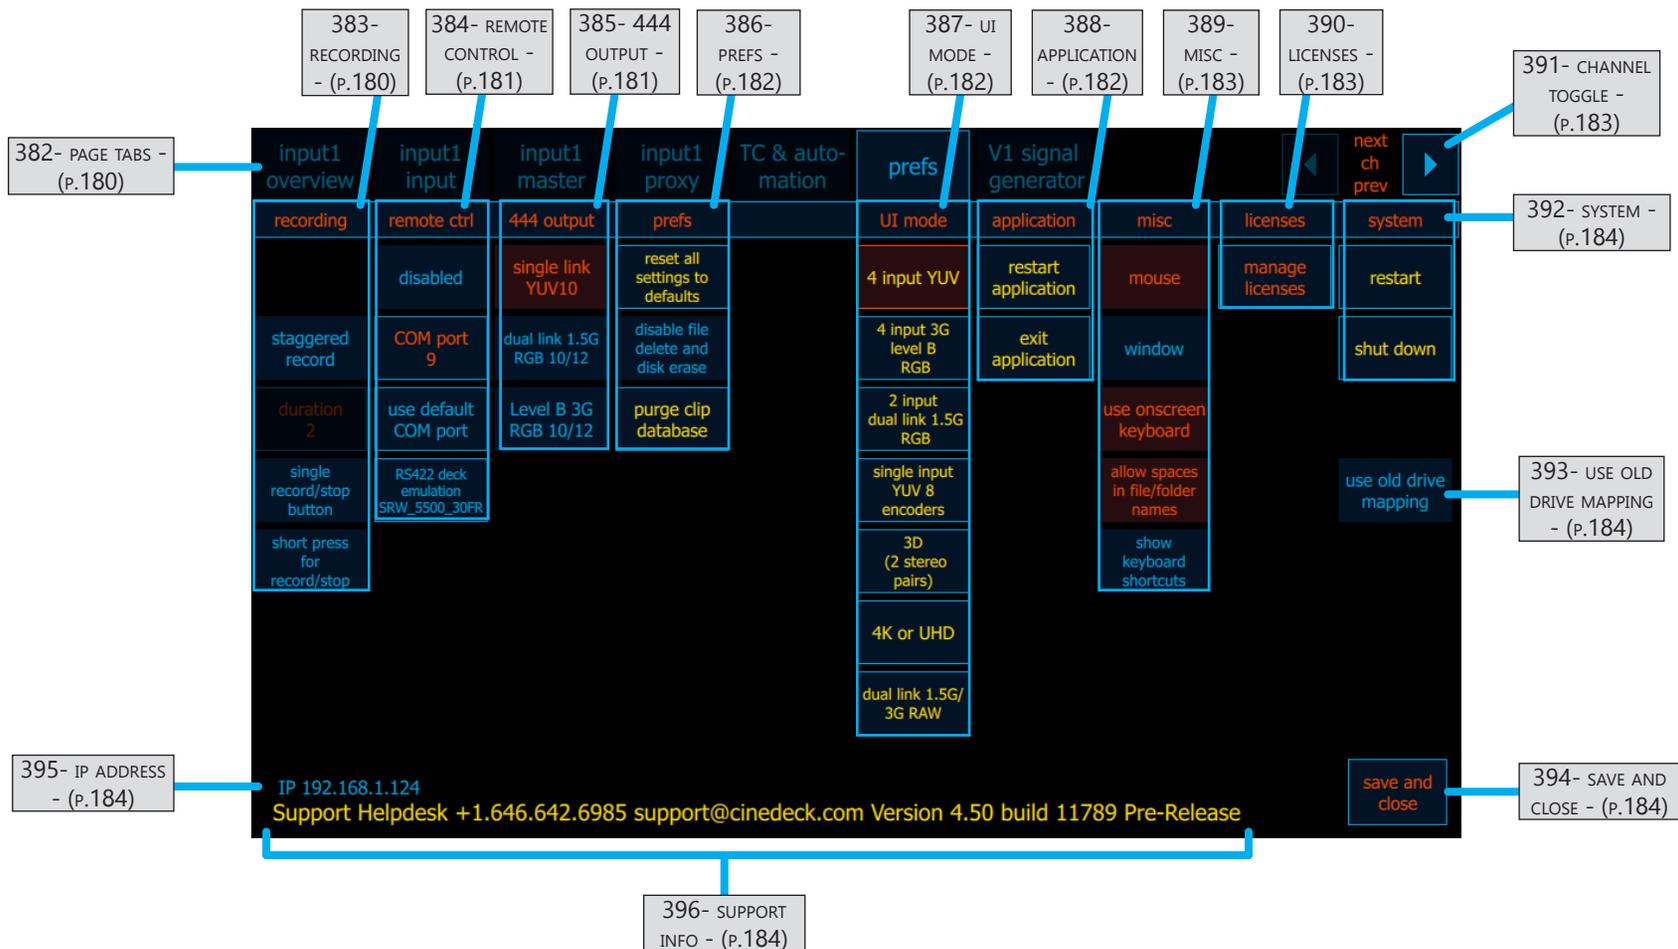

Prefs tab / - cont...

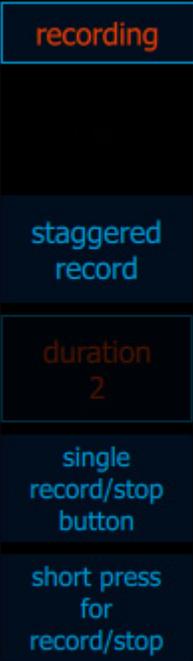Name	Location	Description
382- PAGE TABS	"5.25 Prefs tab" on page 179	The page selector tabs are always visible in the main setup area. These can be clicked to provide direct access to each setup section.
383- RECORDING	"5.25 Prefs tab" on page 179	<p>The "recording" column adjust aspects of how a recorder starts and stops recording.</p>  <ul style="list-style-type: none"> When staggered record is off, all ganged channels will be triggered simultaneously. When on, "staggered record" triggers recording and stopping sequentially, based on the user defined delay. The standard multi view and single channel view have separate record and stop buttons located at the top and bottom of the screen. When "single record/stop button" is active, only a single button at the top is used and the available function of the button changes depending on the current activity. Because many Cinedecks have touch screens which can accidentally be accessed, the default setting is that stopping a recording requires pressing stop for a few seconds. Toggeling "short press for record/stop" allows stopping a recording immediately. <p>Note; orange indicates an active item.</p>

Prefs tab / - cont...

Name	Location	Description
384- REMOTE CONTROL	"5.25 Prefs tab" on page 179	<p>Optional serial remote control can be enabled or disabled for each channel.</p> <div style="display: flex; flex-direction: column; gap: 5px;"> <div style="background-color: #1a202c; color: #f96; padding: 2px 5px;">remote ctrl</div> <div style="background-color: #1a202c; color: #3498db; padding: 2px 5px;">disabled</div> <div style="background-color: #1a202c; color: #f96; padding: 2px 5px;">COM port 9</div> <div style="background-color: #1a202c; color: #3498db; padding: 2px 5px;">use default COM port</div> <div style="background-color: #1a202c; color: #3498db; padding: 2px 5px;">RS422 deck emulation SRW_5500_30FR</div> </div> <ul style="list-style-type: none"> Use the COM controls to enable/disable and adjust the active port for the current channel. Click the bottom option to change the deck emulation mode which is how the Cinedeck presents itself to connected devices. This setting is useful for example when connecting to an Avid as the Avid needs to think its connected to a specific deck type. There are several SRW and BVW modes available. <p>Note; orange indicates an active item.</p>
385- 444 OUTPUT	"5.25 Prefs tab" on page 179	<div style="display: flex; flex-direction: column; gap: 5px;"> <div style="background-color: #1a202c; color: #f96; padding: 2px 5px;">444 output</div> <div style="background-color: #1a202c; color: #f96; padding: 2px 5px;">single link YUV10</div> <div style="background-color: #1a202c; color: #3498db; padding: 2px 5px;">dual link 1.5G RGB 10/12</div> <div style="background-color: #1a202c; color: #3498db; padding: 2px 5px;">Level B 3G RGB 10/12</div> </div> <p>The 444 output selector forces the video output from standard single link 1.5/3G to the selected mode.</p> <p>Note; orange indicates an active item.</p>

Prefs tab / - cont...

Name	Location	Description
386- PREFS	"5.25 Prefs tab" on page 179	<div style="display: flex; align-items: flex-start;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px;"> <p style="text-align: center; color: orange;">prefs</p> <p style="text-align: center; color: yellow;">reset all settings to defaults</p> <p style="text-align: center; color: cyan;">disable file delete and disk erase</p> <p style="text-align: center; color: yellow;">purge clip database</p> </div> <div> <ul style="list-style-type: none"> • To set the project to the default '1' and clear many settings, press "reset all settings to default" • To prevent users from easily or accidentally deleting data in "clip manager", turn on "disable file delete and disk erase". • Cinedecks maintain a sql database of all content known to the system. See "449- find media" on page 213. If you are starting a new session or regularly move or delete content, it can be useful to clear the database. Content can be reentered into the database by scanning folders or discs from "clip manager". </div> </div>
387- UI MODE	"5.25 Prefs tab" on page 179	<p>Cinedecks are multi-mode systems making "UI mode" probably the most important selection on the "prefs" page as it completely changes the capabilities and operation of the deck. The modes available can differ depending on the hardware and software installed. For example, the two channel RX and ZX20 do not have 4K or UHD YUV recording however, all systems have two or four channel YUV which is the standard mode for multi-channel SD/HD recording and playback.</p> <p>See "5.25.1 UI mode" on page 185 for more information.</p>
388- APPLICATION	"5.25 Prefs tab" on page 179	<div style="display: flex; align-items: flex-start;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px;"> <p style="text-align: center; color: orange;">application</p> <p style="text-align: center; color: yellow;">restart application</p> <p style="text-align: center; color: yellow;">exit application</p> </div> <div> <p>The "application" section allows access to the MS Windows environment by exiting the Cinedeck user interface.</p> <p>For extended production sessions, for example a reality program which is recording 24/7, it is recommended to occasionally restart the Cinedeck interface. Once a day is generally appropriate. To quickly do so, use "restart application".</p> </div> </div>

Prefs tab / - cont...

Name	Location	Description
389- MISC	"5.25 Prefs tab" on page 179	<p>The miscellaneous section contains several interface functions; Note; orange indicates an active item.</p> <ul style="list-style-type: none"> misc mouse window use onscreen keyboard allow spaces in file/folder names show keyboard shortcuts <ul style="list-style-type: none"> Press "mouse" to toggle mouse cursor visibility on and off. This can also be done using the "Ctrl+Enter" keyboard shortcut. To place the Cinedeck UI into a Windows frame which can be moved and minimized, use "window". Window mode can also be toggled using "Alt+Enter". By default, "use onscreen keyboard" is on. This setting forces visibility of the on-screen keyboard when an appropriate data entry field has the focus. A connected USB keyboard can be used simultaneously with the on-screen keyboard however, if "use onscreen keyboard" is off, data can only be typed directly into the data fields via a USB keyboard. To maintain the best cross system compatibility, using spaces in file and folder names is not recommended as some computer systems do not work well with them. When on, this setting will replace any "space" entered with an "_" underscore character so if you require the use of spaces, turn this setting off. Press "show keyboard shortcuts" to bring up an overlay screen with a full list of available shortcuts. This overlay can also be accessed from anywhere in the Cinedeck user interface by pressing "Ctrl+K".
390- LICENSES	"5.25 Prefs tab" on page 179	Additional licenses will be required to activate some newly added features. Click here to manage your system licenses.
391- CHANNEL TOGGLE	"5.25 Prefs tab" on page 179	The channel toggle (next ch prev) is available on all main setup pages. Clicking the right or left arrow allows easy switching to the next or previous channel. The "input", "master" and "proxy" tab names reflect the change, displaying the names associated to the selected channel.

Prefs tab / - cont...

Name	Location	Description
392- SYSTEM	"5.25 Prefs tab" on page 179	It is recommended to properly close the Cinedeck application before restarting or shutting down your system. Pressing "restart" or "shut down" provides easy access to closing the Cinedeck application before automatically restarting or shutting down. If your system is busy recording or playing, most settings on the "prefs" page will not be available. Stop all activity on all channels to restart or shut down.
393- USE OLD DRIVE MAPPING	"5.25 Prefs tab" on page 179	First generation MX systems utilize a different drive connection scheme which will result in connected SSDs to be improperly listed in the user interface. If you find the position display on your MX of your installed SSD drives does not match their actual position, this function should be turned on. For additional information, contact support. See "Contacting Cinedeck" on page 2
394- SAVE AND CLOSE	"5.25 Prefs tab" on page 179	Settings on the "prefs" page are all independently saved when pressed. Click "save and close" to close setup and go back to the main screen.
395- IP ADDRESS	"5.25 Prefs tab" on page 179	The current IP addresses for the Cinedeck system are displayed here. If multiple LAN connections are available, they will all be listed.
396- SUPPORT INFO	"5.25 Prefs tab" on page 179	The phone number for Cinedeck support and the current software version are displayed here. Please see "Contacting Cinedeck" on page 2 before calling.

5.25.1 UI mode


"UI mode" on the "prefs" tab sets the basic operation of your Cinedeck. The modes available can differ depending on the hardware and software installed however all systems have two or four channel YUV which is the standard mode for multi-channel SD/HD recording and playback.

Important: When changing modes, you will be prompted to allow the Cinedeck application to automatically restart and reconfigure the associated hardware. Press "No" to cancel the mode change.

WARNING!!! The program will be restarted, do you wish to continue?

yes

no

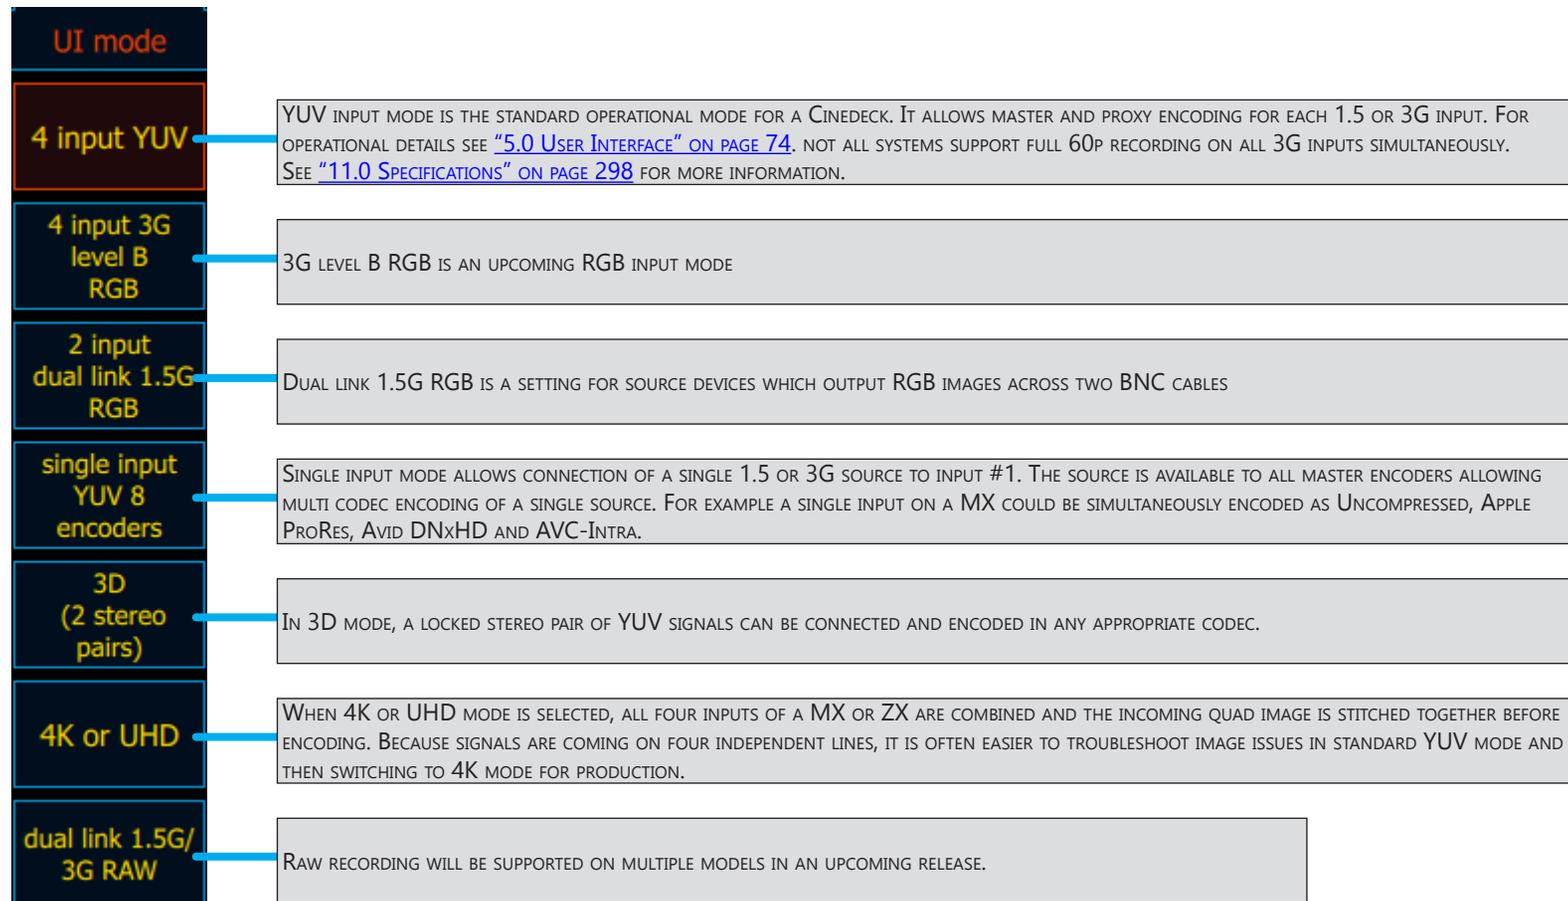

5.26 4K / UHD mode

There are generally two 4K formats available from production digital sources, full 4K and Ultra HD. While they can be cropped for various aspect ratios, for our purposes, 4K is measured as four 2K images (2048x1080) which add up to 4096 pixels x 2160 rows while UHD is measured as four HD images (1920x1080) which add up to 3840 pixels x 2160 rows. Not technically 4K but certainly close enough and a more important point is that Ultra HD, as the UHDTV-1 specification, is recommended by SMPTE, the ITU and others, to be the international broadcast format while full 4K would be the digital cinema base format.

4K and UHD YUV are really just big video images, four times the size of HD to be sort of exact. There are in fact actually four separate 2K or HD signals coming from the source which are “stitched” together as part of the recording process to form the full 4K image. And because this is standard video, post-production can be quite straight forward.

Four channel Cinedeck systems can optionally record full 4K and UHDTV-1 images simply by changing the operation mode.

To set the system mode, see [“5.25.1 UI mode” on page 185](#).

The appearance and operation in 4K mode is virtually identical to single channel mode so only differences are noted in the following descriptions.



UHD SOURCE SIGNALS



UHD SOURCE STITCHED



4K / UHD mode / - cont...

When in standby and record mode, the 4K and single channel views only have three differences.

Because there is only one channel, there is no multi view toggle.

The frame buffer indicator has four lines, one each to display the 4K, HD, Proxy and H.264 file writes.

The encode overview at the bottom changes from master and proxy to a quad listing with information, again about the 4K, HD, Proxy and H.264 files being written. The links below in the captions all connect to the single channel record view chapter here: ["6.2 Recording, single channel view" on page 196](#)

And for the full single channel view description see: ["5.9 Single channel view" on page 93](#)

405- MULTI VIEW TOGGLE - (P.197)

412- FRAME BUFFER INDICATOR - (P.199)

413- ENCODE OVERVIEW - (P.199)

The screenshot displays the Cinedeck 4K/UHD mode interface. At the top, it shows 'lock', 'TCP mode TCP/IP off', 'file TC src SDI', a large timecode '21:11:51;21', 'record mode normal', and '422 mode 422 off'. Below this is a central video window showing a scene with several people. To the left of the video is a vertical signal level indicator with 'signal', 'sync', and 'remote' levels, and buttons for 'UHD SDI', 'HD SDI', 'P SDI', 'H264 SDI', and 'bg'. To the right are buttons for 'staggered gang', 'LUT', 'char out', 'overlays', 'analysis', '100%', 'full screen', and 'stop'. At the bottom is an encode overview table.

	next file name	format	audio	a/d	LUT	TC	slate	datarate	disk	remain
1/0	D:\4Kdemo\input1\UHD\4Kdemo_input1_UHD_005.mov	ProRes HQ	4 ch	off	--	off	off	115.6 mb/sec	238 GB	216 GB
1/0	D:\4Kdemo\input1\HD\4Kdemo_input1_HD_005.mov	ProRes HQ	4 ch	off	--	off	off	28.9 mb/sec	238 GB	216 GB
1/0	D:\4Kdemo\input1\proxy\4Kdemo_input1_proxy_005.mov	ProRes Pxy	4 ch	off	off	off	off	5.5 mb/sec	238 GB	216 GB
12/0	D:\4Kdemo\input1\H264\4Kdemo_input1_H264_005.mov	H264 Main Proxy	4 ch	off	off	off	off	0.2 mb/sec	238 GB	216 GB

4K / UHD mode / - cont...

When in playback mode, the 4K and single channel views only have one difference.

Because there is only one channel, there is no multi view toggle.

For full details of single channel playback view, see: ["7.2 Playback, single channel view" on page 207](#)

For all of the common features available in single channel view see: ["5.9 Single channel view" on page 93](#)

426- MULTI VIEW
TOGGLE - (p.208)



4K / UHD mode / - cont...


User Interface

4K / UHD mode

-

5.27 V1 Signal Generator tab

Cinedecks with the “signal generator” are able to output various test patterns and audio signals for testing downstream connections. Click “enable” to turn on signal generator output for the selected channel and then set the required output settings.

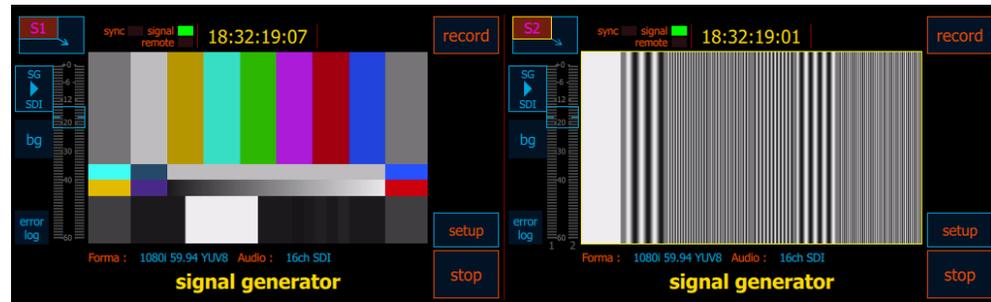

input1 overview	input1 input	input1 master	input1 proxy	TC & auto-mation	prefs	V1 signal generator	next ch	prev	
	res	fps	pixelFormat	audio		audio	video	TC output	
	2K	50	4:2:2 YUV8	off		tone	black	disabled drop frame	
	1080p	59.94	4:2:2 YUV10	SDI		setup	SMPTE HD bars		
	1080i	60		AES		file	still		
	720p			analog		[select]	[select]		
	PAL						sequence		
	PALp						[select]		
	NTSC								
	NTSCp								
						copy settings from	copy settings to	cancel	save and close

ENABEL / DISABLE

ENABEL / DISABLE DROP FRAME TC

SETUP TONE OUTPUT SEE NEXT PAGE

TOGGLE BLACK OR BARS OUTPUT

SELECT STILL TO TURN ON SINGLE IMAGE MODE

TO SELECT AND LOAD A FOLDER OF STILL IMAGES, PRESS SELECT

SELECT SEQUENCE TO TURN ON SEQUENCE MODE

TO SELECT AND LOAD A FOLDER OF STILL IMAGES, PRESS SELECT

VIDEO AND AUDIO OUTPUT SPECIFICATIONS

SELECT COPY FROM - TO COPY SETTINGS FROM ANOTHER CHANNEL

SELECT COPY TO - TO COPY SETTINGS FROM THIS CHANNEL TO OTHER CHANNELS

V1 Signal Generator tab / - cont...

V1 SDI/AES tone setup

◀ next ch prev ▶

ch 1	ch 2	ch 3	ch 4	ch 5	ch 6	ch 7	ch 8	ch 9	ch 10	ch 11	ch 12	ch 13	ch 14	ch 15	ch 16
silence															
200 Hz															
400 Hz															
600 Hz															
800 Hz															
1 kHz															
1.2 kHz															
break															

save ch1 settings to all set break duration & frequency cancel save and close

CLICK TO ADJUST BREAK FREQUENCY

CLICK TO APPLY SETTINGS TO ALL CHANNELS

CLICK TO ACTIVATE BREAKS IN AUDIO TONE GENERATION

SELECT APPROPRIATE TONE FREQUENCY AND CHANNEL

6.0 Recording

With setup complete, you can begin recording by pressing record at the upper right of the appropriate channel. If gang mode is active, you can press record on any of the ganged channels to start recording on all ganged channels.

The RX3G below is redundant recording master and proxy on two channels. The red border indicates recording is in progress and note that the red border will flash when a channel is in pre-roll before a record. Red border flashing "pre-roll" mode is seen when staggered gang is in use and when using auto-record modes such as editing.

Available controls and screen information is generally the same while recording as in standby so for controls and screen information not detailed here, see ["5.8 Multi view screen" on page 88](#) and ["5.9 Single channel view" on page 93](#).

In standard SD/HD mode, there is one quadrant for each channel so depending on your Cinedeck model, there will be two or four quadrants like these. Surrounding each channel video preview, are multiple data areas for immediate access to the most important information and buttons for accessing the most important functions.

Recording specific controls and screen areas are discussed on the next pages.




6.1 Recording, multi view

Below is one of the multi view quadrants.

As in standby mode, the selected channel (the channel which has the focus) is indicated by a yellow border around the video preview the yellow timecode.

The key information items while recording are; drive space & time, start & elapsed time and the frame buffer indicator.

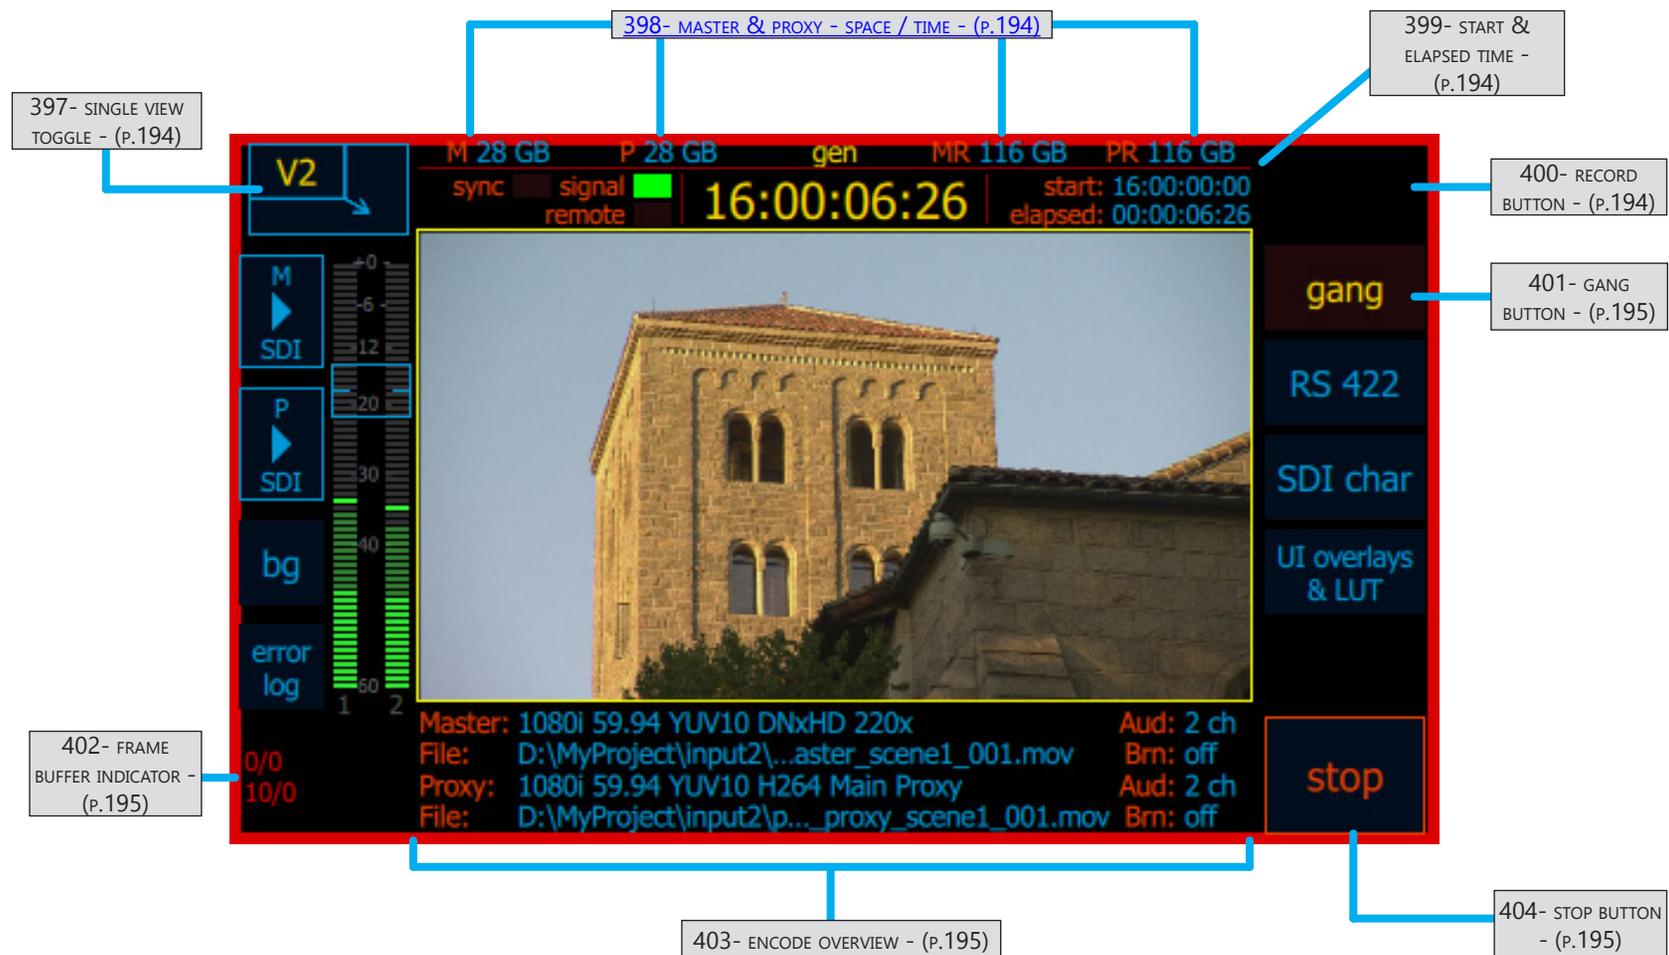


Recording, multi view / - cont...

Name	Location	Description								
397- SINGLE VIEW TOGGLE	"6.1 Recording, multi view" on page 193	The single view toggle which switches the user interface between multi view and single remains active during recording.								
398- MASTER & PROXY - SPACE / TIME	"6.1 Recording, multi view" on page 193	When recording, the primary and redundant, master and proxy space/time displays will auto toggle between approximate remaining space and time, based on the selected encode bitrate. Note; the system is unaware if other channels are being written to the same destination drive so the available time estimate may need to be divided to accurately reflect actual space and time available.								
399- START & ELAPSED TIME	"6.1 Recording, multi view" on page 193	During recording, the "start" and "elapsed" time display indicates the timecode the recording started and a running elapsed time of the current recording.								
400- RECORD BUTTON	"6.1 Recording, multi view" on page 193	<p>In normal mode, once recording starts, the record button disappears however, if one of the special record modes is active, the record button will be replaced by other record related buttons.</p> <p> When "increment" segment mode or "TC break" segment mode are active, the system will automatically close the current recording segments based on the incoming timecode.</p> <p> When "break" segment mode is active, the operator can press this button to close the current recording segment.</p> <p> When "pause" is active, pressing this button stops the encoding process but the file remains open until stop is pressed.</p> <p>For EDL recording, the button will change states depending on the current activity,</p> <table border="1"> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>"load edl" means an EDL is in ready but recording has not been activated. Press to start.</td> <td>"preroll" indicates EDL mode is active. The system is waiting for the first event.</td> <td>"next stop" means a file is recording. The system is waiting for a stop trigger.</td> <td>"next start" means the system is waiting for the next event start time.</td> </tr> </table>					"load edl" means an EDL is in ready but recording has not been activated. Press to start.	"preroll" indicates EDL mode is active. The system is waiting for the first event.	"next stop" means a file is recording. The system is waiting for a stop trigger.	"next start" means the system is waiting for the next event start time.
										
"load edl" means an EDL is in ready but recording has not been activated. Press to start.	"preroll" indicates EDL mode is active. The system is waiting for the first event.	"next stop" means a file is recording. The system is waiting for a stop trigger.	"next start" means the system is waiting for the next event start time.							

Recording

Recording, multi view

Recording, multi view / - cont...

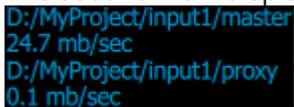Name	Location	Description
401- GANG BUTTON	"6.1 Recording, multi view" on page 193	Gang mode is also in effect for stopping a recording. If staggered mode is in use, stopping each channel also happens sequentially, one by one after the user defined time delay.
402- FRAME BUFFER INDICATOR	"6.1 Recording, multi view" on page 193	<p>The frame buffer indicator provides very useful real-time details on recording and drive performance.</p> <p> The top row indicates the master encode. The second row indicates the proxy encode.</p> <p>The numbers to the left of the "/" indicate frame buffer usage for encoding and will be different for different codecs. In this case the counter for the master is zero. Low numbers like "0" or "1" are common for "I" frame (intra frame) encoding. The proxy indicates "10" which is indicative of a long GoP recording, in this case H.264.</p> <p>The numbers after the "/" indicate frame buffer usage for file writing. Generally, the write buffer should be at zero. It may bump up occasionally, especially when segment mode file break is triggered. If the buffer constantly climbs or constantly pulses, that is indicative of more serious file write issue. This could be a failing drive, a drive controller which cannot handle the contrinuous data stream, bandwidth issues, etc.</p>
403- ENCODE OVERVIEW	"6.1 Recording, multi view" on page 193	<p>When touched or clicked, the encode overview region shows one of three screens;</p> <ol style="list-style-type: none"> 1. The default view displays current input, codec and file name settings for the master and proxy with the number of audio channels and character burn status. 2. The second view displays the destination folder path and when recording, the approximate encode data rate for the master and proxy are shown.  3. The third view shows the current project name, scene and sub scene names.
404- STOP BUTTON	"6.1 Recording, multi view" on page 193	<p>Pressing "stop" ends a current recording.</p> <p>Note that by default, stopping a recording requires a long press of about 3 seconds to prevent accidental stops. If gang is in use, all selected channels will stop.</p>

6.2 Recording, single channel view

Recording







Recording, single channel view



Recording, single channel view / - cont...

Name	Location	Description
405- MULTI VIEW TOGGLE	"6.2 Recording, single channel view" on page 196	The multi view toggle which switches the user interface between multi view and single remains active during recording.
406- LOCK	"6.2 Recording, single channel view" on page 196	This slider can be used to lock and unlock the display. On MX, it is still possible to toggle the channel view using the tactile control panel while on other systems nothing can be done until the screen is unlocked. Touch and slide the control to the right to lock and unlock.
407- ELAPSED	"6.2 Recording, single channel view" on page 196	During recording, this displays a running elapsed time of the current recording.
408- START	"6.2 Recording, single channel view" on page 196	During recording, "start" indicates the timecode the recording started.
409- END	"6.2 Recording, single channel view" on page 196	During recording, "end" indicates the timecode the recording ends.

Recording, single channel view / - cont...

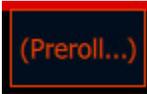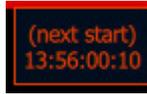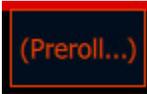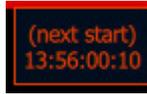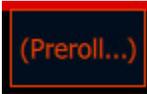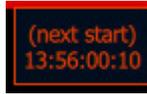Name	Location	Description								
410- RECORD BUTTON	"6.2 Recording, single channel view" on page 196	<p>In normal mode, once recording starts, the record button disappears however, if one of the special record modes is active, the record button will be replaced by other record related buttons.</p> <p> When "increment" segment mode or "TC break" segment mode are active, the system will automatically close the current recording segments based on the incoming timecode.</p> <p> When "break" segment mode is active, the operator can press this button to close the current recording segment.</p> <p> When "pause" is active, pressing this button stops the encoding process but the file remains open until stop is pressed.</p> <p>For EDL recording, the button will change states depending on the current activity,</p> <table border="1"> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>"load edl" means an EDL is in ready but recording has not been activated. Press to start.</td> <td>"preroll" indicates EDL mode is active. The system is waiting for the first event.</td> <td>"next stop" means a file is recording. The system is waiting for a stop trigger.</td> <td>"next start" means the system is waiting for the next event start time.</td> </tr> </table>					"load edl" means an EDL is in ready but recording has not been activated. Press to start.	"preroll" indicates EDL mode is active. The system is waiting for the first event.	"next stop" means a file is recording. The system is waiting for a stop trigger.	"next start" means the system is waiting for the next event start time.
										
"load edl" means an EDL is in ready but recording has not been activated. Press to start.	"preroll" indicates EDL mode is active. The system is waiting for the first event.	"next stop" means a file is recording. The system is waiting for a stop trigger.	"next start" means the system is waiting for the next event start time.							
411- GANG BUTTON	"6.2 Recording, single channel view" on page 196	Gang mode is also in effect for stopping a recording. If staggered mode is in use, stopping each channel also happens sequentially, one by one after the user defined time delay.								

Recording, single channel view / - cont...

Name	Location	Description
412- FRAME BUFFER INDICATOR	"6.2 Recording, single channel view" on page 196	<p>The frame buffer indicator provides very useful real-time details on recording and drive performance.</p> <p>0/0 The top row indicates the master encode. 10/0 The second row indicates the proxy encode.</p> <p>The numbers to the left of the "/" indicate frame buffer usage for encoding and will be different for different codecs. In this case the counter for the master is zero. Low numbers like "0" or "1" are common for "I" frame (intra frame) encoding. The proxy indicates "10" which is indicative of a long GoP recording, in this case H.264.</p> <p>The numbers after the "/" indicate frame buffer usage for file writing. Generally, the write buffer should be at zero. It may bump up occasionally, especially when segment mode file break is triggered. If the buffer constantly climbs or constantly pulses, that is indicative of more serious file write issue. This could be a failing drive, a drive controller which cannot handle the contrinious data stream, bandwidth issues, etc.</p>
413- ENCODE OVERVIEW	"6.2 Recording, single channel view" on page 196	<p>As noted, the one difference between standby mode and recording when in single channel view is that when recording, the area between "slate" and "disk" opens up to reveal a data rate display for each encode.</p> <p>See "156- encode overview" on page 96 for additional details.</p>
414- STOP BUTTON	"6.2 Recording, single channel view" on page 196	<p>Pressing "stop" ends a current recording.</p> <p>Note that by default, stopping a recording requires a long press of about 3 seconds to prevent accidental stops. If gang is in use, all selected channels will stop.</p>

This Page intentionally left blank.

7.0 Playback

Because the Cinedeck playback engine automatically detects the specifications of a file, playing a file requires no special setup meaning content can be played without regard to the settings of the selected channel. If recording has just completed and “play” at the lower left of that channel on the multi or single channel view is pressed, the last recording will be loaded into that channel and playback transport controls are displayed below the video preview.

If play is pressed on a channel which has not recorded a file, “clip manager” will open where you can navigate between drives and folders to select content to play. When a clip is already loaded for playback, “clip manager” can be accessed by pressing open at the lower left of the channel view.

Below is the two channel view on a RX3G. Channel one on the left has a clip loaded for playback. The right channel is in standby.

Most of the controls remain the same between standby and play mode so as with the previous section covering recording, only playback specific controls are discussed in this section.


It should be noted that if a standard USB keyboard is connected, the common J-K-L keyboard controls can be used in playback mode



7.1 Playback, multi view

Cinedecks are full duplex I/O systems meaning each channel can perform activities independently from other channels. In the multi view image above, channel 1 is in play mode while channel 2 is in standby and could record when needed.


Below, only channel 1 of the multi view is shown.

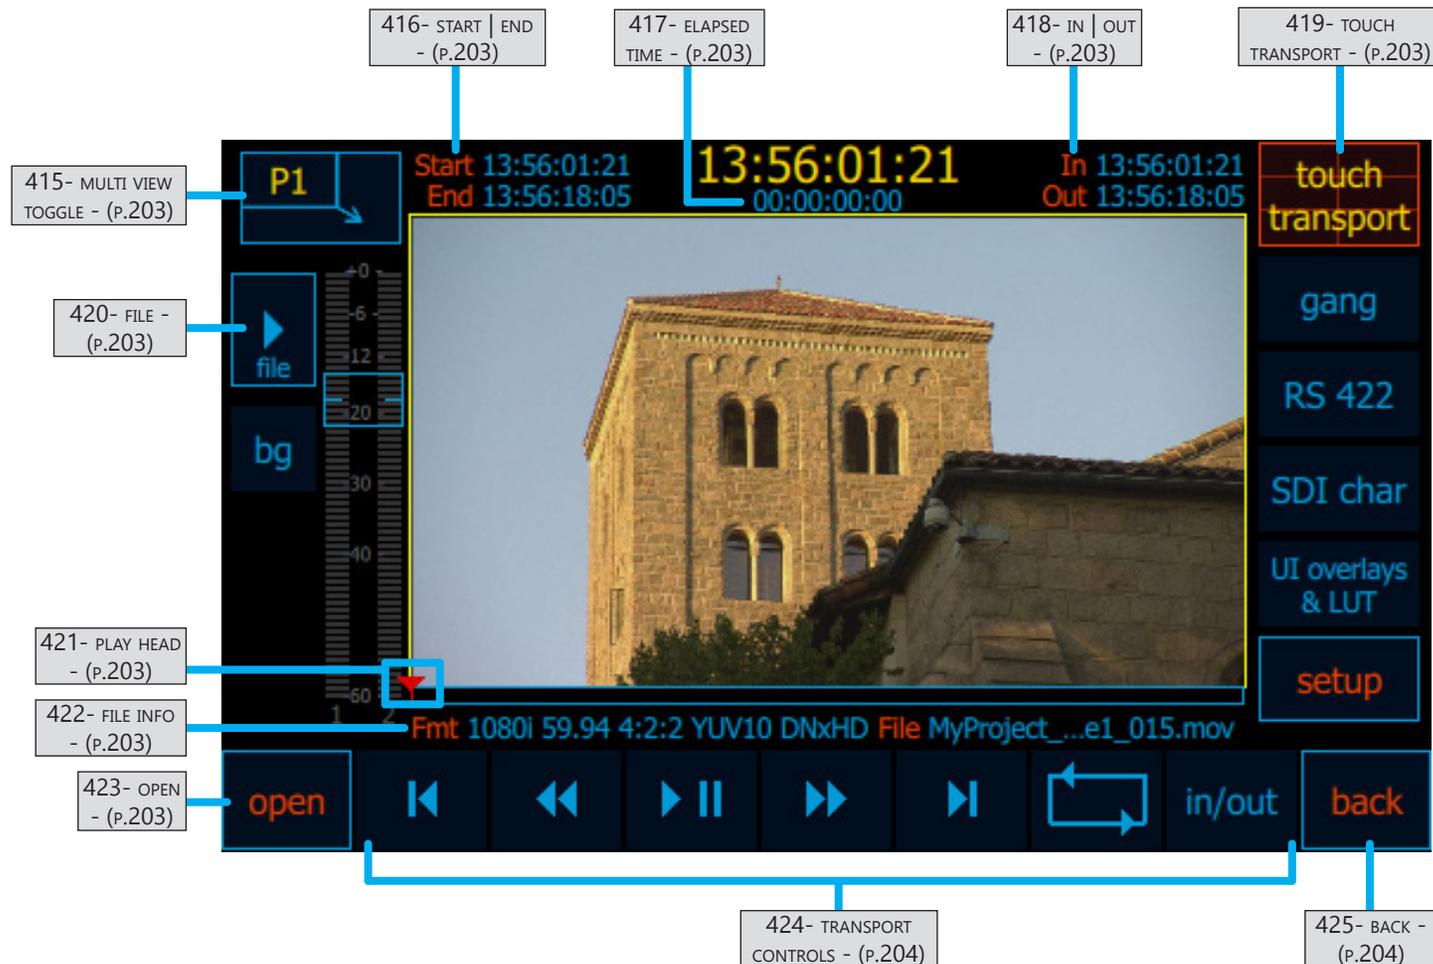

Playback, multi view / - cont...

Name	Location	Description
415- MULTI VIEW TOGGLE	"7.1 Playback, multi view" on page 202	The multi view toggle which switches the user interface between multi view and single remains active during recording and playback.
416- START END	"7.1 Playback, multi view" on page 202	The start and end timecodes of the clip loaded for playback are displayed. If multiple clips are loaded, the start timecode of the first clip and the end timecode of the last is displayed. If a playlist is loaded, the start and end timecodes of the loaded playlist are displayed.
417- ELAPSED TIME	"7.1 Playback, multi view" on page 202	Whether a single clip, multiple clips or a playlist is loaded, elapsed time shows the time duration between the start and the current play head position.
418- IN OUT	"7.1 Playback, multi view" on page 202	"In" and "Out" initially show the start and end timecodes of the loaded clip, clips or playlist. When an in-point and/or out-point have been set, those timecodes are displayed.
419- TOUCH TRANSPORT	"7.1 Playback, multi view" on page 202	The Cinedeck interface supports touch and mouse drag transport actions on the video preview part of the screen. Above, the "touch transport" button is activated, noted by the orange border. See "7.1.1 Playback, touch transport" on page 205
420- FILE	"7.1 Playback, multi view" on page 202	Although named differently than ("P" & "M") on the standby view, the "file" button also toggles the on screen overlay of the audio channels, in this case, the audio channels present in the loaded file. When this overlay is active it is possible to select a different channel pair for monitoring. A long press opens the audio monitor control screen where the headphone level can be adjusted, monitored channel pair can be selected and a custom monitor mix can be setup.
421- PLAY HEAD	"7.1 Playback, multi view" on page 202	The orange inverted triangle play head marker is always located at the currently displayed video frame. The play head can be clicked and dragged to scrub the video. Note that if play mode is active, audio can be heard during scrubbing but scrub performance is better when playback is stopped. Additionally, scrub performance is better with I frame codecs than GoP codecs.
422- FILE INFO	"7.1 Playback, multi view" on page 202	The file info region shows the format and file name for the current file. If multiple files or a playlist are loaded, the display will change to reflect the file being played.
423- OPEN	"7.1 Playback, multi view" on page 202	Press "open" to access "clip manager" and "playlists manager". See "7.3 Clip manager" on page 211 and "7.4 Playlist manager" on page 218

Playback, multi view / - cont...

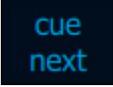Name	Location	Description														
424- TRANSPORT CONTROLS	"7.1 Playback, multi view" on page 202	<p>Playback in multi view includes a full array of transport controls.</p>  <table border="1" data-bbox="735 483 1831 943"> <thead> <tr> <th data-bbox="735 483 892 553">Goto Start</th> <th data-bbox="892 483 1050 553">Rewind</th> <th data-bbox="1050 483 1207 553">Play-Pause</th> <th data-bbox="1207 483 1365 553">Forward Fast</th> <th data-bbox="1365 483 1522 553">Goto End</th> <th data-bbox="1522 483 1680 553">Loop / Ping-Pong</th> <th data-bbox="1680 483 1831 553">In / Out</th> </tr> </thead> <tbody> <tr> <td data-bbox="735 553 892 943">Pressing here will move the playhead to the start of the loaded clip. (* See note below)</td> <td data-bbox="892 553 1050 943">By default, rewind is 4x. Press again to pause. A long press displays additional slow and fast options.</td> <td data-bbox="1050 553 1207 943">Press to play. Press again to pause</td> <td data-bbox="1207 553 1365 943">By default, fast forward is 4x. Press again to pause. A long press displays additional slow and fast options.</td> <td data-bbox="1365 553 1522 943">Pressing here will move the playhead to the end of the loaded clip. (* See note below)</td> <td data-bbox="1522 553 1680 943">Press to activate continuous looping playback. Long press to select continuous ping-pong playback.</td> <td data-bbox="1680 553 1831 943">Press to set, clear or goto in and out points.</td> </tr> </tbody> </table> <p>* When multiple clips or a playlist are loaded, the "goto" buttons change their mode.</p> <p> Press "cue prev" to move the playhead to the previous clip</p> <p> Press "cue next" to move the playhead to the next clip.</p>	Goto Start	Rewind	Play-Pause	Forward Fast	Goto End	Loop / Ping-Pong	In / Out	Pressing here will move the playhead to the start of the loaded clip. (* See note below)	By default, rewind is 4x. Press again to pause. A long press displays additional slow and fast options.	Press to play. Press again to pause	By default, fast forward is 4x. Press again to pause. A long press displays additional slow and fast options.	Pressing here will move the playhead to the end of the loaded clip. (* See note below)	Press to activate continuous looping playback. Long press to select continuous ping-pong playback.	Press to set, clear or goto in and out points.
Goto Start	Rewind	Play-Pause	Forward Fast	Goto End	Loop / Ping-Pong	In / Out										
Pressing here will move the playhead to the start of the loaded clip. (* See note below)	By default, rewind is 4x. Press again to pause. A long press displays additional slow and fast options.	Press to play. Press again to pause	By default, fast forward is 4x. Press again to pause. A long press displays additional slow and fast options.	Pressing here will move the playhead to the end of the loaded clip. (* See note below)	Press to activate continuous looping playback. Long press to select continuous ping-pong playback.	Press to set, clear or goto in and out points.										
425- BACK	"7.1 Playback, multi view" on page 202	Pressing "back" returns the interface to the previous standby mode.														

Playback

Playback, multi view

7.1.1 Playback, touch transport

When the “touch transport” button at the upper right is pressed to toggle touch control on, a momentary overlay is displayed which shows the available on-screen touch functions and the grid area where they are active.

The screenshot displays the Cinedeck playback interface with a touch transport overlay. The overlay consists of a grid of yellow buttons for various transport functions. The background shows a video frame with a building. The interface includes various controls like 'file', 'bg', 'touch transport', 'gang', 'RS 422', 'SDI char', 'UI overlays & LUT', 'setup', 'open', 'back', and playback buttons at the bottom.

Annotations:

- Top Left:** TAP OR CLICK THIS TOP AREA OF THE SCREEN TO MOVE FRAME BY FRAME IN REVERSE.
- Top Center:** TAP OR CLICK THIS TOP AREA OF THE SCREEN TO MOVE FORWARD FRAME BY FRAME.
- Top Right:** TAP OR CLICK TO TOGGLE “TOUCH TRANSPORT” MODE ON AND OFF.
- Middle Left:** TAP, CLICK OR DRAG IN THIS MIDDLE AREA TO USE VARIABLE SPEED REVERSE PLAY.
- Middle Right:** TAP, CLICK OR DRAG IN THIS MIDDLE AREA TO USE VARIABLE SPEED FORWARD PLAY.
- Bottom Left:** TAP, CLICK OR PRESS IN THIS LOWER AREA TO REVERSE SHUTTLE. RELEASE TO PAUSE.
- Bottom Right:** TAP, CLICK OR PRESS THIS LOWER AREA TO FORWARD SHUTTLE. RELEASE TO PAUSE.

7.1.2 -

This Page intentionally left blank.


Playback

Playback, multi view

-

7.2 Playback, single channel view

When in playback mode, the interface provides most of the same features seen in record mode, including access to all of the analysis tools.

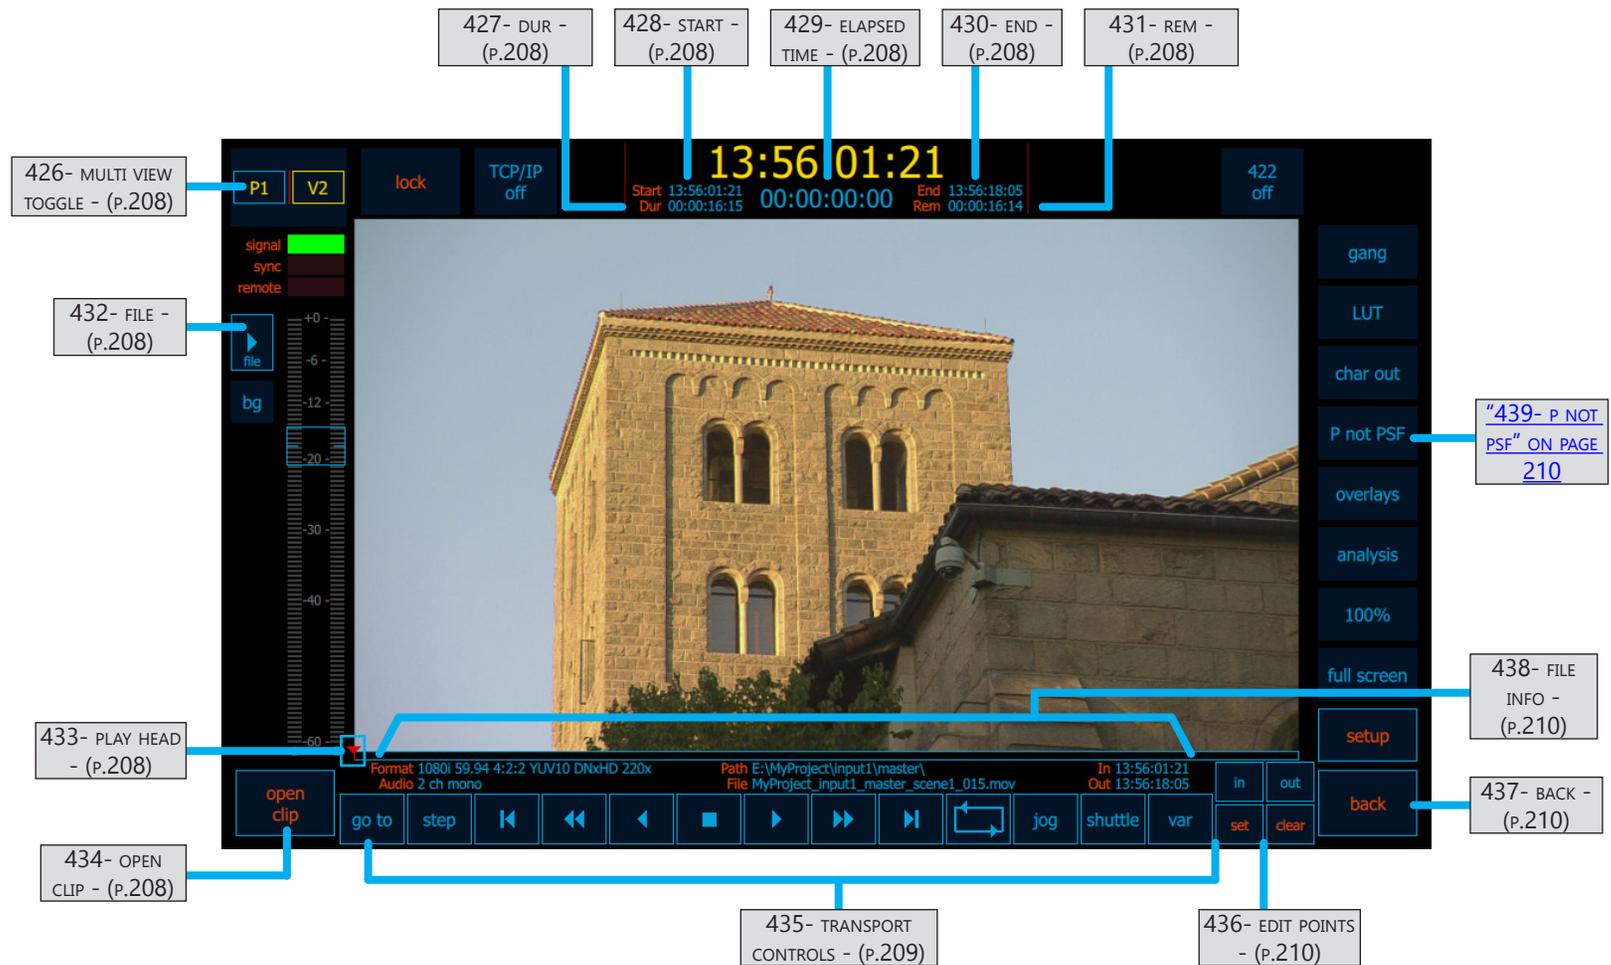

Playback, single channel view / - cont...

Name	Location	Description
426- MULTI VIEW TOGGLE	7.2 Playback, single channel view - (p.207)	The multi view toggle which switches the user interface between multi view and single remains active during recording and playback.
427- DUR	7.2 Playback, single channel view - (p.207)	The duration of the clip loaded for playback is displayed. If multiple clips or a playlist are loaded, the total duration of all clips is displayed.
428- START	7.2 Playback, single channel view - (p.207)	The start timecode of the clip loaded for playback is displayed. If multiple clips or a playlist are loaded, the start timecode of the first clip is displayed.
429- ELAPSED TIME	7.2 Playback, single channel view - (p.207)	Whether a single clip, multiple clips or a playlist is loaded, elapsed time shows the time duration between the start and the current play head position.
430- END	7.2 Playback, single channel view - (p.207)	The end timecode of the clip or playlist loaded for playback is displayed. If multiple clips are loaded, the end timecode of the last clip is displayed.
431- REM	7.2 Playback, single channel view - (p.207)	The total remaining playback time of the loaded clip, clips or playlist is displayed.
432- FILE	7.2 Playback, single channel view - (p.207)	Although named differently than ("P" & "M") on the standby view, the "file" button also toggles the on screen overlay of the audio channels, in this case, the audio channels present in the loaded file. When this overlay is active it is possible to select a different channel pair for monitoring. A long press opens the audio monitor control screen where the headphone level can be adjusted, monitored channel pair can be selected and a custom monitor mix can be setup.
433- PLAY HEAD	7.2 Playback, single channel view - (p.207)	The orange inverted triangle play head marker is always located at the currently displayed video frame. The play head can be clicked and dragged to scrub the video. Note that if play mode is active, audio can be heard during scrubbing but scrub performance is better when playback is stopped. Additionally, scrub performance is better with I frame codecs than GoP codecs.
434- OPEN CLIP	7.2 Playback, single channel view - (p.207)	Press "open" to access "clip manager" and "playlists manager". See "7.3 Clip manager" on page 211 and "7.4 Playlist manager" on page 218

Playback, single channel view / - cont...

Name	Location	Description			
435- TRANSPORT CONTROLS	7.2 Playback, single channel view - (p.207)	Playback in single channel view includes an extended array of transport controls.			
					
			Pressing here opens a timecode keypad to enter a goto timecode. This function is not available when multiple clips are loaded.		By default, fast forward is 4x. Press again to pause. A long press displays additional slow and fast options.
			Tap or click "step" to activate buttons for moving frame by frame in forward and reverse.		Pressing here will move the playhead to the end of the loaded clip. (* See note below)
			Pressing here will move the playhead to the start of the loaded clip. (* See note below)		Press to activate continuous looping playback. Long press to select continuous ping-pong playback.
			By default, rewind is 4x. Press again to pause. A long press displays additional slow and fast options.		Select jog to activate "touch transport" in jog mode. Jog by pressing making rotating movements.
			Play in reverse		
			Stop		
			Play forward		
	* When multiple clips or a playlist are loaded, the  mode and symbol changes. Press "cue prev" to move the playhead to the previous clip		* When multiple clips or a playlist are loaded, the  mode changes. Press "cue next" to move the playhead to the next clip		


Playback
Playback, single channel view

Playback, single channel view / - cont...

Name	Location	Description
436- EDIT POINTS	7.2 Playback, single channel view - (p.207)	 <p>Loaded clips and playlists can be restricted by edit points set directly in the play interface. (these edit points are not saved with the clip) First press the command and then the type of point i.e., press "set" and then press "in". The "I" and "O" keys on a connected keyboard can also be used to set in and out points.</p>
437- BACK	7.2 Playback, single channel view - (p.207)	Pressing "back" returns the screen to the multi or single channel standby view.
438- FILE INFO	7.2 Playback, single channel view - (p.207)	<p>The file info region shows format, audio, file name and path information for the current file. If multiple files or a playlist are loaded, the display will change to reflect the file being played.</p> <p>"In" and "Out" reflect the start timecode or in-point and end timecode or out-point for the clip or clips.</p>
439- P NOT PSF	7.2 Playback, single channel view - (p.207)	Select this for playback if your files contain true progressive frames vs the more common progressive segmented frames (PsF - progressive frames divided and interlaced for compatibility with a broader range of video equipment)

7.3 Clip manager

Clip manager provides access to clips for playback and file management. The view is filtered left to right. First select a drive at the left, then select folders in the middle and then files can be viewed selected.

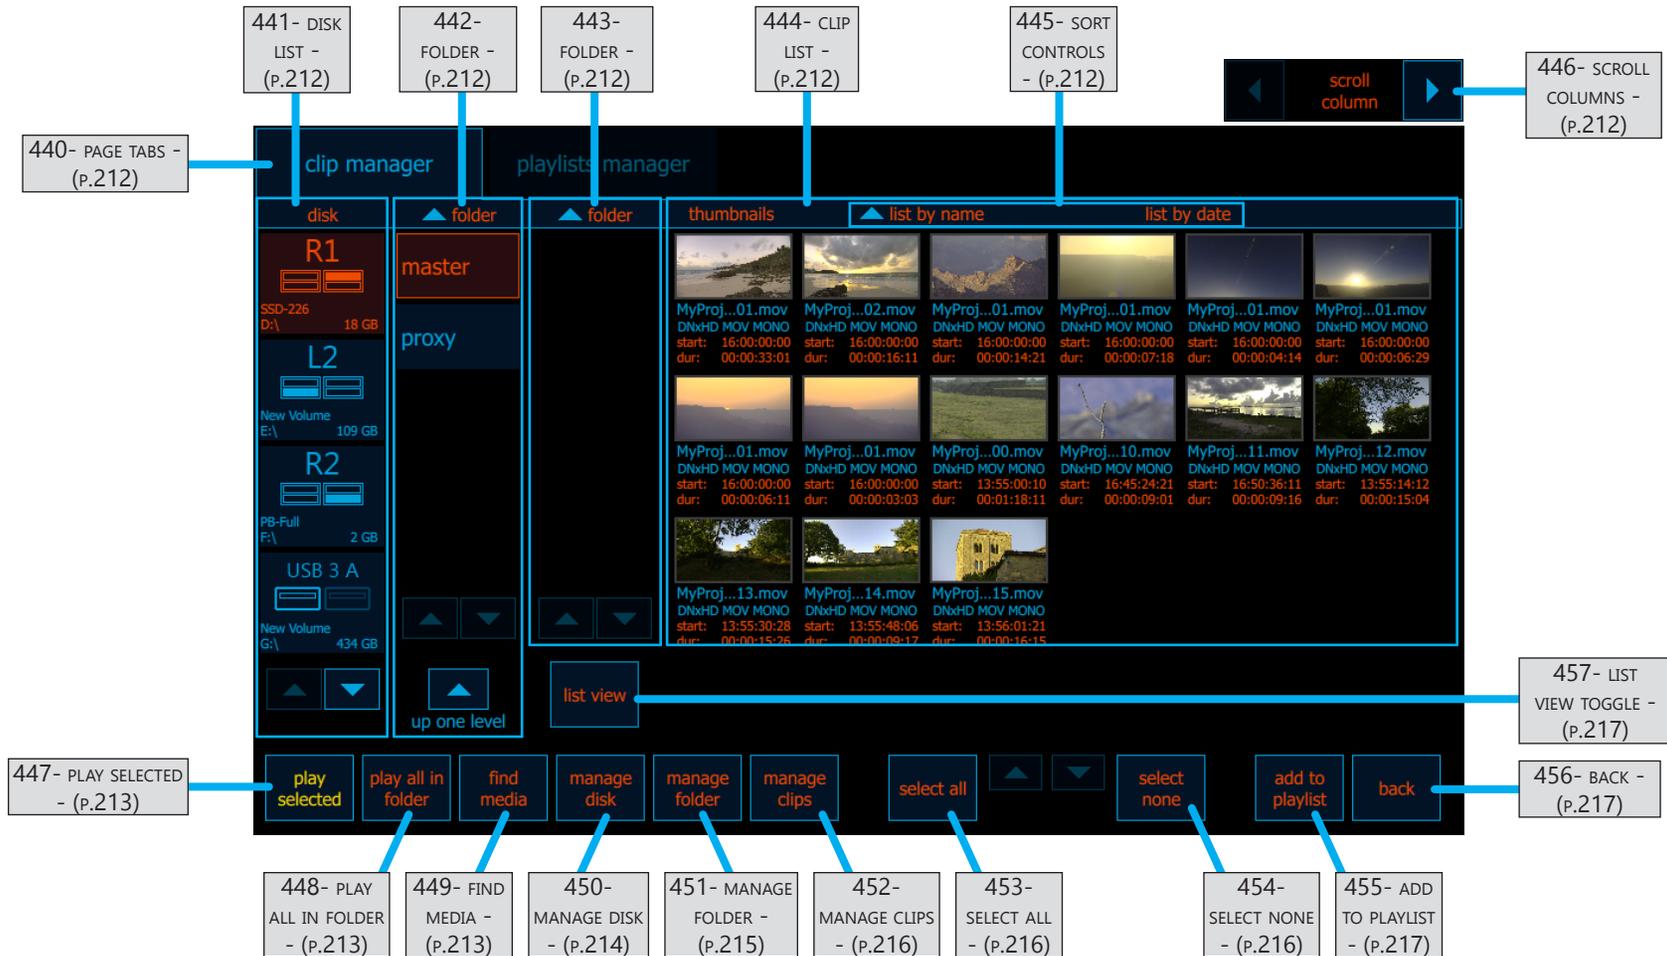

Important! Cinedecks maintain a sql database of media content. New recordings are automatically added to the database. Previously recorded content and files generated by other systems can be added to the database so they also are visible in clip manager. See ["449- find media" on page 213](#)

Clip manager / - cont...

Name	Location	Description
440- PAGE TABS	7.3 Clip manager - (p.211)	The page selector tabs are always visible in the clip manager area. These can be clicked to provide direct access to each section.
441- DISK LIST	7.3 Clip manager - (p.211)	The disk listing displays all of the media drives available to the Cinedeck. Below the disk list, as with most lists, are navigation arrows  which become active for moving through lists which contain more entries than can be displayed on one screen.
442- FOLDER	7.3 Clip manager - (p.211)	The "folder" and "sub"-folder columns work the same way and in conjunction with each other to allow better folder navigation and visibility. Press a folder to select it. Press  "up one level" to move to a level higher in the folder hierarchical structure and press a "sub" folder to navigate down one level in the folder hierarchical structure.
443- FOLDER	7.3 Clip manager - (p.211)	The "folder" and "sub"-folder columns work the same way and in conjunction with each other to allow better folder navigation and visibility. Press a folder to select it. Press  "up one level" to move a level higher in the folder hierarchical structure and press a "sub" folder to navigate down one level in the folder hierarchical structure.
444- CLIP LIST	7.3 Clip manager - (p.211)	The "clip list" displays all of the Cinedeck accessible media files within the selected folder. The default is "thumbs", a thumbnail view but there is also a list view available with more content information, see "457- list view toggle" on page 217 Below the clip list are navigation arrows  which become active for moving through lists which contain more entries than can be displayed on one screen. (Note: clip manager only shows media files recognized by the Cinedeck. It is possible that folders contain other non media files which are not shown)
445- SORT CONTROLS	7.3 Clip manager - (p.211)	There are several list sorting controls located above the clip list in "thumbs" and "list" view,. Press a sort name to sort the list by that data. Press the same sorting name again to sort the list in reverse order. The selected sort and sort direction is indicated by the green arrow  list by name
446- SCROLL COLUMNS	7.3 Clip manager - (p.211)	This control is only visible when list view is active. See "457- list view toggle" on page 217

Clip manager / - cont...

Name	Location	Description
447- PLAY SELECTED	7.3 Clip manager - (p.211)	Press "play selected" to load the selected clip or clips into the channel player and go back to the previous multi or single channel playback view.
448- PLAY ALL IN FOLDER	7.3 Clip manager - (p.211)	Select "play all in folder" to load all of the clips in the current folder for playback and return to the previous multi or single channel playback view.
449- FIND MEDIA	7.3 Clip manager - (p.211)	<p>Cinedecks maintain a sql database of media content. New recordings are automatically added to the database while previously recorded content and files generated by other systems can be added to the database so they also are visible in clip manager.</p> <p>The find media menu contains several search methods for loading content into the media database. Important to note is the database is not aware of content being removed using applications outside the Cinedeck environment so if, for example, folder content is changed using Windows Explorer, performing a scan will refresh the view, removing deleted clips, to only show content actually available.</p> <div style="display: flex; align-items: flex-start;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px; text-align: center;"> add media to database </div> <div> <p>The recommended method for adding or refreshing folder views is "add media to database" which opens a folder and file viewer. Select a disk, navigate to the folder containing the required content and press scan at the lower right of the viewer screen.</p> </div> </div> <div style="display: flex; align-items: flex-start; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px; text-align: center;"> scan folder for media </div> <div> <p>For smaller drives, "scan folder for media" can be used. First select a drive and then select "scan folder for media".</p> </div> </div> <div style="display: flex; align-items: flex-start; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px; text-align: center;"> scan disk for folders </div> <div> <p>Use "scan disk for folders" to only populate the database with folders containing media.</p> </div> </div> <div style="display: flex; align-items: flex-start; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px; text-align: center;"> scan for media disks </div> <div> <p>Use "scan for media disks" to force the system to rescan the hardware ports for drives.</p> </div> </div> <div style="display: flex; align-items: flex-start; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-right: 10px; width: 100px; text-align: center;"> find media </div> </div>




Clip manager / - cont...

Name	Location	Description
450- MANAGE DISK	7.3 Clip manager - (p.211)	<p>Use "manage disk" to perform tasks such as drive formatting. Destructive functions will be grayed out and unavailable if "disable file delete and disk erase" is enabled on the prefs page. See "386- prefs" on page 182</p> <p>format NTFS Use "format NTFS" to format the selected drive using the recommended NTFS file system format. Formatting drives is recommended when setting up for a new recording session.</p> <p>format exFAT Use "format exFAT" to format the selected drive using the exFAT file system. exFAT is convenient for Apple computers however better, is for the Apple computers to have NTFS read and if needed, write capabilities.</p> <p>erase Use "erase" to delete all of the content from the selected disk. This can be a bit faster but formatting is recommended.</p> <p>eject If you want to remove a drive from the system, first select it and then press "eject". Remember that Cinedeck SSDs are often installed, two drives in a sled, so be sure to check and eject both drives.</p> <p>copy disk content to Use "copy disk content" to copy the entire contents of a drive to another disk.</p> <p>rename Use rename to rename the disk to say something other than the default "New Volume".</p> <p>manage disk</p>

Clip manager / - cont...

Name	Location	Description										
451- MANAGE FOLDER	7.3 Clip manager - (p.211)	<p>Use "manage folder" to perform tasks such as manually creating new folders. Destructive functions will be grayed out and unavailable if "disable file delete and disk erase" is enabled on the prefs page. See "386- prefs" on page 182</p> <table border="0"> <tr> <td data-bbox="737 415 888 532">delete</td> <td data-bbox="888 415 1845 532">Use "delete" to delete the selected folder. Folders which contain content cannot be deleted unless the content is first removed.</td> </tr> <tr> <td data-bbox="737 545 888 662">new</td> <td data-bbox="888 545 1845 662">Use "new:" to create a new folder (sub-folder) under the selected folder.</td> </tr> <tr> <td data-bbox="737 675 888 792">copy folder to</td> <td data-bbox="888 675 1845 792">Use "copy folder to" to copy the selected folder to another location.</td> </tr> <tr> <td data-bbox="737 805 888 922">rename</td> <td data-bbox="888 805 1845 922">Use rename to rename the selected folder.</td> </tr> <tr> <td data-bbox="737 935 888 1045">manage folder</td> <td data-bbox="888 935 1845 1045"></td> </tr> </table>	delete	Use "delete" to delete the selected folder. Folders which contain content cannot be deleted unless the content is first removed.	new	Use "new:" to create a new folder (sub-folder) under the selected folder.	copy folder to	Use "copy folder to" to copy the selected folder to another location.	rename	Use rename to rename the selected folder.	manage folder	
delete	Use "delete" to delete the selected folder. Folders which contain content cannot be deleted unless the content is first removed.											
new	Use "new:" to create a new folder (sub-folder) under the selected folder.											
copy folder to	Use "copy folder to" to copy the selected folder to another location.											
rename	Use rename to rename the selected folder.											
manage folder												

Clip manager / - cont...

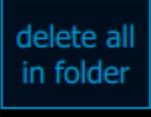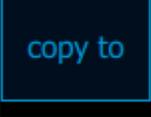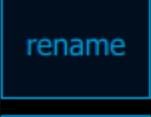Name	Location	Description
452- MANAGE CLIPS	7.3 Clip manager - (p.211)	 Use "delete selected" to delete selected clips.
		 Use "delete all in folder" to delete all of the clips in the current folder.
		 "rewrap" selected is an upcoming feature.
		 "transcode selected" is an upcoming feature.
		 Use "copy to" to copy the selected clips to another destination.
		 Use "rename" to rename a selected clip
		
453- SELECT ALL	7.3 Clip manager - (p.211)	Press the "select all" button to select all of the clips in the current folder.
454- SELECT NONE	7.3 Clip manager - (p.211)	Press the "select none" button to deselect all of the clips in the current folder.

Clip manager / - cont...

Name	Location	Description
455- ADD TO PLAYLIST	7.3 Clip manager - (p.211)	<p>Cinedecks have a simple, non-linear editing interface (playlist manager), for compiling clips and sub-clips into a single (virtual) container for playout. Press here to add selected clips to a new or existing playlist. Note that all clips must be the same frame rate and color bit depth to be included in the same playlist. See "7.4 Playlist manager" on page 218</p> <p>If you choose "new playlist from selected";</p> <ul style="list-style-type: none"> • Select the drive where you want to save the playlist • Select the "file name" field (right of the "file name" label and enter a file name • Press "save and close and press "OK" • Playlist manager opens and you can navigate to the location where the playlist was saved and open it in the playlist editor or play it out. <p>If you choose "add to existing playlist";</p> <ul style="list-style-type: none"> • Select the drive where the destination playlist is saved and navigate to and select the desired playlist. • Press "select" from the bottom of the screen. • Playlist manager opens and you can navigate to the location where the playlist was saved and open it in the playlist editor or play it out.
456- BACK	7.3 Clip manager - (p.211)	Select "back" to close clip manager and return the the previous single or multi channel view.
457- LIST VIEW TOGGLE	7.3 Clip manager - (p.211)	<p>Press the thumbs/list toggle to switch the clip manager view between thumbnail view and the more detailed, list view.</p> <p>In list view there is a column scroll control  at the top right corner to bring additional data into view.</p>

7.4 Playlist manager

A playlist is a virtual clip which contains multiple clips and sub-clips. In fact, a playlist is nothing more than an XML file which points to clips and portions of clips to allow various sequential playback and export functions and the playlist manager provides access to opening and managing playlists..

The screenshot shows the Playlist Manager interface with the following callout boxes:

- 459- DISK LIST - (p.219)
- 460- FOLDERS - (p.219)
- 461- PLAYLISTS LIST - (p.219)
- 462- SORT CONTROLS - (p.219)
- 463- SELECT BUTTONS - (p.219)
- 458- PAGE TABS - (p.219)
- 464- PLAY SELECTED - (p.219)
- 465- PLAY ALL IN FOLDER - (p.219)
- 466- EDIT SELECTED PLAYLIST - (p.219)
- 467- MANAGE PLAYLISTS - (p.220)
- 468- LIST VIEW TOGGLE - (p.220)
- 469- EXPORT - (p.220)
- 470- BACK - (p.220)

The interface includes a 'clip manager' and 'playlists manager' section at the top. The main area is divided into a 'disk' section on the left showing storage volumes (R1, L2, R2, Network 1) and a 'folders' section in the middle showing a tree view (1, 4K, BBtv, Dual, MyProject). The right section is a table of playlists:

name	start	duration	res	fps	P/PsF	DF/NDF	audio
Beach	00:00:00:00	00:04:06:18	1080i	59.94	-	-	stereo
Morning	00:00:00:00	00:01:47:16	1080i	59.94	-	-	stereo
NewsAt10	00:00:00:00	00:00:26:02	1080i	59.94	-	-	stereo
Nord	00:00:00:00	00:01:47:16	1080i	59.94	-	-	stereo
Science	00:00:00:00	00:00:41:28	1080i	59.94	-	-	stereo

At the bottom, there are buttons for 'play selected', 'play all in folder', 'edit selected playlist', 'manage playlists', 'thumbs view', 'export', and 'back'.

Playlist manager / - cont...

Name	Location	Description
458- PAGE TABS	7.4 Playlist manager - (p.218)	The page selector tabs are always visible in the clip manager area. These can be clicked to provide direct access to each section.
459- DISK LIST	7.4 Playlist manager - (p.218)	The disk listing displays all of the media drives available to the Cinedeck. Below the disk list, as with most lists, are navigation arrows  which become active for moving through lists which contain more entries than can be displayed on one screen.
460- FOLDERS	7.4 Playlist manager - (p.218)	The "folder" and "sub"-folder columns work the same way and in conjunction with each other to allow better folder navigation and visibility. Press a folder to select it. Press  "up one level" to move to a level higher in the folder hierarchical structure and press a "sub" folder to navigate down one level in the folder hierarchical structure.
461- PLAYLISTS LIST	7.4 Playlist manager - (p.218)	The "playlists list" displays all of the Cinedeck accessible playlists within the selected folder. The default is "thumbs", a thumbnail view but the list view (as shown above) displays more content information. See "468- list view toggle" on page 220 Below the clip list are navigation arrows  which become active for moving through lists which contain more entries than can be displayed on one screen. (Note: playlist manager only shows media files recognized by the Cinedeck. It is possible that folders contain other non media files which are not shown)
462- SORT CONTROLS	7.4 Playlist manager - (p.218)	There are several list sorting controls located above the playlist in "thumbs" and "list" view. Press a sort name to sort the list by that data. Press the same sorting name again to sort the list in reverse order. The selected sort and sort direction is indicated by the green arrow  list by name
463- SELECT BUTTONS	7.4 Playlist manager - (p.218)	Use "select all" and "select none" to select all or none of the playlists in the current folder
464- PLAY SELECTED	7.4 Playlist manager - (p.218)	Press "play selected" to load the selected playlist into the channel player and go back to the previous multi or single channel playback view.
465- PLAY ALL IN FOLDER	7.4 Playlist manager - (p.218)	Select "play all in folder" to load all of the playlists in the current folder for playback and return to the previous multi or single channel playback view.
466- EDIT SELECTED PLAYLIST	7.4 Playlist manager - (p.218)	Select a single playlist and press "edit selected playlist" to load the playlist into the playlist editor.

Playlist manager / - cont...

Name	Location	Description
467- MANAGE PLAYLISTS	7.4 Playlist manager - (p.218)	<p>Select "manage playlists" to perform tasks such as deleting Destructive functions will be grayed out and unavailable if "disable file delete and disk erase" is enabled on the prefs page. See "386- prefs" on page 182</p> <p>scan for playlists If the expected playlist is not shown, select "scan for playlists" to rescan the current folder for playlists and add them to the media database.</p> <p>delete To delete the selected playlist, press "delete".</p> <p>edit selected playlist To edit the selected playlist, press "edit selected playlist". Access to editing a playlist is also available on the main screen.</p> <p>rename selected playlist Use rename selected playlist to rename the selected playlist.</p> <p>new</p> <p>manage playlists</p>
468- LIST VIEW TOGGLE	7.4 Playlist manager - (p.218)	Press the thumbs/list toggle to switch the playlists manager view between thumbnail view and the more detailed, list view.
469- EXPORT	7.4 Playlist manager - (p.218)	This menu is for future use
470- BACK	7.4 Playlist manager - (p.218)	Select "back" to close playlists manager and return the the previous single or multi channel view.

7.4.1 Playlist editor

The playlist editor is a basic non-linear editing interface, designed primarily to create simple compilations of clips and sub-clips for playout. Additionally, the playlist editor is used for performing insert edits into existing media files.



Playlist manager / Playlist editor cont...

Name	Location	Description
471- EDITOR VIEW	7.4.1 Playlist editor - (p.221)	The edit view selector button displays the name of the playlist currently loaded into the playlist editor and acts as a toggle button in conjunction with the "preview" button to switch between editing and playback preview screens.
472- PREVIEW	7.4.1 Playlist editor - (p.221)	The preview button activates a single channel player to view the edited playlist.
473- CLIP - POSITION TIMECODE	7.4.1 Playlist editor - (p.221)	This timecode display shows the playlist timecode where the clip starts.
474- CLIP NAME	7.4.1 Playlist editor - (p.221)	Display of the clip name.
475- CLIP THUMBNAIL	7.4.1 Playlist editor - (p.221)	The clip thumbnail displays the frame of the clip.
476- CLIP TIMECODE	7.4.1 Playlist editor - (p.221)	The clip timecode display indicates the current start and end timecode and duration of the clip as determined by the in and out points set for the clip. The timecode shown can be actual clip timecode or playlist position timecode based on the timecode display selection. See "484- timecode display" on page 224
477- CLIP THUMBNAIL SCROLL	7.4.1 Playlist editor - (p.221)	When many clips are included in a playlist, the left and right thumbnail scroll buttons provide access to additional clips which come before or after the visible clips.
478- PLAYLIST TIMECODE	7.4.1 Playlist editor - (p.221)	The start timecode, end timecode and duration of the loaded playlist are displayed.

Playback

Playlist manager

Playlist editor

Playlist manager / Playlist editor cont...

Name	Location	Description
479- MANAGE ASSETS	7.4.1 Playlist editor - (p.221)	<p>Use "manage assets to perform tasks such as deleting a clip from the loaded playlist. Destructive functions will be grayed out and unavailable if "disable file delete and disk erase" is enabled on the prefs page. See "386- prefs" on page 182</p> <p>delete all Choose "delete all" to remove all clips from the loaded playlist.</p> <p>delete selected Choose "delete selected" to remove just selected clips from the loaded playlist.</p> <p>add new Select "add new" to open clip manager and add additional clips after the selected clip. If no clip is selected, the additional clips will be added to the end of the playlist.</p> <p>edit selected clip "edit selected clip" opens the selected clip in the clip editor and is the same as "481- edit selected clip" on page 223.</p> <p>manage assets</p>
480- PLAYLIST SETTINGS	7.4.1 Playlist editor - (p.221)	<p>Pressing "playlist settings" opens the properties screen to adjust settings such as timeline time code for the loaded playlist. See "7.4.2 Playlist settings" on page 225</p>
481- EDIT SELECTED CLIP	7.4.1 Playlist editor - (p.221)	<p>Press "edit selected clip to change the start and end timecode for that clip. If more than one clip is selected, this control will be grayed out.</p>
482- DUPLICATE SELECTED	7.4.1 Playlist editor - (p.221)	<p>If you need to add additional sections of an existing clip, select the required clip and press "duplicate selected". The duplicate loaded will be the full length original clip, without regard to edit points set in the original.</p>
483- MOVE SELECTED	7.4.1 Playlist editor - (p.221)	<p>To move one or more clips earlier or later in the playlist, select the clips which should be moved. Clips can be selected in any order and do not need to be adjacent to each other. Press the arrows to move the selected clips to the left or right.</p>

Playlist manager / Playlist editor cont...

Name	Location	Description
484- TIMECODE DISPLAY	7.4.1 Playlist editor - (p.221)	<div data-bbox="737 310 905 423" style="background-color: #000080; color: #00FFFF; padding: 5px; margin-bottom: 5px;">timeline</div> <p>To show playlist position timecode in the "clip timecode" display with each clip thumbnail at the top of the screen, select "timeline".</p> <div data-bbox="737 440 905 553" style="background-color: #000080; color: #00FFFF; padding: 5px; margin-bottom: 5px;">clip</div> <p>To show actual clip timecode in the "clip timecode" display with each clip thumbnail at the top of the screen, select "clip".</p> <div data-bbox="737 570 905 683" style="background-color: #000080; color: #FF8C00; padding: 5px;">timecode display</div>
485- EXPORT	7.4.1 Playlist editor - (p.221)	Use "export" to export the playlist as an EDL. Additional capabilities will be added in future Cinedeck releases.
486- CANCEL	7.4.1 Playlist editor - (p.221)	Select "cancel" to undo any changes made and return to playlist manager.
487- SAVE AND CLOSE	7.4.1 Playlist editor - (p.221)	Select "save and close" to confirm any changes and return to playlist manager.
488- OUTPUT 23.98 AS 59i	7.4.1 Playlist editor - (p.221)	Indicates that a true 23.98 progressive playlist will play out as psf.
489- PLAYLIST SETTINGS OVERVIEW	7.4.1 Playlist editor - (p.221)	A complete overview of the playlist settings are displayed here.

Playback

Playlist manager

Playlist editor

7.4.2 Playlist settings

Use “playlist settings” to adjust the properties of your playlist such as timeline time code and the use of drop or non-drop timecode.

resolution	frame rate	P/PsF	pixel format	DF/NDF	TC	sound track	transitions	default fill	LUT
1920x1080	29.97p	PsF	YUV10	non-drop	start 00:00:00:00	off	off	bars	off
	59.94i	P		drop	end 00:04:06:17			black	[select]
					duration 00:04:06:18			file	
								[select]	

491- PLAYLIST TIMECODE SETTINGS - (p.226)

FUTURE FUNCTIONS

PLAYLIST NAME DISPLAY: Beach

PLAYLIST RESOLUTION DISPLAY: 1920x1080

492- FRAME RATE - (p.226): 59.94i

493- P/PsF - (p.226): P

PLAYLIST COLOR DEPTH DISPLAY: YUV10


490- PLAYLIST TIMECODE TYPE - (p.226): drop

494- CANCEL - (p.226)

495- SAVE AND CLOSE - (p.226)

use clip TC in playback

Playlist manager / Playlist settings cont...

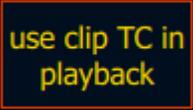Name	Location	Description
490- PLAYLIST TIMECODE TYPE	7.4.2 Playlist settings - (p.225)	Select drop or non-drop timecode.
491- PLAYLIST TIMECODE SETTINGS	7.4.2 Playlist settings - (p.225)	<p>Click "start" to set the starting timecode and automatically calculate the end and duration, based on the clips included in the playlist.</p> <p>Click "end" to set the ending timecode and automatically calculate the starting and duration times, based on the clips included in the playlist.</p> <p> Select "use clip TC in playback" to change the timecode which is output from the Cinedeck from the default playlist timecode to clip based timecode.</p>
492- FRAME RATE	7.4.2 Playlist settings - (p.225)	Select the appropriate output frame rate from the options.
493- P/PSF	7.4.2 Playlist settings - (p.225)	Select P or PSF depending on the content of the playlist and the desired output format.
494- CANCEL	7.4.2 Playlist settings - (p.225)	Select "cancel" to undo changes and return to the playlist editor.
495- SAVE AND CLOSE	7.4.2 Playlist settings - (p.225)	Select "save and close" to accept changes and return to the playlist editor.

Playback

Playlist manager

Playlist settings

7.5 -

7.5.1 -

This Page intentionally left blank.

8.0 Remote control

Cinedecks can be remote controlled using a broad variety of systems; RS422, Cinedeck MCC, AMP commands over IP, KVM, VNC and via USB devices. Please note however that **Windows "Remote Desktop Connection" should not be used with the Cinedeck**, it causes inconsistent operation and errors.

RS-422 is supported in slave and master mode.

- When in master mode, the Cinedeck can take full control of other devices using Sony BVW/SRW commands such as tape machines and the user interface provides a full set of status indicators.
- In Slave mode, the Cinedeck accepts standard commands and specifically the Cinedeck responds as a Sony SRW 5500 or BVW 75. See the next pages for COM port setup and ["384- remote control" on page 181](#).

Cinedeck MCC (multi channel controller) is a Windows based application which can be connected to up to 24 channels of Cinedeck. From the remote interface you can setup all aspects of a channel including project settings, push settings to multiple channels, control any selected channels for recording and playback including loading clips into selected channels for playback.

Cinedeck MCC utilizes the **AMP protocol** from Grass Valley (["8.4.3 AMP protocol" on page 236](#)) which is a well documented enhancement of the Odetics command set. The AMP API can be used for complete management and control of multiple Cinedecks from other systems such as those for media asset management.

For additional information about using AMP or Cinedeck MCC, contact Cinedeck support.
See ["Contacting Cinedeck" on page 2](#)

For use with **KVM systems**, Cinedeck recorders have USB and every deck has at least two types of monitor ports (VGA, DVI, HDMI, Display port) (See the specifics for each deck in ["3.0 Installation" on page 37](#))

VNC applications such as Teamviewer and Real VNC offer an excellent way to gain full access to the complete user interface, from the next room or the next country. See ["8.4.4 Using VNC applications" on page 237](#).

USB control panels such as X-Keys can be used and on a more basic level, a USB mouse and keyboard can be connected.

For RS-422 specifics, see the next few pages:

8.1 Device Manager

To assure proper RS-422 connectivity and performance, the COM port settings should be confirmed. The procedure for all decks is the same however the settings are a bit different for each deck.

It is recommended to connect a USB keyboard and mouse to make navigation within the Windows environment easier.

Exit from the Cinedeck user interface, "prefs" menu "exit application" See ["388- application" on page 182](#).

For those familiar with Windows systems, open Device Manager and then locate and open Ports (COM & LPT). For port details, goto ["8.2 RS-422 - COM port setup" on page 230](#)

There are several ways to open Windows Computer Management and access Device Manager and Disk Management, this is just one:




From the Windows desktop, click on the Windows Explorer icon, which should be just to the right of the Windows Start menu at the lower left of the screen.



If the icon is not there, another easy way to open Windows Explorer is by simultaneously pressing the Windows key and the "E" key. The Windows key is next to the left Control key.

Once Windows Explorer is open, from the list at the left side of the screen, right click "Computer", to open the properties menu.

Click on "Manage" to open Computer Management.

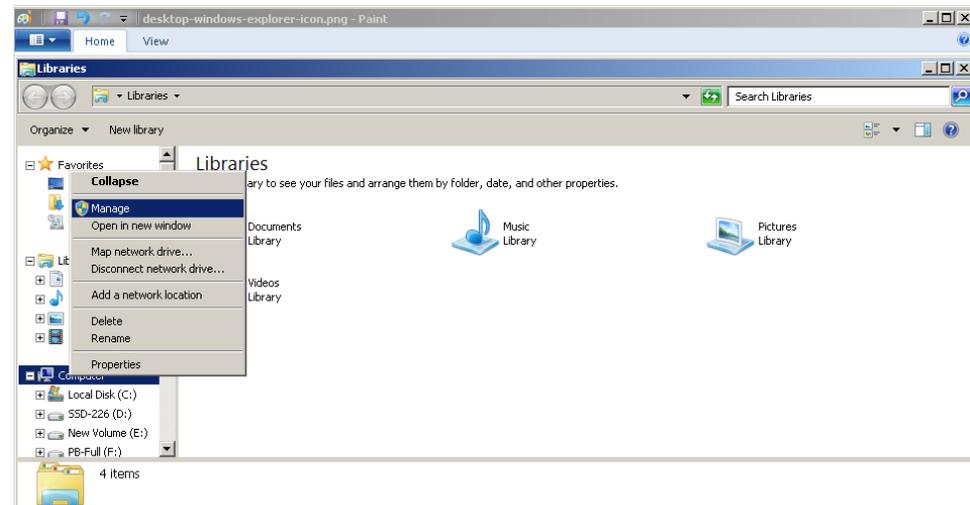

8.2 RS-422 - COM port setup

Once Computer Manager is open (See ["8.1 Device Manager" on page 229](#)), from the list at the left, select "Device Manager" and from the list which opens in the middle, locate Ports (COM & LPT) and click the "+" to open the list of devices.


Each deck has several USB COM ports. The settings for each port can be accessed by right clicking and selecting "properties" from the context menu.

The standard RS-422 COM ports for RX3G are:

- COM 5 = RX3G CH 1
- COM 6 = RX3G CH 2

The standard RS-422 COM ports for MX and ZX are:

- COM 9 = MX-ZX CH 1
- COM 10 = MX-ZX CH 2
- COM 11 = MX-ZX CH 3
- COM 12 = MX-ZX CH 4

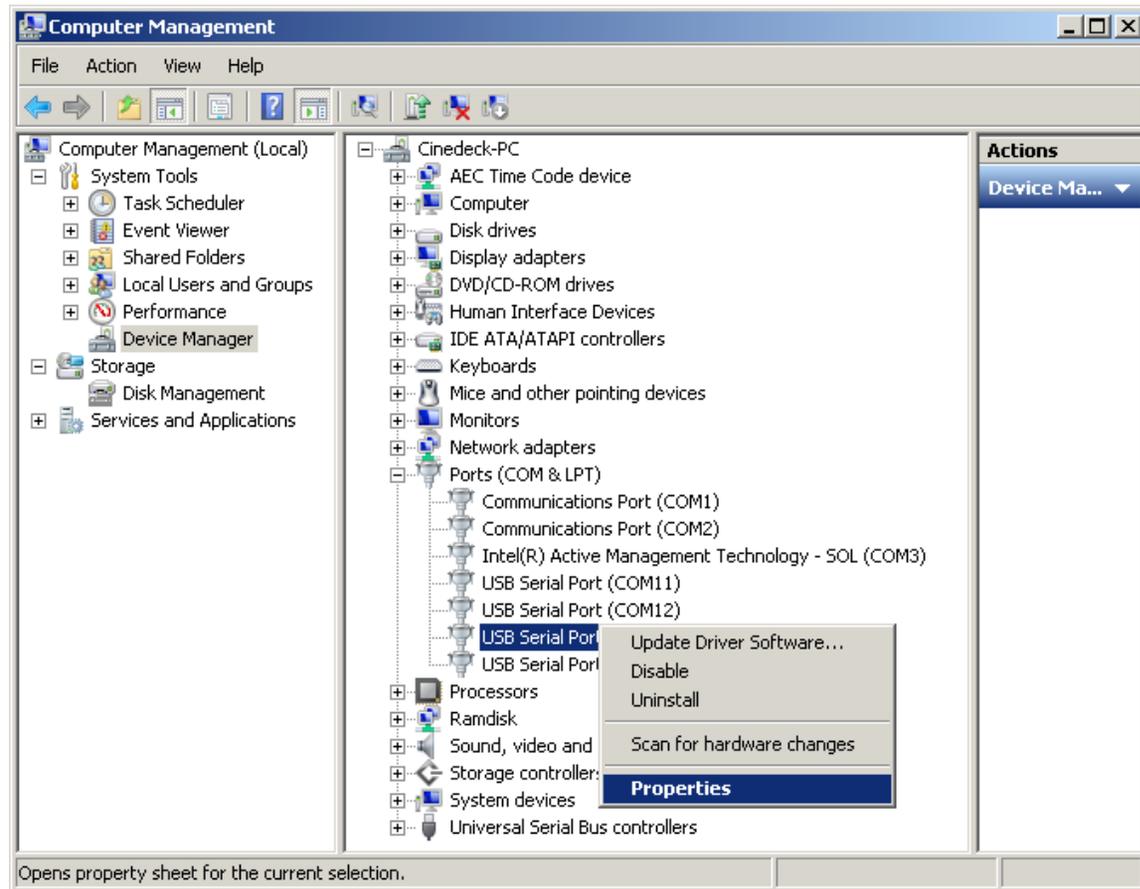

RS-422 - COM port setup / - cont...

Open the properties for the first COM port.

There are four tabs across the top.
Note the location on this first page.



The COM port for the first deck input should be on "Serial Converter A".

The COM port for the second deck input should be on "Serial Converter B" and so on.

The COM port number is not important at this point as it can be changed in the next steps.

Click on the "Port Settings" tab and confirm that all of the settings are as shown.

Bits per second	38400
Data bits	8
Parity	Odd
Stop bits	1
Flow control	None

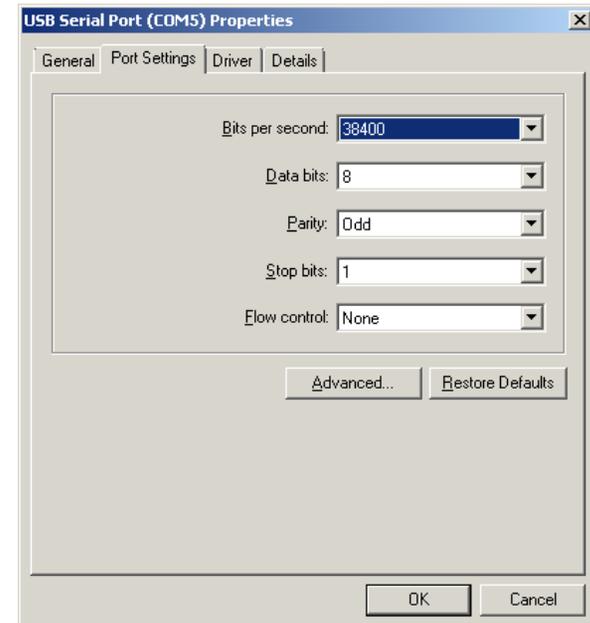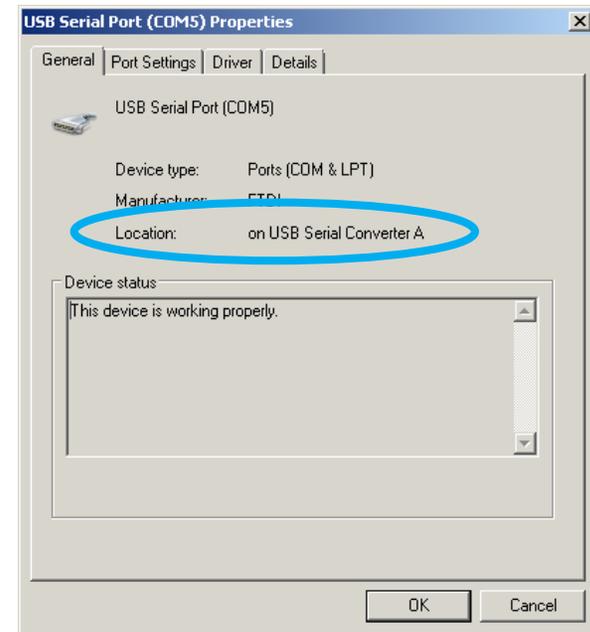

RS-422 - COM port setup / - cont...

Click on "Advanced" to open the Advanced Settings for the selected COM port and confirm that the settings match the screen on the right and those itemized below.

Referring to the Serial Converter letter from the previous step, set the appropriate COM port number.

For RX3G:

- A = COM 5 = RX3G CH 1
- B = COM 6 = RX3G CH 2


For MX and ZX:

- A = COM 9 = MX-ZX CH 1
- B = COM 10 = MX-ZX CH 2
- C = COM 11 = MX-ZX CH 3
- D = COM 12 = MX-ZX CH 4



For all decks, the USB Transfer Sizes for Receive and Transmit should both be 4096 bytes.

The BM latency timer should be set to 5ms however if there are performance issues with the connected device, the value can be reduced.

Lastly, the Minimum Read & Write Timeouts should both be set to 500.

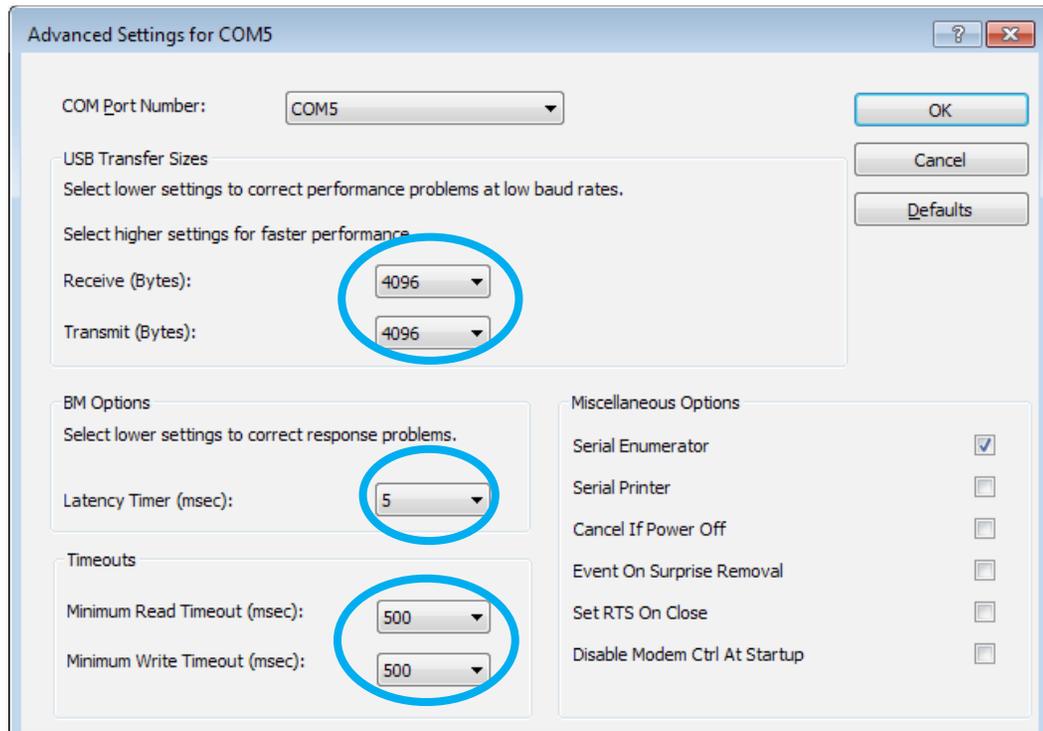

Note: Some early MX units had RS-422 ports installed in a different sequence. If the COM ports for ch2 and ch3 are not working, try another port as they may be mounted as in the right diagram.

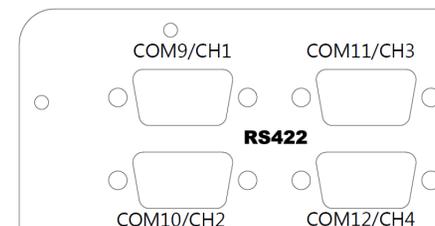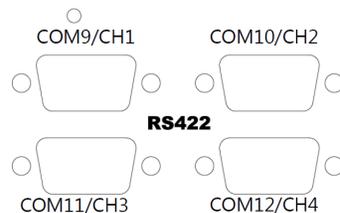


8.3 RS-422 Cables & pin-outs

All Cinedecks manufactured after December 2014 utilize multi-mode RS-422 control boards and can be connected for master or slave RS-422 control using standard (straight through) male <> male, 9pin RS-422 serial data cables.

Earlier model decks (including RX3G and MX decks from before December 2014) utilize single mode RS-422 boards. When connected using a standard (straight through) male <> male RS-422 cable, the channels on these Cinedeck models are wired to be in slave mode, that is, to be controlled by the device to which it is connected. If it is desired to use the Cinedeck in master mode, for example if a tape machine should be controlled from the Cinedeck, a RS-422 crossover cable is required. (See the diagrams below for the proper pin connections) If any assistance is required, contact Cinedeck support. See ["Contacting Cinedeck" on page 2](#)

If there is a need to occasionally switch between slave and master modes, it is recommended to use a male > female crossover adapter cable. This will provide slave mode by directly connecting the standard male RS-422 cable to the deck while placing the adapter between the standard cable and the deck will change the connection to master mode.

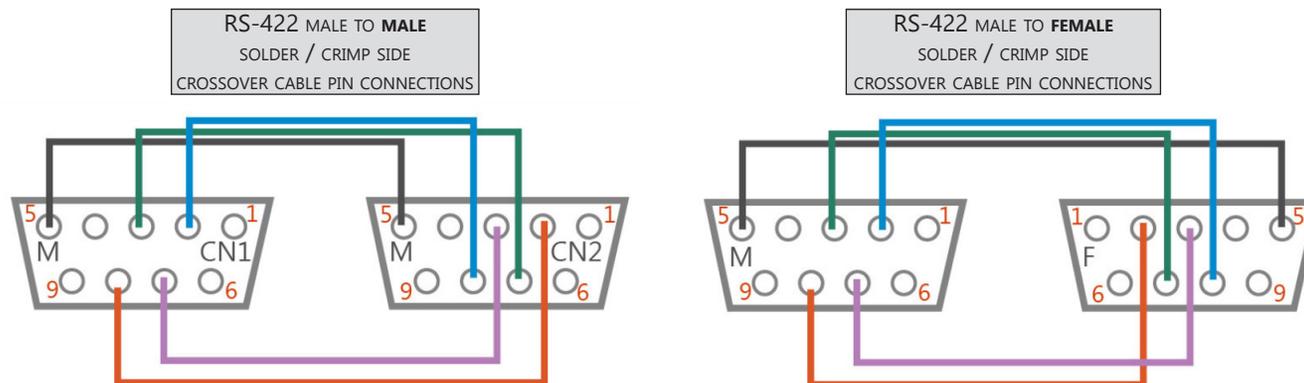

8.4 Avid Digital Cut

Cinedecks can be utilized as a Digital Cut destination with Avid Media Composer / Nitrus systems however the settings are quite specific. (Select "setup" from the main screen to access "TC & automation" settings)


8.4.1 Cinedeck settings

FOR ADDITIONAL DETAIL, SEE ["5.24 TC & AUTOMATION TAB" ON PAGE 166](#)

SET "RECORD TRIGGER" TO "RS-422"

SET "TC SOURCE" TO "GEN" (INTERNALLY GENERATED)

SET "GEN TC MODE" TO "PER TAKE" AND DROP OR NON-DROP AS NEEDED

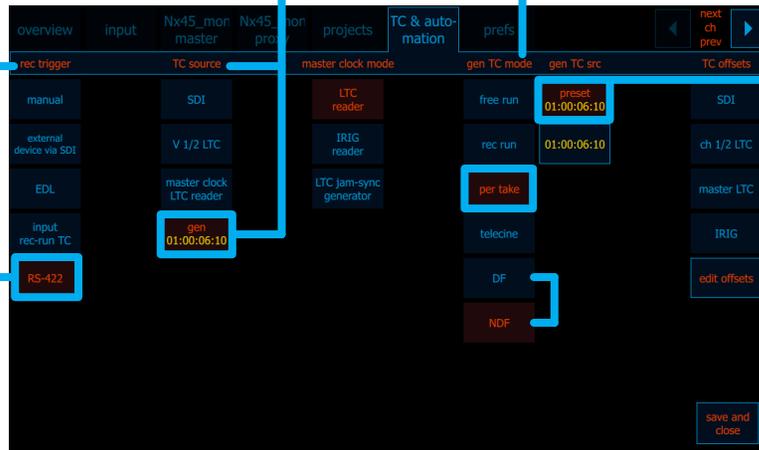

SET THE PRESET TO MATCH THE IN POINT ON THE AVID TIMELINE

Critical! Media Composer is a very basic controller, and will say the deck is not cued properly unless the preset matches the in point on the timeline.

WHEN MEDIA COMPOSER IS CORRECTLY COMMUNICATING WITH THE CINEDECK, THE REMOTE LED WILL BE GREEN



SET RS-422 MODE TO "SLAVE"

WHEN TC&AUTOMATION SETTINGS ARE CORRECT (SEE BELOW) THE RECORD BUTTON WILL CHANGE TO (AUTO-REC)

SELECT SETUP TO ENTER TC&AUTOMATION SETTINGS

8.4.2 Media Composer settings

In addition to the TC & automation settings made above, to make the Avid happy, the Cinedeck can be set to emulate several different tape decks. This setting is made in "prefs", see ["384- remote control" on page 181](#).

The screenshot shows the Digital Cut Tool interface with the following settings and callouts:

- Output Mode:** Real-Time (Callout: SET OUTPUT MODE TO "REALTIME")
- Bit Depth:** 10-bit
- Digital Cut Safe Mode:** Checked (Callout: SET "DIGITAL CUT SAFE MODE" TO "ON")
- Deck Control:** Remote (selected), Local (unselected)
- Sequence Time:** Selected in the dropdown (Callout: SET TIMECODE OPTION TO "SEQUENCE TIME")
- Assemble Edit:** Selected in the dropdown (Callout: SET EDIT MODE TO "ASSEMBLE EDIT")
- Custom Preroll:** 5 seconds
- Output Format:** 1080i50
- Output to HD at selected rate.**
- Timecode:** 01:00:29:--
- Deck:** Sony BW-75P
- Deck Type:** DigitalCut Tape

USE AUTO-CONFIGURE TO FIND THE APPROPRIATE DECK SETTINGS, KEEPING THE CINEDECK DECK EMULATION SETTINGS IN MIND ("[384- REMOTE CONTROL" ON PAGE 181](#))

8.4.3 AMP protocol

The AMP protocol from Grass Valley is a complete API which can provide full access to the Cinedeck, from a simple start stop remote controller up to total asset management. AMP connectivity is by RS-422 or TCP/IP. LAN based remote control using AMP requires TCP port 3811 to be open. The Cinedeck MCC application (multi-machine controller) utilizes AMP for communicating with the decks so also requires TCP port 3811 to be open,

The complete AMP documentation is available separately (See ["Contacting Cinedeck" on page 2](#)). but for those interested in developing their own control interface, some basic examples using the Putty Client or a similar telnet client are below.

- Telnet to port 3811 on the Cinedeck.
- Set up a connection to channel 1 by sending the following: CRAT0007204Vtr1 (Replace the trailing 1 with 2, 3 or 4 to open connection to other channels.)
- You should see an ACK response from the Cinedeck, which is simply: 1001
- Send the record command (20.02): CMDS00042002
- The Cinedeck will ACK on response: 1001 and start to record
- Send the stop command (20.00): CMDS00042000
- The Cinedeck will ACK: 1001 and stop the recording

8.4.4 Using VNC applications

All Cinedecks can be controlled using standard VNC (Virtual Network Computing) remote access software. Applications such as Teamviewer provide the full user interface at a remote workstation in the next room or miles away. Most VNC applications provide direct, point-to-point LAN access while Teamviewer also provides coordinated connections via their Internet server which can simplify installations, especially for long distance remote sessions. Because of this, according to Teamviewer, their application will always work if full Internet access is available which means there are no firewall issues. As an alternative to the standard port 80, Teamviewer also evidently monitors port 443. Teamviewer also state "it is also possible to open only port 5938 TCP on the outgoing side. Data traffic should then be able to pass through on this port without any problems."

Of course Teamviewer is not the only VNC application available. Some other options are Tight VNC, Ultra VNC and RealVNC.

Note: Windows "Remote Desktop Connection" should never be used with the Cinedeck as it causes inconsistent operation and errors.

8.4.5 -

This Page intentionally left blank.

9.0 Service & Trouble

9.1 Best practices

Not surprisingly, modern recorders like the Cinedecks do not require much in the way of maintenance or particular care in handling compared to the needs of a tape machine with daily head cleaning, transport alignment and regular replacement of parts which wear out like the capstan but there are still things you can do to help assure good operation and successful recordings.

- **Redundant Power:** When connecting the power to your systems, it is always best to use power from two sources. Although your deck has auto-fail-over power supplies, having both power inputs connected to the same power circuit does nothing to prevent power loss when the circuit fails.
- **Uninterruptible Power Supply:** Electronics are not terribly happy with fluctuating power so connect your gear using a voltage regulating UPS. The regulation will smooth out the ups and downs of the voltage and the battery in the UPS can easily supply enough power to properly and cleanly power the system down so there are no issues.
- **Connect With Power Off:** As with all electronic systems, it is better to make all of the interconnections before powering the system on. Connecting with all systems up and running generally does not cause issues however if there are ground differences or static electricity buildup, they can have a negative effect on your gear.
- **Format SSDs Before Recording:** When you are starting a recording session, it is best to work with cleanly formatted SSDs. This is especially true for SSDs which have been moved between machines and operating systems. Formatting can be easily and quickly done from the Cinedeck application, see: [“9.7 Formating drives” on page 252.](#)
- **Test recording:** Make a few test records, at lease one short record and a long record, before the actual session. Its always best to confirm everything is working properly before the session begins. And while it may be superstition, there are users who feel it is also wise to make a short recording after the session ends. It requires little effort so, why not.
- **Properly Eject Drives:** Use the eject function from “clip manager” or “HotSwap!” from the Windows desktop to unmount drives before removing them. The Cinedeck system should assure that recording data has been properly flushed out to the drives but be safe and eject the drives first and remember that each SSD drive carrier can have two drives so be sure to eject both.

Best practices / - cont...

For ejecting drives from the user interface, see: ["450- manage disk" on page 214](#).

To eject drives using HotSwap!, see: ["5.5.3 HotSwap!" on page 84](#).

- **Calculate Recording Time:** In advance of any recording it is important to assure there is enough space to store not only the planned session but it is also recommended to calculate at least 10% extra space. For estimating the required storage, the back of the manual has a listing of data rates for various codecs and qualities and you can use the calculator here: ["11.4 Storage calculator" on page 343](#). Remember also that the recorder is not aware if you are writing multiple channels to the same physical destination drive so when you are calculating and observing remaining space and remaining time, remember to divide by the number of channels being written to that destination. For example, if all four channels are writing to Drive H: and the interface says there is 40 minutes remaining, there is really only 10 minutes remaining.
- **Secure Erase:** While SSDs are not technically effected by data fragmentation like spinning drives and you should absolutely **not** use a defragmentation utility on a SSD drive, SSDs do have their own peculiar issues which can develop over time, issues which can be enhanced when SSDs are moved between machines and especially when they are moved between operating systems. If you find that a SSD is not performing well even after a format, there are two things you can do, delete the partition and re-create and format the partition or, really the best things is to use the SSD manufacturers secure erase application. Secure erase essentially resets the drive, clearing all memory and partition data. For details on Samsung's Secure Erase, see: ["9.11 Secure erase" on page 259](#). For additional information about secure erase, see the SSD manufacturers website.
- **System Reset:** If your recorder is suddenly acting erratically, there are a few things you can do to get back on track. Presuming the Cinedeck interface is accessible, the first and fastest is to go to the "prefs" page and select "reset all settings to default".
If "prefs" is not accessible, from the Windows desktop, navigate to C:\Cinedeck and delete the following files: cinedeck.db, prefs.ini. Also delete the folder: C:\Cinedeck\projects.
If either procedure allows you access, you will first need to create a new project before continuing.
- **System Restore:** If the reset does not resolve the problem and Cinedeck Support is unavailable, the next best procedure is to perform a system restore (See: ["9.17 Restore factory image" on page 275](#)). Before doing so, please save the most recent log files and dump files to a safe place.

9.2 Touchscreen calibration


On occasion, the built-in touch screens on MX and RX need to be re-calibrated. The issue will be apparent as you will have difficulty touching the control you need. This is a normal occurrence but if it happens very regularly, it can be a sign of a failing display system.

If the calibration is far out of adjustment, you may need a mouse to reach the desktop icon and gain access to the calibration tools.



Navigate to the the touchscreen icon to start the touchscreen tools

Select the "Tools" tab from the dialog which opens and select "Linearization" to start the 9 points calibration. This only takes about two minute so is well worth the benefits over the basic "4 points calibration".

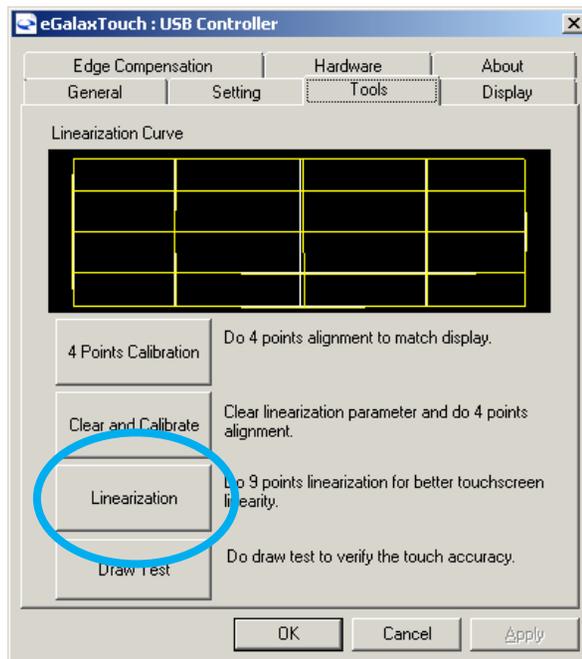


LCD screens can be damaged by sharp objects!

Follow the prompts and when the targets appear, use a proper screen stylus or similar screen safe pointer to select the mid point of each of the nine targets. The edge of a pencil eraser will do in a pinch.

A small timer runs next to the targets, indicating the time left before the process self-cancels.

When the last target is done, the system will recalibrate and indicate when the process is complete. Select OK and the main dialog can be closed.

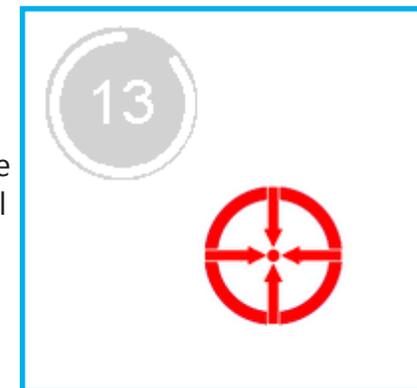

9.3 Important drive information

Important: Most issues that arise during recording are media related. Improper formatting, including incorrect file system or cache settings, use of drives on other file systems before recording (eg offloading media on a Mac), formatting on a system other than Windows7, and improper removal of the drives after recording can all affect the state and performance of drives and negatively impact recording.

Local SSD disks must be:

1. MBR volumes, partitioned on a Windows 7 or newer system
2. Formatted as NTFS or EXFAT*
3. Formatted as a single volume

And for Samsung SSDs, Windows disk-caching settings must be set to "on".

Note: Disks should be freshly formatted before recording, especially if used with another system such as a Mac or if improperly removed. In both cases, the file system index can be corrupted which can cause various I/O errors and write failure during record.

** EXFAT should only be used if the drives need to be mounted on a Mac OS machine for offload however the better solution is to install NTFS read and possibly write capability.*

If you are primarily a Mac user, don't panic. Aesthetic differences aside, the Windows Explorer is very similar to Mac Finder... they both do exactly the same thing. The Windows Disk Management Console is similar to the Mac Disk Utility... they both do the same thing. In fact the paradigms are all the same since the people in Bellingham do their best to imitate the people in Cupertino and vice versa. The only real difference is appearance.

If you get stuck because something doesn't look exactly like the pictures, don't panic, we are here to help. See ["Contacting Cinedeck" on page 2](#)

9.4 Installing SSDs

Local SSDs are installed in removable sleds or carriers.




Each carrier can hold two drives



To install the SSDs, open the carrier and remove the screws.

Before mounting in the carriers, note the serial numbers on the underside of the drives for later use.

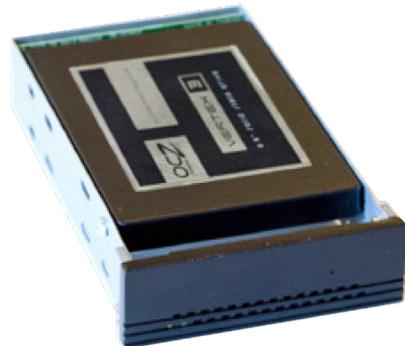

Noting the orientation of the connectors at the back of the carrier, carefully fit one or two SSDs into the carrier SATA connectors
Secure each SSD at the edges with at least two screws.
Replace the carrier into the stainless cover, and secure with at least one screw.

9.5 Initializing new drives

Partitioning of SSDs must be done on a Windows 7 or newer system for proper partition alignment.

Install the new disk in a carrier: ["9.4 Installing SSDs" on page 243](#)

Install the drive carrier in the Cinedeck: ["3.10 Inserting & ejecting drives" on page 69](#)

Power on the Cinedeck and allow to load fully.

Exit the Cinedeck software application: ["388- application" on page 182](#)

Open Windows Computer Management:


Press "Start"

Right-click "Computer"

Select "Manage" from the context menu.


For more info on opening Computer Management, see ["8.1 Device Manager" on page 229](#)

From the management console, select "Disk Management" from the list at the left.

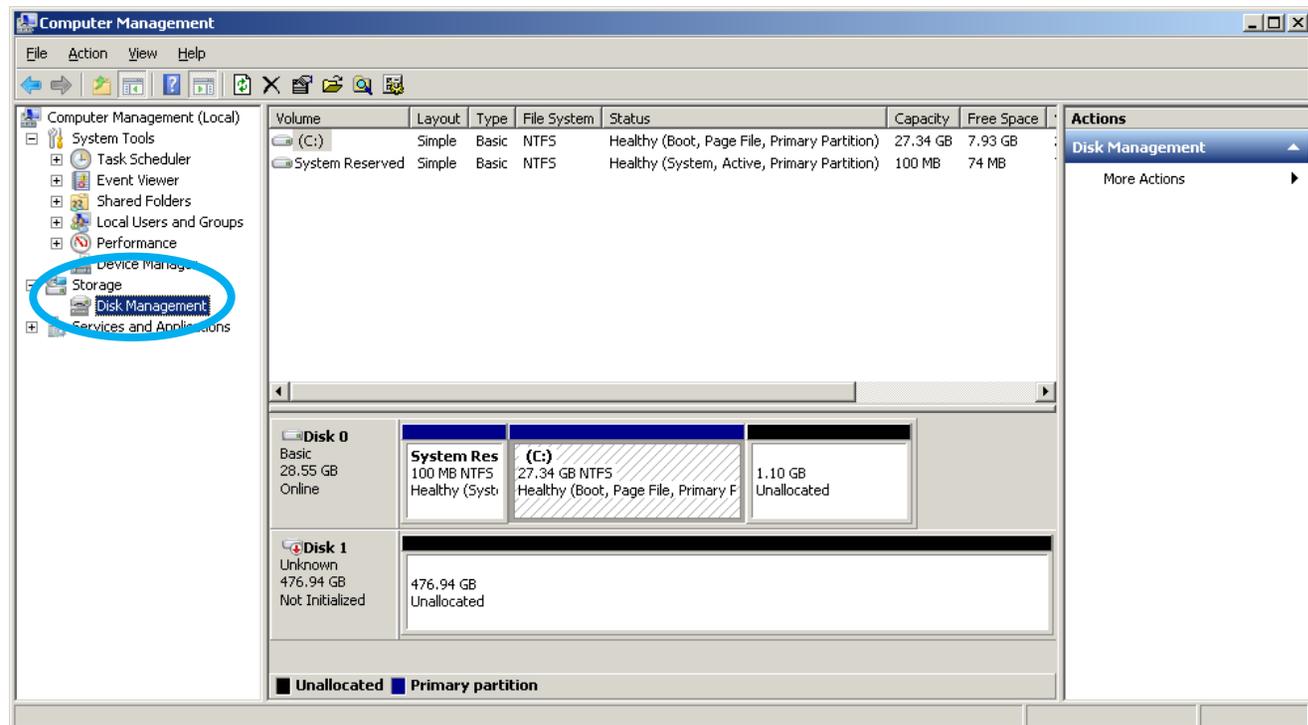

Initializing new drives / - cont...


The first time a new drive is detected, Windows may request that the disk be initialized. Some drives will not require this step and this dialog will not display. If this is the case, proceed from the next figure.

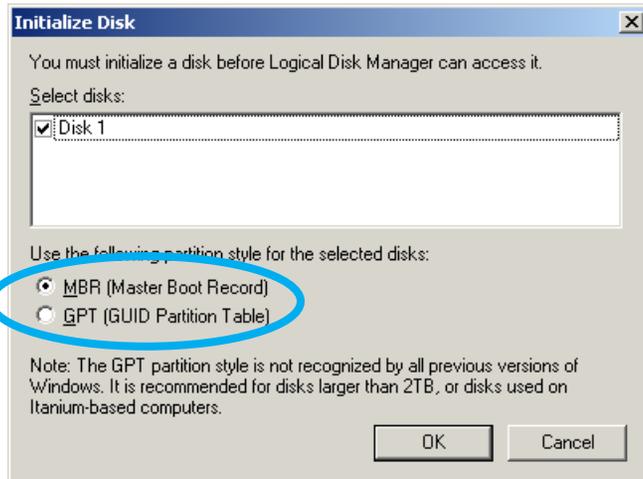

When initializing a disk for use with a Cinedeck, the default MBR partition type should be used.


Press OK

If the dialog did not display but the drive is listed on the right as "Unknown", you can manually open the initialize dialog by right clicking "Unknown" and selecting "Initialize Disk".

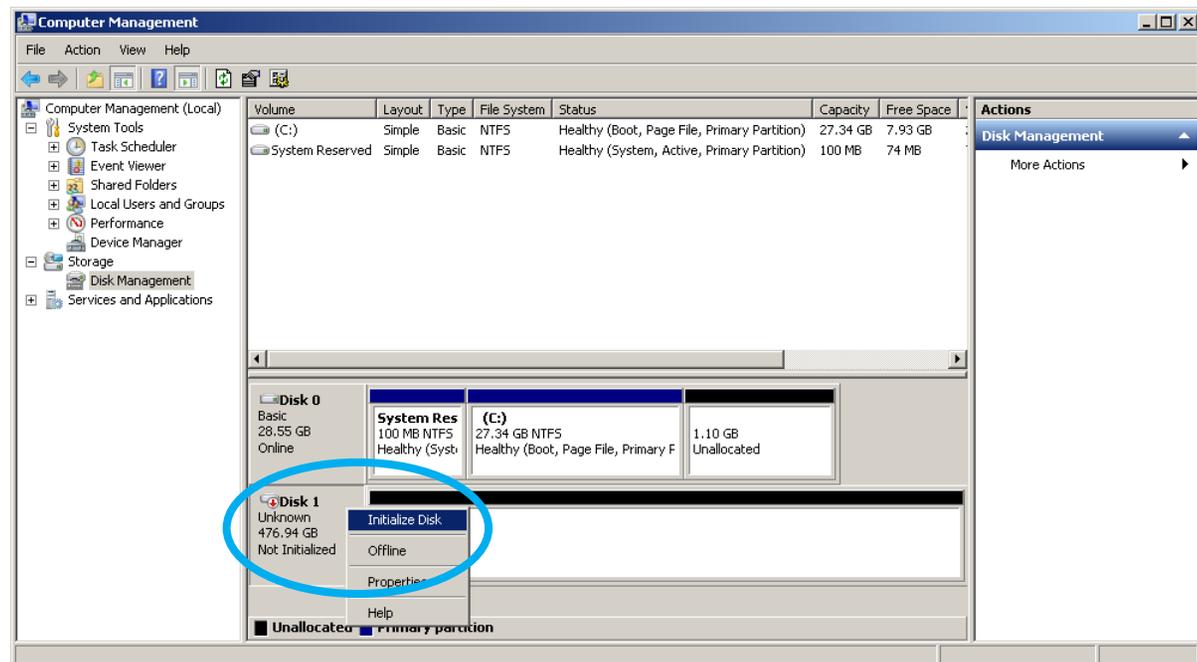

Initializing new drives / - cont...


After initializing, the disk will be listed as "Basic" and "Unallocated".
Right-click the drive to open the "new volume" context menu and select "New Simple Volume..." to start the "New Simple Volume Wizard".

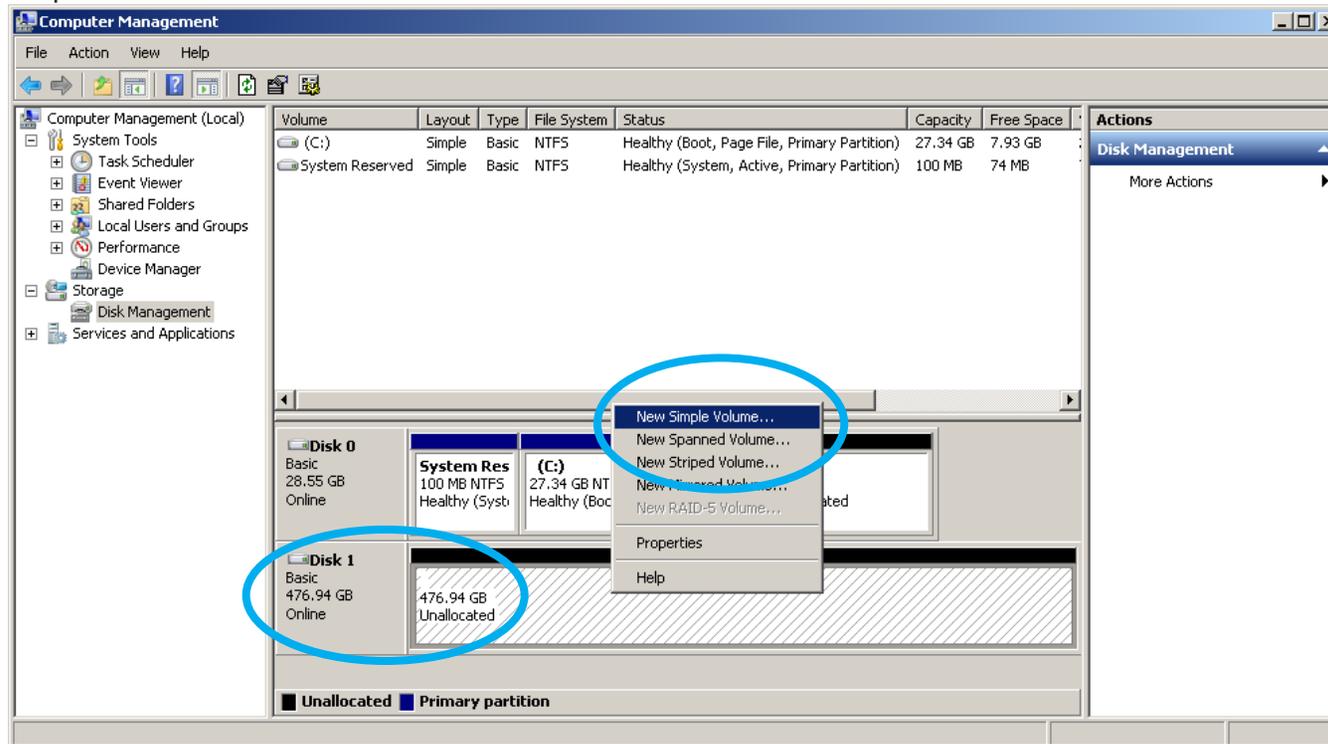

Press "Next"

Initializing new drives / - cont...

After initializing, the disk will be listed as "Basic" and "Unallocated".
Right-click the drive to open the "new volume" context menu and select "New Simple Volume..." to start the "New Simple Volume Wizard".

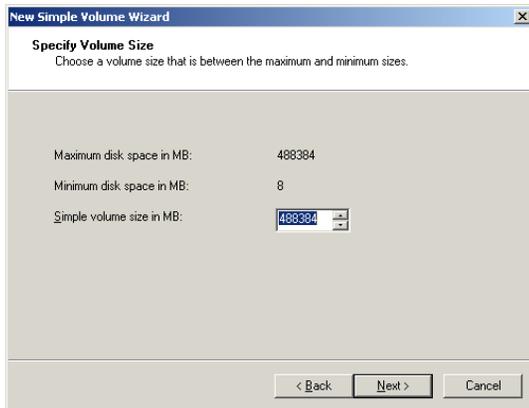

Leave the volume settings as defaults and select "Next".

Cinedeck drives should only contain one volume or partition.

Leave the drive letter settings as default unless you know what you are doing and prefer specifying a drive letter.


Select "Next".




Select the desired file system format: exFAT or NTFS. exFAT should only be used if the intention is to offload media on a Mac OSX machine which does not have the preferred NTFS read capability.

Rename the drive to something meaningful in the "volume label" field, for example [850pro512_1234] where 512 is the size and "1234" are the last few digits of the disk serial number.

Leave all other settings at defaults, assuring "quick format" is checked, then select "Next".

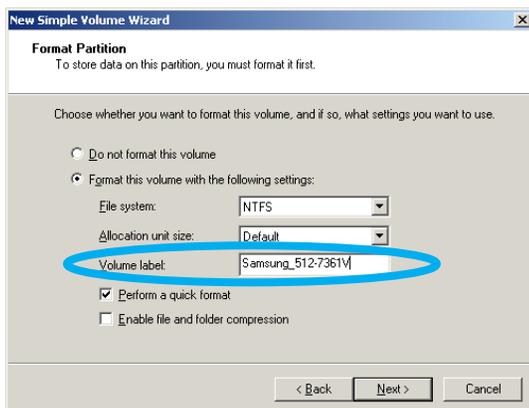


Initializing new drives / - cont...

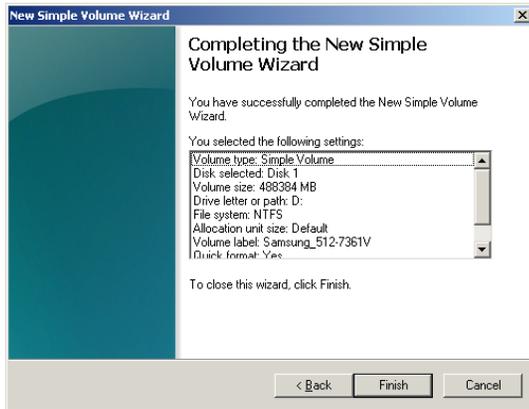


Press "Finish" at the "Completing" dialog.

Formatting a SSD will only take a short time.

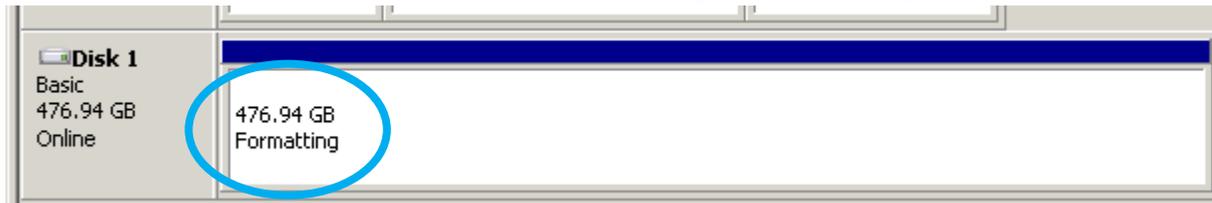

When formatting is complete, the drive should look something like this.

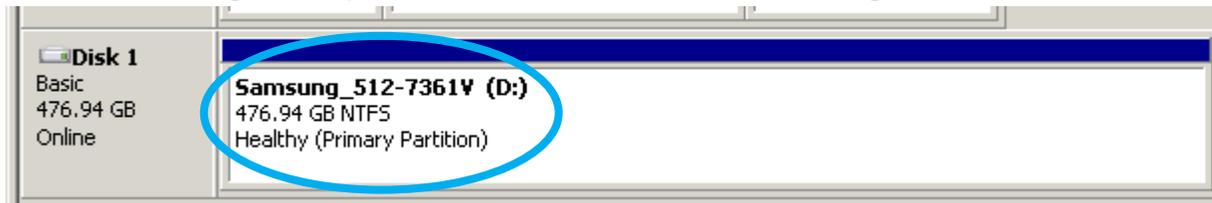


Note: After this new drive initialization and formatting procedure, you can if needed, format drives from Windows Explorer using the procedure on the next pages however, it is much easier to format your drives from within the Cinedeck application.

9.6 Reinitializing SSDs

For top performance, SSDs used in Cinedeck recorders need particular care. This is especially true if the disks are shuttled between Cinedecks and non-Cinedeck systems such as Final Cut Pro edit systems. Apple's operating system deals with disks differently than Windows which can result in a performance reduction and they leave behind files which are not helpful in the Windows environment. "Secure Erase" (factory resetting) using the SSD manufacturers specific utility, is the best method for restoring a SSD to peak performance (For additional information about Secure Erase see: ["9.11 Secure erase" on page 259](#)). However, the Secure Erase procedure can be somewhat cumbersome and time consuming. The next best option is fully deleting the volume which will allow the Windows operating system to repartition and format the drive as if it were new.

This reinitialization is a two step process. The first step is cleaning - removing all partition information. This is followed by initializing the drive - creating a new volume and formatting it.


First you need to determine the disk number for the drive you want to reinitialize. One way to discover this information is via "Disk Management". See ["9.5 Initializing new drives" on page 244](#) to open Disk Management".

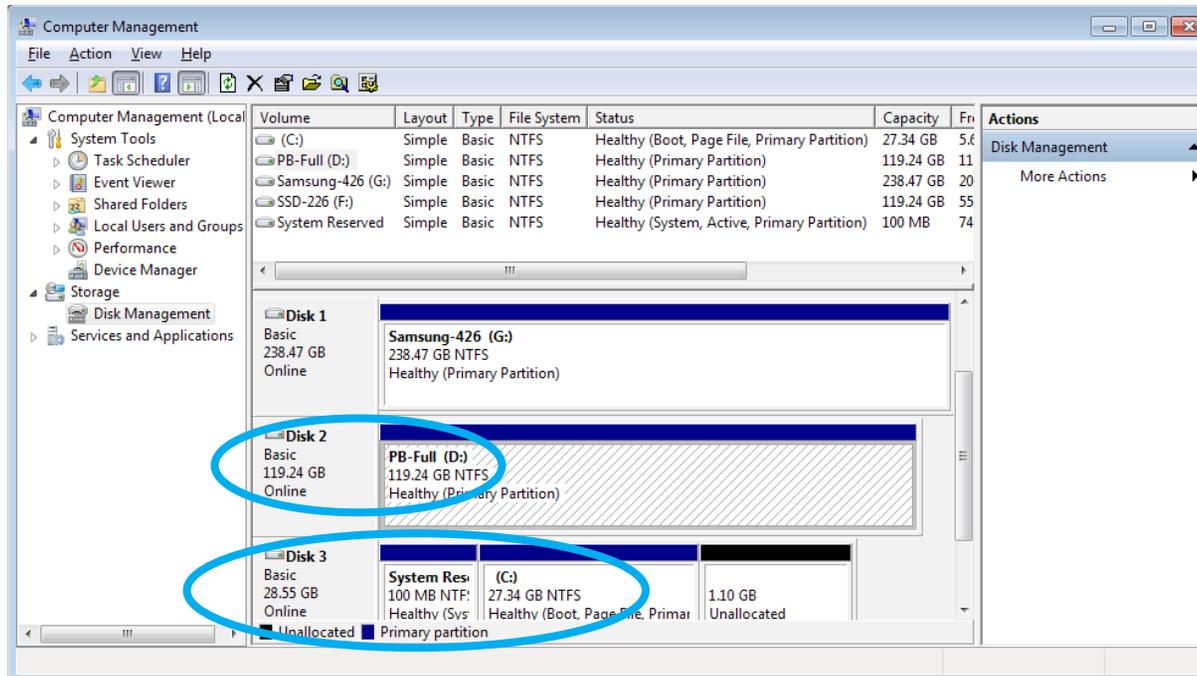

In Disk Management, locate the drives needing maintenance in the list at the right and note their respective drive numbers. Disk 2 which is mounted as D:\ will be used in this example.

*At the same time, note the number for the OS drive which should **NOT** be deleted.* This is usually C:\ and noted as the boot partition.

Reinitializing SSDs / - cont...

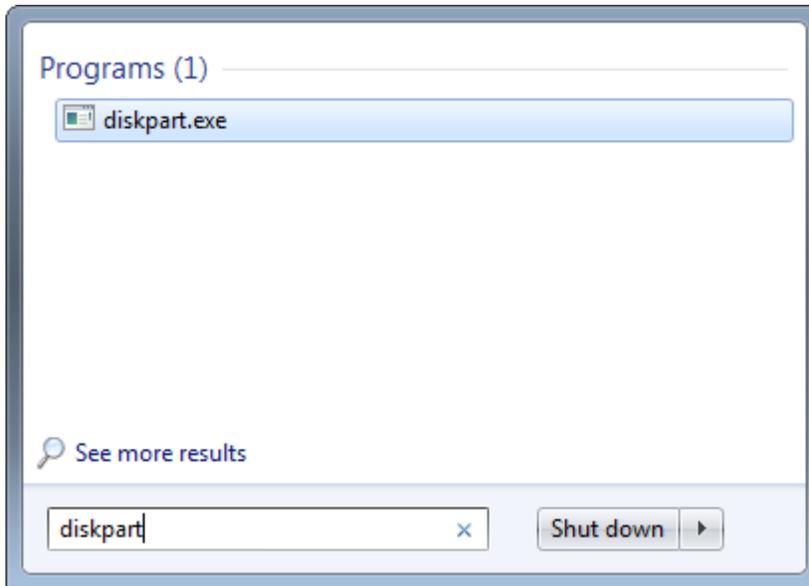


After locating the disk numbers, DiskPart.exe can be used to remove the existing partition from a disk.

DiskPart is a Windows command line program which can be run from within Windows.

Type diskpart.exe into the search field at the bottom of the Windows Start Menu and the program will appear in the file list above.

Press "Enter" to start the program.

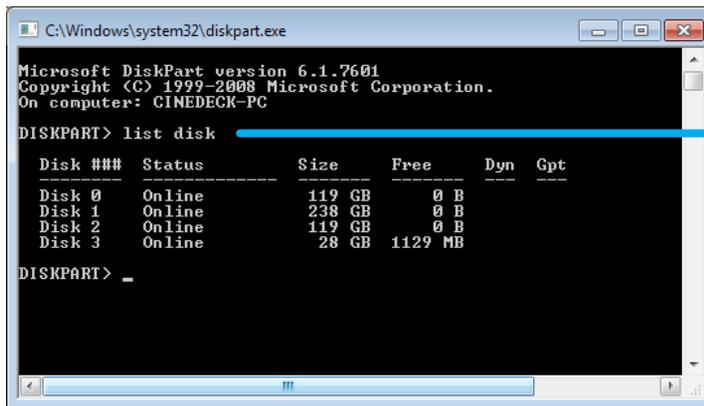

```
C:\Windows\system32\diskpart.exe
Microsoft DiskPart version 6.1.7601
Copyright (C) 1999-2008 Microsoft Corporation.
On computer: GINEDECK-PC

DISKPART> list disk

Disk ###  Status  Size  Free  Dyn  Gpt
-----  -
Disk 0    Online  119 GB  0 B
Disk 1    Online  238 GB  0 B
Disk 2    Online  119 GB  0 B
Disk 3    Online   28 GB  1129 MB

DISKPART> _
```

At the command line, type "list disk" (without the quotes) and press "Enter".

DiskPart will list all of the disks currently available to the Windows system by disk number.

Reinitializing SSDs / - cont...

```
C:\Windows\system32\diskpart.exe
Microsoft DiskPart version 6.1.7601
Copyright (C) 1999-2008 Microsoft Corporation.
On computer: CINEDECK-PC

DISKPART> list disk

Disk ###  Status       Size       Free       Dyn  Gpt
-----  -
Disk 0    Online       119 GB     0 B
Disk 1    Online       238 GB     0 B
Disk 2    Online       119 GB     0 B
Disk 3    Online        28 GB    1129 MB

DISKPART> select disk 2
Disk 2 is now the selected disk.
DISKPART> _
```

As noted previously, Disk 2 will be used in this example.

Find the drive needing maintenance in the list and type "select disk n" where n is the number of the disk you want to clean and press "Enter".

A message should be displayed indicating the currently selected disk.

```
C:\Windows\system32\diskpart.exe

Disk 2    Online       119 GB     0 B
Disk 3    Online        28 GB    1129 MB

DISKPART> select disk 2
Disk 2 is now the selected disk.
DISKPART> list disk

Disk ###  Status       Size       Free       Dyn  Gpt
-----  -
Disk 0    Online       119 GB     0 B
Disk 1    Online       238 GB     0 B
* Disk 2    Online       119 GB     0 B
Disk 3    Online        28 GB    1129 MB

DISKPART> _
```

Just for safety, type "list disk" again and press enter to confirm that the selected disk is the disk you want to clean.

An asterisk "*" is used to indicate which disk is selected.

```
C:\Windows\system32\diskpart.exe

DISKPART> list disk

Disk ###  Status       Size       Free       Dyn  Gpt
-----  -
Disk 0    Online       119 GB     0 B
Disk 1    Online       238 GB     0 B
* Disk 2    Online       119 GB     0 B
Disk 3    Online        28 GB    1129 MB

DISKPART> clean
DiskPart succeeded in cleaning the disk.
DISKPART> _
```

Type "clean" at the command line to remove the partition from the selected disk.

DiskPart should display a message saying "DiskPart succeeded in cleaning this disk."

Type "exit" and press "Enter" to close DiskPart.


Using "Disk Management", you can now initialize the disk. See ["9.5 Initializing new drives" on page 244.](#)

9.7 Formatting drives

The easiest and usually fastest route for clearing a drive is to format it from “clip manager”. See [“450- manage disk” on page 214](#)

SSDs can also be formatted from Windows using “Quick Format” however, if you are formatting because you feel the SSD is not performing properly, use the manufacturers “secure erase” procedure (See [“9.11 Secure erase” on page 259](#)) and then repartition the drive. (See [“9.5 Initializing new drives” on page 244](#))

To use Quick Format, open Windows Explorer (For info on accessing Windows Explorer, see [“8.1 Device Manager” on page 229](#))

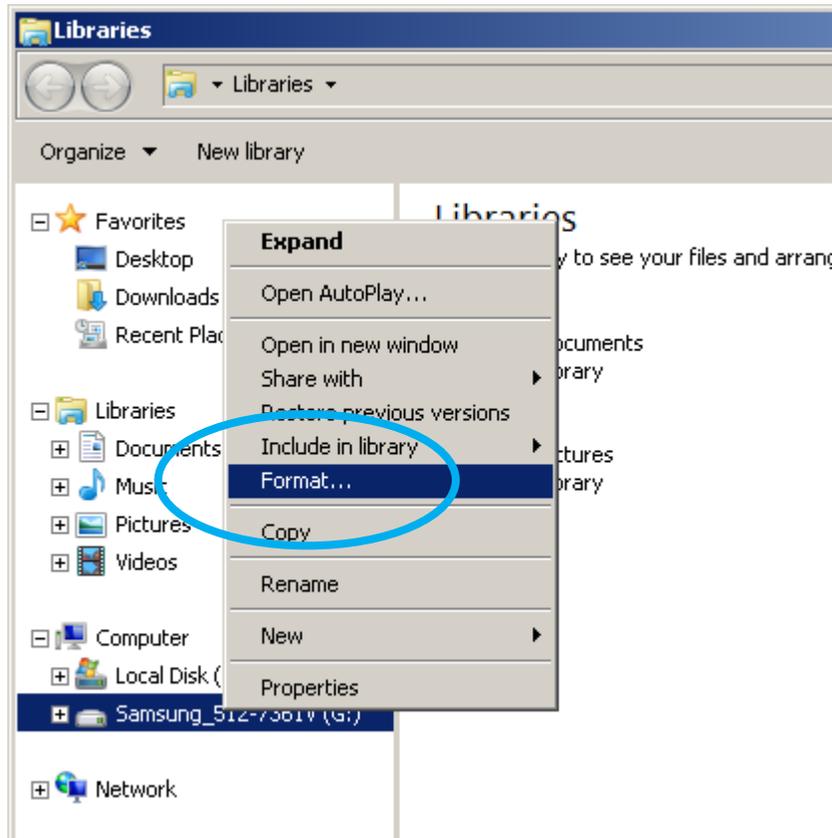


Right click the drive which should be formatted and select “Format” from the context menu.

All of the default settings should be accepted.

The Volume label can be changed to something meaningful, for example [850pro512_1234] where 512 is the disk size and “1234” are the last few digits of the disk serial number.


Select “Start” and follow the dialogs.

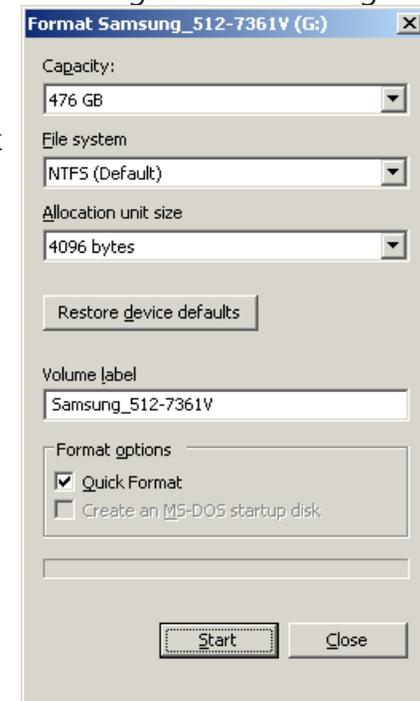

9.8 Disk caching settings

For proper performance on most SSDs, Windows Disk Caching should be "on". A notable exception are the previously supported Vertex drives from OCZ. For those, Disk Caching should be set to "off". To check or set Disk Caching, access the properties for the disk in question. There are several way to get to the disks properties, one way is to open "Disk Management" in "Computer Management" (See ["8.1 Device Manager" on page 229](#))

Right click any disk and select "Properties" from the context menu.

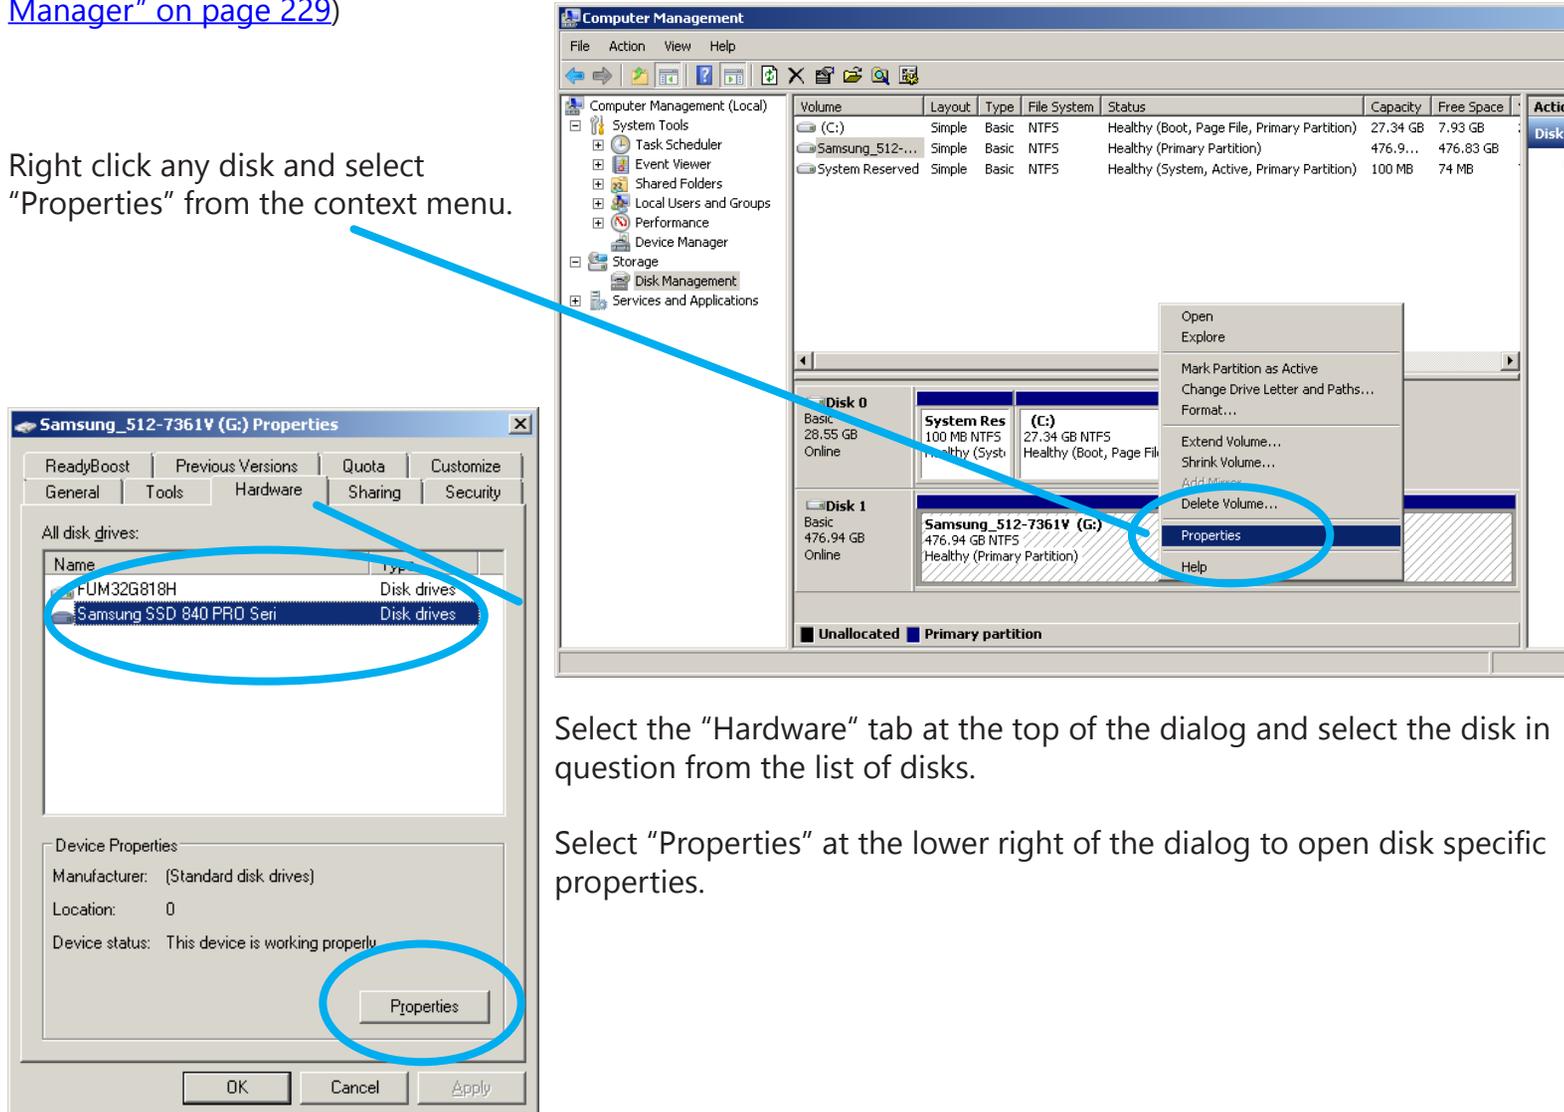

Select the "Hardware" tab at the top of the dialog and select the disk in question from the list of disks.


Select "Properties" at the lower right of the dialog to open disk specific properties.

Disk caching settings / - cont...

For the cache settings, click the "Policies" tab at the top of the dialog.

For Samsung drives, assure "Enable write caching on the device" is checked.
For OCZ drives, assure "Enable write caching on the device" is NOT checked.


Select OK, to confirm your settings and close the dialog.

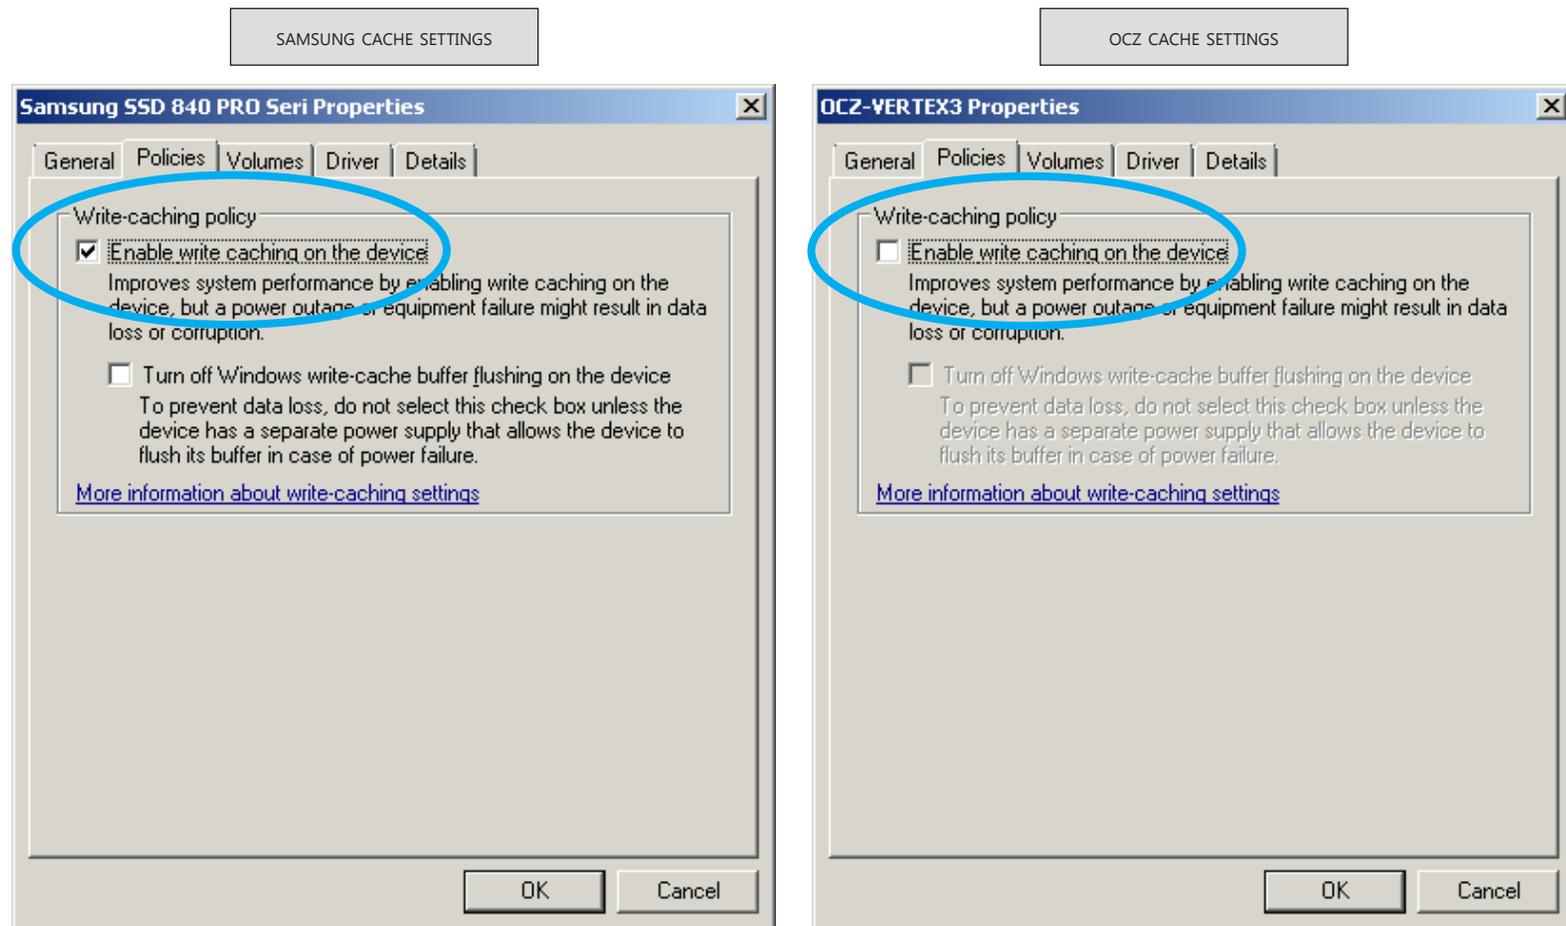


9.9 Changing drive letters

For environments with control over drives, it can sometimes be helpful to predetermine the drive letters assigned by Windows. Again there are several ways to access the dialog for assigning drive letters, one way is to open "Disk Management" in "Computer Management" (See ["8.1 Device Manager" on page 229](#))

Right click the drive for which a drive letter should be assigned and select "Change Drive letter and path...".

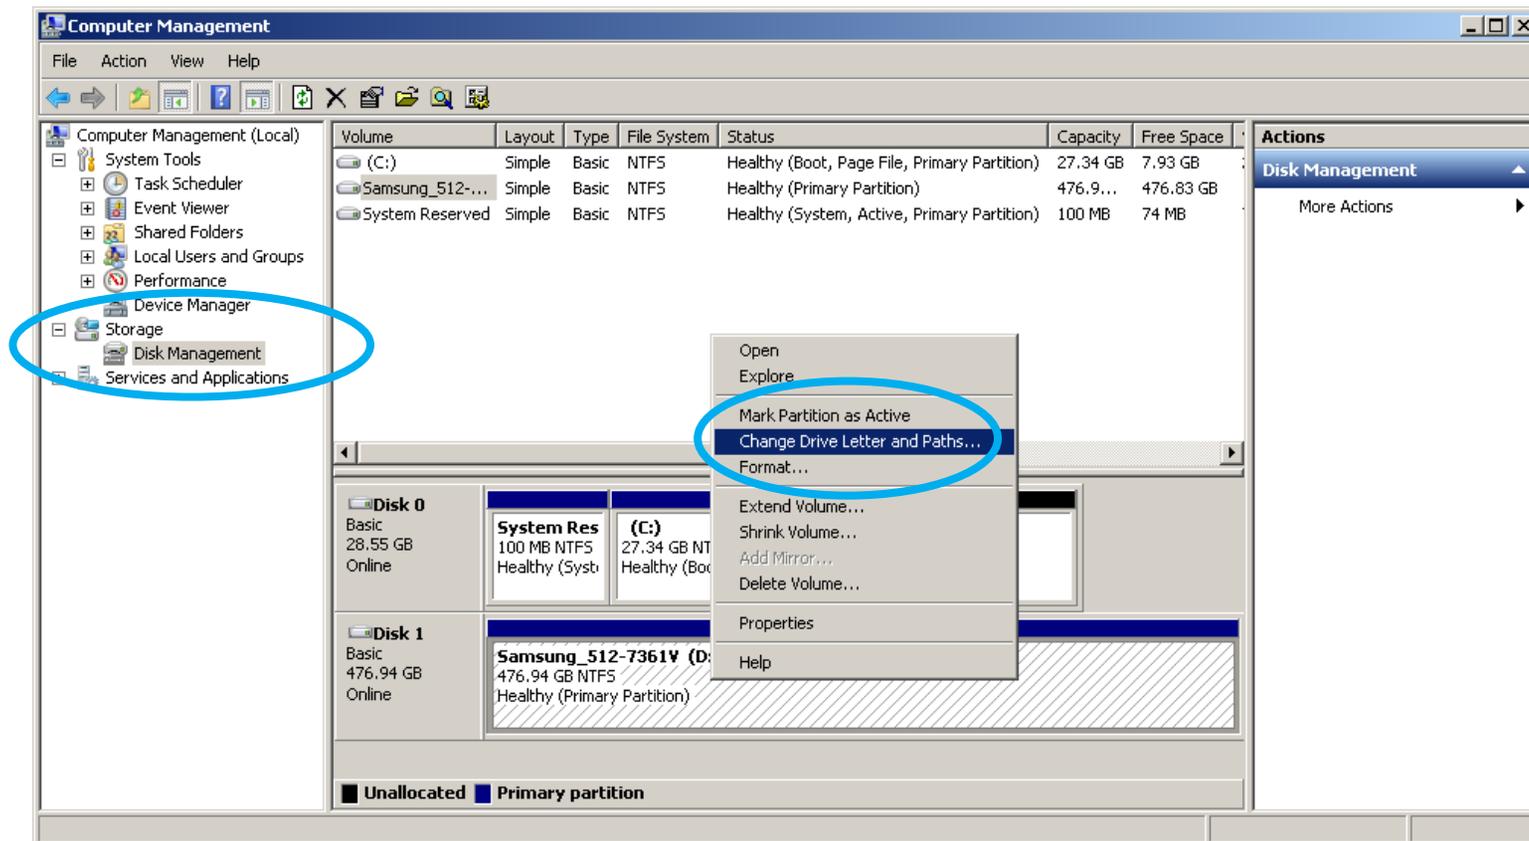

Changing drive letters / - cont...

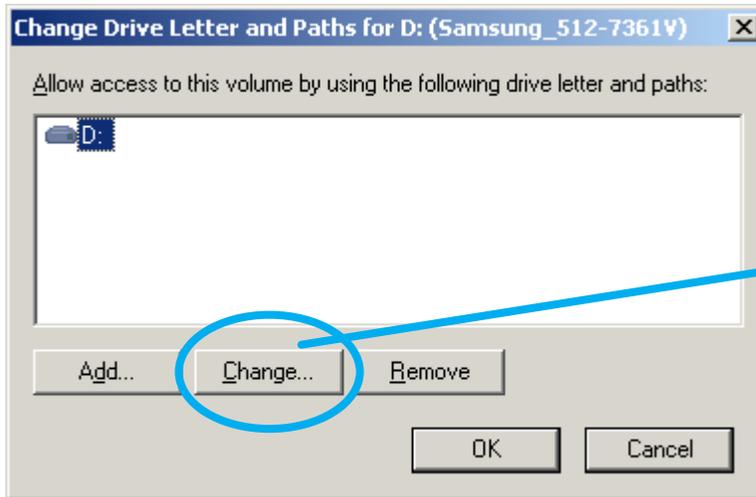

From the first dialog, select "Change" to change the drive letter.



From the drop down list, select an available letter.

Only letters which are currently unassigned will be available in the list.

Select "OK"

9.10 Error Checking

If a drive has been mounted on another machine or file system, or has been removed without being properly ejected, either from the Cinedeck UI or via "Hotswap!" in the windows task bar, corruption of the file indexes can occur which may cause problems with recording, including write failures or prevent files from being found.

Before using the drive, it is strongly recommended to format or secure erase the drive to ensure file system integrity.


- Formatting a SSD makes all space available on a drive and clears any record of previously saved files. See: ["9.7 Formating drives" on page 252](#)
- Secure erase returns drives to "factory new" state. There is no possible recovery of user files. See: ["9.11 Secure erase" on page 259](#)

If formatting or secure erase are not options because the disk contains data, run Windows error checking.

Windows may automatically start the error checking dialog if it detects a disk which was not properly removed. (If Windows activated Check Disk automatically, skip to step 5 below)


To manually access the Check Disk utility:

1. Open Windows Explorer.
2. Right click the disk in question and select "Properties"

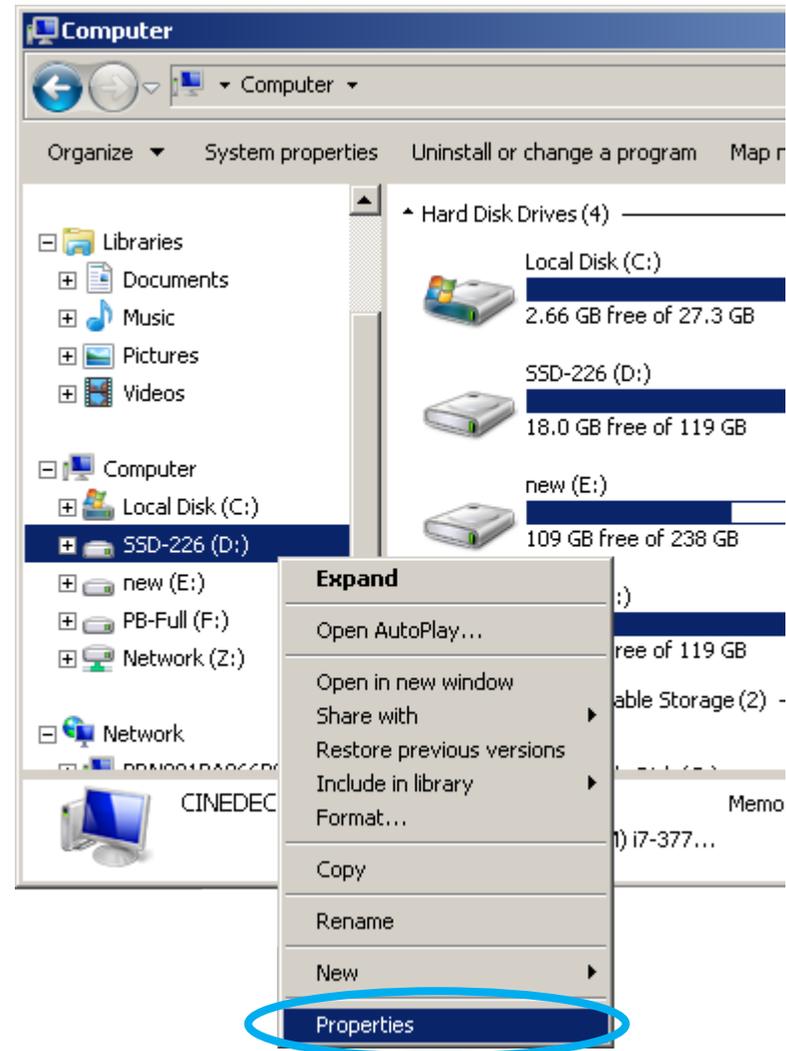


Error Checking / - cont...


3. Select the "Tools" tab from the Properties dialog.
4. Select "Check Now" to open the Check Disk dialog.
5. Whether automatically or manually started, at the Check Disk dialog, assure "Automatically fix file system errors" is checked and

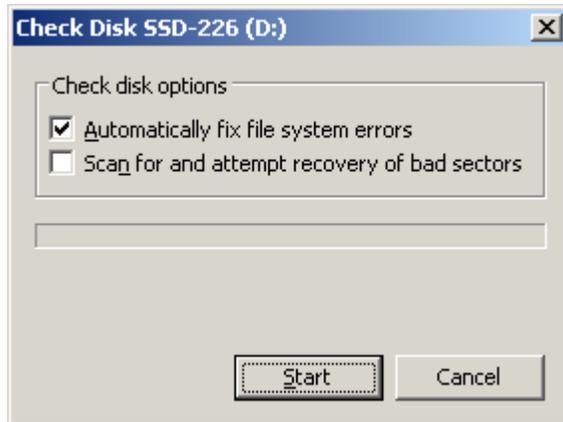

assure "Scan for and attempt recovery of bad sectors" is **not** checked. (This settings is for non-SSD disks)

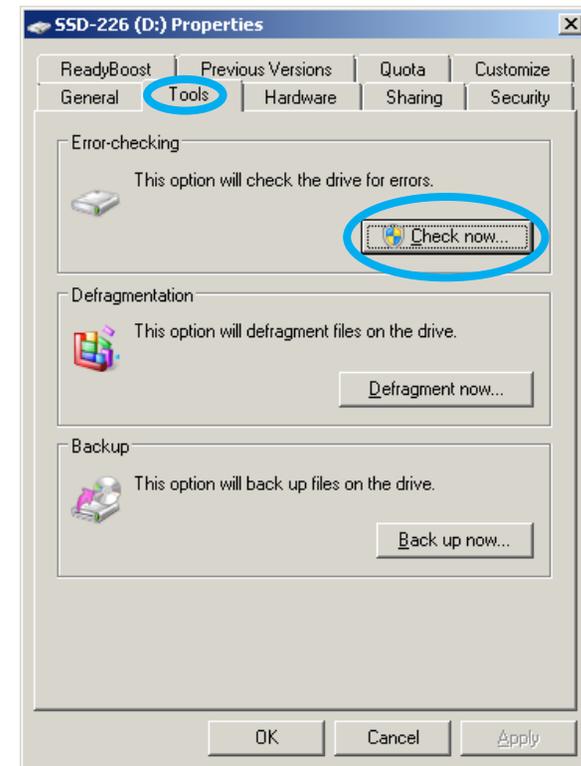

6. When complete, a dialog similar to this will appear, indicating if errors were found and fixed.

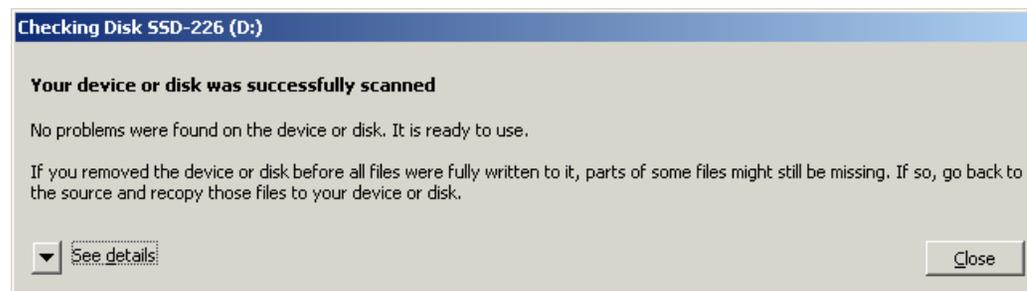


9.11 Secure erase

SSD drives are not like traditional spinning disks in that repartitioning does not fully clear the drives. For SSDs, it's an issue of blocks vs pages known as "Garbage Collection". There is a lot of information on the web regarding SSD performance and secure erase but simply put, secure erase will come as close as is technically possible to restoring an SSD to factory-fresh condition.

The manufacturers secure erase application will also provide a way to update the drive firmware. This generally should be done prior to secure erasing a disk.

While secure erase can be started from within Windows, the SSD will often be in a frozen state which will prevent secure erase access from completing. There are several possible procedures to get around this however the most effective method is to run the manufacturers secure erase from a bootable disk. It is recommended that you create one in advance to have ready when you need it.

For Samsung drives, go to www.samsung.com/samsungssd to download and install the latest Samsung Magician Software. This is a Windows application which includes a utility for creating a bootable version onto a USB drive or CD.

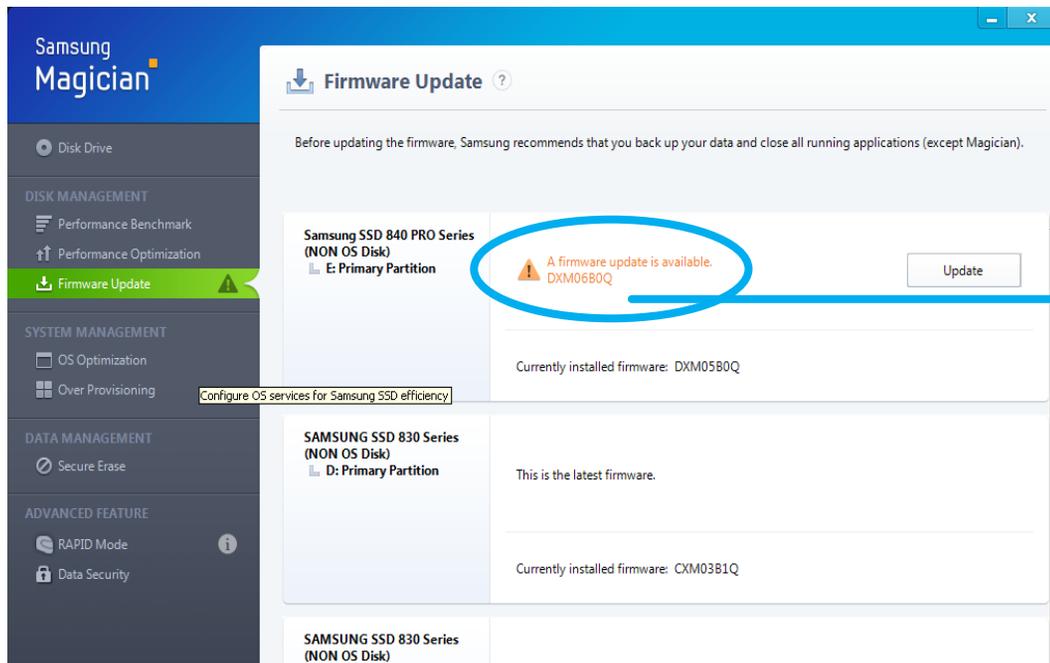

Once installed, Samsung Magician may display an error:



This error may be ignored.

The left portion of the Samsung Magician screen contains the menu while the right provides drive details.

Select "Firmware Update" from the left and if firmware is available, update the drive.

Secure erase / - cont...

After the firmware is updated, select "Secure Erase" from the left.

The right screen again contains disk details including whether they are frozen.

To create the bootable secure erase drive, insert either; a USB drive which can be erased, a blank CD or a blank DVD.


Based on the drive inserted, create either a bootable USB or bootable CD/DVD and follow the prompts.

Once complete, shutdown the Cinedeck and remove any drives you do not want to secure erase.

Assure the new bootable disk is connected and restart the Cinedeck. At the BIOS, press F7 to activate the boot menu.

From the list of drives, select the disk you previously created. If it is a USB and there are two options, select the one that does not mention UEFI.

Once Samsung Magician is running again, select "Secure Erase" and follow the prompts.

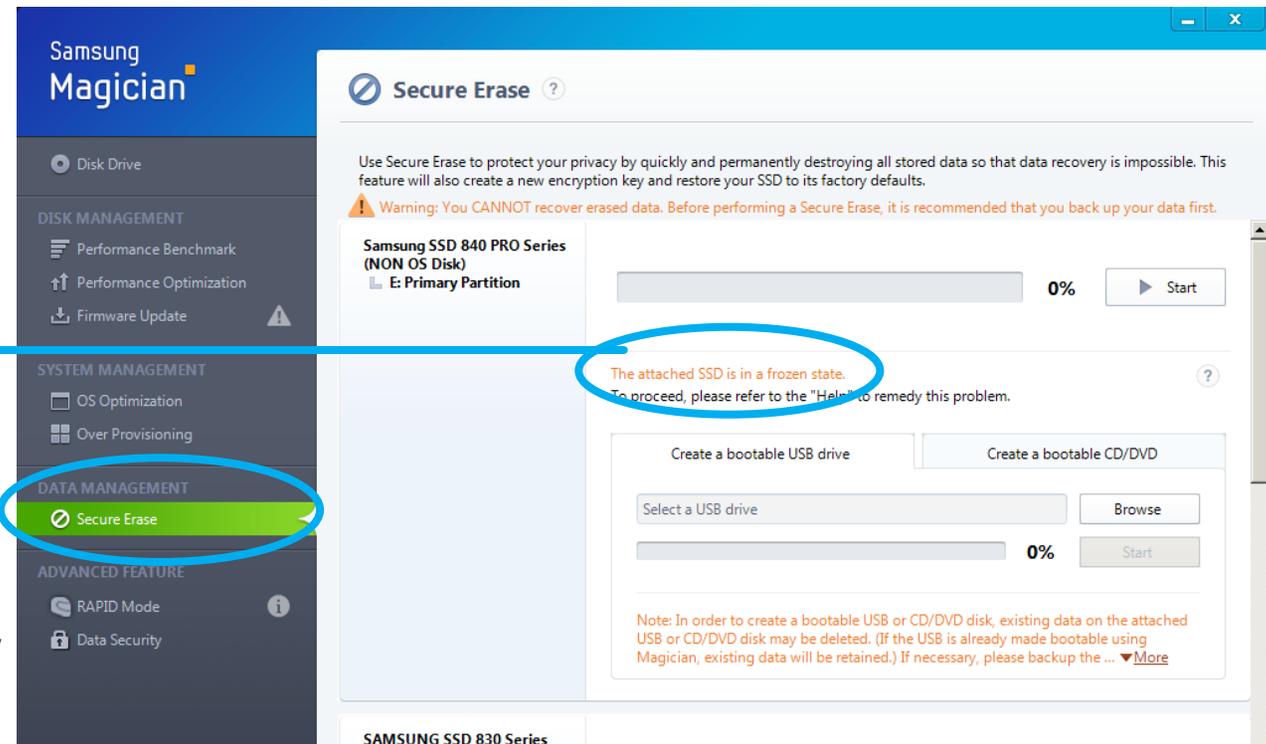


Remember, all data on the SSD will be erased!

Secure erase / - cont...

When you restart your Cinedeck after installing Samsung Magician, you may find that it has been setup to run at startup. If so, this icon  will be visible in the system tray at the lower right of the screen. Also, on touch screen systems, Samsung Magician may display this error at startup: Generally the program will run and this resolution error can be ignored.



Running Samsung Magician at startup is not necessary and if desired, you can change this behavior.

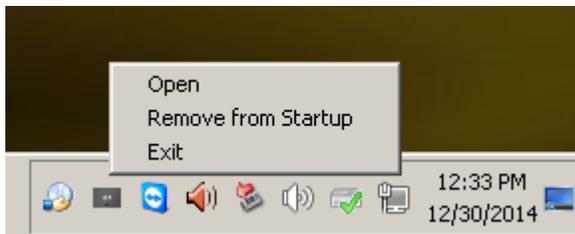


Right click the "Samsung Magician" icon in the system tray to open the context menu and select "Remove from Startup".

Also note that you can exit from the application using this menu as well.



Selecting "Yes" means that the software will not be able to automatically notify you when SSD firmware updates are available but unless your system is always connected to the Internet, that information will not be available anyway.

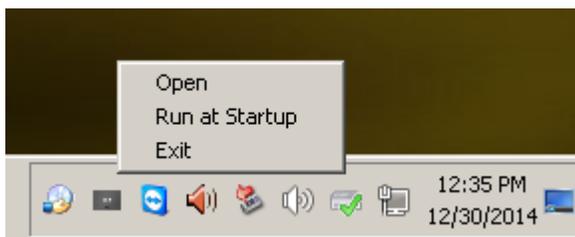

You can always manually run the software to check for updates and, if desired in the future, you can again opt to have the software automatically start by running the program and again, opening the System Tray context menu and selecting "Run at Startup".

9.12 Updates

Updating the Cinedeck is very easy and takes about two minutes.

Download the update installer file which will be about 250MB in size to a convenient location such as the Desktop.

Contact Cinedeck for the current file location. (See ["Contacting Cinedeck" on page 2](#))

It is always wise to save a copy of the file on your computer or server as well as in an "updates" folder located on the USB restore key which came with your Cinedeck.

It is also recommended to create a system restore point.

It is possible, especially if you have installed 3rd party applications such as SAN client software or other tools, that new drivers installed in a software update may be incompatible with that software and cause issues with startup or operation. Restoring a system from a point just before an update can make recovery a relatively painless exercise.

If you encounter such an issue, please contact us with a complete description of the software/hardware involved so we can investigate the cause of the incompatibility.

(See ["Contacting Cinedeck" on page 2](#))

9.13 Create a restore point


To update and skip creating a restore point, goto; ["9.14 Cinedeck Update installation" on page 266](#)

Connect a USB mouse and keyboard
Power on the Cinedeck

On RX, exit the Cinedeck, "setup">"prefs">"exit application" (See ["388- application" on page 182](#))


From the desktop, select "Start"

Right click "computer" and select "properties" from the context menu.

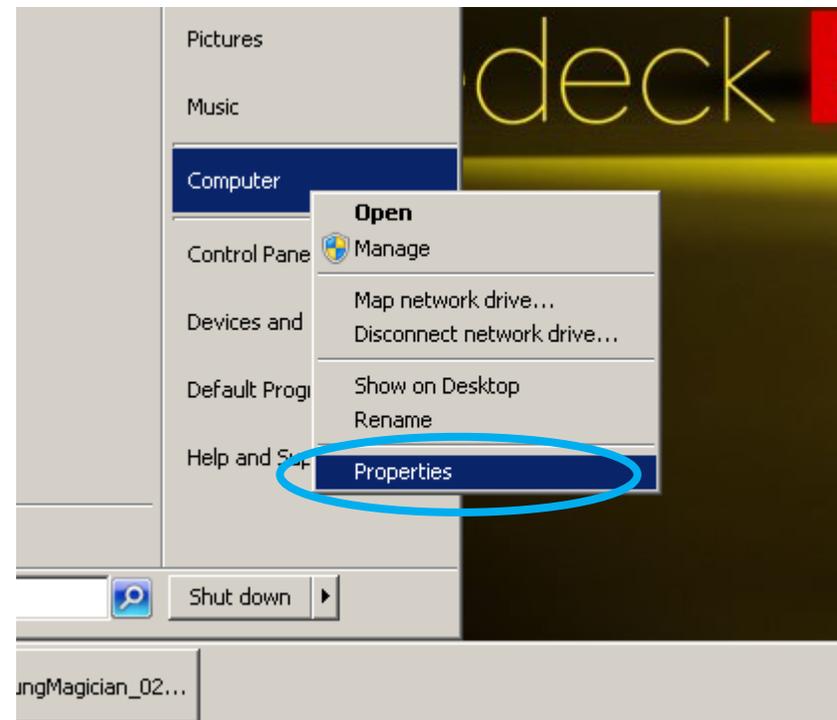


Create a restore point / - cont...

In the properties dialog, select "System Protection" to open the System Protection tab in the "System Properties" dialog.

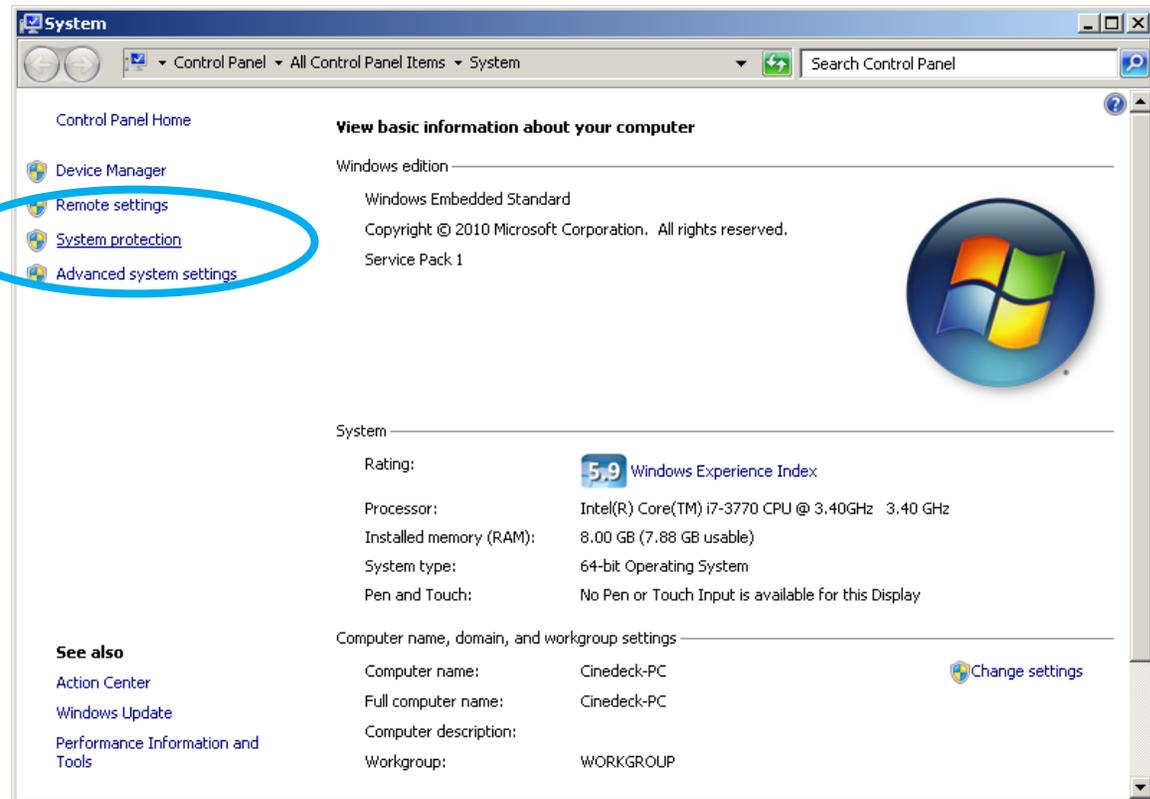


Create a restore point / - cont...

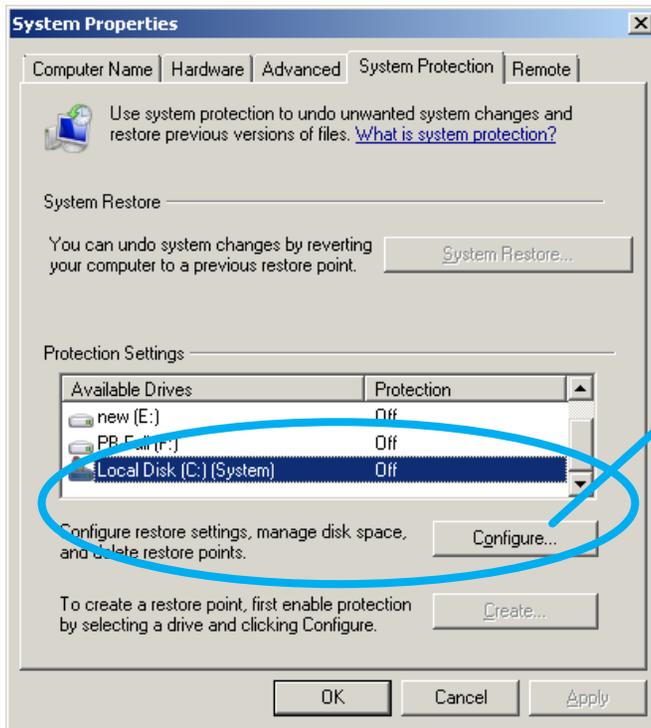


Highlight "Local Disk C: System" from the Protection Settings drive list.

1. Select Configure




2. Under "Restore Settings" select the radio button "Restore system settings and previous versions of files"
3. Below, under "Disk Space Usage", slide the "Max Usage" indicator to allow a minimum of between 2 and 3GB.
4. Select "OK"
5. Select "Create"

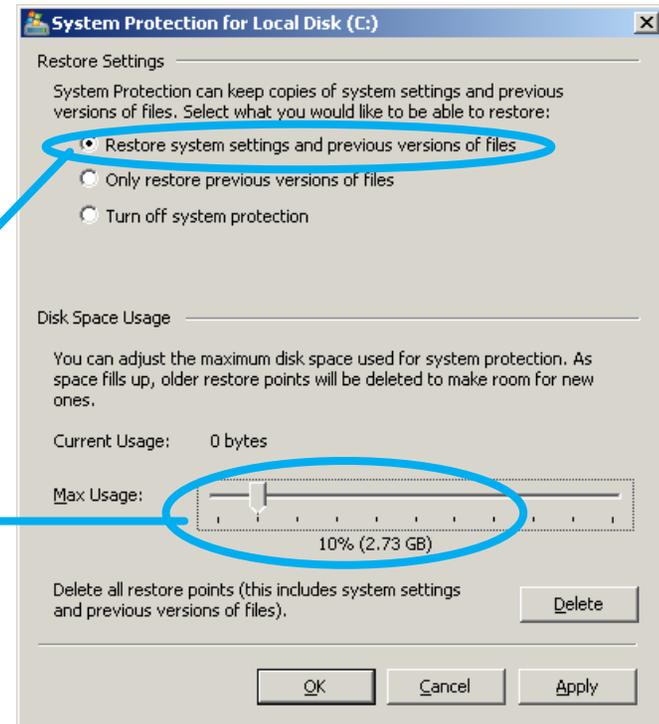

Create a restore point / - cont...

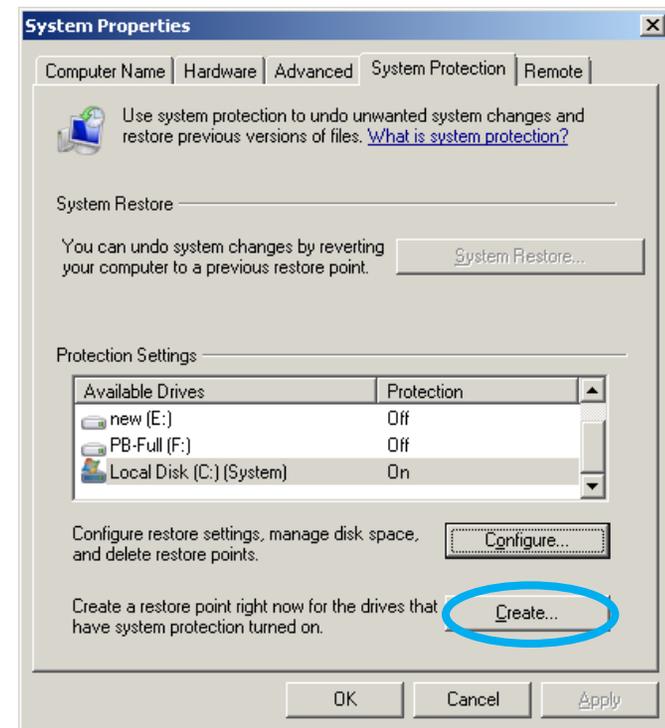

6. At the following dialog, you can give this new restore point a user friendly name, select "Create".
Note that when you open restore mode, the date and time are automatically included with the information displayed.
7. Follow the prompts as the restore is created and close all of the windows when the process finishes.

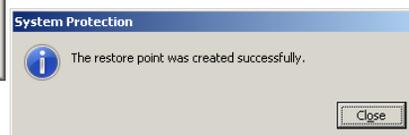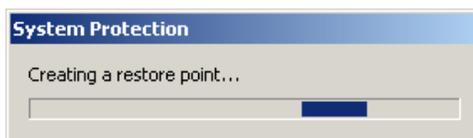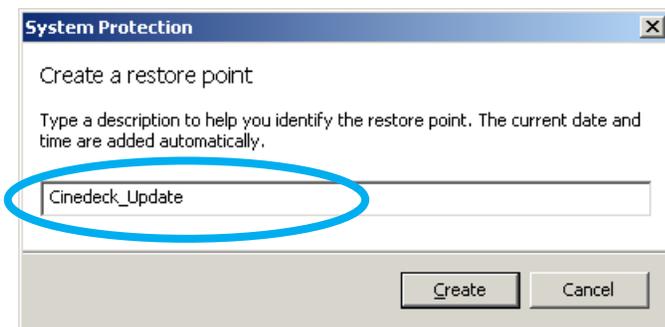


9.14 Cinedeck Update installation

Before you begin: Remember that operators hate surprises. If you are in the middle of a production and everything is working, apply the logic of “if it ain’t broke, don’t fix it”. Wait until AFTER the show wraps to play with new things.

Also, You may want to preserve the old version of software. The easiest way to do that is simply to make a copy of the cinedeck folder on a thumb drive and rename the folder to something like Cinedeck_10-21-2014. You can always copy this folder back to the Cinedeck to roll-back if needed.

1. Connect a USB mouse and keyboard
2. Power on the Cinedeck and allow to load fully. Exit the Cinedeck application if it starts automatically;
 - To exit, press “setup”>“prefs”>“exit application” (See [“388- application” on page 182](#))
3. Download the update installer file which will be about 250MB to a convenient location such as the Desktop. Contact Cinedeck for the current file location. (See [“Contacting Cinedeck” on page 2](#))
It is always wise to save a copy of the file on your computer or server as well as in an “updates” folder located on the USB restore key which came with your Cinedeck.

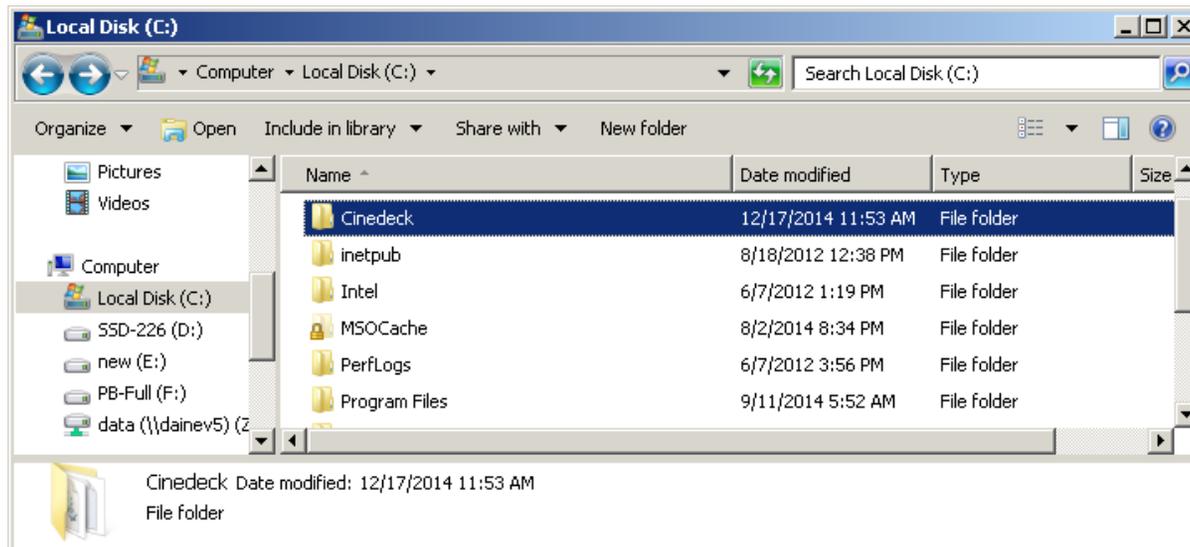


4. Open Windows Explorer. Navigate to the c:\cinedeck folder and open it.

Copy and safely store any files such as LUTs which you will need after the update to another folder.


Cinedeck Update installation / - cont...

5. Once in the Cinedeck folder, locate HotSwap!.exe
6. Press "Control+A" to select all files and then press the Control key and click HotSwap!.exe to deselect it.
7. Press the "Delete" key to delete all of the selected files.

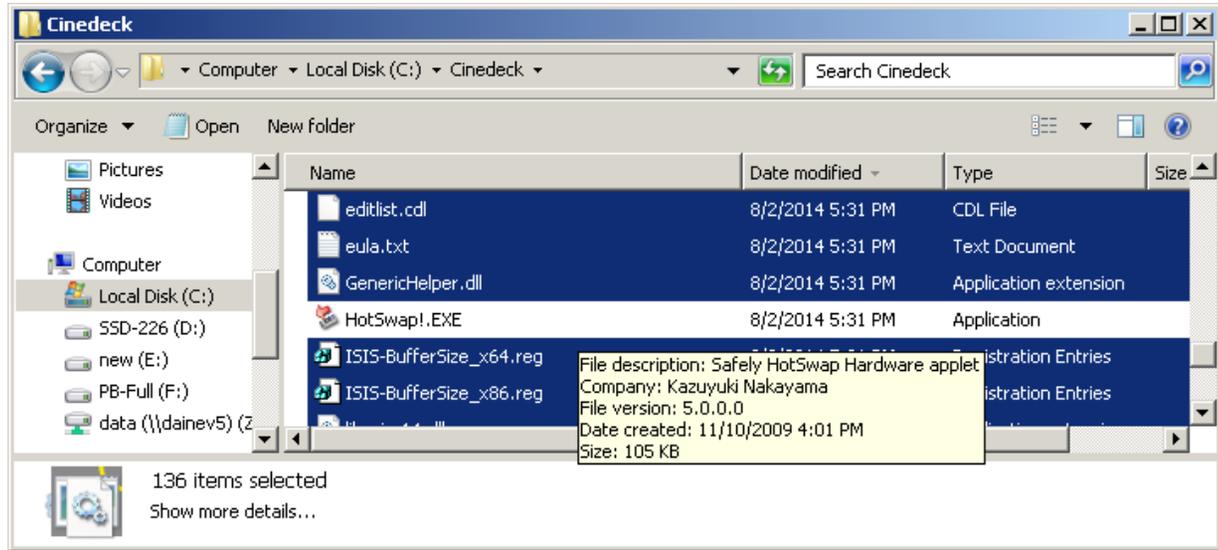



Make note of any instructions which came with the update as there are occasionally additional steps which need to be taken during the install process.

8. Updates can be run from any local drive. Insert the USB thumb drive into one of the USB ports or otherwise locate the update file in Explorer.
9. Double click the file to run the update and follow the prompts.

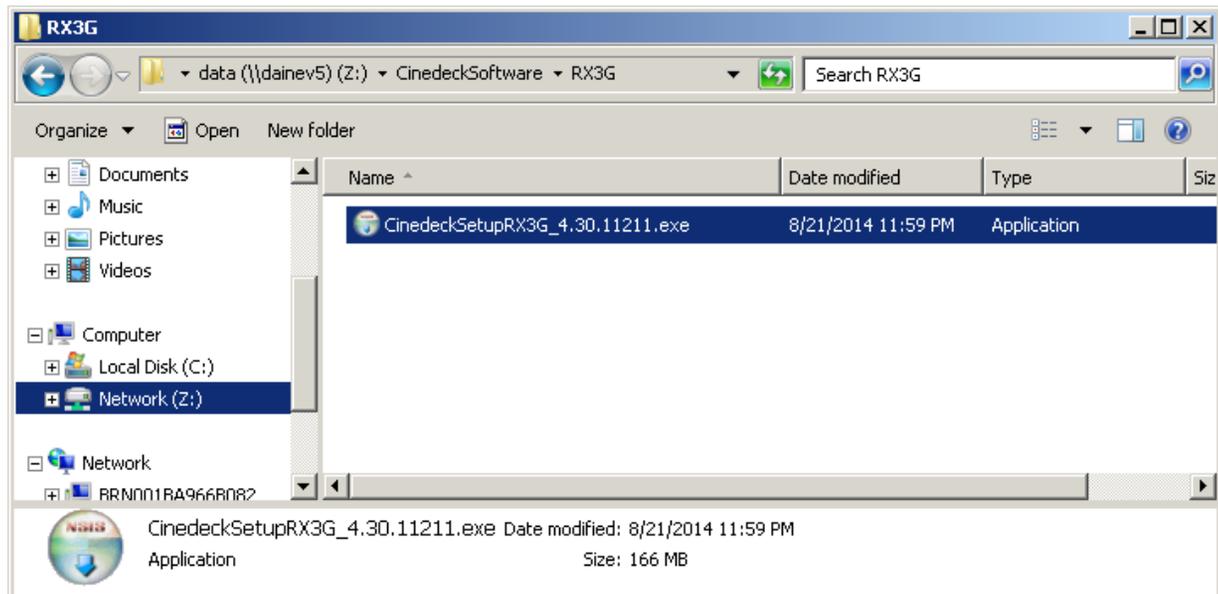


Cinedeck Update installation / - cont...


10. Windows may pop up a warning message stating that "The publisher could not be verified". Press "run" to continue setup.

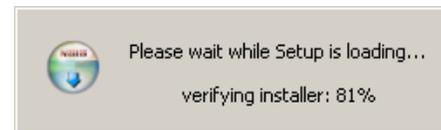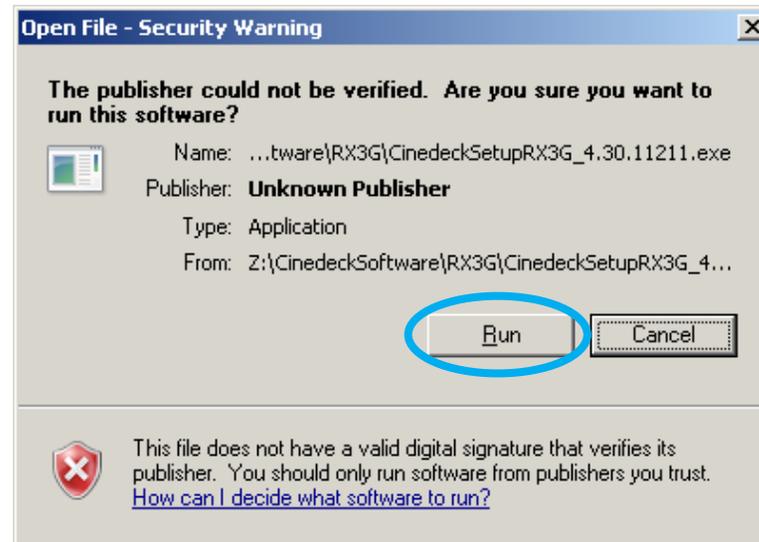

11. You must agree to the terms and conditions to continue the installation. Select "I agree" to continue and follow the prompts.

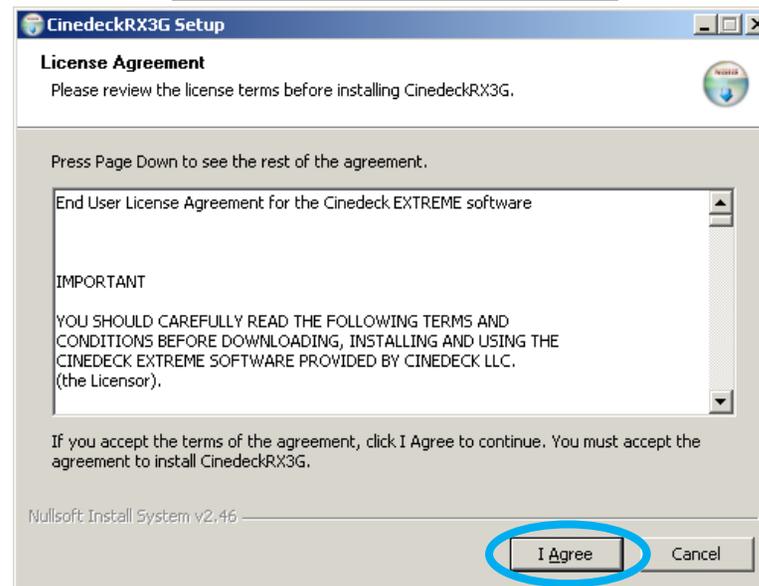

Cinedeck Update installation / - cont...

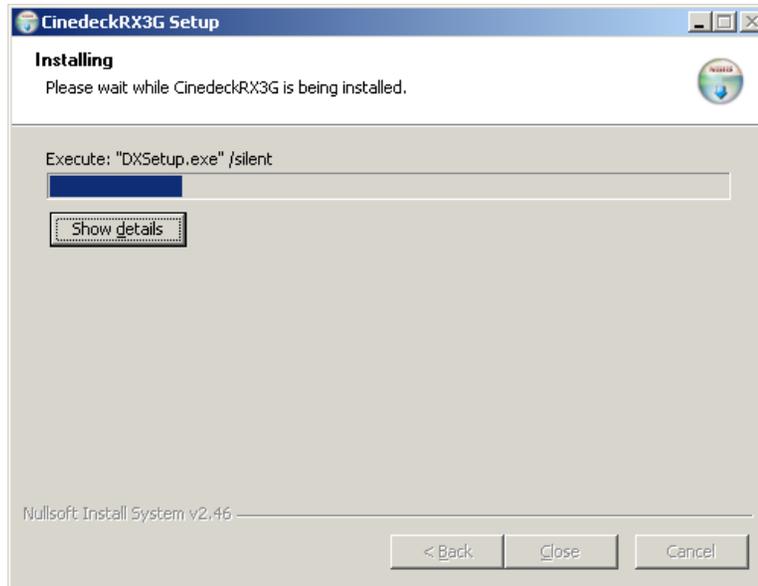

12. The install will start.


13. Depending on the nature of the update and the system you are updating, dialog boxes for other driver installations such as this may appear.





Unless otherwise stated in the release notes, follow the prompts to install everything.

14. *When the installation has completed, it is mandatory to reboot the deck.*

15. On first restart, additional update notifications may appear. Allow the firmware updates to run, then restart again when prompted by the installer.

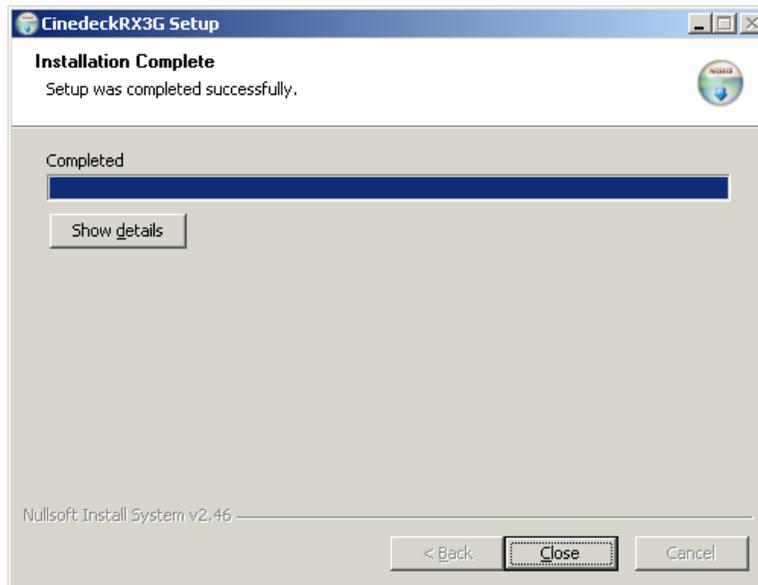

9.15 Using a Restore Point

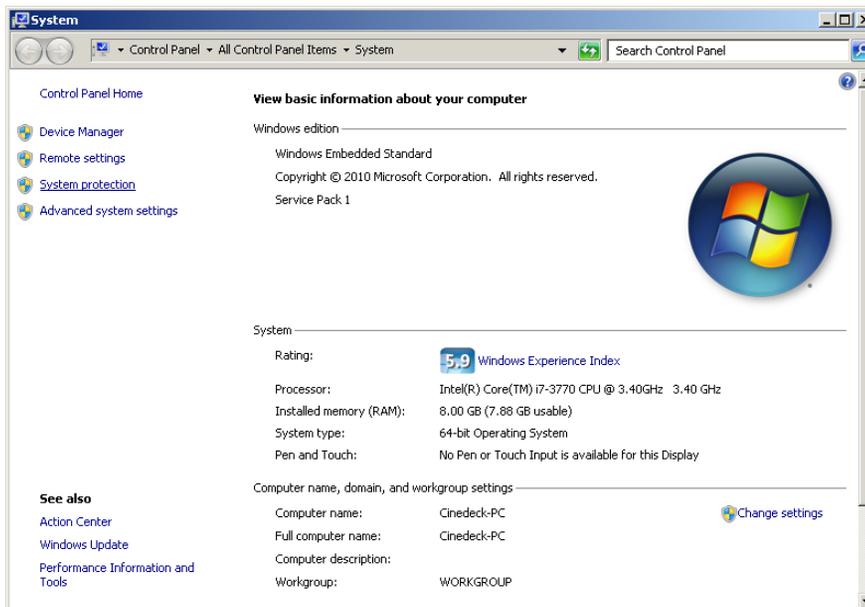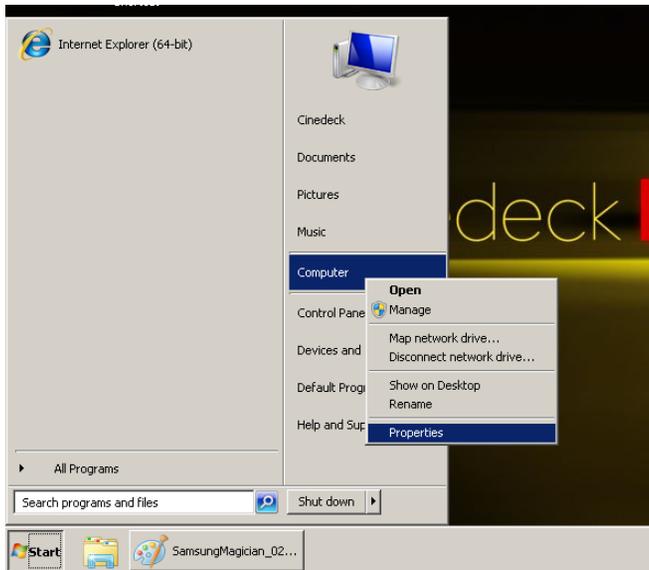


1. Connect a USB mouse and keyboard
2. Power on the Cinedeck
 - On RX, exit the Cinedeck, "setup" > "prefs" > "exit application" (See ["388- application" on page 182](#))


3. From the desktop, select "Start"
4. Right click "computer" and select "properties" from the context menu.

5. In the properties dialog, select "System Protection" to open the System Protection tab in the "System Properties" dialog.

Using a Restore Point / - cont...

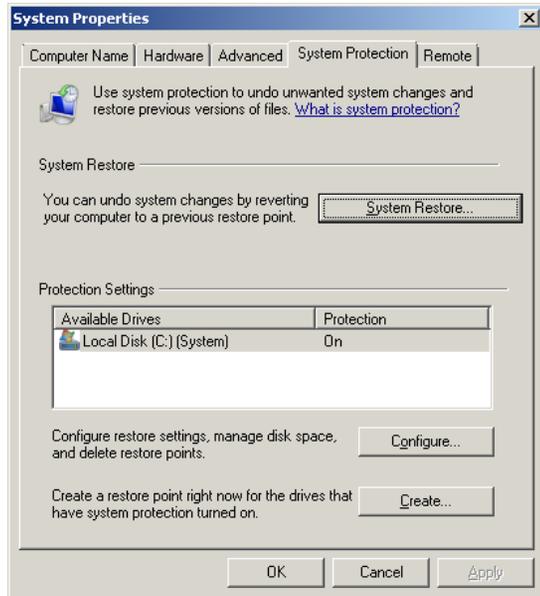


6. Select the "System Restore" button.

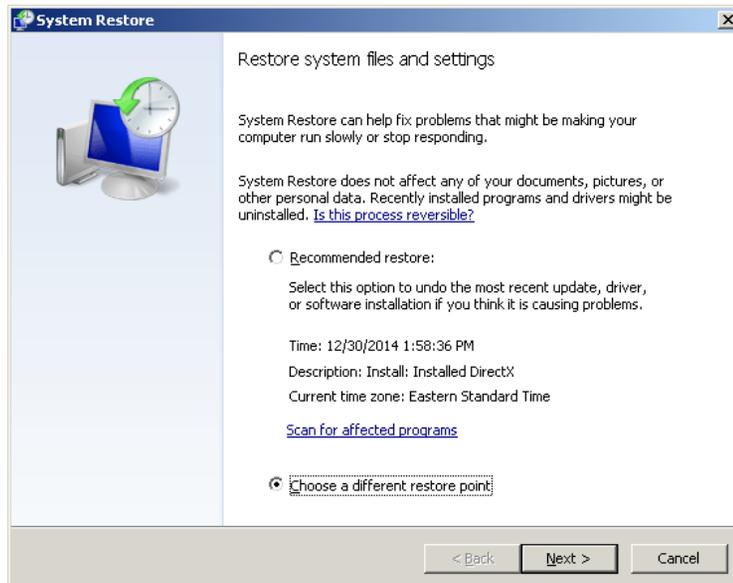


7. Depending on the circumstances, you may see this screen with two options, a "Recommended restore" or "Choose a different restore".

Select "Choose a different restore" to view all of the available restore points.

Using a Restore Point / - cont...

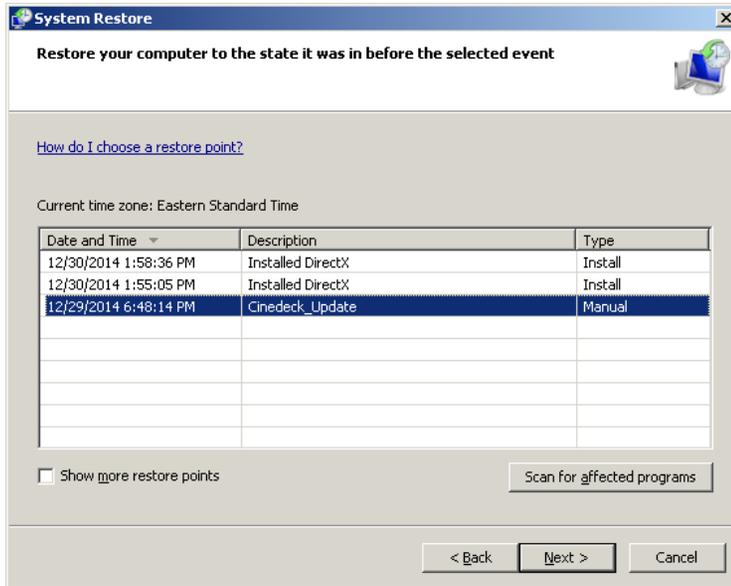


8. Select the restore point you want to use and press "Next".

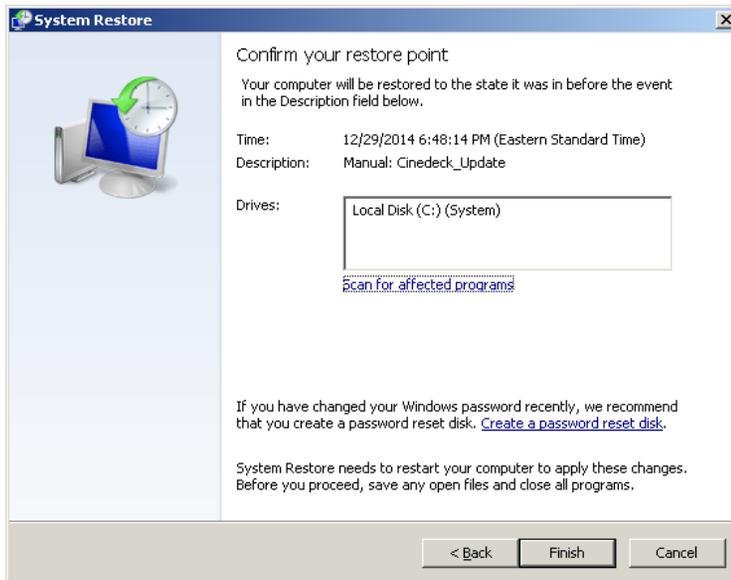

9. This last dialog is simply a confirmation before the process begins. Press "Finish" to restore the system.

10. The restore process will run.

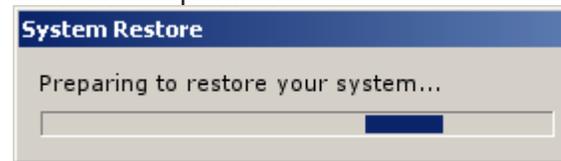


When the restore is complete, the system will be automatically restarted.

9.16 Bluefish update

All current Cinedeck systems utilize Bluefish cards for the primary video and AES inputs and outputs. The firmware for these systems requires a separate installation.

1. Connect a USB mouse and keyboard
2. Power on the Cinedeck and allow to load fully. Exit the Cinedeck application if it starts automatically;
 - To exit, press "setup">"prefs">"exit application" (See ["388- application" on page 182](#))
3. Newer releases come with the Bluefish update installer in the c:\cinedeck\redist folder. Otherwise, download the Bluefish update installer to a convenient location such as the Desktop. Contact Cinedeck for the current file location. (See ["Contacting Cinedeck" on page 2](#))
It is always wise to save a copy of the file on your computer or server as well as in an "updates" folder located on the USB restore key which came with your Cinedeck.
4. Open Windows Explorer.
Navigate to the Bluefish download and unzip the contents to a convenient location such as the Desktop.
5. Locate the Supernova update .exe file and double click it to start the install.

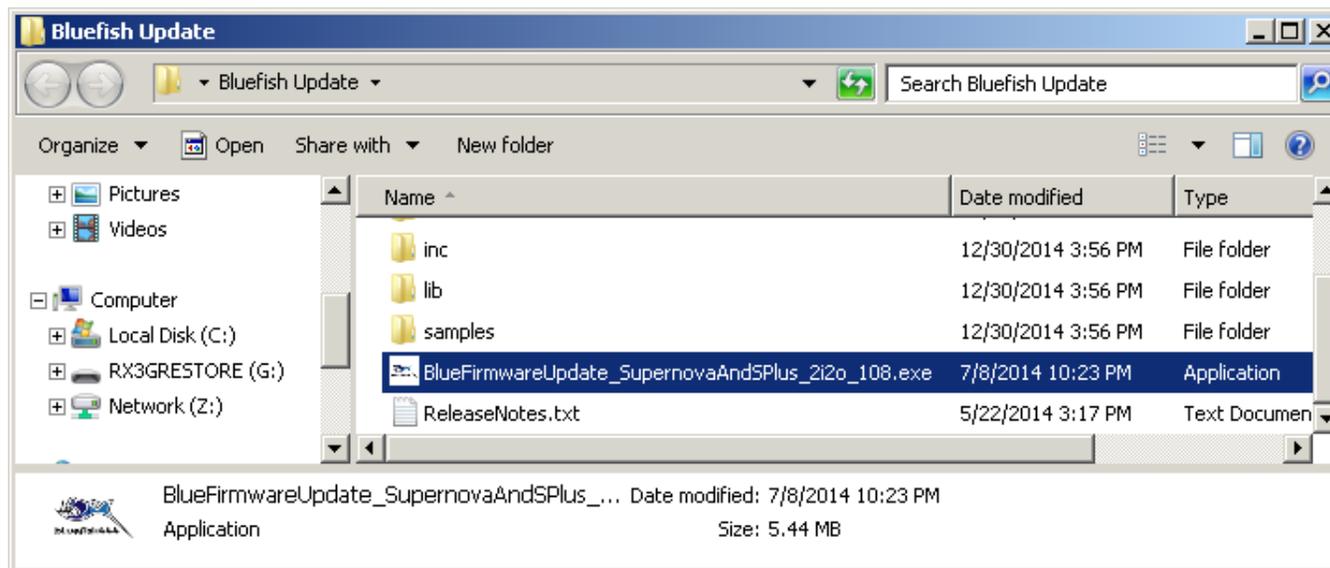

Bluefish update / - cont...

! Do not power off the system during firmware updates!

- The "New Firmware" drop-down list should indicate a Supernova card.

Note that if your system has four channels, you will repeat this procedure twice, once for each card, selecting the second card from the drop-down for the second run.

- Click "Update" at the right of the screen to start the install and note that the "Exit" button becomes gray and unavailable during the update process.
- The progress bars at the bottom will slowly move right during the update.
- When the update has completed, the "Exit" button will again be available. Fully shut the system down and restart to complete the install

BlueFirmwareUpdate - V1.0.0.13

Card Info

Card Select: Epoch Supernova

Serial Number: BFLF017373

Fw Type: 2i/2o

Fw Version: 108

New Firmware

Fw Type: Supernova/S+ 2i2o

Fw Version: 123

Options

Exit

After updating the firmware the machine must be powered down to take effect!

Shutdown after update

Update

Progress

Current Step:

Total:

BlueFirmwareUpdate - V1.0.0.13

Card Info

Card Select: Epoch Supernova

Serial Number: BFLF017373

Fw Type: 2i/2o

Fw Version: 108

New Firmware

Fw Type: Supernova/S+ 2i2o

Fw Version: 123

Options

Exit

After updating the firmware the machine must be powered down to take effect!

Shutdown after update

Update

Progress

Current Step:

Total:

Remember: The system must be fully powered off and restarted after these firmware updates!

9.17 Restore factory image

The Cinedeck runs Windows 7 embedded from a separate SSD system drive and each Cinedeck ships from the factory with a USB restore key. The restore key is a Linux bootable drive with Clonezilla installed and several compressed image files which contain the complete Windows operating system and the Cinedeck software. This USB should be kept accessible and updated in the event the system needs to be restored.

There are two parts for updating the restore key;

You should always copy any system updates to a folder on the USB key and a few times per year, it is a good idea to download updated image files. This is usually done after a major update ships. The image files are several gigabytes so should be downloaded with a proper FTP application such as Filezilla and when time is not of the essence. See ["9.18 Update a USB restore key" on page 276](#).

If the key is damaged or misplaced, a replacement can be purchased or you can download the files needed to create a new restore key. See ["9.19 Create USB restore key" on page 277](#).

Regular restores are recommended for facilities to clean out machines which are rented out or are otherwise often not under their direct control.

Restoring is also recommended for troubleshooting. If a machine has an issue which can not be quickly diagnosed, it is usually faster to restore than to search. Generally, if the problem still persists after the restore, it is more serious and support should be contacted. See ["Contacting Cinedeck" on page 2](#)

To restore your Cinedeck:

1. Shut the deck down and remove / disconnect any media drives.
2. Insert the Cinedeck restore key into a rear USB port and connect a keyboard to a rear USB port.
3. Power on the Cinedeck and;
 - For RX3G, keep tapping the F7 key until you enter the startup menu.
 - For MX or ZX, keep tapping the F8 key until you enter the startup menu.
4. Select the USB flash drive (not the one with UEFI in the name) and press enter.
5. The restore process will automatically begin and takes about 10 minutes.
 - Some systems may present additional prompts. To confirm the restore, type "y" and press "enter".
6. When finished, the screen will display "press enter to continue". Press enter.
7. Select 0 to power off the system. remove the restore USB stick.
8. Power on the Cinedeck and the system has been restored.

Install any recent software update.

9.18 Update a USB restore key

Updating a restore key is simply a matter of replacing a few image files however, they are several gigabytes so should be downloaded with a proper FTP application such as Filezilla and when time is not of the essence.

Ideally the following will be done on a Windows PC or directly on the Cinedeck.

For the FTP location of the current restore disk updates for your system, contact Cinedeck.

See ["Contacting Cinedeck" on page 2](#)

For RX;

- Download XPE-full.zip to the local computer, preferably using an FTP application such as Filezilla.
- Extract the contents of the zip file to a convenient location such as the desktop.
- You should have a folder named "xpe-full" containing upwards of 6GB.
- Insert the Cinedeck restore USB.
- Navigate to home\partimag\ and delete the folder "xpe-full" on the USB.
If desired, you can copy the older files to a folder on your computer for safe keeping.
- Copy the new "xpe-full" folder you extracted earlier from the downloaded zip file to home\partimag\ folder on the USB.

MX and ZX use the same source files;

- Download the "MXRestore.zip" to the local computer, preferably using an FTP application such as Filezilla.
- Extract the contents of the zip file to a convenient location such as the desktop.
- Delete the MXRestore folder at the root directory of the MX or ZX Restore USB stick.
If desired, you can copy the older files to a folder on your computer for safe keeping.
- Copy the new MXRestore folder to the root directory of the MX or ZX Restore USB.

Once the files are copied, you can safely eject the USB from the computer and if needed, proceed to ["9.17 Restore factory image" on page 275](#).

9.19 Create USB restore key

The USB restore key is a Linux boot environment which contains several GB of Clonezilla image files for restoring a Cinedeck system. New restore disks can be purchased or created as needed.


To create one, two sets of files are required, the latest OS drive image files for your Cinedeck model and the USB boot files. These files can be downloaded separately so if you already have a recent set of image files, all you need is the small boot files download. If you need everything, you can download the full restore zip. Note that the image files are several gigabytes so should be downloaded with a proper FTP application such as Filezilla and when time is not of the essence.

For the FTP location of the restore disk updates for your system and the USB boot files, contact Cinedeck.

See ["Contacting Cinedeck" on page 2](#)

Before starting, you need a USB disk of at least 8GB. Note; some USB memory sticks will not be recognized at boot time at all so while not guaranteeing compatibility, you should first test the USB disk with a Cinedeck.

1. Shut the deck down and remove / disconnect any media drives.
2. Insert the new flash drive into a rear USB2 port and connect a keyboard to the rear USB ports.
3. Power on the Cinedeck and;
 - For RX3G, keep tapping the F7 key until you enter the startup menu.
 - For MX or ZX, keep tapping the F8 key until you enter the startup menu.
4. You should see two or three drives listed, the internal OS SSD and the USB flash drive which will usually be listed with its brand name and possibly again with "UEFI" and the brand name.
5. Presuming the drive was listed, it should work as a restore key.

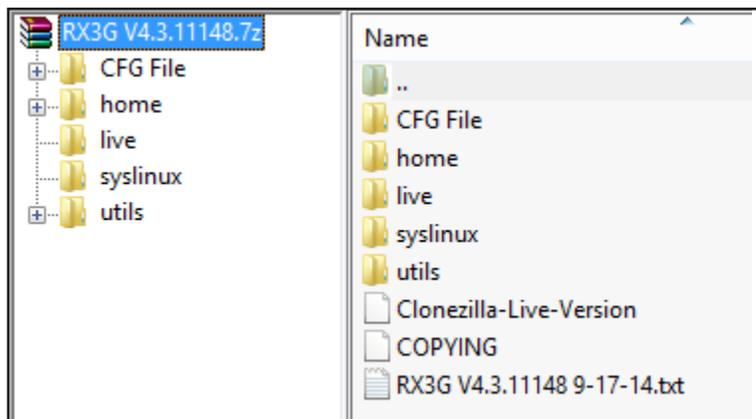


Creating the RX USB restore key:


The following should be done on a Windows PC or directly on the Cinedeck.

- Extract the contents of the zip file(s) to a convenient location such as the desktop
- Format the 8GB+ USB as fat32. Use quick format.
- If using the full restore zip for RX3G, you will have 5 folders and 2 or 3 files, similar to the image at the left.
- Copy these over to the USB stick.

Create USB restore key / - cont...

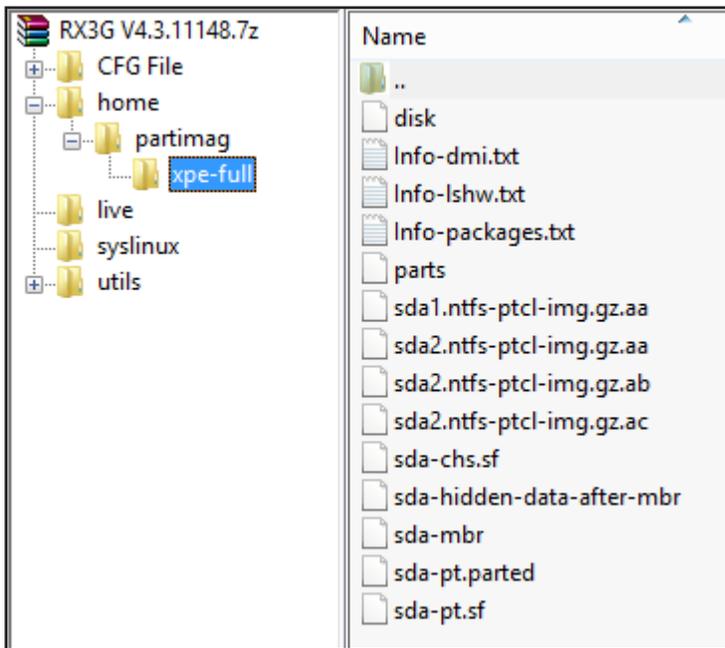

- If you have separate zip files for the “xpe-full” folder and the “restore usb files”, copy the “restore usb files” folders and files to the USB key.
- Create a “home” folder on the USB key and inside the “home” folder, create a “partimag” folder.
- Navigate to home\partimag\ on the USB stick and copy the “xpe-full” folder to there.
- When finished, you should have a structure similar to the image at the left.

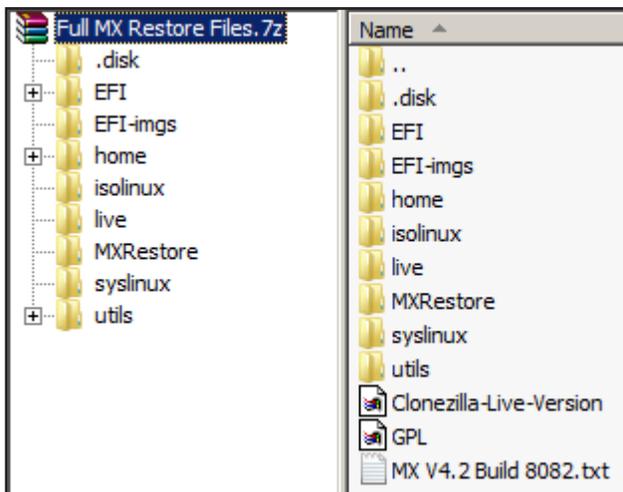


Creating the MX ZX USB restore key:

The following should be done on a Windows PC or directly on the Cinedeck.

- Extract the contents of the zip file(s) to a convenient location such as the desktop
- Format the 8GB+ USB as fat32. Use quick format.
- If using the full restore zip for MX or ZX, you will have 9 folders and 2 or 3 files, similar to the image at the left.
- Copy these over to the USB stick.

Create USB restore key / - cont...

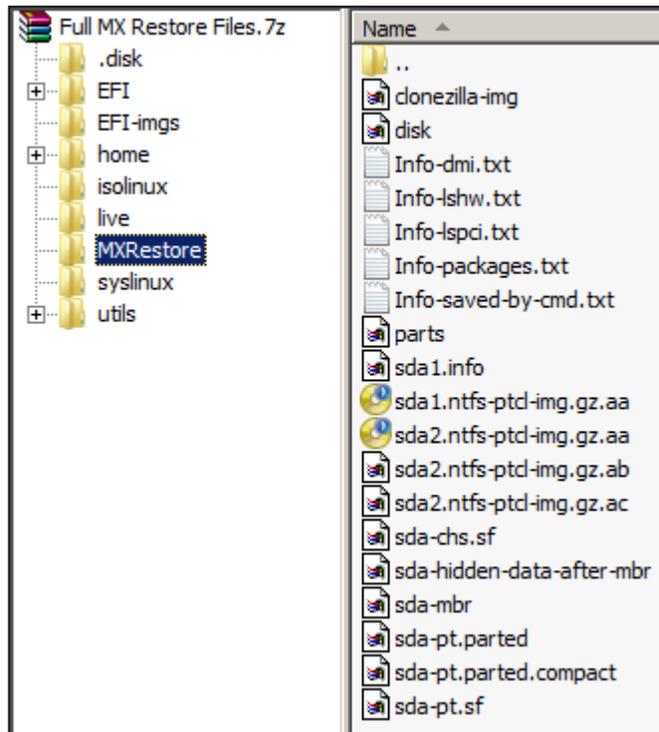

- If you have separate zip files for the “MXRestore” folder and the clonezilla “boot files”, copy the “boot files” folders and files to the USB key.
- Copy the “MXRestore” folder to the USB.
- When finished, you should have a structure similar to the image at the left.

Making the USB bootable:

After the folders are copied over, you need to make the USB bootable using the Command Prompt: To open the Command Prompt on a Windows 7 or 8 machine, click on the Windows “Start” button.

In Windows 7, type “cmd” in “search programs and files”. Under programs, cmd.exe will appear.

In Windows 8, type “cmd” and “Command Prompt” should show in the search list.

Right click “cmd.exe” or “Command Prompt” and select “Run as Administrator.” (This is true even if you are already logged in as an administrator)

- Type: D: (or whatever the USB key drive letter is) and press Enter (this selects the USB drive)

```
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. All rights reserved.

C:\Windows\system32>f:
F:\>
```

Create USB restore key / - cont...

- Type: CD UTILS\WIN32 and press Enter (this changes the current folder)

```
Microsoft Windows [Version 6.3.9600]
(c) 2013 Microsoft Corporation. All rights reserved.

C:\Windows\system32>f:
F:\>cd utils\win32
F:\utils\win32>
```

- Type: MAKEBOOT.BAT and press Enter (this runs some commands to make the USB bootable)

```
-----
This batch file will prepare drive F: for boot using syslinux!
-----

----- WARNING!: -----
-----

Run this file from your portable USB device ONLY.
Running this file from your hard drive may overwrite your current
Master Boot Record (MBR) and render your Windows Operating System
un-bootable. YOU HAVE BEEN WARNED!

This batch file is offered in hopes that it will be useful and
comes with absolutely no warranty. USE AT YOUR OWN RISK!

-----

Press any key to make drive F: bootable
or close this window to abort...
```

Press any key and follow the instructions to make the USB bootable.

```
~~~~~ Congratulations ~~~~~

The hidden file ldlinux.sys has been installed
Your F: drive should now be bootable.

Press any key to exit this window!
```

Once the procedure is done, close the command prompt window and safely eject the USB from the system.

Continue to ["9.17 Restore factory image" on page 275](#) to restore your Cinedeck with the new restore key.

9.20 Create system image

The Cinedeck USB key can also be used to create an image of your system as you have set it up and save it to the USB. This can be quite useful if you have, for example, installed SAN software or made other permanent changes to the system which you would like restored if a system restore is required.

The procedure is essentially the same as restoring the system from the USB however the active Clonezilla automation script needs to be changed.

The Cinedeck system image on the USB must be deleted so it should be saved elsewhere:

For RX, copy the "xpe-full" folder from home\partimag\ on the USB to a safe location on your computer.

For MX, copy the "MXRestore" folder from the USB drive to a safe location on your computer.

Navigate to the syslinux folder on the USB

For RX, rename "syslinux.cfg" to "syslinux deploy.cfg". Rename "syslinux save.cfg" to "syslinux.cfg".

For MX/ZX rename "syslinux.cfg" to "syslinux deploy.cfg". Rename "syslinux save.cfg" to "syslinux.cfg".

- For the MX USB, delete the MXRestore folder.
- For the RX USB, delete the "xpe-full" folder from home\partimag\.

As with a restore, to create an image of the existing machine, boot the system with the Restore USB:

1. Shut the deck down and remove / disconnect any media drives.
2. Insert the USB flash drive into a rear USB2 port and connect a keyboard to the rear USB ports.
3. Power on the Cinedeck and;
 - For RX3G, keep tapping the F7 key until you enter the startup menu.
 - For MX or ZX, keep tapping the F8 key until you enter the startup menu.
4. Select the non "UEFI" version of the USB.
5. After the system boots, you will be prompted to save the image to USB. Type 'y' for yes and press enter.
Actual OS size and drive speeds vary but it takes about 20 minutes to save a system image to USB.

After the image is saved you need to set the USB flash drive script back to deploy mode.

6. Go to the syslinux folder on the USB and rename the syslinux.cfg file to syslinux save.cfg
7. Rename syslinux deploy.cfg to syslinux.cfg

You now have a custom restore image of the Cinedeck system.

10.0 FAQ & Features

10.1 FAQ > Features

Questions are often asked about what certain functions are or do so included as part of the FAQ is an index and description of each feature available on Cinedeck systems.

10.2. What is a codec:	253	10.20. Edit While Record:	258	10.38. MOV Flexibility:¹	261	10.56. Stereo - 3D:¹	264
10.3. What is a wrapper:	254	10.21. EDL Auto-record:¹	258	10.39. Non Cinedeck Clips:¹	261	10.57. Storage Options:	265
10.4. What is bitrate/quality:	254	10.22. Embedded Audio:	258	10.40. Pause Record:	261	10.58. Telecine Control:¹	265
10.5. 4K & RAW:¹	254	10.23. External Reference:	258	10.41. Play Multiple Clips:	262	10.59. Timecode:¹	265
10.6. AES Audio:	255	10.24. File Naming:	258	10.42. Playback:	262	10.60. Timecode offset:	265
10.7. Analog Audio:	255	10.25. Formats:¹	258	10.43. Playlisting:	262	10.61. Touch Display:	266
10.8. Analysis Tools:	255	10.26. Gang Mode:	259	10.44. Presets:	262	10.62. Transcoding:	266
10.9. Audio Delay:	256	10.27. GPS:	259	10.45. Project Locking:	262	10.63. Upcoming Features:	266
10.10. Audio Mapping:	256	10.28. Growing Files:¹	259	10.46. RAID Attached Drives:	262	10.64. Updates:	266
10.11. AS-02, AS-11 / DPP:¹	256	10.29. H.264:¹	259	10.47. Record Time:	263	10.65. UpRez HD to 4K:¹	266
10.12. BNCs:	256	10.30. I-Frame & GoP:	260	10.48. Redundant Files:	263	10.66. VBR/CBR encoding:	267
10.13. Channel Overview:	256	10.31. Insert Editing:	260	10.49. Redundant Power:	263	10.67. Warranty:	267
10.14. Character Overlay:	256	10.32. Interplay Check-in:	260	10.50. Remote & Control:¹	263	10.68. Wrappers:¹	267
10.15. Closed Captioning:¹	257	10.33. IRIG Timecode:¹	260	10.51. Roll-over Recording:	264	10.69. XML data:	267
10.16. Codecs Supported:¹	257	10.34. IT & Connectivity:	260	10.52. Scene Names:	264		
10.17. Color Depth:	257	10.35. Jam Sync:¹	260	10.53. Scheduling:¹	264		
10.18. Color Sampling:	257	10.36. LUTs:	260	10.54. Segment Record:	264		
10.19. Cross Conversion:¹	257	10.37. Master & Proxy:¹	261	10.55. Signal Generator:	264		

10.2. What is a codec:

Codecs, wrappers and bit-rate all work hand in hand but they are three distinctly separate things. For our purpose in video, a codec is generally a compression algorithm with which video is processed to reduce the size of the resulting video file, while maintaining a certain quality level. Examples of Codecs are Avid DNxHD, Apple ProRes and MPEG. Quicktime and MXF are not codecs, they are wrappers, which are discussed in the next paragraph. Each codec has its advantages and disadvantages. Some like JPEG 2000 maintain very high image quality at relatively low bit-rates and file sizes but are computationally challenging, requiring significantly more processing power than others. A codec like XDCAM HD has quite a low data rate but its LongGoP structure will

not always render motion as well as some would like. Just as important is that not every codec is supported by every video system so it really is critical to assure that the correct codec is selected for the planned workflow.

10.3. What is a wrapper:

File wrappers are probably the most misunderstood of these three but simply put, a wrapper is just a container which carries something. Examples of wrappers are MOV, MXF, MP4, etc. The container can be equated as the can which contains some soup and like a soup can, the wrapper includes information identifying the ingredients or, in the video world, the essence. So MyVideo.mxf might contain a track of video and 4 tracks of audio. Along with that “essence” will be information identifying what that video and audio essence actually is. It could for example be XDCAM 50Mbit video with 24bit PCM audio. Of course there could be timecode data and a slew of other bits of information related to the contents. Just like codecs, not all systems support all file wrappers so while you might have use a codec which is supported, if the wrapper is not supported, the system has no way to dig in and get to that video and audio content. Again, it is important to know in advance what the preferred workflow is.

10.4. What is bitrate/quality:

Bit-rate is the rate at which data is being used to capture content and can be expressed in several ways; Mbit/s, megabits per second and MB/s, megabytes per second are the most common¹. Generally a higher bit-rate will mean higher quality but because of compression, it is absolutely possible to achieve the same visual quality at different data rates. It should also be noted that most video compression schemes are lossy, meaning that enough visual data is thrown away in the compression process to visually degrade the image. There are also some codecs like JPEG 2000 which offer a “mathematically lossless” quality meaning that, when compared to an original “uncompressed” version of the same image, there is no mathematical difference between the two. There are many opinions as to what quality level is acceptable but it comes down to balancing factors like visual quality, performance and storage space, which is why it is again critical to know what the requirements are.

1 - To convert megabits per second to megabytes per second, multiply by .125

10.5. 4K & RAW:¹

Cinedeck MX and ZX² support 4K YUV (4096x2160) and UHD TV-1 YUV (3840x2160) recording while simultaneously writing HD master files, proxy files and streamable H.264 files, all with associated metadata and the file naming you choose, to smooth the process of match-back between the various files. RX3G and newer decks will support ARRI³ and Canon³ RAW recording, simultaneously combined with the same series of deliverable files; HD master, proxy and h.264. The HD deliverables can be created using any of the appropriate master and proxy codecs on the systems.

- MX supports one 4K YUV or one UHD YUV source or two RAW cameras and delivers;
 - 4K / UHD or RAW files
 - HD master files
 - HD Proxy files

- Streamable h.264 files which can be delivered live by a streaming server
- ZX2 40 and 45 support one 4K YUV or one UHD YUV source or two RAW cameras and deliver;
 - 4K / UHD or RAW files
 - HD master files
 - HD Proxy files
 - Streamable h.264 files which can be delivered live by a streaming server
- RX3G supports a single RAW camera and delivers;
 - RAW files
 - HD master files
 - HD Proxy files
 - Streamable h.264 files which can be delivered live by a streaming server

(note: In some instances, internal recording of RAW or full 4K and UHD may require setting SSDs into a RAID configuration. Additional information will be available with the 4K releases.

1 - Optional on all systems. Support on ZX20 and RX3G is for 4K / UHD playback only up to 30P

2 - ZX40 and ZX45, ZX20 supports playback only of a single channel of 4K / UHD up to 30P

3 - Final development and release of raw recording is on hold

10.6. AES Audio:

RX3G (and newer) recorders can accept 8 AES audio channels per input pair with the ability to selectively toggle on & off and map the destination channels. All 8 can be received by both video inputs. MX has an optional additional 16 channels of AES which can be activated in an upcoming release for a total of 32 AES inputs.

10.7. Analog Audio:

For legacy analog audio situations, probably the best and often lowest cost solution is to use an analog to digital AES adapter. There are many on the market but one example is the AJA ADA4 4-Channel A/D & D/A Converter. Cinedeck (RX and newer) decks also support the Scarlett 2i2 USB audio interface from Focusrite which provides two mic/line balanced XLR / TRS audio inputs through high quality preamplifiers. For scratch audio tracks, RX can also accept two channels of unbalanced audio via the rear line level mini jack connection. Additional USB audio adapters with different input choices are being considered for inclusion in the future.

10.8. Analysis Tools:

Cinedeck (RX and newer) decks provide digital peak audio meters, adjustable monitor levels and monitor channel selection as well as a complete set of video analysis tools including;

- Waveform
- Vector scope
- Histogram

FAQ > Features / - cont...

- 1:1 pixel picture zoom
- Adjustable video peak detect
- Focus assist
- User selectable aspect ratio, safe area and grid overlays.

10.9. Audio Delay:

Version 4.3 includes audio delay in milliseconds which can be added {per channel} to SDI, AES and Analog audio sources. Each channel can be delayed up to 999 milliseconds.

10.10. Audio Mapping:

Version 4 added the ability to selectively toggle on & off and map the destination channels of incoming audio i.e., a system could be setup to record incoming channels 1 & 2 and 7 & 8 to channels 1, 2, 3 & 4. Audio mapping will be enhanced in future versions of the system software.

10.11. AS-02, AS-11 / DPP:¹

- AS-02 and AS-11 are MXF Op1a file format recommendations from AMWA - the Advanced Media Workflow Association.
- AS-02 is specifically oriented towards addressing “the problem of having a common file format in a facility that has to handle many input formats and make many output formats.”
- AS-11 was further developed to specify “a vendor-neutral subset of the MXF file format to use for delivery of finished programming from program producers and program distributors to broadcast stations” while the UK-DPP (Digital Production Partnership) has designed a set of delivery standards, procedures and technical requirements, which conform to the AS-11 v1.0 specification and are constrained in the UK DPP AS-11 shim. Cinedecks running version 4.3 and later software can record AS-02 and AS-11 / DPP compliant MXF content and later versions of the software provide more access for creating and editing the included metadata.

1 - Optional on ZX

10.12. BNCs:

For traditional infrastructure, Cinedecks are connected using industry standard HD/SD-SDI cabling allowing the decks to be easily integrated in place of standard video recorders.

10.13. Channel Overview:

Version 4.1 added a full ‘Overview’ of the complete state of each channel on a system with the ability to import, export and copy settings between channels.

10.14. Character Overlay:

Cinedeck (RX and newer) decks provide control of character out as an overlay on the user interface and or the SDI video output and or as a burn-in to the encoded video with fully adjustable position, size and color.

FAQ > Features / - cont...

- Channel overlays can be independently setup with different character styles, sizes, positions and colors.
- MX¹ has dual outputs for each SD/HD channel allowing simultaneous clean and character overlay output.

1 - Secondary outputs are optional on ZX

10.15. Closed Captioning:¹

Cinedecks support recording and playback of CC Closed Caption data with any codec wrapped as MOV. A later release will include Closed Caption support with additional file wrappers.

1 - Optional on ZX

10.16. Codecs Supported:¹

Cinedeck RX3G (and newer) recorders currently support native SD and HD with the following codecs using a wide choice of bitrates (quality settings) and file wrappers:

- Apple ProRes
- AVC-Intra
- Avid DNxHD
- Avid JFIF
- VC-5 {Cineform} (optional)
- DPX
- DVCProHD
- H.264 (streamable)
- IMX (D-10 MPEG)
- JPEG 2000 (optional)
- XDCamHD
- Uncompressed

1 - ZX supports all codecs but generally ships with only user specified codecs

10.17. Color Depth:

All Cinedecks support true 8bit and 10bit inputs and recording.

10.18. Color Sampling:

All Cinedecks support 422 sub-sampling and in some cases 444 recording.

10.19. Cross Conversion:¹

All Cinedecks have a wide selection of up and down standards conversion at the input and output which can be combined to provide full cross conversion i.e., up convert SD to HD on record or down convert HD to SD for monitoring, etc.

1 - Optional on ZX

(note: Active in version 3, re-activation in an upcoming release)

10.20. Edit While Record:

See [“Growing Files:1” on page 288](#)

10.21. EDL Auto-record:¹

Each Cinedeck channel (RX and newer) supports auto-record through the use of a simple ASCII text EDL to control the starting and stopping of recording events based on an incoming timecode. Version 4.3 enhanced EDL record with deck control providing tape transport control during auto-record from a VTR. Included in the Cinedeck interface is an EDL editor for creating and modifying EDLs for each channel. Additionally, Cinedecks running the latest 4.3 version or later support importing CMX 3600 EDLs.

1 - Optional on ZX

10.22. Embedded Audio:

RX3G (and newer) recorders can accept 16 SDI embedded audio channels per input.

10.23. External Reference:

Cinedeck (RX and newer) decks accept external house reference (Tri-Level sync or Black Burst).

- Cinedeck MX and the 4 channel ZX models are designed to accept external LTC and house reference for each pair of channels so you can optionally dedicate each channel pair to different tasks.

10.24. File Naming:

Cinedeck version 4 and later provides an extremely flexible and powerful project based naming system which allows the integration of user entered text and real-time data (wildcard variable substitution) such as the current time or starting timecode in file names. This system allows users to generate virtually any file name and folder structure.

- There are no Cinedeck restrictions on folder locations or the depth of nested folders.
- Alternatively, an already existing destination folder can be navigated to and selected per encode.
- The on-screen keyboard or a USB keyboard can be used along with copy & paste.
- Easy to use template buttons for the real-time variables are available via the on-screen keyboard.
- Six user created variables can be added to each project.

10.25. Formats:¹

Cinedeck RX3G and newer decks can record and play the following formats:

- 1080i (1920 X 1080) - 50, 59.94, 60
- 1080i (1440 X 1080) - 50, 59.94, 60
- 1080p - 23.98, 24, 25, 29.97, 30, 50*, 59.94*, 60*

RX3G and ZX20 record one channel at 50/60p

MX and ZX40 record two channels at 50/60p

ZX45 can record four channels at 50/60P

FAQ > Features / - cont...

- 720p - 50, 59.94, 60
- NTSC - 23.98, 59.94
- PAL – 25, 50

- MX and ZX support recording 4K YUV (4096x2160) and UHDTV-1 YUV (3840x2160), for example from a Sony F55 camera.
 MX and ZX40/45 record one full 4K or UHDTV-1 channel
 RX3G and ZX20 support one channel of 4K / UHDTV-1 playback only
- RX3G (and newer) recorders will soon support ARRI and Canon 4K RAW formats.
 RX3G records one RAW channel
 MX and ZX record two RAW channels

1 - 4K and UHDTV-1 YUV and RAW are optional

10.26. Gang Mode:

Cinedecks (RX and newer) running version 4 and later, allow the user to easily gang together two or more internal channels from the user interface for simultaneously triggering record and playback. To reduce the strain on spinning disc file systems, these decks also support a user defined staggered gang, allowing channels to be triggered sequentially with a specified time delay instead of simultaneously.

10.27. GPS:

All Cinedecks accept data from an 'off the shelf' Garmin model 18x GPS USB receiver and record the data with the incoming video and audio and or burn the data into the video image.

10.28. Growing Files:¹

(Also known as "Edit while record" - Support on Cinedeck (RX and newer) decks for growing files is available in release 4.3 with the MOV and Op1A wrappers and is being refined. In Adobe Premiere, XDCamHD can be recorded to a destination which is accessible by the edit system and content can be imported, refreshed and edited while recording is still underway. Similarly, Final Cut Pro can access MOV files while recording is still occurring to accessible storage. The editing of live recordings is currently only supported when external edit systems are used and is not supported by AMA (Avid Media Access). Support for editing of live recordings by the Cinedeck playlist manager will be added in a future release.

1 - Optional on ZX

10.29. H.264:¹

Cinedecks provide the capability to encode h.264 at bitrates and frame sizes appropriate for viewing on iPhone, iPad, full screen and others. From version 4.3, RX and newer models offer streamable H.264 files as well.

1 - Optional on ZX

10.30.I-Frame & GoP:

Cinedeck (RX and newer) decks support I-Frame recording as Uncompressed, DNxHD, ProRes and more as well as Cinedecks support Long GOP recording with XDCamHD and h.264 at various bit rates.

10.31.Insert Editing:

Simple, partial video and or audio replacement of content in an existing file, similar to a traditional tape-to-tape insert edit. For files wrapped as mxf OpAtom, Op1a or MOV, you can take two clips (a source and a destination) and perform a frame accurate insert edit, writing the source into the destination, a process which will often be more efficient than recreating the entire original destination file.

10.32.Interplay Check-in:

When utilizing Op1a and MOV file wrapping, Cinedeck (RX and newer) recorded content can easily be checked into an Avid Interplay environment using Medway from Marquis Broadcast. Medway can automatically check content in or users can manually select specific clips or sub-clips to process.

10.33.IRIG Timecode:¹

Cinedeck recorders (RX and newer) can accept an external IRIG-B timecode input and display the data on screen and optionally burn the data into the recorded video while recording the data with the incoming source.

1 - Optional on RX & ZX

10.34.IT & Connectivity:

Cinedecks can have a variety of IT connections including; USB2, USB3, eSATA, VGA, DVI, HDMI, Ethernet and Display Port. MX and ZX also include a PCIe slot for optional 8Gb and 10Gb networking adapter cards and direct attached storage.

All ports are not available on all decks

10.35.Jam Sync:¹

The ability to momentarily apply a running timecode source to a deck, have it remembered and used as the record timecode.

1 - Optional on RX & ZX

10.36.LUTs:

Cinedeck (RX and newer) recorders provide support for 1D and 3D LUTs (Look-Up Tables) which are particularly applicable to RAW and S-Log recording.

- Traditional video cameras process the video signal all the way through the camera path from the sensor(s) to the BNC output or recording. The very nature of that processing throws data away and permanently alters the images in order to fit certain specifications and limitations which put heavy restrictions on the ability to modify the images later.

- Cameras that output a RAW or S-Log signal are delivering images with reduced pre-processing to realize the highest quality images possible and allow much greater flexibility in post-production but the native camera output looks flat and lifeless.
- A LUT is a filter, generally created in a color grading application, which is loaded and applied to an image to alter and refine its appearance in terms of color, contrast, etc.
- With Cinedeck, the on-board display can have a non-destructive, real-time LUT loaded and applied to the images so the viewers (Director, Producer, etc.) will have a pretty good idea of what they are really working with. Additionally software versions after 4.3 support recording of proxy and H.264 files with a LUT applied to the recorded image.
- The 4K release allows the LUT to be optionally applied to the SDI output for “video village” monitoring and additionally provides the ability to make proxy recordings with the LUT applied.

10.37.Master & Proxy:¹

MX and ZX can record all four (2K-HD-SD) inputs with the users’ choice of available master and a proxy codecs (for example ProRes HQ and ProRes proxy or uncompressed with H.264 proxy) while RX3G can record two sources with a user selected master and h.264 proxy codec.

1 - Workflow package selection determines codec availability on ZX

- By sending the same signal to multiple channels, all Cinedeck (RX and newer) recorders can be configured to record a source with two or more codecs of any sort such as; uncompressed, ProRes, AVC-Intra and JFIF.

10.38.MOV Flexibility:¹

Cinedecks provide support for recording content as MOV files with a choice of standard interleaved audio pairs, mono audio tracks or MOV wrapped video accompanied by audio encoded in separate WAV (wave) files.

1 - Optional on ZX

10.39.Non Cinedeck Clips:¹

Cinedecks can play content created on many systems such as Sony SxS, Panasonic P2, GoPro and nanoFlash (including the non-standard nanoFlash XDcamHD 100). Playback of QuickTime files with mono audio channels and support for playback of QuickTime files generated by Avid and Final Cut editing systems is also supported.

1 - Workflow package selection determines codec availability on ZX

- All Cinedecks can read solid state card media such as SxS and CF utilizing external readers.
- MX has SxS, P2 and CF card readers built-in.

10.40.Pause Record:

Cinedecks (RX and newer) support ‘Pause Record’ where the user can start a long recording session that needs to be encoded as one contiguous file but has breaks in the action. During recording, the operator can press the ‘Pause Record’ button whenever needed. Recording does not continue but the file remains open. When the full event has concluded and the user selects Stop, the file is finally closed.

10.41. Play Multiple Clips:

Cinedeck (RX and newer) decks can play an entire folder of clips with a single click and provide an easy way to select one or more clips to play sequentially, in a loop or repeating from start, to finish and back to start (Ping-Pong).

10.42. Playback:

The I/O channels of Cinedeck RXB and newer are full duplex, allowing independent control and activities on each channel. They support multiple playback/record channels which, as of version 4, are capable of independently playing or recording any content at its original resolution and frame rate, independent of what the other channel(s) are playing or recording.

(note: The previously available RXC is designed for frame synced/3D inputs and does not support full duplex control)

10.43. Playlisting:

The Playlist Manager available from version 4.2 is effectively a non-linear editing interface built into the Cinedeck environment.

- Playlisting allows adding clips from any source folder to a new or existing playlist.
- Clips encoded with different codecs can be mixed but need to be the same format, color depth and frame rate, for example; all 1080p 23.98 10bit (note: Mixing formats will be added in a future release).
- Playlists support TV standard sized still images and still image sequences (PNG, JPG, BMP).
- Single or multiple clips can be reordered.
- Clips can be used in their entirety or can be trimmed with in and out points to restrict playback to a portion (sub clip).

10.44. Presets:

Version 4 and later of the Cinedeck interface includes an expanded capability for saving and restoring user preferences and project settings in an XML format.

10.45. Project Locking:

Version 4.5 and later versions of the Cinedeck interface support project locking. A locked project prevents users from accidentally or intentionally changing any operational settings except destination drives. A locked project also still allows users to cycle through previously created scene names. Projects can be intentionally unlocked to allow full access to all settings.

10.46. RAID Attached Drives:

Cinedeck MX and ZX have an available PCIe slot for the addition of network adapter cards as well as custom HBA (Host Bus Adapter) cards to support high-speed local attached RAID storage such as the removable RAID modules from Dulce Systems. The Dulce Systems HBA is essentially a PCIe extender enabling fast access to multiple terabytes of removable storage for Cinedeck recordings and also allowing the Dulce drive chassis to contain a network adapter to provide the Cinedeck with fast 8Gb or 10Gb network connections.

10.47.Record Time:

For practical purposes, record time on Cinedeck recorders is only limited by the size of the destination drive so for example, when recording to a SAN or NAS, record time could be calculated as days or weeks instead of minutes or hours. All Cinedecks also support 'roll-over' recording, utilizing two drives for a single recording.

10.48.Redundant Files:

Each Cinedeck RX3G or MX input can be written as master and proxy file(s) and the decks can write redundant files per input/encoder to multiple destinations, providing the media and connection support the selected bit rate and I/O needs. For example, a 4 channel MX can write a ProRes master and proxy file for each input giving you four primary masters and four primary proxies. Activating redundant record provides four additional or secondary masters and four secondary proxies for a total of sixteen files.

10.49.Redundant Power:

Cinedeck (RX and newer) decks are supported by redundant power sources with auto switching between power sources when one is disabled or removed.

- Cinedeck RX has two redundant DC inputs and is supplied with two AC>DC power supplies.
- MX and ZX have two redundant AC power supplies.
- MX and ZX will sound an audible alarm when only one power supply is active.

10.50.Remote & Control:¹

Cinedecks (RX and newer) provide many options for remote control;

1 - RS-422 is optional on ZX

- All RX and newer decks allow independent RS422 control of each channel.
- RX and newer decks can be the master or slave in a RS422 relationship, allowing control in either direction.
 - With Cinedeck as master over a tape machine, the user is presented with a full array of controls and status indicators from the slave deck. Recordings can be made on either machine, i.e. using the Cinedeck as the source or as the recorder. Insert edits can be made from the Cinedeck to the tape deck.
 - As slave, a Cinedeck can be controlled from a partner machine or via a separate control panel.
(note: Cinedeck models (pre Dec 2014) with RS-422 support require a RS-422 crossover cable for master mode. Slave mode requires a straight through RS-422 cable.)
- Cinedecks utilize the Grass Valley AMP protocol for control over IP by external devices such as asset management systems and switchers.
- Up to 24 channels of RX and or MX can be simultaneously managed using the IP (AMP protocol) based Cinedeck MCC, multi-machine control interface.
- All Cinedecks can be controlled using standard VNC remote access software such as Teamviewer which provide the full user interface at a remote workstation in the next room or miles away.
- Cinedeck RX can be driven using several different USB control devices while MX has a built-in tactile control panel.

FAQ > Features / - cont...

- All Cinedecks can have an external data display, USB mouse and keyboard attached so a common setup is to connect the decks into a KVM switcher for central control of multiple machines.
(note: The KVM system must provide DDM (Dynamic Device Mapping) which maintains the connection to all connected devices, regardless of the active device.)

10.51.Roll-over Recording:

All Cinedecks support 'roll-over' recording where two media (identical or dissimilar) can be designated and combined as 'primary' and 'secondary' record destinations, significantly increasing record time.

10.52.Scene Names:

All Cinedeck versions have some support for scene names however from version 4.5, scene names can be created in advance and easily edited and cycled through, to quickly respond to on-set production requirements.

10.53.Scheduling:¹

Cinedeck (RX and newer) decks support the scheduling of multiple recording events, up to twenty four hours in advance, allowing unattended activation on a channel by channel basis using the EDL function. Enhanced multi-event date & time schedules and an advanced scheduling interface will be developed in combination with an upcoming release.

1 - Optional on ZX

10.54.Segment Record:

Segment Record, also known as user-defined 'chunking', allows long recordings to be split into clip segments of shorter duration. During recording, each time the user specified duration is reached or the manual 'break' button is pressed, the current file is closed and the next segment file begins. Previous segments can be fully-accessed for playing and copying, etc. Additionally, breaking large recordings into smaller pieces allows content to be easily transferred to storage with file size limits such as DVDs or FAT32 drives.

10.55.Signal Generator:

Version 4.5 and later versions of the Cinedeck interface provide a multi-purpose signal generator for test image and tone generation. Test patterns, test pattern sequences, tone with breaks and solo tone for each channel can be used between channels as well as fed downstream for testing connected equipment.

10.56.Stereo - 3D:¹

An upcoming release will re-activate 3D recording allowing RX3G (and newer) recorders to use any supported codec. Display modes include: Anaglyph Flip-Flop, and vertical/horizontal side-by-side viewing of 3D images.

1 - Optional on ZX

(note: RXC with version 3.5 currently supports 3D recording)

10.57.Storage Options:

All Cinedecks write video and audio recordings as files to low cost and commonly available non-proprietary 2.5" SSD SATA drives.

- Cinedeck SSD drives are mounted in removable, hot-swappable, dual drive cartridges or 'sleds'. (RX and newer)
- Additional sleds as well as portable and installable receiving chassis are available to enable easy 'sneaker-net' workflows.
- Currently, Cinedeck only recommend and support Samsung 840/850 Pro and EVO series SSD drives.
- For recording and playback, all Cinedecks can also utilize external USB* and / or eSATA* and / or network storage including NAS (network attached storage) and SAN (storage area network) systems requiring client software. Additionally, the Cinedeck operating system can be setup to support iSCSI file systems.
- Cinedecks are Windows 7 Embedded based so fully support SMB shares and client software is often available for SAN installations.
- Cinedeck MX and ZX have an available PCIe slot for 8Gb fiber or 10Gb Ethernet cards as well as direct attached storage such as the drive arrays from Dulce Systems.

(*note: All external and network recording devices and plans should be extremely well tested before utilizing in a production environment.)

(*Drive assemblies of the same model from the same manufacturer can differ in firmware and internal hardware used so successful tests are drive specific and as such do not guarantee successful recordings with other units.)

10.58.Telecine Control:¹

With the advanced control option, each Cinedeck channel can be tethered with a Spirit Telecine Controller for film to file transfers. The Spirit system takes RS-422 control of both the Cinedeck and the film scanner to manage the ingest process, shuttle and cue the film and trigger recording of single clips, multiple clips as well as single "assemble edited" clips containing multiple film segments.

1 - Optional on ZX

10.59.Timecode:¹

Cinedecks (RX and newer) provide internally generated timecode, can accept embedded SDI timecode or external 'LTC' and display the data on screen and optionally burn the data into the video of selected files while recording the data with the incoming source. IRIG-B timecode is also supported.

1 - IRIG support is optional on RX & ZX, Per channel pair timecode input is standard on ZX, Master timecode input is optional on ZX

10.60.Timecode offset:

Cinedeck version 4.5 and newer supports several timecode offset options. The main input timecode offset is used to change correct large timecode differences such as changing the hour of a source timecode from 1:00:00:00 hour to 7:00:00:00 or local time to GMT. There are also several fine timecode offset adjustments which can be made to each timecode source to compensate for small latency issues when using the Cinedeck with other devices.

10.61. Touch Display:

Many Cine decks come standard with a 7" LCD touch display for viewing video and manipulating the user interface. All Cine decks can have an external display attached for viewing video and manipulating the system. RX and newer recorders can be configured to use an HID compatible external touch display.

10.62. Transcoding:

The full duplex, independent channel control of Cine deck RXB and newer recorders allows selecting content to play and simultaneously encode in any other format in real-time. For example, some uncompressed source content on a RXB could be transcoded in real-time, to AVC-Intra.

10.63. Upcoming Features:

- FIFO Loop Record / Time Delay
- Expanded transcoding
- Advanced scheduling
- Watermarking

10.64. Updates:

Cine deck recorders are expressly designed to be enhanced with new features and functions, extending the life and relevance of the systems. Cine deck delivers several major updates each year.

- Updates come as *.exe files which are generally about 250MB, downloadable and usually take about two minutes to apply.
- Each Cine deck ships with a system restore disc to use for resetting the deck back to a complete clean factory state. The re-imaging process takes about 10 minutes.
- Some optional and upcoming features may require the purchase of additional licenses.
- Cine decks are designed from the ground up to allow system and interface customizations as well as completely custom OEM products. Being customer and engineering oriented means the Cine deck engineering team is always open to and interested in, discussing specialized integration, additional features and feature modifications.
- Extended hardware warranties with priority support and software maintenance including all major updates are available to extend factory warranty and support beyond the first year.

10.65. UpRez HD to 4K:¹

Systems with the 4K/UHD YUV option have the ability to directly uprez HD source inputs to UHDTV-1 and 2K source inputs to full 4K. There are specialized real-time scaling algorithms which provide excellent results for uprezzing cell style animation and live action video sources.

1 - Optional on MX & ZX.

10.66.VBR/CBR encoding:

Some codecs such as H.264 and ProRes support both CBR (constant bitrate) and VBR (variable bitrate) encoding. The Cinedeck interface allows selection of CBR or VBR on a per encode basis. CBR can be especially important in the Cinedeck environment as the Cinedeck insert editing function requires using CBR encoded source and destination content.

10.67.Warranty:

All Cinedeck recorders come with a first year “bumper to bumper” warranty which includes support and full hardware and software coverage. Additional years of support can be purchased anytime as long as the machine is still under a current warranty.

10.68.Wrappers:¹

Cinedeck uses Avid Op-Atom MXF and MOV wrappers in combination with the most common use of the appropriate codec, i.e., DNxHD can be wrapped as MXF OpAtom for true Avid native integration but many of the codec options available on every Cinedeck provide a choice of wrappers including;

1 - Workflow package selection determines wrapper availability on ZX

- Avid MXF Op-Atom
- MXF Op-1A (AS-02, AS-11/DPP compliant)
- MOV (Interleaved, Mono or MOV video with separate WAVE audio)
- AVI
- MP4

10.69.XML data:

Each recording session can be accompanied by clip specific *.xml files. The completed *.xml files contain clip specific metadata which can be imported into asset managements systems and the like. The destination folder can also be selected for the xml files.

This Page intentionally left blank.

11.0 Specifications

11.1 Basic specifications

Cinedecks have similar specifications and a broad, virtually identical feature set but there are some differences in capability and feature availability. This is particularly true for the modular ZX which can be purchased with a customized feature selection. So although a feature may be noted as supported, your specific system may not have that capability. (Feature descriptions can be found in ["10.0 FAQ & Features" on page 282](#)) Additionally, as everyone knows, specifications are subject to change without notice...

If there is a specific question, feel free to contact us for clarification. See ["Contacting Cinedeck" on page 2](#)

		RX3G	MX	ZX 45	ZX 40	ZX 20
	Description	2 Channel HD/SD (Master & H.264 Proxy per channel)	4 channel HD/ SD (Master & Proxy per channel)	4 channel HD/ SD (Master & Proxy per channel)	4 channel HD/ SD (Master & Proxy per channel)	2 Channel HD/SD (Master & Proxy per channel)
	Full Duplex / Mix and Match encode / Play	Y	Y	Y	Y	Y
PHYSICAL	Dimensions	7"x 8.5"x10" 17.8 x 21.6 x 25.5 cm	7"x17.5"x22" 17.8 x 44.5 x 56.8 cm	7"x17"x22" 17.5 x 43 x 56 cm	7"x17"x22" 17.5 x 43 x 56 cm	7"x17"x22" 17.5 x 43 x 56 cm
	Weight	10 lbs	39 lbs	35 lbs	33 lbs	33 lbs
	Rackmountable	Yes - 1 or 2 decks Half width, 4RU high	Yes Full width, 4RU high	Yes Full width, 4RU high	Yes Full width, 4RU high	Yes Full width, 4RU high
	Jog Shuttle	Via external devices	Built-in	Via external devices	Via external devices	Via external devices
	7" Touchscreen	Yes & external touchscreen support	Yes & external touchscreen support	No - external touch screen optional	No - external touch screen optional	No - external touch screen optional
CODEC SUPPORT	Apple ProRes (Proxy, LT, Normal, HQ)	Y	Y	Y - Optional	Y - Optional	Y - Optional
	Apple ProRes 4444	Y	Y	Y - Optional	Y - Optional	Y - Optional
	Avid DNxHD	Y	Y	Y - Optional	Y - Optional	Y - Optional
	Avid DNx444	Y	Y	Y - Optional	Y - Optional	Y - Optional

Basic specifications / cont...

		RX3G	MX	ZX 45	ZX 40	ZX 20
CODEC SUPPORT	Avid Meridien JFIF	Y	Y	Y - Optional	Y - Optional	Y - Optional
	VC-5 {CineForm} (FilmScan 1, FilmScan2, Keying High, Medium, Low)	Y	Y	Y - Optional	Y - Optional	Y - Optional
	Uncompressed 422 (8 and 10-bit)	Y	Y	Y - Optional	Y - Optional	Y - Optional
	Uncompressed 444	Y	Y	Y - Optional	Y - Optional	Y - Optional
	AVC-Intra 100/50	Y	Y	Y - Optional	Y - Optional	Y - Optional
	DVCPRO-HD	Y	Y	Y - Optional	Y - Optional	Y - Optional
	XDCAM HD 50 / XDCAM EX 35	Y	Y	Y - Optional	Y - Optional	Y - Optional
	H.264	Y	Y	Y - Optional	Y - Optional	Y - Optional
	IMX - D10	Y	Y	Y - Optional	Y - Optional	Y - Optional
	DPX	Y	Y	Y - Optional	Y - Optional	Y - Optional
	JPEG 2000	N	Y - Optional	Y - Optional	Y - Optional	Y - Optional
	RAW Record Capable	Future Option				
SIGNAL I/O	3G-SDI / HD-SDI / SD-SDI Inputs	2	4	4	4	2
	3G-SDI / HD-SDI / SD-SDI Outputs	2	4	4	4	2
	1.5G Dual Link Inputs	1	2	2	2	1
	1.5G Dual Link Outputs	1	2	2	2	1

Specifications

Basic specifications

Basic specifications / cont...

	RX3G	MX	ZX 45	ZX 40	ZX 20	
SIGNAL I/O	AUX outputs	1	2	2	2	1
	Secondary 1.5G outputs	N	4	N	N	N
	Secondary 3G outputs	N	N	4- Optional	4- Optional	2 - Optional
	4K / UHD TV-1 input	N	1 @ 30p	1 @ 60p, 4K option	1 @ 30p, 4K option	N
	4K / UHD TV-1 output	1 @ 30p, 4K option	1 @ 30p	1 @ 60p, 4K option	1 @ 30p, 4K option	1 @ 30p, 4K option
	4K HDMI output	N	N	Optional	Optional	Optional
	Super Out available on Video Out	Y	Y	Y	Y	Y
	Super Out available on secondary Video Out	N	Y	Optional	Optional	Optional
	HD - 50/60P	1 Channel	2 channels	4 channels	2 channels	1 channel
	4K - 50/60P	N	N	Y	N	N
	4:2:2 3D support	Y - Future Option	Y - Future Option	Y - Future Option	Y - Future Option	Y - Future Option
	4:4:4 3D support	N	Y - Future Option	Y - Future Option	Y - Future Option	N
	50/60P 3D support	N	Y - Future Option	Y - Future Option	Y - Future Option	N
AUDIO I/O	AES Audio Channels	8 - 2 per BNC	16 - 2 per BNC, +16 via breakout Optional	16 - 2 per BNC	16 - 2 per BNC	16 - 2 per BNC
	Embedded SDI Audio (per video in)	16	16	16	16	16
	Analog Audio on-board	2ch - unbalanced via mini jack	2ch - unbalanced via mini jack	2ch - unbalanced via mini jack	2ch - unbalanced via mini jack	2ch - unbalanced via mini jack

Specifications

Basic specifications

Basic specifications / cont...

		RX3G	MX	ZX 45	ZX 40	ZX 20
AUDIO I/O	Analog via USB	2ch - balanced via Scarlet 2i2	2ch - balanced via Scarlet 2i2	2ch - balanced via Scarlet 2i2	2ch - balanced via Scarlet 2i2	2ch - balanced via Scarlet 2i2
	XLR Audio Monitor Out	2	4	4	4	2
	Headphone Jack	1 - mini front mounted	2 - mini, 2 - ¼" front mounted	1 - mini rear mounted	1 - mini rear mounted	1 - mini rear mounted
	48Khz audio processing	Y	Y	Y	Y	Y
	24bit audio encoding	Y except where restricted by codec/wrapper	Y except where restricted by codec/wrapper	Y except where restricted by codec/wrapper	Y except where restricted by codec/wrapper	Y except where restricted by codec/wrapper
REFERENCE	REF: Analog Color Black or Tri-Level Sync	1 - No loop out	2 Inputs 1 per channel pair No loop out	2 Inputs 1 per channel pair No loop out	2 Inputs 1 per channel pair No loop out	1 - No loop out
ANALYSIS	Waveform	Y	Y	Y	Y	Y
	Vectorscope	Y	Y	Y	Y	Y
	Histogram	Y	Y	Y	Y	Y
	Focus assist	Y	Y	Y	Y	Y
	Zoom	Y	Y	Y	Y	Y
	Clipping	Y	Y	Y	Y	Y
	Preview LUTs	Y	Y	Y	Y	Y
	Audio meters	Y	Y	Y	Y	Y
HARDWARE	CPU	Intel I7	Server Class (2x)	Upgraded Server Class (2x)	Server Class (2x)	Server Class (2x)
	GPU	CPU Graphics Chip	Standard	Upgraded	Standard	Standard
	Motherboard	Mini ITX	Server Class	Server Class	Server Class	Server Class
	Video I/O	Bluefish Supernova (1x)	Bluefish Supernova (2x)	Bluefish Supernova (2x)	Bluefish Supernova (2x)	Bluefish Supernova (1x)
	RAM	8	16	16	16	16

Specifications

Basic specifications

Basic specifications / cont...

		RX3G	MX	ZX 45	ZX 40	ZX 20
STORAGE	Maximum Hot-swappable SSDs	4	8	8	8	8
	Network Recording support	Y	Y	Y	Y	Y
	HBA support	N	Y	Y	Y	Y
	eSATA drives	Y	Y	Y	Y	Y
	USB Drives	Y	Y	Y	Y	Y
	Memory card support: SxS, P2, CF	via external device	Built in readers: SxS (2x), P2 (2x), CF (2x)	Optionally built in or via external device	Optionally built in or via external device	Optionally built in or via external device
CONNECTIVITY	VGA	1	N	N	N	N
	DVI	1	1	1	1	1
	HDMI	1	1	1	1	1
	Display port 1.2	N	N	1	N	N
	USB 2	4 rear, 1 front	6 rear	6 rear, 2 front	6 rear, 2 front	6 rear, 2 front
	USB 3	2 rear	2 rear, 2 front	2 rear	2 rear	2 rear
	eSATA	2 rear, 1 front (1 active, optionally up to 3)	4 rear	Up to 4 Optional	Up to 4 Optional	Up to 4 Optional
	1Gb Ethernet	2	2	2	2	2
	10Gb Ethernet or 8/16Gb Fiber Channel	N	Optional	Optional	Optional	Optional
	WiFi (support for 3rd party devices)	Optional	Optional	Optional	Optional	Optional
	LTC Timecode	In + loop out Master LTC In opt.	In + loop out per channel pair and Master LTC In	In + loop out per channel pair Master LTC In opt.	In + loop out per channel pair Master LTC In opt.	In + loop out per channel pair Master LTC In opt.
IRIG Timecode / Master Clock / Jam-Sync	Optional	Y	Optional	Optional	Optional	

Specifications

Basic specifications

Basic specifications / cont...

		RX3G	MX	ZX 45	ZX 40	ZX 20
RESOLUTIONS	4K / UHD TV-1	Playback only optional	Optional	Optional	Optional	Playback only optional
	2K	Y	Y	Y	Y	Y
	HD - 1080i, 1080p, 1080PsF, 720p	Y	Y	Y	Y	Y
	SD - PAL/NTSC, 480p	Y	Y	Y	Y	Y
FUNCTIONALITY	Realtime Upconvert HD > UHD TV-1 2K > 4K	N	Optional	Optional	Optional	N
	Redundant File Record	Y	Y	Y	Y	Y
	Segment Record	Y	Y	Y	Y	Y
	Burn-in for Proxy & H.264	Y	Y	Y	Y	Y
	User Interface Resolution	1024x600	1024x600	1024x600	1024x600	1024x600
	Operating System	Windows 7 Embedded	Windows 7 Embedded	Windows 7 Embedded	Windows 7 Embedded	Windows 7 Embedded
REMOTE CONTROL	TCP/IP Deck Control App	Y	Y	Y	Y	Y
	AMP API	Y	Y	Y	Y	Y
	VDCP	Optional	Optional	Optional	Optional	Optional
	RS-422 per channel	Y - 2x DB-9 female	Y - 4x DB-9 female	4x DB-9 female Optional	4x DB-9 female Optional	2x DB-9 female Optional
	3rd party USB Jog/shuttle device support	Y	Y	Y	Y	Y
	3rd party VNC applications	Y	Y	Y	Y	Y

Specifications

Basic specifications

Basic specifications / cont...

		RX3G	MX	ZX 45	ZX 40	ZX 20
ENVIRONMENTAL	Operating Temperature	40° to 95°F 5° to 35°C	40° to 95°F 5° to 35°C	40° to 95°F 5° to 35°C	40° to 95°F 5° to 35°C	40° to 95°F 5° to 35°C
	Recommended operating temp	60 - 80°F 15 - 26°C	60 - 80°F 15 - 26°C	60 - 80°F 15 - 26°C	60 - 80°F 15 - 26°C	60 - 80°F 15 - 26°C
	Relative Humidity	20% to 80% (non-condensing)	20% to 80% (non-condensing)	20% to 80% (non-condensing)	20% to 80% (non-condensing)	20% to 80% (non-condensing)
	AC Voltage	100-120 / 220-240 50/60Hz	100-120 / 220-240 50/60Hz	100-120 / 220-240 50/60Hz	100-120 / 220-240 50/60Hz	100-120 / 220-240 50/60Hz
	DC Voltage	Range 10-36 Volts Optimum 19 Volts				
	Power consumption	180 Watts	300 Watts	850 Watts	300 Watts	200 Watts

Specifications

Basic specifications

11.2 Codecs & wrappers

Cinedeck codec availability is wrapper (workflow) based meaning, if a system has the wrapper, it is licensed for all of the standard codecs available with that wrapper. This is particularly true for the modular ZX which can be purchased with a limited wrapper selection. Conversely, RX and MX are licensed for all workflow packages and as such all wrappers but even so, differences in system capability and software version can mean that specific frame rates, codecs or master and proxy combinations, may not be available on a specific system. Additionally, some codecs such as Cineform and JPEG2000 are not standard on any systems.

MOV workflow package includes all MOV wrapped codecs {Common for FCP and Adobe environments}

OpAtom workflow package includes all MXF OpAtom wrapped codecs (Normally for Avid environments)

Op1a workflow package includes all MXF Op1a wrapped codecs (Common for Adobe environments)

The "Quality / Bit rate" noted in this table reflects the common descriptions for the selected codec which is how the codecs are described in the Cinedeck interface. For specific target data rates and a storage calculator, see ["11.3 Data rates" on page 332](#).

If there is a specific question, feel free to contact us for clarification. See ["Contacting Cinedeck" on page 2](#)

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080i 50	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080i 50	DNxHD	Y	Y	N	36	Y	Y	Y			
1080i 50	DNxHD	Y	N	N	120	Y	Y	Y			
1080i 50	DNxHD	Y	Y	N	185	Y	Y	Y			
1080i 50	ProRes	Y	Y	Y	Proxy			Y			
1080i 50	ProRes	Y	Y	Y	LT			Y			
1080i 50	ProRes	Y	Y	Y	Normal			Y			
1080i 50	ProRes	Y	Y	Y	HQ			Y			
1080i 50	ProRes	Y	Y	Y	4444			Y			
1080i 50	XDcam HD	Y	N	N	EX 1440	Y	Y	Y	Y		
1080i 50	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
1080i 50	XDcam HD	Y	N	N	50	Y	Y	Y			

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080i 50	H.264	Y	N	N	iPod			Y	Y		
1080i 50	H.264	Y	N	N	iPad			Y	Y		
1080i 50	H.264	Y	N	N	PIX			Y	Y		
1080i 50	H.264	Y	N	N	DAX			Y	Y		
1080i 50	H.264	Y	N	N	DAX_2800			Y	Y		
1080i 50	H.264	Y	N	N	Full HD			Y	Y		
1080i 50	H.264	Y	N	N	350kbs			Y	Y		
1080i 50	H.264	Y	N	N	Main Proxy			Y	Y		
1080i 50	JFIF	Y	N	N	10:1m	Y					
1080i 50	JFIF	Y	N	N	15:1s	Y					
1080i 50	JFIF	Y	N	N	2:1	Y					
1080i 50	JFIF	Y	N	N	20:1	Y					
1080i 50	JFIF	Y	N	N	10:1	Y					
1080i 50	AVC-I	Y	Y	N	50	Y	Y	Y			
1080i 50	AVC-I	Y	Y	N	100	Y	Y	Y			
1080i 50	DVCProHD	Y	Y	N	100	Y		Y			
1080i 50	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080i 50	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080i 50	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080i 50	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
1080i 50	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
1080i 50	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080i 50	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080i 59.94	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080i 59.94	DNxHD	Y	Y	N	45	Y	Y	Y			
1080i 59.94	DNxHD	Y	N	N	145	Y	Y	Y			
1080i 59.94	DNxHD	Y	Y	N	220	Y	Y	Y			
1080i 59.94	ProRes	Y	Y	Y	Proxy			Y			
1080i 59.94	ProRes	Y	Y	Y	LT			Y			
1080i 59.94	ProRes	Y	Y	Y	Normal			Y			
1080i 59.94	ProRes	Y	Y	Y	HQ			Y			
1080i 59.94	ProRes	Y	Y	Y	4444			Y			
1080i 59.94	XDcam HD	Y	N	N	EX 1440	Y	Y	Y	Y		
1080i 59.94	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
1080i 59.94	XDcam HD	Y	N	N	50	Y	Y	Y			
1080i 59.94	H.264	Y	N	N	iPod			Y	Y		
1080i 59.94	H.264	Y	N	N	iPad			Y	Y		
1080i 59.94	H.264	Y	N	N	PIX			Y	Y		
1080i 59.94	H.264	Y	N	N	DAX			Y	Y		
1080i 59.94	H.264	Y	N	N	DAX_2800			Y	Y		
1080i 59.94	H.264	Y	N	N	Full HD			Y	Y		
1080i 59.94	H.264	Y	N	N	350kbs			Y	Y		
1080i 59.94	H.264	Y	N	N	Main Proxy			Y	Y		
1080i 59.94	JFIF	Y	N	N	10:1m	Y					
1080i 59.94	JFIF	Y	N	N	15:1s	Y					
1080i 59.94	JFIF	Y	N	N	2:1	Y					
1080i 59.94	JFIF	Y	N	N	20:1	Y					
1080i 59.94	JFIF	Y	N	N	10:1	Y					
1080i 59.94	AVC-I	Y	Y	N	50	Y	Y				
1080i 59.94	AVC-I	Y	Y	N	100	Y	Y				

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080i 59.94	DVCProHD	Y	Y	N	100	Y		Y			
1080i 59.94	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080i 59.94	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080i 59.94	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080i 59.94	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
1080i 59.94	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
1080i 59.94	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080i 59.94	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				
1080i 60	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080i 60	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080i 60	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080i 60	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
1080i 60	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
1080i 60	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 23.98	Uncompressed	Y	Y	Y	Fixed			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 23.98	DNxHD	Y	Y	N	36	Y	Y	Y			
1080P 23.98	DNxHD	Y	N	N	115	Y	Y	Y			
1080P 23.98	DNxHD	Y	Y	N	175	Y	Y	Y			
1080P 23.98	DNx444	N	N	Y		Y	Y	Y			
1080P 23.98	ProRes	Y	Y	Y	Proxy			Y			
1080P 23.98	ProRes	Y	Y	Y	LT			Y			
1080P 23.98	ProRes	Y	Y	Y	Normal			Y			
1080P 23.98	ProRes	Y	Y	Y	HQ			Y			
1080P 23.98	ProRes	Y	Y	Y	4444			Y			
1080P 23.98	XDcam HD	Y	N	N	EX 1440	Y	Y	Y	Y		
1080P 23.98	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
1080P 23.98	XDcam HD	Y	N	N	50	Y	Y	Y			
1080P 23.98	H.264	Y	N	N	iPod			Y	Y		
1080P 23.98	H.264	Y	N	N	iPad			Y	Y		
1080P 23.98	H.264	Y	N	N	PIX			Y	Y		

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 23.98	H.264	Y	N	N	DAX			Y	Y		
1080P 23.98	H.264	Y	N	N	DAX_2800			Y	Y		
1080P 23.98	H.264	Y	N	N	Full HD			Y	Y		
1080P 23.98	H.264	Y	N	N	350kbs			Y	Y		
1080P 23.98	H.264	Y	N	N	Main Proxy			Y	Y		
1080P 23.98	DPX	Y	Y	Y	Fixed						Y
1080P 23.98	AVC-I	Y	Y	N	50	Y	Y				
1080P 23.98	AVC-I	Y	Y	N	100	Y	Y				
1080P 23.98	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 23.98	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080P 23.98	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 23.98	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
1080P 23.98	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
1080P 23.98	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 23.98	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 24	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080P 24	DNxHD	Y	N	N	36	Y		Y			
1080P 24	DNxHD	Y	N	N	115	Y		Y			
1080P 24	DNxHD	Y	Y	N	175	Y		Y			
1080P 24	DNx444	N	N	Y		Y		Y			
1080P 24	ProRes	Y	Y	Y	Proxy			Y			
1080P 24	ProRes	Y	Y	Y	LT			Y			
1080P 24	ProRes	Y	Y	Y	Normal			Y			
1080P 24	ProRes	Y	Y	Y	HQ			Y			
1080P 24	ProRes	Y	Y	Y	4444			Y			
1080P 24	XDcam HD	Y	N	N	EX 1440	Y	Y	Y	Y		
1080P 24	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
1080P 24	XDcam HD	Y	N	N	50	Y	Y	Y			
1080P 24	H.264	Y	N	N	iPod			Y	Y		
1080P 24	H.264	Y	N	N	iPad			Y	Y		
1080P 24	H.264	Y	N	N	PIX			Y	Y		
1080P 24	H.264	Y	N	N	DAX			Y	Y		
1080P 24	H.264	Y	N	N	DAX_2800			Y	Y		
1080P 24	H.264	Y	N	N	Full HD			Y	Y		
1080P 24	H.264	Y	N	N	350kbs			Y	Y		
1080P 24	H.264	Y	N	N	Main Proxy			Y	Y		
1080P 24	DPX	Y	Y	Y	Fixed						Y
1080P 24	AVC-I	Y	Y	N	50	Y	Y				
1080P 24	AVC-I	Y	Y	N	100	Y	Y				
1080P 24	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 24	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 24	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 24	VC-5 {Cineform}*	Y	Y	Y	FilmScan 1			Y		Y	
1080P 24	VC-5 {Cineform}*	Y	Y	Y	FilmScan 2			Y		Y	
1080P 24	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 24	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				
1080P 25	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080P 25	DNxHD	Y	N	N	36	Y	Y	Y			
1080P 25	DNxHD	Y	N	N	120	Y	Y	Y			
1080P 25	DNxHD	Y	Y	N	185	Y	Y	Y			
1080P 25	DNx444	N	N	Y		Y	Y	Y			
1080P 25	ProRes	Y	Y	Y	Proxy			Y			
1080P 25	ProRes	Y	Y	Y	LT			Y			
1080P 25	ProRes	Y	Y	Y	Normal			Y			
1080P 25	ProRes	Y	Y	Y	HQ			Y			
1080P 25	ProRes	Y	Y	Y	4444			Y			
1080P 25	XDcam HD	Y	N	N	EX 1440	Y	Y	Y	Y		
1080P 25	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
1080P 25	XDcam HD	Y	N	N	50	Y	Y	Y			
1080P 25	H.264	Y	N	N	iPod			Y	Y		
1080P 25	H.264	Y	N	N	iPad			Y	Y		
1080P 25	H.264	Y	N	N	PIX			Y	Y		
1080P 25	H.264	Y	N	N	DAX			Y	Y		
1080P 25	H.264	Y	N	N	DAX_2800			Y	Y		
1080P 25	H.264	Y	N	N	Full HD			Y	Y		

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 25	H.264	Y	N	N	350kbs			Y	Y		
1080P 25	H.264	Y	N	N	Main Proxy			Y	Y		
1080P 25	DPX	Y	Y	Y	Fixed						Y
1080P 25	AVC-I	Y	Y	N	50	Y	Y				
1080P 25	AVC-I	Y	Y	N	100	Y	Y				
1080P 25	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 25	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080P 25	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 25	VC-5 {Cineform}*	Y	Y	Y	FilmScan 1			Y		Y	
1080P 25	VC-5 {Cineform}*	Y	Y	Y	FilmScan 2			Y		Y	
1080P 25	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 25	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				
1080P 29.97	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080P 29.97	DNxHD	Y	Y	N	45	Y	Y	Y			
1080P 29.97	DNxHD	Y	N	N	145	Y	Y	Y			
1080P 29.97	DNxHD	Y	Y	N	220	Y	Y	Y			
1080P 29.97	DNx444	N	N	Y		Y	Y	Y			

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 29.97	ProRes	Y	Y	Y	Proxy			Y			
1080P 29.97	ProRes	Y	Y	Y	LT			Y			
1080P 29.97	ProRes	Y	Y	Y	Normal			Y			
1080P 29.97	ProRes	Y	Y	Y	HQ			Y			
1080P 29.97	ProRes	Y	Y	Y	4444			Y			
1080P 29.97	XDcam HD	Y	N	N	EX 1440	Y	Y	Y	Y		
1080P 29.97	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
1080P 29.97	XDcam HD	Y	N	N	50	Y	Y	Y			
1080P 29.97	H.264	Y	N	N	iPod			Y	Y		
1080P 29.97	H.264	Y	N	N	iPad			Y	Y		
1080P 29.97	H.264	Y	N	N	PIX			Y	Y		
1080P 29.97	H.264	Y	N	N	DAX			Y	Y		
1080P 29.97	H.264	Y	N	N	DAX_2800			Y	Y		
1080P 29.97	H.264	Y	N	N	Full HD			Y	Y		
1080P 29.97	H.264	Y	N	N	350kbs			Y	Y		

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 29.97	H.264	Y	N	N	Main Proxy			Y	Y		
1080P 29.97	DPX	Y	Y	Y	Fixed						Y
1080P 29.97	AVC-I	Y	Y	N	50	Y	Y				
1080P 29.97	AVC-I	Y	Y	N	100	Y	Y				
1080P 29.97	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 29.97	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080P 29.97	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 29.97	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
1080P 29.97	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
1080P 29.97	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 29.97	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				
1080P 50	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080P 50	ProRes	Y	Y	Y	Proxy			Y			
1080P 50	ProRes	Y	Y	Y	LT			Y			
1080P 50	ProRes	Y	Y	Y	Normal			Y			
1080P 50	ProRes	Y	Y	Y	HQ			Y			
1080P 50	ProRes	Y	Y	Y	4444			Y			

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 50	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 50	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080P 50	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 50	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
1080P 50	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
1080P 50	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 50	JPEG 2000*										
1080P 59.94	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080P 59.94	ProRes	Y	Y	Y	Proxy			Y			
1080P 59.94	ProRes	Y	Y	Y	LT			Y			
1080P 59.94	ProRes	Y	Y	Y	Normal			Y			
1080P 59.94	ProRes	Y	Y	Y	HQ			Y			
1080P 59.94	ProRes	Y	Y	Y	4444			Y			
1080P 59.94	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 59.94	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
1080P 59.94	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 59.94	VC-5 {Cineform}*	Y	Y	Y	FilmScan 1			Y		Y	
1080P 59.94	VC-5 {Cineform}*	Y	Y	Y	FilmScan 2			Y		Y	
1080P 59.94	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
1080P 59.94	JPEG 2000*										
1080P 60	Uncompressed	Y	Y	Y	Fixed			Y		Y	
1080P 60	ProRes	Y	Y	Y	Proxy			Y			
1080P 60	ProRes	Y	Y	Y	LT			Y			
1080P 60	ProRes	Y	Y	Y	Normal			Y			
1080P 60	ProRes	Y	Y	Y	HQ			Y			
1080P 60	ProRes	Y	Y	Y	4444			Y			
1080P 60	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
1080P 60	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
1080P 60	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
1080P 60	VC-5 {Cineform}*	Y	Y	Y	FilmScan 1			Y		Y	
1080P 60	VC-5 {Cineform}*	Y	Y	Y	FilmScan 2			Y		Y	
1080P 60	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
UHDTV-1 24*	ProRes	Y	Y	Y	Proxy			Y			
UHDTV-1 24*	ProRes	Y	Y	Y	LT			Y			
UHDTV-1 24*	ProRes	Y	Y	Y	Normal			Y			
UHDTV-1 24*	ProRes	Y	Y	Y	HQ			Y			
UHDTV-1 24*	ProRes	Y	Y	Y	4444			Y			
UHDTV-1 24*	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
UHDTV-1 24*	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
UHDTV-1 24*	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
UHDTV-1 24*	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
UHDTV-1 24*	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
UHDTV-1 24*	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
UHDTV-1 25*	ProRes	Y	Y	Y	Proxy			Y			
UHDTV-1 25*	ProRes	Y	Y	Y	LT			Y			
UHDTV-1 25*	ProRes	Y	Y	Y	Normal			Y			
UHDTV-1 25*	ProRes	Y	Y	Y	HQ			Y			

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
UHDTV-1 25*	ProRes	Y	Y	Y	4444			Y			
UHDTV-1 25*	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
UHDTV-1 25*	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
UHDTV-1 25*	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
UHDTV-1 25*	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
UHDTV-1 25*	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
UHDTV-1 25*	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
UHDTV-1 29.97*	ProRes	Y	Y	Y	Proxy			Y			
UHDTV-1 29.97*	ProRes	Y	Y	Y	LT			Y			
UHDTV-1 29.97*	ProRes	Y	Y	Y	Normal			Y			
UHDTV-1 29.97*	ProRes	Y	Y	Y	HQ			Y			
UHDTV-1 29.97*	ProRes	Y	Y	Y	4444			Y			
UHDTV-1 29.97*	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
UHDTV-1 29.97*	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
UHDTV-1 29.97*	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
UHDTV-1 29.97*	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
UHDTV-1 29.97*	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
UHDTV-1 29.97*	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
UHDTV-1 50*	ProRes	Y	Y		Proxy			Y			
UHDTV-1 50*	ProRes	Y	Y		LT			Y			
UHDTV-1 50*	ProRes	Y	Y		Normal			Y			
UHDTV-1 50*	ProRes	Y	Y		HQ			Y			
UHDTV-1 50*	ProRes	Y	Y		4444			Y			
UHDTV-1 50*	VC-5 {Cineform}*	Y	Y		Low			Y		Y	
UHDTV-1 50*	VC-5 {Cineform}*	Y	Y		Medium			Y		Y	
UHDTV-1 50*	VC-5 {Cineform}*	Y	Y		High			Y		Y	
UHDTV-1 50*	VC-5 {Cineform}*	Y	Y		Filmscan 1			Y		Y	
UHDTV-1 50*	VC-5 {Cineform}*	Y	Y		Filmscan 2			Y		Y	
UHDTV-1 50*	VC-5 {Cineform}*	Y	Y		Keying			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
UHDTV-1 59.94*	ProRes	Y	Y		Proxy			Y			
UHDTV-1 59.94*	ProRes	Y	Y		LT			Y			
UHDTV-1 59.94*	ProRes	Y	Y		Normal			Y			
UHDTV-1 59.94*	ProRes	Y	Y		HQ			Y			
UHDTV-1 59.94*	ProRes	Y	Y		4444			Y			
UHDTV-1 59.94*	VC-5 {Cineform}*	Y	Y		Low			Y		Y	
UHDTV-1 59.94*	VC-5 {Cineform}*	Y	Y		Medium			Y		Y	
UHDTV-1 59.94*	VC-5 {Cineform}*	Y	Y		High			Y		Y	
UHDTV-1 59.94*	VC-5 {Cineform}*	Y	Y		Filmscan 1			Y		Y	
UHDTV-1 59.94*	VC-5 {Cineform}*	Y	Y		Filmscan 2			Y		Y	
UHDTV-1 59.94*	VC-5 {Cineform}*	Y	Y		Keying			Y		Y	
720P 50	Uncompressed	Y	Y	Y	Fixed			Y		Y	
720P 50	DNxHD	Y	N	N	115	Y	Y	Y			
720P 50	DNxHD	Y	Y	N	175	Y	Y	Y			
720P 50	ProRes	Y	Y	Y	Proxy			Y			
720P 50	ProRes	Y	Y	Y	LT			Y			
720P 50	ProRes	Y	Y	Y	Normal			Y			
720P 50	ProRes	Y	Y	Y	HQ			Y			

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
720P 50	ProRes	Y	Y	Y	4444			Y			
720P 50	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
720P 50	XDcam HD	Y	N	N	50	Y	Y	Y			
720P 50	H.264	Y	N	N	iPod			Y	Y		
720P 50	H.264	Y	N	N	iPad			Y	Y		
720P 50	H.264	Y	N	N	PIX			Y	Y		
720P 50	H.264	Y	N	N	DAX			Y	Y		
720P 50	H.264	Y	N	N	DAX_2800			Y	Y		
720P 50	H.264	Y	N	N	Full HD			Y	Y		
720P 50	H.264	Y	N	N	350kbs			Y	Y		
720P 50	H.264	Y	N	N	Main Proxy			Y	Y		
720P 50	JFIF	Y	N	N	10:1m	Y					
720P 50	JFIF	Y	N	N	15:1s	Y					
720P 50	JFIF	Y	N	N	2:1	Y					
720P 50	JFIF	Y	N	N	20:1	Y					
720P 50	JFIF	Y	N	N	10:1	Y					
720P 50	AVC-I	Y	Y	N	50	Y	Y				
720P 50	AVC-I	Y	Y	N	100	Y	Y				
720P 50	DVCProHD	Y	Y	N	100	Y		Y			
720P 50	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
720P 50	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
720P 50	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
720P 50	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
720P 50	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
720P 50	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
720P 50	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				
720P 59.94	Uncompressed	Y	Y	Y	Fixed			Y		Y	
720P 59.94	DNxHD	Y	N	N	145	Y	Y	Y			
720P 59.94	DNxHD	Y	Y	N	220	Y	Y	Y			
720P 59.94	ProRes	Y	Y	Y	Proxy			Y			
720P 59.94	ProRes	Y	Y	Y	LT			Y			
720P 59.94	ProRes	Y	Y	Y	Normal			Y			
720P 59.94	ProRes	Y	Y	Y	HQ			Y			
720P 59.94	ProRes	Y	Y	Y	4444			Y			
720P 59.94	XDcam HD	Y	N	N	EX	Y	Y	Y	Y		
720P 59.94	XDcam HD	Y	N	N	50	Y	Y	Y			
720P 59.94	H.264	Y	N	N	iPod			Y	Y		
720P 59.94	H.264	Y	N	N	iPad			Y	Y		
720P 59.94	H.264	Y	N	N	PIX			Y	Y		
720P 59.94	H.264	Y	N	N	DAX			Y	Y		
720P 59.94	H.264	Y	N	N	DAX_2800			Y	Y		
720P 59.94	H.264	Y	N	N	Full HD			Y	Y		
720P 59.94	H.264	Y	N	N	350kbs			Y	Y		
720P 59.94	H.264	Y	N	N	Main Proxy			Y	Y		
720P 59.94	JFIF	Y	N	N	10:1m	Y					
720P 59.94	JFIF	Y	N	N	15:1s	Y					
720P 59.94	JFIF	Y	N	N	2:1	Y					
720P 59.94	JFIF	Y	N	N	20:1	Y					
720P 59.94	JFIF	Y	N	N	10:1	Y					
720P 59.94	AVC-I	Y	Y	N	50	Y	Y				

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
720P 59.94	AVC-I	Y	Y	N	100	Y	Y				
720P 59.94	DVCProHD	Y	Y	N	100	Y		Y			
720P 59.94	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
720P 59.94	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
720P 59.94	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
720P 59.94	VC-5 {Cineform}*	Y	Y	Y	FilmScan 1			Y		Y	
720P 59.94	VC-5 {Cineform}*	Y	Y	Y	FilmScan 2			Y		Y	
720P 59.94	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
720P 59.94	JPEG 2000*	Y	Y	?	VL 220Mbit		Y				
720P 60	Uncompressed	Y	Y	Y	Fixed			Y		Y	
720P 60	DNxHD	Y	N	N	145	Y	Y	Y			
720P 60	DNxHD	Y	Y	N	220	Y	Y	Y			
720P 60	ProRes	Y	Y	Y	Proxy			Y			
720P 60	ProRes	Y	Y	Y	LT			Y			
720P 60	ProRes	Y	Y	Y	Normal			Y			
720P 60	ProRes	Y	Y	Y	HQ			Y			
720P 60	ProRes	Y	Y	Y	4444			Y			
720P 60	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
720P 60	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
720P 60	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
720P 60	VC-5 {Cineform}*	Y	Y	Y	FilmScan 1			Y		Y	
720P 60	VC-5 {Cineform}*	Y	Y	Y	FilmScan 2			Y		Y	
720P 60	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
PAL (SD)	Uncompressed	Y	Y	Y	Fixed	Y		Y		Y	
PAL (SD)	ProRes	Y	Y	Y	Proxy			Y			12
PAL (SD)	ProRes	Y	Y	Y	LT			Y			28
PAL (SD)	ProRes	Y	Y	Y	Normal			Y			41
PAL (SD)	ProRes	Y	Y	Y	HQ			Y			61
PAL (SD)	ProRes	Y	Y	Y	4444			Y			92
PAL (SD)	H.264	Y	N	N	iPod			Y	Y		
PAL (SD)	H.264	Y	N	N	iPad			Y	Y		
PAL (SD)	H.264	Y	N	N	350-FCP			Y	Y		
PAL (SD)	H.264	Y	N	N	DAX			Y	Y		
PAL (SD)	H.264	Y	N	N	DAX_2800			Y	Y		
PAL (SD)	H.264	Y	N	N	Full SD			Y	Y		
PAL (SD)	H.264	Y	N	N	Anamorphic Full SD			Y	Y		
PAL (SD)	H.264	Y	N	N	Full SD 3500			Y	Y		
PAL (SD)	H.264	Y	N	N	Anamorphic Full SD 3500			Y	Y		
PAL (SD)	JFIF	Y	N	N	10:1m	Y					
PAL (SD)	JFIF	Y	N	N	15:1s	Y					
PAL (SD)	JFIF	Y	N	N	2:1	Y					
PAL (SD)	JFIF	Y	N	N	20:1	Y					
PAL (SD)	JFIF	Y	N	N	10:1	Y					

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
PAL (SD)	IMX	Y			30	Y	Y	Y			
PAL (SD)	IMX	Y			40	Y	Y	Y			
PAL (SD)	IMX	Y			50	Y	Y	Y			
PAL (SD)	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
PAL (SD)	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
PAL (SD)	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
PAL (SD)	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
PAL (SD)	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
PAL (SD)	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
PAL (SD) 25P	Uncompressed	Y	Y	Y	Fixed	Y		Y		Y	
PAL (SD) 25P	ProRes	Y	Y	Y	Proxy			Y			
PAL (SD) 25P	ProRes	Y	Y	Y	LT			Y			
PAL (SD) 25P	ProRes	Y	Y	Y	Normal			Y			
PAL (SD) 25P	ProRes	Y	Y	Y	HQ			Y			
PAL (SD) 25P	ProRes	Y	Y	Y	4444			Y			
PAL (SD) 25P	H.264	Y	N	N	iPod			Y	Y		

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
PAL (SD) 25P	H.264	Y	N	N	iPad			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	350-FCP			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	DAX			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	DAX_2800			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	Full SD			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	Anamorphic Full SD			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	Full SD 3500			Y	Y		
PAL (SD) 25P	H.264	Y	N	N	Anamorphic Full SD 3500			Y	Y		
PAL (SD) 25P	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
PAL (SD) 25P	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
PAL (SD) 25P	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
PAL (SD) 25P	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
PAL (SD) 25P	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
PAL (SD) 25P	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
NTSC (SD) 23.98P	Uncompressed	Y	Y	Y	Fixed			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
NTSC (SD) 23.98P	ProRes	Y	Y	Y	Proxy			Y			
NTSC (SD) 23.98P	ProRes	Y	Y	Y	LT			Y			
NTSC (SD) 23.98P	ProRes	Y	Y	Y	Normal			Y			
NTSC (SD) 23.98P	ProRes	Y	Y	Y	HQ			Y			
NTSC (SD) 23.98P	ProRes	Y	Y	Y	4444			Y			
NTSC (SD) 23.98P	H.264	Y	N	N	iPod			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	iPad			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	350-FCP			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	DAX			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	DAX_2800			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	Full SD			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	Anamorphic Full SD			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	Full SD 3500			Y	Y		
NTSC (SD) 23.98P	H.264	Y	N	N	Anamorphic Full SD 3500			Y	Y		
NTSC (SD) 23.98P	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
NTSC (SD) 23.98P	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	
NTSC (SD) 23.98P	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
NTSC (SD) 23.98P	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
NTSC (SD) 23.98P	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
NTSC (SD) 23.98P	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	
NTSC (SD) 59.9i	Uncompressed	Y	Y	Y	Fixed			Y		Y	
NTSC (SD) 59.9i	ProRes	Y	Y	Y	Proxy			Y			
NTSC (SD) 59.9i	ProRes	Y	Y	Y	LT			Y			
NTSC (SD) 59.9i	ProRes	Y	Y	Y	Normal			Y			
NTSC (SD) 59.9i	ProRes	Y	Y	Y	HQ			Y			
NTSC (SD) 59.9i	ProRes	Y	Y	Y	4444			Y			
NTSC (SD) 59.9i	H.264	Y	N	N	iPod			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	iPad			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	350-FCP			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	DAX			Y	Y		

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
NTSC (SD) 59.9i	H.264	Y	N	N	DAX_2800			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	Full SD			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	Anamorphic Full SD			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	Full SD 3500			Y	Y		
NTSC (SD) 59.9i	H.264	Y	N	N	Anamorphic Full SD 3500			Y	Y		
NTSC (SD) 59.9i	JFIF	Y	N	N	10:1m	Y					
NTSC (SD) 59.9i	JFIF	Y	N	N	15:1s	Y					
NTSC (SD) 59.9i	JFIF	Y	N	N	2:1	Y					
NTSC (SD) 59.9i	JFIF	Y	N	N	20:1	Y					
NTSC (SD) 59.9i	JFIF	Y	N	N	10:1	Y					
NTSC (SD) 59.9i	IMX	Y			30	Y	Y	Y			
NTSC (SD) 59.9i	IMX	Y			40	Y	Y	Y			
NTSC (SD) 59.9i	IMX	Y			50	Y	Y	Y			
NTSC (SD) 59.9i	VC-5 {Cineform}*	Y	Y	Y	Low			Y		Y	
NTSC (SD) 59.9i	VC-5 {Cineform}*	Y	Y	Y	Medium			Y		Y	

Specifications

Codecs & wrappers

Codecs & wrappers / cont...

Format * = optional	Codec * = optional	8bit	10bit	444 RGB	Quality / Bit Rate	Avid mxf OpAtom	mxf Op1a	MOV	MP4	AVI	DPX
NTSC (SD) 59.9i	VC-5 {Cineform}*	Y	Y	Y	High			Y		Y	
NTSC (SD) 59.9i	VC-5 {Cineform}*	Y	Y	Y	Filmscan 1			Y		Y	
NTSC (SD) 59.9i	VC-5 {Cineform}*	Y	Y	Y	Filmscan 2			Y		Y	
NTSC (SD) 59.9i	VC-5 {Cineform}*	Y	Y	Y	Keying			Y		Y	

Specifications

Codecs & wrappers

11.3 Data rates

Primarily based on the bit rate, different encodes require significantly different amounts of storage and the same codec can use different amounts of storage space depending on the image format, frame rate and whether it uses a variable or constant bit rate.

In general, codecs such as DNx or XDCAMHD specifically note their data rate as Mbit/s (megabits per second) like DNx 220 or XDCAMHD 50 though in conversation, MB/s (megabytes per second) has become fairly common.

To convert from Mbit/s to MB/s, divide by 8 so for example 220Mbit/8 = 27.5 MB/s

To convert from MB/s to Mbit/s reverse that so 27.5 MB/s *8 = 220Mbit

Use the data rate shown below with the data rate calculator to determine the estimated required storage.

See ["11.4 Storage calculator" on page 305](#)

Format * = optional	Codec * = optional	Rate Mbps
1080i 50	Uncompressed Fixed	1037
1080i 50	DNxHD 36	36
1080i 50	DNxHD 120	121
1080i 50	DNxHD 185	184
1080i 50	ProRes Proxy	38
1080i 50	ProRes LT	85
1080i 50	ProRes Normal	122
1080i 50	ProRes HQ	184
1080i 50	ProRes 4444	275
1080i 50	XDcam HD EX 1440	35
1080i 50	XDcam HD EX	35
1080i 50	XDcam HD 50	50
1080i 50	H.264 iPod	0.35
1080i 50	H.264 iPad	0.9
1080i 50	H.264 PIX	2.8

Format * = optional	Codec * = optional	Rate Mbps
1080i 50	H.264 DAX	0.7
1080i 50	H.264 DAX_2800	2.8
1080i 50	H.264 Full HD	3
1080i 50	H.264 350kbs	0.35
1080i 50	H.264 Main Proxy	0.35
1080i 50	JFIF 10:1m	-----
1080i 50	JFIF 15:1s	-----
1080i 50	JFIF 2:1	-----
1080i 50	JFIF 20:1	-----
1080i 50	JFIF 10:1	-----
1080i 50	AVC-I 50	50
1080i 50	AVC-I 100	100
1080i 50	DVCPProHD 100	100
1080i 50	VC-5 {Cineform}* Low	80

Format * = optional	Codec * = optional	Rate Mbps
1080i 50	VC-5 {Cineform}* Medium	96
1080i 50	VC-5 {Cineform}* High	128
1080i 50	VC-5 {Cineform}* Filmscan 1	160
1080i 50	VC-5 {Cineform}* Filmscan 2	192
1080i 50	VC-5 {Cineform}* Keying	369
1080i 50	JPEG 2000* VL 220Mbit	220
-----	-----	-----

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
1080i 59.94	Uncompressed Fixed	-----
1080i 59.94	DNxHD 45	45
1080i 59.94	DNxHD 145	145
1080i 59.94	DNxHD 220	220
1080i 59.94	ProRes Proxy	45
1080i 59.94	ProRes LT	102
1080i 59.94	ProRes Normal	147
1080i 59.94	ProRes HQ	220
1080i 59.94	ProRes 4444	330
1080i 59.94	XDcam HD EX 1440	35
1080i 59.94	XDcam HD EX	35
1080i 59.94	XDcam HD 50	2
1080i 59.94	H.264 iPod	0.35
1080i 59.94	H.264 iPad	0.9

Format * = optional	Codec * = optional	Rate Mbps
1080i 59.94	H.264 PIX	2.8
1080i 59.94	H.264 DAX	0.7
1080i 59.94	H.264 DAX_2800	2.8
1080i 59.94	H.264 Full HD	3
1080i 59.94	H.264 350kbs	0.35
1080i 59.94	H.264 Main Proxy	0.35
1080i 59.94	JFIF 10:1m	-----
1080i 59.94	JFIF 15:1s	-----
1080i 59.94	JFIF 2:1	-----
1080i 59.94	JFIF 20:1	-----
1080i 59.94	JFIF 10:1	-----
1080i 59.94	AVC-I 50	50
1080i 59.94	AVC-I 100	100
1080i 59.94	DVCPProHD 100	100

Format * = optional	Codec * = optional	Rate Mbps
1080i 59.94	VC-5 {Cineform}* Low	-----
1080i 59.94	VC-5 {Cineform}* Medium	115
1080i 59.94	VC-5 {Cineform}* High	154
1080i 59.94	VC-5 {Cineform}* Filmscan 1	192
1080i 59.94	VC-5 {Cineform}* Filmscan 2	230
1080i 59.94	VC-5 {Cineform}* Keying	442
1080i 59.94	JPEG 2000* VL 220Mbit	220
-----	-----	-----
1080i 60	VC-5 {Cineform}* Low	-----
1080i 60	VC-5 {Cineform}* Medium	115
1080i 60	VC-5 {Cineform}* High	154

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
1080i 60	VC-5 {Cineform}* FilmScan 1	192
1080i 60	VC-5 {Cineform}* FilmScan 2	230
1080i 60	VC-5 {Cineform}* Keying	442
-----	-----	-----
1080P 23.98	Uncompressed Fixed	1037
1080P 23.98	DNxHD 36	36
1080P 23.98	DNxHD 115	116
1080P 23.98	DNxHD 175	176
1080P 23.98	DNx444	352
1080P 23.98	ProRes Proxy	36
1080P 23.98	ProRes LT	82
1080P 23.98	ProRes Normal	117
1080P 23.98	ProRes HQ	176
1080P 23.98	ProRes 4444	264
1080P 23.98	XDcam HD EX 1440	35

Format * = optional	Codec * = optional	Rate Mbps
1080P 23.98	XDcam HD EX	35
1080P 23.98	XDcam HD 50	50
1080P 23.98	H.264 iPod	0.35
1080P 23.98	H.264 iPad	0.9
1080P 23.98	H.264 PIX	2.8
1080P 23.98	H.264 DAX	0.7
1080P 23.98	H.264 DAX_2800	2.8
1080P 23.98	H.264 Full HD	3
1080P 23.98	H.264 350kbs	0.35
1080P 23.98	H.264 Main Proxy	0.35
1080P 23.98	DPX Fixed	-----
1080P 23.98	AVC-I 50	50
1080P 23.98	AVC-I 100	100
1080P 23.98	VC-5 {Cineform}* Low	80
1080P 23.98	VC-5 {Cineform}* Medium	96

Format * = optional	Codec * = optional	Rate Mbps
1080P 23.98	VC-5 {Cineform}* High	128
1080P 23.98	VC-5 {Cineform}* FilmScan 1	160
1080P 23.98	VC-5 {Cineform}* FilmScan 2	192
1080P 23.98	VC-5 {Cineform}* Keying	369
1080P 23.98	JPEG 2000* VL 220Mbit	220
-----	-----	-----
1080P 24	Uncompressed Fixed	1037
1080P 24	DNxHD 36	36
1080P 24	DNxHD 115	116
1080P 24	DNxHD 175	176
1080P 24	DNx444	352
1080P 24	ProRes Proxy	36
1080P 24	ProRes LT	82
1080P 24	ProRes Normal	117
1080P 24	ProRes HQ	176
1080P 24	ProRes 4444	264
1080P 24	XDcam HD EX 1440	35
1080P 24	XDcam HD EX	35
1080P 24	XDcam HD 50	50
1080P 24	H.264 iPod	0.35

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
1080P 24	H.264 iPad	0.9
1080P 24	H.264 PIX	2.8
1080P 24	H.264 DAX	0.7
1080P 24	H.264 DAX_2800	2.8
1080P 24	H.264 Full HD	3
1080P 24	H.264 350kbs	0.35
1080P 24	H.264 Main Proxy	0.35
1080P 24	DPX Fixed	-----
1080P 24	AVC-I 50	50
1080P 24	AVC-I 100	100
1080P 24	VC-5 {Cineform}* Low	80
1080P 24	VC-5 {Cineform}* Medium	96
1080P 24	VC-5 {Cineform}* High	128
1080P 24	VC-5 {Cineform}* FilmScan 1	160
1080P 24	VC-5 {Cineform}* FilmScan 2	192
1080P 24	VC-5 {Cineform}* Keying	369
1080P 24	JPEG 2000* VL 220Mbit	220
-----	-----	-----

Format * = optional	Codec * = optional	Rate Mbps
1080P 25	Uncompressed Fixed	1037
1080P 25	DNxHD 36	36
1080P 25	DNxHD 120	121
1080P 25	DNxHD 185	184
1080P 25	DNx444	367
1080P 25	ProRes Proxy	38
1080P 25	ProRes LT	85
1080P 25	ProRes Normal	122
1080P 25	ProRes HQ	184
1080P 25	ProRes 4444	275
1080P 25	XDcam HD EX 1440	35
1080P 25	XDcam HD EX	35
1080P 25	XDcam HD 50	50
1080P 25	H.264 iPod	0.35
1080P 25	H.264 iPad	0.9
1080P 25	H.264 PIX	2.8
1080P 25	H.264 DAX	0.7
1080P 25	H.264 DAX_2800	2.8
1080P 25	H.264 Full HD	3
1080P 25	H.264 350kbs	0.35
1080P 25	H.264 Main Proxy	0.35
1080P 25	DPX Fixed	-----
1080P 25	AVC-I 50	50
1080P 25	AVC-I 100	100
1080P 25	VC-5 {Cineform}* Low	80

Format * = optional	Codec * = optional	Rate Mbps
1080P 25	VC-5 {Cineform}* Medium	96
1080P 25	VC-5 {Cineform}* High	128
1080P 25	VC-5 {Cineform}* FilmScan 1	160
1080P 25	VC-5 {Cineform}* FilmScan 2	192
1080P 25	VC-5 {Cineform}* Keying	369
1080P 25	JPEG 2000* VL 220Mbit	220
-----	-----	-----
1080P 29.97	Uncompressed Fixed	-----
1080P 29.97	DNxHD 45	45
1080P 29.97	DNxHD 145	145
1080P 29.97	DNxHD 220	220
1080P 29.97	DNx444	440
1080P 29.97	ProRes Proxy	45
1080P 29.97	ProRes LT	102

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
1080P 29.97	ProRes Normal	147
1080P 29.97	ProRes HQ	220
1080P 29.97	ProRes 4444	330
1080P 29.97	XDcam HD EX 1440	35
1080P 29.97	XDcam HD EX	35
1080P 29.97	XDcam HD 50	50
1080P 29.97	H.264 iPod	0.35
1080P 29.97	H.264 iPad	0.9
1080P 29.97	H.264 PIX	2.8
1080P 29.97	H.264 DAX	0.7
1080P 29.97	H.264 DAX_2800	2.8
1080P 29.97	H.264 Full HD	3
1080P 29.97	H.264 350kbs	0.35
1080P 29.97	H.264 Main Proxy	0.35
1080P 29.97	DPX Fixed	-----
1080P 29.97	AVC-I 50	50

Format * = optional	Codec * = optional	Rate Mbps
1080P 29.97	AVC-I 100	100
1080P 29.97	VC-5 {Cineform}* Low	-----
1080P 29.97	VC-5 {Cineform}* Medium	115
1080P 29.97	VC-5 {Cineform}* High	154
1080P 29.97	VC-5 {Cineform}* Filmscan 1	192
1080P 29.97	VC-5 {Cineform}* Filmscan 2	230
1080P 29.97	VC-5 {Cineform}* Keying	442
1080P 29.97	JPEG 2000* VL 220Mbit	220
-----	-----	-----
1080P 50	Uncompressed Fixed	-----
1080P 50	ProRes Proxy	76
1080P 50	ProRes LT	170
1080P 50	ProRes Normal	244
1080P 50	ProRes HQ	368
1080P 50	ProRes 4444	550
1080P 50	VC-5 {Cineform}* Low	160

Format * = optional	Codec * = optional	Rate Mbps
1080P 50	VC-5 {Cineform}* Medium	192
1080P 50	VC-5 {Cineform}* High	256
1080P 50	VC-5 {Cineform}* Filmscan 1	320
1080P 50	VC-5 {Cineform}* Filmscan 2	384
1080P 50	VC-5 {Cineform}* Keying	738
1080P 50	JPEG 2000*	-----
-----	-----	-----
1080P 59.94	Uncompressed Fixed	-----
1080P 59.94	ProRes Proxy	90
1080P 59.94	ProRes LT	204
1080P 59.94	ProRes Normal	294
1080P 59.94	ProRes HQ	440
1080P 59.94	ProRes 4444	660
1080P 59.94	VC-5 {Cineform}* Low	-----

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
1080P 59.94	VC-5 {Cineform}* Medium	230
1080P 59.94	VC-5 {Cineform}* High	308
1080P 59.94	VC-5 {Cineform}* Filmscan 1	384
1080P 59.94	VC-5 {Cineform}* Filmscan 2	460
1080P 59.94	VC-5 {Cineform}* Keying	884
1080P 59.94	JPEG 2000*	-----
-----	-----	-----
1080P 60	Uncompressed Fixed	-----
1080P 60	ProRes Proxy	90
1080P 60	ProRes LT	204
1080P 60	ProRes Normal	294
1080P 60	ProRes HQ	440
1080P 60	ProRes 4444	660
1080P 60	VC-5 {Cineform}* Low	-----
1080P 60	VC-5 {Cineform}* Medium	230

Format * = optional	Codec * = optional	Rate Mbps
1080P 60	VC-5 {Cineform}* High	308
1080P 60	VC-5 {Cineform}* Filmscan 1	384
1080P 60	VC-5 {Cineform}* Filmscan 2	460
1080P 60	VC-5 {Cineform}* Keying	884
-----	-----	-----
UHDTV-1 24*	ProRes Proxy	144
UHDTV-1 24*	ProRes LT	328
UHDTV-1 24*	ProRes Normal	468
UHDTV-1 24*	ProRes HQ	704
UHDTV-1 24*	ProRes 4444	1056
UHDTV-1 24*	VC-5 {Cineform}* Low	320
UHDTV-1 24*	VC-5 {Cineform}* Medium	384
UHDTV-1 24*	VC-5 {Cineform}* High	512

Format * = optional	Codec * = optional	Rate Mbps
UHDTV-1 24*	VC-5 {Cineform}* Filmscan 1	640
UHDTV-1 24*	VC-5 {Cineform}* Filmscan 2	768
UHDTV-1 24*	VC-5 {Cineform}* Keying	1476
-----	-----	-----
UHDTV-1 25*	ProRes Proxy	152
UHDTV-1 25*	ProRes LT	340
UHDTV-1 25*	ProRes Normal	488
UHDTV-1 25*	ProRes HQ	736
UHDTV-1 25*	ProRes 4444	1100
UHDTV-1 25*	VC-5 {Cineform}* Low	320
UHDTV-1 25*	VC-5 {Cineform}* Medium	384
UHDTV-1 25*	VC-5 {Cineform}* High	512
UHDTV-1 25*	VC-5 {Cineform}* Filmscan 1	640

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
UHDTV-1 25*	VC-5 {Cineform}* FilmScan 2	768
UHDTV-1 25*	VC-5 {Cineform}* Keying	1476
-----	-----	-----
UHDTV-1 29.97*	ProRes Proxy	180
UHDTV-1 29.97*	ProRes LT	408
UHDTV-1 29.97*	ProRes Normal	588
UHDTV-1 29.97*	ProRes HQ	880
UHDTV-1 29.97*	ProRes 4444	1320
UHDTV-1 29.97*	VC-5 {Cineform}* Low	-----
UHDTV-1 29.97*	VC-5 {Cineform}* Medium	460
UHDTV-1 29.97*	VC-5 {Cineform}* High	616
UHDTV-1 29.97*	VC-5 {Cineform}* FilmScan 1	768
UHDTV-1 29.97*	VC-5 {Cineform}* FilmScan 2	920

Format * = optional	Codec * = optional	Rate Mbps
UHDTV-1 29.97*	VC-5 {Cineform}* Keying	1768
-----	-----	-----
UHDTV-1 50*	ProRes Proxy	304
UHDTV-1 50*	ProRes LT	680
UHDTV-1 50*	ProRes Normal	976
UHDTV-1 50*	ProRes HQ	1472
UHDTV-1 50*	ProRes 4444	2200
UHDTV-1 50*	VC-5 {Cineform}* Low	640
UHDTV-1 50*	VC-5 {Cineform}* Medium	768
UHDTV-1 50*	VC-5 {Cineform}* High	1024
UHDTV-1 50*	VC-5 {Cineform}* FilmScan 1	1280
UHDTV-1 50*	VC-5 {Cineform}* FilmScan 2	1536
UHDTV-1 50*	VC-5 {Cineform}* Keying	2952
-----	-----	-----

Format * = optional	Codec * = optional	Rate Mbps
UHDTV-1 59.94*	ProRes Proxy	360
UHDTV-1 59.94*	ProRes LT	816
UHDTV-1 59.94*	ProRes Normal	1176
UHDTV-1 59.94*	ProRes HQ	1760
UHDTV-1 59.94*	ProRes 4444	2640
UHDTV-1 59.94*	VC-5 {Cineform}* Low	-----
UHDTV-1 59.94*	VC-5 {Cineform}* Medium	920
UHDTV-1 59.94*	VC-5 {Cineform}* High	1232
UHDTV-1 59.94*	VC-5 {Cineform}* FilmScan 1	1536
UHDTV-1 59.94*	VC-5 {Cineform}* FilmScan 2	1840
UHDTV-1 59.94*	VC-5 {Cineform}* Keying	3536
-----	-----	-----
720P 50	Uncompressed Fixed	-----
720P 50	DNxHD 115	115
720P 50	DNxHD 175	175

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
720P 50	ProRes Proxy	19
720P 50	ProRes LT	42
720P 50	ProRes Normal	61
720P 50	ProRes HQ	92
720P 50	ProRes 4444	138
720P 50	XDcam HD EX	35
720P 50	XDcam HD 50	50
720P 50	H.264 iPod	0.35
720P 50	H.264 iPad	0.9
720P 50	H.264 PIX	2.8
720P 50	H.264 DAX	0.7
720P 50	H.264 DAX_2800	2.8
720P 50	H.264 Full HD	3
720P 50	H.264 350kbs	0.35
720P 50	H.264 Main Proxy	0.35
720P 50	JFIF 10:1m	-----
720P 50	JFIF 15:1s	-----
720P 50	JFIF 2:1	-----
720P 50	JFIF 20:1	-----
720P 50	JFIF 10:1	-----
720P 50	AVC-I 50	50
720P 50	AVC-I 100	100
720P 50	DVCProHD 100	100
720P 50	VC-5 {Cineform}* Low	-----
720P 50	VC-5 {Cineform}* Medium	-----

Format * = optional	Codec * = optional	Rate Mbps
720P 50	VC-5 {Cineform}* High	-----
720P 50	VC-5 {Cineform}* FilmScan 1	-----
720P 50	VC-5 {Cineform}* FilmScan 2	-----
720P 50	VC-5 {Cineform}* Keying	-----
720P 50	JPEG 2000* VL 220Mbit	-----
-----	-----	-----
720P 59.94	Uncompressed Fixed	-----
720P 59.94	DNxHD 145	145
720P 59.94	DNxHD 220	220
720P 59.94	ProRes Proxy	23
720P 59.94	ProRes LT	51
720P 59.94	ProRes Normal	73
720P 59.94	ProRes HQ	110
720P 59.94	ProRes 4444	165
720P 59.94	XDcam HD EX	35
720P 59.94	XDcam HD 50	50
720P 59.94	H.264 iPod	0.35
720P 59.94	H.264 iPad	0.9
720P 59.94	H.264 PIX	2.8
720P 59.94	H.264 DAX	0.7

Format * = optional	Codec * = optional	Rate Mbps
720P 59.94	H.264 DAX_2800	2.8
720P 59.94	H.264 Full HD	3
720P 59.94	H.264 350kbs	0.35
720P 59.94	H.264 Main Proxy	0.35
720P 59.94	JFIF 10:1m	-----
720P 59.94	JFIF 15:1s	-----
720P 59.94	JFIF 2:1	-----
720P 59.94	JFIF 20:1	-----
720P 59.94	JFIF 10:1	-----
720P 59.94	AVC-I 50	50
720P 59.94	AVC-I 100	100
720P 59.94	DVCProHD 100	100
720P 59.94	VC-5 {Cineform}* Low	-----
720P 59.94	VC-5 {Cineform}* Medium	-----
720P 59.94	VC-5 {Cineform}* High	-----
720P 59.94	VC-5 {Cineform}* FilmScan 1	-----
720P 59.94	VC-5 {Cineform}* FilmScan 2	-----
720P 59.94	VC-5 {Cineform}* Keying	-----

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
720P 59.94	JPEG 2000* VL 220Mbit	220
-----	-----	-----
720P 60	Uncompressed Fixed	-----
720P 60	DNxHD 145	145
720P 60	DNxHD 220	220
720P 60	ProRes Proxy	23
720P 60	ProRes LT	51
720P 60	ProRes Normal	73
720P 60	ProRes HQ	110
720P 60	ProRes 4444	165
720P 60	VC-5 {Cineform}* Low	-----
720P 60	VC-5 {Cineform}* Medium	-----
720P 60	VC-5 {Cineform}* High	-----
720P 60	VC-5 {Cineform}* Filmscan 1	-----
720P 60	VC-5 {Cineform}* Filmscan 2	-----
720P 60	VC-5 {Cineform}* Keying	-----
-----	-----	-----
PAL (SD)	Uncompressed Fixed	-----

Format * = optional	Codec * = optional	Rate Mbps
PAL (SD)	ProRes Proxy	-----
PAL (SD)	ProRes LT	-----
PAL (SD)	ProRes Normal	-----
PAL (SD)	ProRes HQ	-----
PAL (SD)	ProRes 4444	-----
PAL (SD)	H.264 iPod	0.35
PAL (SD)	H.264 iPad	0.9
PAL (SD)	H.264 350-FCP	0.35
PAL (SD)	H.264 DAX	0.7
PAL (SD)	H.264 DAX_2800	2.8
PAL (SD)	H.264 Full SD	0.7
PAL (SD)	H.264 Anamorphic Full SD	0.7
PAL (SD)	H.264 Full SD 3500	3.5
PAL (SD)	H.264 Anamorphic Full SD 3500	3.5
PAL (SD)	JFIF 10:1m	-----
PAL (SD)	JFIF 15:1s	-----
PAL (SD)	JFIF 2:1	-----
PAL (SD)	JFIF 20:1	-----
PAL (SD)	JFIF 10:1	-----
PAL (SD)	IMX 30	30
PAL (SD)	IMX 40	40
PAL (SD)	IMX 50	50
PAL (SD)	VC-5 {Cineform}* Low	-----

Format * = optional	Codec * = optional	Rate Mbps
PAL (SD)	VC-5 {Cineform}* Medium	-----
PAL (SD)	VC-5 {Cineform}* High	-----
PAL (SD)	VC-5 {Cineform}* Filmscan 1	-----
PAL (SD)	VC-5 {Cineform}* Filmscan 2	-----
PAL (SD)	VC-5 {Cineform}* Keying	-----
-----	-----	-----
PAL (SD) 25P	Uncompressed Fixed	-----
PAL (SD) 25P	ProRes Proxy	12
PAL (SD) 25P	ProRes LT	28
PAL (SD) 25P	ProRes Normal	41
PAL (SD) 25P	ProRes HQ	61
PAL (SD) 25P	ProRes 4444	92
PAL (SD) 25P	H.264 iPod	0.35
PAL (SD) 25P	H.264 iPad	0.9

Specifications

Data rates

Data rates / cont...

Format * = optional	Codec * = optional	Rate Mbps
PAL (SD) 25P	H.264 350-FCP	0.35
PAL (SD) 25P	H.264 DAX	0.7
PAL (SD) 25P	H.264 DAX_2800	2.8
PAL (SD) 25P	H.264 Full SD	0.7
PAL (SD) 25P	H.264 Anamorphic Full SD	0.7
PAL (SD) 25P	H.264 Full SD 3500	3.5
PAL (SD) 25P	H.264 Anamorphic Full SD 3500	3.5
PAL (SD) 25P	VC-5 {Cineform}* Low	-----
PAL (SD) 25P	VC-5 {Cineform}* Medium	-----
PAL (SD) 25P	VC-5 {Cineform}* High	-----
PAL (SD) 25P	VC-5 {Cineform}* Filmscan 1	-----
PAL (SD) 25P	VC-5 {Cineform}* Filmscan 2	-----
PAL (SD) 25P	VC-5 {Cineform}* Keying	-----

Format * = optional	Codec * = optional	Rate Mbps
-----	-----	-----
NTSC (SD) 23.98P	Uncompressed Fixed	-----
NTSC (SD) 23.98P	ProRes Proxy	12
NTSC (SD) 23.98P	ProRes LT	29
NTSC (SD) 23.98P	ProRes Normal	42
NTSC (SD) 23.98P	ProRes HQ	63
NTSC (SD) 23.98P	ProRes 4444	94
NTSC (SD) 23.98P	H.264 iPod	0.35
NTSC (SD) 23.98P	H.264 iPad	0.9
NTSC (SD) 23.98P	H.264 350-FCP	0.35
NTSC (SD) 23.98P	H.264 DAX	0.7
NTSC (SD) 23.98P	H.264 DAX_2800	2.8
NTSC (SD) 23.98P	H.264 Full SD	0.7
NTSC (SD) 23.98P	H.264 Anamorphic Full SD	0.7
NTSC (SD) 23.98P	H.264 Full SD 3500	3.5

Format * = optional	Codec * = optional	Rate Mbps
NTSC (SD) 23.98P	H.264 Anamorphic Full SD 3500	3.5
NTSC (SD) 23.98P	VC-5 {Cineform}* Low	-----
NTSC (SD) 23.98P	VC-5 {Cineform}* Medium	-----
NTSC (SD) 23.98P	VC-5 {Cineform}* High	-----
NTSC (SD) 23.98P	VC-5 {Cineform}* Filmscan 1	-----
NTSC (SD) 23.98P	VC-5 {Cineform}* Filmscan 2	-----
NTSC (SD) 23.98P	VC-5 {Cineform}* Keying	-----
-----	-----	-----
NTSC (SD) 59.9i	Uncompressed Fixed	-----
NTSC (SD) 59.9i	ProRes Proxy	12
NTSC (SD) 59.9i	ProRes LT	29
NTSC (SD) 59.9i	ProRes Normal	42
NTSC (SD) 59.9i	ProRes HQ	63
NTSC (SD) 59.9i	ProRes 4444	94

Specifications

Data rates

11.4 Storage calculator

Codec data rates are generally measured as Mbps (Megabits per second) while storage is generally quoted as MB Megabytes, GB Gigabytes, TB Terabytes and as storage costs decrease, Petabytes. There are any number of rate and storage calculators available on-line but we figured a local one might be handy so while not very advanced, the calculator below will give you the basic storage requirements for your data.

To use the calculator, refer to the data rate chart for your specific data rate: ["11.3 Data rates" on page 332](#). Type the rate in the top "Mbps" field. To included the space required for audio, enter the number of proposed channels in the "Audio channels" field. Press "Enter" or click elsewhere on the page. The estimated required storage will automatically update. Gigabytes and Terabytes/hour are based on the number of hours noted in the hours field. Any decimal can be used such as .25 (¼ hour), 6, etc. Note that these are just estimates. Actual results will vary, especially if variable bit rate encoding is employed.

Note that when you close this PDF, you may be asked if you want to save changes. This is not necessary unless you want to keep the last calculation in the display.

MBPS
Megabits
per second

HOURS

AUDIO CHANNELS @ 24 bit 48 kHz
1152 kbps

ESTIMATED STORAGE

MBpsec	<input type="text"/>	Megabytes per second
MBpmin	<input type="text"/>	Megabytes per minute
GBpshr	<input type="text"/>	Gigabytes per hour
TBpshr	<input type="text"/>	Terabytes per hour

Click a field to display the result without rounding

12.0 Index

For answers to commonly asked questions and descriptions of the many CineDeck features and functions, also see [“10.0 FAQ & Features” on page 282](#).

Symbols

4K / UHD [186](#)

A

AES audio [138](#)
 MX back panel [61](#)
 RX3G back panel [50](#)
 ZX back panel [67](#)
AMP protocol [228](#), [236](#), [237](#)
 TCP port 3811 [236](#)
Analog Audio [39](#), [138](#)
Analysis Tools [95](#), [112](#)
API / SDK [228](#). *See* AMP protocol
AS-02. *See* FAQ & Features
AS-11. *See* FAQ & Features
Audio [39](#)
 AES XLR pins to BNC [40](#)
 SDI channels [39](#)
Audio delay [143](#)
Audio routing [159](#)
AVC-Intra [305](#)
Avid Digital Cut [234](#)
Avid MXF [305](#)

B

Bitrate/quality [283](#)
 Data rates [332](#)
 Master [146](#)
 Proxy [153](#)
 Storage calculator [343](#)
Blacked File [109](#)

Bluefish update [273](#)

C

Changing drive letters [255](#)
Character overlay [90](#), [95](#)
 Customizing [110](#)
CineDeck MCC [228](#), [236](#)
Cineform [305](#)
Clip manager [75](#), [211](#)
Clipping [95](#)
Close application [179](#)
Closed captioning [149](#)
Codec [282](#)
 Codecs & wrappers [305](#)
 Master [146](#)
 Proxy [153](#)
COM ports [229](#)
COM port setup [230](#)
Connecting [38](#)
 Audio [39](#)
Contact [2](#)
Create system image [281](#)
Create USB restore key [277](#)

D

D-10 [305](#)
Delay [143](#)
Delete file [179](#)
Device Manager [229](#)
Digital Cut [234](#)
Disk caching settings [253](#)
DNxHD [305](#)
DPP - UK. *See* FAQ & Features

Drives
 Caching settings [253](#)
 Drive letters [255](#)
 Ejecting [69](#)
 Error Checking [257](#)
 Formatting [252](#)
 Formatting [242](#)
 HotSwap! [84](#)
 Initializing [244](#)
 Installing [243](#)
 Secure erase [259](#)
DVCPRO HD [305](#)

E

Edge Detect [95](#)
Edit user wildcards [131](#)
Edit while record. *See* FAQ & Features
EDL editor [174](#)
EDL sample [178](#)
Ejecting drives [69](#)
 HotSwap! [84](#)
Error [96](#)
Error Checking [257](#)
Exit to Windows [179](#)
Export settings [85](#)

F

FAQ & Features [282](#)
File name editor [129](#)
File names [121](#), [123](#)
Focus Assist [95](#)
Folder path [127](#)

G

Growing files. [See](#) Edit while record; [See also](#) FAQ & Features

H

H.264 [305](#)
 Headphone [98](#)
 Histogram [95](#)
 HotSwap! [84](#)

I

Image
 Create system image [281](#)
 Create USB key [277](#)
 Restore factory image [275](#)
 Update USB key [276](#)
 Import settings [85](#)
 IMX (D10) [305](#)
 Input tab [137](#)
 Inserting drives [69](#)
 Interplay. [See](#) FAQ & Features

J

JFIF proxy [305](#)
 JPEG 2000 (J2K) [305](#)

K

Keyboard shortcuts [77](#), [179](#)

L

Licenses [179](#)
 LUT files [85](#), [91](#), [95](#)

M

Manage licenses [179](#)
 Master tab [144](#)
 Audio delay [143](#)
 Media Composer
 Digital Cut [234](#)
 Mode [185](#)

MPEG IMX [305](#)
 Multi view [75](#), [87](#), [88](#)
 Playback [202](#)
 Recording [193](#)

MX
 Back panel [59](#)
 Control panel [54](#)
 Front panel [52](#)
 General info [34](#)

MXF [305](#)

O

On-screen keyboard [83](#)
 Op1a MXF [305](#)
 OpAtom MXF [305](#)
 Output mode [179](#)
 Overview tab [114](#)

P

Partitions [242](#)
 Path editor [127](#)
 Path & file names [121](#), [123](#)
 Pin-outs
 RS-422 [233](#)
 Playback [201](#)
 Multi view [202](#)
 Single channel view [207](#)
 touch transport [205](#)
 Playlist editor [221](#)
 Playlist manager [75](#), [218](#)
 Playlist settings [225](#)
 Powering on [82](#)
 On-screen keyboard [83](#)
 Prefs tab [179](#)
 Project manager [118](#)
 Edit user wildcards [131](#)
 File name editor [129](#)
 Path [127](#)
 Path editor [127](#)
 Path & file names [121](#), [123](#)
 Scenes list [133](#)
 Sub-scenes list [136](#)
 ProRes [305](#)
 Proxy tab [152](#)

Q

Quality/bitrate [283](#)
 Data rates [332](#)
 Master [146](#)
 Proxy [153](#)
 Storage calculator [343](#)

R

Recording [192](#)
 4K / UHD [186](#)
 Multi view [193](#)
 Single channel view [196](#)
 Record Mode [94](#), [99](#)
 Insert Baseband [94](#)
 Normal [94](#)
 Pause [94](#), [99](#)
 Pause & Seek in File [94](#), [101](#), [103](#)
 Remote control [179](#), [228](#)
 Reset system [179](#), [275](#)
 Restart [179](#)
 Restore factory image [275](#)
 RS-422 [50](#), [228](#), [229](#), [230](#)
 RS-422 pin-outs [233](#)
 RX3G
 Back panel [49](#)
 eSATA [48](#), [50](#)
 Front panel [47](#)
 Intro [33](#)
 Power button [48](#)
 RS-422 [50](#)

S

Sample EDL [178](#)
 Scenes list [133](#)
 Scopes [93](#)
 Secure erase [259](#)
 Settings - import & export [85](#)
 Setup [75](#), [99](#), [101](#), [103](#), [105](#), [108](#), [112](#), [113](#)
 Input tab [137](#)
 Master tab [144](#)
 Audio delay [143](#)
 Audio routing [159](#)
 Overview tab [114](#)

Path & file name	123	Update	262
Project manager	118	Bluefish	273
Proxy tab	152	Create a restore point	262
Audio routing	159	Create new USB key	277
Shortcuts	77	Installation	266
Shutdown	179	Update USB key	276
Signal Generator	190		
Single channel view	75, 93	V	
Playback	207	V1 Signal Generator	190
Recording	196	VC-5 {Cineform}	305
SSDs		Vectorscope	95
Caching settings	253		
Ejecting	69	W	
Error Checking	257	Waveform	95
Formating	252	Wildcards	131
HotSwap!	84	Windows Remote Desktop	228, 237
Initializing	244	Wrapper	283
Installing	243	Master	147
Secure erase	259	Proxy	154
Staggered record	179		
Stop record	179	X	
Storage		XDCAMHD	305
Calculator	343		
General info	41	Z	
Network	45	ZX	
SSDs	42	Back panel	65
USB & eSATA	43	Front panel	63
Sub-scenes list	136	General info	35
Super out. See Character overlay			
System mode	185		
T			
TC & Automation tab	163, 166		
EDL editor	174		
TC offsets	173		
TC offsets	173		
TCP port 3811	236		
Timecode	163, 166		
Touchscreen calibration	241		
Touch transport	205		
U			
UHD / 4K	186		
Uncompressed	305		