



D.O.TEC® ANDIAMO 2

Hardware Guide



Version 1.7

Copyright

All rights reserved. Permission to reprint or electronically reproduce any document or graphic in whole or in part for any reason is expressly prohibited, unless prior written consent is obtained from the DirectOut GmbH.

All trademarks and registered trademarks belong to their respective owners. It cannot be guaranteed that all product names, products, trademarks, requisitions, regulations, guidelines, specifications and norms are free from trade mark rights of third parties.

All entries in this document have been thoroughly checked; however no guarantee for correctness can be given.

DirectOut GmbH cannot be held responsible for any misleading or incorrect information provided throughout this manual.

DirectOut GmbH reserves the right to change specifications at any time without notice.

DirectOut Technologies® and D.O.TEC® are registered trademarks of the DirectOut GmbH.

© DirectOut GmbH, 2013

Table of contents

ABOUT THIS MANUAL	5
How to Use This Manual	5
Conventions	5
CHAPTER 1: OVERVIEW	6
Introduction	6
Feature Summary	6
Applications	7
CHAPTER 2: LEGAL ISSUES & FACTS	8
Before Installing This Device	8
Defective Parts/Modules	8
First Aid (in case of electric shock)	9
Updates	10
Intended Operation	10
Conditions of Warranty	10
Conformity & Certificates	11
Contact	11
Contents	12
Accessories	12
CHAPTER 3: INSTALLATION	14
Installing the Device	14
CHAPTER 4: OPERATION	18
Introduction	18
Global Control	18
Menu Control	19
Clocking	20
Clocking continued - MADI STATE	21
Sample Rates	22
Level Settings	23
Level Meters	24
Output Format	25
Bank Selection / Signal Routing	26
MADI / Word clock / USB	28
Analog Input / Output	29
Delay Compensation	30
CHAPTER 5: MENU NAVIGATION	32
CHAPTER 6: TROUBLESHOOTING AND MAINTENANCE	35
Troubleshooting	35
Maintenance	35
CHAPTER 7: TECHNICAL DATA	36

APPENDIX A: WIRING DSUB-25	39
DSUB-25 - analog (female)	39
APPENDIX B: CONFIGURATION EXAMPLES	40
INDEX	41

About This Manual

How to Use This Manual

This manual guides you through the installation and operation of the ANDIAMO 2.

Use the Table of Contents at the beginning of the manual or Index Directory at the end of the document to locate help on a particular topic.

You can access more information and latest news by visiting on the DirectOut website at www.directout.eu.

Conventions

The following symbols are used to draw your attention to:

Tips – indicate useful tips and shortcuts.



Tip

Notes – are used for important points of clarification or cross references.



Note

Warning

Warnings – alert you when an action should always be observed.




Warning

CHAPTER 1: Overview

Introduction

Welcome to the ANDIAMO 2, D.O.TEC's s high quality AD/DA converter for MADI signals.

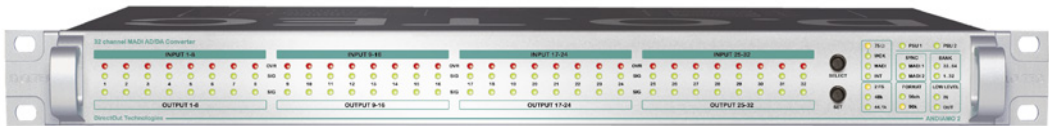

The ANDIAMO 2 provides two MADI inputs and outputs and 32 channels analog inputs and outputs. With one RU height, two redundant power supplies and excellent sounding converters the device offers best and safe audio quality at a minimal need of rackspace.



ANDIAMO 2 - SC / SC version (optical / optical)



ANDIAMO 2 - BNC /SC version (coaxial / optical)

Feature Summary

MADI Ports	2 x MADI input and output 2 x SC multi-mode connectors (SC/SC) or 1 x SC multi-mode connectors & 1 x coaxial BNC connectors (BNC/SC)
MADI Formats	56/64 channel, 48k/96k Frame, S/MUX 2
Sample Rates	44.1, 48, 88.2, 96 kHz +/-12.5%
Clock Inputs	1 x Word clock coaxial BNC (75 Ω termination switchable) This input also accepts an AES3 frame (AES11).


Clock Output	1 x Word clock coaxial BNC
Line Inputs	4 x DSUB-25 (8 channels each)
Line Outputs	4 x DSUB-25 (8 channels each)
USB Port	USB 2.0 port for firmware updates and remote control.
Power Supply	This device is equipped with two wide range power supplies (84 V to 264 V AC / 47 Hz to 63 Hz / safety class 1).

Applications

ANDIAMO 2 can be used for conversion, monitoring and recording of analog signals.

Typical applications include:

- monitoring digital audio
- recording line signals
- conversion of a high number of channels from analog to digital and vice versa
- redundant recording using both MADI I/Os
- format conversion of MADI signals
- ...

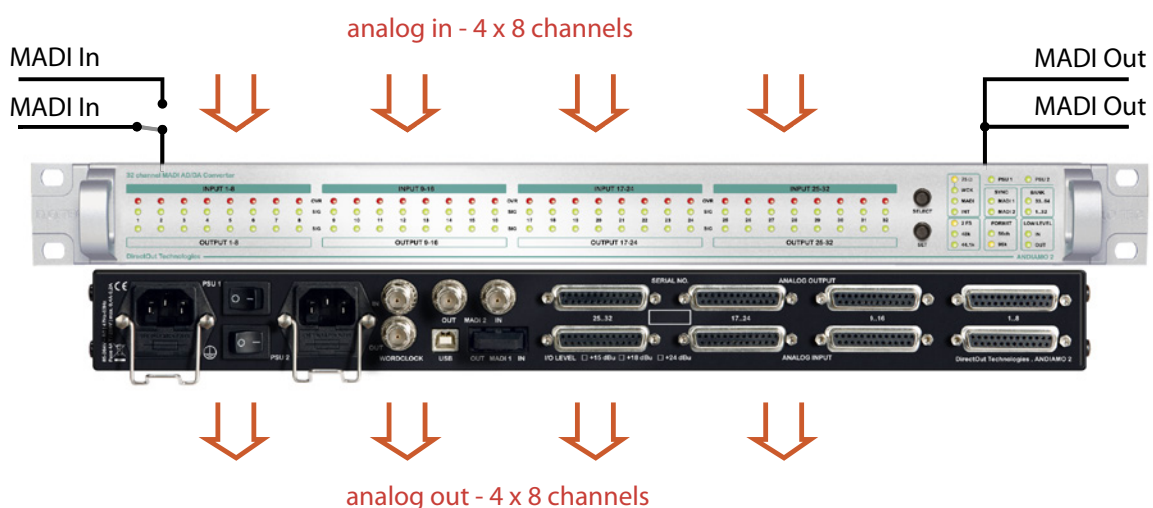

CHAPTER 2: Legal issues & facts

Before Installing This Device



Warning

Warning

Please read and observe **ALL** of the following notes before installing this product:

- Check the hardware device for transport damage.
- Any devices showing signs of mechanical damage or damage from the spillage of liquids **MUST NOT** be connected to the mains supply, or disconnected from the mains immediately by pulling out the power lead.
- All devices **MUST** be grounded. The device is grounded through its IEC power connections.
- All devices **MUST** be connected to the mains using the three-cord power leads supplied with the system. Only supply electrical interfaces with the voltages and signals described in these instructions.
- Do **NOT** use the device at extreme temperatures. Proper operation can only be guaranteed between temperatures of 5° C and 45° C and a maximum relative humidity of 80 %, non-condensing.
- The cabinet of the device will heat up. **DO NOT** place the device close to heating sources (e.g. heaters). Observe the environmental conditions.

Defective Parts/Modules



Warning

Warning

This device contains no user-serviceable parts. Therefore do NOT open the device.

In the event of a hardware defect, please send the device to your D.O.TEC® representative together with a detailed description of the fault.

We would like to remind you to please check carefully whether the failure is caused by erroneous configuration, operation or connection before sending parts for repair. See „*CHAPTER 6: Troubleshooting and Maintenance*“ on page 35 for assistance with troubleshooting.

First Aid (in case of electric shock)

Warning



Warning

- **DO NOT** touch the person or his/her clothing before power is turned off, otherwise you risk sustaining an electric shock yourself.
- Separate the person as quickly as possible from the electric power source as follows:
 - ✓ Switch off the equipment.
 - ✓ Unplug or disconnect the mains cable.
- Move the person away from the power source by using dry insulating material (such as wood or plastic).
- If the person is unconscious:
 - ✓ Check their pulse and reanimate if their respiration is poor.
 - ✓ Lay the body down and turn it to one side. Call for a doctor immediately.
- Having sustained an electric shock, **ALWAYS** consult a doctor.

Updates

D.O.TEC® products are continually in development, and therefore the information in this manual may be superseded by new releases. To access the latest documentation, please visit the DirectOut website: www.directout.eu.

This guide refers to firmware version 3.4.

Intended Operation

The ANDIAMO 2 is designed for conversion of audio signals from analog to digital and vice versa. In this context digital audio refers to a MADI signal (AES10).



Warning

Warning

No compensation can be claimed for damages caused by operation of this unit other than for the intended use described above. Consecutive damages are also excluded explicitly. The general terms and conditions of business of DirectOut GmbH are applied.

Conditions of Warranty

This unit has been designed and examined carefully by the manufacturer and complies with actual norms and directives.

Warranty is granted by DirectOut GmbH over the period of two years for all components that are essential for proper and intended operation of the device. The date of purchase is applied for this period.



Warning

Warning

All claims of warranty will expire once the device has been opened or modified, or if instructions and warnings were ignored.

For warranty claims please contact the dealer where your device was acquired.

Conformity & Certificates

CE

This device complies with the basic requests of applicable EU guidelines. The appropriate procedure for approval has been carried out.

RoHS

(Restriction of the use of certain Hazardous Substances)

This device was constructed fulfilling the directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment 2002/95/EC.

WEEE

(Directive on Waste Electrical and Electronic Equipment)

Due to the directive 2002/96/EC for waste disposal this device must be recycled.

For correct recycling please dispatch the device to:

IMM Elektronik GmbH,
Leipziger Strasse 32
09648 Mittweida
Germany

Only stamped parcels will be accepted!

WEEE-Reg.-No. DE 93924963



Contact

Sales:

DirectOut GmbH, Leipziger Strasse 32, 09648 Mittweida, Germany

Phone: +49 (0)3727 6205-333 // Fax: +49 (0)3727 6205-56

www.directout.eu

Manufacturer:

IMM Elektronik GmbH, Leipziger Strasse 32, 09648 Mittweida, Germany

Phone: +49 (0)3727 6205-0 // Fax: +49 (0)3727 6205-56

www.imm-gruppe.de

Contents

The contents of your ANDIAMO 2 package should include:

- 1 x ANDIAMO 2 (19", 1 RU)
- 2 x power chord
- 2 x fixing unit for power plug
- 1 x Hardware Guide

To complete the delivery please download from the DirectOut website:

- Software Guide ANDIAMO Remote
- D.O.TEC[®] USB Serial driver
- 'ANDIAMO Remote' application

<http://www.directout.eu/de/support/downloads/andiamo.html>


Accessories

D.O.TEC[®] BREAKOUT series


The BREAKOUT series are adaptor boxes - available in different variants - to widen the application range of the D.O.TEC[®] ANDIAMO series.

Each box is equipped with XLR connectors at the front panel (AESid uses BNC connectors) and DSUB-25 connectors at the rear panel. Audio signals are carried passively between front and rear panel.


Three different models for analog signals are available:

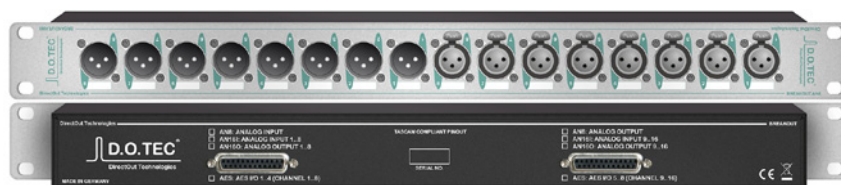

BREAKOUT.AN8 - analog input / output, 8 channels

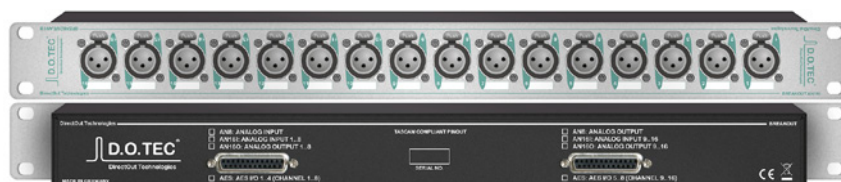

BREAKOUT.AN16I - analog input, 16 channels

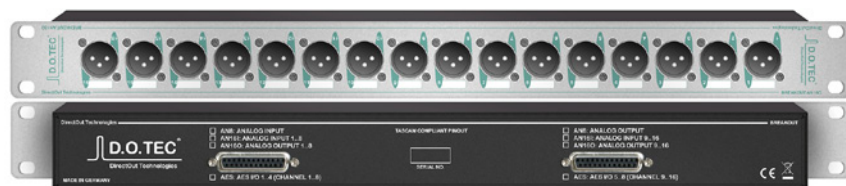

BREAKOUT.AN16O - analog output, 16 channels

CHAPTER 3: Installation

Installing the Device

1. Open the packaging and check that the contents have been delivered complete and undamaged.
2. Fix the device in a 19" frame with four screws, or place it on a non-slip horizontal surface.



Warning

Warning

Avoid damage from condensation by waiting for the device to adapt to the environmental temperature. Proper operation can only be guaranteed between temperatures of 5° C and 45° C and a maximum relative humidity of 80%, non-condensing.

Ensure that the unit has sufficient air circulation for cooling.

3. Remove the protective cap from the optical MADi port(s) before use.



Note

Retain the protective cap if the optical port is unused. This will protect against soiling which can lead to malfunction.

4. Connect signal cable for the MADi signals.



ANDIAMO 2 - SC / SC version (optical / optical)



ANDIAMO 2 - BNC / SC version (coaxial / optical)

5. Connect the signal cables¹ for the analog audio signals to the DSUB-25 connectors (TASCAM pinout - see page 39).



Warning



Warning

Do **not** connect voltage sources to the analog outputs. This may cause damage at the output stages. Observe the technical specifications - see „Chapter 7: Technical Data“ on page 36.

6. Optional: Connect an USB cable to the USB port for remote control or firmware updates. This requires the D.O.TEC® USB driver (Windows) being installed first. The driver and the installation instructions are available at www.directout.eu.

Link: <http://www.directout.eu/en/support/downloads/andiamo.html>

7. Using the power cords provided connect both PSUs to a matching power supply:



Warning



Warning

This device **MUST** be connected to the mains using the three-cord power leads supplied with the system. Only supply the voltages and signals indicated (84 V – 264 V).

This device may operate with only one power supply. To provide power supply redundancy, it is recommended to connect both PSU 1 and PSU 2 to independent power supplies with separate fuses.




Note

¹ signal cables are not included in delivery

8. Turn on the power switch and check the status of PSUs on the front panel:



The first seconds after switch-on the actual firmware is indicated by the lower metering panel - e.g. firmware version 3.4.

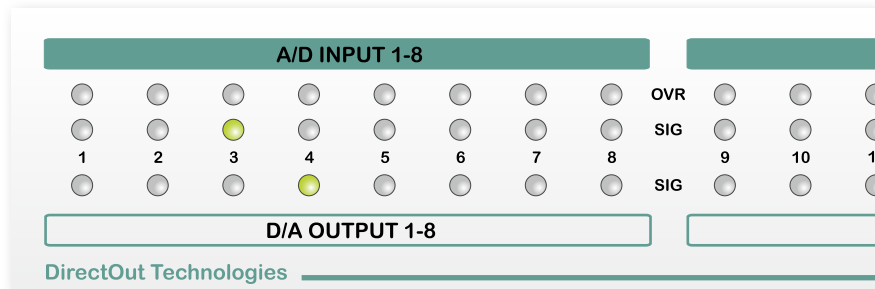

Tip

Use the [D.O.TEC® Release Map](http://www.directout.eu/upload/dokumente/dotec_release_map.pdf) to match your D.O.TEC® device with the latest firmware or software release.

Link: http://www.directout.eu/upload/dokumente/dotec_release_map.pdf



Note

To update the firmware an installed D.O.TEC® USB Serial driver (Windows) and the D.O.TEC® Update Tool are necessary. The software and the installation instructions are available at www.directout.eu.

Link: <http://www.directout.eu/en/support/downloads/andiamo.html>



Tip

Keep any packaging in order to protect the device should it need to be dispatched for service.

9. Installation of D.O.TEC® USB Serial driver

- download the D.O.TEC® USB Serial driver
- download the 'Installation Guide for USB Control'

Link: <http://www.directout.eu/en/support/downloads/andiamo.html>

- follow the installation instructions in the 'Installation Guide for USB Control'

10. Installation of 'ANDIAMO Remote'

- download the 'Software Guide ANDIAMO Remote'
- download the 'ANDIAMO Remote' application

Link: <http://www.directout.eu/en/support/downloads/andiamo.html>

- follow the installation instructions in the 'Software Guide ANDIAMO 2 REMOTE'

11. Start the 'ANDIAMO Remote' application

- Check selected COM port or MIDI I/O
- Click 'CONNECT'

CHAPTER 4: Operation

Introduction

This chapter describes the basic operation of the device. Note that throughout this manual, the abbreviation FS refers to sample rate or sample frequency. So, when dealing with scaling factors, the following sample rates can be written as:

- 44.1 kHz = 1 FS; 88.2 kHz = 2 FS

or

- 48 kHz = 1 FS; 96 kHz = 2 FS



Global Control


The control on the right of the front panel indicates the power supply. Power switches are on the back panel:

Power	2 Switches Enable / disable power supply.
PSU 1 & PSU 2	2 LEDs (green): indicate the status of both power supply units LED OFF = Power supply inactive LED ON = Power supply active



Note

The green LEDs (PSU 1 & PSU 2) indicate that a working power supply is connected to the power supply unit. Note that an unlit LED does not guarantee that the device is free of voltage. To ensure that the device is completely disconnected from mains voltage, the power chords must be disconnected.

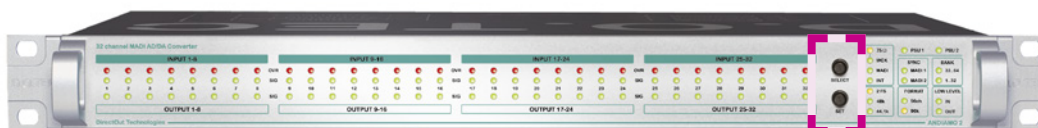

Menu Control

All functions of the converter can be accessed using a simple menu. Two push buttons are used for navigation and settings.

SELECT	Button Press longer than 2 seconds to enter the menu. Press short for navigation in menu mode.
SET	Button Only active in menu mode. Press short to adjust a setting. Press longer than 2 seconds to toggle the Matrix Mode.

When the menu mode is active a LED will blink in one of the sections while the remaining LEDs of this section are glowing weak. This indicates:

- a setting can be adjusted in this section
- the blinking LED(s) is the selected option in this section

After a short period of time the menu mode is exit automatically.
See also „CHAPTER 5: Menu Navigation“ on page 32.

Blinking LEDs are also used to indicate an error (e.g. missing sync). Concentrate on the section where one LED is blinking and the remaining LEDs are glowing weak.



Note

Most settings can be adjusted either locally or via the remote application (ANDIAMO Remote).


A few settings can be accessed via the remote application only:

- configuration of the system fan control
- redundancy mode (only devices with two MADI I/Os)
- routing matrix

The settings are stored inside the device.



Tip

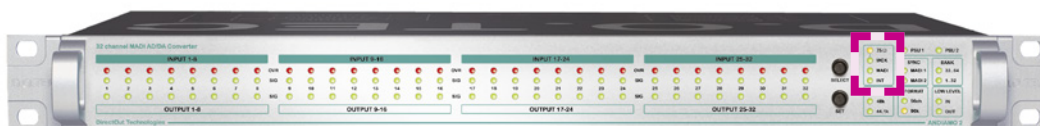


Clocking

The system clock can be set to one of three possible clock sources in the menu (see „CHAPTER 5: Menu Navigation“ on page 32). The LEDs on the front panel inform about selection and sync state¹ of the selected source.

75 Ω	LED (yellow): indicates the termination status of the word clock input LED ON = Termination active LED OFF = Termination inactive
WCK	LED (green): indicates use of word clock as clock source LED ON = Clock source set to word clock LED blinking = Clock source set to word clock <u>and</u> no signal present LED heartbeat = Signal locked but not in sync
MADI	LED (green): indicates use of MADI input (1 or 2) as clock source LED ON = Clock source set to MADI input LED blinking = Clock source set to MADI input <u>and</u> no signal present LED heartbeat = Signal locked but not in sync
INT	LED (green): indicates use of internal clock generator as clock source LED ON = Clock source set to internal clock generator

¹ Lock = a valid signal is detected but its clock does not match with the system reference

Sync = a valid signal is detected and matches with the system reference

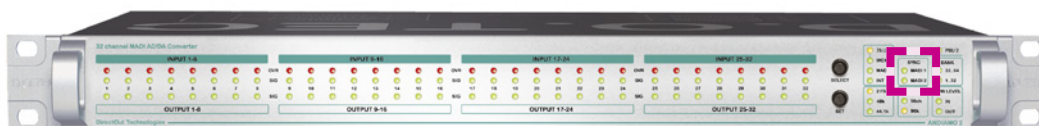

Clocking continued - MADI STATE

Lock and sync states of the two MADI inputs are indicated individually by two LEDs (SYNC MADI 1 / 2). If both MADI inputs are connected, the LED of the unselected input will glow or blink with a reduced intensity (50%).

MADI 1	<p>LED (yellow): indicates the selection state and lock/sync state of MADI input 1</p> <p>LED ON (100%) = MADI input is: locked / in sync / selected</p> <p>LED ON (50%) = MADI input is: locked / in sync / not selected</p> <p>LED blinking (100%) = MADI input is: locked / not in sync / selected</p> <p>LED blinking (50%) = MADI input is: locked / not in sync / not selected</p> <p>LED OFF = no MADI signal is detected</p>
MADI 2	<p>LED (yellow): indicates the selection state and lock/sync state of MADI input 2</p> <p>LED ON (100%) = MADI input is: locked / in sync / selected</p> <p>LED ON (50%) = MADI input is: locked / in sync / not selected</p> <p>LED blinking (100%) = MADI input is: locked / not in sync / selected</p> <p>LED blinking (50%) = MADI input is: locked / not in sync / not selected</p> <p>LED OFF = no MADI signal is detected</p>

The selection of the active MADI port depends on the set redundancy mode of the device. See 'Software Guide ANDIAMO Remote'.


Default setting at initial start 'Standard':

The MADI input that locks first will be selected automatically.

Once the selected input loses its signal, the other input will be selected as signal source, if an input signal is detected there.



Note

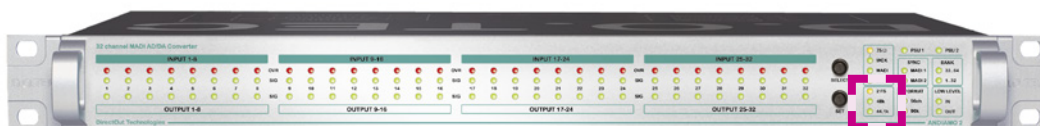

Sample Rates

The scaling factor and the sample rate are indicated by three LEDs.

2 FS	LED (yellow): indicates scaling factor of operation LED ON = Scaling factor of sample rate set to 2 FS LED heartbeat = A 96k Frame signal is detected at the MADi input which forces to 2 FS temporarily.
48k	LED (green): indicates the use of 48 kHz as base sample rate. LED ON = Base sample rate set to 48 kHz
44.1k	LED (green): indicates the use of 44.1 kHz as base sample rate. LED ON = Base sample rate set to 44.1 kHz

With the clock set to internal (INT) the sample rate can be adjusted in the menu. All other clock sources (word clock, MADi) define the base rate automatically.

The scaling factor of the sample rate has to be defined manually when the clock source is set to internal or word clock.

When a MADi signal is used as clock source, the device will switch to 2 FS operation automatically when a 96k Frame signal has been detected. With 48k Frame signals no distinction is possible between 1 FS and 2 FS - so the scaling factor has to be set manually.

Settings depending on clock source:


Clock source	Base rate set	Scaling factor set
INT	manually	manually
WCK	automatically	manually
MADI	automatically	manually*

*) A 96k Frame signal will force scaling factor to 2 FS temporarily.



Note

If the clock source is set to word clock or MADi input no adjustment of the base rate is possible - the measured frequency of the clock source is indicated then.

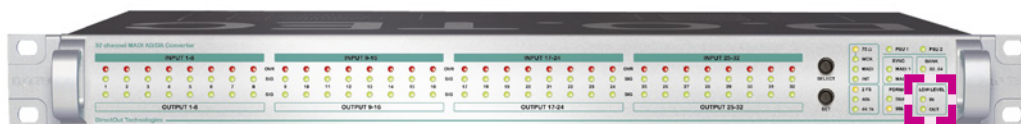

Level Settings

The sensitivity of the AD and DA converters can be switched between two settings (high and low) where the analog level corresponds to 0 dB_{FS}.

Depending on the model of the ANDIAMO 2 the sensitivity levels are different.

Two LEDs inform about the sensitivity that can be adjusted for input and output separately.

IN	LED (green): indicates the adjusted sensitivity of the converter. LED ON = +6 dB _U (+9 dB _U / +15 dB _U) LED OFF = +15 dB _U (+18 dB _U / +24 dB _U)
OUT	LED (green): indicates the adjusted sensitivity of the converter. LED ON = +6 dB _U (+9 dB _U / +15 dB _U) LED OFF = +15 dB _U (+18 dB _U / +24 dB _U)

With the level setting to “low” a digital gain (input) or a digital reduction (output) is applied to adapt the lower analog level (-9 dB).



Note



ANDIAMO 2 - SC / SC version (optical / optical)



ANDIAMO 2 - BNC / SC version (coaxial / optical)

The model of the ANDIAMO 2 is a configure to order option. It is marked at the rear panel of the device.



Level Meters

All 32 channels have individual signal metering each with three LEDs. As the sensitivity of the converters may be varied the trigger threshold of each LED corresponds to the digital scale (dB_{FS}).


OVR	LED (red): indicates an analog input overload LED ON = analog input signal equals to more than $-0.5 \text{ dB}_{\text{FS}}$
SIG (input)	LED (green): indicates signal level of channel input LED ON = analog input signal equals to more than $-80 \text{ dB}_{\text{FS}}$ The light intensity of the LEDs depends on the audio level.
SIG (output)	LED (green): indicates signal level of channel output LED ON = analog output signal equals to more than $-80 \text{ dB}_{\text{FS}}$ The light intensity of the LEDs depends on the audio level.



Output Format

The format of the MADi output signal can be defined - allowing for format conversion of the MADi signal. The output signal status is indicated by two LEDs.

56 ch	<p>LED (green): indicates the channel format (64 ch or 56 ch) of the MADi output signal.</p> <p>LED ON = MADi output is set to 56 (28) channel mode.</p> <p>LED OFF = MADi output is set to 64 (32) channel mode.</p>
96k	<p>LED (yellow): indicates the frame format @2 FS (48k Frame or 96k Frame) of the MADi output signal.</p> <p>LED ON = MADi output is set to 96k Frame</p> <p>LED OFF = MADi output is set to 48k Frame</p> <p>96k Frame is available with 2 FS only.</p>

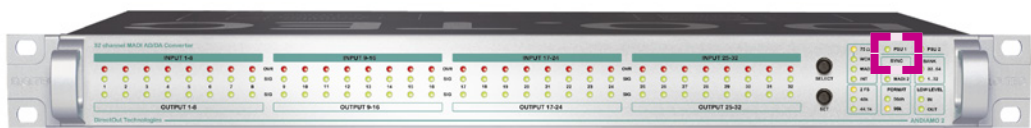

Bank Selection / Signal Routing

The bank selection defines the block of channels in the MADi stream that is fed by the analog inputs. This selection also affects the signal source for the line outputs that are fed by the MADi input signal ('Standard Bank Routing').

The remaining MADi data passes the device unchanged.

The bank selection is indicated by two LEDs. At 2 FS operation a maximum of 32 channels are transmitted in a MADi signal; so there is no selection possible then.

The LEDs for the bank selection are also used to indicate the activation status of the 'Matrix Mode' (see „Matrix Mode“ on page 27) and delay compensation.

33..64	<p>LED (green): indicates the selection of the converted audio channels.</p> <p>LED ON = audio channels 33 to 64 (29 to 56 of a 56 ch signal) are converted</p> <p>LED heartbeat = delay compensation active, audio channels 33 to 64 are converted</p>
1..32	<p>LED (green): indicates the selection of the converted audio channels.</p> <p>LED ON = audio channels 1 to 32 (1 to 28 of a 56 ch signal) are converted.</p> <p>LED heartbeat = delay compensation active, audio channels 1 to 32 are converted</p>



Note

See „Delay Compensation“ on page 30 for more information about daisy-chaining of ANDIAMOs.



Note

If both Bank LEDs are <ON> 'Matrix Mode' is enabled.



Note

If both Bank LEDs <heartbeat> 'Matrix Mode' is enabled and delay compensation is active.

Matrix Mode

Two methods of signal routing are available:

- a) 'Standard Bank Routing' - signal routing of analog and digital I/Os as a whole.
- b) 'Matrix Mode' - individual signal routing of all analog and digital I/Os on a per channel basis.

To setup an individual routing the remote control software (ANDI-AMO Remote) is required. The settings of the routing matrix are stored inside the device. So it is possible to toggle between both routing methods without using the remote control - see '*Software Guide ANDIAMO Remote*'.



ANDIAMO 2 - SC / SC version (optical / optical)



ANDIAMO 2 - BNC / SC version (coaxial / optical)

MADI / Word clock / USB

A word clock signal output provides the system clock that is either derived from word clock input, MADI input or internal clock generator. The MADI ports are used for transmission of 64 audio channels (AES10). The USB port is used for firmware updates and for remote control.

Word clock output	BNC socket (coaxial) System clock output - connect for word clock output signal here.
Word clock input	BNC socket (coaxial) Connect word clock or AES3 DARS (Digital Audio Reference Signal) here.
USB	USB socket (Type B) Connect for firmware updates and remote control here.
MADI 1 IN	SC socket (optical) MADI input (64 ch), connect MADI input signal here
MADI 1 OUT	SC socket (optical) MADI output (64 ch), connect for MADI output signal here
MADI 2 IN	SC socket (optical) or BNC socket (coaxial) MADI input (64 ch), connect MADI input signal here
MADI 2 OUT	SC socket (optical) or BNC socket (coaxial) MADI output (64 ch), connect MADI for output signal here



Note

Both MADI outputs always work in parallel and carry the same signal.



Analog Input / Output

Eight DSUB-25 ports (4 x input / 4 x output) are used for transmission of the analog audio signals. Each port transmits eight audio channels. TASCAM¹ pinout is used - see „Appendix A: Wiring DSUB-25“ on page 39 for wiring sketch.

Analog Input (1-8)	DSUB-25 Port Analog audio input - connect audio channels 1-8 here
Analog Input (9-16)	DSUB-25 Port Analog audio input - connect audio channels 9-16 here
Analog Input (17-24)	DSUB-25 Port Analog audio input - connect audio channels 17-24 here
Analog Input (25-32)	DSUB-25 Port Analog audio input - connect audio channels 25-32 here
Analog Output (1-8)	DSUB-25 Port Analog audio output - connect audio channels 1-8 here
Analog Output (9-16)	DSUB-25 Port Analog audio output - connect audio channels 9-16 here
Analog Output (17-24)	DSUB-25 Port Analog audio output - connect audio channels 17-24 here
Analog Output (25-32)	DSUB-25 Port Analog audio output - connect audio channels 25-32 here

Warning

Do **not** connect voltage sources to the analog outputs. This may cause damage at the output stages. Observe the technical specifications - see „Chapter 7: Technical Data“ on page 36.



Warning

¹ TASCAM is a registered trademark of TEAC corporation.


Delay Compensation

There is a delay of four samples between MADI input and output. For conversion of all 64 channels (@ 1 FS) of a MADI signal two ANDIAMOs may be daisy-chained. To ensure phase locked operation of all audio channels the delay between two ANDIAMOs will be compensated then.

Delay compensation becomes active, if an ANDIAMO 'sees' another ANDIAMO at its input. The 'second' ANDIAMO will switch to ID 02. Indication of ID 2: LED <bank selection> heartbeat (see „Bank Selection / Signal Routing“ on page 26).

Delay compensation:

	Δt A/D	Δt D/A
ID 01	0	+4 samples
ID 02	+4 samples	0

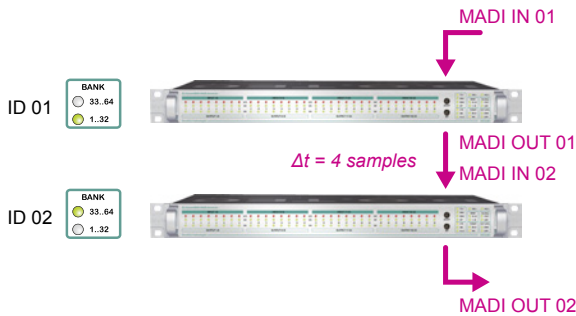

Two ANDIAMOs cascaded



Note

To ensure proper detection for delay compensation no other device must be connected in between two ANDIAMOs.


'Digital Snake'

Four ANDIAMOs may be cascaded to build a 'digital snake'; i.e. transmission of 64 audio channels from location 'a' to location 'b' and vice versa.

In this case all ANDIAMOs are set to ID 02 and **no** delay compensation is applied. The LED bank selection will heartbeat on all devices. To achieve an equal amount of latency relative to all channels it is important to set the bank selection according the order:

'01..32' ⇌ '33..64' ⇌ '01..32' ⇌ '33..64'


The effective latency between location 'a' and location 'b' (and vice versa) will total in eight samples.

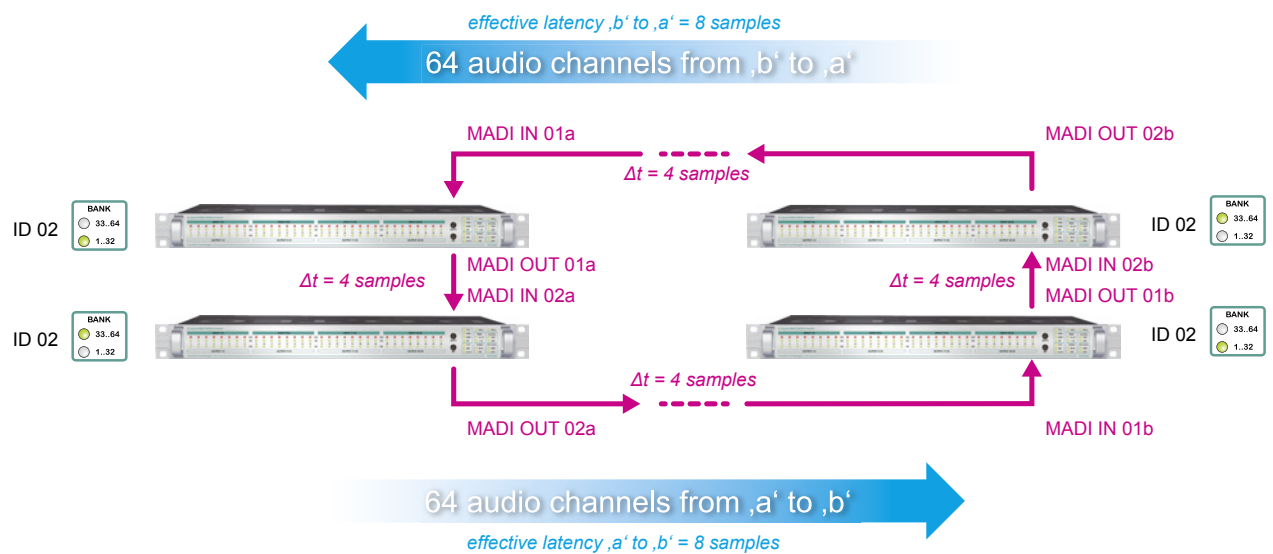

'Digital Snake' - four ANDIAMOs cascaded


CHAPTER 5: Menu Navigation

To setup the device the menu mode has to be entered first. The unit will switch back to idle mode automatically after time out.

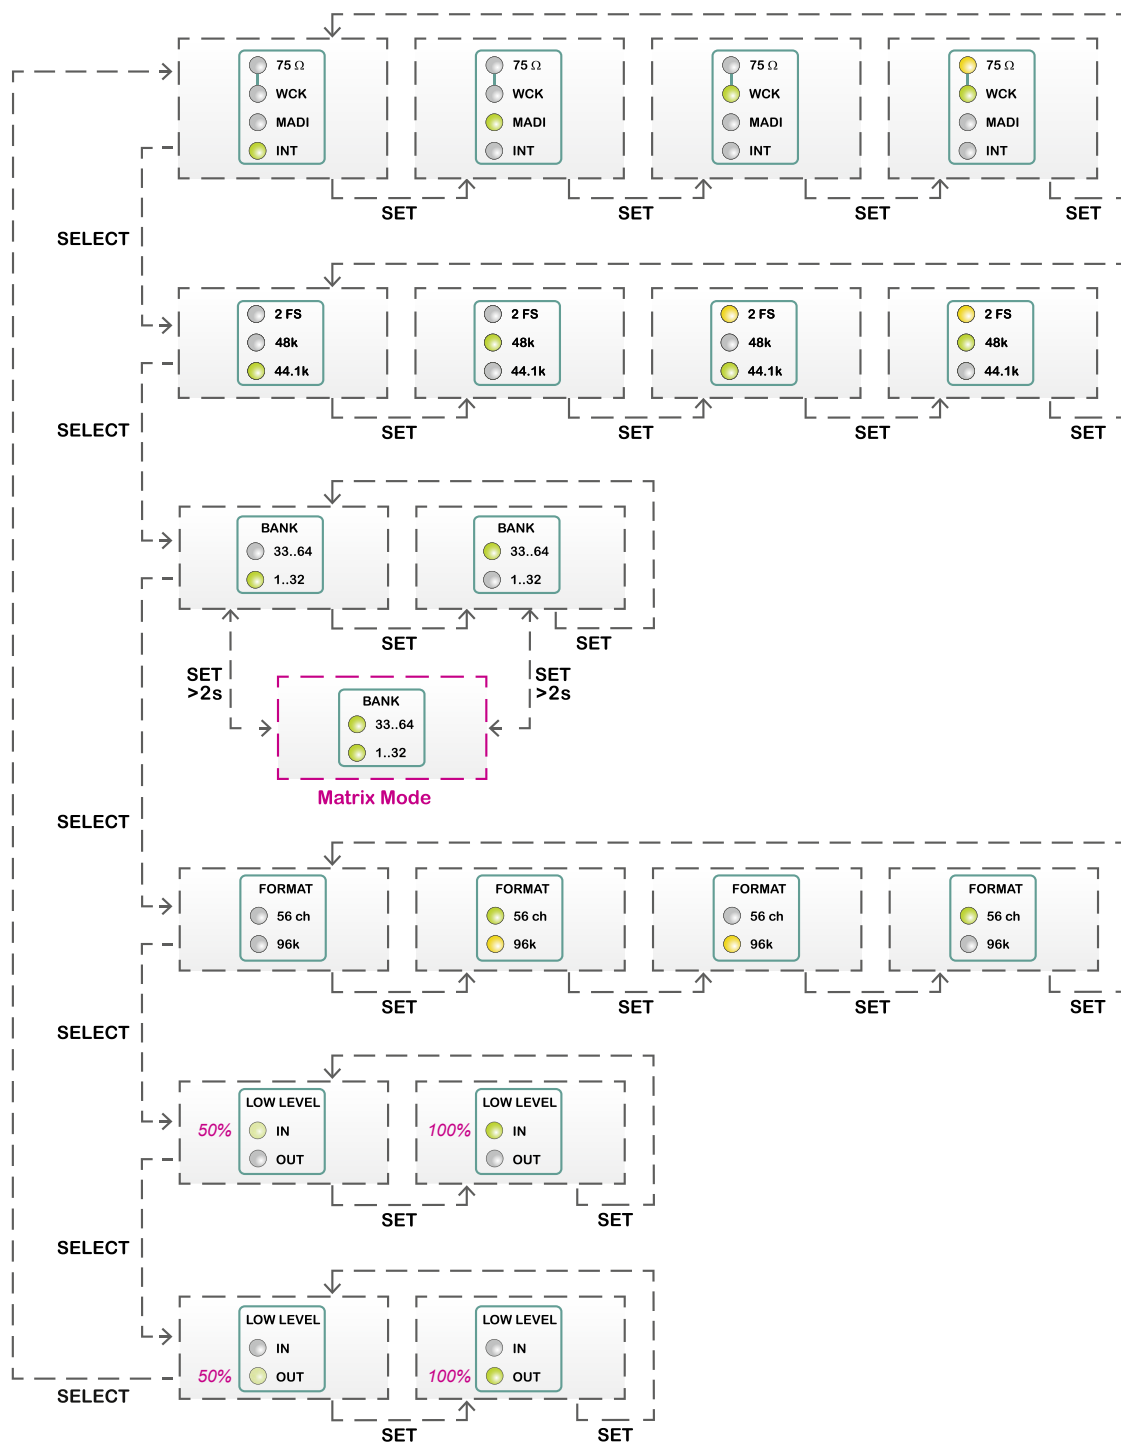

- Press the button <SELECT> longer than two seconds to enter the menu mode
- Press <SELECT> to navigate through the menu-loop.
- Press <SET> to change a setting.

In menu mode the active parameter for adjusting is indicated by a blinking LED. This LED reflects the setting of this parameter.

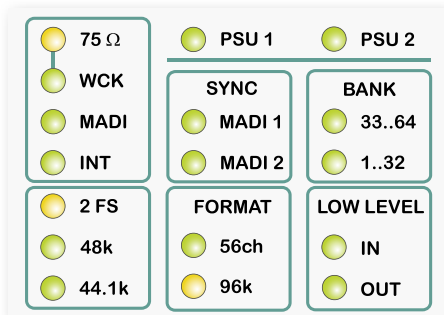

System Settings

Parameter <Clock>

Three different clock sources: word clock, MADI, internal
Internal allows for changing the base sample rate.

Parameter <Sample Rate>

Two base sample rates: 44.1 kHz and 48 kHz

Two scaling factors: 1 FS and 2 FS

The setting of the base sample rate only affects the conversion with the clock source set to INT. If the clock source is set to word clock or MADI input no adjustment is possible - the measured frequency of the clock source is indicated then.

Parameter <Sync> (monitoring only)

Indication of selection and lock/sync state of MADI input 1 and 2.

Parameter <Bank>

Two banks allow for selection of 32 audio channels out of 64 audio channels at a scaling factor of 1 FS. At 2 FS only 32 audio channels are transmitted in a MADI signal. 'Matrix Mode' can be activated or disabled.

Parameter <Format>

The channel format (56 ch or 64 ch) as well as the frame format (48k Frame or 96k Frame) of the MADI output can be adjusted.

This setting does not affect the input signal.

Parameter <Low Level>

The converter offers the ability to change the sensitivity of its analog inputs corresponding to 0 dB_{FS} .

Depending on the model these levels are different:

- Model A: $+15 \text{ dB}_U$ (high) / $+6 \text{ dB}_U$ (low)
- Model B: $+18 \text{ dB}_U$ (high) / $+9 \text{ dB}_U$ (low)
- Model C: $+24 \text{ dB}_U$ (high) / $+15 \text{ dB}_U$ (low)



Note

To indicate the selection state of this parameter the LED blinking will toggle between an intensity of 100% (high) or 50% (low)



Note

Blinking LEDs are also used to indicate an error (e.g. missing sync). Concentrate on the section where one LED is blinking and the remaining LEDs are glowing weak.

CHAPTER 6: Troubleshooting and Maintenance

Troubleshooting

To identify a possible defect with the device please consult the following table.

If the fault cannot be resolved using these instructions, please contact your local D.O.TEC representative or visit support.directout.eu.

Issue	Possible reason	Solution
Device doesn't work.	Power supply is broken.	Check that the power supply switch is on, that the device is connected to the power supply and that the socket is working. Defective fuses must be exchanged by qualified service personal only.
Optical port does not work.	Optic is dirty.	Use an air supply to carefully remove any dust. Never use objects for cleaning.
No signal at the output port.	Connections (input / output) are mixed up.	Check the connections and change the cables if necessary. Check the routing matrix
No signal at the output port.	Signal cable defective.	Exchange the signal cable.
MADI signal at the input is not stable.	Signal source is defective or bad signal condition (Jitter > 1 ns) - e.g. due to exceeded length or bad screening attenuation of signal cable.	Change the source or use appropriate cables (see „Chapter 7: Technical Data“ on page 36).
Clicks in the audiosignal.	Input source is not in sync with clock master of the box.	Check the status of input LED and check clock setting of the connected device.

Maintenance

To clean the device, use a soft, dry cloth. To protect the surface, avoid using cleaning agents.

The device should be disconnected from the power supply during the cleaning process.



Note

Chapter 7: Technical Data

Dimensions

- Width 19" (483 mm)
- Height 1 HE (44.5 mm)
- Depth 10" (254 mm)

Weight

- about 3 kg

Power Consumption

- typical 0.2 A (@84 V) up to max. 0.1 A (@264 V)
- max. 0.4 A (@84 V) up to max. 0.2 A (@264 V)

Power Supply

- 84 V - 264 V AC / 47 Hz - 63 Hz / Safety class 1

Fuses

- Fuse 250 V - 2 A (slow-blow) – 2 fuses per power supply

Environmental Conditions

- Operating temperature +5°C up to +45°C
- Relative humidity: 10% - 80%, non condensing

MADI Port (Version SC/SC or BNC/SC)

- 2 x or 1 x SC socket FDDI (input / output)
- ISO/IEC 9314-3
- Wave length 1310 nm
- Multi-Mode 62.5/125 or 50/125

MADI Port (Version BNC/SC only)

- 2 x BNC socket (input / output)
- Impedance: 75 Ω
- 0.3 V up to 0.6 V (peak to peak)

Sample Rate

- 30 - 50 kHz @1 FS
- 60 - 100 kHz @2 FS

MADI Format (I/O)

- 48k Frame, 96k Frame
- 56 channel, 64 channel
- S/MUX 2

Line Input

- 4 x DSUB-25 (8 analog audio channels each - balanced)

Line Output

- 4 x DSUB-25 (8 analog audio channels each - balanced)

A/D Section

- SNR: -115.5 dB RMS (20 Hz - 20 kHz) / -118 dB(A)
- THD @ -1 dB_{FS}: -113 dB
- Frequency response: -0.15 dB (10 Hz) / -0.15 dB (20 kHz)
- Input impedance: 20 kΩ (balanced) / 10 kΩ (unbalanced)
- Input level (depending on model):

Model / Level	High	Low
Model A	+15 dB _u	+6 dB _u
Model B	+18 dB _u	+9 dB _u
Model C	+24 dB _u	+15 dB _u

D/A Section

- SNR: -113.5 dB RMS (20 Hz - 20 kHz) / -116.5 dB(A)
- THD @ -1 dB_{FS}: -100 dB
- Frequency response: -0.5 dB (10 Hz) / -0.15 dB (20 kHz)
- Output impedance: < 50Ω
- Output level (depending on model):

Model / Level	High	Low	minimum load resistance
Model A	+15 dB _u	+6 dB _u	600 Ω
Model B	+18 dB _u	+9 dB _u	600 Ω
Model C	+24 dB _u	+15 dB _u	2,4 kΩ

The outputs are not servo balanced.



Note

Latency

- about 1 ms (A/D - D/A)
- 4 samples (MADI I/O)

Word Clock

- 1 x BNC socket (75 Ω impedance) - input
- 1 x BNC socket (75 Ω impedance) - output
- WCLK signal or AES3id signal
- Termination 75 Ω switchable

USB


- 1 x USB socket (Type B)
- for firmware updates and remote control

This page is left blank intentionally.

Appendix A: Wiring DSUB-25

For the transmission of the analog audio signals DSUB-25 ports are used. As the sketch shows TASCAM¹ pinout is applied.


DSUB-25 - analog (female)

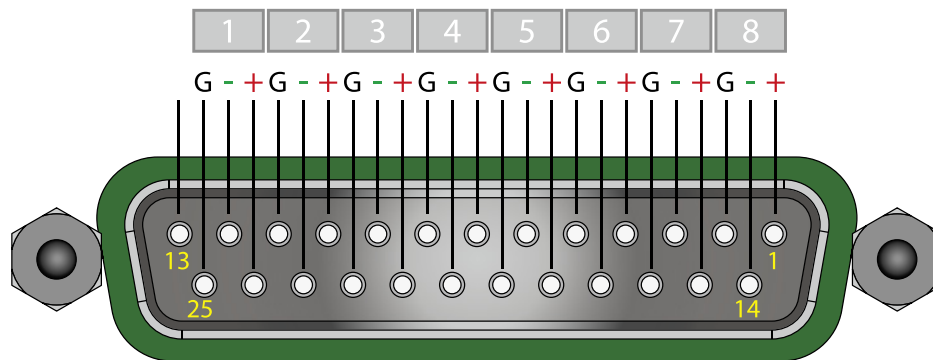

¹ TASCAM is a registered trademark of TEAC corporation.


Appendix B: Configuration Examples

Example 1:

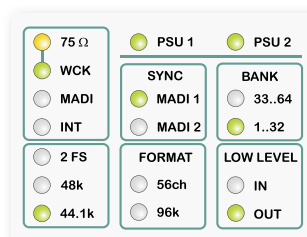

Clock source is 'word clock' with termination enabled. Conversion of channels 01-32. MADI input 1 is selected and in sync. Sample rate is 44.1 kHz and the analog reference levels are set to 'high' for the input and to 'low' (-9 dB) for the output.

Example 2:

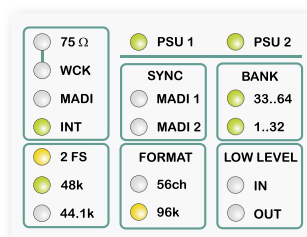


Clock source is set to internal clock generator. Conversion of channels 01-32 (i.e. all channels)*. No MADI input signal detected. Matrix Mode is active.

Sample rate is 96 kHz and the frame mode is set to 96 kFrame at the MADI output. The analog reference levels are set to 'high'.

*) As the scaling factor is set to 2 FS, the number of available channels in the MADI signal is reduced to 32 channels.

Example 3:

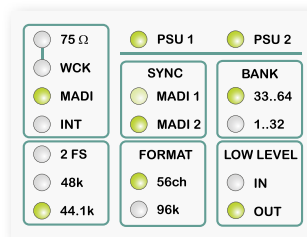

Clock source is the MADI input signal.

Conversion of channels 33-64 (D/A) and channels 33-56 (A/D)*. Both MADI inputs are in sync, MADI 2 is selected.

Sample rate is 44,1 kHz. The MADI output channel format is set to '56 ch'. So the MADI output signal feeds 56 channels only.

The analog reference levels are set to 'high' for the input and to 'low' (-9 dB) for the output.

*) The setting '56 ch' affects the MADI *output* signal only. All 32 MADI *input* channels are fed to the analog outputs.

Index

B

Bank Selection _____ 26

C

Cascading _____ 30

Clocking _____ 20

Conditions of Warranty *see Warranty*

Conformity & Certificates _____ 11

CE..... 11

RoHS 11

WEEE 11

Contact _____ 11

Contents _____ 12

Conventions _____ 5

D

Defective Parts/Modules _____ 8

Delay Compensation _____ 30

Digital Gain _____ 23

Digital Snake _____ 31

Dimensions _____ 36

DSUB-25 _____ 39

E

Environmental Conditions _____ 14, 36

F

Feature Summary _____ 6

Firmware _____ 16

First Aid _____ 9

Frequency Response

analog / digital..... 37

digital / analog..... 37

Fuses _____ 36

I

Impedance

Input..... 37

Output..... 37

Input Redundancy *see Selection MADI Port*

Intended Operation _____ 10

L

Latency

A/D to D/A..... 37

MADI I/O *see Delay Compensation*

Level

Input..... 37

Meters..... 24

Output..... 37

Settings..... 23

Load resistance _____ 37

M

Matrix Mode _____ 27

Menu Control _____ 19

Model _____ 23

P

Pinout *See DSUB-25*

R

Remote Control _____ 12

S

Sample Rates _____ 6

selection - automatically <> manually..... 22

Selection MADI Port _____ 21

SNR

analog / digital..... 37

digital / analog..... 37

Software Remote *see Remote Control*

Support _____ 35

System Settings _____ 33

T

THD

analog / digital..... 37

digital / analog..... 37

Troubleshooting _____ 35

U

Updates _____ 10

W

Warranty _____ 10

WEEE *See Conformity & Certificates: WEEE*

