

User's Guide

3922 496 49931
version 3

OCP 400
OPERATIONAL CONTROL PANEL

Declaration of Conformity

We, Thomson Broadcast Solutions B.V., Kapittelweg 10, 4827 HG Breda, The Netherlands, declare under our sole responsibility that this product is in compliance with the following standards:

- EN60065 : Safety
- EN55103-1 : EMC (Emission)
- EN55103-2 : EMC (Immunity)

following the provisions of:

- a. the Safety Directives 73/23/EEC and 93/68/EEC
- b. the EMC Directives 89/336/EEC and 93/68/EEC

FCC Class A Statement

This product generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause interference to radio communications.

It has been tested and found to comply with the limits for a class A digital device pursuant to part 15 of the FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment.

Operation of this product in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Copyright

Für diese Unterlage behalten wir uns alle Rechte vor (Gemäß DIN 34). Technische Änderungen im Zuge der Weiterentwicklung vorbehalten.

Copying of this document and giving it to others, and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of a patent or the registration of a utility model or design. Liable to technical alterations in the course of further development.

Toute communication ou reproduction de ce document, toute exploitation ou communication de son contenu sont interdites, sauf autorisation expresse. Tout manquement à cette règle est illicite et expose son auteur au versement de dommages et intérêts. Tous nos droits sont réservés pour le cas de la délivrance d'un modèle d'utilité. Sous réserve de modification au cours de l'évolution technique.

OCP400

Operational Control Panel

User's Guide

Contents

Operational Control Panel - OCP 400	2	Setting up the Camera	11
Introduction	2	Camera control	13
Features	2	Setting white balance	13
Using this guide	2	Iris control	13
Location of controls	3	Changing camera video parameters	13
Using the OCP controls	4	Camera status pages	14
Button lights	4	Status page 1	14
Non-standard indication	4	Status page 2	14
Momentary buttons	4	Status page 3	14
Assignable rotary controls	4	Using files	15
Joystick (8)	4	Storing and recalling scene files	15
Lens indicators (7)	4	Partial file recall	15
Panel lock button	4	Recalling standard files	16
Free button	5	Adjusting video parameters	17
Bars button	5	Direct menu access buttons	17
Call button	5	Setting skin detail (contour)	24
Using the menu panel (3)	5	Non-standard indication	24
Checking system status	6	Configuration	25
Setting up the Base Station	7	Control network	25
Setting up the OCP	8	Dimensions	26
Setting the OCP control level	8	Connectors	27
Camera assignment	8	Ethernet Connector - Panel View	27
OCP identification	8	DC input and output sockets	27
Display and button brightness	8	Preview Connector	27
Joystick set-up	8	RS232 Connector	28
Clock	8		
Default values	8		

Operational Control Panel - OCP 400

Introduction

The OCP 400 is a compact operational control panel for LDK type cameras. Control of both HD and SD cameras is supported. The user interface is designed for convenience, with menu accessible functions for detailed set-up and a clear display of settings and values.

The OCP 400 operates within an Ethernet-based camera control network using TCP/IP as communication protocols.

The OCP not only controls all camera functions, it can also be used to change the menu values of the latest LDK base stations. Extensive set-up parameters for the OCP itself, the camera and base station are all available.

Features

- Standard IEEE 802.3 10/100 Mb Ethernet
- IP connectivity
- Off-the-shelf IT-network infrastructure
- Communicates with other Thomson Grass Valley products (e.g. NetConfig)
- Remote Diagnostics
- Software upgradable
- Improved ergonomics and large flexibility
- Comfortable, slimline and clean design
- Hard style buttons
- Menu display for detailed setup

Using this guide

The OCP 400 can control many different types of camera. This guide includes all possible menu items and functions. Depending on the type of camera to which the OCP is connected, not all of these items and functions may be available. The values available are also camera dependent. The menu system only displays the relevant items.

In the tables on the following pages that list menu items, the **Level** column indicates the control level at which an item is displayed:

- An **S** (simple) indicates an item that is always shown.
- A **B** (basic) indicates items that are shown in addition to simple items when the control level is set to basic.
- An **F** (full) indicates items that are shown in addition to basic and simple items when the control level is set to full.

Location of controls

Camera name

- displays the number of the connected camera.

Tally lights

- red lights indicate that camera signal is on air.
- yellow lights indicate that camera signal is being recorded.

Video parameter buttons

- skin menu
- gamma menu
- knee menu
- color balance menu
- black menu
- flare menu
- exposure time menu
- gain menu
- filter menu
- detail (contour) menu

Free button

- allows analogue controls to be repositioned without changing values.

Preview button

- push to see a selected camera signal on a preview monitor.
- press simultaneously with the preview knob for six seconds to reset the OCP.

Card slot

- use camera cards to store and recall scene files (future use only).

Push buttons to

- lock the panel
- start white balance
- display colour bars/sawtooth
- call camera operator
- open files menu
- open standard files menu
- switch automatic iris
- open the setup menu

Menu panel

- use keys to navigate through display.

Assignable control

- varies the value of the function selected in the menu.

R, G and B controls for

- gain
- gamma
- skin
(relevant indicator lights)

R, G and B controls for


- black level
- flare
- skin
(relevant indicator lights)

Lens indicators

- displays the iris value or the master black value.
- **Extender** lights when lens extender is in use.

Iris / Master black control / Preview

- move the stick up and down to change the iris opening.
- turn the lower part of the knob to vary the master black level.
- push the top of the knob down to preview a camera signal.

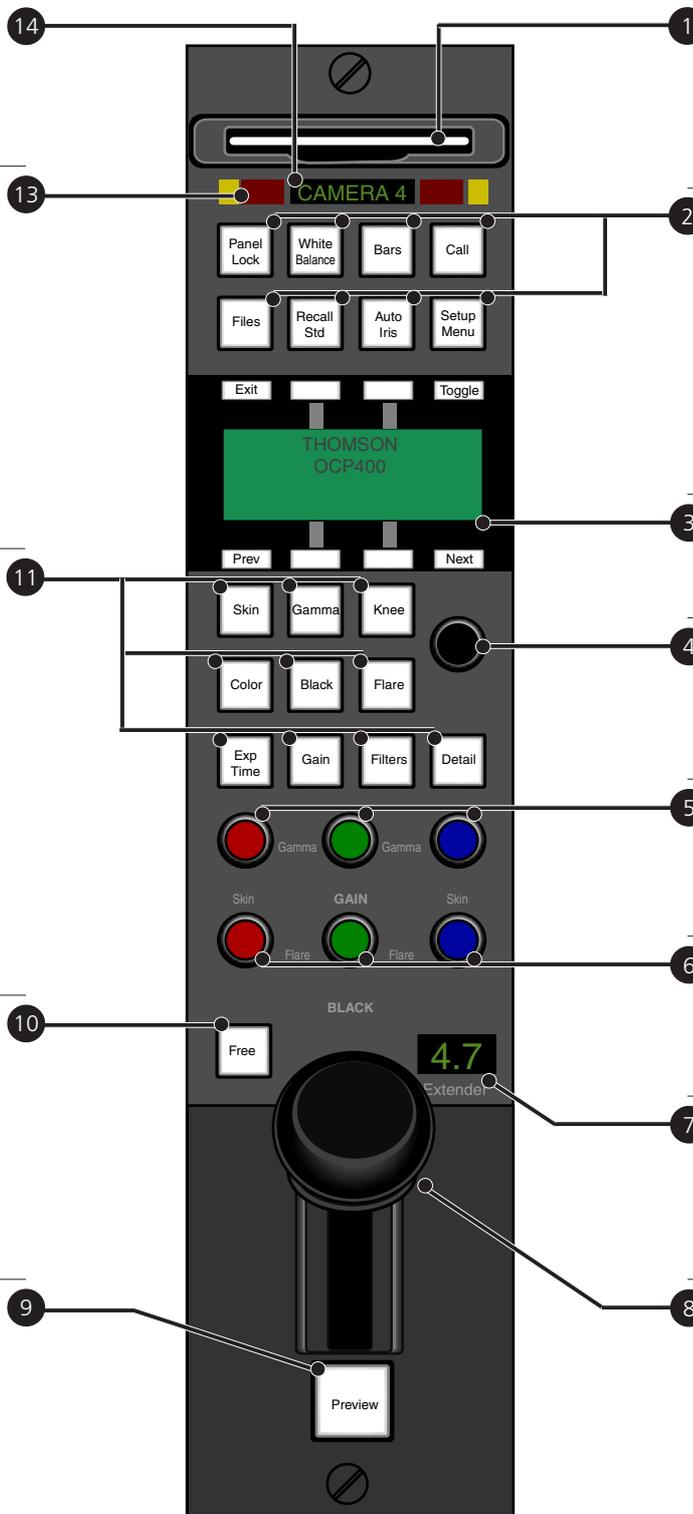

Using the OCP controls

Button lights

When the OCP is powered its buttons are illuminated. The normal colour of a button is dim green. The light shines brighter when a button is selected. You can set the illumination levels in the OCP set-up menu.

Non-standard indication

When a value for one of the video parameters is changed by the user its status will become 'non-standard'. The button for its function group will lit up bright yellow when it is selected and dim orange when it is not. A changed value is indicated by a *-symbol in the text-display.

All changes are relative to the user's reference settings which are the last stored OR recalled settings. By recalling (full or partial) or storing a scene file all non-standard indications are reset. You can find more information about file handling in the section 'Using files' of this guide.

Note

Analogue values are being regarded as *changed* when they vary more than 10% of their reference.

Note

Functions that are blocked or disabled by another function OR that are not part of the current OCP function set (simple, basic of fill) will never be indicated 'non-standard' even if they are changed.

Momentary buttons

Two buttons on the OCP – the **Free** button and the **Preview** button – are momentary buttons. These type of buttons only operate as long as they are held down. The **Files** button operates both selective and momentary.

Assignable rotary controls

The single assignable rotary control (4) varies the value of the function selected in the display. When no function is selected, this control varies Detail.

The upper Red, Green and Blue assignable rotary controls (5) vary either:

- the gain levels of the red, green and blue signals individually (default),
- the gamma levels of the red, green and blue signals individually, or
- the skin contour colours.

The function selected for adjustment and its value is shown in the menu display and the relevant indicators light.

The lower Red, Green and Blue assignable rotary controls (6) vary either:


- the black levels of the red, green and blue signals individually,
- the flare levels of the red, green and blue signals individually, or

- the skin contour colour width.

The function selected for adjustment and its value is shown in the menu display and the relevant indicators light. Black level or Flare can be set as default.

Joystick (8)

This three-in-one control is used to vary the master black level, to control the iris and to preview the connected camera signal on a preview monitor.

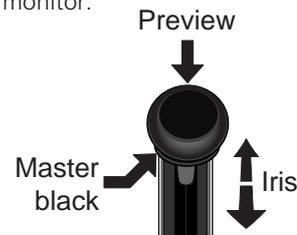


- Press the top of the knob to get a preview of the connected camera signal.
- Turn the lower knob to vary the master black level.
- Move the joystick up and down to open and close the iris. The joystick direction, range and sensitivity can be set in the OCP setup menu.

Lens indicators (7)

The display shows the current F-number of the iris. When the master black is changed, or when the **Free** button is pressed, the value of the master black level is displayed for five seconds.

The **Extender** indication lights when the range extender function of the lens is selected.

Panel lock button

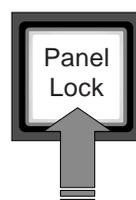

Push the **Panel lock** button to lock the panel of the OCP.

- The **Panel lock** button lights when the panel is locked (on).

When off, all functions of the OCP can be used. When on, limited control is possible by using the **Free** button.

Free button




Hold down the **Free** button (10) to change the position of all the rotary controls without affecting the value of the function assigned to them. Use this button to position the Joystick without affecting the value of the iris or the master black.

The **Free** button is also used together with the **Panel Lock** button to control access to panel functions. When the panel lock function is selected, the **Free** button also lights. With panel lock engaged, push the **Free** button to allow access to the following controls:

- Joystick
- Assignable rotary controls
- Preview button


Bars button

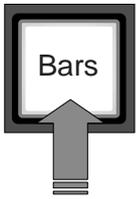

Push the **Bars** button to switch on the colour bar test signal in the connected camera. Push the button again to select a sawtooth test signal.

- The button lights (green) when Bars are on.
- The button lights (yellow) when the sawtooth test signal is on.

Call button

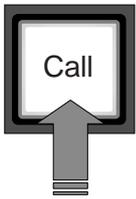


Push the **Call** button to send a signal to the connected camera calling for attention.

- The **Call** button lights when it is activated or when a call is received from another system part.
- If active, push again to switch off.

(A buzzer signal can be associated with the call signal.)

Using the menu panel (3)

The menu panel contains a display and eight buttons for selecting items in the menu system.

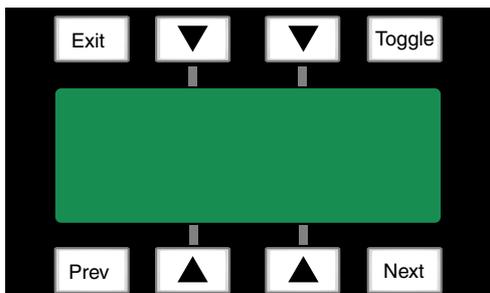

The main operational tasks of the menu panel are:

- to provide access to parameters for setting up the OCP, the base station (BS) and the camera.
- to display function menus and values when a direct video parameter button is pushed.
- to display the status of a set of functions.

Menu arrow buttons

The function of the four arrow buttons in the centre of the menu panel is determined by the item appearing next to them on the display. Push the button associated with the item displayed to select this item.

Toggle button

This button is for future use.

Previous / Next button

Push these buttons to move up and down through the various menu pages.

Exit button

Push this button to exit the current menu and return to the status page.

Illumination

The menu panel buttons are illuminated to indicate their state:

- not lit: no function for that button
- low light: function available; push to change or to assign to rotary control.
- bright light: function is assigned to rotary control.

Opening menu pages

There are several ways of opening a menu page. You can use:

- the **Setup** button
- the **Files** button
- the **Recall Std.** button
- the video parameter buttons (11)


Push an activated button to exit that particular menu function.

Checking system status




To check that BS (base station) and camera are connected correctly go to the **Diag** item of the set-up menu.

Push the **Setup Menu** button to open the menu.

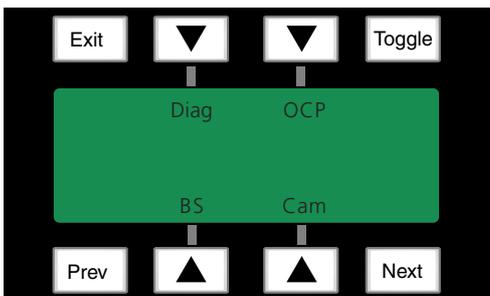


Push the selection button to choose the **Diag** submenu

Selections	Function	Level	Possible values
Diag	Diagnostic menu	S	
OCP	OCP setup menu	S	
BS	Base station setup menu	S	
Cam	Camera setup menu	S	

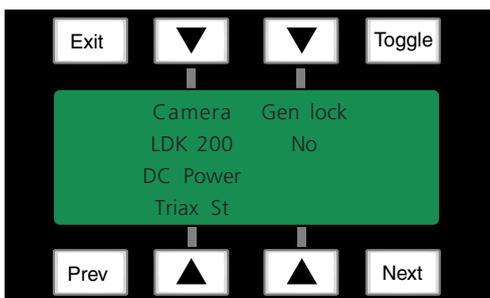


The Diagnose menu appears

Selections	Function	Level	Possible values
Camera	Camera Connection	S	No camera, [Camera Type]
Gen Lock	GenLock Status	S	Locked, Not Locked, No sync
Triax St	Triax Status	S	OK, Open, Short, DC Power
-			

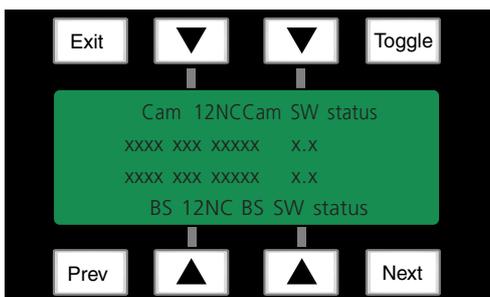

Press the **Next** button for the following menu


Selections	Function	Level	Possible values
CAM 12NC	Camera software 12NC	S	
CAMSWST	Camera software status	S	
BS 12NC	Basestation software 12NC	S	
BS SW ST	Basestation software status	S	

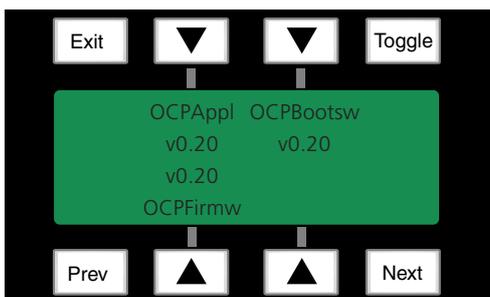

Press the **Next** button for the following menu


Selections	Function	Level	Possible values
OCPAppI.	Application software version	S	
OCPBootsw	Boot software version	S	
OCPFirmw	Firmware version	S	
-			

Setting up the Base Station

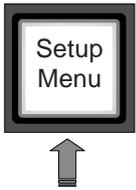

Push the **Setup Menu** button to open the menu.

Push the selection button to choose the BS submenu.

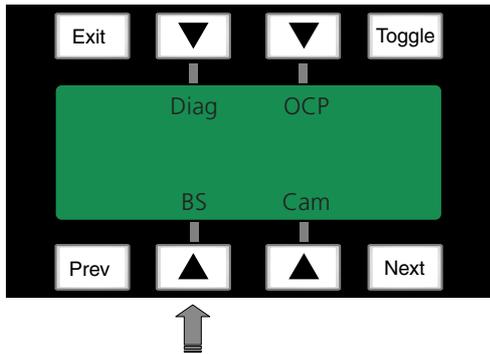

Selections	Function	Level	Possible values
Diag	D diagnostic menu	S	
OCP	OCP setup menu	S	
BS	Base station setup menu	S	
Cam	Camera setup menu	S	

The BS menu appears. Use the **Next** button to view subsequent pages.

Menu	Selections	Function	Level	Possible values
BS	MONITORING	Picture monitor selection	S	CVBS,R,G,B,Y,EXT1,EXT2,Y/EXT1,Y/EXT2
	-			
	-			
	MENU	BS internal menu enable	S	
	H PHASE	Adjustment H-Phase	B	0..99
	SC COARSE	Adjustment SC-Phase coarse	B	0,90,180,270
	-			
	SC FINE	Adjustment SC-Phase fine	B	0..99
	NOTCH LVL	Notch Depth	B	0..99
	NOTCH	Notch function	B	On,Off
	-			
	-			

Select the **MENU** item of the BS menu to access the internal menu of the latest base stations. The internal menu appears on the Base Station test and monitoring output.


Menu	Selections	Function	Level	Values	Default
BS internal menu	UP	UP menu	S		
	-				
	DOWN	DOWN menu	S		
	SELECT	Select item	S		

Setting up the OCP

Various aspects of the OCP can be set to suit your work methods. To open the menu which lets you set up these preferences proceed as follows:



Push the selection button to choose the OCP submenu.

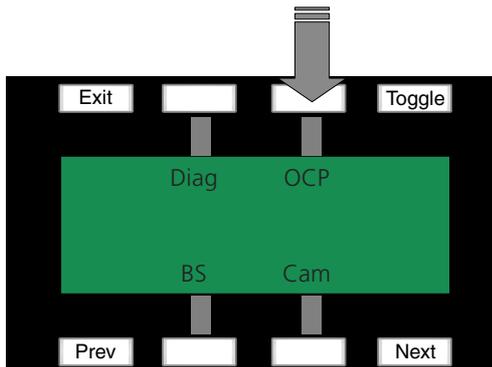

The first page of the OCP setup menu appears. Use the **Next** button to find the page with the item you wish to change and then select this item with its corresponding selection button. (To access some of these settings it may be necessary to set the OCP control level to Full.)

Setting the OCP control level

The OCP menu system has three levels of control; Simple, Basic and Full. These levels determine which functions are displayed.

In the OCP setup menu move to the *OCP control set* item and select S (simple), B (basic) or F (full).

Select the simple level to reduce the number of functions displayed to a minimum. Use this level to protect against unintentional changes to critical parameters.

Select the basic level as the normal operational mode of the OCP. Use this level to prevent set-up parameters from being displayed.

Select the full level to access all functions available on the OCP.

Camera assignment

The OCP can be assigned to a BS/Camera combination by moving to the *Camnum* item of the OCP setup menu. Select a camera number with the assignable rotary control (4) and then press *Select*.

OCP identification

For the OCP to operate in a network environment it must have a unique identification. By default, an IP address is assigned automatically. To set the IP address manually use the *IP Config* submenu.

Display and button brightness

The text brightness and contrast of the display and the brightness of the low and high levels of the button lights can be set in the OCP setup menu. Select the item you wish to change and then use the assignable rotary control (4) to adjust its value.

Joystick set-up

The range over which the iris opening can be controlled by the joystick and its sensitivity are set in the *Iris submenu* of the OCP setup menu. The direction of control can also be set in the *Iris submenu*.

Clock

The time for the internal clock is set in the *Clock submenu* of the OCP setup menu. The assignable rotary control (4) is used to set the hours, minutes and seconds.

Default values

The default values of the OCP are stored in the OCP and are restored when the **Reset local** item is selected. When the OCP is powered up or reset, a connection to the last camera number used is made.

The default values for the camera and base station parameters are stored in the Camera/base station default files. The camera parameters and their values that are shown on the OCP depend on the camera connected to OCP. If you select a different camera number, a different set of parameters and values can appear.

Menu	Selections	Function	Level	Values	Default
OCP	CAMNUM	Camera number	S	1..99	Last used
	SELECT	Connect to selected camera	S		
	-				
	-				
	IP CONFIG	Go to IP config. submenu	B		
	IRIS	Go to Iris submenu	B		
	BLACKPOT	Black rotary controls assignment	B	Black, Flare	Black
	CLOCK	Go to time submenu	B		
	LCD BACKL	LCD display backlight adjustment	B	0..99	50
	LCD CONTR	LCD display contrast	B	50..99	70
	BUZZER	OCP audio signal (Call)	B	On, Off	
	TEXT BRIGHT	Brightness of DotMatrix textdisplays	B		20
	TALLY LEDS	Tally Leds intensity level	B	Low, Medium, High, Full	
	TEXT LEDS	Assignable rotary text-leds intensity	B	0..99	
	LED LOW	Button Low-Level illumination	B	0..99	
	LED HIGH	Button High-Level illumination	B	0..99	
	MB RES	Master black resolution	F	Vfine, Fine, Normal, Coarse, Vcoarse	
	MB MODE	Master black mode	F	Linear, Mixed	
	ETHCONFIG	To Ethernet configuration menu	F		
	-				
	MB RES	OCP Menu set	S	Simple (S), Basic (B), Full (F)	
	-				
	-				
	RESET OCP	Reset OCP local functions to default	F	PRESS button to execute reset	

Menu	Selections	Function	Level	Values	Default
IP CONFIG	IP MODE	IP address assignment	F	Auto, Manual	Auto
	APPLY	Set IP mode	F		
	SUBNET MASK	Subnet mask address	F	255.255.0.0	
	-				
	OCP IP	OCP source IP 1st byte	F	1..250	192
		OCP source IP 2nd byte	F	0..255	168
		OCP source IP 3rd byte	F	0..255	0
		OCP source IP 4th byte	F	1..254	2


Menu	Selections	Function	Level	Possible values
VAR MATRIX	G->R	Variable Matrix Channel	F	0..99 / 0..99
	B->R	Variable Matrix Channel	F	0..99 / 0..99
	R->G	Variable Matrix Channel	F	0..99 / 0..99
	B->G	Variable Matrix Channel	F	0..99 / 0..99
	 R->B	Variable Matrix Channel	F	0..99 / 0..99
	G->B	Variable Matrix Channel	F	0..99 / 0..99
	-			
	-			

Menu	Selections	Function	Level	Values	Default
IRIS SETUP	IRIS MODE	Set joystick direction for iris control	S	Normal, Reverse	Normal
	RANGE	Set joystick range for Iris	S	F X.X	
	CENTER	Set joystick center value for iris	S		
	IRIS CAL	Calibrate joystick range	S		


Menu	Selections	Function	Level	Possible values
VAR MATRIX	G->R	Variable Matrix Channel	F	0..99 / 0..99
	B->R	Variable Matrix Channel	F	0..99 / 0..99
	R->G	Variable Matrix Channel	F	0..99 / 0..99
	B->G	Variable Matrix Channel	F	0..99 / 0..99
	 R->B	Variable Matrix Channel	F	0..99 / 0..99
	G->B	Variable Matrix Channel	F	0..99 / 0..99
	-			
	-			

Menu	Selections	Function	Level	Values	Default
IRIS SETUP	IRIS MODE	Set joystick direction for iris control	S	Normal, Reverse	Normal
	RANGE	Set joystick range for Iris	S	F X.X	
	CENTER	Set joystick center value for iris	S		
	IRIS CAL	Calibrate joystick range	S		

Setting up the Camera

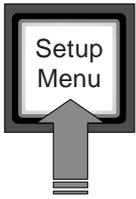

Push the **Setup Menu** button to open the menu.

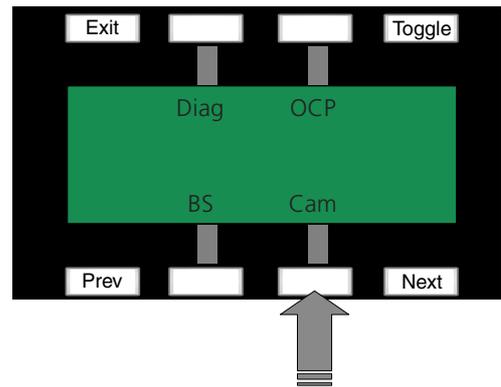

Press the selection button to choose the Camera submenu. The initial camera submenu depends on whether an SD or HD camera is connected.

Menu	Selections	Function	Level	Possible values
CAMERA (SD)	-			
	SD LBOX	Select Letterbox function	S	14:9,10:9,16:9, off
	SD RATIO	Select Aspect Ratio	S	4:3, 16:9
	or RATIO SEL	Aspect Ratio Source	S	Local, remote
CAMERA (HD)	VIDEO MODE	Select HD Format	S	various HD-formats
	SELECT			
	-			
	-			
	LENS CTRL	Lens control selection	S	Local, remote
	-			
	FOCUS	Remote FOCUS	S	0..99
	ZOOM	Remote ZOOM	S	0..99
	IRIS PK/AV	Iris Peak Average	F	0..99
	-			
	-			
	-			
	MATRIX	Matrix selection	B	9-Positions
	MTRX SEQ	Matrix sequence	F	M->G, G->M
	VAR MTRX	Goto VAR MATRIX submenu	F	
	SHADING	Goto SHADING submenu	F	
	MAX USER LVL	Sets maximum User level	F	0, 1, 2, 3, 4
	ONAIR LAMP	Front on-air indicator	F	Enabled, Disabled
	ONAIR LVL	On-air indicator level	F	0..99
	POWER	Camera remote power	S	On, Off
	DISK IF	Disc recorder interface	S	EVS, Standard
	LIGHT COND	Lighting conditions	S	Optimal, Good, Fair, Poor, Extreme
	COMBINE	Normal scan output interpolation	S	On, Off
	-			

The VAR MATRIX and SHADING menus are submenus of the CAMERA setup menu.

Menu	Selections	Function	Level	Possible values
VAR MATRIX	G->R	Variable Matrix Channel	F	0..99 / 0..99
	B->R	Variable Matrix Channel	F	0..99 / 0..99
	R->G	Variable Matrix Channel	F	0..99 / 0..99
	B->G	Variable Matrix Channel	F	0..99 / 0..99
	R->B	Variable Matrix Channel	F	0..99 / 0..99
	G->B	Variable Matrix Channel	F	0..99 / 0..99
	-			
	-			

Menu	Selections	Function	Level	Possible values
SHADING MENU	SHADING	Switch shading on or off	F	On, Off
	-			
	-			
	-			
	R-SAW H	R Sawtooth Horizontal	F	
	R-PAR H	R Parabola Horizontal	F	
	R-SAW V	R Sawtooth Vertical	F	
	R-PAR V	R Parabola Vertical	F	
	G-SAW H	G Sawtooth Horizontal	F	
	G-PAR H	G Parabola Horizontal	F	
	G-SAW V	G Sawtooth Vertical	F	
	G-PAR V	G Parabola Vertical	F	
	B-SAW H	B Sawtooth Horizontal	F	
	B-PAR H	B Parabola Horizontal	F	
	B-SAW V	B Sawtooth Vertical	F	
	B-PAR V	B Parabola Vertical	F	

Camera control

Setting white balance

The **White Balance** button starts the automatic white balance process. The camera measures a white area in the middle of the picture and stores a colour temperature setting in the AW1 or AW2 memory positions.

The **White Balance** button only operates if the colour temperature function is in a preset position (AW1 or AW2) and the colour bars are switched off.



Press the **White Balance** button once to display the measurement window in the camera viewfinder.

- The button lights.




Press the **White Balance** button a second time to start the measurement process.

- The button flashes.

If the measurement is successful, the light in the button and the measurement window are switched off. If the measurement is unsuccessful, the light in the **White Balance** button is orange.

If the button is pressed during the measurement process or at the end of an unsuccessful measurement, the value stored in AW1 or AW2 is reset.

Iris control

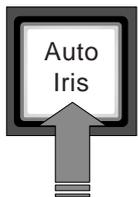

Press the **Auto iris** button to switch on the automatic iris control system.

- The the **Auto iris** button lights to show that the automatic iris control system is in operation.

Even when the auto iris is activated the manual control can still be used to vary the iris opening by +1 or - 1 F stops.

Changing camera video parameters

There are several ways of changing the video parameters of the camera. You can use:

- scene files
- standard values
- the direct video parameter buttons

Scene files

Scene files can be stored and recalled to immediately change a complete set of parameters.

Standard values

Different set of standard values can be recalled to immediately reset the video parameters.

Direct video parameter buttons (11)


A direct video parameter button when selected brings its associated menu to the display where you can navigate, select and vary the applicable values.

Camera status pages


Up to three different pages can be used to check the status of various camera functions.

Status page 1 is displayed when the **Exit** button is used to leave the menu system. There are two more status pages. To see them use the **Next** button.


Status page 1

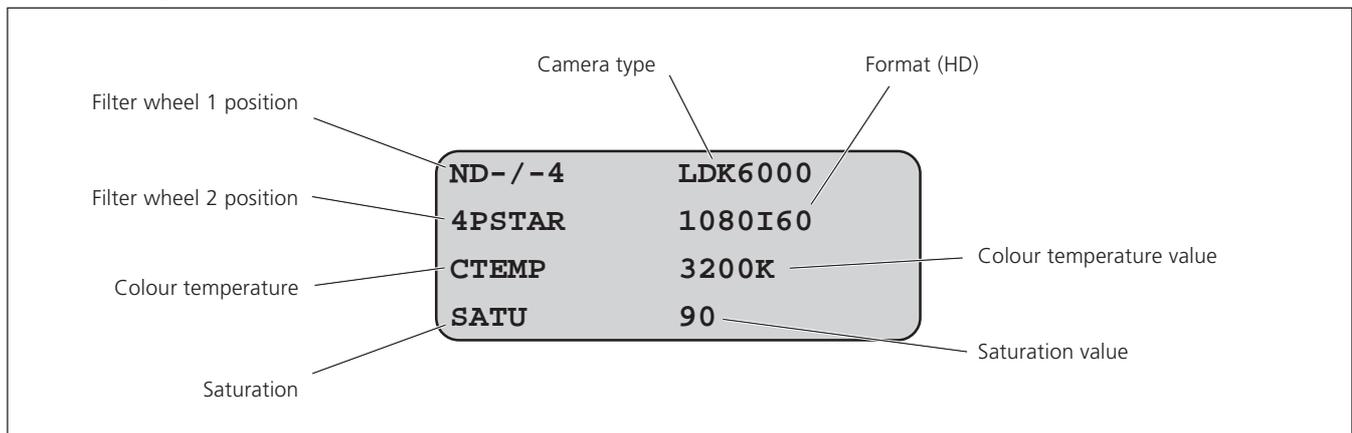

Status page 2

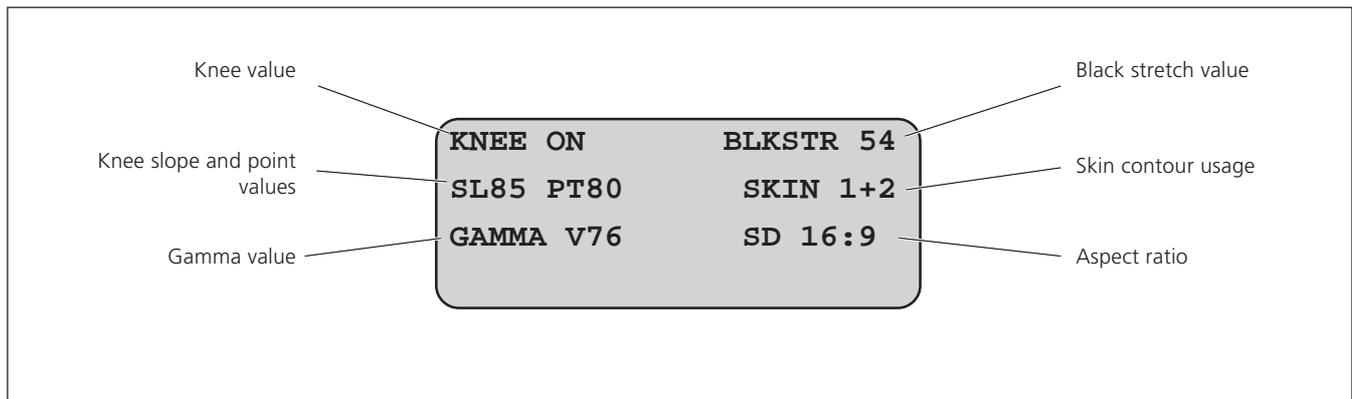


Status page 3

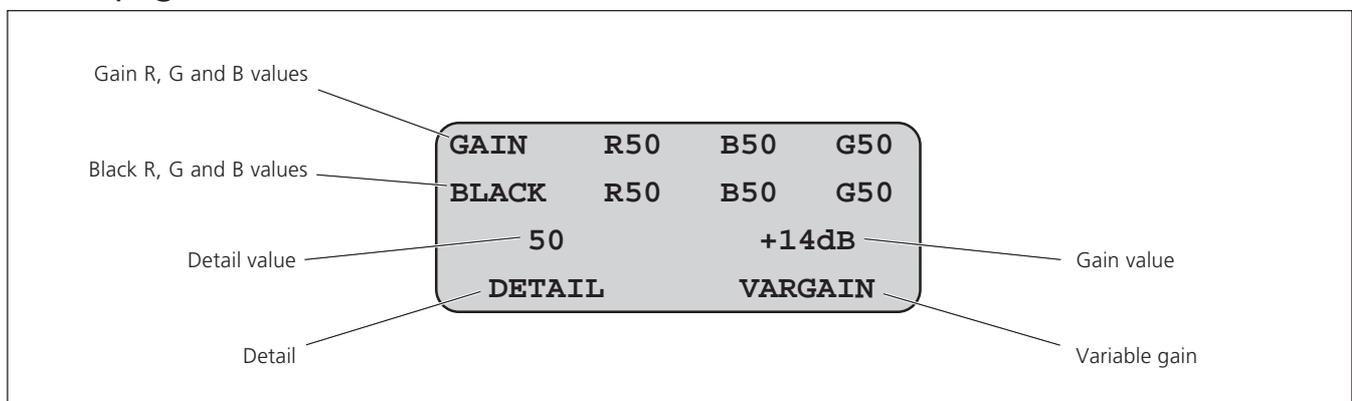

Using files

Storing and recalling scene files

The scene file function is used for storing and recalling settings for the camera. Four scene files can be stored in memory positions 1 to 4.

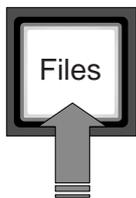

To recall a scene file, push the **Files** button to open the menu.

Select a memory position 1 to 4. The values stored in this file are then restored.

To create a scene file, set up the values for all the functions on the OCP, push the **Files** button to open the menu.

Push the **Next** button to open the store page and then select a memory position. The values are stored in this position.


Note

When a scene file is recalled, the values only take effect if the camera is not on-air.

Menu	Selections	Function	Level	Possible values
SCENE FILES	RECALL 1	Recall Scene File 1	S	
	RECALL 2	Recall Scene File 2	S	
	RECALL 3	Recall Scene File 3	S	
	RECALL 4	Recall Scene File 4	S	
	STORE 1	Store Scene File 1	B	
	STORE 2	Store Scene File 2	B	
	STORE 3	Store Scene File 3	B	
	STORE 4	Store Scene File 4	B	

Partial file recall

Partial file recall can be used to undo changes on a specific group of video parameters. The groups that can be recalled are Gain, Filters, Detail, Exposure Time, Color, Black, Flare, Skin, Gamma and Knee.

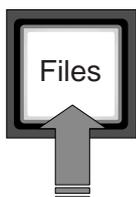


To recall a group of parameters press and hold the **Files** button and at the same time press the button for the function group you want to recall. All functions of this group are restored to the user's reference settings.

While the **Files** button is pressed the last recalled or restored file is displayed on the menu panel.

Note

A partial recall of the **Gain** function set will also recall the RGB Gain values and a partial recall of the **Black** function set will also recall the RGB Black values and the master black value.

Recalling standard files

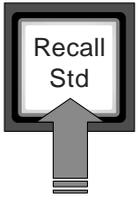

Push the **Recall Std.** button to open the menu.

Select either a factory or a customised file for recall.

Select Recall.

Menu	Selections	Function	Level	Possible values
RECALL STD	RECALL	Recall standard file	S	
	STD CUST/FACT	Select factory or customised file	S	Factory, Custom
	-			
	-			

Adjusting video parameters


Direct menu access buttons



Exposure Time button

Press the **Exp Time** button to open the exposure time menu.

Menu	Selections	Function	Level	Possible values
EXP. TIME	EXP. SEL	Exposure time selection	S	Nom, CRT, 50, 60, 1/100..1/2000, Var
	AUTOLIGHT	Auto Lighting Function	S	On, Off
	VAR EXP	Variable Exposure time	S	50..103(PAL), 60..150(NTSC)
	LIGHTING	Lighting adjustment	S	-10..+10

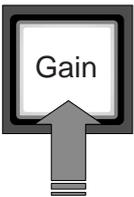


Gain button

Press the **Gain** button to open the gain menu.

Select Gain+ or Gain- to increase or decrease the gain in steps.

Menu	Selections	Function	Level	Possible values
GAIN	GAIN +	Increase Gain	S	+++ , ++ , + , 0 , -
	VAR MGAIN	Variable Master Gain	S	x, xdB
	GAIN -	Decrease Gain	S	- , 0 , + , ++ , +++
	-			

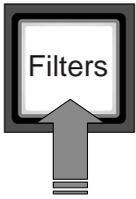

Filters button

Press the **Filters** button to open the filters menu.

The optical filter wheels are controlled with the ND and FX up and down selection buttons.

Menu	Selections	Function	Level	Possible values
FILTERS	ND UP	Increase ND Filter position	S	CLEAR, ND 1/4, ND 1/16, ND 1/64
	FX UP	Increase FX Filter position	S	CLEAR, 4 Star, 6 Star, Soft Fcs
	ND DOWN	Decrease ND Filter position	S	
	FX DOWN	Decrease FX Filter position	S	
	GRADIENT	Select electronic gradient filter	B	On, Off
	SET	Go to set soft gradient page	B	
	SOFT FCS	Select electronic soft focus filter	B	On, Off
	SET	Goto set soft focus filter page	B	
	MONOTONE	Select electronic monotone filter	B	On, Off
	SET	Goto set monotone filter page	B	
	-			
	-			

Menu	Selections	Function	Level	Possible values
SET GRADIENT	GRADIENT	Select electronic gradient filter	B	On, Off
	PRESET	Select gradient presets	B	ND0.3/0.6/0.9, Sunset, BlueSky, Var
	ZONE	Select area of filter	B	Top, Left, Bottom, Right
	VIEW	Select view mode	B	On, Off
	GRADIENT	Select electronic gradient filter	B	On, Off
	-		B	
	CENTRE	Set centre position	B	0..99
	WIDTH	Select transition width	B	1,2,3,4,5,6,7
	GRADIENT	Select electronic gradient filter	B	On, Off
	DEPTH R	Set red color depth	B	0..99
	DEPTH G	Set green color depth	B	0..99
	DEPTH B	Set blue color depth	B	0..99

Menu	Selections	Function	Level	Possible values
SET SOFT FOCUS	SOFT FCS	Select electronic soft focus filter	B	On, Off
	PRESET	Select soft focus presets	B	Preset 1 .. 5, Var
	RADIUS	Set center spot radius	B	15..99
	VIEW	Select view mode	B	On, Off
	SOFT FCS	Select electronic soft focus filter	B	On, Off
	LEVEL	Set level of grayscale	B	0..99
	TRANSIT	Set transition level	B	15..99
	FADE	Set grayscale color (black to white)	B	0..99
	X POS	Set x position of centrespot	B	0..93
	Y POS	Set y position of centrespot	B	0..99
	REVERSE	Reverse filter	B	On, Off
	ASP RATIO	Change aspect ratio of centre spot	B	24..99

Menu	Selections	Function	Level	Possible values
SET MONOTONE	MONOTONE	Select electronic MonoTone filter	B	On, Off
	PRESET	Select gradient presets	B	ND0.3/0.6/0.9, Sunset, BlueSky, Var
	DEPTH	Adjust MonoTone filter depth	B	0..99
	-			
	MONOTONE	Select electronic MonoTone filter	B	On, Off
	-			
	RED	Adjust Red Monotone Filter Colour	B	0..99
	BLUE	Adjust Blue Monotone Filter Colour	B	0..99



Detail (contours) button


Press the **Detail** button to open the contour menu.

Menu	Selections	Function	Level	Possible values
MAIN DETAIL	DTL LEVEL	Detail Level	S	0..99
	DTL FUNCT	Detail Function	S	On,Off
	LEVEL DEP	Level Dependency	B	0..99
	NOISESL	NoiseSlicer	B	0..99
	V DETAIL	Vertical detail level	B	0..99
	C/FINE	Detail Coarse/fine adjustment	B	0..99
	KNEE DTL	Knee Detail	B	1..4,On,Off
	-			
	-			
	SOFT LEVEL	Soft detail level	B	0..99
	SOFT DTL	Soft detail function	B	On,Off
	DTL SOURCE	Detail Source Selection	B	Y,R,G,R+G

HD cameras SD detail

On HD cameras the detail (contour) parameters have different values for the High Definition (HD) output and the Standard Definition (SD) output. On HD cameras press the **Next** button to open the second (SD output) set of parameters.


Menu	Selections	Function	Level	Possible values
SD DETAIL (HD only)	SD DTL LVL	Detail Level	S	SD 0..99
	SDDTL FUNCT	Detail Function	S	SD On,SD Off
	SDLVL DEP	Level Dependency	B	SD 0..99
	SDNOISESL	NoiseSlicer	B	SD 0..99
	SDV DETAIL	Vertical detail level	B	SD 0..99
	SDC/FINE	Detail fine adjustment	B	SD 0..99
	-			
	-			
	-			
	SDSOFT LVL	Soft detail level	B	SD 0..99
	SD SOFT DTL	Soft detail function	B	SD On, SD Off
	SD SOURC	Detail Source Selection	B	SD Y,SD R,SD G,SD R+G

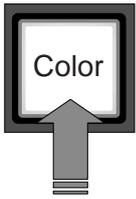

Color button

Press the **Color** button to open the colour menu.

Menu	Selections	Function	Level	Possible values
COLOR	COL TEMP	Color Temperature	S	AW1,AW2, AWC, 3200K..7800K, VAR
	VAR CTEMP	Variable Color Temperature	S	2000K .. 21000K
	SATURATION	Saturation Level	S	0..99
	CHROMA	Chroma Function	S	On,Off

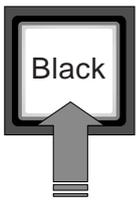


Black button

Press the **Black** button to open the black menu.

The lower row of rotary controls are assigned to changing the black values. The BLACK light lights.

Menu	Selections	Function	Level	Possible values
BLACK	BLACK STR	Black Stretch Function	S	On,Off
	AUTO BLACK	Auto Black Function	S	Press to start
	BLKSTR LVL	Black Stretch Level	S	-99..99
	BLKSTR TYP	Black Stretch type	B	Press, Stretch

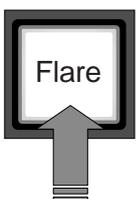


Flare button

Press the **Flare** button to open the flare menu.

The lower row of rotary controls are assigned to changing the flare values. The FLARE lights light.


Menu	Selections	Function	Level	Possible values
FLARE	FLARE FUNC	Flare function	F	On,Off
	FLARE R	Red Flare Level	S	0..99
	FLARE G	Green Flare Level	S	0..99
	FLARE B	Blue Flare Level		S 0..99

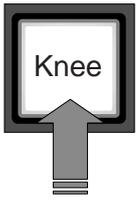

Knee button

Press the **Knee** button to open the knee menu.

Menu	Selections	Function	Level	Possible values
KNEE	KNEE SEL	Knee function	S	Auto, Var, Off
	KN POINT	Knee Level/set point	S	0..99
	KN SLOPE	Knee Slope	S	0..99
	KN SOURCE	Knee Source	B	Y, NAM
	KNEE DESAT	Knee desaturation function	B	On,Off
	DESAT LVL	Knee desaturation level	B	0..99
	KN SOURCE	Knee source selection	B	Y, RGB, Max
	-			
	WHITE CLIP	White Clip Funtion	B	On, Off
	WCLIP LVL	White Clip Master Level	B	0..99
	-			
	-			

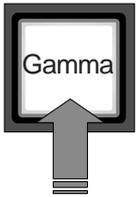

Gamma button

Press the **Gamma** button to open the gamma menu.

When variable gamma is selected and the **Next** button is pressed, the upper row of rotary controls are assigned to changing the gamma R, G and B values. The GAMMA lights light.

Menu	Selections	Function	Level	Possible values
GAMMA	GAMMA SEL	Gamma selection	B	1, 2, Var, Lin
	GAMMA CRV	Gamma Curve preset	B	ARD, CCIR, RAI, BBC04, BBC05, BBC06
	-			
	GAMMA LPF	Gamma LowPass Filter	B	On, Off
	GAMMA M	Gamma Master	F	0..99
	GAMMA R	Gamma Red	F	0..99
	GAMMA G	Gamma Green	F	0..99
	GAMMA B	Gamma Blue	F	0..99



Skin button

Press the **Skin** button to open the skin menu.

When the skin colour and width pages are selected, the upper and lower red and blue rotary controls are assigned to these parameters. The **SKIN** lights light.

Menu	Selections	Function	Level	Possible values
SKIN	SKIN SEL	Select SKIN	B	Off, 1, 2, 1+2
	-			
	SET 1	Goto SET SKIN 1 page	B	
	SET 2	Goto SET SKIN 2 page	B	

Menu	Selections	Function	Level	Possible values
SKIN 1 PAGE	SKIN SEL	Select SKIN	B	Off, 1, 2, 1+2
	SKIN LVL	Adjust Skin Level	B	0..99
	SKIN VIEW	Shows SKIN View in video	B	On,Off
	SKIN AUTO	Starts Auto Skin procedure	B	Off, Win, Run, Fail
	COLOR1 R	Adjust Skin1 Color R Level	B	0..99
	COLOR1 B	Adjust Skin1 Color B Level	B	0..99
	WIDTH1 R	Adjust Skin1 Width R Level	B	0..99
	WIDTH1 B	Adjust Skin1 Width B Level	B	0..99

Menu	Selections	Function	Level	Possible values
SKIN 2 PAGE	SKIN SEL	Select SKIN	B	Off, 1, 2, 1+2
	SKIN LVL	Adjust Skin Level	B	0..99
	SKIN VIEW	Shows SKIN View in video	B	On,Off
	SKIN2 AUTO	Starts Auto Skin procedure	B	Off, Win, Run, Fail
	COLOR2 R	Adjust Skin2 Color R Level	B	0..99
	COLOR2 B	Adjust Skin2 Color B Level	B	0..99
	WIDTH2 R	Adjust Skin2 Width R Level	B	0..99
	WIDTH2 B	Adjust Skin2 Width B Level	B	0..99

Setting skin detail (contour)

Skin detail (contour) is set up to select a particular colour range. The contour level within this colour range can then be set independently of the rest of the picture.

Skin contour is predominantly used to reduce the level of contours in a person's skin tone to produce a more attractive picture. Decreasing the contour level of a person's skin softens the skin tones only .

The skin contour function is not limited to a particular colour and so can also be used to achieve various effects in selected colour areas. For example, decrease the contour level of a soccer field to accentuate the players or increase the skin contour level to accentuate a rough surface.

The colour range to which the skin contour level is applied can be selected automatically or manually. Two skin contour ranges can be independently defined; both can be used at the same time.

Auto skin detail (contour)

Carry out the Auto skin detail (contour) procedure as follows:

- a. In the *Skin* menu, select the item *Set 1* to open the skin 1 page.
- b. Select the *Skin1 Auto* item.
- c. Point the two small white boxes that appear in the viewfinder at the intended surface (colour).
- d. Select the *Skin1 Auto* item again to start the measurement procedure (the iris is set to Auto). The process running message appears in the viewfinder.
- e. When the process is completed (within a few seconds) the OK message appears in the viewfinder.
- f. Adjust the skin contour level with the *Skin Lvl* item. Decrease the value below 50 to soften the selected area. Increase the value above 50 to add extra contour.

Repeat the steps for the *Skin 2* position if required.

Set the menu item *Skin View* to on to outline the affected area. The colour range set by the automatic procedure can be adjusted manually if required.

Manual skin detail (contour)

Set the skin detail (contour) colour range manually as follows:

- a. In the *Skin* menu, select item *Set 1* to open the skin 1 page.
- b. Push the **Next** button.
- c. Adjust the colour 1 red and blue, and the width 1 red and blue parameters with the assigned rotary controls. The higher the number, the broader the range.
- d. Push the **Previous** button.
- e. Adjust the skin detail (contour) level for the selected colour range with the *Skin Lvl* item. Decrease the value below 50 to soften the selected area. Increase the value above 50 to add extra contour.

Repeat the steps for the *Skin 2* position if required.

Non-standard indication

Normally if the menu of a function group is active, the button is illuminated high green. But in the case that the function group is non-standard and the menu is active, the button will be illuminated yellow (mix of orange and high-green).


When a button is illuminated as non-standard, it is possible to see which individual function or functions is/are non-standard. This is indicated with a *-symbol behind every non-standard value in the menu.

Configuration


Control network

The OCP 400 is connected to an Ethernet control network (**C2IP**). The IP address and other options for the Ethernet connection can be set up in the *SETUP / OCP / IPCONFIG.* menu. These items can also be set up remotely using a network configuration tool such as NetConfig.

OCP 400 panels in a C2IP network with multiple cameras

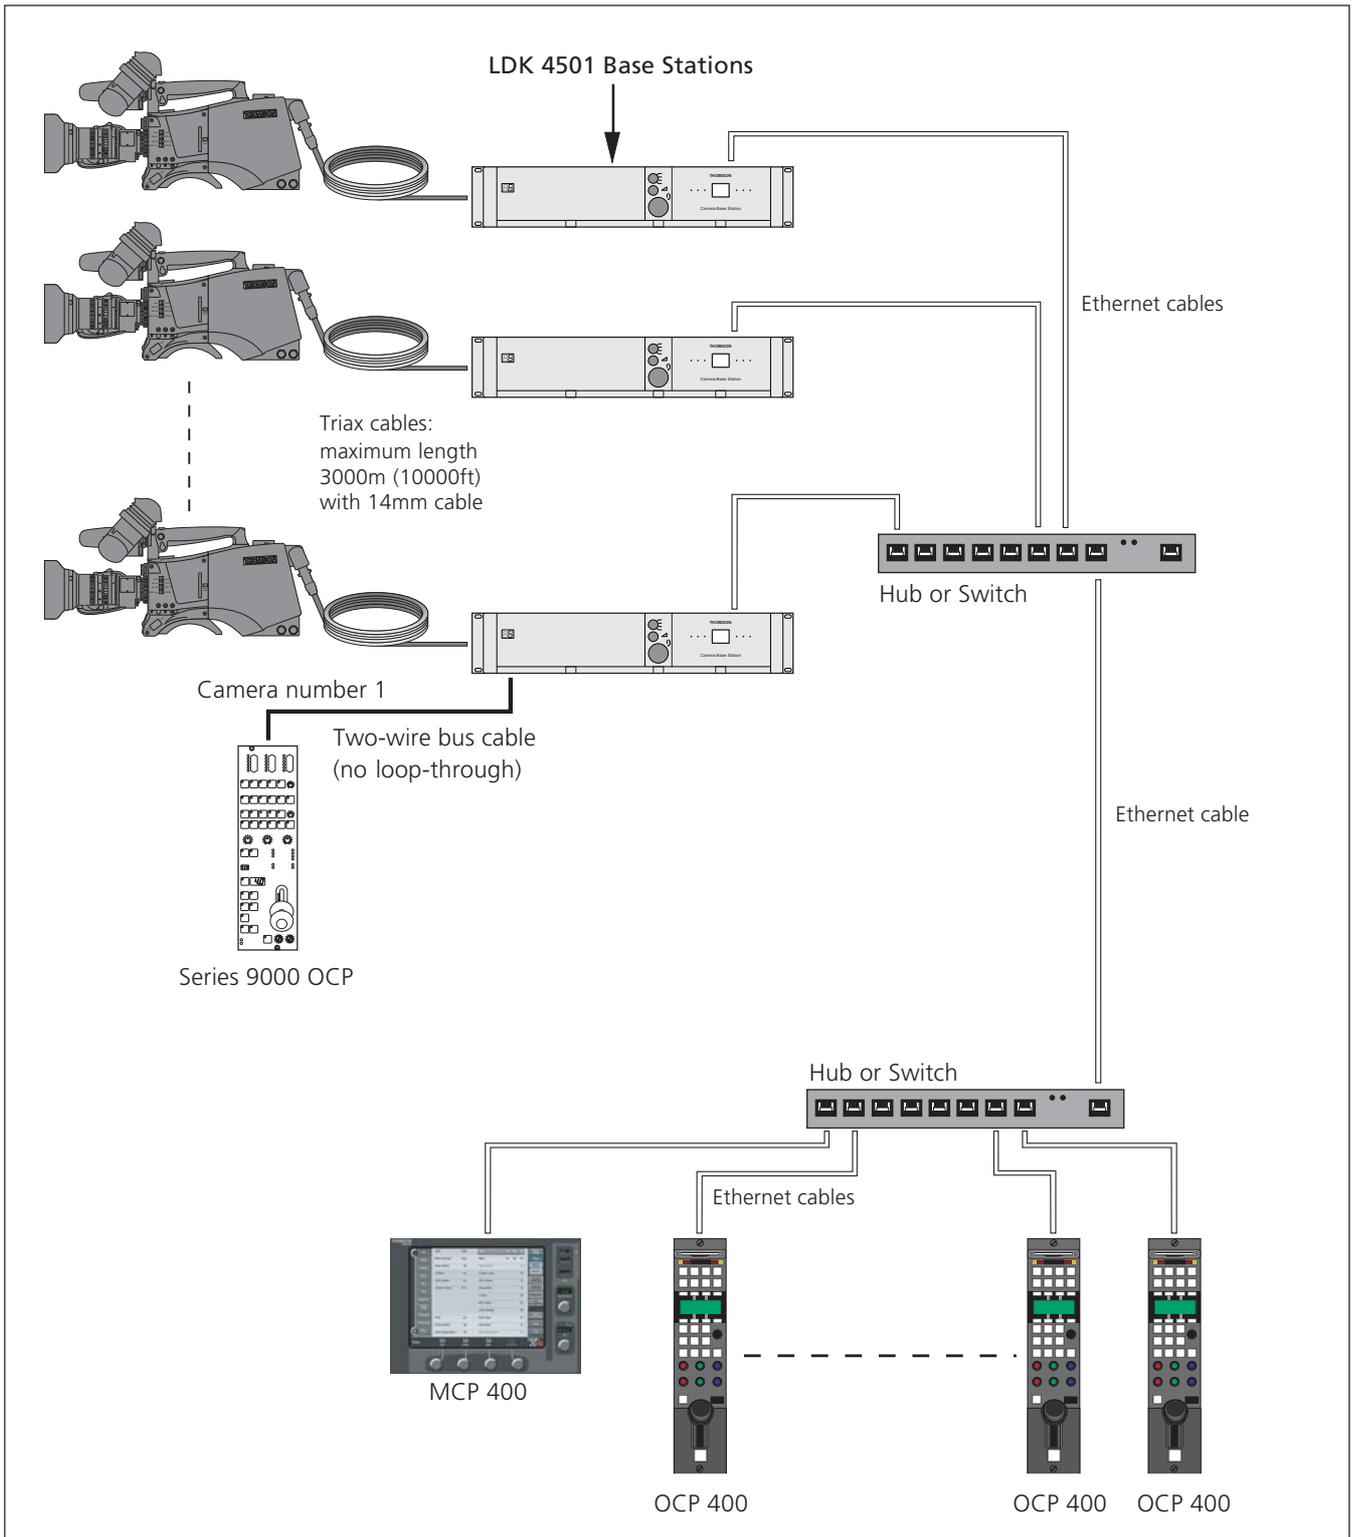


Dimensions

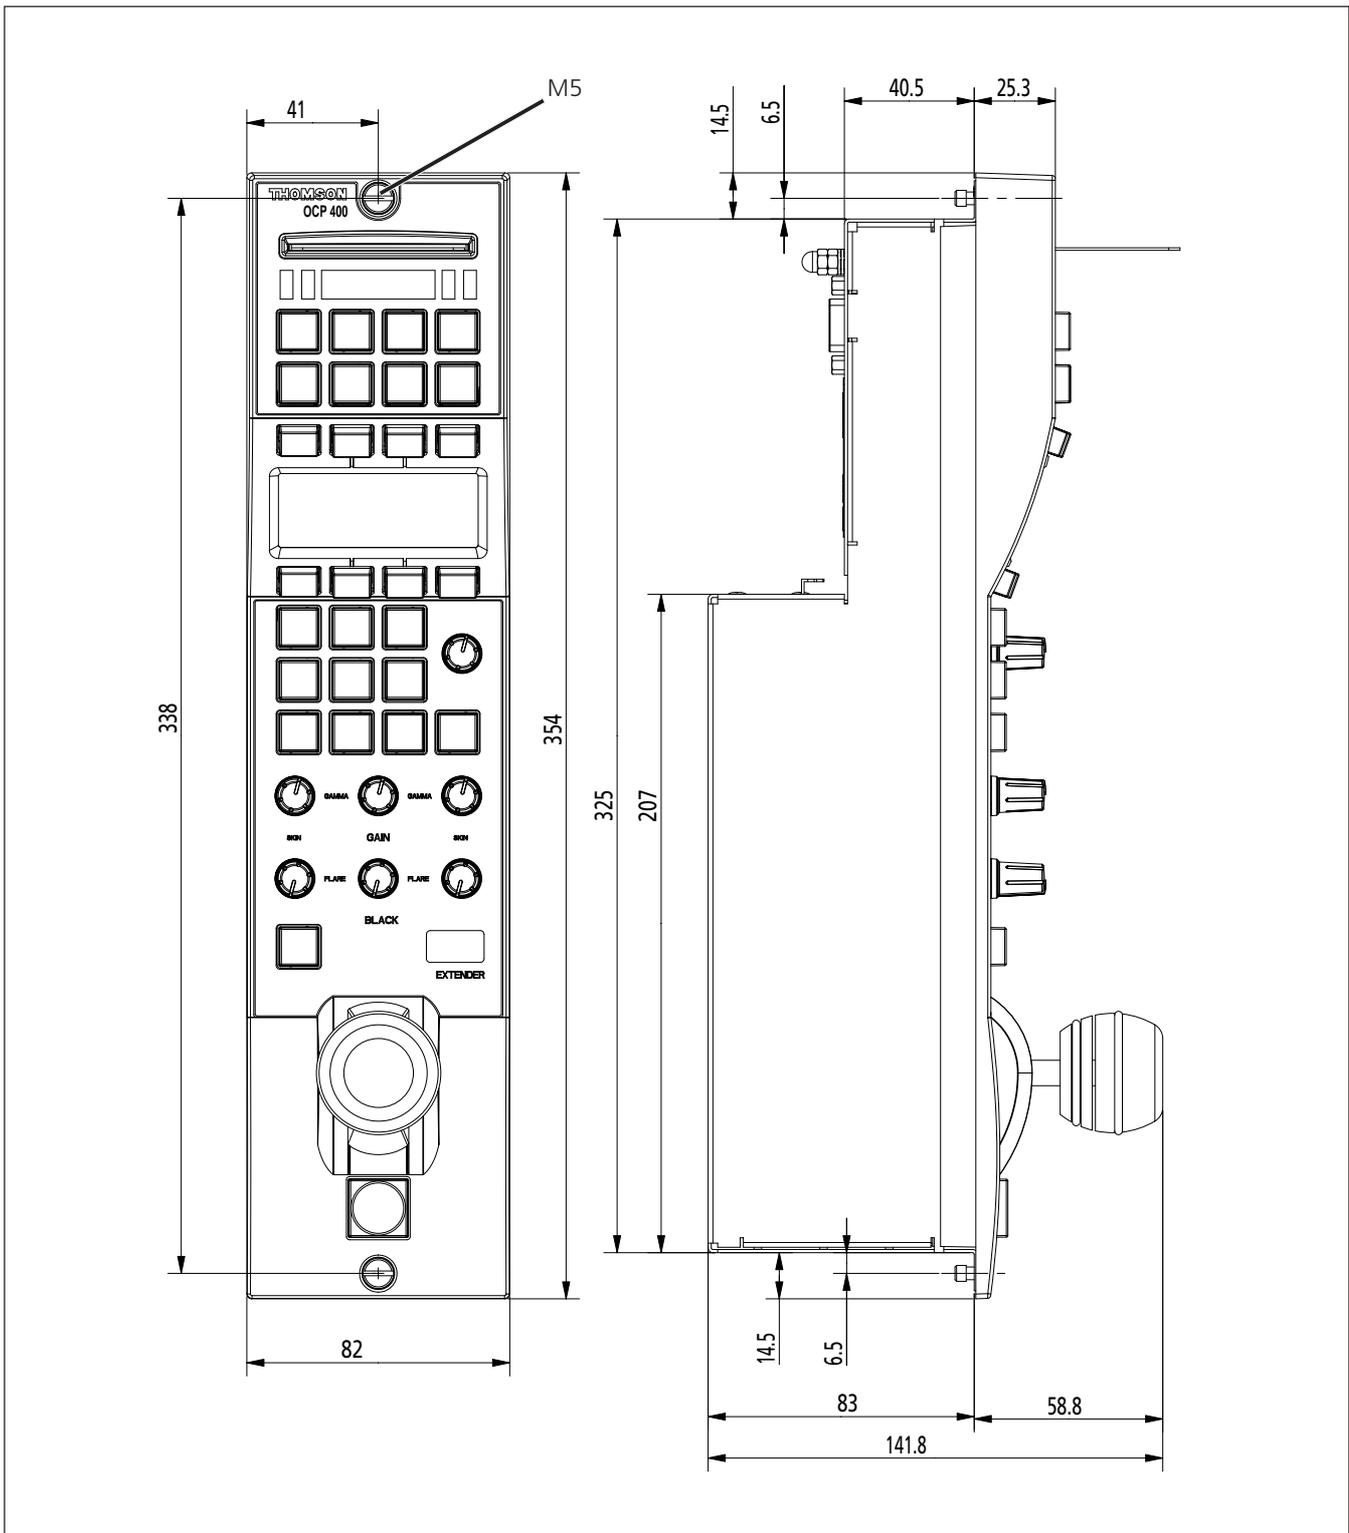

Connectors

Ethernet Connector - Panel View

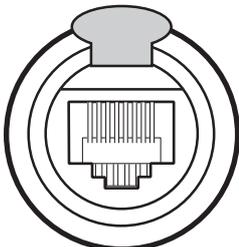


X100

8-pin Standard Ethernet RJ-45 connector

1. TX+
2. TX-
3. RX+
4. no connection
5. no connection
6. RX-
7. no connection
8. no connection

DC input and output sockets

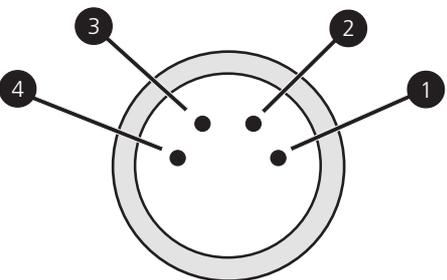


X102

XLR 4-pin male; panel view

1. Ground
2. No connection
3. No connection
4. +12 Vdc input nominal (+11 Vdc to +17 Vdc)
Current consumption max.: 0.7 Amp (typical 0.5 Amp)

CAUTION
▲ The input voltage must not exceed +17 Vdc.

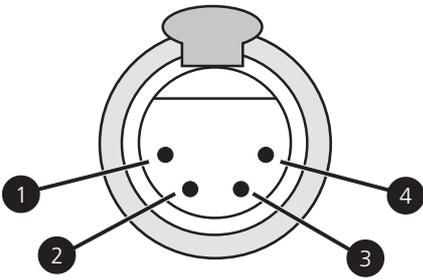


X103

XLR 4-pin female; panel view

1. Ground
2. No connection
3. No connection
4. +12 Vdc output

This socket supplies the input DC voltage (12V nominal) for other OCPs. Maximum number of looped-through OCPs: 5.

Preview Connector

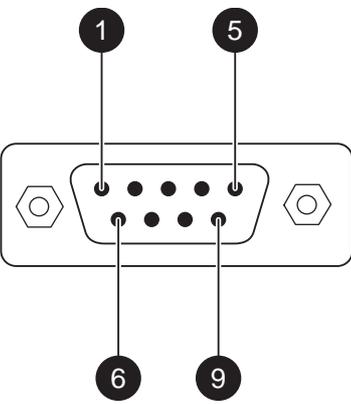

X703


9-pin male, shielded cable

1. Preview 1A
2. Preview 1B
3. Preview 1C
4. +REF ext.
5. GND
6. Iris ext.
7. Master Black Ext.
8. Spare
9. Shield

Preview switch not pressed: 1A connected to 1C
Preview switch pressed: 1A connected to 1B

A 9-pin female cable connector is available under part number 2422 022 06216.
The cable hood for this connector is available under part number 2422 021 02467.

RS232 Connector

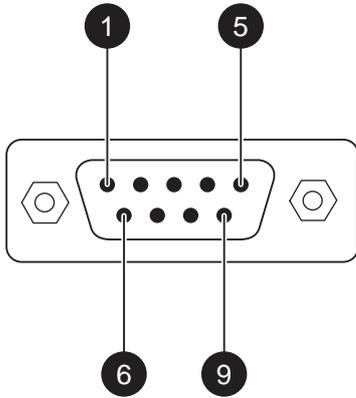

9-pin male, shielded cable

1. Spare
2. RXD
3. TXD
4. nDTR
5. DGRN
6. nDSR
7. nRTS
8. nCTS
9. +12V RS232

A 9-pin female cable connector is available under part number 2422 022 06216.

The cable hood for this connector is available under part number 2422 021 02467.

X802