

MAGNUM-HW-B

1RU Enterprise Class Server for MAGNUM

User Manual

© Copyright 2014

EVERTZ MICROSYSTEMS LTD.

5288 John Lucas Drive,
Burlington, Ontario,
Canada L7L 5Z9

Phone: 905-335-3700

Sales: sales@evertz.com

Fax: 905-335-3573

Tech Support: service@evertz.com

Fax: 905-335-7571

Web Page: <http://www.evertz.com>

Version 1.0, July 2014

The material contained in this manual consists of information that is the property of Evertz Microsystems and is intended solely for the use of purchasers of MAGNUM series products. Evertz Microsystems expressly prohibits the use of this manual for any purpose other than the operation of the device.

All rights reserved. No part of this publication may be reproduced without the express written permission of Evertz Microsystems Ltd. Copies of this manual can be ordered from your Evertz dealer or from Evertz Microsystems.

This page left intentionally blank

TABLE OF CONTENTS

1.	OVERVIEW	1-1
2.	SPECIFICATION	1-3
3.	CONNECTIONS	3-5
4.	INSTALLATION.....	4-7
	4.1. MAGNUM INSTALLATION.....	4-7
5.	MAGNUM SERVER CONFIGURATION SHELL	5-9
	5.1. SYSTEM CONFIGURATION	5-10
	5.1.1. Setting the Host Name.....	5-10
	5.1.2. Setting the Server Date.....	5-11
	5.1.3. Setting the Server Time	5-11
	5.1.4. Setting the Server Time Zone	5-12
	5.2. NETWORKING CONFIGURATION	5-12
	5.2.1. Assigning an IP Address for eth0.....	5-13
	5.2.2. Assigning a Subnet Mask for eth0	5-13
	5.2.3. Assigning a Gateway Address for eth0	5-13
	5.2.4. Assigning a Broadcast Address for eth0	5-14
	5.3. CLUSTER CONFIGURATION	5-15
	5.3.1. Multicast Address 1	5-15
	5.3.2. Multicast Interface 1.....	5-16
	5.3.3. Change Database IP	5-16
6.	APPENDIX	6-17
	6.1. FAQ	6-17
	6.2. IPMI.....	6-17
	6.2.1. IPMI Remote Access	6-17
	6.3. DRIVE SWAPPING – REPLACING A FAILED DRIVE	6-20
	6.3.1. Overview.....	6-20
	6.3.2. Replacing a Failed Drive Notes:.....	6-20

Figures

Figure 1-1: MAGNUM-HW-B Front and Rear View.....	1-1
Figure 3-1: MAGNUM-HW-B Connections - Front View	3-5
Figure 3-2: MAGNUM-HW-B Connections - Rear View.....	3-6
Figure 4-1: BIOS SuperMicro Logo	4-7
Figure 4-2: Boot Device Selection.....	4-7
Figure 4-3: Magnum Boot Menu.....	4-8
Figure 4-4: Installation Confirmation	4-8
Figure 4-5: Installation Complete	4-8
Figure 5-1: Main Server Control Menu.....	5-9
Figure 5-2: System Configuration Menu	5-10
Figure 5-3: Change Host Name	5-10
Figure 5-4: Change Date.....	5-11
Figure 5-5: Change Time	5-11
Figure 5-6: Change Time Zone	5-12
Figure 5-7: Network Configuration Menu	5-12
Figure 5-8: Enter New IP Address for eth0	5-13
Figure 5-9: Enter New Subnet Mask for eth0	5-13
Figure 5-10: Enter New Gateway Address for eth0	5-14
Figure 5-11: Enter New Broadcast Address for eth0	5-14
Figure 5-12: Cluster Configuration	5-15
Figure 5-13: Change Multicast Address 1	5-15
Figure 5-14: Multicast Interface.....	5-16
Figure 5-16: Database IP	5-16
Figure 7-1: BIOS SuperMicro Logo	6-17
Figure 7-2: IPMI Configuration	6-18
Figure 7-3: Save BIOS Settings	6-18
Figure 7-4: IPMI Ethernet Port	6-18
Figure 7-5: IPMI Web Page.....	6-19

REVISION HISTORY

<u>REVISION</u>	<u>DESCRIPTION</u>	<u>DATE</u>
1.0	First Release	July 2014

Information contained in this manual is believed to be accurate and reliable. However, Evertz assumes no responsibility for the use thereof nor for the rights of third parties, which may be effected in any way by the use thereof. Any representations in this document concerning performance of Evertz products are for informational use only and are not warranties of future performance either express or implied. The only warranty offered by Evertz in relation to this product is the Evertz standard limited warranty, stated in the sales contract or order confirmation form.

Although every attempt has been made to accurately describe the features, installation and operation of this product in this manual, no warranty is granted nor liability assumed in relation to any errors or omissions unless specifically undertaken in the Evertz sales contract or order confirmation. Information contained in this manual is periodically updated and changes will be incorporated into subsequent editions. If you encounter an error, please notify Evertz Customer Service department. Evertz reserves the right, without notice or liability, to make changes in equipment design or specifications.

This page left intentionally blank

1. OVERVIEW

MAGNUM-HW-B is the dedicated 1RU Enterprise Class Server hardware that runs the Magnum Control System for large scale system environments.

Software Pre-installed:

- MAGNUM, requiring only license purchase to activate the MAGNUM modules

Key Features and Benefits:

- 1RU Enterprise Class Server
- Redundant power supplies
- Linux Operating System
- Six Ethernet ports
- RAID 10 Drive Configuration



Figure 1-1: MAGNUM-HW-B Front and Rear View

This page left intentionally blank

2. SPECIFICATION

Chassis:

- Form Factor
- 1U Rackmount

Dimensions:

- Height 1.7" (43mm)
- Width 17.2" (437mm)
- Depth 26.6" (676mm)
- Gross Weight 43 lbs (19.45 kg)

Front Panel:

- Buttons
 - Power On/Off Button
 - System Reset Button
 - UID Button

LEDs:

- Power LED
- Hard drive activity LED
- 2x Network activity LEDs
- System Overheat LED
- Universal Information (UID) LED

System Cooling:

- 5x Cooling Fans
- 1x Air Shroud

Power Supply:

- 700W AC-DC high-efficiency power supply with PMBus and I2C
- AC Input: 700W: 100-140 V, 50-60 Hz, 8.5-6 Amp
- DC Output +5V standby: 3 Amp
- DC Output +12V: 58 Amp @ 100-140V

Environmental:

- Operating Temperature: 10° to 35°C (50° to 95°F)
- Non-operating Temperature: -40° to 70°C (-40° to 158°F)
- Operating Relative Humidity: 8% to 90% (non-condensing)
- Non-operating Relative Humidity: 5 to 95% (non-condensing)

LAN:

- 6x RJ45 LAN ports
- 2x SFP+ LAN port
- 1x RJ45 Dedicated IPMI LAN port

USB:

- 2x USB rear ports

VGA:

- 1x VGA Port

Keyboard / Mouse:

- PS/2 keyboard and mouse ports

3. CONNECTIONS

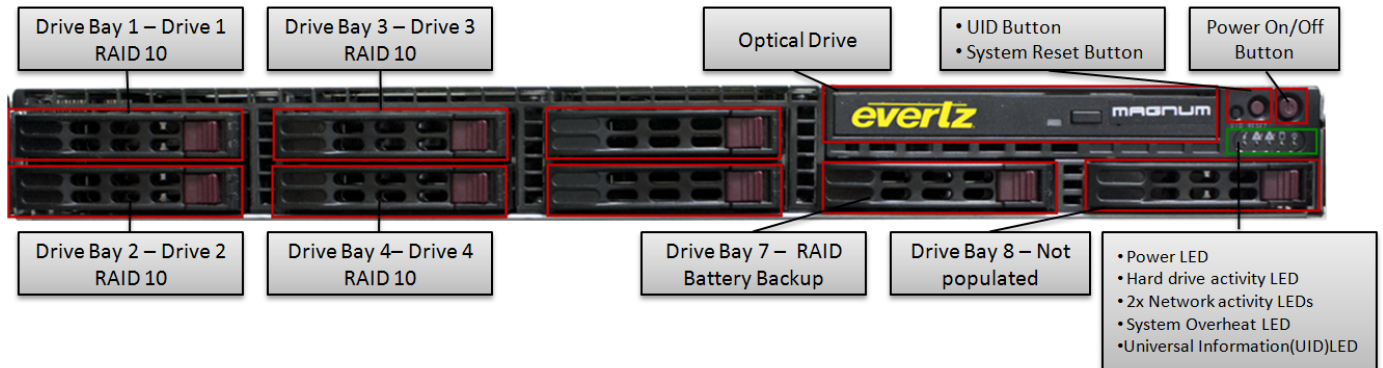


Figure 3-1: MAGNUM-HW-B Connections - Front View

Front:

- Drive Bay 1 – Drive 1 RAID 10
- Drive Bay 2 – Drive 2 RAID 10
- Drive Bay 3 – Drive 3 RAID 10
- Drive Bay 4 – Drive 4 RAID 10
- Drive Bay 5 – Not populated
- Drive Bay 6 – Not populated
- Drive Bay 7 – RAID Battery Backup
- Drive Bay 8 – Not populated
- Optical Drive

Front Panel Buttons:

- Power On/Off Button
- System Reset Button
- UID Button

Front Panel Status:

- Power LED
- Hard drive activity LED
- 2x Network activity LEDs
- System Overheat LED
- Universal Information (UID) LED

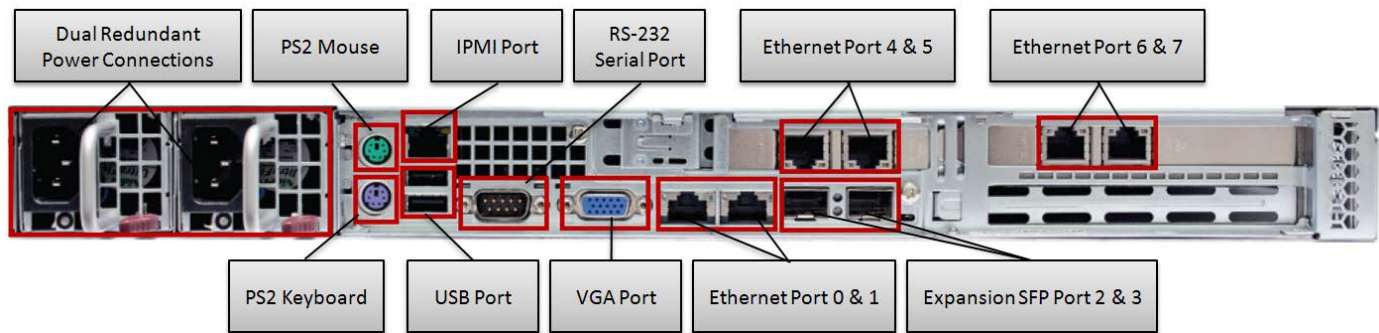


Figure 3-2: MAGNUM-HW-B Connections - Rear View

Rear:

- Dual Redundant Power Connections
- PS2 Mouse
- PS2 Keyboard
- IPMI Port
- USB Port
- USB Port
- RS-232 Serial Port
- VGA Port
- Ethernet Port 0
- Ethernet Port 1
- Ethernet Port 4
- Ethernet Port 5
- Ethernet Port 6
- Ethernet Port 7
- Expansion SFP Port 1
- Expansion SFP Port 2

4. INSTALLATION

4.1. MAGNUM INSTALLATION

MAGNUM-HW is shipped with the Operating system and MAGNUM software pre-installed. If for any reason the server needs to be re-installed following the steps below.

- 1) Insert the latest released version of the Magnum Installation CD/DVD into the DVD-ROM drive. Reboot the server by pressing the **Reset Button**.
- 2) Press **<F11>** repeatedly while the BIOS displays the SuperMicro logo in Figure 4-1.



Figure 4-1: BIOS SuperMicro Logo

- 3) Wait for the boot device selection screen shown in Figure 4-2. Select the device called **CD/DVD** and press **<Enter>** to continue.

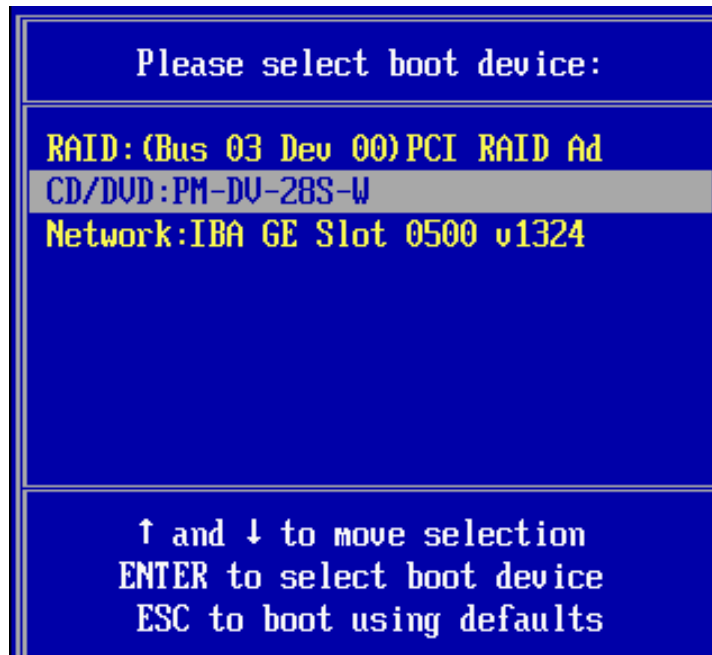
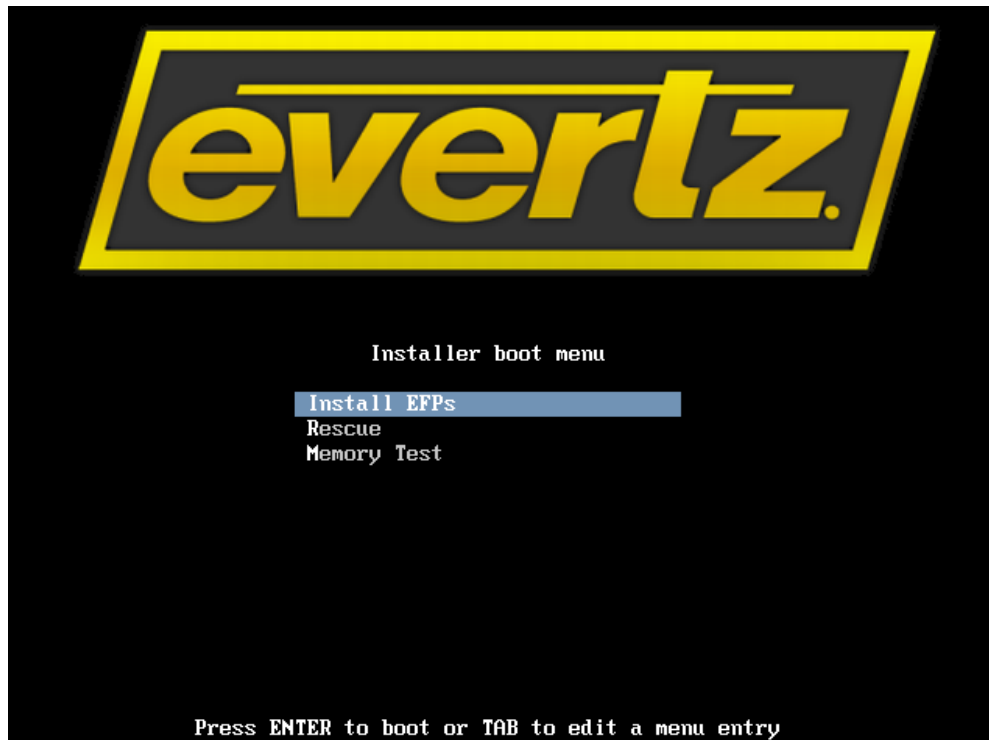


Figure 4-2: Boot Device Selection

- 4) Wait for the Magnum boot menu shown in Figure 4-3. Select **Install** and press **<Enter>** to continue.

**Figure 4-3: Magnum Boot Menu**

- 5) Wait for the Installation confirmation screen to appear as shown in Figure 4-4. Press **Enter**, to continue.

```
Installing magnum-bootstrap-2.0.0rc21.efp
Press [Enter] to format disk and install Magnum:
```

Figure 4-4: Installation Confirmation

- 6) Once installation is complete press CTRL+ALT+DEL to reboot as shown in Figure 4-5.

```
SUCCESS: magnum-bootstrap-2.0.0rc21.efp INSTALLED
SUCCESS: magnum-rootfs-2.0.0rc21.efp INSTALLED

Press [CTRL+ALT+DEL] to reboot

evertz@evertz:~$ _
```

Figure 4-5: Installation Complete

5. MAGNUM SERVER CONFIGURATION SHELL

The server control tool enables the user to set up the MAGNUM server parameters. Launching the MAGNUM Server Configuration tool will reveal a number of operations that can be performed in order to properly set up your server. For more detailed information on the MAGNUM Server Configuration Shell please refer to the MAGNUM manual. This section outlines the minimum configuration required.



Tip: Changes that affect the operation of the MAGNUM Server or admin level actions will cause an authentication prompt to be displayed.

To login to the MAGNUM Server Configuration Shell, the user will have to enter the following information at the login screen. The login screen is accessed by hitting “ctrl+alt+F2” to switch terminals. At the login prompt use the following default credentials.

- Enter *admin* as the username and then press <enter>
- Enter *admin* as the password and then press <enter>

Figure 5-1 displays the main setup menu. Section 5.1 to 5.3 will guide you through the process of setting up your server and identifying the function of each configuration tool.

You will use the arrow keys, tab, and enter keys to navigate through the MAGNUM Server Configuration Shell.

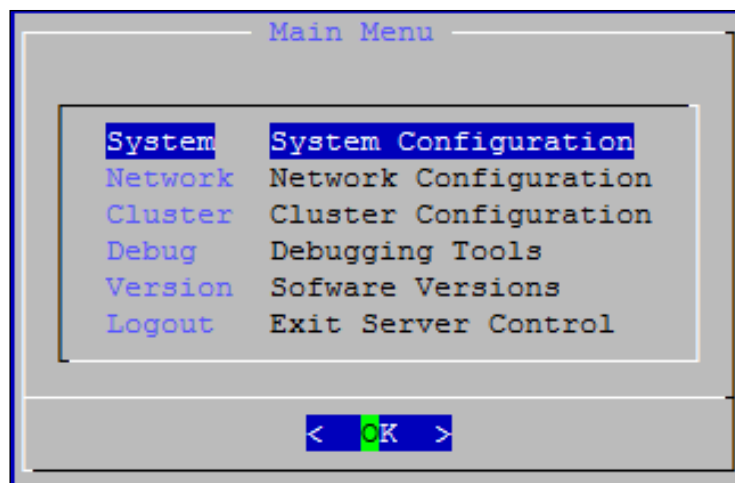


Figure 5-1: Main Server Control Menu

5.1. SYSTEM CONFIGURATION

Selecting the **System Configuration** option will reveal the screen displayed in Figure 5-2. The main function of the system configuration menu is to complete the set up of the server configuration. The System Configuration Menu allows the user to verify or change system level configuration, such as Date/Time, Hostname, etc; or to perform system level operations such as changing the admin password, upgrading, rebooting, etc.

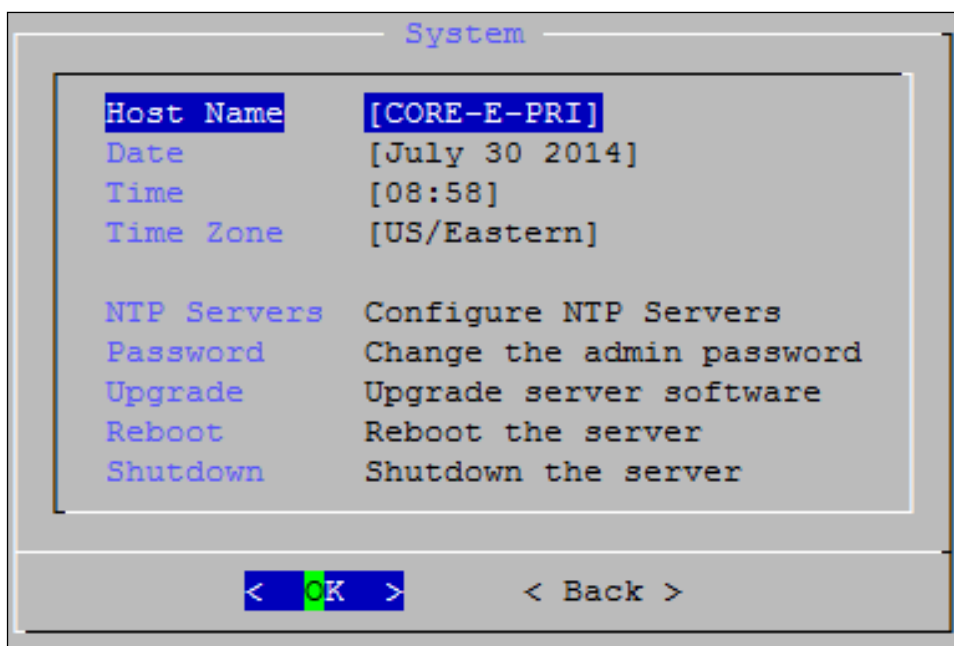


Figure 5-2: System Configuration Menu

5.1.1. Setting the Host Name

Selecting the **Hostname** option from the System Configuration menu will enable the user to set the host name for the server. The dialog box in Figure 5-3 will appear when this option is selected. The user will be prompted to enter the desired name for the host into the "Set *current host name*." field. This name was set during initial installation but can be changed using this menu option.

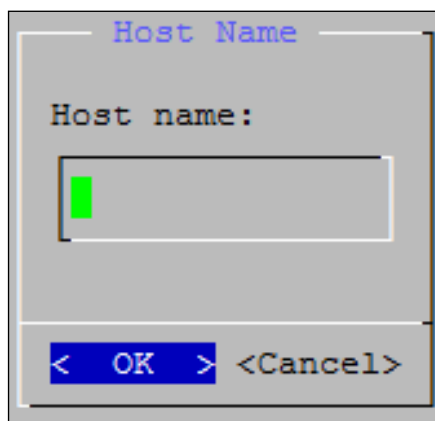


Figure 5-3: Change Host Name

5.1.2. Setting the Server Date

Selecting **Date** from the System Configuration menu will enable the user to set the date for which the server will reference. Select the current day, month and year from the calendar identified in Figure 5-4.

Change Date

Set current date:

Month: July Year: 2009

	Sun	Mon	Tue	Wed	Thu	Fri	Sat
27				1	2	3	4
28	5	6	7	8	9	10	11
29	12	13	14	15	16	17	18
30	19	20	21	22	23	24	25
31	26	27	28	29	30	31	

< OK > <Cancel>

Figure 5-4: Change Date

5.1.3. Setting the Server Time

Selecting **Time** from the System Configuration menu will enable you to set the current time for which the server will reference. Select the hour, minute and second identified in the **Change Time** dialog box as shown in Figure 5-5. Use the up and down arrow keys to set the values and tab to switch boxes.

Time

Time

09 : 01 : 24

< OK > <Cancel>

Figure 5-5: Change Time

5.1.4. Setting the Server Time Zone

Selecting **Time Zone** from the System Configuration menu will enable you to set the current time zone for the region you are in. Toggle through the list of countries and zones to select your region. Refer to Figure 5-6.

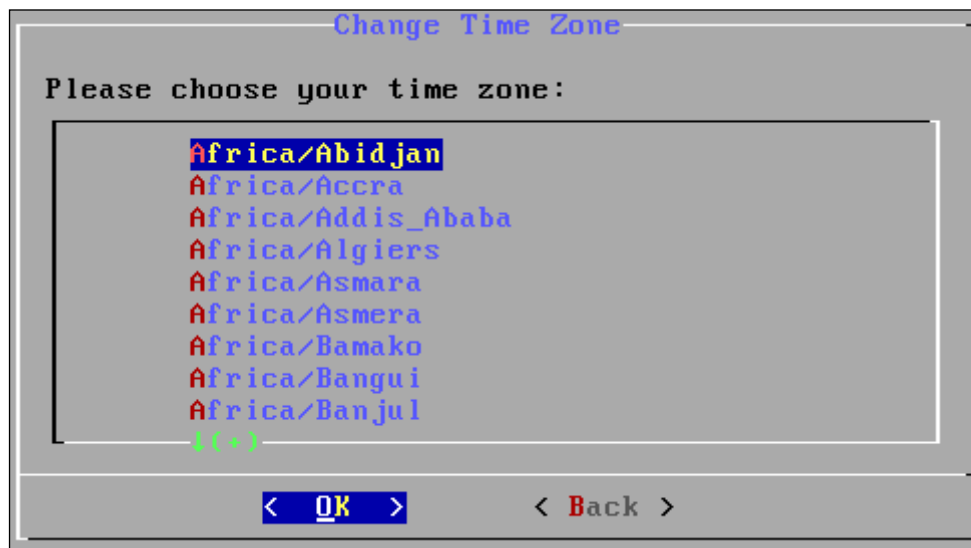


Figure 5-6: Change Time Zone

5.2. NETWORKING CONFIGURATION

The **Networking Configuration** menu will enable the user to set the network information (IP, Netmask, Gateway, and Broadcast).

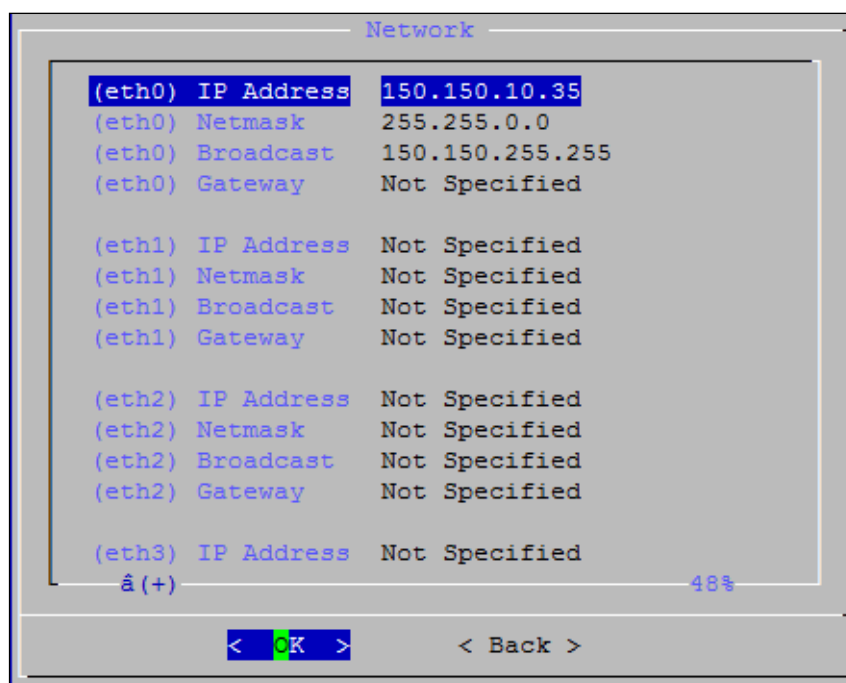


Figure 5-7: Network Configuration Menu

5.2.1. Assigning an IP Address for eth0

To assign an IP Address, select the **(eth0) IP Address** option from the Networking Configuration menu. The dialog box in Figure 5-8 will appear when this option is selected. The user will be prompted to enter the desired IP address into the “New IP address for eth1” field and then select the **OK** button. Please note that the settings must be saved using the **Save and Apply** option from the Networking Configuration menu. Please note that DHCP is NOT recommended at any time.

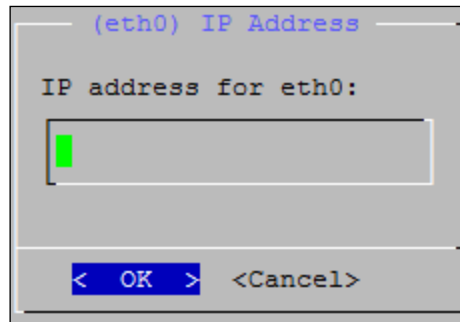


Figure 5-8: Enter New IP Address for eth0

5.2.2. Assigning a Subnet Mask for eth0

To assign a subnet mask for eth0, select the **(eth0) Netmask** option from the Networking Configuration menu. The dialog box in Figure 5-9 will appear when this option is selected. The user will be prompted to enter the desired subnet mask into the “New subnet mask for eth1” field and then select the **OK** button. Please note that the settings must be saved using the **Save and Apply** option from the Networking Configuration menu.

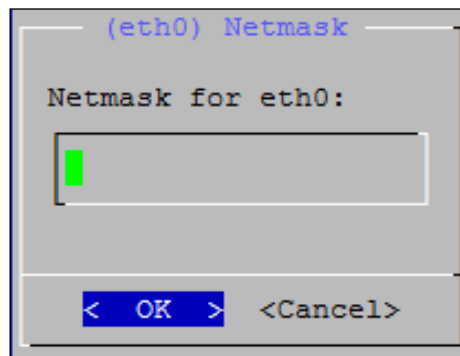


Figure 5-9: Enter New Subnet Mask for eth0

5.2.3. Assigning a Gateway Address for eth0

To assign a gateway for eth0, select the **(eth0) Gateway** option from the Networking Configuration menu. The dialog box in Figure 5-10 will appear when this option is selected. The user will be prompted to enter the desired gateway into the “New gateway address for eth1” field and then select the **OK** button. Please note that the settings must be saved using the **Save and Apply** option from the Networking Configuration menu.

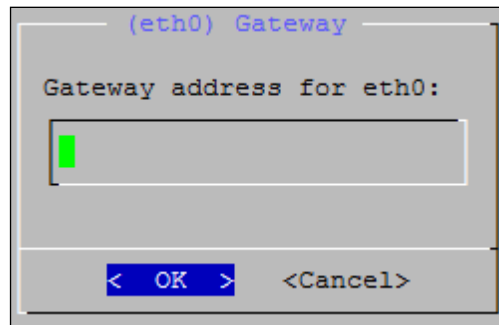


Figure 5-10: Enter New Gateway Address for eth0

5.2.4. Assigning a Broadcast Address for eth0

To assign a broadcast address for eth0, select the **(eth0) Broadcast** option from the Networking Configuration menu. The dialog box in Figure 5-11 will appear when this option is selected. The user will be prompted to enter the desired subnet mask into the "New broadcast address for eth1" field and then select the **OK** button. Please note that the settings must be saved using the **Save and Apply** option from the Networking Configuration menu.

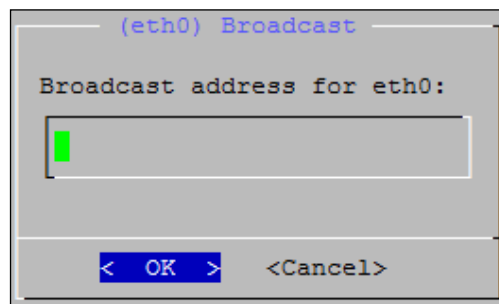


Figure 5-11: Enter New Broadcast Address for eth0

5.3. CLUSTER CONFIGURATION

The **Cluster Configuration** menu will enable the user to set the cluster information for the MAGNUM system.

Figure 5-12: Cluster Configuration

5.3.1. Multicast Address 1

To assign a multicast address to the MAGNUM system, select the **Multicast Address 1** option from the Cluster Configuration menu. The dialog box in Figure 5-13 will appear when this option is selected. The user will be prompted to enter the multicast IP address into the “Enter Multicast Address 1” field and then select the **OK** button.

Figure 5-13: Change Multicast Address 1

To assign a second multicast address to the MAGNUM system, select the **Multicast Address 2** option and enter the desired multicast IP into the “Enter Multicast Address 2” field and then select the **OK** button.

5.3.2. Multicast Interface 1

To assign the network interface to be used for multicast address 1, select the **(host 1) IP Address** option from the Cluster Configuration menu. The dialog box in Figure 5-14 will appear when this option is selected. The user will be prompted to select from that available and configured network interfaces on the server, select an interface and then select the **OK** button.

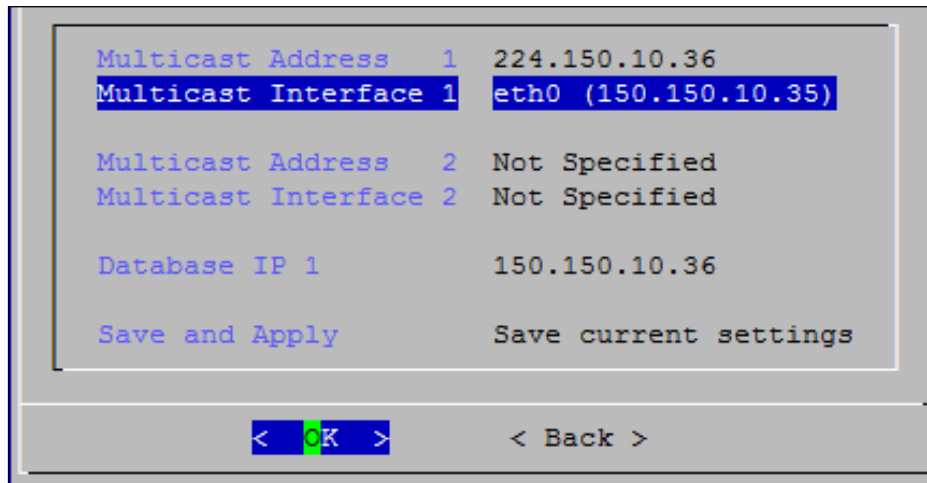


Figure 5-14: Multicast Interface

To assign the second multicast address to the MAGNUM system to a second interface, select the **Multicast Interface 2** option and select from the available and configured network interfaces on the server, then select the **OK** button.

5.3.3. Change Database IP

To change the Database IP address, select the **Database IP Address** option from the Cluster Configuration menu. The dialog box in Figure 5-15 will appear when this option is selected. If the user wishes to change the Database IP address, enter a new IP address into the “Enter the IP address” field and then select the **OK** button. The Database IP address is the IP address assigned to the Active MAGNUM server so that all clients have a single address connected to them regardless of which MAGNUM Server is Active. This is the IP address you will use to access the MAGNUM system.

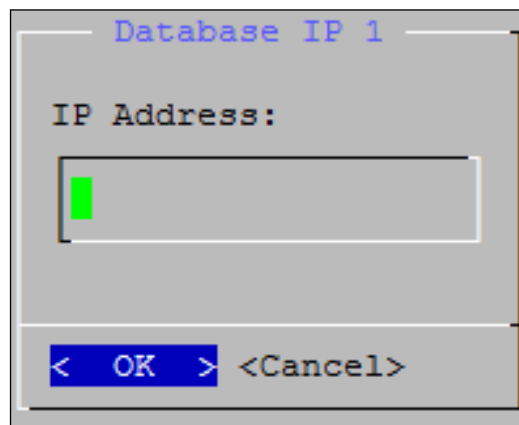


Figure 5-15: Database IP

6. APPENDIX

6.1. FAQ

- If the Magnum installer screen is corrupted on startup, switch to other terminals back and forth. For example, [Ctrl] + [Alt] + [F2] will switch to the command line, and [Ctrl] + [Alt] + [F1] will switch back to the installer screen.
- After a clean shutdown from the USB stick, the USB stick must be physically removed from the server, then re-inserted, before the BIOS recognizes it as a potential boot device again.
- Removing the USB stick during installation, before the server is completely powered off, can corrupt the USB stick and prevent future installations from succeeding when using the same USB stick. If this occurs, recreate the Magnum Live Installation USB stick.
- To create the Magnum Live Installation USB stick, use LinuxLive USB Creator (version 2.8.18 or greater) available from <http://www.linuxliveusb.com>.
 1. Choose your USB key
 2. Choose the source to be the required ISO image.
 3. Change nothing for Persistence.
 4. Select ONLY "Format the key in FAT32"
 5. Click the lightning icon to start the installation

6.2. IPMI

6.2.1. IPMI Remote Access

1. Reboot the server by pressing the **Reset Button** (if the server is not rebooting already).
2. Press **<DELETE>** repeatedly while the BIOS displays the SuperMicro logo in Figure 6-1.



Figure 6-1: BIOS SuperMicro Logo

3. Navigate to **Advanced > IPMI Configuration > Set LAN Configuration**.
4. Set the **IP Address Source** to **Static**.
5. Set the **IP Address**, **Subnet Mask** and **Gateway Address** to ensure the PC can reach the server.
Never change the MAC Address.

Channel Number	[01]
Channel Number Status:	Channel number is OK
IP Address Source	[Static]
IP Address	[150.150.010.041]
Subnet Mask	[255.255.000.000]
Gateway Address	[000.000.000.000]
MAC Address	[00.25.90.71.8C.91]

Figure 6-2: IPMI Configuration

6. Press **<F10>** to save the BIOS settings.
When asked to save and exit as shown in Figure 6-3, select **OK** to power off the server.

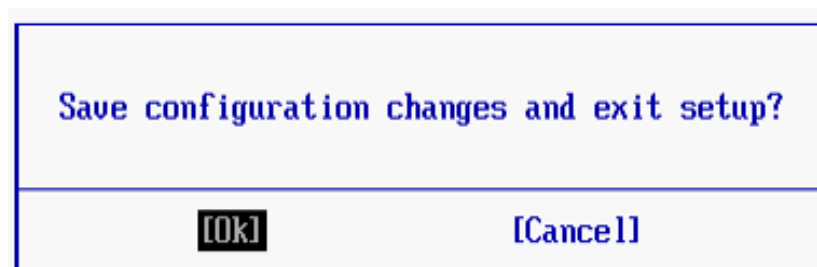


Figure 6-3: Save BIOS Settings

7. Disconnect all power cables for at least 10 seconds.
8. Plug an Ethernet cable into the IPMI Ethernet port highlighted in Figure 6-4.



Figure 6-4: IPMI Ethernet Port

9. Plug in all power cables and the server should power on automatically.
10. On the PC, point a web browser to the server's IPMI IP Address.
11. Login using the username **ADMIN** and password **ADMIN**.
12. The web page shown in Figure 6-5 should appear.

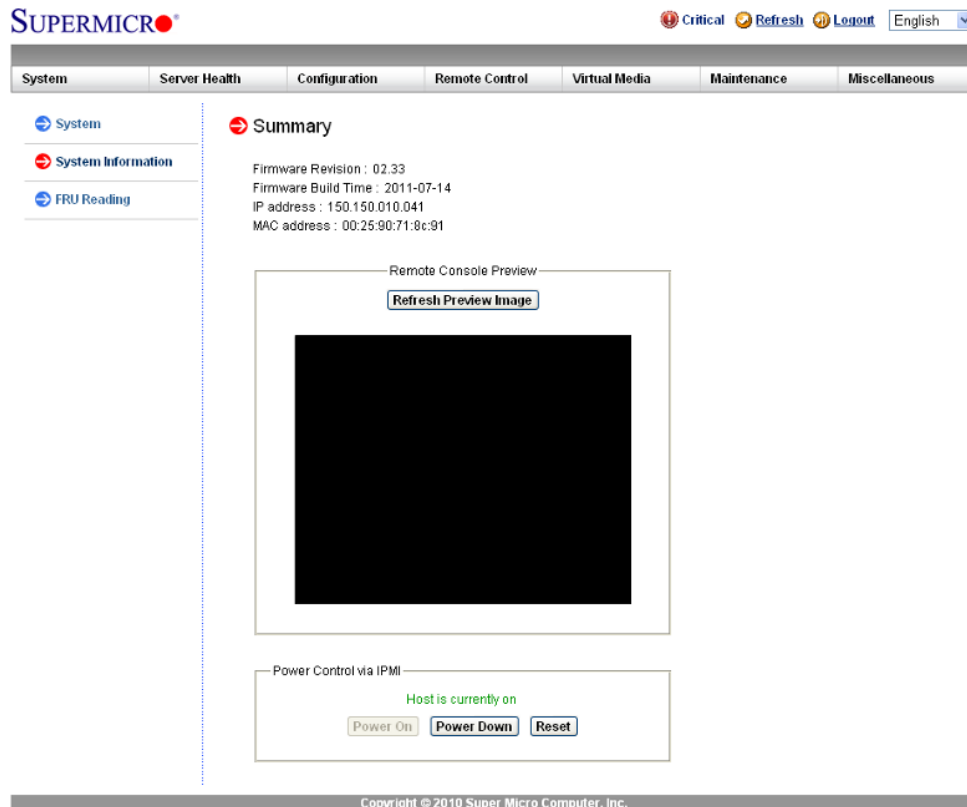


Figure 6-5: IPMI Web Page

13. Navigate to **Miscellaneous > UID Control**. Select **TURN ON**. Click **Save** then click **OK**.
14. The leftmost UID LED under the power buttons should be blinking Blue.
15. Select **TURN OFF**. Click **Save** then click **OK**.
16. Reboot the server by pressing the **Reset Button**. Press **<DELETE>** repeatedly while the BIOS displays the SuperMicro logo.
17. Navigate to **Advanced > IPMI Configuration > Set LAN Configuration**. Set the IP Address to **000.000.000.000** to prevent IP conflicts.

6.3. DRIVE SWAPPING – REPLACING A FAILED DRIVE



This procedure is designed for only using new clear drives.

6.3.1. Overview

MAGNUM-HW-B uses raid 10

Important to note that in this raid you can on replace a drive with one that is equal or greater in size, for field replacements Evertz is able to provide the HDDs

6.3.2. Replacing a Failed Drive Notes:

1. Only insert a drive with the RAID configuration CLEARED.
2. Replace a failed drive only while the server is running
 - A. The drive will rebuild automatically
3. If a drive does not rebuild automatically, the drive is not clear.
 - A. If inserting a drive from a different server, during reboot, select “Clear”.
 - B. If inserting a drive from the same server, during reboot, select “Import Foreign Configuration
4. Red light will blink while the drive is rebuilding
5. Powering off the server will cause rebuilding to restart.
6. If necessary remove failed drive from tray and replace with new drive.
7. The server will not boot without manual intervention if the drive is inserted while powered off.
 - A. Only insert the new drive while the server is running.