



INSTALLATION MANUAL

ISSUE 13

Calrec Audio Ltd Nutclough Mill Hebden Bridge West Yorkshire HX7 8EZ England UK

Tel: +44 (0) 1422 842159 Fax: +44 (0) 1422 845244 E-mail: enquiries@calrec.com Website: www.calrec.com















IMPORTANT HEALTH AND SAFETY INFORMATION

- This equipment must be EARTHED.
- Only suitably trained personnel should service this equipment.
- Please read and take note of all warning and informative labels.
- Before starting any servicing operation, equipment must be isolated from the AC supply (mains).
- Fuses should only be replaced with ones of the same type and rating as that indicated.
- Operate only in a clean, dry and pollutant-free environment.
- Do not operate in an explosive atmosphere.
- Do not allow any liquid or solid objects to enter the equipment. Should this accidentally occur then immediately switch off the unit and contact your service agent.
- Do not allow ventilation slots to be blocked.
- Do not leave the equipment powered up with the dust cover fitted.
- The rack mounting parts of this equipment must be fitted into an enclosure which complies with local regulations.


Cleaning

For cleaning the front panels of the equipment we recommend anti-static screen cleaner sprayed onto a soft cloth to dampen it only.

Explanation of Warning Symbols

The triangular warning symbols below contain a black symbol on a yellow background, surrounded by a black border.



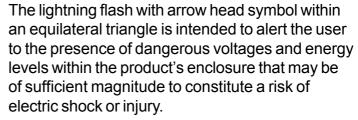



The exclamation mark within an equilateral triangle is intended to prompt the user to refer to important operating or maintenance (servicing) instructions in the documentation supplied with the product.

Power Supply Blanking Plates (ZN4849-3 and ZN6020)

If you are in receipt of a ZN4849-3 or ZN6020 power supply unit please do not remove the blanking plates which are fitted to the unused output connectors. The maximum potential between the terminals exceeds 60 volts, the blanking plates are fitted to avoid the risk of electric shock.





CONTENTS

Technical Support	6
Overview	7
System Overview	
Audio Packs	
Typical Digital System Diagram	
Equipment List	
Environmental Considerations	
Earthing	12
AC (Mains) Power	12
Screen Maintenance	12
System Specification	13
Frame Options and Dimensions	15
Control Surface Frame Sizes	
Control Surface End Profile	
Front Elevation Dimensions	18
Equipment Installation Information	19
Typical Rack Layout	20
Rack Specifications	21
Bulk PSU	22
Multi-Rail PSU	
PSU Monitoring and Distribution Unit	23
PC Information	
Synchronisation	
GPIO Connections	
Dolby DP570 & DP564 setup (for Calrec remote interface)	
Dolby DP570 & DP564 Cabling Schedule	
Optional I/O Expansion Via Wide Area Interfaces	
Serial Interface	32
Wiring and Cabling Information	
Maximum Cable Lengths	
Specification for SCSI Style Cabling	
Category 5e and Category 6 Cables	36
Audio Input and Output Interfaces	37
AES Inputs and Outputs	38
Analogue Inputs and Outputs	
BNC and XLR Interface Connector Panels	40
EDAC Interface Connector Panels	
AES Inputs - BNC Interface	42
AES Outputs - BNC Interface	
AES Inputs - XLR Interface	
AES Outputs - XLR Interface	45





Analogue Mic/Line Inputs (Mic/Line or Line ADC Cards) - Style 1	46
Analogue Mic/Line Inputs (Mic/Line or Line ADC Cards) - Style 2	47
Analogue Line Only Inputs (Line ADC Cards Only) - Style 1	48
Analogue Line Only Inputs (Line ADC Cards Only) - Style 2	49
Analogue Line Outputs (DAC Cards Only) - Style 1	50
Analogue Line Outputs (DAC Cards Only) - Style 2	51
Planning the Use and Labelling of Inputs and Outputs	53
About Labels	
Input/Output Labelling Sheets	56

© 2005 Calrec Audio Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying & scanning, for any purpose, without the prior written consent of Calrec Audio Ltd.

Whilst the Company takes the utmost care in ensuring that all details in this document are correct at the time of publication, we reserve the right to alter specifications and equipment without notice. Any changes we make will be reflected in subsequent issues of this document. The latest version will be available upon request.

This publication is for International usage.

After Sales Modifications

Modifications to this equipment by any party other than Calrec Audio Limited may invalidate EMC and safety features designed into this equipment. Calrec Audio Limited can not be liable for any legal proceedings or problems that may arise relating to such modifications.

If in doubt, please contact Calrec Audio Limited for guidance prior to commencing any such work.

ESD (Static) Handling Procedures

In its completed form, this equipment has been designed to have a high level of immunity to static discharges. However, when handling individual boards and modules, many highly static sensitive parts are exposed. In order to protect these devices from damage and to protect your warranty, please observe static handling procedures, for example, use an appropriately grounded anti-static wrist band. Calrec will supply an electrostatic cord and wrist strap with all of it's digital products.

All modules and cards should be returned to Calrec Audio Limited in anti-static wrapping. Calrec Audio Limited can supply these items upon request, should you require assistance.

This applies particularly to digital products due to the types of devices and very small geometries used in their fabrication, analogue parts can however still be affected.





TECHNICAL SUPPORT

Should you require any technical assistance with your Calrec product then please contact your local distributor, if outside the U.K. and Ireland. For a list of Worldwide distributors please see the Calrec Web site at www.calrec.com or contact Calrec UK.

For technical assistance within the UK and Ireland, please contact the Customer Support Team at :-

Customer Support Calrec Audio Ltd Nutclough Mill Hebden Bridge HX7 8EZ England UK

Tel: +44 (0) 1422 842159 Fax: +44 (0) 1422 845244 Email: support@calrec.com Website: www.calrec.com

We can deal with all technical after sales issues, such as :-

- Arrange repairs
- Supply of replacement or loan units while repairs are being carried out
- Service / commissioning site visits
- Operational training courses
- Maintenance training courses
- Supply of replacement components
- Supply of documentation
- Technical advice by telephone

Customer Support Hours

Factory based customer support engineers can be contacted by telephone during normal office hours, or outside hours, a message can be left on the answering machine. All messages are dealt with promptly on the next working day. Alternatively a message can be sent to them by email.

Product Warranty

A full list of our conditions & warranties relating to Goods & Services is contained in the Company's standard Terms and Conditions. A copy of this is available on request.

Repairs

If you need to return goods to Calrec, for whatever reason, please contact the Company beforehand in order that you can receive advice on the best method of returning the goods, and that a repair order reference number can be issued.


Standard of Service

Ensuring high standards is a priority, if you have any comments on the level of service, product quality or documentation offered to you by Calrec, then the Customer Support team would be pleased to receive your comments through any of the normal contact numbers, email or on the User registration form located at the end of this manual. If you have any other issues regarding your Calrec purchase, then please contact






Overview

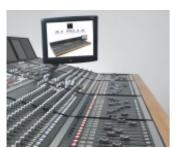



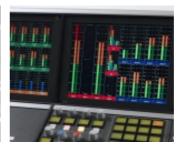








SYSTEM OVERVIEW

- Up to 96 faders, with 2 layers of control (A and B), plus 4 dedicated main output faders.
- 226 equivalent channels: Up to 96 stereo or mono channels plus 34 mono channels.
- Console operates independently of PC.
- Independent DSP operation ensures audio continuity even during PC or control reset.
- Console and racks boot from power on in less than 20 seconds.
- Full control system reset in less than 15 seconds.
- Last settings fully restored on power-up or re-set.
- Automatic change over to hot spares for power supplies, control cards and DSP cards.
- All cards and modules are designed to be hot plugged.
- All cards and modules are designed to initialise upon insertion.

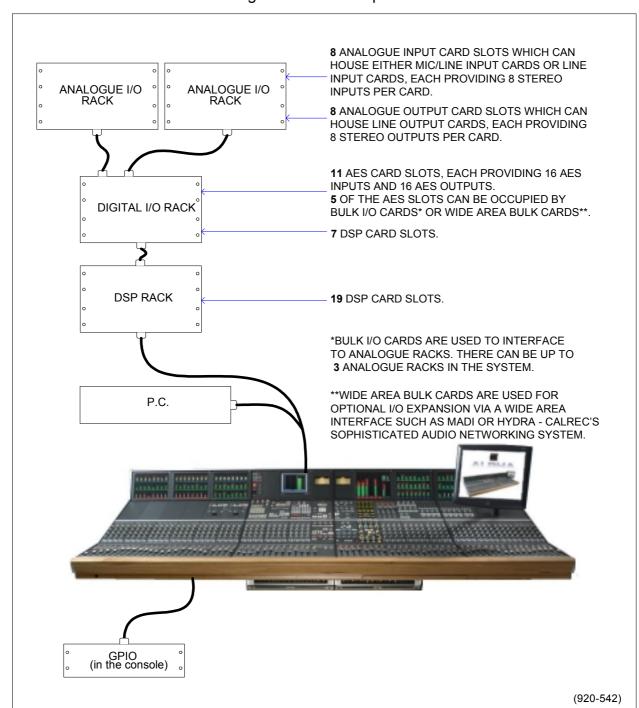





AUDIO PACKS


The console can be supplied in a combination of 5 basic care provisions, which provide pre-defined numbers of channels, groups, inputs and outputs.

The standard port provisions dexcribed here may be expanded by purchasing additional interface cards.

Audio Pack	Α	B1	B2	C1	C2	D1	D2	D3	E1	E3	E4
Stereo Channels	64	64	80	72	96	72	96	92	96	92	72
Mono Channels	0	24	0	36	0	58	24	42	34	52	46
5.1 Surround Channels (allocated from available stereo and mono channels)	0	12	0	18	0	20	12	20	17	20	20
Mono/Stereo Groups	8	8	8	8	8	8	8	4	8	4	4
5.1 Surround Groups	0	0	0	0	0	0	0	4	0	4	4
Mic/Line Inputs	48	64	64	80	80	96	96	96	96	96	96
Line Inputs	32	32	32	32	32	32	32	32	32	32	32
Line Outputs	64	80	80	112	112	112	112	112	128	128	128
AES Inputs	32	48	48	64	64	80	80	80	96	96	96
AES Outputs	32	48	48	64	64	80	80	80	96	96	96





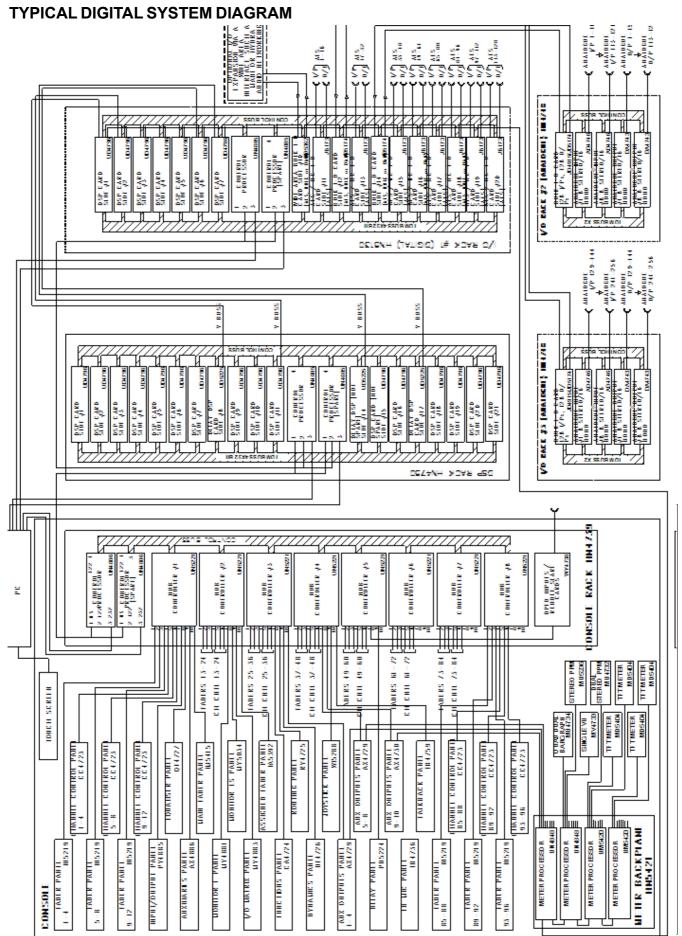





EQUIPMENT LIST

Depending on the options purchased, you should expect to receive the following:

- 1 Control Surface as specified in the quotation, and including:
 - 1 Console Processor card (2 if the hot spare option has been purchased)
 - 2-8 GPIO cards, in line with the quotation.

1 DSP Rack

- 1 Rack Control Processor card (2 if the hot spare option has been purchased)
- Up to 19 DSP cards (18 plus hot spare), in line with the quotation

1 Digital I/O Rack

- 1 Rack Control Processor (2 if the hot spare option has been purchased)
- Up to 7 DSP cards (6 plus hot spare), in line with the quotation
- Up to 11 AES I/O cards, in line with the quotation
- One Bulk I/O card per Analogue I/O Rack in the system
- One Wide Area Bulk I/O card for each optional I/O expansion interface, such as MADI or Hydra

Up to 3 Analogue I/O Racks

- 1 Bulk I/O card to interface to the Digital I/O Rack
- Up to 8 mic/line or line input cards, in line with the quotation
- Up to 8 line output cards, in line with the quotation

2 Bulk Power Supply Racks (For Control Surface and Digital Components)

■ Up to 3 Bulk PSU modules (dependent on size of console and its distance from the Digital I/O Rack, and whether a hot spare is required)

A number of Multi-Rail Power Supplies (For Analogue Components)

■ 1 Multi-Rail PSU is required for systems with just one Analogue I/O Rack, 2 are required for systems with 2 or 3 Analogue I/O Racks, plus 1 or more hot spares if required. PSU requirements can vary depending upon the cabling requirements of each installation

A number of Fan Trays

1 fan tray will be supplied for each rack in the system. The fan trays are to be positioned above each rack.

1 PSU monitor unit

1 PC

1 Set of system cables





ENVIRONMENTAL CONSIDERATIONS

Temperature Range:

Operating 0°C to +30°C (32°F to +86°F) in the immediate environment.

Non-operating -20°C to +60°C (-4°F to +140°F).

Relative humidity:

Operating 25% to 80% non condensing. Non-operating 0% to 90% non condensing.

Altitude:

Operating up to 2,000 metres (6562 feet). (This is the limit to which the safety tests are valid). Non-operating up to 15,000 metres (49213 feet).

EARTHING

The control surface, DSP, Digital I/O and Analogue I/O Racks are provided with chassis earth studs. These must be connected to a common earth buss before any AC power is applied to the system. The system power supplies and PC are earthed via their AC power inlets.

AC (MAINS) POWER

All power supplies are rack-mounting and are seperate from the units they power, except for the PC which has a built-in power supply. AC (Mains) Power inlets are IEC type.

Each power supply unit in the Bulk PSU Racks has one inlet.

Each Multi-Rail power supply unit has one inlet.

The PC has one inlet.

There is one inlet on the rear of the control surface, for any AC powered equipment which needs to be housed within it.

The whole system must be powered from the same phase of the AC power supply. All modules, cards and cables are designed to permit hot plugging.

SCREEN MAINTENANCE

Touch Screen

If the console is installed into an outside broadcast vehicle, it is important that the touch screen monitor is secured using suitable fixings during transit to prevent movement, and possible damage. Calrec Audio Ltd is not liable for any damages to the touch screen, the touch screen arm, the console or any other items caused by movement or damage of the monitor and / or monitor arm.

TFT Screens

The TFT meter screens that are fitted in our consoles are industrial units. The display manufacturer states that screen brightness may reduce to 50% of the initial value after the unit has been running at maximum brightness for 50,000 hrs. We do not believe that there are any burn-in or image-persistence issues with this type of TFT display

The TFT screens should be cleaned with a micro-fibre cloth, dampened only with clean water. Do not use any corrosive chemicals, solvents or window cleaning solutions.

The TFT screens have no user-servicable parts. Should you encounter a problem with any of your 12 screens, please contact Calrec.





SYSTEM SPECIFICATION

DIGITAL INPUTS				
Formats Supported	AES/EBU (AES3) 24-bit Also suitable for use with SPDIF (IEC958 Type 2) signals			
Interface	110 Ohm transformer balanced, 5V Pk-Pk 75 Ohm unbalanced (BNC), 1V Pk-Pk			
Sample Rate Conversion	24-Bit switchable on all digital inputs			
SRC THD+N	-117dB @ 1kHz, 0.00014%			
DIGITAL OUTPUTS				
Formats Supported	AES/EBU (AES3) 24-bit			
Interface	110 Ohm transformer balanced 4V Pk-Pk (nominal) into 110 Ohm load 75 Ohm unbalanced 1V Pk-Pk (nominal) into 75 Ohm load (BNC)			

ANALOGUE INPUTS	
Analogue - Digital Conversion	24-Bit
Input	Electronically Balanced
Input Impedance	>1k Ohms for Mic gains 10k Ohms for Line gains
Sensitivity	+18 / -78dB on Mic/Line Input Card +18/-24dB on Line Only Input Card.
Equivalent Input Noise	-126dB (150 Ohm source)
Distortion	-1dBFS @ 1kHz - Better than 0.003% -20dBFS @ 1kHz - Better than 0.006% -60dBFS @ 1kHz - Better than 0.3%
Frequency Response	20Hz to 20kHz +/- 0.5dB on Mic/Line Input Card 20Hz to 20kHz +/- 0.25dB on Line Only Input Card

ANALOGUE OUTPUTS	
Digital - Analogue Conversion	24-Bit
Output Balance	Electronically Balanced, 20Hz to 20kHz, Better than -35dB, typically -45dB
Output Impedance	<40 Ohms
Distortion	-1dBFS @ 1kHz - Better than 0.006%
	-20dBFS @ 1kHz - Better than 0.003%
	-60dBFS @ 1kHz - Better than 0.3%
Frequency Response	20Hz to 20kHz +/- 0.25dB

- Analogue input for 0dBFS can be pre-set globally to +28, +24, +22, +20, +18 or +15 dBu
- Pre-fader headroom on analogue inputs is adjustable globally from +24 to +36dB in 2dB steps
- Analogue output for 0dBFS matches input setting into >1kOhms (+24dBu max into 600 Ohms)

PERFORMANCE	
Digital to Digital (AES/EBU) Distortion	-1dBFS, 20Hz to 10kHz - Better than 0.002%
Digital to Digital (with SRC) Distortion	-1dBFS, 20Hz to 10kHz - Better than 0.005%
Frequency Response (Analogue Input to Output)	20Hz to 20kHz +/- 0.5dB
SYNCHRONISATION	
48kHz synchronisation	NTSC/PAL Video
	Internal Crystal Reference
	TTL Wordclock (48kHz +/- 100Hz)
	AES/EBU Digital Input (48kHz +/- 100Hz)

The system can be pre-set with up to five external sync sources, plus internal, such that if the 1st source fails, it will automatically switch to the 2nd, and so on.









Frame Options and Dimensions











CONTROL SURFACE FRAME SIZES



Frames are made up of sections which can be 4, 5 or 6 modules wide. This allows many different sizes of console to be achieved using different combinations of different sized sections. Fader modules have 4 faders each, so console size can depend on the number of faders required.


The table below shows the dimensions of the standard frame sizes available. Sections within the frame do not have to be in the order shown. For details of custom frames, with wedge sections etc, please contact Calrec.

No of Modules	Frame	Len	gth	Depth		
Wide	Frame	inches	mm	inches	mm	
12	4:4:4	60.9	1547	43.2	1098	
13	4:4:5	65.9	1672	43.2	1098	
14	4:4:6	70.8	1797	43.2	1098	
15	4:5:6	75.7	1922	43.2	1098	
16	4:6:6	80.7	2047	43.2	1098	
17	5:6:6	85.6	2172	43.2	1098	
18	6:6:6	90.5	2297	43.2	1098	
19	4:4:5:6	95.7	2428	43.2	1098	
20	4:4:6:6	100.6	2553	43.2	1098	
21	4:5:6:6	105.5	2678	43.2	1098	
22	4:6:6:6	110.4	2803	43.2	1098	
23	5:6:6:6	115.4	2928	43.2	1098	
24	6:6:6:6	120.3	3053	43.2	1098	
25	4:4:5:6:6	125.4	3184	43.2	1098	
26	4:4:6:6:6	130.4	3309	43.2	1098	
27	4:5:6:6:6	135.3	3434	43.2	1098	
28	4:6:6:6:6	140.2	3559	43.2	1098	






CONTROL SURFACE END PROFILE

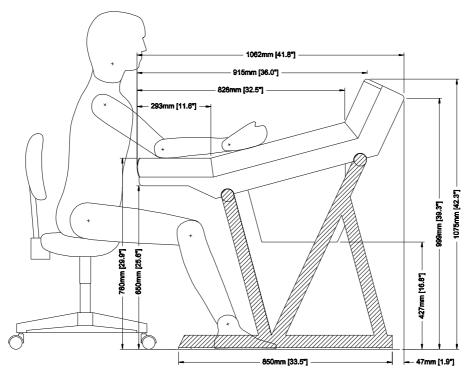

The above dimensions are for the standard control surface with A/B faders. The control surface can be seperated from the stand (shaded) for access to premises. The control surface sections can also be split apart if required.

OB Frame Dimensions


When housed in an outside broadcast vehicle, the rack equipment is located underneath the console.

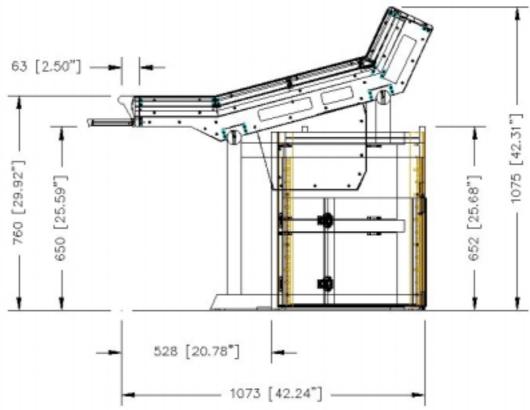






FRONT ELEVATION DIMENSIONS

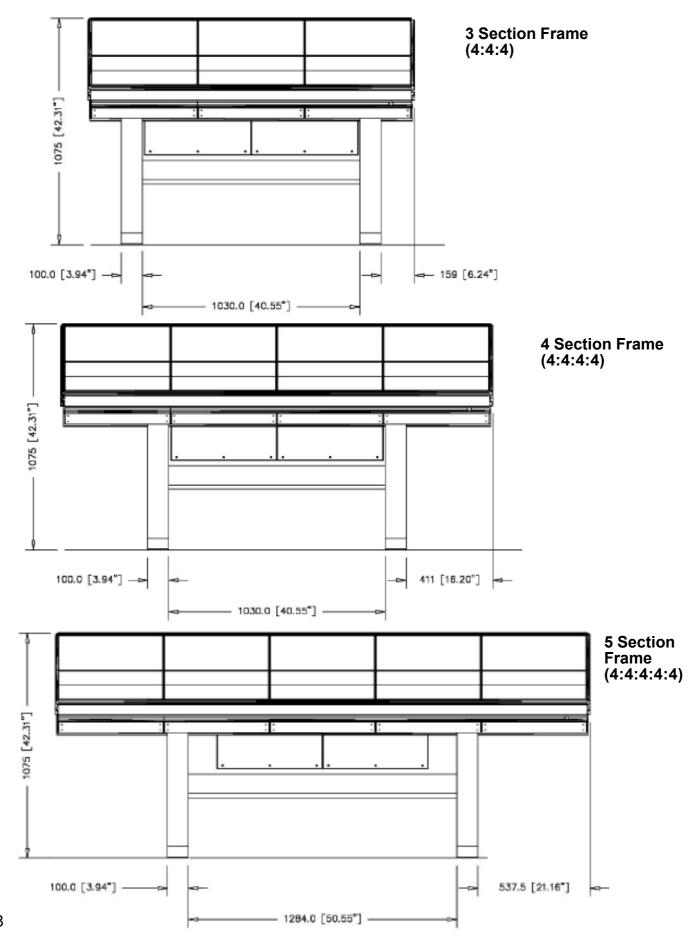





Equipment Installation Information

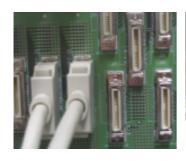












TYPICAL RACK LAYOUT

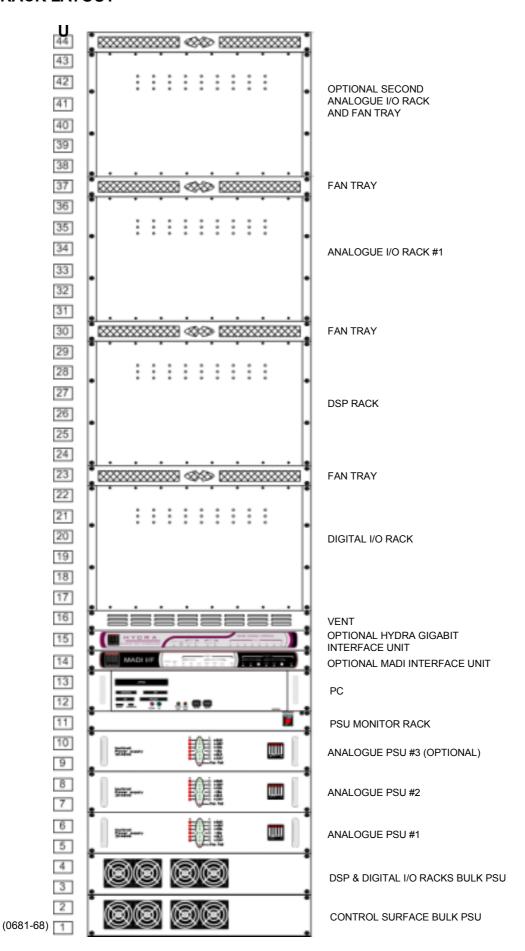





RACK SPECIFICATIONS

The company recommends that all equipment over 8Kg (17.5 lbs) in weight, or over 150mm (6 inches) deep is mounted into equipment bays which offer mechanical supports under each of the units. This will allow units to be supported as they slide forward during removal for maintenance purposes.



Equipment can be mounted in separate enclosures. Please refer to the cable lengths table on page 32 before planning this. The PSU monitor Rack can be mounted on the rear of the equipment bay if desired.

Each audio rack (DSP, Digital I/O, and Analogue) is supplied with a 1U low noise fan tray which should be positioned immediately above the rack. The fan tray incorporates a baffle such that warm air is sucked up out of the rack and out through the rear of the fan tray. A vent in the front of the fan tray allows ambient air to enter. The baffle deflects this air up into the rack above. The bottom rack should have a 1U vent beneath it to allow ambient air to enter. It should also not be positioned above any equipment producing significant heat.


Items	Height	ght Approx depth (incl. mating cons)		Approx	weight	Approx Power Output (W)	Approx AC Power (VA) (full load)
		inches	mm	lbs	kgs	(full load)	(Iuli loau)
DSP Rack (with cards for an average size system)	6U	18.9	480	26.0	11.8	1	-
DSP Rack (with cards for the largest system)	11	"	11	38.4	17.4	-	-
Digital I/O Rack (with cards for an average system)	6U	18.1	460	29.8	13.5	-	-
Digital I/O Rack (with cards for the largest system)	=	=	"	42.6	19.3	1	-
Analogue I/O Rack (1/2 full)	6U	18.1	460	26.0	11.8	ı	-
Analogue I/O Rack (full)	"	"	11	35.7	16.2	-	-
Bulk PSU rack with one PSU*	2U	18.5	470	17.4	7.9	1000	1250
Extra PSU for Bulk rack	-	-	-	7.3	3.3	1000	1250
Multi-Rail PSU*	2U	18.1	460	22.1	10.0	440	660
Power for Hot spare (any type)	ı	-	-	-	1	No extra	Less than 5% extra
Fan Tray	1U	19.7	500	6.6	3.0	1	-
PSU Monitor box	1U	6.7	170	4.4	2.0	1	-
PC*	2U	23.7	600	27	12.2	1	360
MADI Unit	1U	11.9	300	7	3.2	ı	-
Hydra Gigabit Interface Unit	1U	10.4	265	6	2.7	-	-

^{*} Note: PSU's have handles protruding approx 1.3" (32mm) from the surface of the front panel.





BULK PSU

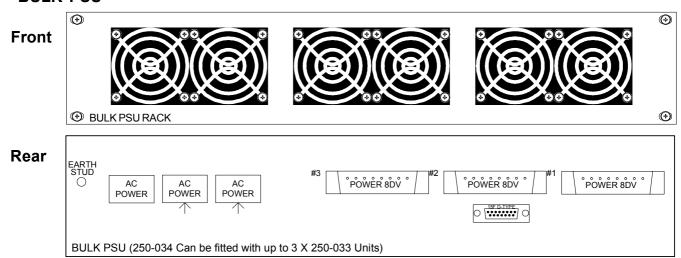

The Bulk PSU Rack is a 2U rack which can hold up to three identical 24V 1kW plug-in power supplies. The rack has separate AC power inputs and DC outputs for each of the three plug-in power supplies on the rear of the unit. Any of the plug-in power supplies can be removed from the rack without disturbing the operation of the others. Diode feeding allows supplies to be parallelled together. The DSP Rack and Digital I/O Rack are powered as one unit from one of these 2U racks. The control surface is separately powered from another of these 2U racks. The number of plug-in power supplies required is dependent upon the size of the system, the distance between console and rack, and the "hot spare" requirement.

Each of the plug-in power modules has its own cooling fan. The warm air is directed out of the rear of the rack. To ensure proper cooling, the power system requires a minimum clearance of 50mm (2 inches) from the fans and rear air outlets, and also any walls or other surfaces.

Mounting Instructions

The unit should be mounted by means of the side brackets, each of which has two mounting holes. It should always be mounted in a horizontal position. The rear mounting brackets should be used when no support is provided under the rack assembly, the rack should not be supported by front flanges alone. The rear mounting brackets fix to the rear of the studio equipment bay. Extensions of the rack sides slot into these rear supports, allowing the Bulk PSU rack to be removed without removing the support.

Input Power Connections

3-wire safety AC outlet sockets should be located near the power system (number as required). Each line cord will provide AC power to one of the power supply modules. The AC line cord is the mains disconnect for each module. The AC line cords should have an IEC320 connector to plug into the rear of the power system chassis. Each line cord MUST be suitably rated and FUSED (or have an equivalently rated circuit breaker). For 230V mains, the rating is10A for the line cords and breakers. For 115V mains, the rating is 15A, (line cords are known as SVT or SJT type).

Do not remove the ground conductor. The ground conductor is connected to safety ground to minimize electrical shock hazard and ensure low EMI (electromagnetic interference). The grounding lug, located on the rear panel, is a bonding for connection of the chassis to other system chassis assemblies. Safety grounding is provided via ground connections in the line cord entry receptacles.


System Fan Noise (dB SPL A-Weighted)

These measurements were taken on axis at 1 metre from the dominant noise source:

Bulk PSU Rack					
1 x 24V 1kW PSU	49dBA				
2 x 24V 1kW PSU	52dBA				
3 x 24V 1kW PSU	54dBA				





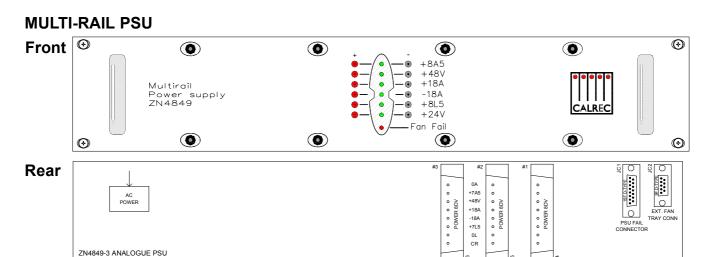

Analogue I/O Racks use a 2U Multi-Rail power supply. Diode feeding allows supplies to be parallelled together. The number required will depend on the type of installation and hot spare requirement. Generally, one Multi-Rail power supply unit is required for one Analogue I/O Rack, and two for two or three fully populated Analogue I/O Racks. An additional Multi-Rail power supply can serve as the hot spare for several Analogue I/O Racks, provided they are housed together. If racks are housed in different locations, each may require a hot spare to provide redundancy. All hot spares are optional.


Mounting Instructions

Multi-Rail power supply units are fitted with rear flanges to allow the rear of the unit to be bolted to the studio equipment bay. In Outside Broadcast situations, the unit should ideally be located into an equipment bay which offers mechanical support from underneath.

Cooling

The Multi-Rail power supply unit is also fan cooled but uses a very low noise fan, drawing air from side to side through the unit, instead of in from the front, to further minimise noise. Should any of the fans slow down or stop, or any voltage rail fall outside specified limits, a PSU fail signal will be sent to the console and PC to warn the operator of a problem.

PSU MONITORING AND DISTRIBUTION UNIT

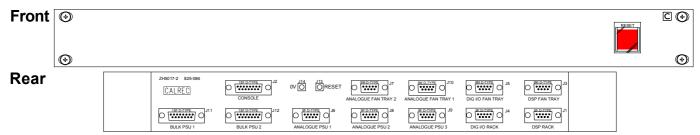

The Power Monitoring and Distribution unit monitors the power supplies for failures, and ensures "hot" changeover to the spare should a fault develop. The reset button reboots the racks only, the control surface is unaffected.

PLEASE NOTE: Resetting the racks will result in a brief audio interruption.

Mounting Instructions


This unit should be secured into the front of the bay by the two standard fixing holes in each of the two 1RU front angles. The unit should always be mounted in a horizontal position. It is recommended that the rack is not supported by the front flanges alone.





PC INFORMATION

Operating System	Windows XP
CPU	Intel Celeron Processor (2GHz+)
RAM	256 MB DDR RAM
HDD	40GB
CD ROM	52x
Network Ports	2 x 10/100
Card Slots	Compact Flash/Microdrive, SmartMedia, Memory Stick, Secure Digital/Multimedia Card
USB 2 Ports	4 (Rear of Unit), 1 (Front of Unit)
IEEE1394 Port	1 (Front of Unit)
Additional Hardware	8 Port Serial Card
Additional Software	PC Anywhere

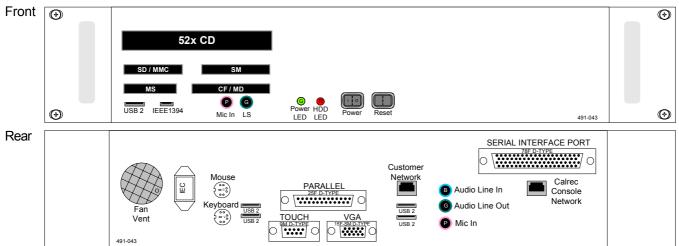

Mounting Instructions

The PC should be mounted by means of the side brackets, each of which has two mounting holes. The PC rack should always be mounted in a horizontal position. The sliders should be used when no support is provided under the PC assembly. It should not be supported by front flanges alone. Failure to follow these instructions may invalidate the warranty. The PC is earthed via its AC power inlet.

Remote Access

USB connectors are provided on both the front & the rear of the PC for the option to add an external modem of your choice. If a modem is added, and a suitable telephone line installed, the console can be remotely accessed by Calrec Support Engineers to aid software upgrades and diagnostic work. This can greatly enhance the level of service and support we can provide. A dial-up facility must first be activated at the PC before this is possible, to ensure that connections are not made at inappropriate times or without the user's knowledge and consent.

Network Ports

A network port is provided to enable the user to connect to their own LAN. Calrec will not be responsible for the configuration of this port or for any performance issues arising from its use. A second Ethernet port is provided to enable the PC to be connected to a Calrec Hydra Audio Network, which is an option which can either be purchased with the console or in the future.

Software Supplied

An OEM PC Operating System license is supplied with each console, and the operating system software is pre-installed. The console software is also pre-installed, and supplied on a CD-ROM.





3rd Party Software

Calrec recommends that the PC is regarded as an integral control device for the console, and not as a general purpose PC. If 3rd party software is installed on the PC, care must always be taken to ensure that it does not interfere with the normal performance of the PC. The installation of inappropriate software on the PC may invalidate the console warranty.

Usernames and Passwords

The PC will be set up with two sets of usernames and passwords:

Username	Password	Description
CalrecAudio	(None)	This user can install and run programs, but not change PC hardware settings, (i.e. set-up network, install drivers). This user is intended to be used during normal operation of the PC.
CalrecAudioAdmin	calrec	This user has full rights to the PC, and can install and change PC hardware settings. This user is intended for use during re-configuration of the PC and to set up Hydra Audio Networking.

File Backup

A number of flash card slots are provided on the front of the PC for file backup. In addition, backup could also be to a customer's LAN or to a USB device which can be plugged into the front or rear of the PC. The following files are not installed from the CD-ROM as they are specific to each individual console. As such, a backup copy should be kept of these files in-case of PC or hard-drive failure:


Filename	Description	
C:\Alpha\Cust1\Config.ini	This file should only be altered by an approved Calrec engineer using a specifically designed application. The file can be copied but any unauthorised changes made will render it inoperable, including changing the date stamp of the file (such as saving even if not edited). If the file needs to be e-mailed to Calrec for any reason it should always be zipped to protect the file time/date stamp. A new backup copy of this file should be made after a console upgrade.	
C:\Alpha\Cust1\Setup.ini	This file is updated when changes to console settings are made and saved using the set-up application. It should not be altered by any means other than by using the set-up application. A new backup copy of this file should be made after such changes are made or after a software upgrade.	
C:\Alpha\Cust1\Options\Options.bin (Or C:\Alpha100\Cust1\Options.bin in earlier software versions)	This file is updated and a new backup should be made when changes to any of the sub-pages of the options screen are made and saved.	
C:\Alpha\Cust1\memories	This is the default location for the user memories. However, operators can choose to save them to any location they desire. The maintenance department should keep a backup of the important default memories, whilst operators should be encouraged to keep their own backups of their own memories and to update them whenever they make important changes to them. After a software upgrade the main set of memories will be upgraded and checked by the engineer carrying out the upgrade. A new backup should then be made of these memories.	
C:\Alpha\Cust1\Meter	This is the default location for the user-definable meter configurations. If your console uses these, you should also keep a backup copy of the files in this folder.	
C:\Alpha\Cust1\Monitor	This is the default location for the user-definable monitor panel configurations. If your console uses these, you should also keep a backup copy of the files in this folder.	
C:\Alpha\Cust1\Network	If your console uses Hydra Audio Networking, you should also keep a backup copy of the files in this folder. These are the configuration settings for the network units.	
For customers using Compaq PC's only: C:\Alpha100\Cust1\A100fe1.ini C:\Alpha100\Alphaprg\Alphaprg.ini	These files are installed from the CD-ROM in a default format. The settings in these files can vary in different Compaq PCs. The backup of these files should be updated after a software upgrade. If a new hard-drive is fitted to the original Compaq PC, these files should be used to over-write the versions installed by the CD-ROM.	





SYNCHRONISATION

The system can be pre-set with up to five external sync sources, plus internal, such that if the 1st source fails, it will automatically switch to the 2nd, and so on. Please note that the facility for locking to external AES sources is restricted to the first six inputs of each AES card in the console. One of the external sources can be Video, (PAL or NTSC). TTL Wordclock is another possible external source. Synchronisation inputs for Video Sync (PAL or NTSC) and TTL Wordclock are provided on the rear of the DSP/Digital I/O Rack, on 75Ω BNC connectors.

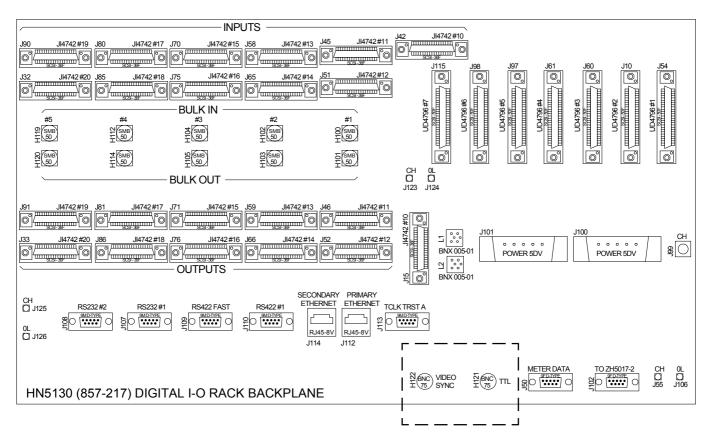

When using a digital input or wordclock as a source, the system will tolerate a variation of up to +/-100 Hz in the frequency of the source. The console may also be synchronised from its internal crystal oscillator (48 kHz).

It is strongly recommended that all items of digital equipment connected digitally to the console, are synchronised to the same sync signal.


If the console's internal sync is to be the master, other digital equipment should be synchronised to the digital outputs of the console.






GPIO CONNECTIONS

Connections to the general purpose inputs and outputs are provided on 36 way female SCSI-style connectors on the rear of the console. Up to 8 cards can be fitted, each of which can provide up to 16 general purpose outputs and 8 general purpose inputs.

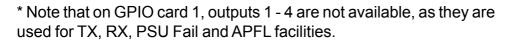



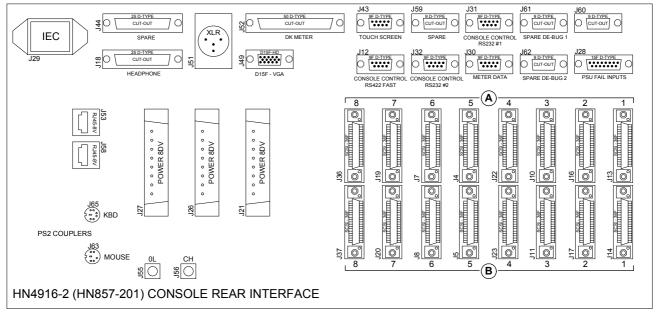

Relay Output Specification: 100mA maximum switch current, 30V maximum voltage.

Opto Input Specification: DC - 5 to 50 volts, positive or negative,

AC - 5 to 50 volts peak, 50-60Hz.

Connector 1 of 2		
Pins	Circuit	
1 . 19	5V	
2.20	Opto 1	
3 . 21	Opto 2	
4 . 22	Opto 3	
5 . 23	Opto 4	
6	* Relay 1 No	
24	Nm	
7	Com	
25	* Relay 2	
8	Nm	
26	Com	
9	* Relay 3	
27	Nm	
10 .	Com	
28	* Relay 4	
11	Nm	
29	Com	
12	Relay 5	
30	Nm	
13	Com	
31	Relay 6	
14	Nm	
32	Com	
15	Relay 7	
33	Nm	
16	Com	
34	Relay 8	
17	Nm	
35	Com	
18 . 36	0V	

B Connector 2 of 2		
Pins	Circuit	
1 . 19	5V	
2.20	Opto 5	
3 . 21	Opto 6	
4 . 22	Opto 7	
5 . 23	Opto 8	
6	Relay 9	
24	Nm	
7	Com	
25	Relay 10	
8	Nm	
26	Com	
9	Relay 11	
27	Nm	
10 .	Com	
28	Relay 12	
11	Nm	
29	Com	
12	Relay 13	
30	Nm	
13	Com	
31	Relay 14	
14	Nm	
32	Com	
15	Relay 15	
33	Nm	
16	Com	
34	Relay 16	
17	Nm	
35	Com	
18 . 36	OV	





DOLBY DP570 & DP564 SETUP (FOR CALREC REMOTE INTERFACE)

The following instructions are to set up a Dolby DP570 or DP564. Please also refer to the drawing opposite and schedule on the next page for connection details.

On the Dolby box:

<label> means press the button with the name label.

Power up the unit and wait for it to get going.

<setup>

<down arrow> until you see "SYSTEM SETTINGS"

<enter> Unit name is now displayed

<down arrow> until you see "GPI setup"

<enter> "GPI pin 23" is displayed

<enter> "GPI pin 23 trigger" is displayed

<enter>

<down arrow> until you see "Edge"

<enter>

<esc> "GPI pin 23 trigger" is displayed

<down arrow> "GPI pin 23 Polarity" is displayed

<enter>

<down arrow> until you see "Positive/High"

<enter>

<esc> "GPI pin 23 Polarity" is displayed

<down arrow> "GPI pin 23 Function" is displayed

<enter>

<down arrow> until you see "FULL" meaning surround.

<enter>

<esc> "GPI pin 23 Function" is displayed

<esc> "GPI pin 23" is displayed

<down arrow> "GPI pin 24" is displayed

Repeat the process for all the GPI pins 24 - 31 (as drawing/spreadsheet)

<esc> "GPI setup" is displayed

<down arrow> "GPO setup" is displayed

Now go though the same routine to set up the outputs on pins 7 to 14 (as drawing/spreadsheet) with trigger as "Level", Polarity as "Positive/High", and function as spreadsheet.

<esc> Until back at original menu.

Note: With issue 1 cable, the outputs were on pins 8 to 15.



SCSI 1

To H

Alpha Remote Card

J16

J17

SCSI2



<u>Dolby Multichannel Audio Tool Model DP570 to Alpha Remote Connection Cable (fully isolated)</u>
Designed to be plugged in second remote card

Ğ	olby DF	Dolby DP570 GPIO	To Alpha	To Alpha 2nd Remote Card	To Alp	To Alpha 2nd Remote Card	DP570 2.5m Long	g Alpha Re
8	nnecto	connector D37 Male	Remote SCSI 1	SCSI 1	Remo	Remote SCSI 2		
pin	u	function	pin	function	pin	function	OSZ Mala	טטט
~		5V	6,9,12, 15,25,28 ,31,34	Relay 1-8 No	9	Relay 9 No	To Dolby Box	SOS HOL
7		Fault Output						
က		Error_Output						
4		User defined output						
2		Solo tally output						Ī
9		Solo control input						
7		Surround						
∞		Stereo	2	Opto 1				
တ		Mono	က	Opto 2				
10		Phantom Centre	4	Opto 3				
1	_	3Stereo	2	Opto 4				
12	۲.	Prologic			2	Opto 5		
13	_	Line			က	Opto 6		
14	+	Custom			4	Opto 7		
15	10	RF			2	Opto 8		C
16	3							n
17	_							
18	~							
19	9							
20								9
21	_						Each Relay common needs	non needs
22	۲.						a 330R resistor in series	series
23	_	Surround	7	Relay 1 Com			D37 Male	
24	4	Stereo	26	Relay 2 Com				
25	10	Mono	10	Relay 3 Com				
26	3	Phantom Centre	59	Relay 4 Com			23	3300
27	2	3Stereo	13	Relay 5 Com			22	1000
28	3	Prologic	32	Relay 6 Com				
58	6	Line	16	Relay 7 Com			24	330R
90		Custom	35	Relay 8 Com				
31		RF			7	Relay 9 Com	•	
32								
33	~						•	
34	+							
35	2						31	330R
98	_		0 4 4 4		0	H		
37		Digital Ground	6,11,14, 17,20,21, 22,23,24,	Digital Ground	20,21, 22,23, 24	Kelay 9 Nm, Opto 5-8 returns		
] 29			27,30,33			┪		





DOLBY DP570 & DP564 CABLING SCHEDULE

able st	Cable schedule for Dolby DP570 & DP564 remote connecti	lby DP570 (3 DP 562	t remate a	connection	on to Calrec Alpha	a 100						0681-87
Cable No	Cable	Cable	Length	Colours		From					To		Circuit
	Description	Type			Pins	Conn Type	Area	Con. No.	Area	Con. No.	Conn Type	Fins	
1	Alpha Rem1	BEL109510	8m	Bkof(BWR)	*	D87MC	Eqpt Bay	GPIO	HN4916-2	316	SCSI 36M	\$9	Relay 1-8 No (5V)
		310-201		BKW	7.8	Cable Mounting	Dolby Unit	=	=	=	Cable Mounting	2.3	Opto 1 / 2 (Stereo/Mono)
				BK/G	9.10	Hood: 420-499	=	=	=	-	Hood: 410-156	4.5	Opto 37 4 (Ph centre/3stereo)
				BK/B	234.244	Insert: 420-496	=	=	=	=	Insert: 410-155	7.26	Relay 1 / 2 Com (Surr/Stereo)
				Pkď	25e.26e	=	=	=	=	=	=	10.29	Relay 3/4 Com (Mono/Phoentre)
				HK/Bn	27#.28#	=	=	=	=	-	=	13.32	Relay5/6 Com(3Stereo/Pro logic)
				BKVO	294.304	=	=	=	=	-	=	16.35	Relay 7 / 8 Com (Line/Qustom)
				RVV	2	=	=	=	=	=	=	2	
				P.G	2	=	=	=	=	=	=	2	
				88	2	=	=	=	=	=	=	2	
				R of (BWR)	37*	=	=	=	=	=	=	8	Relay 1-8 Nm Opto Returns
				Scr	Shell*	=	=	=	=	=	=	Shell	Earth
2	Alpha Rem2	BEL 5 9505	8m	Bkof(BWR)	*	=	=	=	HN#916-2	717	SCSI 36M	9	Relay 9 No (5V)
		310-379		BKW	11.12	=	=	=	=	=	Cable Mounting	2.3	Opto 5 / 6 (Pro logic/Line)
				BKVG	13.14	=	=	=	=	=	Hood: 410-156	4.5	Opto 7 / 8 (Custom/RF)
				Bkof(BlvB)	3	=	=	=	=	=	Insert: 410-155	~	Relay 9 Com (RF)
				B of (BIVB)	일	=	=	=	=	=	=	오	
				Pko₹	일	=	=	=	=	=	=	2	
				R of (BWR)	37*	=	=	=	=	-	=	24 +++	Relay 9 Nm Opto Returns
				Scr	Shell‡	=	=	=	=	=	=	Shell	Earth
TICAL													Application of the Control of the Co
2	*= shared nin												(DOID) CILCUIS)
	\$ Fin 6 also links to pins 9, 12, 15, 25, 28, 31, 34	S to pins 9. 1.	2, 15, 25	. 28. 31.3	25								
	# Each pin (23	3 to 31) separa	ately need	Is a 330R 0	25W Resi	# Each pin (23 to 31) separately needs a 330R 0.25W Resistor (080-331) in series with the wire (9 resistors in total)	ies with the	wire (9re	sistors in tota	(F			
	** Pin 8 also links to pins 11 . 14 . 17 . 20 . 21 . 22 . 23 .	s to pins 11.	14.17.2	0.21.22.	24.	27.30.33							
	*** Pin 24 also links to pins 20 . 21 . 22	inks to pins 20	. 21 . 22	. 23									
	DG = Digital Ground	pund											
	NC = No Connection, tie back	ction, tie back											
Inte: A leg	Note: Also see drawing 970-605	n-605											
lote: This	Note: This fully isolates the two systems. The original test cable did not	two systems	. The orig	inal test cak	ole did not	because the opto returns were not used	turns were n	ot used.					Run No. 1 - 1
lote: Wir	Note: Wires shown here on pins 7-14 of D37 were connected to pins	on pins 7-14 of	. D37 wer	e connecte	d to pins 8	8-15 on issue 1 schedule. Dolby box setup would be different for issue 1 cable	dule. Dolby I	oox setup	would be diff	erentfori	ssue 1 cable		Cable Description:





OPTIONAL I/O EXPANSION VIA WIDE AREA INTERFACES

MADI




The rack mounted MADI unit contains two independent AES10 MADI compatible interfaces, and is available as an option. The two ports are interfaced to the Alpha system via a Wide Area Bulk (WAB) card, which occupies one of the AES card slots in the Digital I/O Rack. Each MADI interface can operate in either 56 or 64 channel mode and can transmit over a coaxial AND optical medium and receive over a coaxial OR optical medium. A switch allows receiver selection. There is no sample rate conversion available on MADI inputs or outputs therefore, all the equipment connected via MADI must be synchronised to the same source as the console.

HYDRA



The Hydra audio networking system provides a powerful network for sharing of I/O resources and control data between Calrec digital consoles. Remote I/O units, with up to 96 inputs/outputs, analogue or digital, may be connected onto the network, providing remotely located sources and destinations that can be used by any or all mixing consoles. The console interfaces to the Hydra gigabit interface unit shown above, via a Wide Area Bulk (WAB) card, which occupies one of the AES card slots in the Digital I/O Rack.

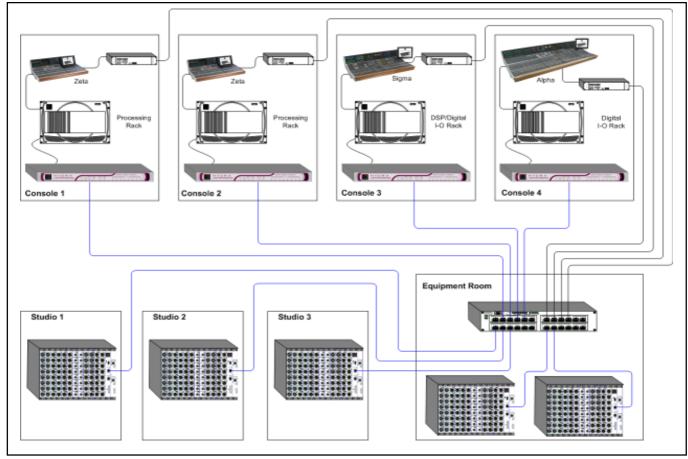





SERIAL INTERFACE







The system currently supports the following serial interfaces:

- Cue Director
- Nexus Router
- TSI Image Video 1000


Serial port setup and label associations are made using the Options-Serial I/F screens.

Serial Port Settings Screen

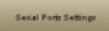

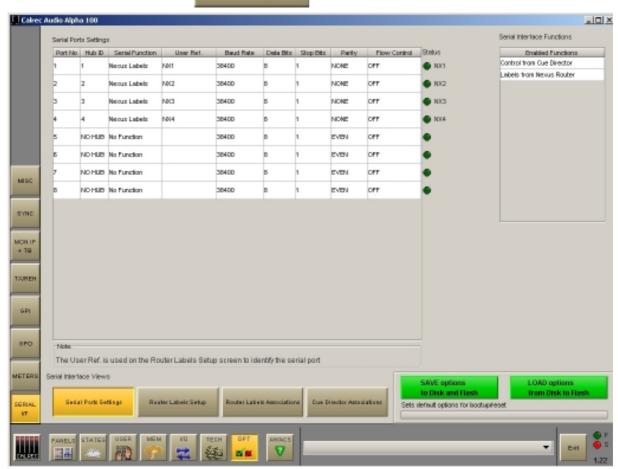

The console can have up to 8 hub cards, each of which can have a serial interface port for allowing equipment to be connected to the system. The Serial Port Settings screen is used to tell the system what information it should receive from each serial interface port, by allocating a function to each from the Serial Function column. Only the serial functions which are enabled for the console will be available for selection.

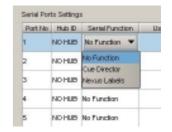

The Hub ID number is also selectable from a drop down list. The ability to change the Hub ID number is useful for the situation where two routers are connected to the console, sending the same information. If one router or serial port fails the serial function can be moved from one hub to another.

The function can be given a name by typing up to six characters in the USER REF column.

For each function there is an indicator which flashes when a valid message is received from the user serial port.





Wiring and Cabling Information













MAXIMUM CABLE LENGTHS

	Cables	Maximun	n Length
From	То	Feet	Metres
Control Surface	Control Surface Bulk PSU	100.0	30.0
Control Surface	PC	500.0	150.0
Control Surface *	DSP & Digital I/O Racks *	100.0	30.0
PC	DSP & Digital I/O Racks	100.0	30.0
DSP Rack	Digital I/O Rack	1.3	0.4
DSP & Digital I/O Rack	Racks Bulk PSU	100.0	30.0
Digital I/O Rack	Analogue I/O Rack	33.0	10.0
Digital I/O Rack	Digital I/O Interface Panel (BNC/XLR)	9.8	3
Analogue I/O Rack	Analogue I/O Interface Panel (EDAC)	9.8	3
Analogue I/O Rack	Multi-Rail PSU	33.0	10.0
Multi-Rail PSU	Other Multi-Rail PSU	1.3	0.4
MADI Unit	Digital I/O Rack	16.5	5
Hydra Unit	Digital I/O Rack	16.5	5


Power monitor rack cables are limited by other cable lengths.

^{*} Optionally, extenders can be supplied to provide console data connections up to 150 metres (500 feet).





SPECIFICATION FOR SCSI STYLE CABLING

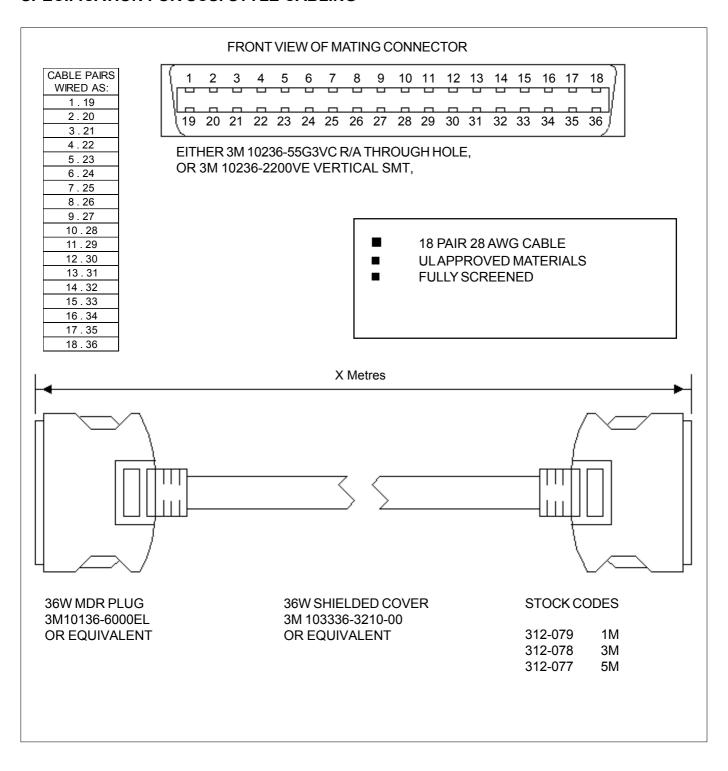





CATEGORY 5E AND CATEGORY 6 CABLES

The same installation practises generally apply for both category 5e and category 6 cabling. However, as category 6 cables have such a demanding performance criterion, they are less forgiving in the quality of the installation. Cable manufacturers strongly recommend adhering closely to the installation practises outlined for their cable specification.

Some important issues to consider during installation:

Do not exceed the cable manufacturer's specified cable pulling tension and avoid sharp bends in the cable, as it will alter the lay of the pairs within it. Cable manufacturers recommend that cable bend radius should be no less than 4 times the diameter of the cable (post installation). The minimum cable bend radius during installation is 8 times the cable diameter. In practise, this means that where a 25mm radius would be appropriate within a rack, the conduit leading to it would require minimum bends of 50mm radius.

Avoid compressing the cables by over-tightening any cable ties (tie-wraps). This problem is most likely to occur in large bundles of cables, where the cables on the outside of the bundle are exposed to more compression than those on the inside. Over-tightening deforms the twisted pairs within the cable, and can affect their performance. The cable ties should only be tight enough to sufficiently support the cable bundle, and not to deform the outer cable sleeve/jacket. One solution can be to use the hook and loop (Velcro) cable ties. When any number of cables are bundled together in long parallel lengths, the capacitive coupling of pairs in different cables in the bundle with the same twist rates can cause cross-talk interference to increase. The best way to avoid this is to minimise the length of long parallel runs, and to install cables as they lie rather than trying to straighten them out into perfectly aligned bundles.

When pulling cables from the reels, be conscious of the occasional tendency of the cable to kink. If the cable kinks, it should be regarded as damaged, and replaced. Do not try to straighten the kink out of the cable.

At the point of cable termination, remove only the minimum amount of cable sleeve/jacket. This ensures that the twist rate and lay of the core pairs within the cable are maintained for as much of the transmission path as possible. The twist rate of each pair of cable cores should also be maintained to as close as possible to point of termination within the connector.

These are general rules to follow, and if in doubt, always refer to the cable manufacturer's recommendations.





Audio Input and Output Interfaces














AES INPUTS AND OUTPUTS

All AES inputs and outputs are provided on 36 way female SCSI-style connectors on the rear of the Digital I/O Rack (16 AES pairs of inputs or outputs per connector).

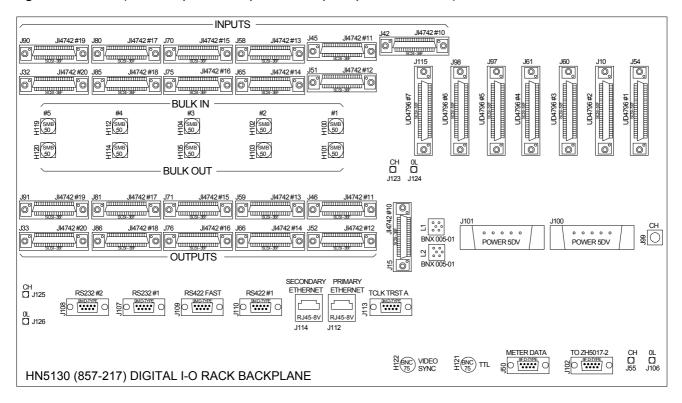

The Digital I/O Rack can house up to 11 AES I/O cards, each of which provides 16 AES inputs and 16 AES outputs. The cards are inserted into the slots within the rack, these are numbered 10-20. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. These connectors are used only when an AES I/O card occupies the slot.

Of the 11 slots available, up to 5 can be occupied by bulk I/O or wide area bulk I/O (WAB) cards, which are used to interface to Analogue I/O Racks, or wide area interfaces (MADI or Hydra). If a slot is occupied by a bulk I/O or a WAB I/O card, then the AES I/O connectors on the rear of the Digital I/O Rack belonging to that slot are left unused. Instead, the SMB connectors for bulk I/O are used to connect to the equipment being interfaced.


SLOT	COMPATIBLE I/O CARD	AES INPUT CONNECTOR	AES OUTPUT CONNECTOR
10	AES, BULK OR WAB	J42	J15
11	AES	J45	J46
12	AES, BULK OR WAB	J51	J52
13	AES	J58	J59
14	AES, BULK OR WAB	J65	J66
15	AES	J70	J71
16	AES, BULK OR WAB	J75	J76
17	AES	J80	J81
18	AES, BULK OR WAB	J85	J86
19	AES	J90	J91
20	AES	J32	J33





ANALOGUE INPUTS AND OUTPUTS

All analogue inputs and outputs are provided on 36 way female SCSI-style connectors on the rear of the Analogue I/O Racks.

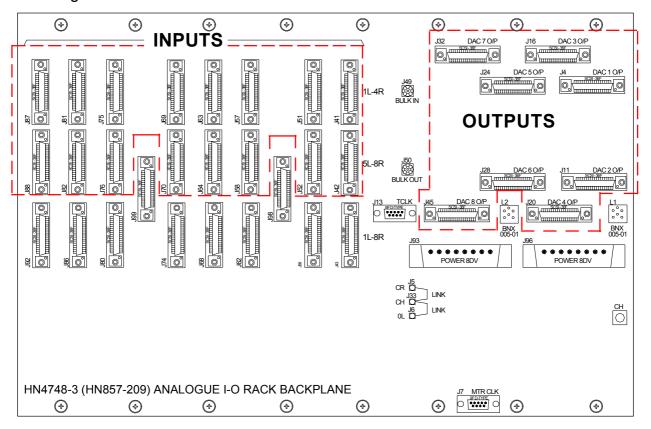

ADC Card Slots and Connectors

Each analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has 2 dedicated input connectors on the rear of the rack, to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

ADC SLOT	MIC/LINE INPUTS 1-8 CONNECTOR	MIC/LINE INPUTS 9-16 CONNECTOR
1	J41	J42
2	J51	J52
3	J57	J58
4	J63	J64
5	J69	J70
6	J75	J76
7	J81	J82
8	J87	J88

DAC SLOT	LINE OUTPUTS 1-16 CONNECTOR
1	J4
2	J11
3	J16
4	J20
5	J24
6	J28
7	J32
8	J45

DAC Card Slots and Connectors

In addition, each analogue I/O Rack can house up to 8 line output (DAC) cards, each of which provides 8 stereo outputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has a dedicated output connector on the rear of the rack, which provide connections for the system's analogue outputs. Each of the output connectors provides connections for 8 stereo outputs.





BNC AND XLR INTERFACE CONNECTOR PANELS


Audio inputs and outputs may be connected directly to the console using 36 way SCSI-style connectors. Optionally, break out connector panels and cabling can be provided. Ideally, interface panels should be fitted within 3m (9.8ft) of the backplane they connect to.

For digital inputs and outputs, interface panels can be either XLR (16 male or female on a 1U panel) or BNC (32 on a 1U panel).

XLR Input Panel (Front)




XLR Input Panel (Rear)

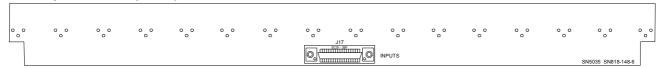


XLR Output Panel (Front)



XLR Output Panel (Rear)

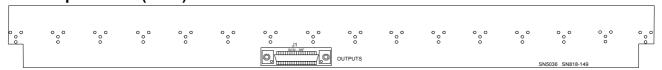


BNC Input Panel (Front)

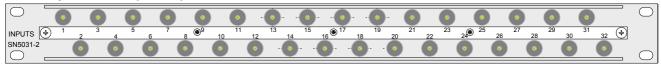

BNC Input Panel (Rear)



BNC Output Panel (Front)

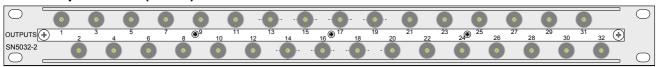

BNC Output Panel (Rear)







EDAC INTERFACE CONNECTOR PANELS

8 or 12 way EDAC connector 2U panels are available to interface analogue I/O in one of the following styles:


Interface	Style 1	Style 2
Mic/Line or Line Inputs	4 pairs per EDAC	6 pairs per EDAC
Line Only Inputs	8 pairs per EDAC	6 pairs per EDAC
Line Outputs	8 pairs per EDAC	6 pairs per EDAC

The choice of style will depend on the installation requirements. Limiting factors to be considered are:


- The number of connections available in the external cabling
- Restricted amount of interface space available within 3m(9.8ft) of the backplane.

The different styles are achieved using interface cards which attach to the rear of the 2U panels to provide different combinations of SCSI-style connectors per EDAC (Except in the case of mic/line inputs where a custom cable is provided).


8X38W EDAC PANEL

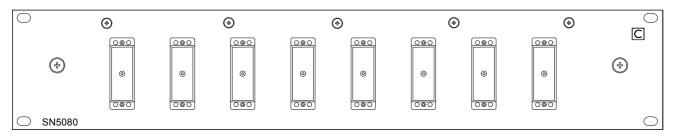

12X38W EDAC PANEL

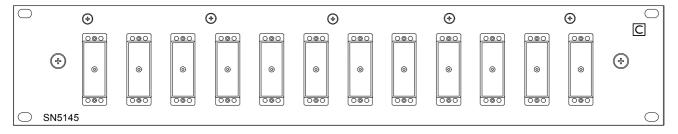

The connectors on these panels are 38 pin, male panel-mounted EDAC connectors (38MP-plug). Therefore, cables interfacing to these panels need 38 pin, female cabling connectors (38FC-receptacle).

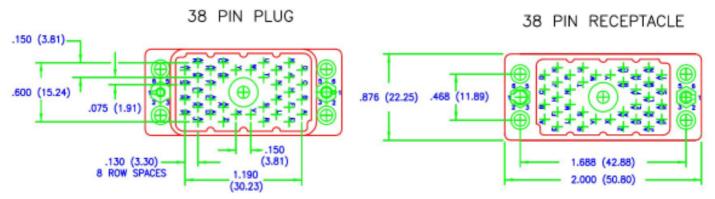






AES INPUTS - BNC INTERFACE

Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES input connectors (shown within dotted border) are connected to BNC interface panels via SCSI-style cabling. For clarity, input connections from just 2 AES cards (occupying slots 10 and 11) to an interface panel are shown here.

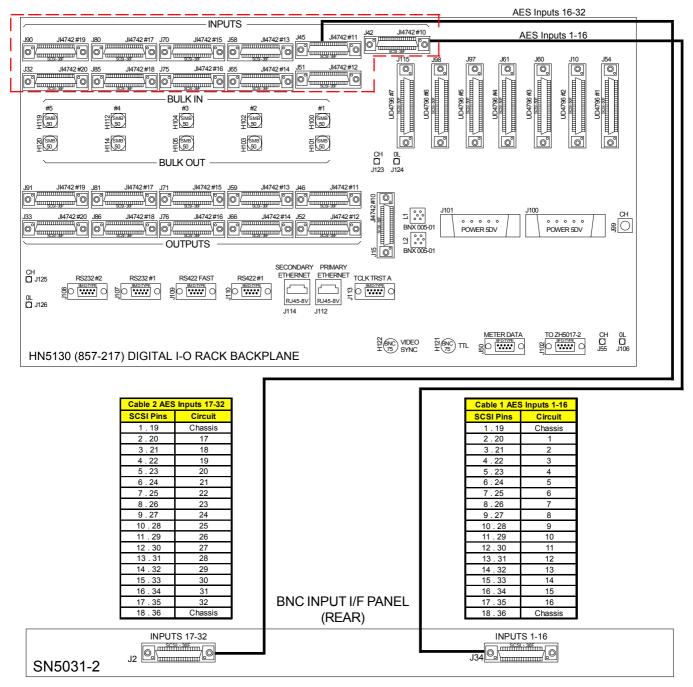

Ideally, the BNC input interface panels should be located within 3m (9.8ft) of the Digital I/O Rack. Each panel can interface 32 AES inputs. Therefore if all AES inputs are used, 5 panels would be needed.

Please Note:


AES inputs 1-16 are available on connector J42, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES inputs 1-16 will be available on connector J45, using the AES card in slot 11. The AES I/O connectors belonging to slots that are occupied by bulk I/O or WAB I/O cards are left unused. Slots 10, 12, 14, 16 and 18 can be occupied by Bulk I/O or WAB I/O cards.





AES OUTPUTS - BNC INTERFACE

Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES output connectors (shown within dotted border) are connected to BNC interface panels via SCSI cabling. For clarity, output connections from just 2 AES cards (occupying slots 10 and 11) to an interface panel are shown here.

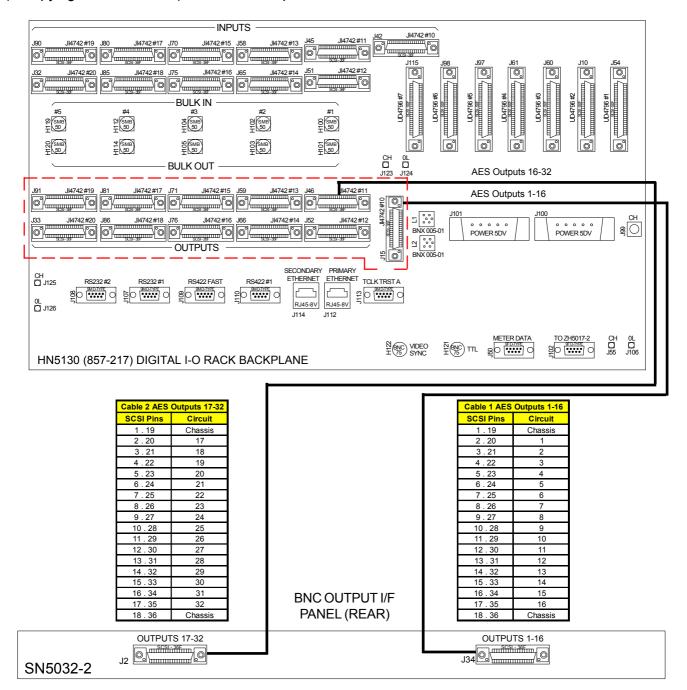

Ideally, the BNC output interface panels should be located within 3m (9.8ft) of the Digital I/O Rack. Each panel can interface 32 AES outputs. Therefore if all AES outputs are used, 5 panels would be needed.

Please Note:


AES outputs 1-16 are available on connector J15, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES outputs 1-16 will be available on connector J46, using the AES card in slot 11. The AES I/O connectors belonging to slots that are occupied by bulk I/O or WAB I/O cards are left unused. Slots 10, 12, 14, 16 and 18 can be occupied by bulk I/O or WAB I/O cards.





AES INPUTS - XLR INTERFACE

Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES input connectors (shown within dotted border) are connected to XLR interface panels via SCSI cabling. For clarity, connection from just one AES card (occupying slot 10) to an interface panel is shown here.

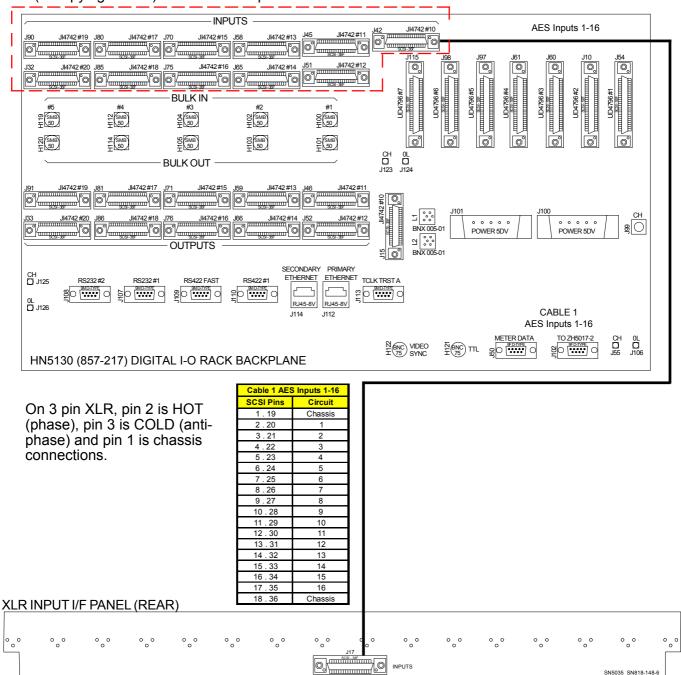

Ideally, the XLR input interface panels should be located within 3m (9.8ft) of the Digital I/O Rack. Each panel can interface 16 AES inputs. Therefore if all AES inputs are used, 10 panels would be needed.

Please Note:


AES inputs 1-16 are available on connector J42, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES inputs 1-16 will be available on connector J45, using the AES card in slot 11. The AES I/O connectors belonging to slots that are occupied by bulk I/O or WAB I/O cards are left unused. Slots 10, 12, 14, 16 and 18 can be occupied by bulk I/O or WAB I/O cards.





AES OUTPUTS - XLR INTERFACE

Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES output connectors (shown within dotted border) are connected to XLR interface panels via SCSI cabling. For clarity, connection from just one AES card (occupying slot 10) to an interface panel is shown here.

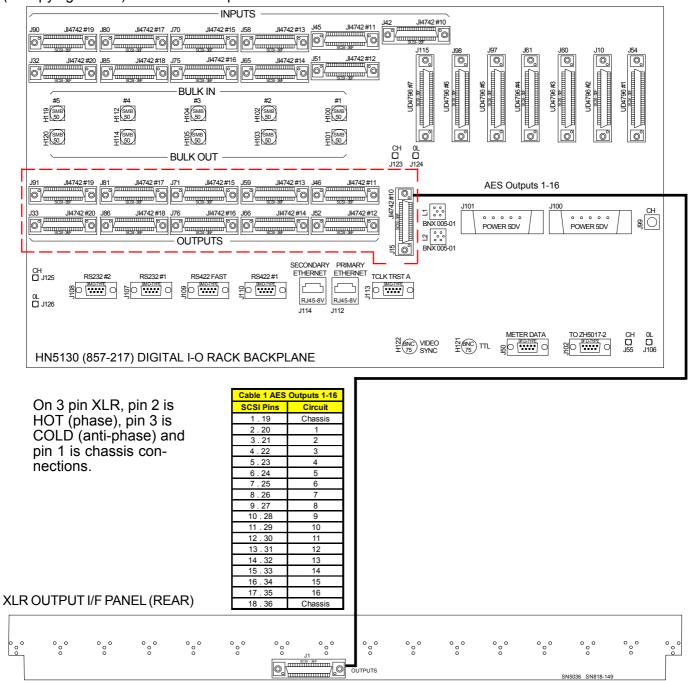

Ideally, the XLR output interface panels should be located within 3m (9.8ft) of the Digital I/O Rack. Each panel can interface 16 AES outputs. Therefore if all AES outputs are used, 10 panels would be needed.

Please Note:

AES outputs 1-16 are available on connector J15, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES outputs 1-16 will be available on connector J46, using the AES card in slot 11. The AES I/O connectors belonging to slots that are occupied by bulk I/O or WAB I/O cards are left unused. Slots 10, 12, 14, 16 and 18 can be occupied by bulk I/O or WAB I/O cards.






ANALOGUE MIC/LINE INPUTS (MIC/LINE OR LINE ADC CARDS) - STYLE 1

Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how these connectors are connected to 8 or 12 way EDAC interface panels via Calrec custom cabling to achieve Style 1 (4 pairs per EDAC connector).

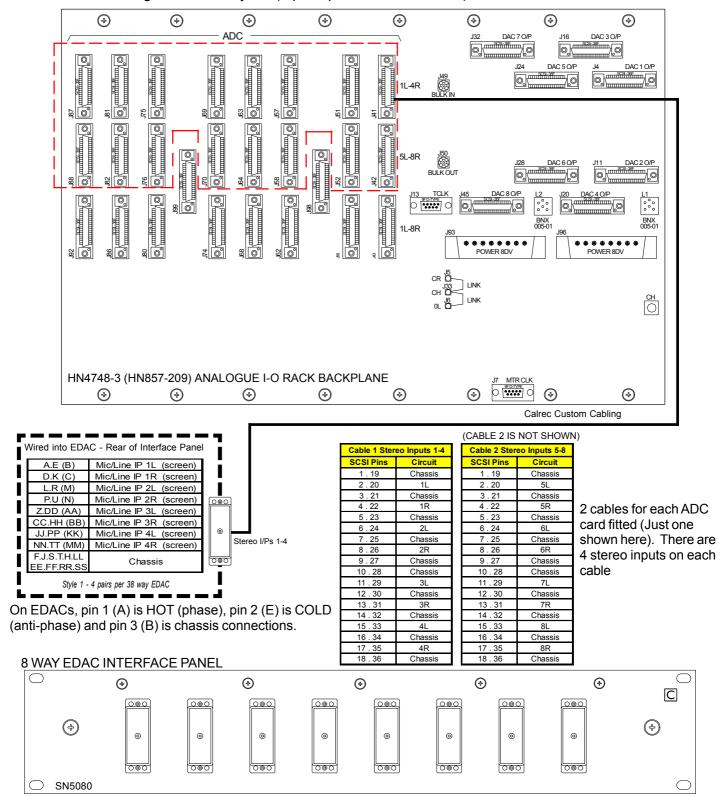






ANALOGUE MIC/LINE INPUTS (MIC/LINE OR LINE ADC CARDS) - STYLE 2

Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how these connectors are connected to 8 or 12 way EDAC interface panels via Calrec custom cabling to achieve Style 2 as mentioned earlier (6 pairs per EDAC connector).

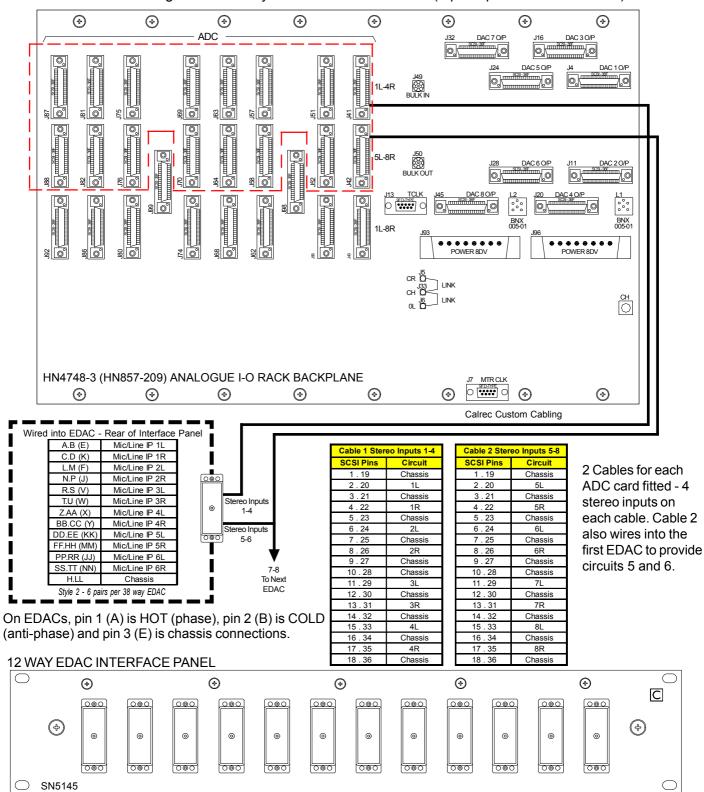






ANALOGUE LINE ONLY INPUTS (LINE ADC CARDS ONLY) - STYLE 1

Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how the Line inputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 1 as mentioned earlier (8 pairs per EDAC connector).

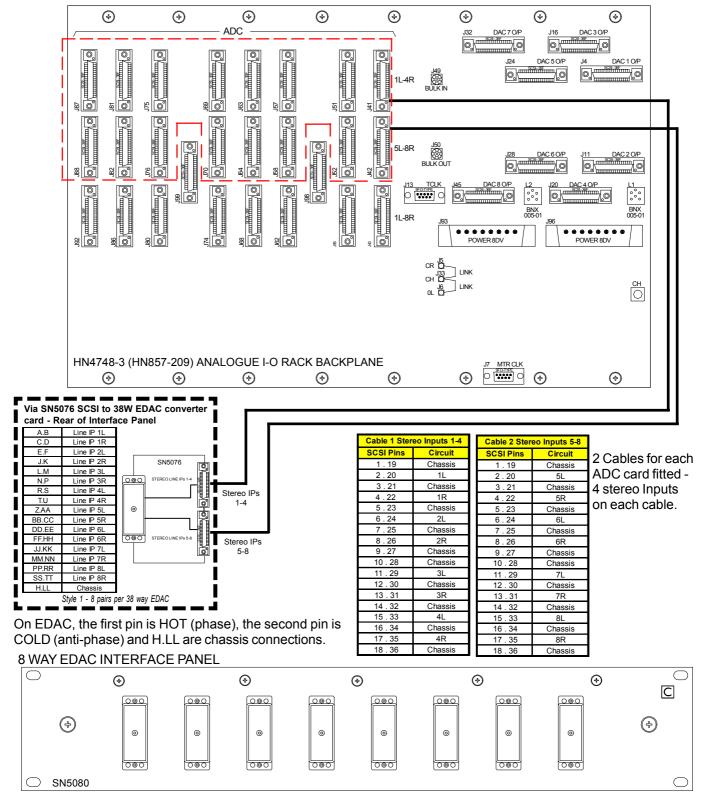






ANALOGUE LINE ONLY INPUTS (LINE ADC CARDS ONLY) - STYLE 2

Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how the Line inputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 2 as mentioned earlier (6 pairs per EDAC connector).

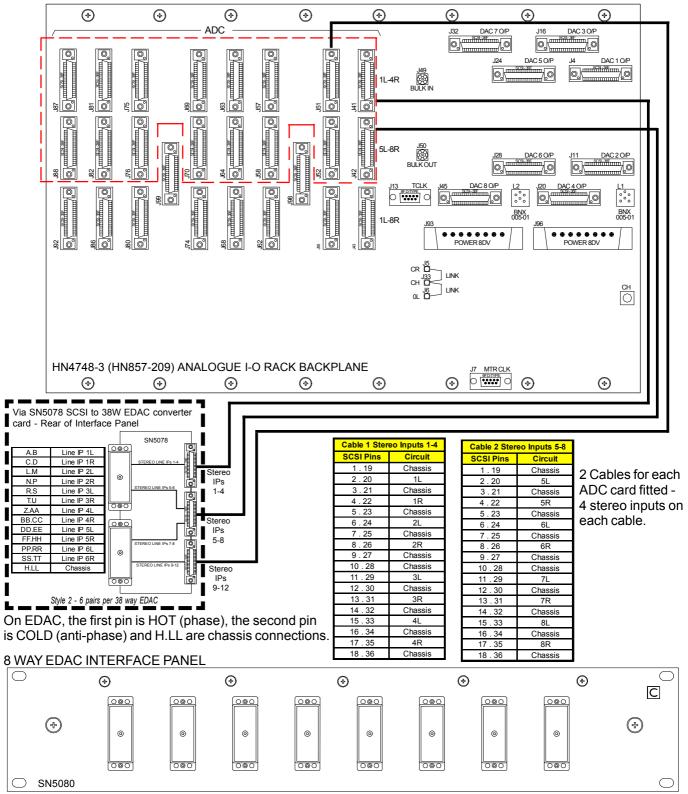






ANALOGUE LINE OUTPUTS (DAC CARDS ONLY) - STYLE 1

Each Analogue I/O Rack can house up to 8 line output (DAC) cards, each of which provides 8 stereo outputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has a dedicated output connector on the rear of the rack, which provide connections for the system's analogue outputs. Each of the output connectors provides connections for 8 stereo outputs.

The diagram below shows how the line outputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 1 as mentioned earlier (8 pairs per EDAC connector).

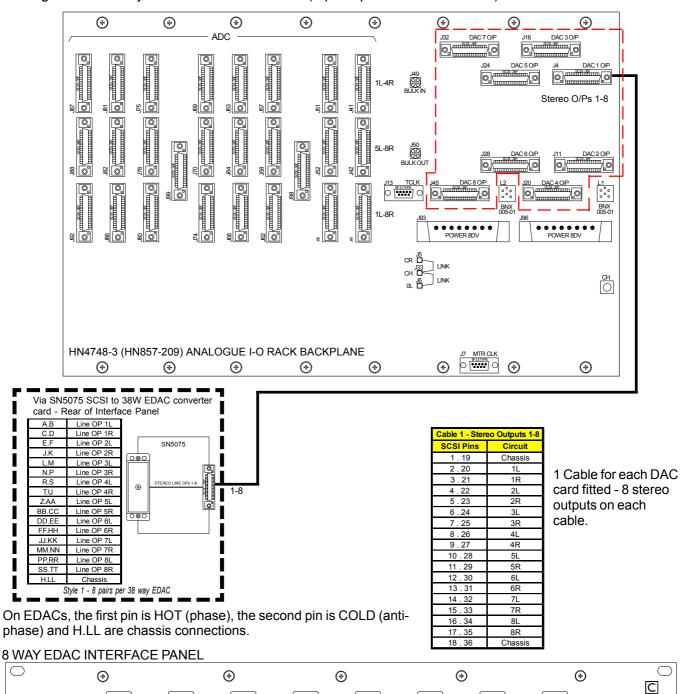

 \bigcirc

(4)

SN5080







ANALOGUE LINE OUTPUTS (DAC CARDS ONLY) - STYLE 2

Each Analogue I/O Rack can house up to 8 line output (DAC) cards, each of which provides 8 stereo outputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has a dedicated output connector on the rear of the rack, which provide connections for the system's analogue outputs. Each of the output connectors provides connections for 8 stereo outputs.

The diagram below shows how the line outputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 2 as mentioned earlier (6 pairs per EDAC).

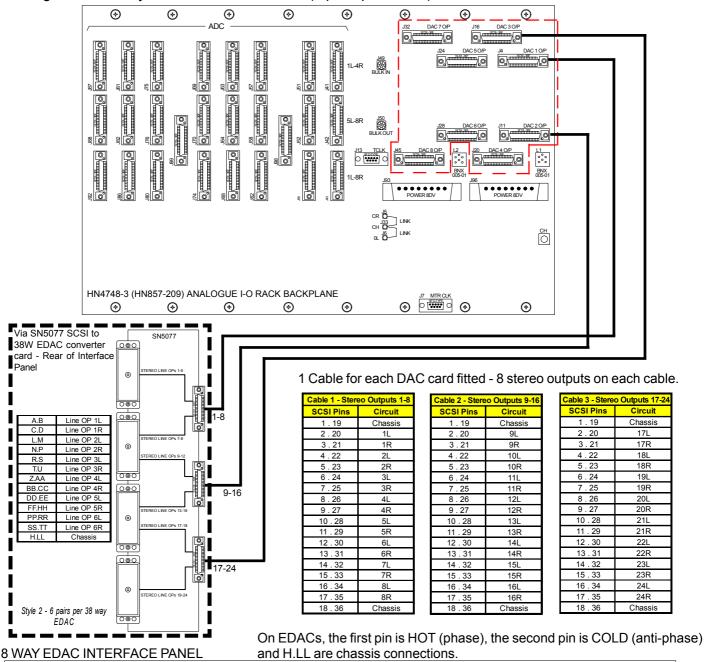

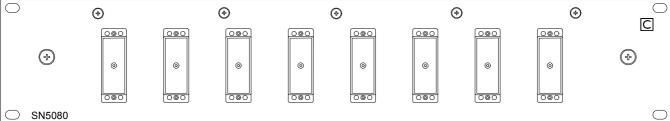









Planning the Use and Labelling of Inputs and Outputs





ABOUT LABELS

PORT LABELS AND LISTS

When the console is installed, all the input and output ports on the system should be labelled to match the studio wiring. Some rules are imposed on this labelling:

- The I/O should be labelled in pairs.
- The label must be no more than six characters (to fit on the console's displays).
- The same label cannot be used more than once (but an input can have the same label as an output) to avoid confusion.

I/O is labelled in pairs to make it easier to use with any type of signal; mono, stereo or surround. Also, digital I/O is wired in pairs and it makes sense to deal with all the I/O in the same way.

The input port label is used as the default name for the channel input and will be shown on the display above the fader.

The system automatically adds a left (L) and right ($_{R}$) suffix to the label to distinguish the two halves of the pair, or an L R suffix when the pair is used together.

The pairs can be used either for two mono signals, or a stereo signal, or parts of a surround signal. This includes the digital ports if the external circuit allows them to be used for two mono signals.

One exception to these rules is that I/O which is dedicated, externally, to mono signals only (telephone lines, mono reverbs, mono distribution feeds, etc), can be specified as being mono in which case the two halves of the pair have separate labels and the L & R suffixes are not applied. Note that I/O labelled in this way cannot be connected in pairs to stereo paths.

A stereo channel input can only be connected to the L - R of a pair of ports, or to one mono port in which case the mono signal will be fed to both L & R of the channel.

A stereo channel direct output can only be connected to the L - R of a pair of ports.

A mono channel input or direct output can be connected to any of: The L or R of a pair of ports, or any mono port.

Mono ports should therefore be considered as unusual. If there is any doubt as to the use of ports, they should be treated as a pair.





Suitable Labels

Generally, I/O ports should be labelled with the name which appears at the other end of the cable, which is connected to the port.

Ideally, the port will be connected directly to a device (Mic splitter box, Video Tape Recorder, Echo unit, Transmission Control Suite, etc).

Alternatively, some I/O may be wired to a patch. This will be done, for example, to allow for hired devices to be connected and may also be done to aid maintenance and operator familiarity with analogue consoles.

When planning the use and labelling of I/O, you should also bear in mind that the console includes an internal electronic input patch and output patch. These allow ports to be used for different purposes on different shows and also, the patch connections are stored with the snap-shot memories.

Port Lists

In addition to labelling, each port may be allocated to one of a number of lists during the Set up Application. This allows inputs and outputs which are wired for similar purposes to be grouped together for selection. There can be up to 12 lists for input ports, and up to 8 lists for output ports. Each list can contain a mixture of normal inputs or outputs (labelled in pairs) and inputs or outputs dedicated to mono signals. Each list is given a six character label, and automatically sorted alphabetically/numerically.

The lists can be sorted into the order in which they appear on the selection screens. The lists will appear in the same order on the optional I/O Matrix panel (if fitted) and I/O screens. It is possible to restrict the lists which appear on the I/O Matrix panel using the Options - Misc screen. This reduces the number of times the pot needs to be pushed, to go through all the available lists. All lists are always available on the I/O screens.





Digital Inputs - Digital I/O Rack

Card Slot No...... SCSI Connector No......

Input	(or		for L		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					LR		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					LR		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		
9L + 9R					L R		
10L + 10R					L R		
11L + 11R					L R		
12L + 12R					L R		
13L + 13R					L R		
14L + 14R					L R		
15L + 15R					L R		
16L + 16R					L R		

Input	(or	l 1st o	_abel of 2 n	for L	R pai) 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L +8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Inputs - Digital I/O Rack

Card Clat Na	CCCI Campantan Na
Card Slot No	SCSI Connector No

Input	(or		for L nono)		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		
9L + 9R					L R		
10L + 10R					L R		
11L + 11R					L R		
12L + 12R					L R		
13L + 13R					L R		
14L + 14R					L R		
15L + 15R					L R		
16L + 16R					L R		

Input	(or	1st o	_abel	for L	R pai	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Inputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Oara Or	0	•0				•			110
Input	Label for LR pair (or 1st of 2 mono) 6 characters							Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Input	(or	1st (abel	for L	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Inputs - Digital I/O Rack

Card Slot No	SCSI Connector No
Calu Siol No	

Odia Oi	Ot i	10	• • • • • •		••••			or connector	110
Input	(or	l 1st o	_abel of 2 n	for L	.R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Input	(or	L 1st o	_abel of 2 n	for L	R pai	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Inputs - Digital I/O Rack

Card Slot No...... SCSI Connector No......

Odia Oil	<u> </u>	•••							I 10
Input	(or	l 1st	_abel of 2 n	for L	R pai	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L +8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Input	(or	L 1st o	_abel of 2 n	for L	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							LR		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							LR		
11L + 11R							LR		
12L + 12R							ΙR		
13L + 13R							ΙR		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Outputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Odi d Oi									10
Output	(or	1st (_abel of 2 n	for L	R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							LR		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							LR		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							LR		
9L + 9R							LR		
10L + 10R							LR		
11L + 11R							L R		
12L + 12R							LR		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Output	(or	l 1st o	_abel of 2 n	for L	R pai	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Outputs - Digital I/O Rack

Card Slot No	SCSI Connector No
Cara Ciol No	

Output	(or	_abel of 2 n		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R				L R		
2L + 2R				L R		
3L + 3R				L R		
4L + 4R				LR		
5L + 5R				LR		
6L + 6R				LR		
7L + 7R				L R		
8L + 8R				LR		
9L + 9R				L R		
10L + 10R				L R		
11L + 11R				L R		
12L + 12R				L R		
13L + 13R				L R		
14L + 14R				L R		
15L + 15R				L R		
16L + 16R				L R		

Output	(or	1 1st o	_abel	for L	R pai	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Outputs - Digital I/O Rack

Output	Label for LR pair (or 1st of 2 mono) 6 characters							Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R						·	L R		

Output	(or		R pai) 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		
9L + 9R					L R		
10L + 10R					L R		
11L + 11R					L R		
12L + 12R					L R		
13L + 13R					L R		
14L + 14R					L R		
15L + 15R					L R		
16L + 16R					L R		





Digital Outputs - Digital I/O Rack

Card Slot No...... SCSI Connector No......

Output	(or	L 1st o	_abel of 2 n	for L nono)	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							LR		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Output	(or	1st (_abel	for L	R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		





Digital Outputs - Digital I/O Rack

Card Slot No...... SCSI Connector No......

Cara Ci	Ot i	٠٠.						or Cornicotor	110
Output	(or	Label for LR pair (or 1st of 2 mono) 6 character						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		
9L + 9R							L R		
10L + 10R							L R		
11L + 11R							L R		
12L + 12R							L R		
13L + 13R							L R		
14L + 14R							L R		
15L + 15R							L R		
16L + 16R							L R		

Output	(or	l 1st	_abel of 2 n	for L	R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)		
1L + 1R							L R				
2L + 2R							L R				
3L + 3R							L R				
4L + 4R							L R				
5L + 5R							L R				
6L + 6R							L R				
7L + 7R							L R				
8L + 8R							L R				
9L + 9R							L R				
10L + 10R							L R				
11L + 11R							L R				
12L + 12R							L R				
13L + 13R							L R				
14L + 14R							L R				
15L + 15R							L R				
16L + 16R							L R				





Analogue Inputs - Analogue I/O Rack 1

Card S	ard Slot No S								SCSI Connectors and							
Connector Number	Input	(or			for L		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)						
	1L + 1R							L R								
	2L + 2R							L R								
	3L + 3R							L R								
	4L + 4R							L R								
	5L + 5R							L R								
	6L + 6R							L R								
	7L + 7R							L R								
	8L + 8R							L R								
Card S	lot No					SC	CSI	Cc	nnectors	and						

Card S	lot No		 	 SCSI Connectors and							
Connector Number	Input	(01		R pai		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)			
	1L + 1R					L R					
	2L + 2R					L R					
	3L + 3R					L R					
	4L + 4R					L R					
	5L + 5R					L R					
	6L + 6R					L R					
	7L + 7R					L R					
	8L + 8R					Lρ					

							К		
Card S	lot No		 		SC	CSI	Co	nnectors	and
Connector Number	Input	(01		for L			ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		

Card S	lot No		 		SC	SI	Сс	nnectors	and
Connector Number	Input	(01		for L		ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		
			•	•					





Analogue Inputs - Analogue I/O Rack 1

	101 110	·····						
Connector Number	Input	(or		R pai) 6 ch	ir paract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		

Card Slot No...... SCSI Connectors and

Connector Number	Input	(or		R pai) 6 ch	ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		

Card Slot No...... SCSI Connectors and

Connector Number	Input	(or		R pai 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		

Card Slot No...... SCSI Connectors and

Connector Number	Input	(or		for L		ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R					L R		
	2L + 2R					L R		
	3L + 3R					L R		
	4L + 4R					L R		
	5L + 5R					L R		
	6L + 6R					L R		
	7L + 7R					L R		
	8L + 8R					L R		





Analogue Inputs - Analogue I/O Rack 2 (if fitted)

Connector Number	Input	(or			for L		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R	,						L R		
	2L + 2R							L		
-	3L + 3R							R L		
-	4L + 4R							R L		
	5L + 5R							R L		
-	6L + 6R							R L		
								R L		
-	7L + 7R							R L		
	8L + 8R							R		
	lot No							Co	nnectors	and
Connector Number	Input	(or			for L		ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R		
}	2L + 2R							L R		
-	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
-	6L + 6R							L		
	7L + 7R							R L		
-	8L + 8R							R L R		
ard S	lot No					20	. CI		nnectors	and
Connector	Input		L	abel	for L	R pa	ir		Circuit Description	2nd Label
Number	1L + 1R	(or	1st (of 2 n	nono)) 6 ch	naract	ers	554 (2.550pt.6	(only if pair dedicated to 2 mono signals)
								R L		
-	2L + 2R							R L		
-	3L + 3R							R L		
	4L + 4R							R		
	5L + 5R							R		
	6L + 6R							R		
	7L + 7R							R		
	8L + 8R							R		
Card S	lot No					SC	CSI	Co	nnectors	and
Connector Number	Input	(or	l 1st o	abel of 2 n	for L	R pa) 6 ch	ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
•	3L + 3R							L R		
ŀ	4L + 4R							L R		
	5L + 5R							L		
ŀ	6L + 6R							R L		
ŀ	7L + 7R							R L R		





Analogue Inputs - Analogue I/O Rack 2 (if fitted)

	IOL INO						CC	<u> </u>	and
Connector Number	Input	(01	l 1st ⁻	for L			ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		
Card S	lot No			 	SC	SI	Сс	nnectors	and
Connector Number	Input	(01	l 1st	for L			ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		
Card S	lot No			 	SC	SI	Co	nnectors	and
Connector Number	Input	(01	l 1st	for L			ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	8L + 8R						L R		
Card S	lot No			 	SC	CSI	Сс	nnectors	and
Connector Number	Input	(01	l 1st o	for L			ters	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R						L R		
	2L + 2R						L R		
	3L + 3R						L R		
	4L + 4R						L R		
	5L + 5R						L R		
	6L + 6R						L R		
	7L + 7R						L R		
	01 ± 0D						L		





Analogue Inputs - Analogue I/O Rack 3 (if fitted)

<u>Card S</u>	lot No					SC	CSI	Cc	nnectors	and
Connector Number	Input	(OI				R pa) 6 ch	ir narac	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R							L R		
Card S	lot No					SC	SI		nnectors	and
Connector Number	Input		l	_abel	for L	R pa			Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R							L R		
Card S	lot No					SC	SI	Co	nnectors	and
Connector Number	Input	10)				R pa			Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R							L R		
Card S	lot No					sc	SI		nnectors	and
Connector Number	Input	10)				R pa			Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	41 . 45							L R		
	1L + 1R							L R		
	1L + 1R 2L + 2R									
								L R		
	2L + 2R									
	2L + 2R 3L + 3R							R L		
	2L + 2R 3L + 3R 4L + 4R							R L R		
	2L + 2R 3L + 3R 4L + 4R 5L + 5R							R L R L R		





Analogue Inputs - Analogue I/O Rack 3 (if fitted)

	lot No	SCSI Connectors Label for LR pair Similar Dates							nnectors	
Connector Number	Input	(01					ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R							L R		
Card S	lot No					SC	CSI	Сс	nnectors	and
Connector Number	Input	(01		abel of 2 n			ir naract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R							L R		
Card S	lot No					SC	CSI		nnectors	and
Connector Number	Input		l	abel	for L	R pa			Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R							L R		
Card S	lot No					SC	CSI		nnectors	and
Connector Number	Input	(01		_abel of 2 n		R pa			Circuit Description	2nd Label (only if pair dedicated to 2 mono signals
	1L + 1R							L R		
	2L + 2R							L R		
	3L + 3R							L R		
	4L + 4R							L R		
	5L + 5R							L R		
	6L + 6R							L R		
	7L + 7R							L R		
	8L + 8R		1					L		





Analogue Outputs - Analogue I/O Rack 1

Card S	lot	No					. S	SCSI Connec	ctor No
Output	10)			for L		ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R		L							
7L + 7R		L							
8L + 8R							LΩ		

Card S	lot	No	 		 S	SCSI Connec	ctor No
Output	(or			R pai) 6 ch	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					LR		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Card S	lot	No)					SCSI Conne	ctor No
Output	(or			for L		ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R		L R							
4L + 4R							L R		
5L + 5R							L R		
6L + 6R		L							
7L + 7R		L F							
8L + 8R		L							

Card S	lot	No						SCSI Connec	ctor No
Output	(or			for L		r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R		I F							
7L + 7R		I I							
8L + 8R		L R					L R		





Analogue Outputs - Analogue I/O Rack 1

Card S	lot	No					S	SCSI Connec	ctor No
Output	10)				R pai	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							LR		
5L + 5R							L R		
6L + 6R		L					L R		
7L + 7R							L R		
8L + 8R							L		_

Card S	lot	No	 	 	S	SCSI Connec	ctor No
Output	(or		for L	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					LR		
3L + 3R					LR		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		

Card S	lot	No)	 		. 3	SCSI Conne	ctor No
Output	(or			R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		

Card S	lot	No					S	SCSI Connec	ctor No
Output	(or				R pai	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R	L						L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		





Analogue Outputs - Analogue I/O Rack 2 (if fitted)

Card S	lot	No						SCSI Connec	ctor No
Output	(01			for L		ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R	L R						L R		
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		

Card S	lot	No					S	CSI Connec	ctor No
Output	(or			for L		ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R		L							
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		

Card S	lot	No					S	SCSI Connec	ctor No
Output	(or			for L		r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R		LR							
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L R		

							- 17							
Card S	Card Slot No SCSI Connector No													
Output	10)		_abel of 2 n			ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)					
1L + 1R	L R						L R							
2L + 2R							L R							
3L + 3R	L						L R							
4L + 4R							L R							
5L + 5R							L R							
6L + 6R							L R							
7L + 7R							L R							
8L + 8R							L R							





Analogue Outputs - Analogue I/O Rack 2 (if fitted)

Output	(or		R pai	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R				L R		
2L + 2R				L R		
3L + 3R				L R		
4L + 4R				L R		
5L + 5R				L R		
6L + 6R				L R		
7L + 7R				L R		
8L + 8R				L R		

Card Slot No...... SCSI Connector No

oura o	501 CO111CCC1 110													
Output	(or			for L		r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)					
1L + 1R							L R							
2L + 2R							L R							
3L + 3R							L R							
4L + 4R							L R							
5L + 5R							L R							
6L + 6R							L R							
7L + 7R							L R							
8L + 8R							L R							

Card Slot No..... SCSI Connector No

Output	(or		.R pai	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R				L R		
2L + 2R				L R		
3L + 3R				L R		
4L + 4R				L R		
5L + 5R				L R		
6L + 6R				L R		
7L + 7R				L R		
8L +8R				L R		

Output	(or		R pai	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		





Analogue Outputs - Analogue I/O Rack 3 (if fitted)

Card S	lot	No					. S	SCSI Connec	ctor No
Output	10)				R pai) 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R			L R						
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							L		

Card S	lot	No					S	CSI Connec	ctor No
Output	(or				.R pai	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R	L R								
2L + 2R							L R		
3L + 3R							L R		
4L + 4R							L R		
5L + 5R							L R		
6L + 6R							L R		
7L + 7R							L R		
8L + 8R							LC		

Card S	lot	No	 			S	SCSI Connec	ctor No
Output	10)			R pai 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		

Card S	lot	No	 				SCSI Connec	ctor No
Output	(or		for L		ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R			L R					
2L + 2R						ΙR		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		





Analogue Outputs - Analogue I/O Rack 3 (if fitted)

O = 1-1 Ol = (N -	00010
Lard Slot No	SI SI I Annactor NA
Calu Sidi Nu	SCSI Connector No

Cara Cict 110												
Output	(or				R pai) 6 ch	r aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)			
1L + 1R							L R					
2L + 2R							L R					
3L + 3R							L R					
4L + 4R							L R					
5L + 5R							L R					
6L + 6R							L R					
7L + 7R							L R					
8L + 8R							L R					

Card Slot No..... SCSI Connector No

Output	(or			for L			ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)		
1L + 1R							L R				
2L + 2R							L R				
3L + 3R							L R				
4L + 4R							L R				
5L + 5R							L R				
6L + 6R							L R				
7L + 7R							L R				
8L + 8R							L R				

Card Slot No..... SCSI Connector No

Output	(or		R pai 6 ch	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R				L R		
2L + 2R				L R		
3L + 3R				L R		
4L + 4R				L R		
5L + 5R				L R		
6L + 6R				L R		
7L + 7R				L R		
8L + 8R				L R		

Output	(or		R pai 6 ch	ir aract	ers	Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R					L R		
2L + 2R					L R		
3L + 3R					L R		
4L + 4R					L R		
5L + 5R					L R		
6L + 6R					L R		
7L + 7R					L R		
8L + 8R					L R		





NOTES







Calrec Audio Ltd reserve the right to change specifications without notice. E & O.E.

The established policy of Calrec Audio Ltd. is to seek improvements to the design, specifications and manufacture of all products. It is not always possible to provide notice outside the company of the alterations that take place continually.

Despite considerable effort to produce up to date information, no literature published by the company nor any other material that may be provided should be regarded as an infallible guide to the specifications available nor does it constitute an offer for sale of any particular product.

Alpha is a trademark of Calrec Audio Ltd. All other trade marks acknowledged.