



SIGMA
SYSTEM PLUS


INSTALLATION MANUAL



Digital Broadcast Production Console

with

bluefin
HIGH DENSITY SIGNAL PROCESSING

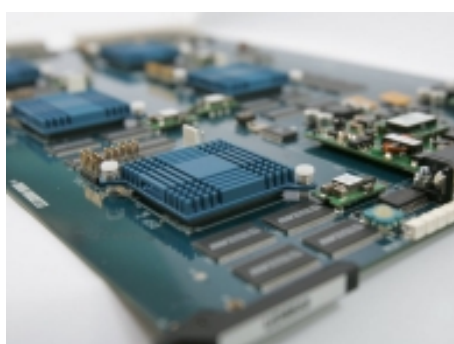

www.calrec.com

© 2006 Calrec Audio Ltd. All Rights Reserved.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying & scanning, for any purpose, without the prior written consent of Calrec Audio Ltd.

Whilst the Company takes the utmost care in ensuring that all details in this document are correct at the time of publication, we reserve the right to alter specifications and equipment without notice. Any changes we make will be reflected in subsequent issues of this document. The latest version will be available upon request.

This publication is for International usage.

After Sales Modifications

Modifications to this equipment by any party other than Calrec Audio Limited may invalidate EMC and safety features designed into this equipment. Calrec Audio Limited can not be liable for any legal proceedings or problems that may arise relating to such modifications.

If in doubt, please contact Calrec Audio Limited for guidance prior to commencing any such work.

ESD (Static) Handling Procedures

In its completed form, this equipment has been designed to have a high level of immunity to static discharges. However, when handling individual boards and modules, many highly static sensitive parts are exposed. In order to protect these devices from damage and to protect your warranty, please observe static handling procedures, for example, use an appropriately grounded anti-static wrist band. Calrec will supply an electrostatic cord and wrist strap with all of its digital products.

All modules and cards should be returned to Calrec Audio Limited in anti-static wrapping. Calrec Audio Limited can supply these items upon request, should you require assistance.

This applies particularly to digital products due to the types of devices and very small geometries used in their fabrication, analogue parts can however still be affected.

IMPORTANT HEALTH AND SAFETY INFORMATION

- This equipment must be EARTHED.
- Only suitably trained personnel should service this equipment.
- Please read and take note of all warning and informative labels.
- Before starting any servicing operation, equipment must be isolated from the AC supply (mains).
- Fuses should only be replaced with ones of the same type and rating as that indicated.
- Operate only in a clean, dry and pollutant-free environment.
- Do not operate in an explosive atmosphere.
- Do not allow any liquid or solid objects to enter the equipment. Should this accidentally occur then immediately switch off the unit and contact your service agent.
- Do not allow ventilation slots to be blocked.
- Do not leave the equipment powered up with the dust cover fitted.
- The rack mounting parts of this equipment must be fitted into an enclosure which complies with local regulations.

Cleaning

For cleaning the front panels of the equipment we recommend anti-static screen cleaner sprayed onto a soft cloth to dampen it only.

Explanation of Warning Symbols

The triangular warning symbols below contain a black symbol on a yellow background, surrounded by a black border.



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of dangerous voltages and energy levels within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock or injury.



The exclamation mark within an equilateral triangle is intended to prompt the user to refer to important operating or maintenance (servicing) instructions in the documentation supplied with the product.

Power Supply Blanking Plates (ZN4849-3 and ZN6020)

If you are in receipt of a ZN4849-3 or ZN6020 power supply unit please do not remove the blanking plates which are fitted to the unused output connectors. The maximum potential between the terminals exceeds 60 volts, the blanking plates are fitted to avoid the risk of electric shock.

CONTENTS

Technical Support	6
ROHS Legislation	7
Overview	9
System Overview	10
Inputs and Outputs	11
Equipment List	12
Environmental Considerations	13
Earthing	13
AC (Mains) Power	13
Screen Maintenance	13
System Specification	14
Frame Options and Dimensions	15
Control Surface Frame Sizes	16
End Elevation	19
Front Elevation	20
Equipment Installation Information	21
Typical Rack Layout	22
Rack Specifications	23
Maximum Cable Lengths	23
Bulk Power Supply and Distribution Unit	24
Multi-Rail PSU	25
PC Information	26
Synchronisation	28
GPIO Connections	29
Dolby DP570 & DP564 setup (for Calrec remote interface)	30
Dolby DP570 & DP564 Cabling Schedule	32
Serial Interface	33
Hydra Audio Networking	35
Hydra Audio Networking	36
Hydra I/O Rack	38
Network Redundancy	40
Wiring and Cabling Information	41
Console and Rack Wiring Diagram	42
Specification for SCSI Style Cabling	43
Category 5e and Category 6 cables	44
Audio Input and Output Interfaces	45
AES Inputs and Outputs	46
Analogue Inputs and Outputs	47
BNC and XLR Interface Connector Panels	48
EDAC Interface Connector Panels	49
AES Inputs - BNC Interface	50

AES Outputs - BNC Interface	51
AES Inputs - XLR Interface	52
AES Outputs - XLR Interface	53
Analogue Mic/Line Inputs (Mic/Line or Line ADC Cards) - Style 1	54
Analogue Mic/Line Inputs (Mic/Line or Line ADC Cards) - Style 2	55
Analogue Line Only Inputs (Line ADC Cards Only) - Style 1	56
Analogue Line Only Inputs (Line ADC Cards Only) - Style 2	57
Analogue Line Outputs (DAC Cards Only) - Style 1	58
Analogue Line Outputs (DAC Cards Only) - Style 2	59
Input and Output Port Labelling	61
About Labels	62
Input/Output Labelling Sheets	64
Input/Output Labelling Sheets	66
Appendix A - Unipower Bulk Power Supplies and Seperate Distribution	83
Bulk PSU	84
PSU Monitoring and Distribution Unit	85

TECHNICAL SUPPORT

Should you require any technical assistance with your Calrec product then please contact your local distributor, if outside the U.K. and Ireland. For a list of Worldwide distributors please see the Calrec Web site at www.calrec.com or contact Calrec UK. For technical assistance within the UK and Ireland, please contact the Customer Support Team at :-

Customer Support
Calrec Audio Ltd
Nutclough Mill
Hebden Bridge
HX7 8EZ
England
UK

Tel: +44 (0) 1422 842159
Fax: +44 (0) 1422 845244
Email: support@calrec.com
Website: www.calrec.com

We can deal with all technical after sales issues, such as :-

- Arranging repairs
- Supply of replacement or loan units while repairs are being carried out
- Service / commissioning site visits
- Operational training courses
- Maintenance training courses
- Supply of replacement components
- Supply of documentation
- Technical advice by telephone

Customer Support Hours

Factory based customer support engineers can be contacted by telephone during normal office hours, or outside hours, a message can be left on the answering machine. All messages are dealt with promptly on the next working day. Alternatively a message can be sent to them by email.

Product Warranty

A full list of our conditions & warranties relating to Goods & Services is contained in the Company's standard Terms and Conditions. A copy of this is available on request.

Repairs

If you need to return goods to Calrec, for whatever reason, please contact the Company beforehand in order that you can receive advice on the best method of returning the goods, and that a repair order reference number can be issued.

Standard of Service

Ensuring high standards is a priority, if you have any comments on the level of service, product quality or documentation offered to you by Calrec, then the Customer Support team would be pleased to receive your comments through any of the normal contact numbers, email or on the User registration form located at the end of this manual. If you have any other issues regarding your Calrec purchase, then please contact us and we will do our best to help. Calrec welcomes all

ROHS LEGISLATION

In order to comply with European RoHS (**R**eduction of **H**azardous **S**ubstances) legislation, from the second week in April 2006 the vast majority of Calrec PCB and cable assemblies will have been produced with lead-free (tin/copper/silver) solder instead of tin/lead solder. This means that for a period of time after April 2006 delivered consoles will contain a mixture of assemblies produced with different types of solder. This is unavoidable due to the fact that circuit boards are built in batches and allocated to consoles on a 'first in, first out' basis (hence the need to change the process well in advance of the legislation coming into force).



Lead Free

In the unlikely event of a customer having to carry out any re-soldering on such assemblies, it is imperative that the correct type of solder is used; not doing so is likely to have an adverse effect on the long-term reliability of the product. Circuit boards assembled with lead-free solder can be identified (in accordance with IPC/JEDEC standards) by a small oval sticker placed on the top-side of the circuit board near the PCB reference number (8xx-xxx).



The same sticker is used on the connectors of soldered cable assemblies. The absence of a sticker indicates that tin/lead solder has been used. **If in doubt, please check with a Calrec customer support engineer before carrying out any form of re-soldering.**

CALREC




Overview



CALREC

SYSTEM OVERVIEW

- Up to 64 faders, with 2 layers of control (A and B), plus 2 main and 2 sub-main output faders.
- 320 equivalent channels: Up to 108 stereo channels plus 104 mono channels
- Console operates independently of PC.
- Independent DSP operation ensures audio continuity even during PC or control reset.
- Console and racks boot from power on in less than 20 seconds.
- Full control system reset in less than 15 seconds.
- Last settings fully restored on power-up or re-set.
- Automatic change over to hot spares for power supplies, control cards and DSP cards.
- All cards and modules are designed to be hot plugged.
- All cards and modules are designed to initialise upon insertion.

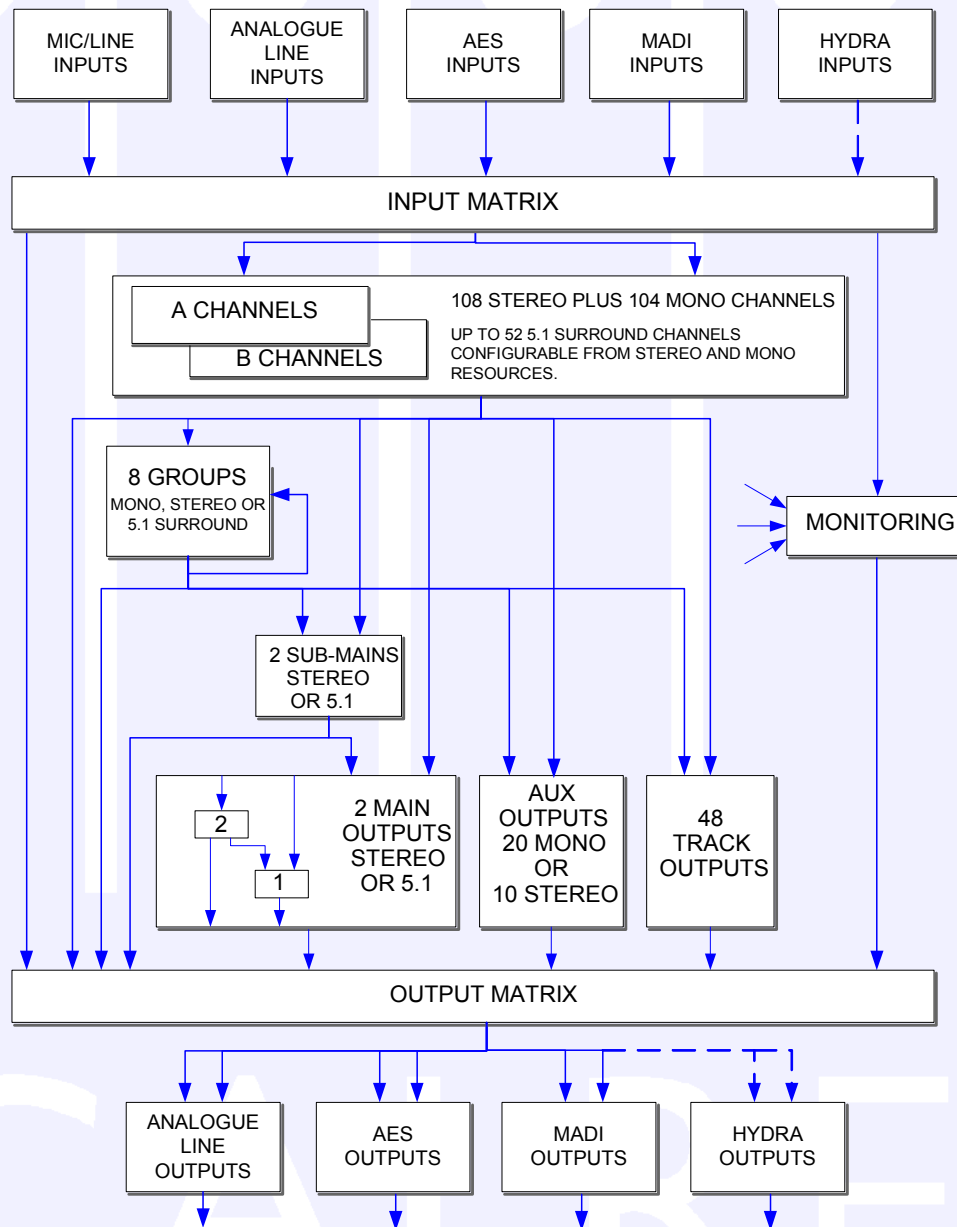

Please note that Hydra inputs cannot be patched to Hydra outputs

INPUTS AND OUTPUTS

****Wide Area Bulk Cards** are used to expand the I/O of the system via a wide area interface such as MADI, or Hydra - Calrec's sophisticated audio networking system.

The system can have up to 8 Wide Area Interfaces.

Please note : If the maximum number of WAB cards are used (8), then one of the 3 remaining AES I/O slots in the Digital I/O rack must be left unused.

HYDRA I/O UNIT

Hydra I/O units can interface up to 96 inputs and 96 outputs, analogue or digital. These units can be local or remotely located.

HYDRA GIGABIT INTERFACE

Interfaces up to 128 mono inputs and 128 mono outputs. Each Unit Requires a wide area bulk card in the Digital I/O Rack.

MADI INTERFACE

Interfaces up to 128 mono inputs and 128 mono outputs. Each Unit Requires a wide area bulk card in the Digital I/O Rack.

ANALOGUE I/O RACK

Up to 8 Mic/Line or Line input cards, each providing 8 stereo inputs per card.

Up to 8 Line output cards, each providing 8 stereo outputs per card.

DIGITAL I/O RACK

Up to 11 AES cards, each providing 16 stereo inputs and 16 stereo outputs.

8 of the AES card slots can be occupied by Bulk I/O cards (Max 5)* or Wide Area Bulk (WAB) cards**.

2 DSP cards (1 plus 1 hot spare)

PC

* Bulk I/O cards are used to interface to Analogue I/O Racks. Each Rack interfaces 128 mono inputs and 128 mono outputs.

There can be up to 5 Analogue I/O Racks in the system.



(0759-52)

2 CONTROL PROCESSOR CARD SLOTS (1 PLUS 1 HOT SPARE).

4 GPIO CARD SLOTS (MINIMUM 2)

The largest system (in terms of I/O) would have 8 WAB cards and 2 AES cards. If one WAB card is reserved as a redundant hot spare, this system would have 896 mono I/O on WAB interfaces, plus 32 stereo AES I/O. If all WAB I/O was AES through a Hydra network, the system could have up to 480 stereo AES on the system.

EQUIPMENT LIST

Depending on the options purchased, you should expect to receive the following:

1 Control Surface

As specified in the quotation, and including:

- 1 Console Processor (2 if the hot spare option has been purchased)
- 2-4 Relay/Opto cards, in line with the quotation.

1 Digital I/O rack

- 1 Rack Control Processor (2 if the hot spare option has been purchased)
- 1 DSP card (2 if the hot spare option has been purchased)
- One Bulk I/O card per Analogue I/O Rack in the system
- One Wide Area Bulk I/O card for each optional I/O expansion interface, such as MAD1 or Hydra (if purchased)

Up to 5 Analogue I/O racks

- 1 Bulk I/O card to interface to the Digital I/O Rack
- Up to 8 mic/line or line input cards, in line with the quotation
- Up to 8 line output cards, in line with the quotation

1 Bulk Power Supply and Distribution Rack

- Up to 3 Bulk PSU modules (dependent on console size, its distance from the Digital I/O Rack, and whether a hot spare is required)

PSU requirements can vary depending upon the cabling requirements of each installation. For very long distances, a second bulk power supply and distribution rack may be needed.

A number of Multi-Rail Power Supply Units

- 1 Multi-Rail PSU is required for systems with just one Analogue I/O Rack, 2 are required for systems with 2 or 3 Analogue I/O Racks, plus 1 or more hot spares if required.

PSU requirements can vary depending upon the cabling requirements of each installation.

1 PC

1 Set of system cables

ENVIRONMENTAL CONSIDERATIONS

Temperature Range:

Operating 0°C to +30°C (32°F to +86°F) in the immediate environment.
 Non-operating -20°C to +60°C (-4°F to +140°F).

Relative humidity:

Operating 25% to 80% non condensing.
 Non-operating 0% to 90% non condensing.

Altitude:

Operating up to 2,000 metres (6562 feet). (This is the limit to which the safety tests are valid).
 Non-operating up to 15,000 metres (49213 feet).

EARTHING

The control surface, Digital I/O and Analogue I/O racks are provided with chassis earth studs. These must be connected to a common earth buss before any AC power is applied to the system. The system power supplies and PC are earthed via their AC power inlets.

AC (MAINS) POWER

All power supplies are rack-mounting and are separate from the units they power, except for the PC which has a built-in power supply. AC (Mains) Power inlets are IEC type.

Each power supply unit in the Bulk PSU rack has one inlet.

Each Multi-Rail power supply unit has one inlet.

The PC has one inlet.

There is one inlet on the rear of the control surface, for any AC powered equipment which needs to be housed within it.

Each mains powered MADi unit (if purchased) has one inlet.

The whole system must be powered from the same phase of the AC power supply. All modules, cards and cables are designed to permit hot plugging.

SCREEN MAINTENANCE

Touch Screen

If the console is installed into an outside broadcast vehicle, it is important that the touch screen monitor is secured using suitable fixings during transit to prevent movement, and possible damage. Calrec Audio Ltd is not liable for any damages to the touch screen, the touch screen arm, the console or any other items caused by movement or damage of the monitor and / or monitor arm.

TFT Screens

The TFT meter screens that are fitted in our consoles are industrial units. The display manufacturer states that screen brightness may reduce to 50% of the initial value after the unit has been running at maximum brightness for 50,000 hrs. Our maximum brightness is intentionally reduced so that the useful life of the backlights should be in excess of 100,000 hrs. We do not believe that there are any burn-in or image-persistence issues with this type of TFT display

The TFT screens should be cleaned with a micro-fibre cloth, dampened only with clean water. Do not use any corrosive chemicals, solvents or window cleaning solutions. The TFT screens have no user-serviceable parts. Should you encounter a problem with any of your screens, please contact Calrec.

SYSTEM SPECIFICATION

DIGITAL INPUTS

Formats Supported	AES/EBU (AES3) 24-bit Also suitable for use with SPDIF (IEC958 Type 2) signals
Interface	110 Ohm transformer balanced, 5V Pk-Pk 75 Ohm unbalanced (BNC), 1V Pk-Pk
Sample Rate Conversion	24-Bit switchable on all digital inputs
SRC THD+N	-117dB @ 1kHz, 0.00014%

DIGITAL OUTPUTS

Formats Supported	AES/EBU (AES3) 24-bit
Interface	110 Ohm transformer balanced 4V Pk-Pk (nominal) into 110 Ohm load 75 Ohm unbalanced 1V Pk-Pk (nominal) into 75 Ohm load (BNC)

ANALOGUE INPUTS

Analogue - Digital Conversion	24-Bit
Input	Electronically Balanced
Input Impedance	>1k Ohms for Mic gains 10k Ohms for Line gains
Sensitivity	+18 / -78dB on Mic/Line Input Card +18/-24dB on Line Only Input Card.
Equivalent Input Noise	-126dB (150 Ohm source)
Distortion	-1dBFS @ 1kHz - Better than 0.003% -20dBFS @ 1kHz - Better than 0.006% -60dBFS @ 1kHz - Better than 0.3%
Frequency Response	20Hz to 20kHz +/- 0.5dB on Mic/Line Input Card 20Hz to 20kHz +/- 0.25dB on Line Only Input Card
Input CMR (Common Mode Rejection)	>70 dB (Typical 80dB) on Line Inputs >75 dB (Typical 85dB) on Mic Inputs

ANALOGUE OUTPUTS

Digital - Analogue Conversion	24-Bit
Output Balance	Electronically Balanced, 20Hz to 20kHz, Better than -35dB, typically -45dB
Output Impedance	<40 Ohms
Distortion	-1dBFS @ 1kHz - Better than 0.006% -20dBFS @ 1kHz - Better than 0.003% -60dBFS @ 1kHz - Better than 0.3%
Frequency Response	20Hz to 20kHz +/- 0.25dB

- Analogue input for 0dBFS can be pre-set globally to +28, +24, +22, +20, +18 or +15 dBu
- Pre-fader headroom on analogue inputs is adjustable globally from +24 to +36dB in 2dB steps
- Analogue output for 0dBFS Matches input setting into >1kOhms (+24dBu max into 600 Ohms)

PERFORMANCE

Digital to Digital (AES/EBU) Distortion	-1dBFS, 20Hz to 10kHz - Better than 0.002%
Digital to Digital (with SRC) Distortion	-1dBFS, 20Hz to 10kHz - Better than 0.005%
Frequency Response (Analogue Input to Output)	20Hz to 20kHz +/- 0.5dB

SYNCHRONISATION

48kHz synchronisation	NTSC/PAL Video Internal Crystal Reference TTL Wordclock (48kHz) AES/EBU Digital Input (48kHz)
-----------------------	--

The system can be pre-set with up to five external sync sources, plus internal, such that if the 1st source fails, it will automatically switch to the 2nd, and so on.

Frame Options and Dimensions



CALREC

CONTROL SURFACE FRAME SIZES

Frames are made up of sections which can be 4, 5 or 6 modules wide. This allows many different sizes of console to be achieved using different combinations of different sized sections. Fader modules have 4 faders each, so console size can depend on the number of faders required.

The table below shows the dimensions of the standard frame sizes available. Sections within the frame do not have to be in the order shown. For details of custom frames, with wedge sections etc, please contact Calrec.

No of Modules Wide	Frame	Length		Depth	
		inches	mm	inches	mm
12	4:4:4	60.9	1547	38	964
13	4:4:5	65.9	1672	38	964
14	4:6:4	70.8	1797	38	964
15	4:6:5	75.7	1922	38	964
16	6:4:6	80.7	2047	38	964
17	5:6:6	85.6	2172	38	964
18	6:6:6	90.5	2297	38	964
19	5:4:4:6	95.7	2428	38	964
20	6:4:4:6	100.6	2553	38	964
21	5:4:6:6	105.5	2678	38	964
22	4:6:6:6	110.4	2803	38	964
23	5:6:6:6	115.4	2928	38	964

Typical Frame (4:4:4)

This example shows a 40 fader console, using a 4:4:4 frame. With 2 audio paths on each fader, this allows up to 64 channel faders within a frame only 1547mm (60.9 inches) wide. The Assign panels are shown shaded.

TFT Meter		TFT Meter		TFT Meter		Twin VU Meter		Reset & TB Mic Panel	TFT Meter		TFT Meter	
	Input/ Output Controls	Equaliser & Dynamics	Monitor Selector	Monitor LS	Routing & I/O Matrix Panel	Aux, Delay, TB & Main Outputs Panel			TB & Memory Panel	Surround Spill Panel	<div>LCD Screen</div>	
Wild Assign	Wild Assign	Wild Assign	Wild Assign	Assign-able Fader		Wild Assign	Wild Assign		Wild Assign	Wild Assign	Wild Assign	Wild Assign
Channel Fader	Channel Fader	Channel Fader	Channel Fader			Channel Fader	Channel Fader		Channel Fader	Channel Fader	Channel Fader	Channel Fader

Keyboard & Trackball in Tray

Typical Frame (4:4:5)

This example shows a 48 fader console using a 4:4:5 frame. With 2 audio paths on each fader, this allows up to 96 channel faders within a frame only 1672mm (65.9 inches) wide. The Assign panels are shown shaded.

TFT Meter		TFT Meter		DK Audio Meter MSD600		Twin VU Meter		Reset & TB Mic Panel	TFT Meter		TFT Meter			
	Input/ Output Controls	Equaliser & Dynamics	Monitor Selector	Monitor LS	Routing & I/O Matrix Panel	Aux, Delay, TB & Main Outputs Panel			TB & Memory Panel	Surround Spill Panel	<div>LCD Screen</div>			
Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign		Wild Assign		Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign
Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Assign-able Fader	Channel Fader		Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader

Keyboard & Trackball in Tray

Typical Frame (6:4:6)

This example shows a 56 fader console using a 6:4:6 frame. With 2 audio paths on each fader, this allows up to 112 channel faders within a frame only 2047mm (80.7 inches) wide.

TFT Meter		TFT Meter		TFT Meter		DK Audio Meter MSD600		Twin VU Meter		Reset & TB Mic Panel	TFT Meter		TFT Meter		TFT Meter	
LCD Screen				Input/Output Controls	Equaliser & Dynamics	Monitor Selector	Monitor LS	Routing & I/O Matrix Panel	Aux, Delay, TB & Main Outputs Panel		TB & Memory Panel	Surround Spill Panel				
Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign						Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign
Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Assign-able Fader			Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader

Keyboard and Trackball in Tray

Typical Frame (5:6:6)

This example shows a 64 fader console, using a 5:6:6 frame. With 2 audio paths on each fader, this allows up to 128 channel faders within a frame only 2172mm (85.6 inches) wide.

TFT Meter		TFT Meter		TFT Meter		DK Audio Meter MSD600		Reset & TB Mic Panel	Twin VU Meter		TFT Meter		TFT Meter		TFT Meter	
				Input/Output Controls	Equaliser & Dynamics	Monitor Selector	Monitor LS	Routing & I/O Matrix Panel	Aux, Delay, TB & Main Outputs Panel		TB & Memory Panel	Surround Spill Panel			LCD Screen	
Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Assign-able Fader	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign
Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader		Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader

Keyboard and Trackball in Tray


Typical Frame (6:4:4:6)

This example shows a 64 fader console, using a 6:4:4:6 frame. With 2 audio paths on each fader, this allows up to 128 channel faders within a frame only 2559mm wide.

TFT Meter		TFT Meter		TFT Meter		TFT Meter		TFT Meter		DK Audio Meter MSD600		Twin VU Meter		Reset & TB Mic Panel	TFT Meter		TFT Meter		TFT Meter	
								Input/Output Controls	Equaliser & Dynamics	Monitor Selector	Monitor LS	Routing & I/O Matrix Panel	Aux, Delay, TB & Main Outputs Panel		TB & Memory Panel	Surround Spill Panel			LCD Screen	
Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Assign-able Fader			Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign	Wild Assign
Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader				Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader


Keyboard & Trackball in Tray

END ELEVATION

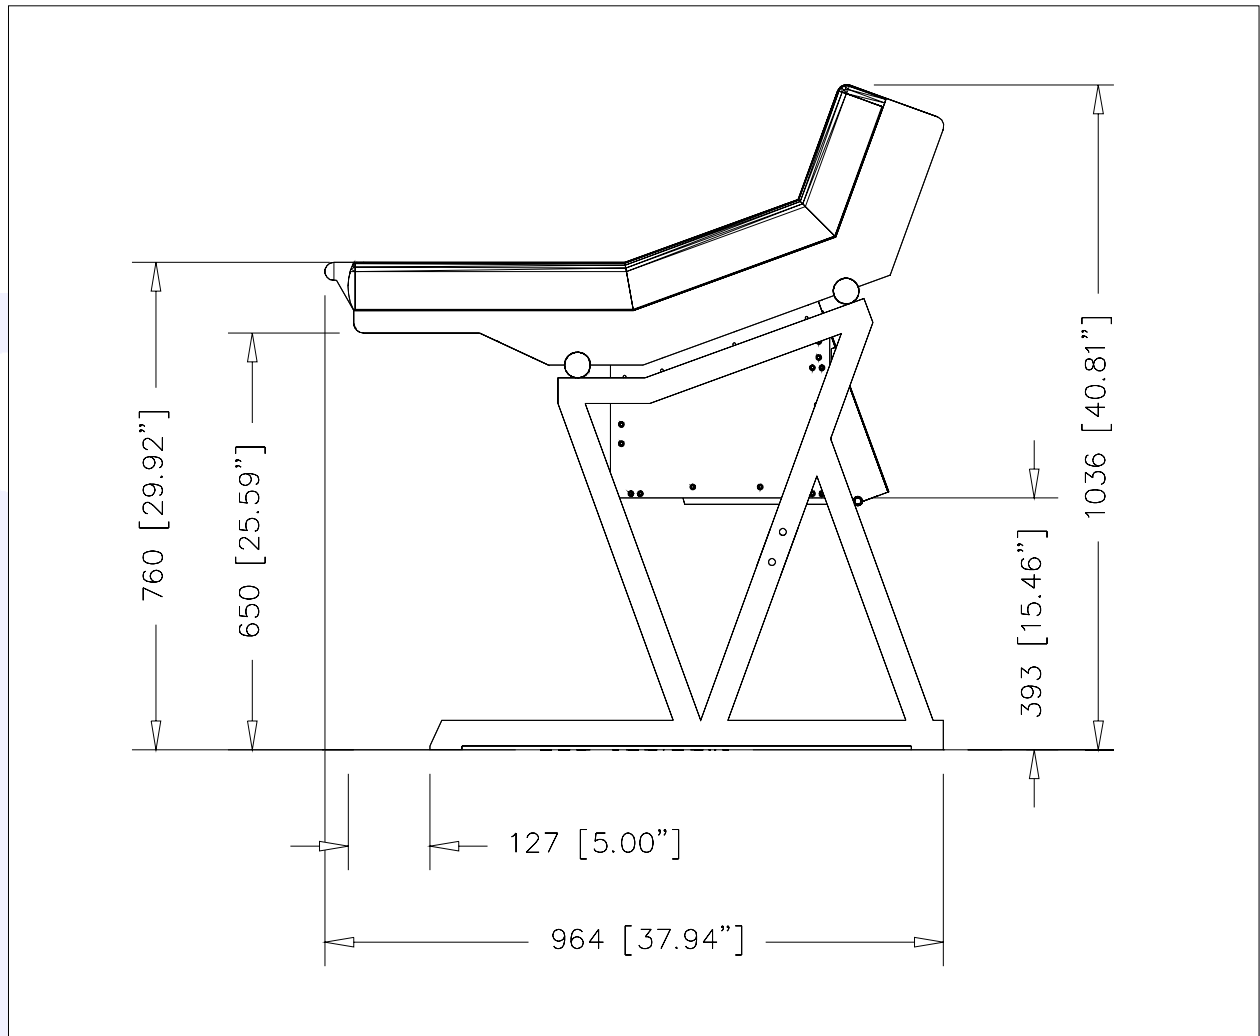


The end elevation dimensions are the same for all frame sizes. The control surface can be separated from the stand for access to the premises. The control surface sections can also be split apart if required.


FRONT ELEVATION

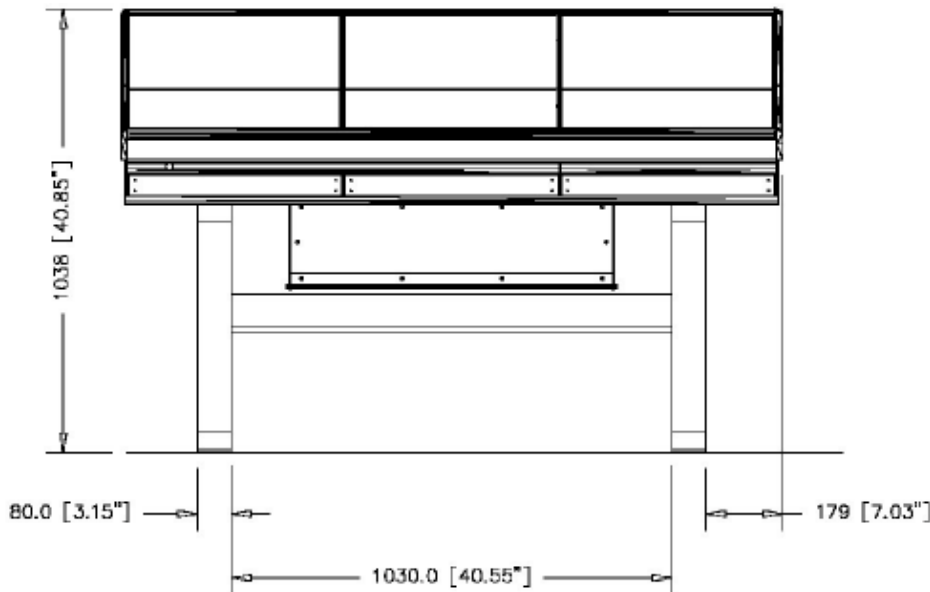

4:4:4 Frame

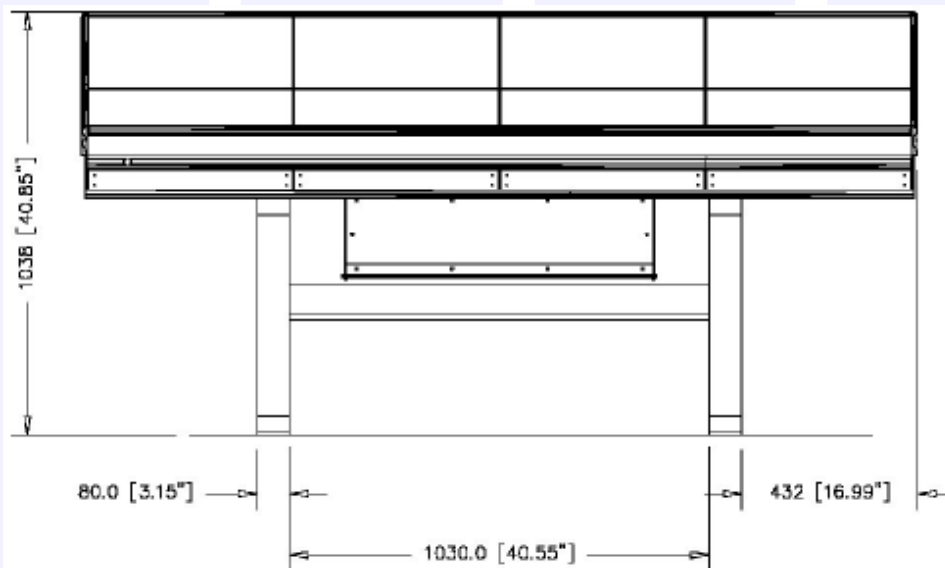

4:4:4:4 Frame

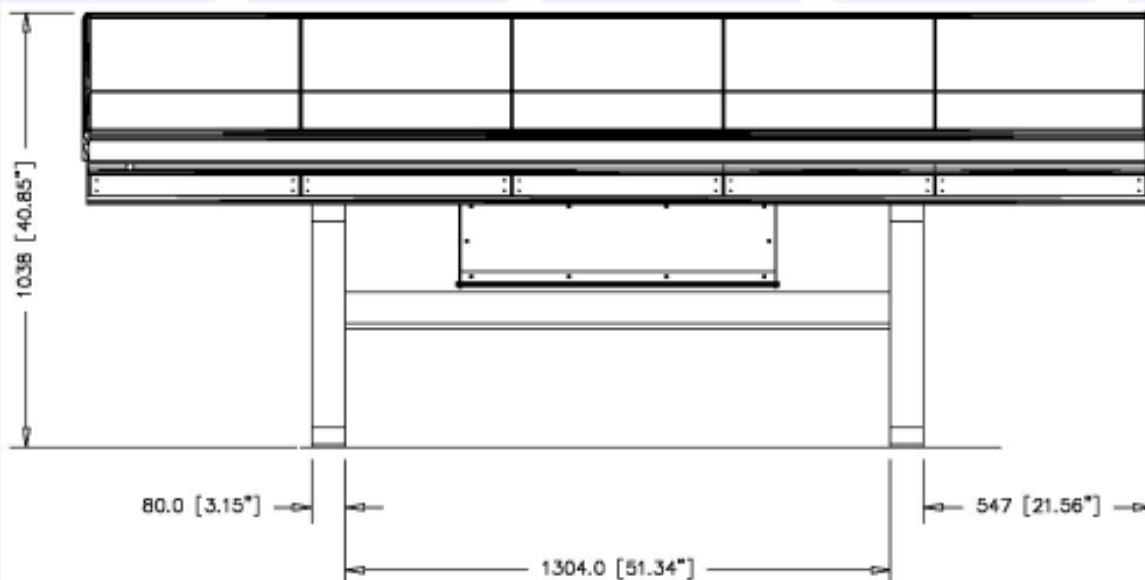

4:4:4:4:4 Frame

Equipment Installation Information




CALREC

TYPICAL RACK LAYOUT

Equipment can be mounted in separate enclosures. Please refer to the cable lengths table before planning this.

Rack Units
(U)

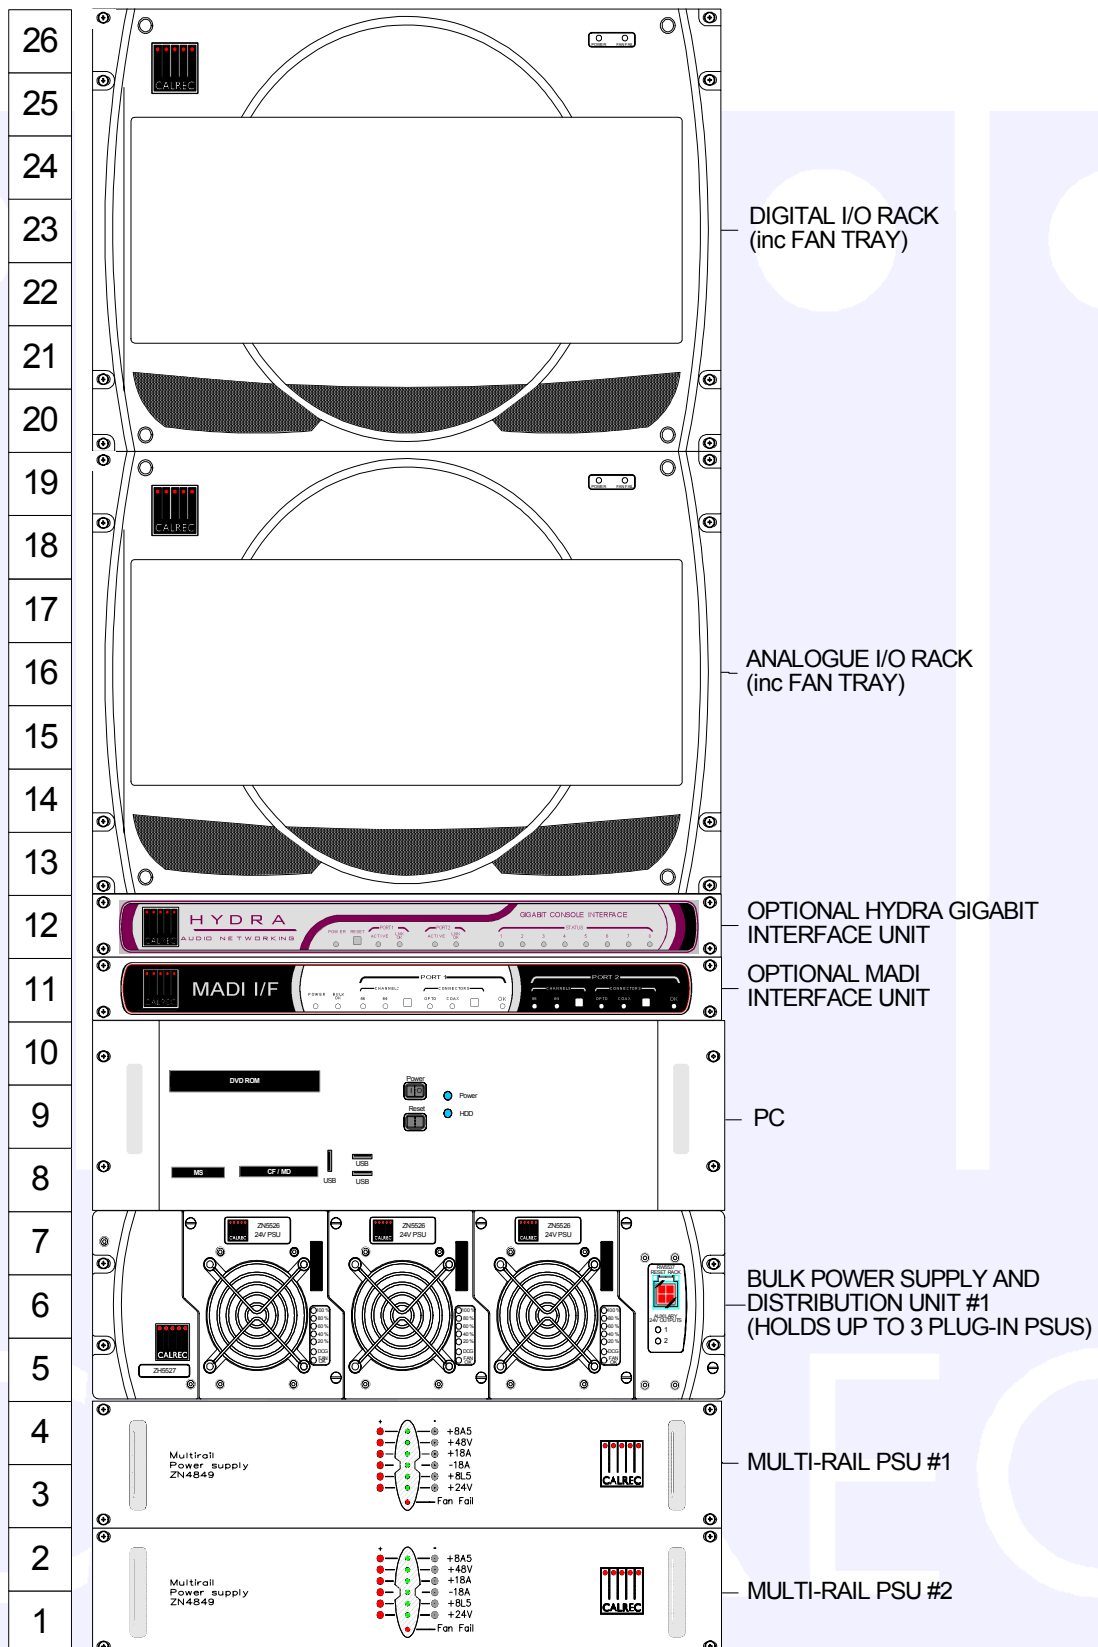

RACK SPECIFICATIONS

It is recommended that all equipment over 8Kg (17.5 lbs) in weight, or over 150mm (6 inches) deep is mounted into equipment bays which offer mechanical supports under each of the units. This will allow units to be supported as they slide forward during removal for maintenance purposes.



Items	Height	Approx depth (incl. mating cons)		Approx weight	
		inches	mm	lbs	kgs
Digital I/O Rack (fully populated)	7U	18.1	460	49.5	22.5
Analogue I/O Rack (fully populated)	7U	18.1	460	53.3	24.2
Bulk Power Supply and Distribution Rack with one PSU	3U	18.5	470	19.6	8.9
Additional PSU for Bulk PSU Rack	-	-	-	7.7	3.5
Multi-Rail PSU*	2U	18.1	460	22.1	10.0
Additional Multi-Rail PSU Hot spare	2U	18.1	460	22.1	10.0
PC*	3U	23.7	600	27	12.2
MADI Unit	1U	11.9	300	7	3.2
Hydra Gigabit Interface Unit	1U	10.4	265	6	2.7

* Units have handles protruding approx. 1.3" (32mm) from the surface of the front panel.

Equipment can be mounted in separate enclosures. Please refer to the cable lengths table before planning this. The PSU monitor rack can be mounted on the rear of the equipment bay if desired.

Each audio rack has a low noise fan tray built into it. The fan tray incorporates a baffle such that warm air is sucked up out of the rack and out through the rear of the fan tray. A vent in the front of the fan tray allows ambient air to enter. The baffle deflects this air up into the rack above. The bottom rack should not be positioned above any equipment producing significant heat.


MAXIMUM CABLE LENGTHS

Cables		Maximum Length	
From	To	Feet	Metres
Control Surface	Control Surface Bulk PSU	100.0	30.0
Control Surface	PC	500.0	150.0
Control Surface *	Digital I/O Rack *	100.0	30.0
PC	Digital I/O Rack	100.0	30.0
Digital I/O Rack	Racks Bulk PSU	100.0	30.0
Digital I/O Rack	Analogue I/O Rack	33.0	10.0
Digital I/O Rack	BNC I/O Interface Panel	16.5	5
Digital I/O Rack	XLR I/O Interface Panel	6.5	2
Analogue I/O Rack	Analogue I/O Interface Panel (EDAC)	9.8	3
Analogue I/O Rack	Multi-Rail PSU	33.0	10.0
Multi-Rail PSU	Other Multi-Rail PSU	1.3	0.4
MADI Unit	Digital I/O Rack	16.5	5
Hydra Unit	Digital I/O Rack	16.5	5


* Optional extenders can be supplied to provide console data connections up to 150 metres (500 feet) at an additional cost.

BULK POWER SUPPLY AND DISTRIBUTION UNIT

Front

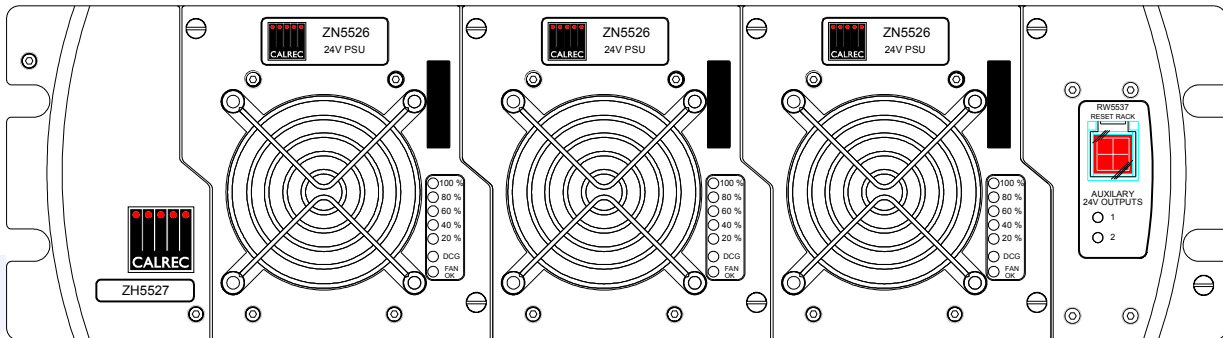

Rear

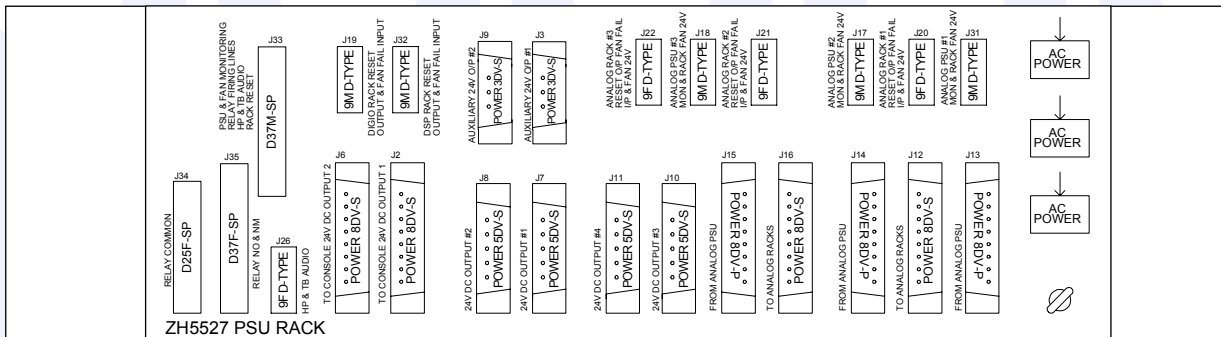

If your system uses the 2U Bulk power supply and separate distribution system, please refer to Appendix A at the end of this manual.

This 3U rack can hold up to 3 identical plug-in power supply units. Each unit has separate AC power inputs via IEC 950 filtered inlets at the rear of the rack. The DC outputs are combined on the backplane. The maximum output power from each plug-in unit is 600W. The units can be “hot swapped” providing there is enough output power remaining to drive the load. Each unit has a bargraph to indicate the output power demand. Two 24V Auxiliary outputs are provided via resettable 10A current trips with LED status indication on the front panel. These could be used for a MADi interface unit or a Hydra networking interface unit for example. A typical system would have two of these racks, one to provide power to the console control surface and another to provide power to the Digital I/O Rack. The number of plug-in PSU’s required in the rack is dependant upon the size of the system, the distance between console and rack, and the “hot spare” requirement.

The rack is fan cooled with fans mounted in the front of each PSU. The warm air is directed out of the sides of the rack. **To ensure proper cooling, there must be a minimum clearance of two inches (50mm) from the fans and side air outlets. The maximum operating ambient temperature is 35°C.**


In addition to supplying the console and digital rack components of the system with power, the Bulk Power Supply and Distribution Unit gathers and distributes the multiple rails (from external power units) required for any analogue I/O cards. All the system power rails and fan speed monitoring is gathered here before being sent to the console. Should a fault occur, a warning light will flash on the console and a diagnostic message will appear on the front end AWACS (Automatic Warning And Correction System) screen.

The unit also includes a front-mounted reset button for the Digital I/O rack.


Bulk PSU Rack Fan Noise	
1 x 24V 600W PSU	42dBA
2 x 24V 600W PSU	45dBA
3 x 24V 600W PSU	47dBA
4 x 24V 600W PSU	48dBA
5 x 24V 600W PSU	49dBA
6 x 24V 600W PSU	50dBA

MULTI-RAIL PSU

Front

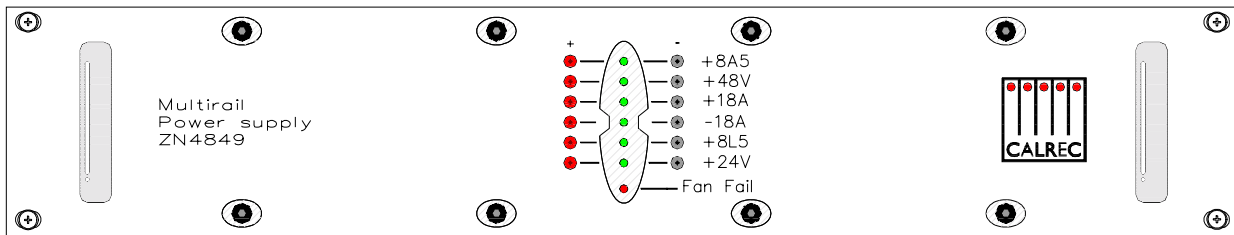

Rear

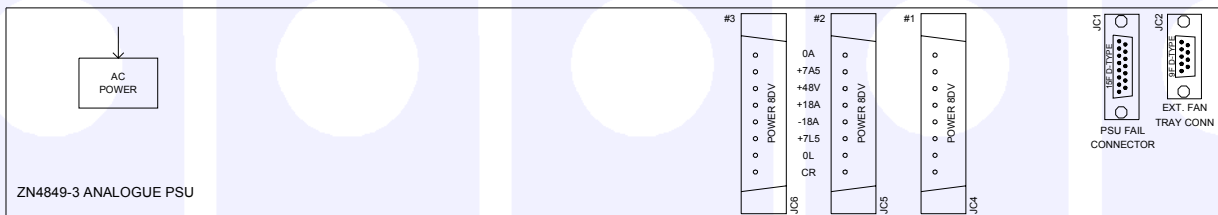

A 2U multi-rail power supply unit is used to power the analogue I/O racks. These supplies can be paralleled together. A typical system with 2 analogue I/O racks would have two of these multi-rail power supply units, plus a third unit acting as a “hot spare” providing redundancy, in case one of the other units fail. If racks are housed in different locations, each may require a hot spare. This is dependant upon the cable lengths involved. All hot spares are optional.


Multi-rail power supply units are fitted with rear flanges to allow the rear of the unit to be bolted to the studio equipment bay. In outside broadcast situations, the unit should ideally be located into an equipment bay which offers mechanical support from underneath.

The multi-rail power supply unit is fan cooled but uses a very low noise fan (29dBA), drawing air from side to side through the PSU instead of in from the front, to minimise noise. The Multi-Rail PSU's are fitted with rear flanges to allow the rear of the PSU to be bolted to the studio equipment bay. Should any of the fans slow down or stop, or any voltage rail fall outside specified limits, a PSU Fail signal will be sent to the console and PC to warn the operator of a problem.


These units are monitored via the bulk power supply and distribution unit. Should a fault occur, the hot spare would automatically take over from the primary unit, the PSU Fail Indicator on the Broadcast Facilities panel would begin to flash and a message would be sent to the control surface via AWACS.

PC INFORMATION

Front

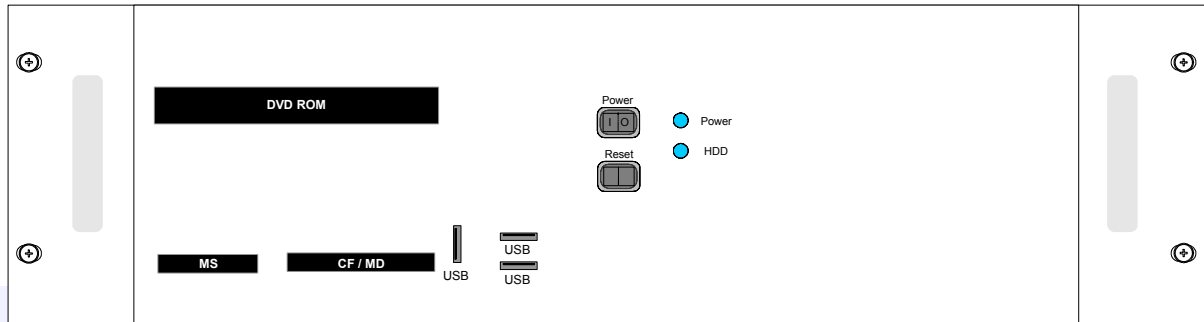

Rear

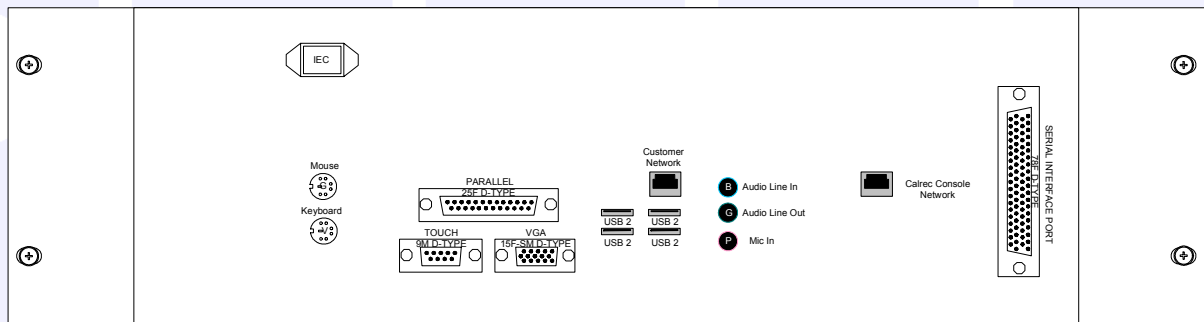

Mounting Instructions

The PC should be mounted by means of the side brackets, each of which has two mounting holes. The PC rack should always be mounted in a horizontal position. The sliders should be used when no support is provided under the PC assembly. It should not be supported by front flanges alone. Failure to follow these instructions may invalidate the warranty. The PC is earthed via its AC power inlet.

Remote Access

USB connectors are provided on both the front & the rear of the PC for the option to add an external modem of your choice. If a modem is added, and a suitable telephone line installed, the console can be remotely accessed by Calrec Support Engineers to aid software upgrades and diagnostic work. This can greatly enhance the level of service and support we can provide. A dial-up facility must first be activated at the PC before this is possible, to ensure that connections are not made at inappropriate times or without the user's knowledge and consent.

Network Ports

A network port is provided to enable the user to connect to their own LAN. Calrec will not be responsible for the configuration of this port or for any performance issues arising from its use. A second Ethernet port is provided to enable the PC to be connected to a Calrec Hydra Audio Network, which is an option which can either be purchased with the console or in the future.

Software Supplied

An OEM PC Operating System license is supplied with each console, and the operating system software is pre-installed. The console software is also pre-installed, and supplied on a CD-ROM.

Operating System	Windows XP
CPU	Intel Celeron Processor (2GHz+)
RAM	256 MB DDR RAM
HDD	40GB
CD ROM	52x
Network Ports	2 x 10/100
Card Slots	Compact Flash/Microdrive, SmartMedia, Memory Stick, Secure Digital/Multimedia Card
USB 2 Ports	4 (Rear of Unit), 1 (Front of Unit)
IEEE1394 Port	1 (Front of Unit)
Additional Hardware	8 Port Serial Card
Additional Software	PC Anywhere

3rd Party Software

Calrec recommends that the PC is regarded as an integral control device for the console, and not as a general purpose PC. If 3rd party software is installed on the PC, care must always be taken to ensure that it does not interfere with the normal performance of the PC. The installation of inappropriate software on the PC may invalidate the console warranty.

Username and Passwords

The PC will be set up with two sets of usernames and passwords:

Username	Password	Description
CalrecAudio	(None)	This user can install and run programs, but not change PC hardware settings, (i.e. set-up network, install drivers). This user is intended to be used during normal operation of the PC.
CalrecAudioAdmin	calrec	This user has full rights to the PC, and can install and change PC hardware settings. This user is intended for use during re-configuration of the PC and to set up Hydra Audio Networking.


File Backup

A number of flash card slots are provided on the front of the PC for file backup. In addition, backup could also be to a customer's LAN or to a USB device which can be plugged into the front or rear of the PC. The following files are not installed from the CD-ROM as they are specific to each individual console. As such, a backup copy should be kept of these files in-case of PC or hard-drive failure:

Filename	Description
C:\Sigma\Cust1\Config.ini	This file should only be altered by an approved Calrec engineer using a specifically designed application. The file can be copied but any unauthorised changes made will render it inoperable, including changing the date stamp of the file (such as saving even if not edited). If the file needs to be e-mailed to Calrec for any reason it should always be zipped to protect the file time/date stamp. A new backup copy of this file should be made after a console upgrade.
C:\Sigma\Cust1\Setup.ini	This file is updated when changes to console settings are made and saved using the set-up application. It should not be altered by any means other than by using the set-up application. A new backup copy of this file should be made after such changes are made or after a software upgrade.
C:\Sigma\Cust1\Options\Options.bin (Or C:\Sigma100\Cust1\Options.bin in earlier software versions)	This file is updated and a new backup should be made when changes to any of the sub-pages of the options screen are made and saved.
C:\Sigma\Cust1\memories	This is the default location for the user memories. However, operators can choose to save them to any location they desire. The maintenance department should keep a backup of the important default memories, whilst operators should be encouraged to keep their own backups of their own memories and to update them whenever they make important changes to them. After a software upgrade the main set of memories will be upgraded and checked by the engineer carrying out the upgrade. A new backup should then be made of these memories.
C:\Sigma\Cust1\Meter	This is the default location for the user-definable meter configurations. If your console uses these, you should also keep a backup copy of the files in this folder.
C:\Sigma\Cust1\Monitor	This is the default location for the user-definable monitor panel configurations. If your console uses these, you should also keep a backup copy of the files in this folder.
C:\Sigma\Cust1\Network	If your console uses Hydra Audio Networking, you should also keep a backup copy of the files in this folder. These are the configuration settings for the network units.
For customers using Compaq PC's only: C:\Sigma100\Cust1\A100fe1.ini C:\Sigma100\Alphaprg\Alphaprg.ini	These files are installed from the CD-ROM in a default format. The settings in these files can vary in different Compaq PCs. The backup of these files should be updated after a software upgrade. If a new hard-drive is fitted to the original Compaq PC, these files should be used to over-write the versions installed by the CD-ROM.

SYNCHRONISATION

The system can be pre-set with up to five external sync sources, plus internal, such that if the 1st source fails, it will automatically switch to the 2nd, and so on. Please note that the facility for locking to external AES sources is restricted to the first six inputs of each AES card in the console. One of the external sources can be Video, (PAL or NTSC). TTL Wordclock is another possible external source. Synchronisation inputs for Video Sync (PAL or NTSC) and TTL Wordclock are provided on the rear of the Digital I/O Rack, on 75Ω BNC connectors.

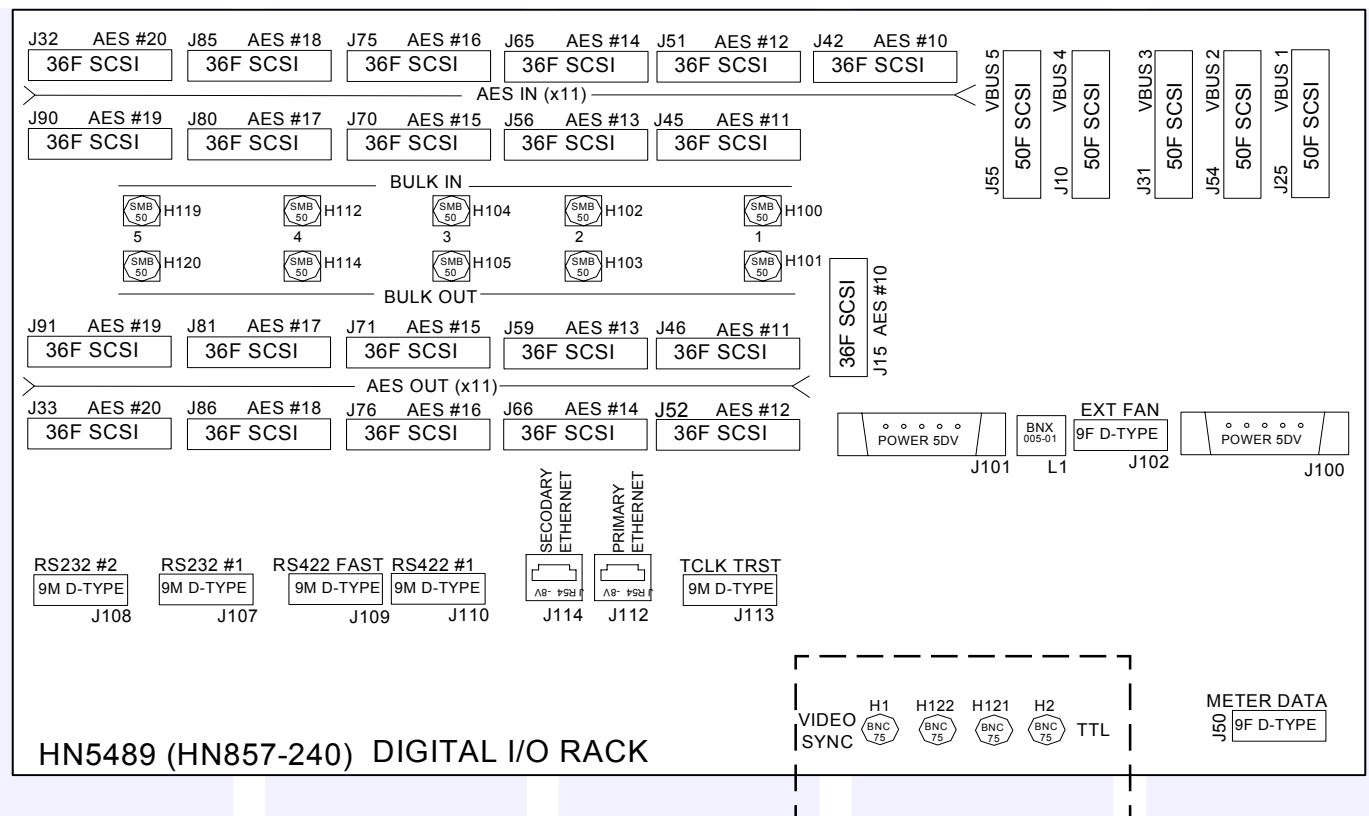

When using a digital input or wordclock as a source, the system will tolerate a variation of up to +/- 100 Hz in the frequency of the source. The console may also be synchronised from its internal crystal oscillator (48 kHz).



It is strongly recommended that all items of digital equipment connected digitally to the console, are synchronised to the same sync signal.

If the console's internal sync is to be the master, other digital equipment should be synchronised to the digital outputs of the console.

GPIO CONNECTIONS

Connections to the relay and opto isolators are provided on 36 way female SCSI connectors on the rear of the console. Up to 4 cards can be fitted, each of which can provide up to 16 relay-isolated outputs and 8 opto-isolated inputs.

* Note that on Relay/Opto card 1, relays 1 - 4 are not available, as they are used for TX, RX, PSU Fail and APFL facilities.

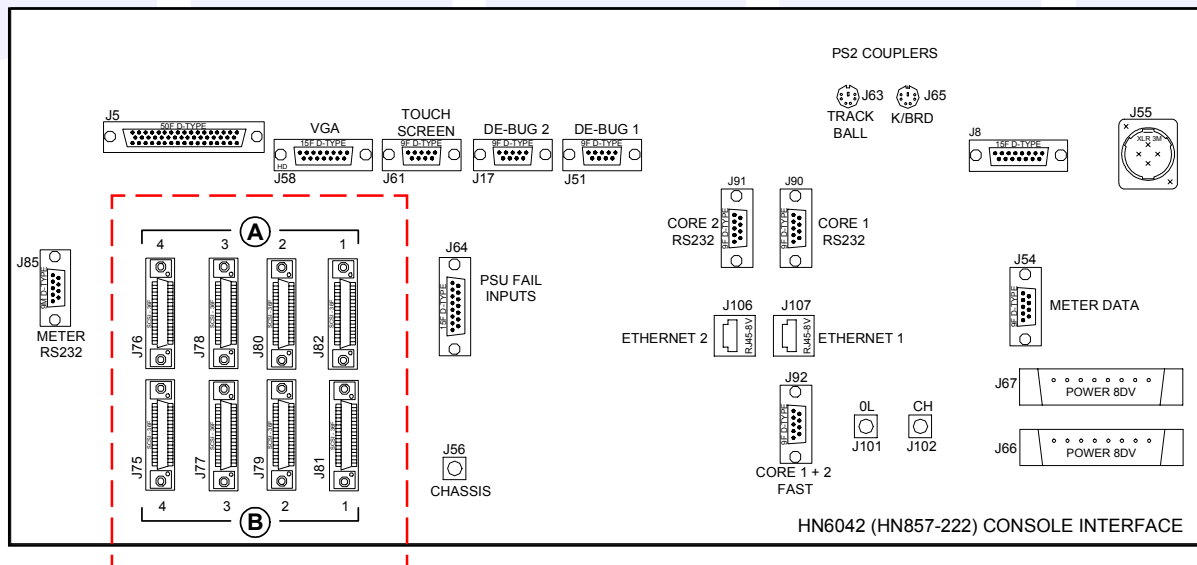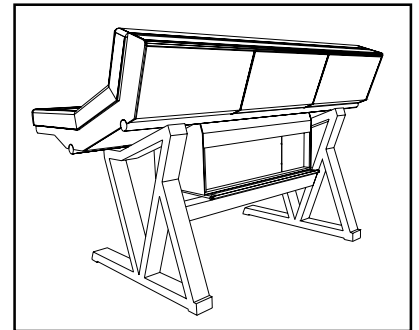

Relay Output Specification: 100mA maximum switch current, 30V maximum voltage.

Opto Input Specification: DC - 5 to 50 volts, positive or negative

AC - 5 to 50 volts peak, 50-60Hz.

A Connector 1 of 2

Pins	Circuit
1 . 19	5V
2 . 20	Opto 1
3 . 21	Opto 2
4 . 22	Opto 3
5 . 23	Opto 4
6	* Relay 1 No
24	Nm
7	Com
25	* Relay 2
8	Nm
26	Com
9	* Relay 3
27	Nm
10 .	Com
28	* Relay 4
11	Nm
29	Com
12	Relay 5
30	Nm
13	Com
31	Relay 6
14	Nm
32	Com
15	Relay 7
33	Nm
16	Com
34	Relay 8
17	Nm
35	Com
18 . 36	0V

B Connector 2 of 2

Pins	Circuit
1 . 19	5V
2 . 20	Opto 5
3 . 21	Opto 6
4 . 22	Opto 7
5 . 23	Opto 8
6	Relay 9
24	Nm
7	Com
25	Relay 10
8	Nm
26	Com
9	Relay 11
27	Nm
10 .	Com
28	Relay 12
11	Nm
29	Com
12	Relay 13
30	Nm
13	Com
31	Relay 14
14	Nm
32	Com
15	Relay 15
33	Nm
16	Com
34	Relay 16
17	Nm
35	Com
18 . 36	0V

DOLBY DP570 & DP564 SETUP (FOR CALREC REMOTE INTERFACE)

The following instructions are to set up a Dolby DP570 or DP564. Please also refer to the drawing opposite and schedule on the next page for connection details.

On the Dolby box:

<label> means press the button with the name label.

Power up the unit and wait for it to get going.

<setup>

<down arrow> until you see "SYSTEM SETTINGS"

<enter> Unit name is now displayed

<down arrow> until you see "GPI setup"

<enter> "GPI pin 23" is displayed

<enter> "GPI pin 23 trigger" is displayed

<enter>

<down arrow> until you see "Edge"

<enter>

<esc> "GPI pin 23 trigger" is displayed

<down arrow> "GPI pin 23 Polarity" is displayed

<enter>

<down arrow> until you see "Positive/High"

<enter>

<esc> "GPI pin 23 Polarity" is displayed

<down arrow> "GPI pin 23 Function" is displayed

<enter>

<down arrow> until you see "FULL" meaning surround.

<enter>

<esc> "GPI pin 23 Function" is displayed

<esc> "GPI pin 23" is displayed

<down arrow> "GPI pin 24" is displayed

Repeat the process for all the GPI pins 24 - 31 (as drawing/spreadsheet)

<esc> "GPI setup" is displayed

<down arrow> "GPO setup" is displayed

Now go through the same routine to set up the outputs on pins 7 to 14 (as drawing/spreadsheet) with trigger as "Level", Polarity as "Positive/High", and function as spreadsheet.

<esc> Until back at original menu.

Note: With issue 1 cable, the outputs were on pins 8 to 15.


Dolby Multichannel Audio Tool Model DP570 to Remote Connection Cable (fully isolated)

Designed to be plugged in second remote card

pin	function
1	5V
2	Fault Output
3	Error Output
4	User defined output
5	Solo tally output
6	Solo control input
7	Surround
8	Stereo
9	Mono
10	Phantom Centre
11	3Stereo
12	Prologic
13	Line
14	Custom
15	RF
16	
17	
18	
19	
20	
21	
22	
23	Surround
24	Stereo
25	Mono
26	Phantom Centre
27	3Stereo
28	Prologic
29	Line
30	Custom
31	RF
32	
33	
34	
35	
36	
37	Digital Ground

pin	function
6,9,12,15,25,28,31,34	Relay 1-8 No
2	Opto 1
3	Opto 2
4	Opto 3
5	Opto 4
7	Relay 1 Com
26	Relay 2 Com
10	Relay 3 Com
29	Relay 4 Com
13	Relay 5 Com
32	Relay 6 Com
16	Relay 7 Com
35	Relay 8 Com
8,11,14,17,20,21,22,23,24,27,30,33	Digital Ground


pin	function
6	Relay 9 No
2	Opto 5
3	Opto 6
4	Opto 7
5	Opto 8
7	Relay 9 Com
20,21,22,23,24	Relay 9 Nm, Opto 5-8 returns

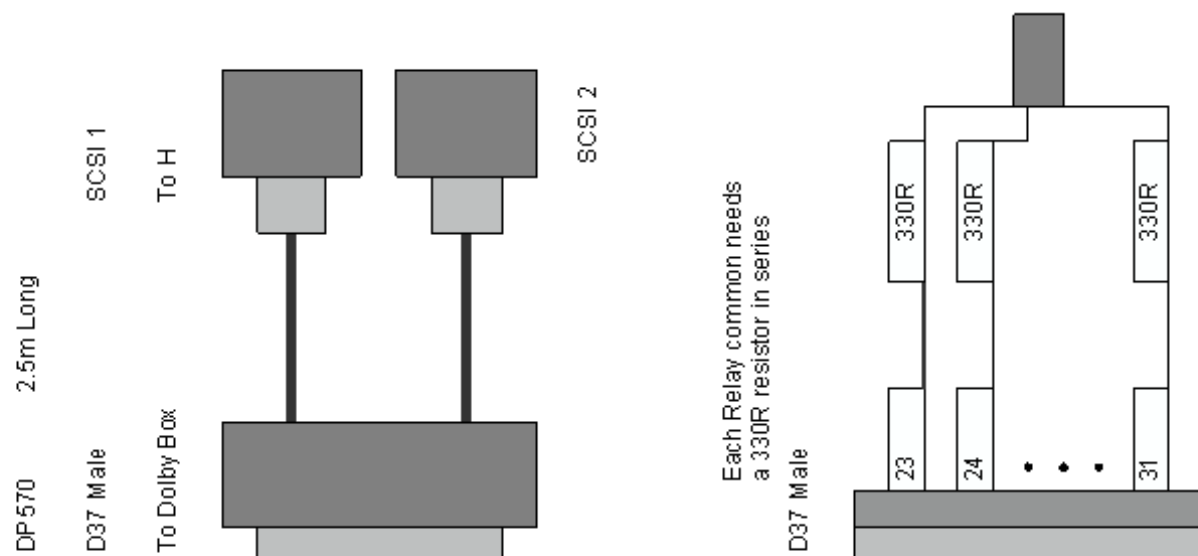

DOLBY DP570 & DP564 CABLING SCHEDULE

Cable schedule for Dolby DP570 & DP564 remote connection to Calrec Console													0681-87
Cable No	Cable Description	Cable Type	Length	Colours	From				To				Circuit
					Pins	Conn Type	Area	Con. No.	Area	Con. No.	Conn Type	Pins	
1	Alpha Rem 1	BEL10 9510	8m	Bk of (Bk/R)	1*	D37MC	Eqpt Bay	GPIO	HN4916-2	J16	SCSI 36M	6 \$	Relay 1-8 No (5V)
		310-201		Bk/W	7.8	Cable Mounting	Dolby Unit	"	"	"	Cable Mounting	2.3	Opto 1 / 2 (Stereo/Mono)
				Bk/G	9.10	Hood: 420-498	"	"	"	"	Hood: 410-156	4.5	Opto 3 / 4 (Ph centre/Stereo)
				Bk/B	23#24#	Insert: 420-496	"	"	"	"	Insert: 410-155	7.26	Relay 1 / 2 Com (Surr/Stereo)
				Bk/Y	25#26#	"	"	"	"	"	"	10.29	Relay 3 / 4 Com (Mono/Ph centre)
				Bk/Bn	27#28#	"	"	"	"	"	"	13.32	Relay 5 / 6 Com (3 Stereo/Pro logic)
				Bk/O	29#30#	"	"	"	"	"	"	16.35	Relay 7 / 8 Com (Line/Custom)
				R/W	NC	"	"	"	"	"	"	NC	
				R/G	NC	"	"	"	"	"	"	NC	
				R/B	NC	"	"	"	"	"	"	NC	
				R or (Bk/R)	37*	"	"	"	"	"	"	8 ##	Relay 1-8 Nm, Opto Returns
				Scr	Shell*	"	"	"	"	"	"	Shell	Earth
2	Alpha Rem 2	BEL5 9505	8m	Bk of (Bk/R)	1*	"	"	"	HN4916-2	J17	SCSI 36M	6	Relay 9 No (5V)
		310-379		Bk/W	11.12	"	"	"	"	"	Cable Mounting	2.3	Opto 5 / 6 (Pro logic/Line)
				Bk/G	13.14	"	"	"	"	"	Hood: 410-156	4.5	Opto 7 / 8 (Custom/RF)
				Bk of (Bk/B)	31#	"	"	"	"	"	Insert: 410-155	7	Relay 9 Com (RF)
				B or (Bk/B)	NC	"	"	"	"	"	"	NC	
				Bk/Y	NC	"	"	"	"	"	"	NC	
				R or (Bk/R)	37*	"	"	"	"	"	"	24 ##	Relay 9 Nm, Opto Returns
				Scr	Shell*	"	"	"	"	"	"	Shell	Earth
NOTE													(Dolby Circuits)
	* = shared pin												
	\$ Pin 6 also links to pins 9, 12, 15, 25, 28, 31, 34												
	# Each pin (23 to 31) separately needs a 330R 0.29W Resistor (080-331) in series with the wire (9 resistors in total)												
	## Pin 8 also links to pins 11, 14, 17, 20, 21, 22, 23, 24, 27, 30, 33												
	### Pin 24 also links to pins 20, 21, 22, 23												
	DG = Digital Ground												
	NC = No Connection, tie back												
Note: Also see drawing 920-605													
Note: This fully isolates the two systems. The original test cable did not because the opto returns were not used.													Run No. 1 - 1
Note: Wires shown here on pins 7-14 of D37 were connected to pins 8-15 on issue 1 schedule. Dolby box setup would be different for issue 1 cable													Cable Description:
Issue 2 cable is in line with default Dolby pin allocation													Dolby Remotes Issue 2

SERIAL INTERFACE



The console can have up to 8 hub cards, each of which can have a serial interface port for allowing equipment to be connected to the system. The system currently supports the following serial interfaces:

- Cue Director
- Nexus Router
- TSI Image Video 1000

Serial port setup and label associations are made using the Options-Serial I/F screens.

Serial Port Settings Screen

Serial Ports Settings

Port No	Hub ID	Serial Function	User Ref.	Baud Rate	Data Bits	Stop Bits	Parity	Flow Control	Status
1	1	Nexus Labels	NO1	38400	8	1	NONE	OFF	NO1
2	2	Nexus Labels	NO2	38400	8	1	NONE	OFF	NO2
3	3	Nexus Labels	NO3	38400	8	1	NONE	OFF	NO3
4	4	Nexus Labels	NO4	38400	8	1	NONE	OFF	NO4
5	NO HUB	No Function		38400	8	1	EVEN	OFF	
6	NO HUB	No Function		38400	8	1	EVEN	OFF	
7	NO HUB	No Function		38400	8	1	EVEN	OFF	
8	NO HUB	No Function		38400	8	1	EVEN	OFF	

The Serial Port Settings screen is used to tell the system what information it should receive from each serial interface port, by allocating a function to each from the Serial Function column. Only the serial functions which are enabled for the console will be available for selection.

The Hub ID number is also selectable from a drop down list. The ability to change the Hub ID number is useful for the situation where two routers are connected to the console, sending the same information. If one router or serial port fails the serial function can be moved from one hub to another.


The function can be given a name by typing up to six characters in the USER REF column.

For each function there is an indicator which flashes when a valid message is received from the user serial port.

Port No	Hub ID	Serial Function	User Ref.
1	NO HUB	No Function	
2	NO HUB	No Function	
3	NO HUB	No Function	
4	NO HUB	No Function	
5	NO HUB	No Function	

MADI

Front

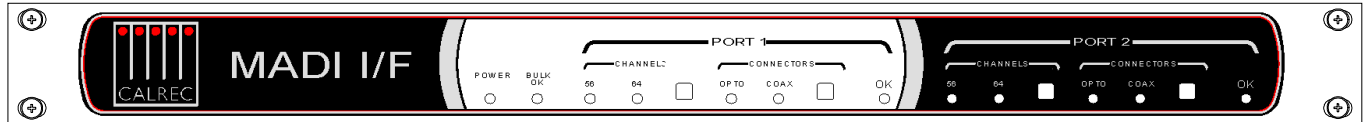

Rear



The rack mounted MADI unit contains two independent AES10 MADI compatible interfaces, and is available as an option. The two ports are interfaced to the console via a Wide Area Bulk (WAB) card, which occupies one of the AES card slots in the Digital I/O Rack.

Each MADI interface can operate in either 56 or 64 channel mode and can transmit over a coaxial AND optical medium and receive over a coaxial OR optical medium. A switch allows receiver selection.

There is no sample rate conversion available on MADI inputs or outputs therefore, all the equipment connected via MADI must be synchronised to the same source as the console.

Hydra Audio Networking




CALREC

Gigabit Interface Unit

The system can have up to 8 Hydra Gigabit Interface units. The Gigabit interface unit provides the console with a connection to the network. It drives a full-duplex connection to the Gigabit switch. The unit runs at Gigabit speed all the time, and may not be connected to switch ports that run at lower speeds. The second Gigabit port is not used.

Dimensions	1U X 482mm (19 inch)
Depth (not including mating connectors)	195mm (7.7 inches) behind the front panel
Depth including mating connectors	265mm (10.4 inches) behind the front panel
Weight	2.6 Kg (5.5125 lb)

Front

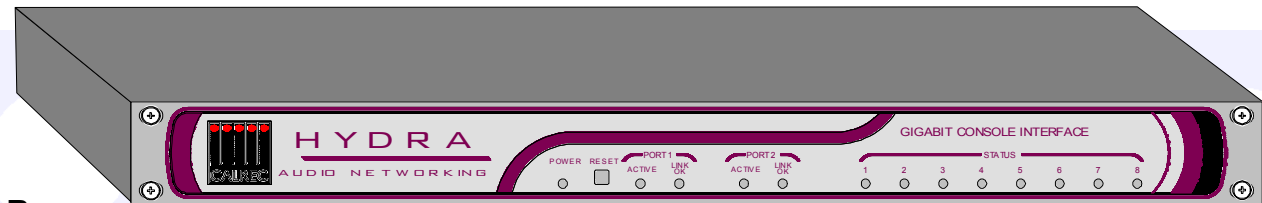

Rear




Wide Area Bulk Card

The console interfaces to the Hydra gigabit interface unit, via a Wide Area Bulk (WAB) card, which occupies one of the AES card slots in the Digital I/O rack. The function of the WAB is to transfer digital audio samples and control data between the backplane in the console and the Gigabit interface unit. 128 inputs and outputs are carried between the WAB card and the Gigabit interface unit via 36 way SCSI-style cabling up to 5 metres (16.5 feet) long.

Gigabit Switch


A commercially available Gigabit switch is used to network consoles and Hydra I/O boxes together. The switch serves to route traffic directly from source to destination. It is capable of continuously receiving data at one port and routing it to another at the maximum data rate, irrespective of what traffic other ports are handling.

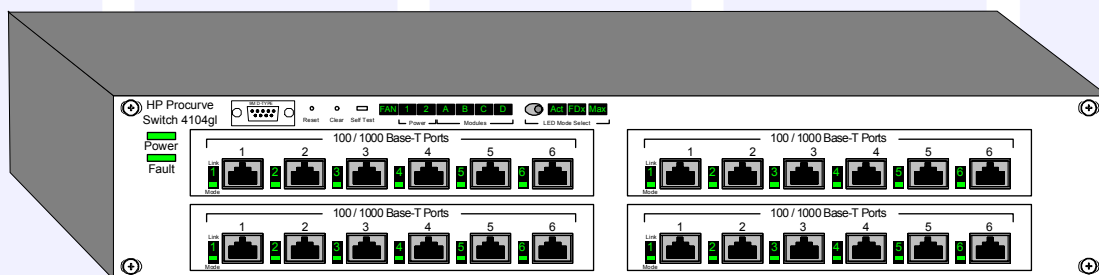

Switches are available in 1U or 2U versions, and can have a combination of copper and fibre ports.

Although the console and racks boot from power on in less than 20 seconds, the switch may take longer. Therefore, networked I/O may take slightly longer to become available on power up, or after a switch reset. It is recommended that the switch is powered using an un-interruptible power supply.

HYDRA I/O RACK

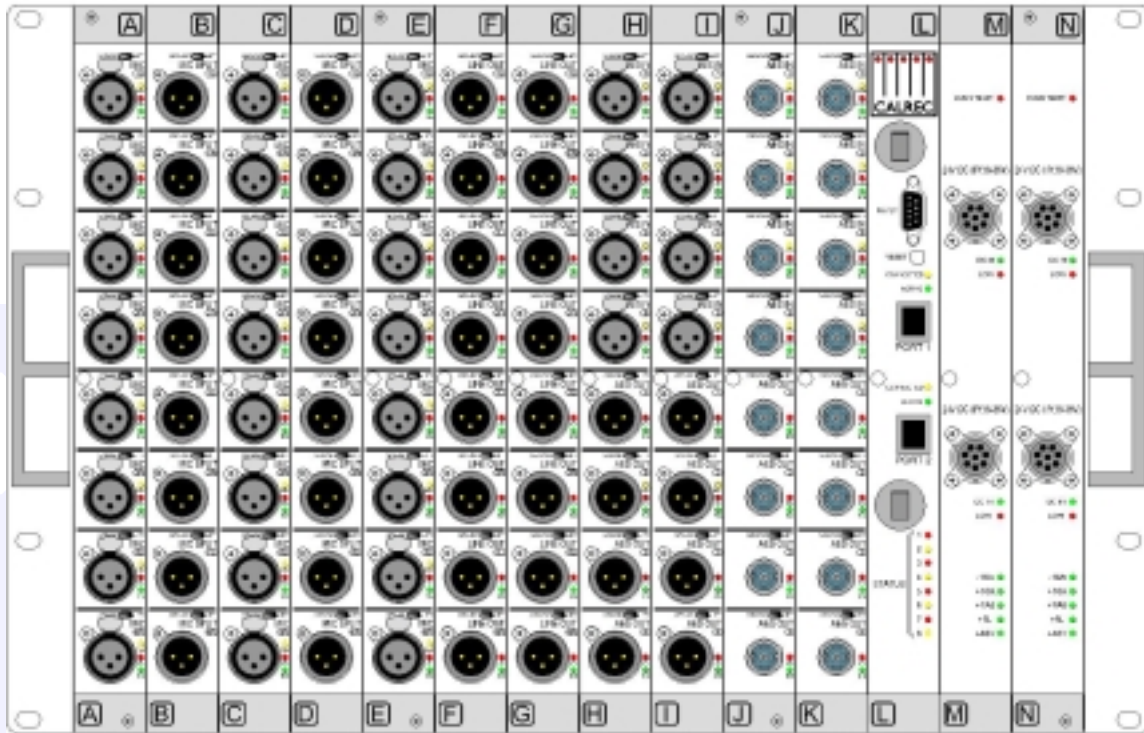

The Hydra I/O Rack offers the ability to carry mic/line input and line output circuits; and digital inputs and outputs via the net-working system to one or more Calrec digital consoles.

Dimensions	7U X 482mm (19 inch)
Depth	265mm (10.4 inches)

Modular Structure

There are 14 modular slots across the width of the unit, labelled A to N. Input, output, processor and DC PSU modules fit into these slots, in accordance with the requirements of the installation. Each modular unit is 1.2 inches (30.48 mm) wide. Input and output modules receive and transmit either analogue or digital audio signals, dependant on type, to the Gigabit interface processor via a 32 bit TDM buss.

All 14 slots may be used by any of the modules in any combination. However, it is advised that the three slots at the right hand side of the unit are best occupied by a processor control unit and provision for two DC PSU modules, the second of which would be the optional hot-spare. If no spare DC PSU is present, either a blank panel must be fitted or the processor unit could move into slot M allowing a twelfth input or output module to be fitted into slot L.

The Hydra I/O Rack is mounted in place using 4 fixing screws on each side angle bracket. No additional support is necessary. All external connections are located on the front face of the Hydra I/O Rack. Space must be allowed in excess of the box dimensions to feed cables to the front interface from any rear access routes.

Module Extraction

In some applications, it is envisaged that modules within the Hydra I/O Rack could occasionally be changed according to changing requirements. To aid this operation, a module extraction hole is located on the module front panels. The module slides into the Hydra I/O Rack on two runners, one each at the top and bottom of the rack. The rear interface connector on the module then locates into the appropriate connector located on the backplane. To aid accurate plugging-up, some guide strips are located between the three interface connectors on the backplane.

Fan Operation and Cooling

To dissipate the heat, 3 low-noise fans are located in the rear of the Hydra I/O Rack. They are controlled from the DC power supply unit. The rack's rear panel has venting holes which must not be obstructed in any way.

If the ambient temperature within the rack is below 50°C (122°F) the fans are inactive.

Between 50°C (122°F) and 55°C (131°F) they are operating at slow speed.

Between 55°C (131°F) & 60°C (140°F) the speed increases to fast.


When the internal ambient temperature reaches 60°C (140°F), the OVER TEMP red LED on the DC power supply unit will light. Over 70°C (158°F) the DC power supply unit is disabled, but the fans will continue to function.

Earthing

The box is fitted with an external earth stud on the rear, for connection to an external earthing system. No AC mains power is contained within the rack. All power connections should be unplugged prior to removing the earth connection.

Optional Rack-Mounted AC Power Supply Unit (For Hydra I/O Units)

A 2U rack-mounted power supply is available to provide the DC power for the Hydra I/O Rack. This holds up to four AC plug-in power supply units. One module could provide power for a fully populated Hydra I/O Rack, with a second providing redundancy. Two other modules could be fitted to power a second Hydra I/O Rack. Any of the plug-in power supply units can be removed from the rack without disturbing the operation of the others.

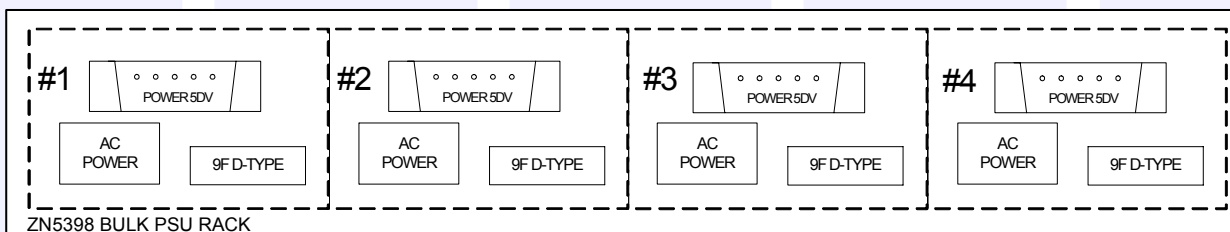


The power system rack should be mounted by means of the side brackets, each of which has two mounting holes. The power system rack should always be mounted in a horizontal position. The rear mounting brackets should be used when no support is provided under the rack assembly. The rack should not be supported by front flanges alone. The rear mounting brackets fix to the rear of the studio equipment bay. Extensions of the rack sides slot into these rear supports, allowing the rack to be removed without removing the support.

The rack is fan cooled with fans mounted in the front of each PSU. To ensure proper cooling, the power system requires a minimum clearance of two inches (50mm) from the fans and air outlets, and also any walls or other surfaces.

3-wire safety AC outlet sockets should be located near the power system (number as required). Each line cord will provide AC power to one of the power supply modules. The AC line cord is the mains disconnect for each module. The AC line cords should have an IEC320 connector to plug into the rear of the power system chassis. Each line cord MUST be suitably rated and FUSED (or have an equivalently rated circuit breaker). The maximum inrush current is 30 Amps. Fuses should be at least 250V ac, T6.3A HRC rated to avoid nuisance "blows". Breakers should be at least 6A, Type C. If in doubt, please consult Calrec's customer support team. Safety grounding is provided via ground connections in the line cord entry receptacles.

NETWORK REDUNDANCY

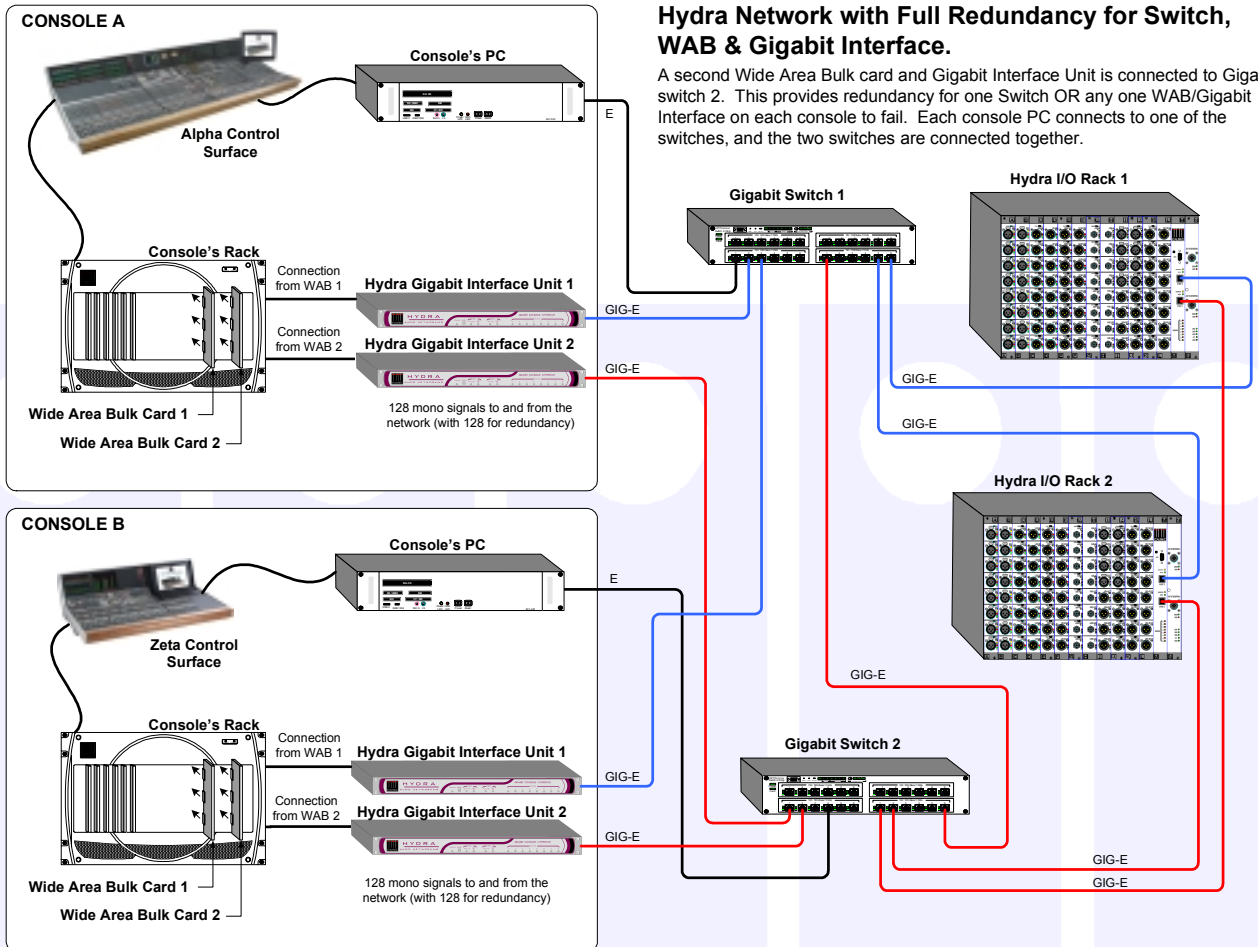

The system can offer redundancy, such that it is protected in case of failure of any connector, cable, or even a Gigabit switch, by adding redundant hardware. An additional Wide Area Bulk card, Gigabit interface unit and Gigabit switch are fitted to the system. The control system tests end to end connectivity, detecting what can be "seen" from each console and works out how to reach each Hydra I/O Rack. In the event of the system detecting any failures, the signals affected by the failure are automatically re-routed using the redundant hardware. This will happen quickly but there will be a brief audio interruption, typically 3-4 seconds.

The system can have up to 8 Hydra Gigabit Interface units. During set up, the user can decide how many of them will be available for redundancy. The bandwidth chosen for redundancy will be reserved for use by the redundancy system, and will not be used during normal operation.

Each console uses just one port on each Hydra I/O Rack, which is used for both audio and control data. The Hydra I/O Rack has a second port, with its own IP address, which allows a second connection to the network to be made. Two consoles on the same network may use different ports on the same Hydra I/O Rack. They can each still have a redundant path to the other port.

In addition, Gigabit switches are available with redundant power supplies.


Wiring and Cabling Information



CALREC

CONSOLE AND RACK WIRING DIAGRAM


REAR VIEW OF ALL UNITS (NOT TO SCALE)

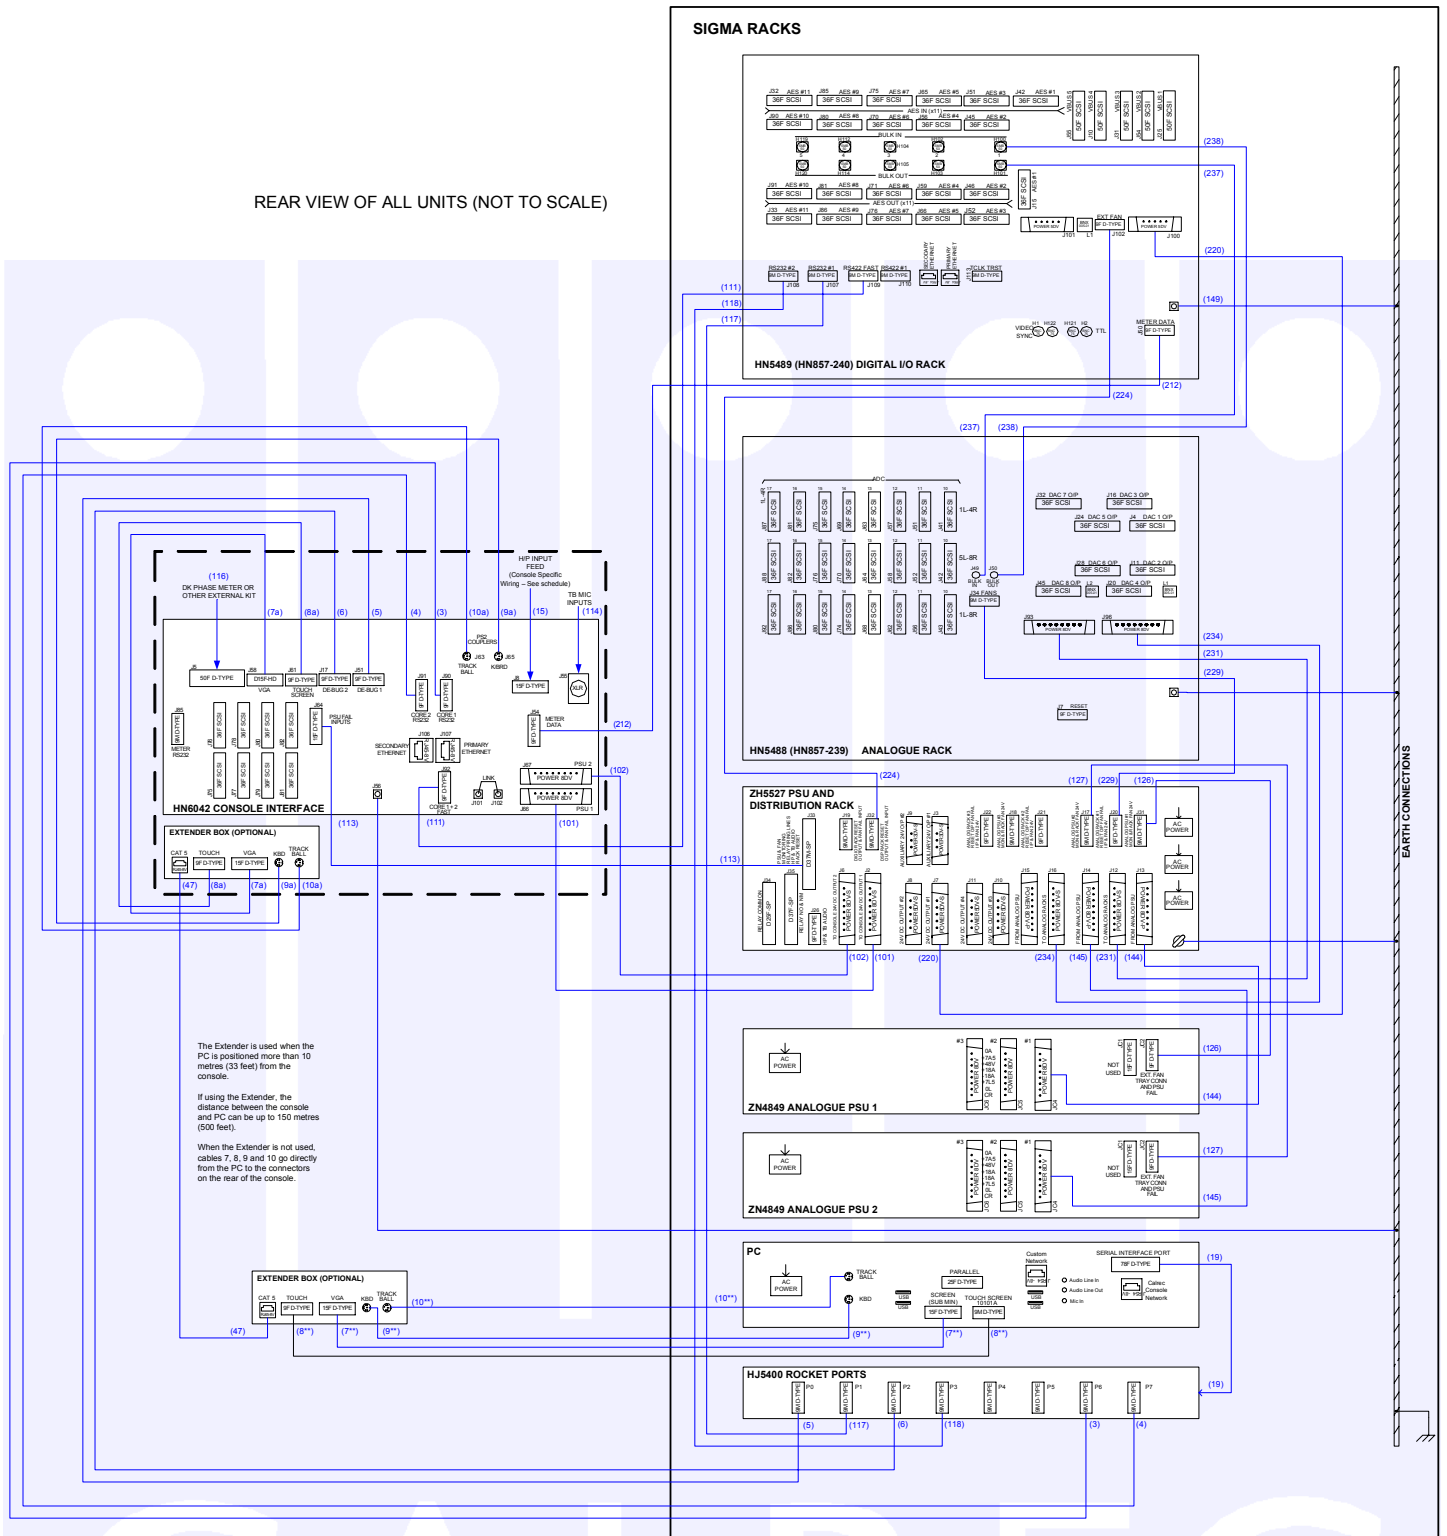

SPECIFICATION FOR SCSI STYLE CABLING


FRONT VIEW OF MATING CONNECTOR

CABLE PAIRS WIRED AS:
1 . 19
2 . 20
3 . 21
4 . 22
5 . 23
6 . 24
7 . 25
8 . 26
9 . 27
10 . 28
11 . 29
12 . 30
13 . 31
14 . 32
15 . 33
16 . 34
17 . 35
18 . 36

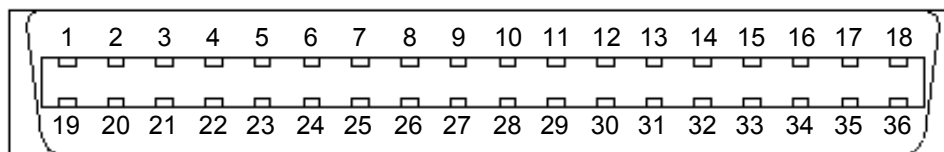

EITHER 3M 10236-55G3VC R/A THROUGH HOLE,
OR 3M 10236-2200VE VERTICAL SMT,
OR EQUIVALENTS

- 18 PAIR 28 AWG CABLE
- UL APPROVED MATERIALS
- FULLY SCREENED

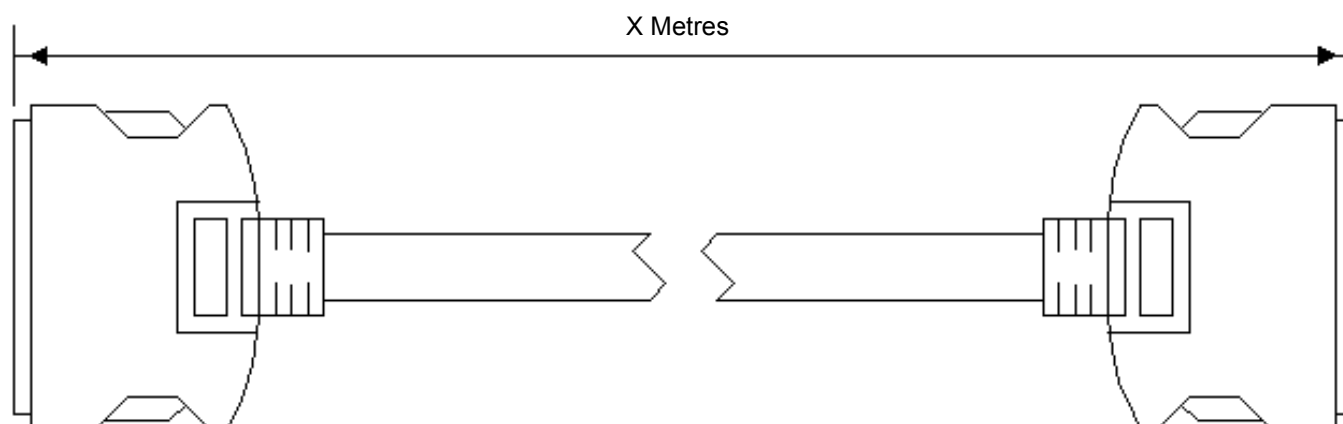

36W MDR PLUG
3M10136-6000EL
OR EQUIVALENT

36W SHIELDED COVER
3M 103336-3210-00
OR EQUIVALENT

STOCK CODES

312-079	1M
312-078	3M
312-077	5M

CATEGORY 5E AND CATEGORY 6 CABLES

The same installation practises generally apply for both category 5e and category 6 cabling. However, as category 6 cables have such a demanding performance criterion, they are less forgiving in the quality of the installation. Cable manufacturers strongly recommend adhering closely to the installation practises outlined for their cable specification.

Some important issues to consider during installation:

Do not exceed the cable manufacturer's specified cable pulling tension and avoid sharp bends in the cable, as it will alter the lay of the pairs within it. Cable manufacturers recommend that cable bend radius should be no less than 4 times the diameter of the cable (post installation). The minimum cable bend radius during installation is 8 times the cable diameter. In practise, this means that where a 25mm radius would be appropriate within a rack, the conduit leading to it would require minimum bends of 50mm radius.

Avoid compressing the cables by over-tightening any cable ties (tie-wraps). This problem is most likely to occur in large bundles of cables, where the cables on the outside of the bundle are exposed to more compression than those on the inside. Over-tightening deforms the twisted pairs within the cable, and can affect their performance. The cable ties should only be tight enough to sufficiently support the cable bundle, and not to deform the outer cable sleeve/jacket. One solution can be to use the hook and loop (Velcro) cable ties. When any number of cables are bundled together in long parallel lengths, the capacitive coupling of pairs in different cables in the bundle with the same twist rates can cause cross-talk interference to increase. The best way to avoid this is to minimise the length of long parallel runs, and to install cables as they lie rather than trying to straighten them out into perfectly aligned bundles.

When pulling cables from the reels, be conscious of the occasional tendency of the cable to kink. If the cable kinks, it should be regarded as damaged, and replaced. Do not try to straighten the kink out of the cable.

At the point of cable termination, remove only the minimum amount of cable sleeve/jacket. This ensures that the twist rate and lay of the core pairs within the cable are maintained for as much of the transmission path as possible. The twist rate of each pair of cable cores should also be maintained to as close as possible to point of termination within the connector.

These are general rules to follow, and if in doubt, always refer to the cable manufacturer's recommendations.


Audio Input and Output Interfaces



CALREC

AES INPUTS AND OUTPUTS

All AES inputs and outputs are provided on 36 way female SCSI-style connectors on the rear of the Digital I/O Rack (16 AES pairs of inputs or outputs per connector).

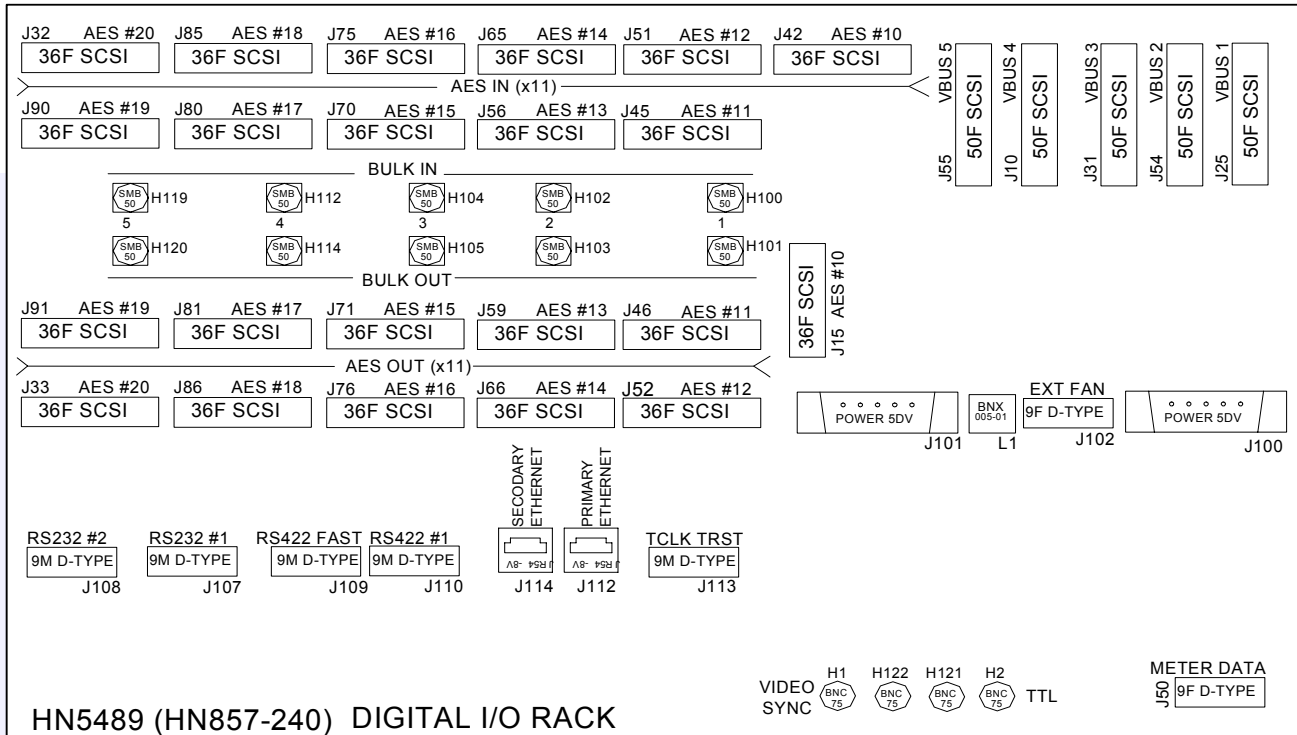

The Digital I/O Rack can house up to 11 AES I/O cards, each of which provides 16 AES inputs and 16 AES outputs. The cards are inserted into slots 10-20 within the rack.

Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. These connectors are used only when an AES I/O card occupies the slot.


Of the 11 AES slots available, up to 5 can be occupied by bulk I/O cards which are used to interface to analogue I/O racks. If a slot is occupied by a bulk I/O card, then the AES I/O connectors belonging to that slot are left unused, and the SMB connectors for bulk I/O are used to connect to the analogue I/O racks.

Up to 8 of the 11 slots can be occupied by wide area bulk I/O (WAB) cards which are used for wide area interfaces such as MAD1 or Hydra. If a slot is occupied by a WAB I/O card, then the AES I/O connectors on the rear of the Digital I/O rack belonging to that slot are used to connect to the wide area interface.

Digital I/O Rack Slot Arrangement					
Slot No	Compatible Card	AES Input Connector	AES Output Connector	Bulk Input Connector	Bulk Output Connector
1-7	DSP (ONLY 2 NEEDED - 1 PLUS HOT SPARE)	-	-	-	-
8-9	RACK PROCESSOR	-	-	-	-
10	AES, BULK OR WAB	J42	J15	H100	H101
11	AES OR WAB	J45	J46	-	-
12	AES, BULK OR WAB	J51	J52	H102	H103
13	AES OR WAB	J58	J59	-	-
14	AES, BULK OR WAB	J65	J66	H104	H105
15	AES OR WAB	J70	J71	-	-
16	AES, BULK OR WAB	J75	J76	H112	H114
17	AES	J80	J81	-	-
18	AES, BULK OR WAB	J85	J86	H119	H120
19	AES	J90	J91	-	-
20	AES	J32	J33	-	-

ANALOGUE INPUTS AND OUTPUTS

All analogue inputs and outputs are provided on 36 way female SCSI-style connectors on the rear of the Analogue I/O Racks.

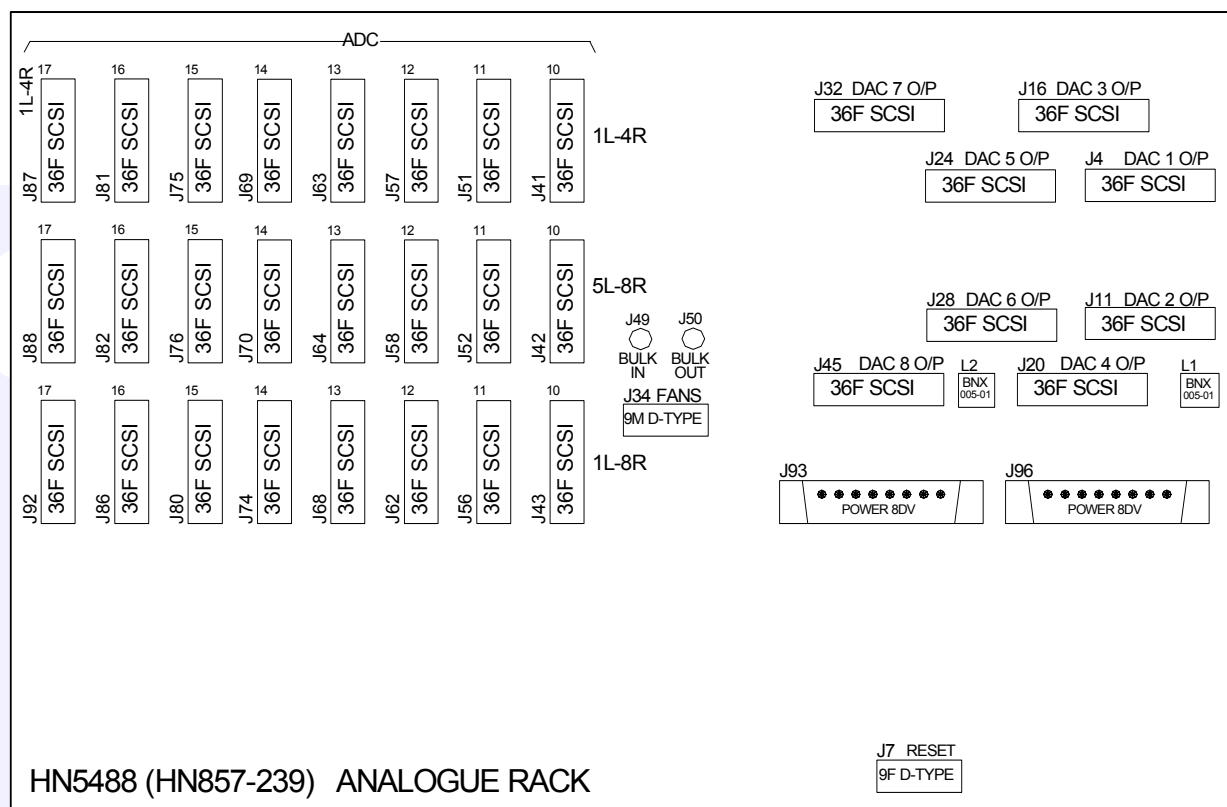

ADC Card Slots and Connectors

Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has 2 dedicated input connectors on the rear of the rack, to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

DAC SLOT	LINE OUTPUTS 1-16 CONNECTOR
1	J4
2	J11
3	J16
4	J20
5	J24
6	J28
7	J32
8	J45

DAC Card Slots and Connectors

Each analogue I/O Rack can house up to 8 line output (DAC) cards, each of which provides 8 stereo outputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has a dedicated output connector on the rear of the rack, which provide connections for the system's analogue outputs. Each of the output connectors provides connections for 8 stereo outputs.


ADC SLOT	MIC/LINE INPUTS 1-8 CONNECTOR	MIC/LINE INPUTS 9-16 CONNECTOR
1	J41	J42
2	J51	J52
3	J57	J58
4	J63	J64
5	J69	J70
6	J75	J76
7	J81	J82
8	J87	J88

Each analogue I/O rack is connected to the Digital I/O Rack via the BULK IN and BULK OUT connectors J49 and J50.


BNC AND XLR INTERFACE CONNECTOR PANELS

Audio inputs and outputs may be connected directly to the console using 36 way SCSI-style connectors. Optionally, break out connector panels and cabling can be provided. Ideally, BNC interface panels should be fitted within 3m (9.8ft) of the backplane they connect to. XLR interface panels should be fitted within 2m (6.5ft) of the backplane they connect to. For digital inputs and outputs, interface panels can be either XLR (16 male or female on a 1U panel) or BNC (32 on a 1U panel).


XLR Input Panel (Front)

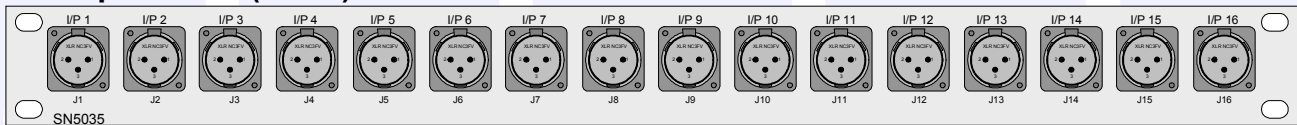


XLR Input Panel (Rear)

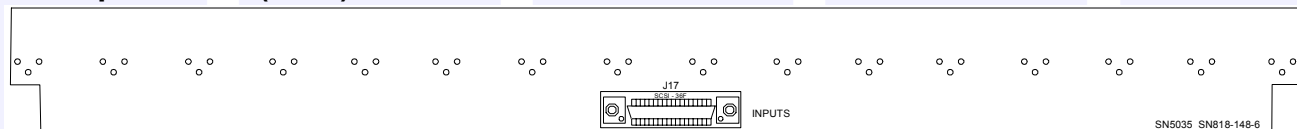


XLR Output Panel (Front)

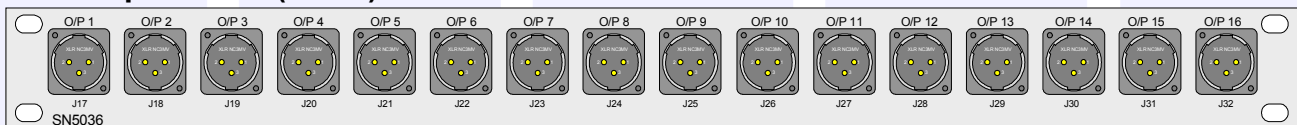

XLR Output Panel (Rear)

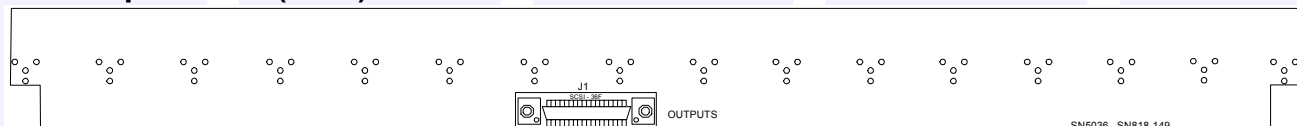


BNC Input Panel (Front)

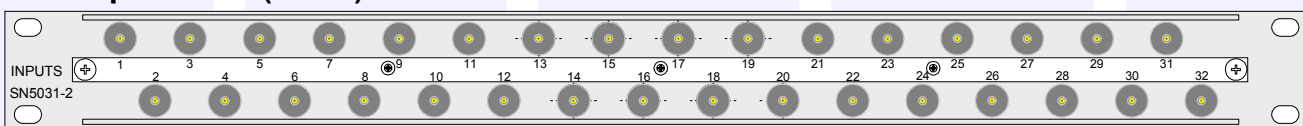

BNC Input Panel (Rear)



BNC Output Panel (Front)

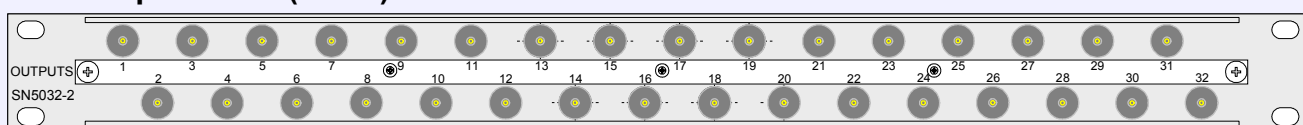

BNC Output Panel (Rear)



EDAC INTERFACE CONNECTOR PANELS

8 or 12 way EDAC connector 2U panels are available to interface analogue I/O in one of the following styles:


Interface	Style 1	Style 2
Mic/Line or Line Inputs	4 pairs per EDAC	6 pairs per EDAC
Line Only Inputs	8 pairs per EDAC	6 pairs per EDAC
Line Outputs	8 pairs per EDAC	6 pairs per EDAC

The choice of style will depend on the installation requirements. Limiting factors to be considered are:


- The number of connections available in the external cabling
- Restricted amount of interface space available within 3m(9.8ft) of the backplane.

The different styles are achieved using interface cards which attach to the rear of the 2U panels to provide different combinations of SCSI-style connectors per EDAC (Except in the case of mic/line inputs where a custom cable is provided).


8X38W EDAC PANEL

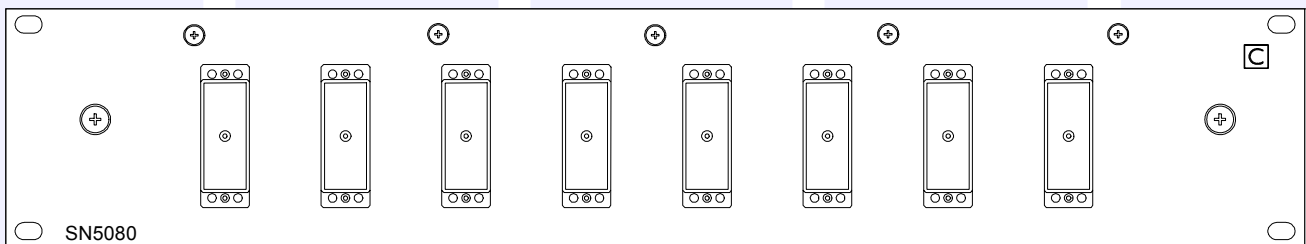

12X38W EDAC PANEL

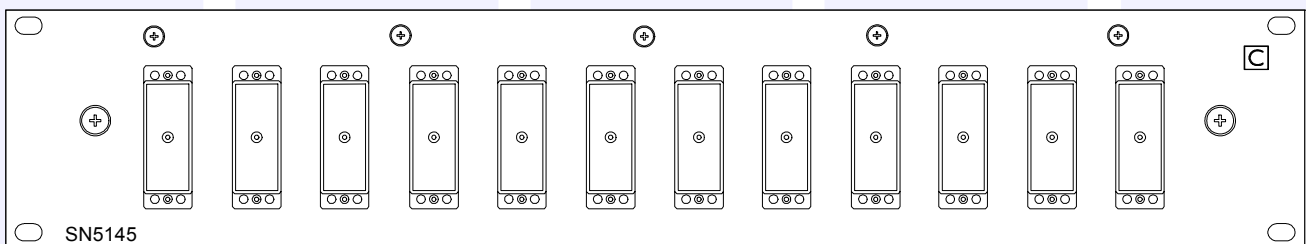


The connectors on these panels are 38 pin, male panel-mounted EDAC connectors (38MP-plug). Therefore, cables interfacing to these panels need 38 pin, female cabling connectors (38FC-receptacle).

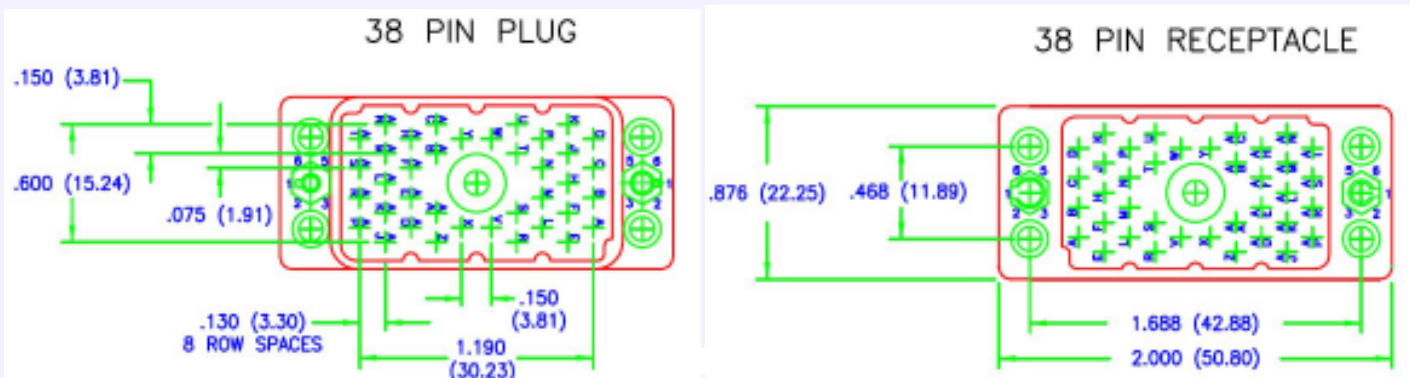

AES INPUTS - BNC INTERFACE


Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES input connectors (shown within dotted border) are connected to BNC interface panels via SCSI-style cabling. For clarity, input connections from just 2 AES cards (occupying slots 10 and 11) to an interface panel are shown here.

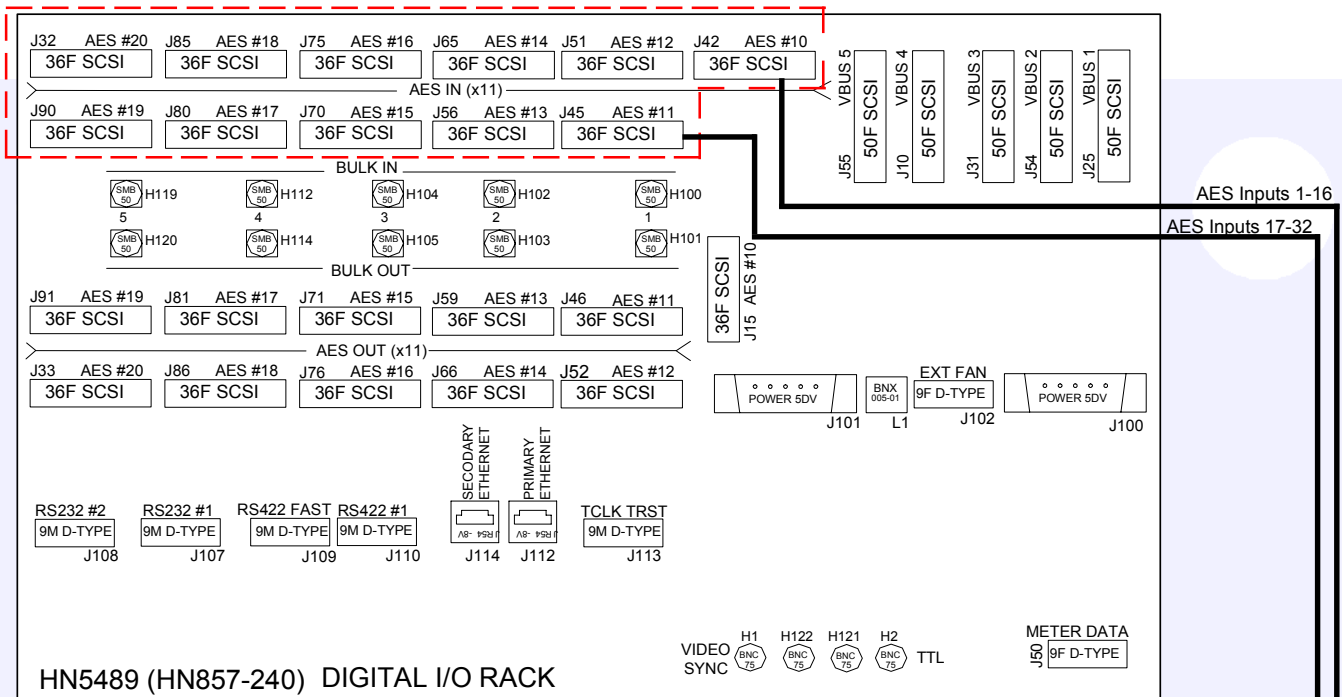

Cable 2 AES Inputs 17-32	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	17
3 . 21	18
4 . 22	19
5 . 23	20
6 . 24	21
7 . 25	22
8 . 26	23
9 . 27	24
10 . 28	25
11 . 29	26
12 . 30	27
13 . 31	28
14 . 32	29
15 . 33	30
16 . 34	31
17 . 35	32
18 . 36	Chassis

Cable 1 AES Inputs 1-16	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	1
3 . 21	2
4 . 22	3
5 . 23	4
6 . 24	5
7 . 25	6
8 . 26	7
9 . 27	8
10 . 28	9
11 . 29	10
12 . 30	11
13 . 31	12
14 . 32	13
15 . 33	14
16 . 34	15
17 . 35	16
18 . 36	Chassis

BNC INPUT I/F PANEL
(REAR)




Ideally, the BNC input interface panels should be located within 3m (9.8ft) of the Digital I/O Rack. Each panel can interface 32 AES inputs. Therefore if all local AES inputs are used, 5 panels would be needed.

Please Note:

AES inputs 1-16 are available on connector J42, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES inputs 1-16 will be available on connector J45, using the AES card in slot 11.

AES OUTPUTS - BNC INTERFACE

Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES output connectors (shown within dotted border) are connected to BNC interface panels via SCSI cabling. For clarity, output connections from just 2 AES cards (occupying slots 10 and 11) to an interface panel are shown here.

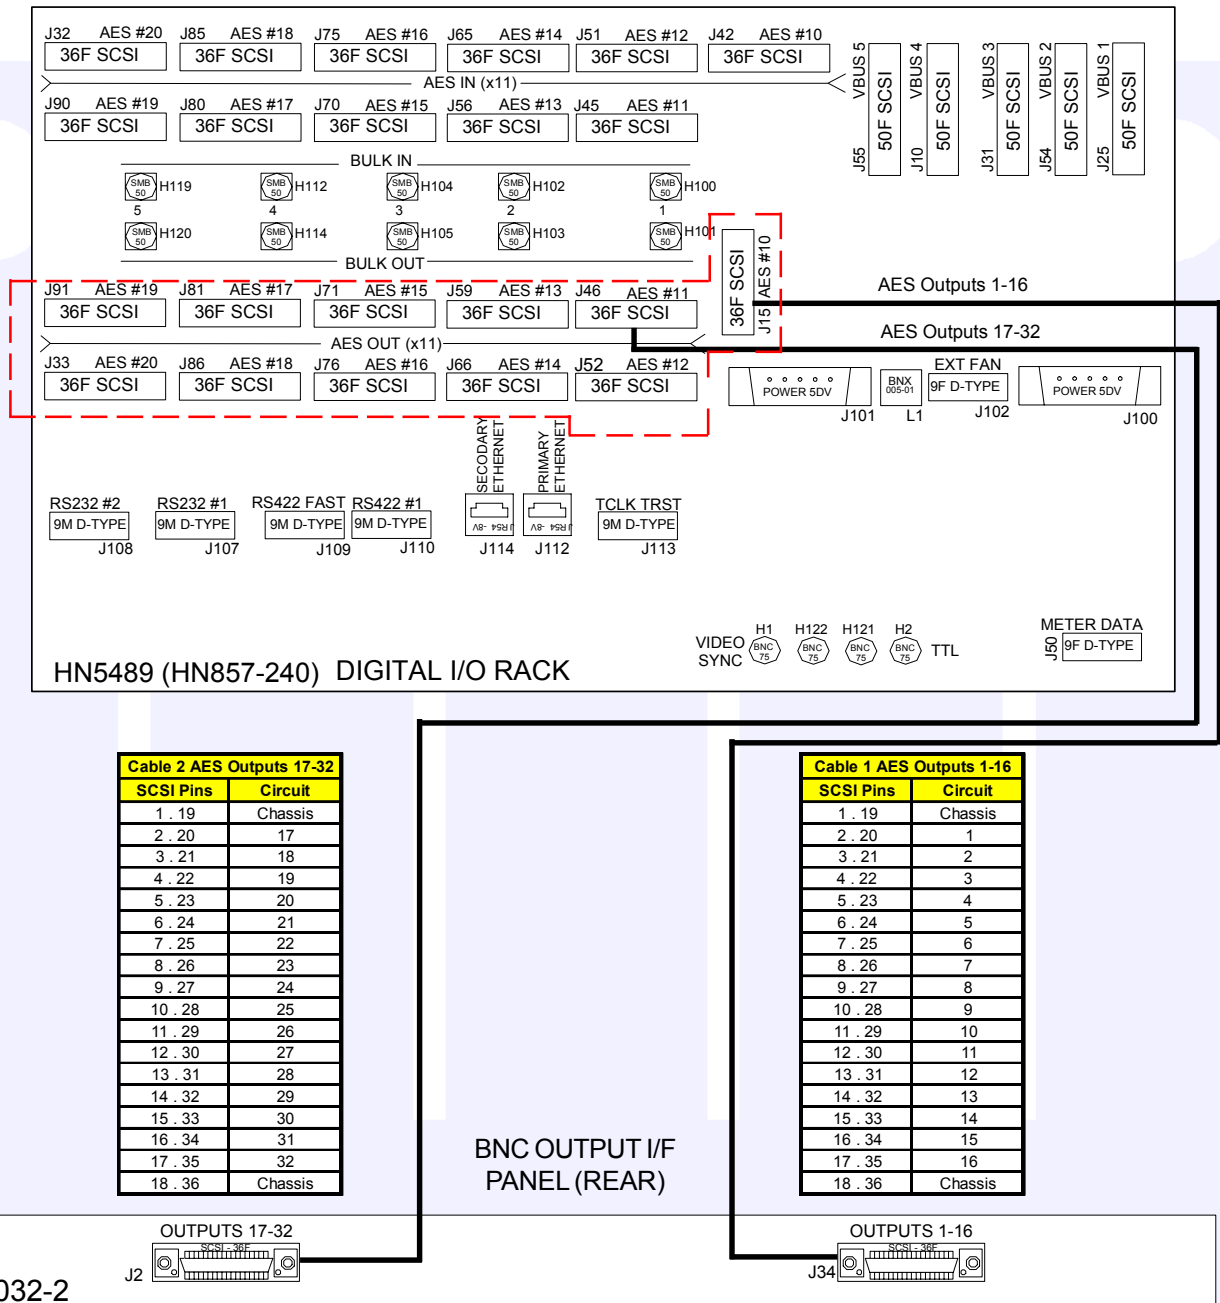


Ideally, the BNC output interface panels should be located within 3m (9.8ft) of the Digital I/O Rack. Each panel can interface 32 AES outputs. Therefore if all local AES outputs are used, 5 panels would be needed.

Please Note:

AES outputs 1-16 are available on connector J15, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES outputs 1-16 will be available on connector J46, using the AES card in slot 11.

AES INPUTS - XLR INTERFACE


Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES input connectors (shown within dotted border) are connected to XLR interface panels via SCSI cabling. For clarity, connection from just one AES card (occupying slot 10) to an interface panel is shown here.

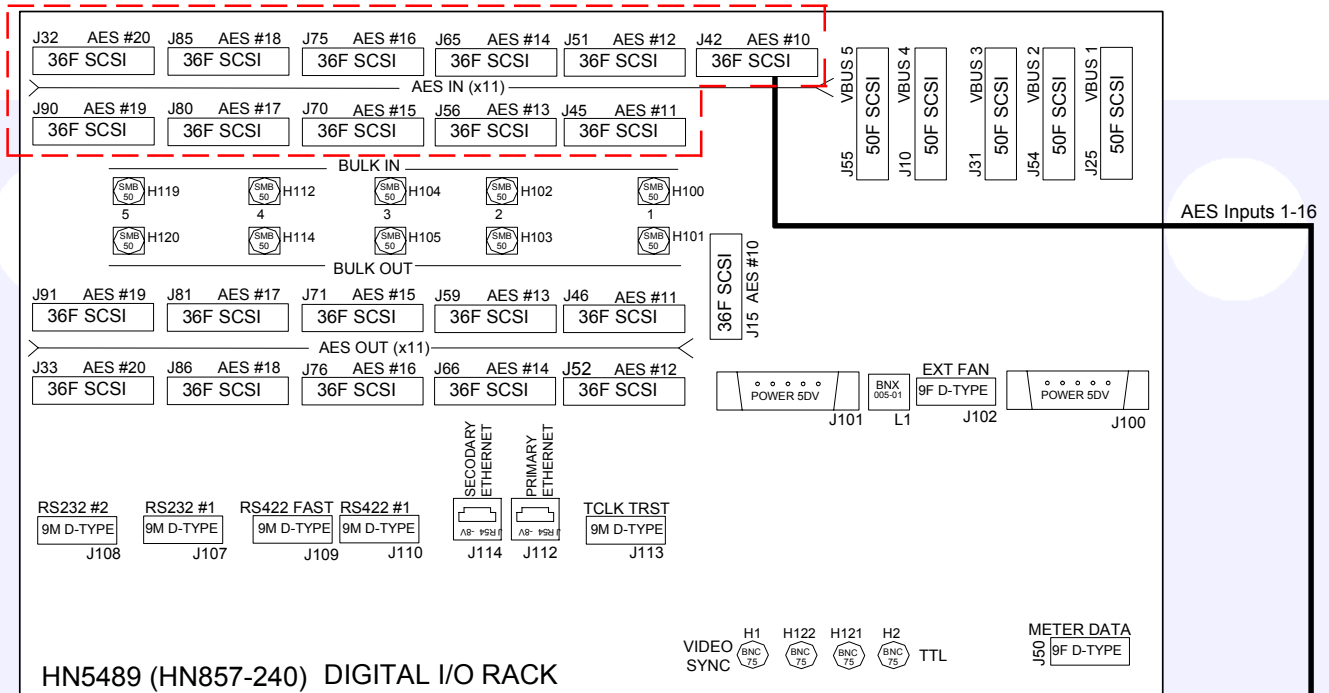

On 3 pin XLR, pin 2 is HOT (phase), pin 3 is COLD (anti-phase) and pin 1 is chassis connections.

Cable 1 AES Inputs 1-16	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	1
3 . 21	2
4 . 22	3
5 . 23	4
6 . 24	5
7 . 25	6
8 . 26	7
9 . 27	8
10 . 28	9
11 . 29	10
12 . 30	11
13 . 31	12
14 . 32	13
15 . 33	14
16 . 34	15
17 . 35	16
18 . 36	Chassis

XLR INPUT I/F PANEL (REAR)

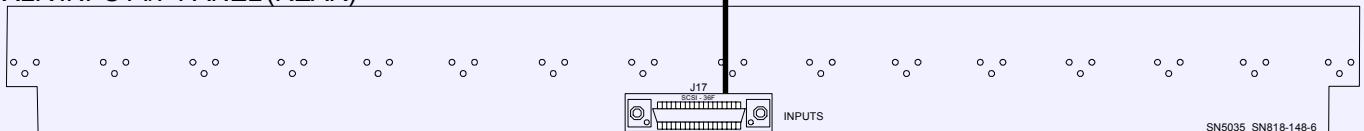


Ideally, the XLR input interface panels should be located within 2m (6.5ft) of the Digital I/O Rack. Each panel can interface 16 AES inputs. Therefore if all AES inputs are used, 10 panels would be needed.

Please Note:

AES inputs 1-16 are available on connector J42, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES inputs 1-16 will be available on connector J45, using the AES card in slot 11. The AES I/O connectors belonging to slots that are occupied by bulk I/O or WAB I/O cards are left unused.

AES OUTPUTS - XLR INTERFACE

Each AES I/O card in the Digital I/O Rack provides 16 AES inputs and 16 AES outputs. Each slot has dedicated input and output connectors on the rear of the rack, to which the system's AES inputs and outputs are connected. The diagram below shows how the AES output connectors (shown within dotted border) are connected to XLR interface panels via SCSI cabling. For clarity, connection from just one AES card (occupying slot 10) to an interface panel is shown here.

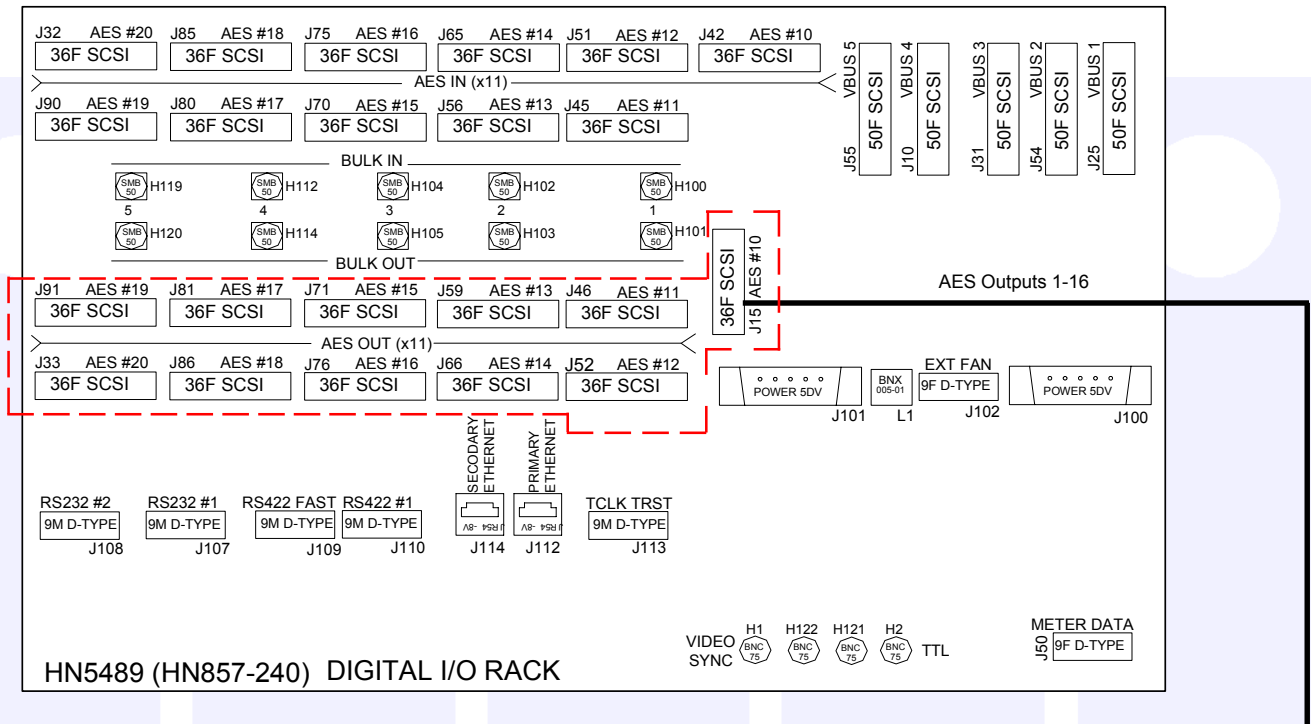


On 3 pin XLR, pin 2 is HOT (phase), pin 3 is COLD (anti-phase) and pin 1 is chassis connections.

Cable 1 AES Outputs 1-16	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	1
3 . 21	2
4 . 22	3
5 . 23	4
6 . 24	5
7 . 25	6
8 . 26	7
9 . 27	8
10 . 28	9
11 . 29	10
12 . 30	11
13 . 31	12
14 . 32	13
15 . 33	14
16 . 34	15
17 . 35	16
18 . 36	Chassis

CABLE 1
AES Outputs 1-16

XLR OUTPUT I/F PANEL (REAR)

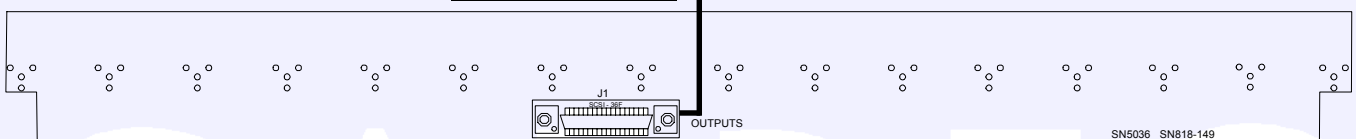

Ideally, the XLR output interface panels should be located within 2m (6.5ft) of the Digital I/O Rack. Each panel can interface 16 AES outputs. Therefore if all AES outputs are used, 10 panels would be needed.



Please Note:

AES outputs 1-16 are available on connector J15, provided that the card in slot 10 is an AES I/O card. If a Bulk I/O or WAB I/O card occupies slot 10, then AES outputs 1-16 will be available on connector J46, using the AES card in slot 11.

ANALOGUE MIC/LINE INPUTS (MIC/LINE OR LINE ADC CARDS) - STYLE 1


Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how these connectors are connected to 8 or 12 way EDAC interface panels via Calrec custom cabling to achieve Style 1 (4 pairs per EDAC connector).

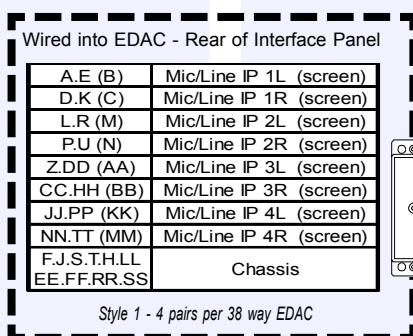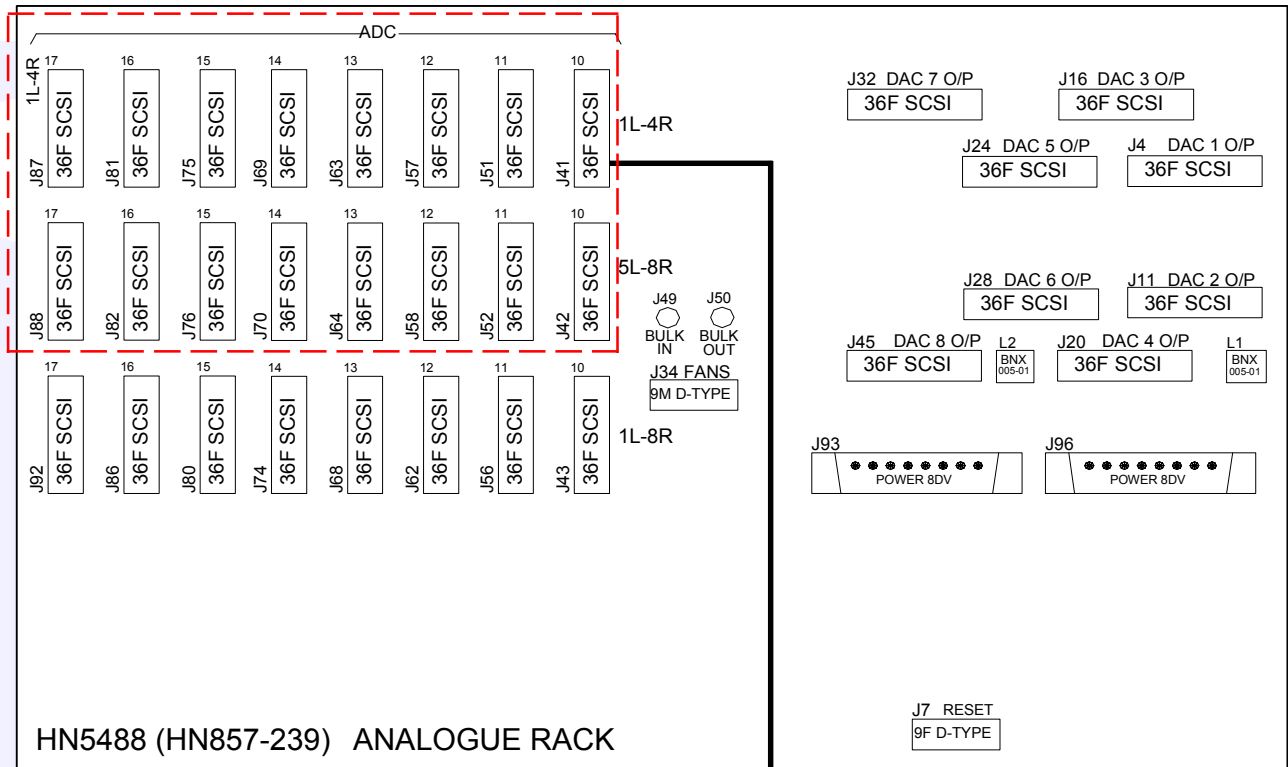

On EDACs, pin 1 (A) is HOT (phase), pin 2 (E) is COLD (anti-phase) and pin 3 (B) is chassis connections.

8 WAY EDAC INTERFACE PANEL

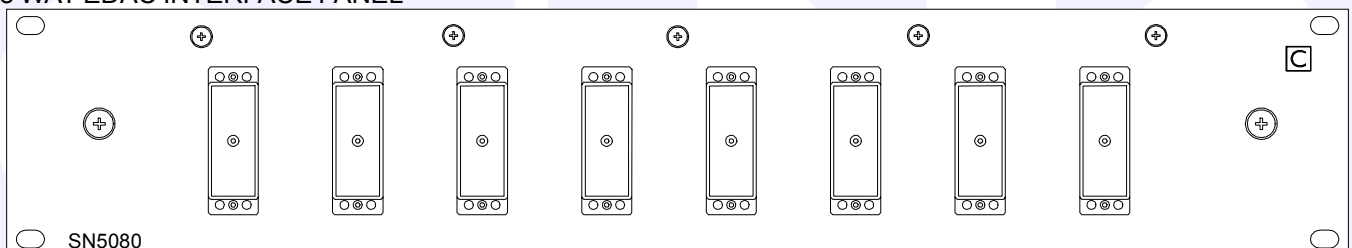

(CABLE 2 IS NOT SHOWN)



Cable 1 Stereo Inputs 1-4		Cable 2 Stereo Inputs 5-8	
SCSI Pins	Circuit	SCSI Pins	Circuit
1 . 19	Chassis	1 . 19	Chassis
2 . 20	1L	2 . 20	5L
3 . 21	Chassis	3 . 21	Chassis
4 . 22	1R	4 . 22	5R
5 . 23	Chassis	5 . 23	Chassis
6 . 24	2L	6 . 24	6L
7 . 25	Chassis	7 . 25	Chassis
8 . 26	2R	8 . 26	6R
9 . 27	Chassis	9 . 27	Chassis
10 . 28	Chassis	10 . 28	Chassis
11 . 29	3L	11 . 29	7L
12 . 30	Chassis	12 . 30	Chassis
13 . 31	3R	13 . 31	7R
14 . 32	Chassis	14 . 32	Chassis
15 . 33	4L	15 . 33	8L
16 . 34	Chassis	16 . 34	Chassis
17 . 35	4R	17 . 35	8R
18 . 36	Chassis	18 . 36	Chassis

2 cables for each ADC card fitted (Just one shown here). There are 4 stereo inputs on each cable

ANALOGUE MIC/LINE INPUTS (MIC/LINE OR LINE ADC CARDS) - STYLE 2


Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how these connectors are connected to 8 or 12 way EDAC interface panels via Calrec custom cabling to achieve Style 2 (6 pairs per EDAC connector).

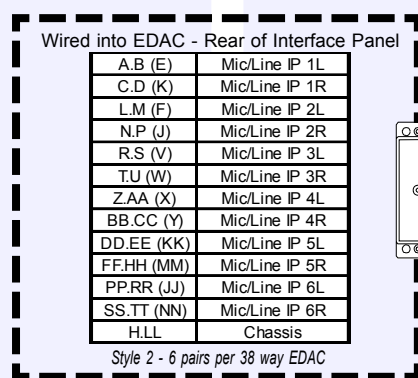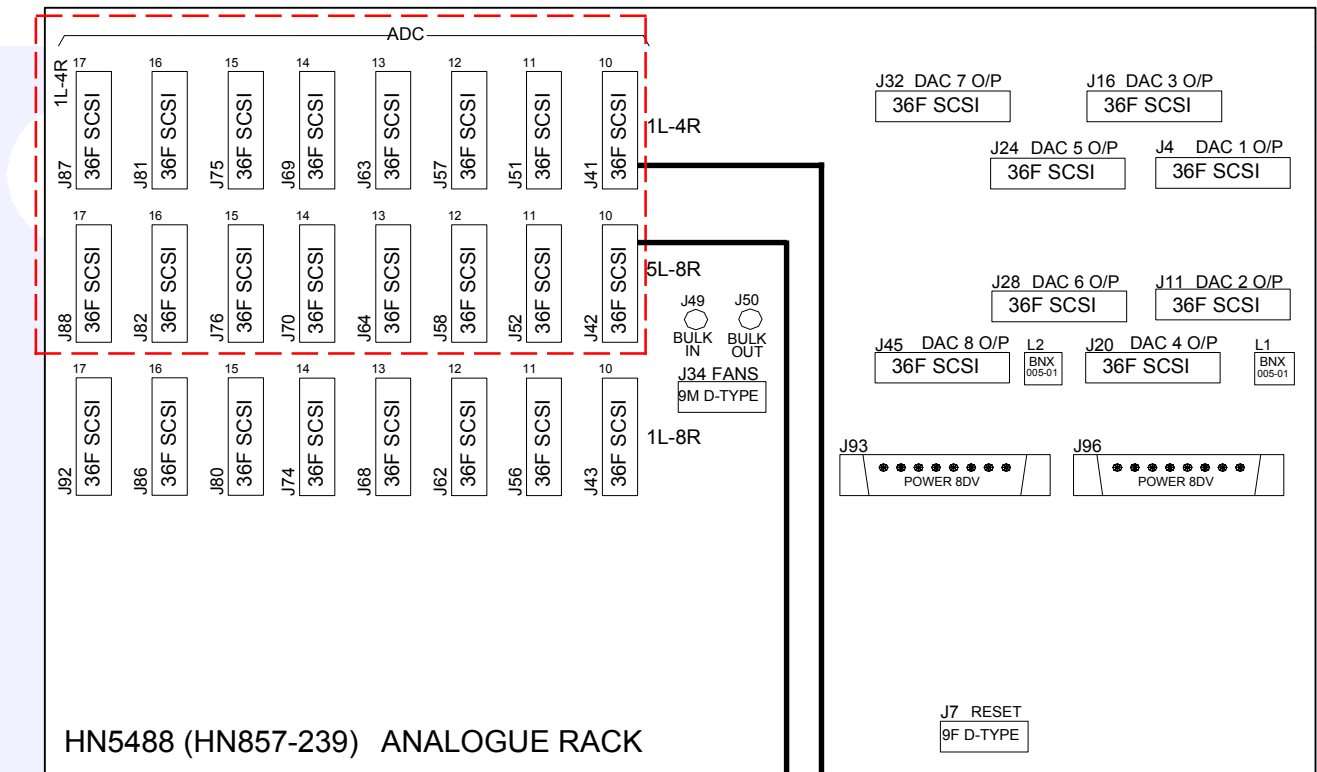

On EDACs, pin 1 (A) is HOT (phase), pin 2 (B) is COLD (anti-phase) and pin 3 (E) is chassis connections.

12 WAY EDAC INTERFACE PANEL

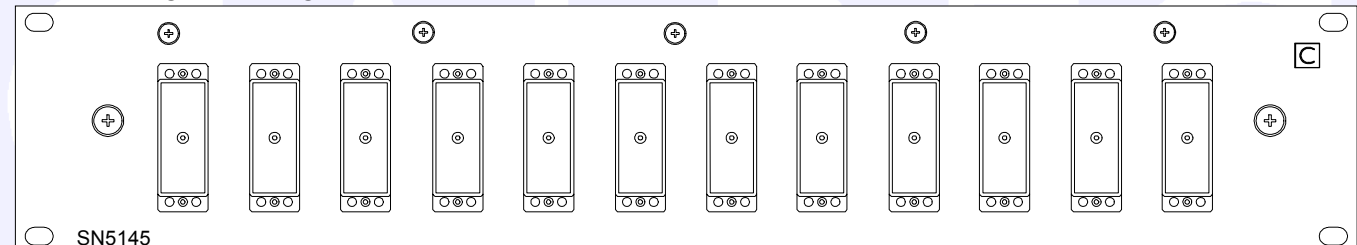

Cable 1 Stereo Inputs 1-4	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	1L
3 . 21	Chassis
4 . 22	1R
5 . 23	Chassis
6 . 24	2L
7 . 25	Chassis
8 . 26	2R
9 . 27	Chassis
10 . 28	Chassis
11 . 29	3L
12 . 30	Chassis
13 . 31	3R
14 . 32	Chassis
15 . 33	4L
16 . 34	Chassis
17 . 35	4R
18 . 36	Chassis

Cable 2 Stereo Inputs 5-8	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	5L
3 . 21	Chassis
4 . 22	5R
5 . 23	Chassis
6 . 24	6L
7 . 25	Chassis
8 . 26	6R
9 . 27	Chassis
10 . 28	Chassis
11 . 29	7L
12 . 30	Chassis
13 . 31	7R
14 . 32	Chassis
15 . 33	8L
16 . 34	Chassis
17 . 35	8R
18 . 36	Chassis



2 Cables for each ADC card fitted - 4 stereo inputs on each cable. Cable 2 also wires into the first EDAC to provide circuits 5 and 6.

Ideally, the EDAC interface panels should be located within 3m (9.8ft) of the Analogue I/O Rack.

ANALOGUE LINE ONLY INPUTS (LINE ADC CARDS ONLY) - STYLE 1

Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how the Line inputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 1 (8 pairs per EDAC connector).

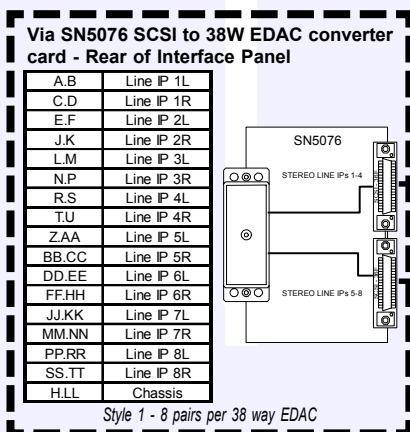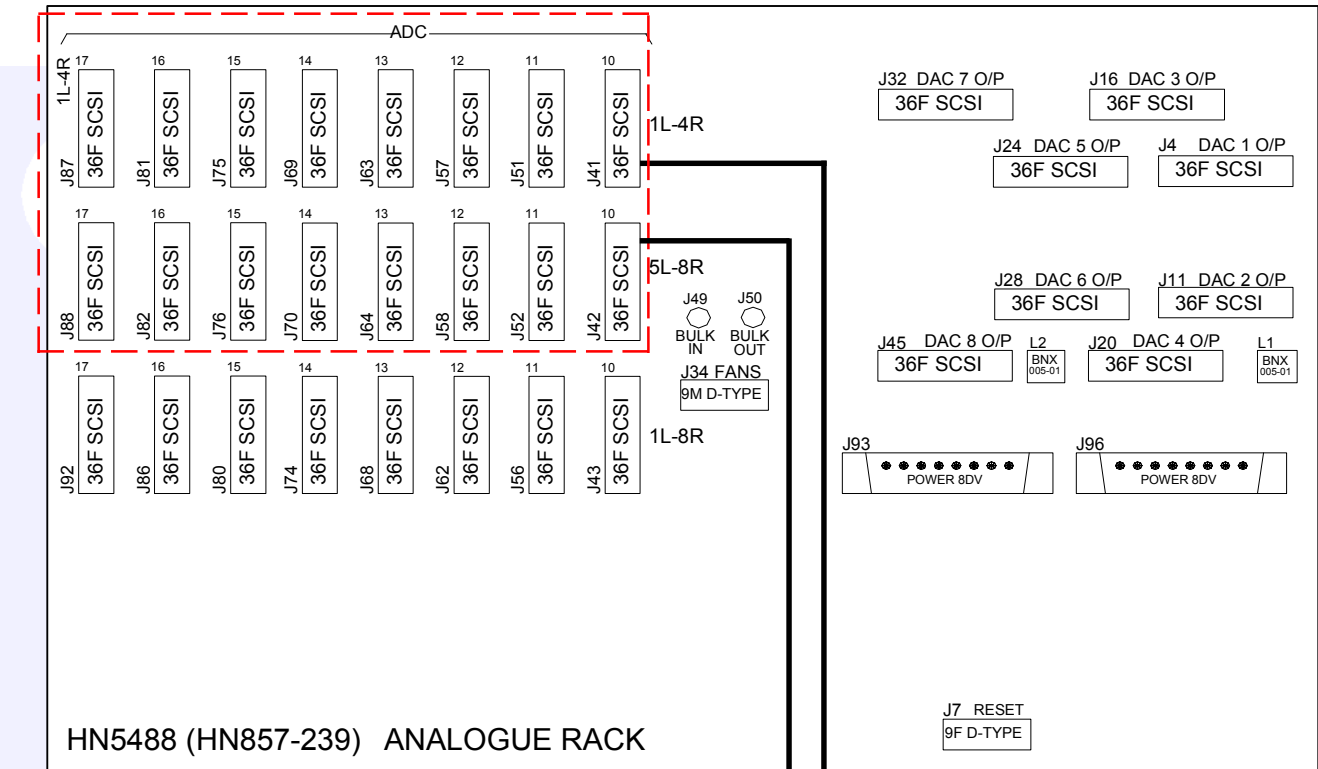


On EDAC, the first pin is HOT (phase), the second pin is COLD (anti-phase) and H.LL are chassis connections.

8 WAY EDAC INTERFACE PANEL

Cable 1 Stereo Inputs 1-4			
SCSI Pins	Circuit		
1 . 19	Chassis		
2 . 20	1L		
3 . 21	Chassis		
4 . 22	1R		
5 . 23	Chassis		
6 . 24	2L		
7 . 25	Chassis		
8 . 26	2R		
9 . 27	Chassis		
10 . 28	Chassis		
11 . 29	3L		
12 . 30	Chassis		
13 . 31	3R		
14 . 32	Chassis		
15 . 33	4L		
16 . 34	Chassis		
17 . 35	4R		
18 . 36	Chassis		

Cable 2 Stereo Inputs 5-8			
SCSI Pins	Circuit		
1 . 19	Chassis		
2 . 20	5L		
3 . 21	Chassis		
4 . 22	5R		
5 . 23	Chassis		
6 . 24	6L		
7 . 25	Chassis		
8 . 26	6R		
9 . 27	Chassis		
10 . 28	Chassis		
11 . 29	7L		
12 . 30	Chassis		
13 . 31	7R		
14 . 32	Chassis		
15 . 33	8L		
16 . 34	Chassis		
17 . 35	8R		
18 . 36	Chassis		



2 Cables for each ADC card fitted - 4 stereo inputs on each cable.

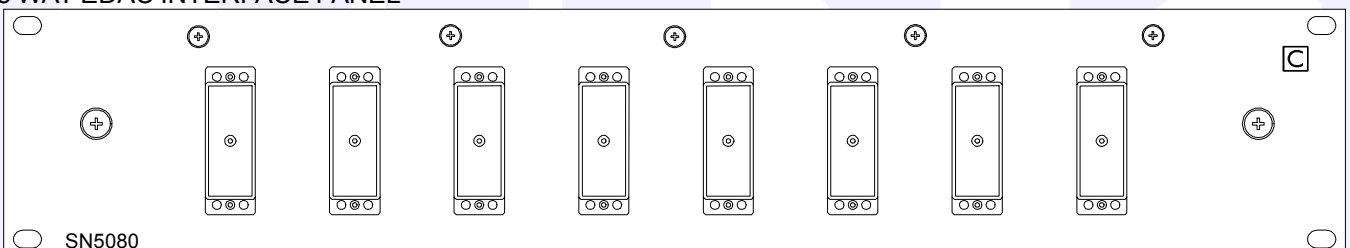

ANALOGUE LINE ONLY INPUTS (LINE ADC CARDS ONLY) - STYLE 2


Each Analogue I/O Rack can house up to 8 mic/line or line input (ADC) cards, each of which provides 8 stereo inputs. The cards are inserted into the slots within the rack, and each slot has 2 dedicated input connectors on the rear of the rack (shown within dotted border), to which the system's analogue inputs are connected. Each of the input connectors provides connections for 4 stereo inputs.

The diagram below shows how the Line inputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 2 (6 pairs per EDAC connector).

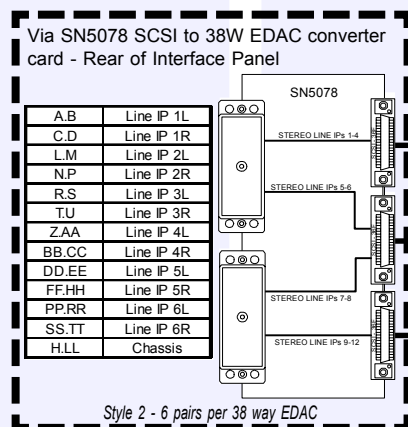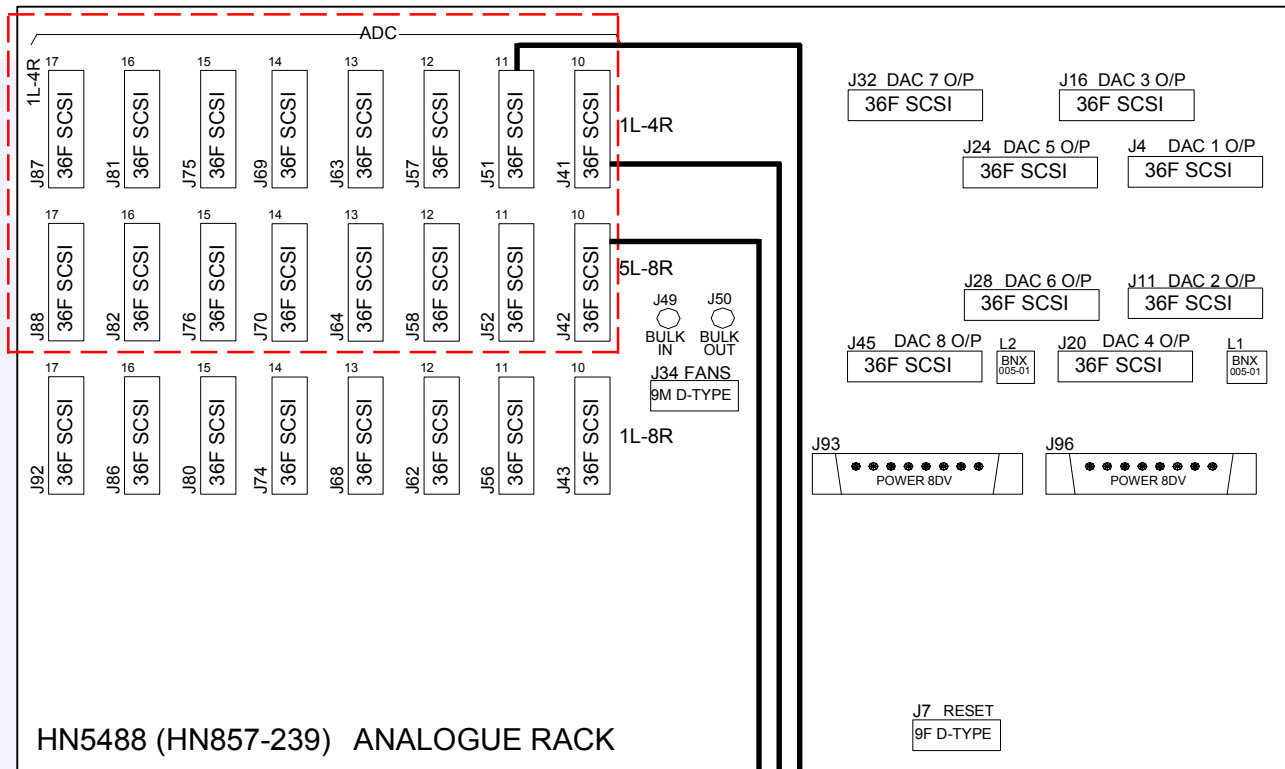

On EDAC, the first pin is HOT (phase), the second pin is COLD (anti-phase) and H.L.L are chassis connections.

8 WAY EDAC INTERFACE PANEL

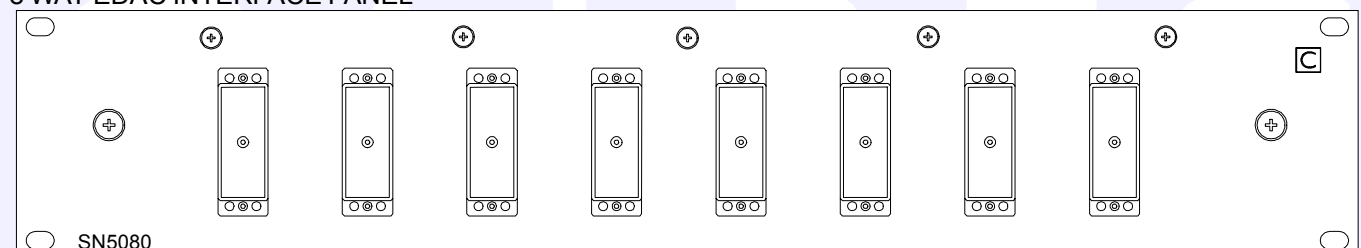

Cable 1 Stereo Inputs 1-4	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	1L
3 . 21	Chassis
4 . 22	1R
5 . 23	Chassis
6 . 24	2L
7 . 25	Chassis
8 . 26	2R
9 . 27	Chassis
10 . 28	Chassis
11 . 29	3L
12 . 30	Chassis
13 . 31	3R
14 . 32	Chassis
15 . 33	4L
16 . 34	Chassis
17 . 35	4R
18 . 36	Chassis

Cable 2 Stereo Inputs 5-8	
SCSI Pins	Circuit
1 . 19	Chassis
2 . 20	5L
3 . 21	Chassis
4 . 22	5R
5 . 23	Chassis
6 . 24	6L
7 . 25	Chassis
8 . 26	6R
9 . 27	Chassis
10 . 28	Chassis
11 . 29	7L
12 . 30	Chassis
13 . 31	7R
14 . 32	Chassis
15 . 33	8L
16 . 34	Chassis
17 . 35	8R
18 . 36	Chassis



2 Cables for each ADC card fitted - 4 stereo inputs on each cable.

Ideally, the EDAC interface panels should be located within 3m (9.8ft) of the Analogue I/O Rack.

ANALOGUE LINE OUTPUTS (DAC CARDS ONLY) - STYLE 1

Each Analogue I/O Rack can house up to 8 line output (DAC) cards, each of which provides 8 stereo outputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has a dedicated output connector on the rear of the rack, which provide connections for the system's analogue outputs. Each of the output connectors provides connections for 8 stereo outputs.

The diagram below shows how the line outputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 1 (8 pairs per EDAC connector).

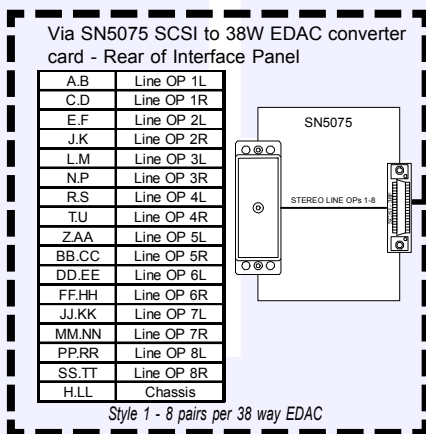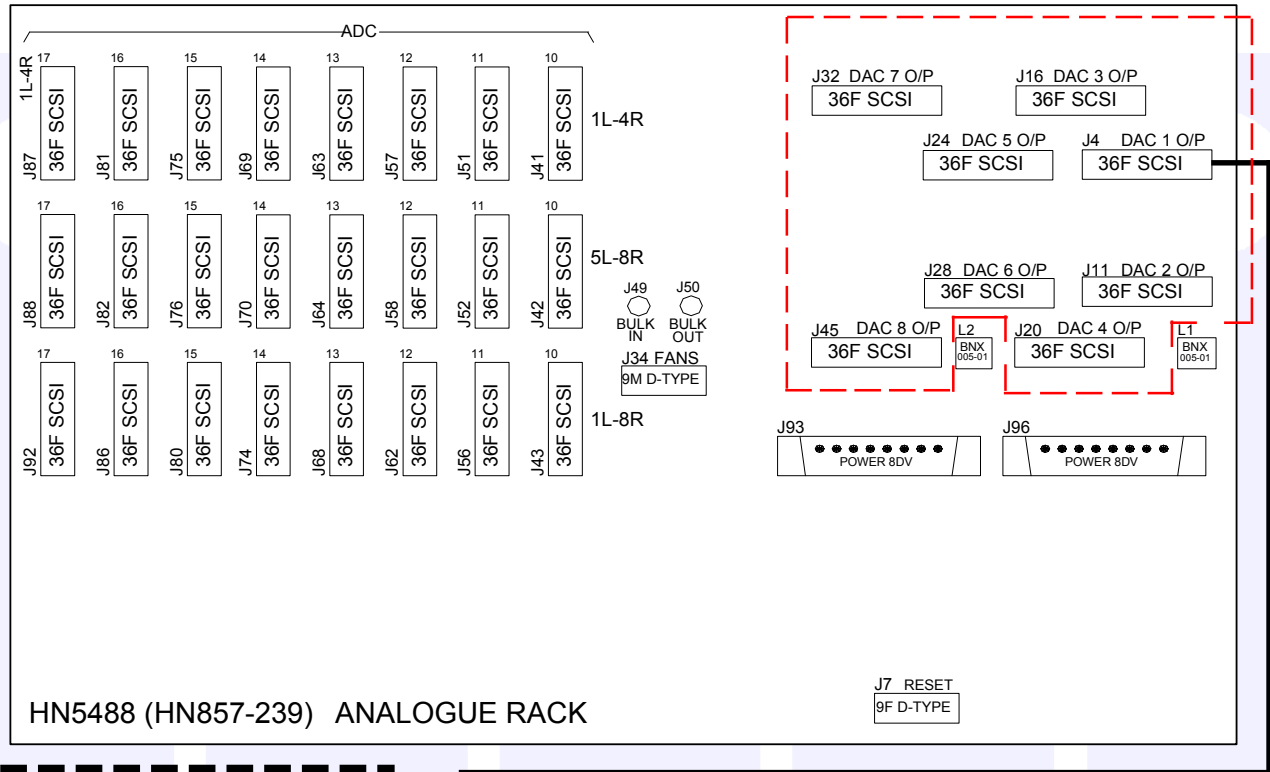


Cable 1 - Stereo Outputs 1-8		
SCSI Pins	Circuit	
1 . 19	Chassis	
2 . 20	1L	
3 . 21	1R	
4 . 22	2L	
5 . 23	2R	
6 . 24	3L	
7 . 25	3R	
8 . 26	4L	
9 . 27	4R	
10 . 28	5L	
11 . 29	5R	
12 . 30	6L	
13 . 31	6R	
14 . 32	7L	
15 . 33	7R	
16 . 34	8L	
17 . 35	8R	
18 . 36	Chassis	

1 Cable for each DAC card fitted - 8 stereo outputs on each cable.

On EDACs, the first pin is HOT (phase), the second pin is COLD (anti-phase) and H.L.L are chassis connections.



8 WAY EDAC INTERFACE PANEL

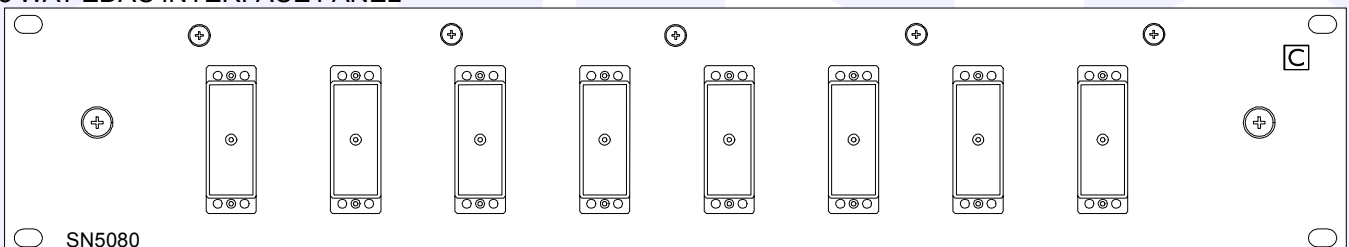

ANALOGUE LINE OUTPUTS (DAC CARDS ONLY) - STYLE 2

Each Analogue I/O Rack can house up to 8 line output (DAC) cards, each of which provides 8 stereo outputs. The cards are inserted into the slots within the rack, these are numbered 1-8. Each slot has a dedicated output connector on the rear of the rack, which provide connections for the system's analogue outputs. Each of the output connectors provides connections for 8 stereo outputs.

The diagram below shows how the line outputs can be connected to 8 way EDAC interface panels via SCSI cabling to achieve Style 2 (6 pairs per EDAC).

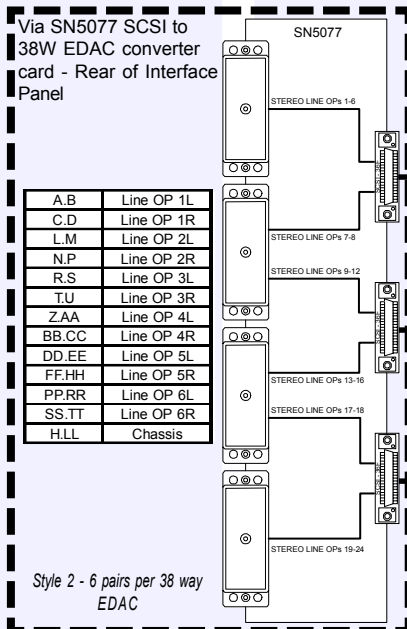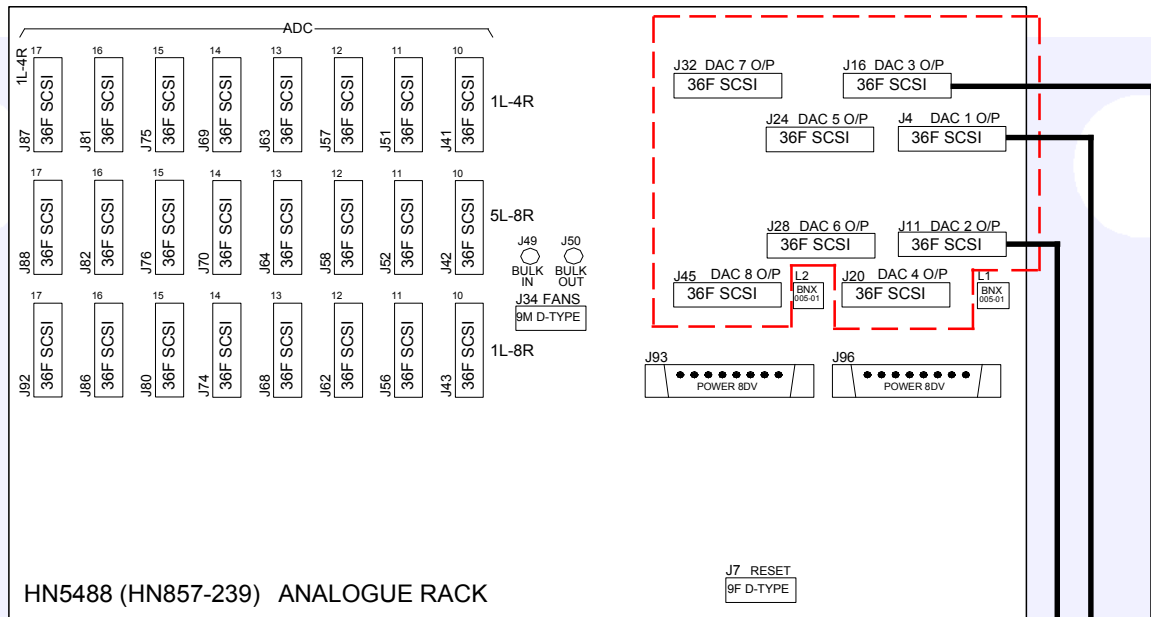

1 Cable for each DAC card fitted - 8 stereo outputs on each cable.


Cable 1 - Stereo Outputs 1-8		
SCSI Pins	Circuit	
1 . 19	Chassis	
2 . 20	1L	
3 . 21	1R	
4 . 22	2L	
5 . 23	2R	
6 . 24	3L	
7 . 25	3R	
8 . 26	4L	
9 . 27	4R	
10 . 28	5L	
11 . 29	5R	
12 . 30	6L	
13 . 31	6R	
14 . 32	7L	
15 . 33	7R	
16 . 34	8L	
17 . 35	8R	
18 . 36	Chassis	

Cable 2 - Stereo Outputs 9-16		
SCSI Pins	Circuit	
1 . 19	Chassis	
2 . 20	9L	
3 . 21	9R	
4 . 22	10L	
5 . 23	10R	
6 . 24	11L	
7 . 25	11R	
8 . 26	12L	
9 . 27	12R	
10 . 28	13L	
11 . 29	13R	
12 . 30	14L	
13 . 31	14R	
14 . 32	15L	
15 . 33	15R	
16 . 34	16L	
17 . 35	16R	
18 . 36	Chassis	


Cable 3 - Stereo Outputs 17-24		
SCSI Pins	Circuit	
1 . 19	Chassis	
2 . 20	17L	
3 . 21	17R	
4 . 22	18L	
5 . 23	18R	
6 . 24	19L	
7 . 25	19R	
8 . 26	20L	
9 . 27	20R	
10 . 28	21L	
11 . 29	21R	
12 . 30	22L	
13 . 31	22R	
14 . 32	23L	
15 . 33	23R	
16 . 34	24L	
17 . 35	24R	
18 . 36	Chassis	

On EDACs, the first pin is HOT (phase), the second pin is COLD (anti-phase) and H.LL are chassis connections.

8 WAY EDAC INTERFACE PANEL

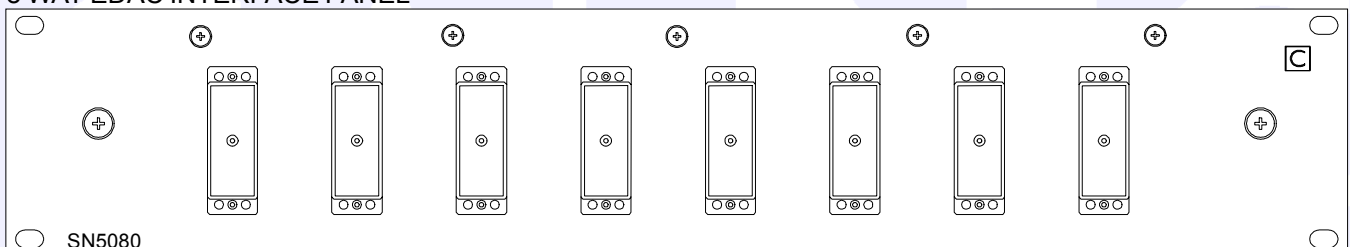

Ideally, the EDAC interface panels should be located within 3m (9.8ft) of the Analogue I/O Rack.

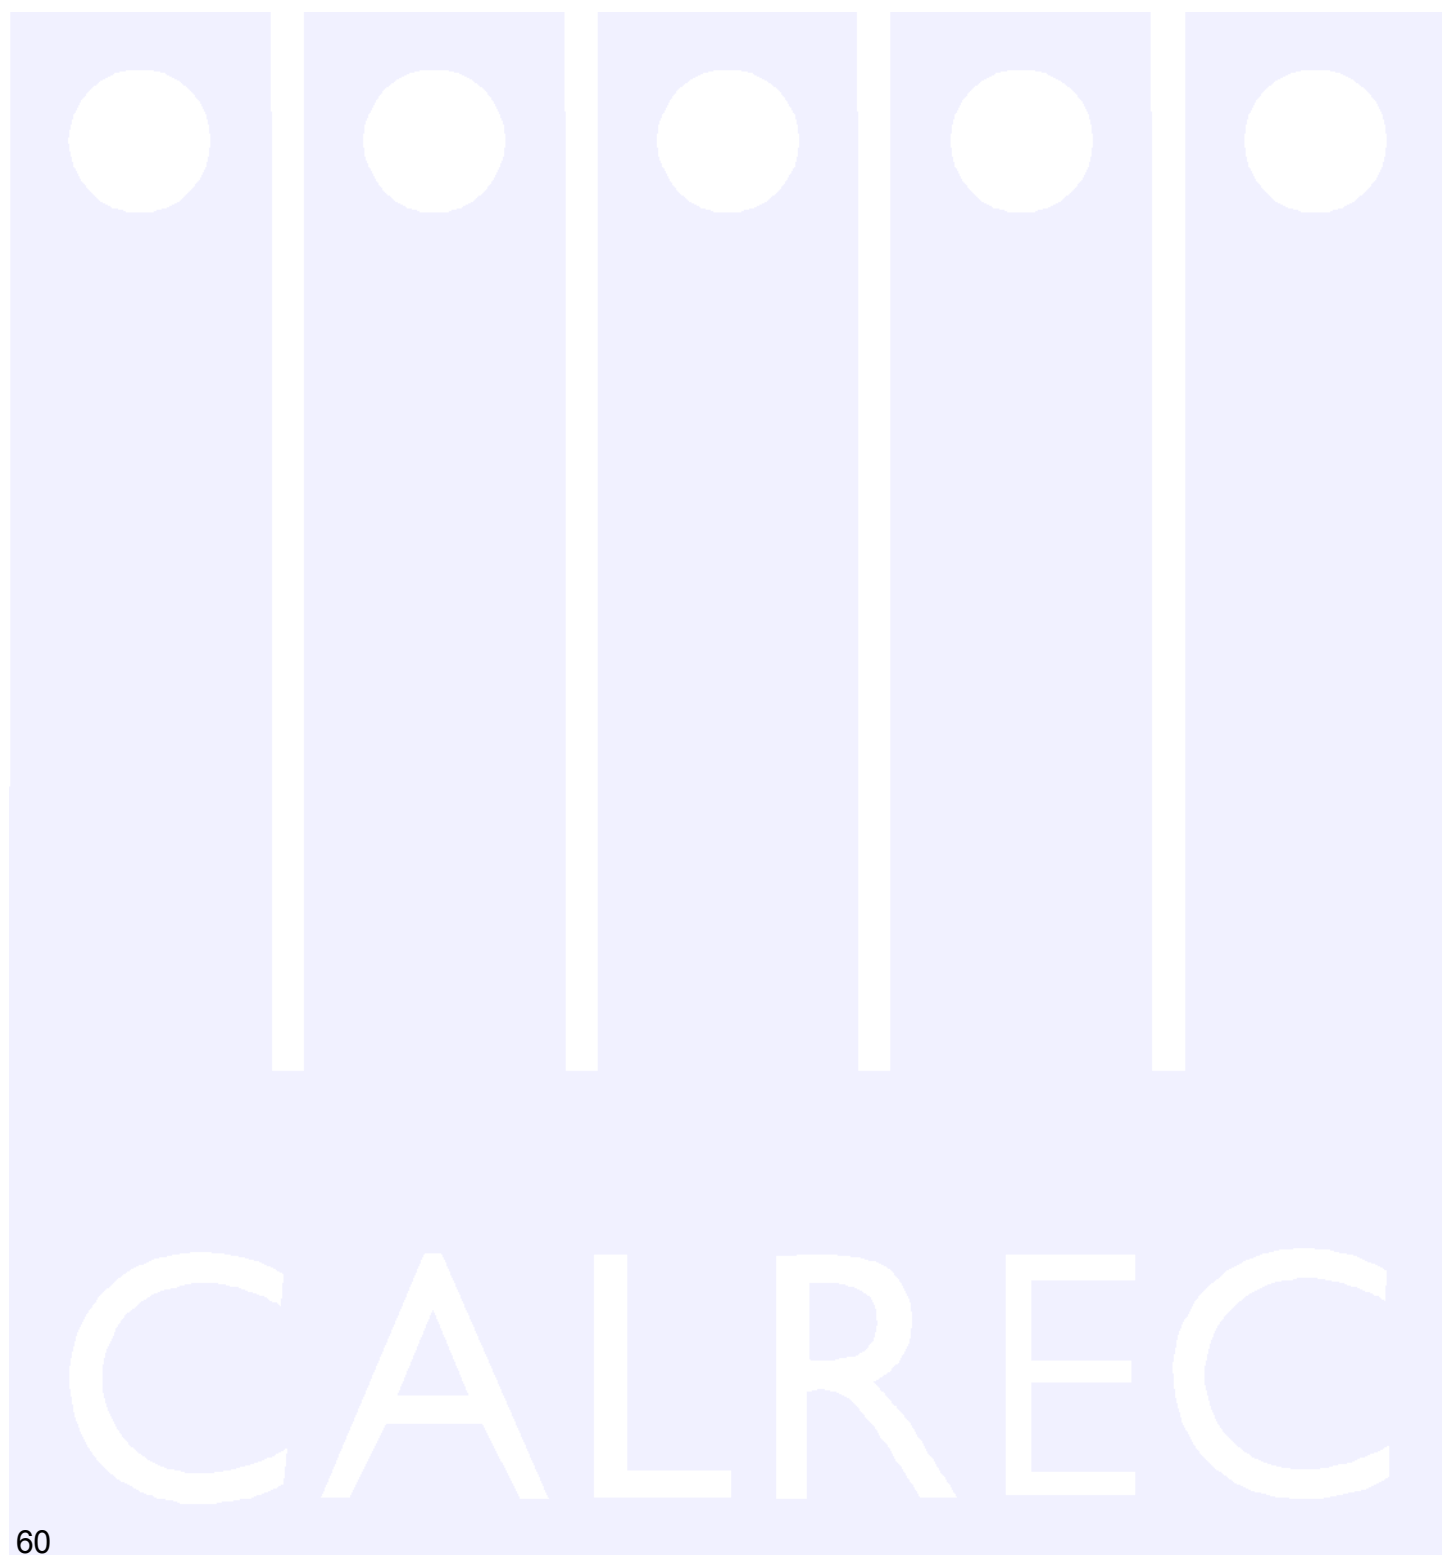

Input and Output Port Labelling

CALREC

ABOUT LABELS

PORT LABELS AND LISTS

When the console is installed, all the input and output ports on the system should be labelled to match the studio wiring. Some rules are imposed on this labelling:

- The I/O should be labelled in pairs.
- The label must be no more than six characters (to fit on the console's displays).
- The same label cannot be used more than once (but an input can have the same label as an output) - to avoid confusion.

I/O is labelled in pairs to make it easier to use with any type of signal; mono, stereo or surround. Also, digital I/O is wired in pairs and it makes sense to deal with all the I/O in the same way.

The input port label is used as the default name for the channel input and will be shown on the display above the fader.

The system automatically adds a left (^L) and right (^R) suffix to the label to distinguish the two halves of the pair, or an ^L_R suffix when the pair is used together.

The pairs can be used either for two mono signals, or a stereo signal, or parts of a surround signal. This includes the digital ports if the external circuit allows them to be used for two mono signals.

One exception to these rules is that I/O which is dedicated, externally, to mono signals only (telephone lines, mono reverbs, mono distribution feeds, etc), can be specified as being mono in which case the two halves of the pair have separate labels and the ^L & ^R suffixes are not applied. Note that I/O labelled in this way cannot be connected in pairs to stereo paths.

A stereo channel input can only be connected to the L - R of a pair of ports, or to one mono port in which case the mono signal will be fed to both L & R of the channel.

A stereo channel direct output can only be connected to the L - R of a pair of ports.

A mono channel input or direct output can be connected to any of: The L or R of a pair of ports, or any mono port.

Mono ports should therefore be considered as unusual. If there is any doubt as to the use of ports, they should be treated as a pair.

Suitable Labels

Generally, I/O ports should be labelled with the name which appears at the other end of the cable, which is connected to the port.

Ideally, the port will be connected directly to a device (Mic splitter box, Video Tape Recorder, Echo unit, Transmission Control Suite, etc).

Alternatively, some I/O may be wired to a patch. This will be done, for example, to allow for hired devices to be connected and may also be done to aid maintenance and operator familiarity with analogue consoles.

When planning the use and labelling of I/O, you should also bear in mind that the console includes an internal electronic input patch and output patch. These allow ports to be used for different purposes on different shows and also, the patch connections are stored with the snap-shot memories.

Port Lists

In addition to labelling, each port may be allocated to one of a number of lists during the Set up Application. This allows inputs and outputs which are wired for similar purposes to be grouped together for selection. There can be up to 12 lists for input ports, and up to 8 lists for output ports. Each list can contain a mixture of normal inputs or outputs (labelled in pairs) and inputs or outputs dedicated to mono signals. Each list is given a six character label, and automatically sorted alphabetically/numerically.

The lists can be sorted into the order in which they appear on the selection screens. The lists will appear in the same order on the optional I/O Matrix panel (if fitted) and I/O screens. It is possible to restrict the lists which appear on the I/O Matrix panel using the Options - Misc screen. This reduces the number of times the pot needs to be pushed, to go through all the available lists. All lists are always available on the I/O screens.

INPUT/OUTPUT LABELLING SHEETS

Local AES Inputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Inputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Inputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	
9L + 9R							L R	
10L + 10R							L R	
11L + 11R							L R	
12L + 12R							L R	
13L + 13R							L R	
14L + 14R							L R	
15L + 15R							L R	
16L + 16R							L R	

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	
9L + 9R							L R	
10L + 10R							L R	
11L + 11R							L R	
12L + 12R							L R	
13L + 13R							L R	
14L + 14R							L R	
15L + 15R							L R	
16L + 16R							L R	

INPUT/OUTPUT LABELLING SHEETS

Local AES Inputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Inputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Outputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Outputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Outputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Outputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Local AES Outputs - Digital I/O Rack

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

Card Slot No..... SCSI Connector No.....

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R						L R		
2L + 2R						L R		
3L + 3R						L R		
4L + 4R						L R		
5L + 5R						L R		
6L + 6R						L R		
7L + 7R						L R		
8L + 8R						L R		
9L + 9R						L R		
10L + 10R						L R		
11L + 11R						L R		
12L + 12R						L R		
13L + 13R						L R		
14L + 14R						L R		
15L + 15R						L R		
16L + 16R						L R		

INPUT/OUTPUT LABELLING SHEETS

Analogue Inputs - Analogue I/O Rack 1

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Inputs - Analogue I/O Rack 1

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Inputs - Analogue I/O Rack 2 (if fitted)

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Inputs - Analogue I/O Rack 2 (if fitted)

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

Card Slot No..... SCSI Connectors and

Connector Number	Input	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
	1L + 1R							L R	
	2L + 2R							L R	
	3L + 3R							L R	
	4L + 4R							L R	
	5L + 5R							L R	
	6L + 6R							L R	
	7L + 7R							L R	
	8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Outputs - Analogue I/O Rack 1

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Outputs - Analogue I/O Rack 1

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Outputs - Analogue I/O Rack 2 (if fitted)

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

INPUT/OUTPUT LABELLING SHEETS

Analogue Outputs - Analogue I/O Rack 2 (if fitted)

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	

Card Slot No..... SCSI Connector No

Output	Label for LR pair (or 1st of 2 mono) 6 characters						Circuit Description	2nd Label (only if pair dedicated to 2 mono signals)
1L + 1R							L R	
2L + 2R							L R	
3L + 3R							L R	
4L + 4R							L R	
5L + 5R							L R	
6L + 6R							L R	
7L + 7R							L R	
8L + 8R							L R	




CALREC

Appendix A - Unipower Bulk Power Supplies and Seperate Distribution


CALREC

BULK PSU

Front

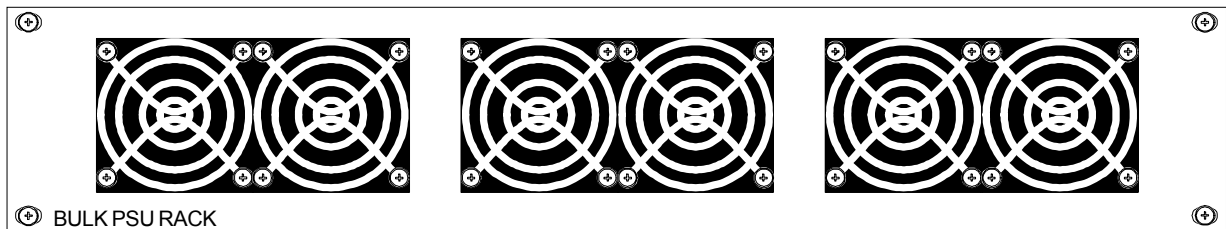

Rear

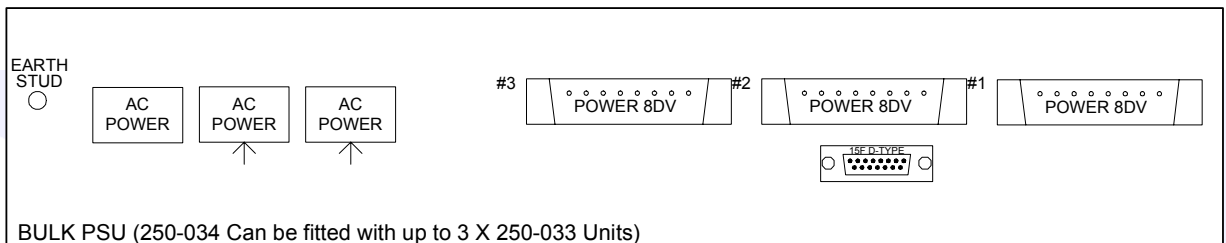

The Bulk PSU Rack is a 2U rack which can hold up to three identical 24V 1kW plug-in power supplies. The rack has separate AC power inputs and DC outputs for each of the three plug-in power supplies on the rear of the unit. Any of the plug-in power supplies can be removed from the rack without disturbing the operation of the others. Diode feeding allows supplies to be paralleled together. The control surface and DSP/Digital I/O Rack are powered as one unit from one of these 2U racks. The control surface is separately powered from another of these 2U racks. The number of plug-in power supplies required is dependent upon the size of the system, the distance between console and rack, and the hot spare requirement (to provide redundancy).

Each of the plug-in power modules has its own cooling fan. The warm air is directed out of the rear of the rack. To ensure proper cooling, the power system requires a minimum clearance of 50mm (2 inches) from the fans and rear air outlets, and also any walls or other surfaces.

The unit should be mounted by means of the side brackets, each of which has two mounting holes. It should always be mounted in a horizontal position. The rear mounting brackets should be used when no support is provided under the rack assembly, the rack should not be supported by front flanges alone. The rear mounting brackets fix to the rear of the studio equipment bay. Extensions of the rack sides slot into these rear supports, allowing the Bulk PSU rack to be removed without removing the support.

Input Power Connections

3-wire safety AC outlet sockets should be located near the power system (number as required). Each line cord will provide AC power to one of the power supply modules. The AC line cord is the mains disconnect for each module. The AC line cords should have an IEC320 connector to plug into the rear of the power system chassis. Each line cord MUST be suitably rated and FUSED (or have an equivalently rated circuit breaker). For 230V mains, the rating is 10A for the line cords and breakers. For 115V mains, the rating is 15A, (line cords are known as SVT or SJT type).

Do not remove the ground conductor. The ground conductor is connected to safety ground to minimize electrical shock hazard and ensure low EMI (electromagnetic interference). The grounding lug, located on the rear panel, is a bonding for connection of the chassis to other system chassis assemblies. Safety grounding is provided via ground connections in the line cord entry receptacles.


System Fan Noise (dB SPL A-Weighted)

These measurements were taken on axis at 1 metre from the dominant noise source:


Bulk PSU Rack	
1 x 24V 1kW PSU	49dBA
2 x 24V 1kW PSU	52dBA
3 x 24V 1kW PSU	54dBA

PSU MONITORING AND DISTRIBUTION UNIT

Front

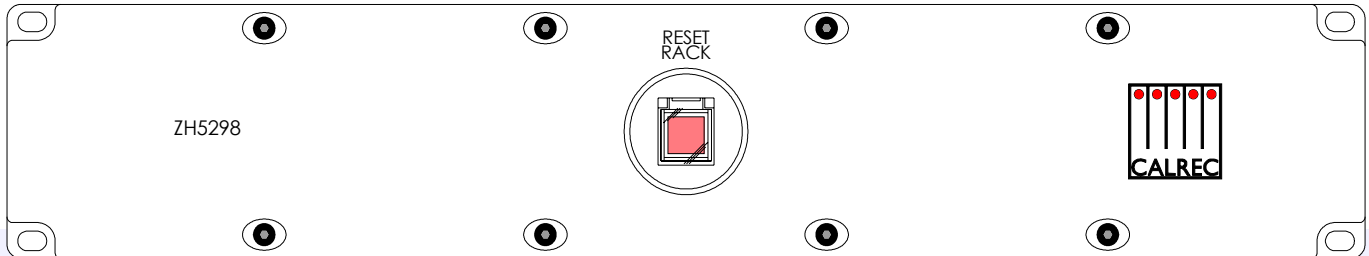

Rear

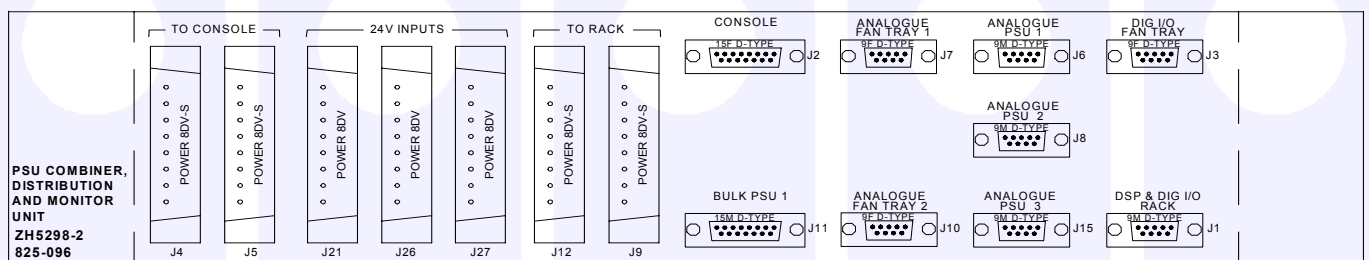

If your console uses the unipower bulk power supply rack, it will also use a separate power monitoring and distribution rack. This unit monitors the power supplies for failures, and ensures changeover to the spare should a fault develop. The Reset button reboots the racks only, the control surface is unaffected. **PLEASE NOTE:** Resetting the racks will result in a brief audio interruption.

This unit should be secured into the front of the bay by the two standard fixing holes in each of the two 2RU front angles. The unit/s should always be mounted in a horizontal position. It is recommended that the rack is not supported by the front flanges alone.

Notes

CALREC





Calrec Audio Ltd reserve the right to change specifications without notice. E & O.E.

The established policy of Calrec Audio Ltd. is to seek improvements to the design, specifications and manufacture of all products. It is not always possible to provide notice outside the company of the alterations that take place continually.

Despite considerable effort to produce up to date information, no literature published by the company nor any other material that may be provided should be regarded as an infallible guide to the specifications available nor does it constitute an offer for sale of any particular product.

Sigma is a trademark of Calrec Audio Ltd. All other trade marks acknowledged.