

USER MANUAL

C-Cast Agent

Version 3.6 - July 2018



 **C-Cast** Agent





Disclaimer

This manual and the information contained herein are the sole property of EVS Broadcast Equipment SA and/or its affiliates (EVS) and are provided “as is” without any expressed or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. In particular, EVS makes no warranty regarding the use or the consequences of use of this manual and the information contained herein. Furthermore, EVS may not be held liable for any direct or indirect, incidental, punitive or consequential loss, damage, cost or expense of any kind whatsoever and howsoever resulting from the normal or abnormal use of this manual and the information contained herein, even if advised of the possibility of such loss, damage, cost or expense.

While every effort has been made to ensure that the information contained in this manual is accurate, up-to-date and reliable, EVS cannot be held liable for inaccuracies or errors that may appear in this publication. The information in this manual is furnished for informational purpose and use only and subject to change without notice.

This manual cancels and replaces any previous versions thereof.

Copyright

Copyright © 2014-2018 EVS Broadcast Equipment SA. All rights reserved.

This manual may not be reproduced, transcribed, stored (in a database or an retrieval system), translated into any language, computer language, transmitted in any form or by any means – electronically, mechanically, printed, photocopied, optically, manually or otherwise – in whole or in part without the prior written consent of EVS.

Trademarks

All product and brand names are registered trademarks and trademarks of EVS or of their respective owners.

Improvement Requests

Your comments will help us improve the quality of the user documentation. Please send improvement requests, or report any error or inaccuracy on this user manual by e-mail to doc@evs.com.

Regional Contacts

You will find the full list of addresses and phone numbers on the following webpage: <http://www.evs.com/contact>.

User Manuals on EVS Website

The latest version of the user manual, if any, and other user manuals on EVS products can be found on the EVS download center, on the following webpage:

<https://www.evs.com/en/download-area>.



Table of Contents

TABLE OF CONTENTS	III
WHAT'S NEW ?	IV
1. INTRODUCTION	1
1.1. Product Description	1
1.2. Opening C-Cast Agent	2
1.3. Overview of the C-Cast Agent Menu	4
2. SETTING UP THE PRODUCTION	7
2.1. Overview and Startup	7
2.1.1. Opening the Production Setup Wizard	7
2.1.2. Overview on the Production Setup	8
2.2. Step 1 - Initialization	10
2.3. Step 2 - Working Folder	11
2.4. Step 3 - Production Sites	12
2.5. Step 4 - Recorders	13
2.5.1. Recorders Window	13
2.5.2. Mapping the Recorders	18
2.5.3. Modifying the Recorder Discovery Process	20
2.6. Step 5 - Targets	22
2.6.1. TargetsWindow	22
2.6.2. Setting up the Targets	24
3. MONITORING THE PRODUCTION	26
3.1. Overview of the Monitoring Windows	26
3.2. Services Monitoring Window	26
3.3. Monitoring the C-Cast Agent Services	29
3.4. Jobs Monitoring Window	31
3.5. Traces Window	34

What's New ?

In the C-Cast User Manual, the icon  has been added on the left margin to highlight information on new and updated features.

This user manual has not been subject to changes related to new features for release 3.5.



1. Introduction

1.1. Product Description

C-Cast Agent Application

C-Cast Agent is the hardware and software that manage the extraction and transfer of the requested A/V content from the venue premises to C-Cast Central.

The C-Cast Agent software is connected to the EVS servers network (XT/XS series) via PC LAN and gigabit networks. It automatically receives requests from the C-Cast Central to extract footage from the EVS servers. It needs to be connected to internet, or at least to have access to the C-Cast Central.

The C-Cast Agent relies on Xsquare and XTAccess for the actual file extraction.

C-Cast Agent User Interface

The C-Cast Agent user interface serves two purposes:

- It makes it possible to easily set up the C-Cast Agent software on the venue, so that it can fulfill its extraction and transfer management role.
- It makes it possible to monitor that the services built in the C-Cast Agent application are running and operating properly.


The actual management of extractions and transfers is fulfilled in the background by the C-Cast Agent services.

C-Cast Agent Workflow

The C-Cast Agent installed on the venue premises plays a major role in the generation of files for the C-Cast workflow, as explained in step 4 of the following workflow.

1. From the OB production van at the venue, a reference program feed is sent back to an EVS server in the broadcast center.
2. In the broadcast center, the operator accesses, with IPDirector, the reference feed on which (s)he defines IN and OUT points to identify the media to be made available in C-Cast Publisher.
3. The media selection information (IN and OUT points, and metadata) is transmitted to the C-Cast Central via C-Cast IPConnect.
4. The C-Cast Central requests the C-Cast Agent to extract the media corresponding to the selection. The C-Cast Agent, and the underlying Xsquare service, extracts and transfers the preview files and mezzanine files to the C-Cast Central. Based on the configuration, all camera angles associated to the selected media are also generated as preview and mezzanine files.

5. In the broadcast center, the operator browses the preview files of all requested camera angles (video asset) in C-Cast Publisher. The operator validates the publication items and video assets (s)he wants to publish to viewers.
6. The C-Cast Central requests the integrated cloud video transcoders to generate the requested output files.
7. The C-Cast Central exposes the output files to the viewers' applications.

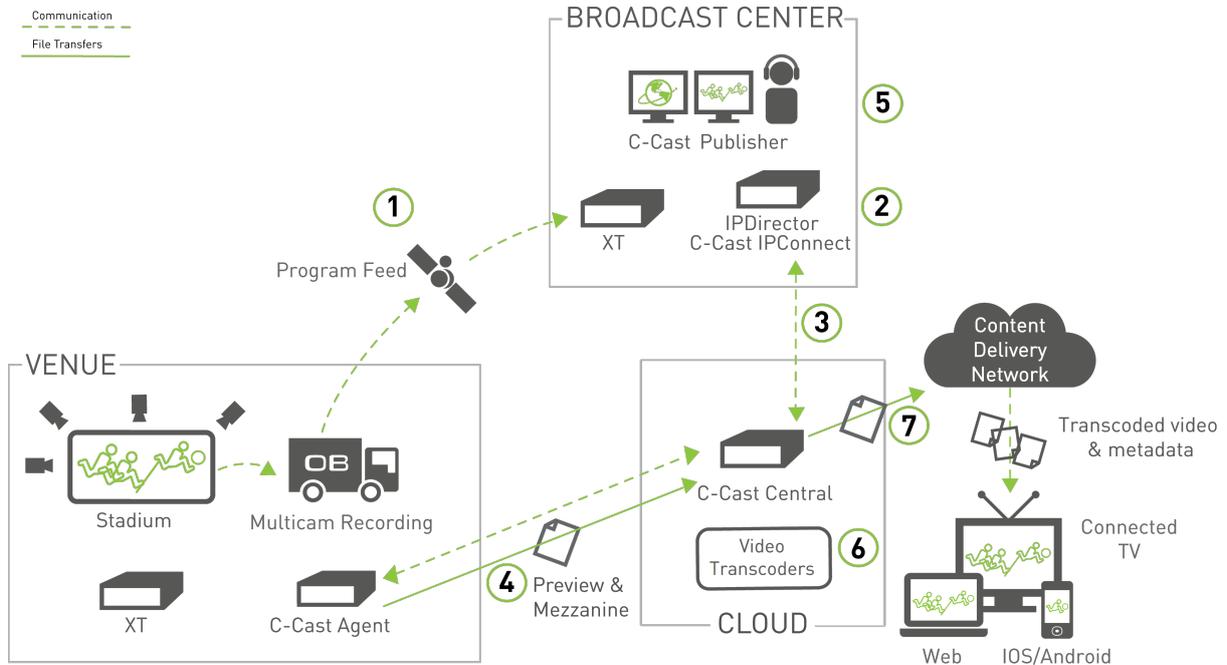

1.2. Opening C-Cast Agent

How to Launch C-Cast Agent

When C-Cast Agent has been installed, launch the application in one of the following ways:

- Click the application icon on the desktop



- Click the **Start** button and select the application name in the **EVS Broadcast Equipment > C-Cast Agent > C-Cast Agent**

How to Access a Launched C-Cast Agent

When the C-Cast Agent application is started, you can access the C-Cast Agent menu by clicking the icon  in the notification area at the far right of the taskbar.

The C-Cast Agent menu gives access to all configuration and monitoring commands.

How to Exit C-Cast Agent

1. Click the C-Cast Agent icon  in the notification area
2. Select **Exit** from the C-Cast Agent menu.


1.3. Overview of the C-Cast Agent Menu

Introduction

The C-Cast Agent application consists of a menu that gives access to the commands or windows.

To open the C-Cast Agent menu, click the C-Cast Agent icon on the notification area of the taskbar: .

To close the C-Cast Agent menu, click outside the C-Cast Agent icon and menu.

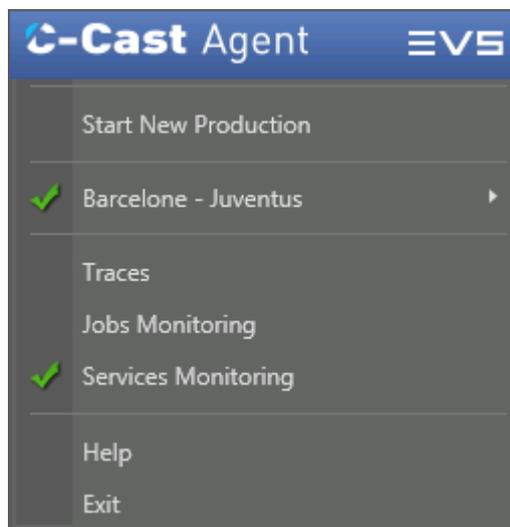

Menu Item Description

Start New Production

It launches the C-Cast Agent wizard to set up a new production.

You can concurrently start more than one production only if they are pointing to the same C-Cast Central. A single C-Cast Agent is limited to work with one C-Cast Central at a time. As long as at least one production is still active, the C-Cast Agent will be limited to work with the C-Cast Central associated to that production.



<Name of Production>

When a production is set up, a menu item corresponding to the production name is available.

It gives access to secondary menu items:

- **Launch Wizard**

It allows you to start the C-Cast Agent wizard again, and change the production settings.

- **Terminate Production**

It allows you to remove the production from the C-Cast Agent menu and purge the working folder content when you no longer want to use C-Cast Agent for this production on the venue.

Traces

It displays the logs with references to all service operations.

See section "Traces Window" on page 34 for more information on logs.

Jobs Monitoring

It displays all incoming jobs in the C-Cast Agent.

See section "Jobs Monitoring Window" on page 31 for more information on the job monitoring.

Services Monitoring

It displays the services built-in the C-Cast Agent, as well as their running status.

See section "Services Monitoring Window" on page 26 for more information on the service monitoring.

Help

It gives access to the help file, and to information about C-Cast Agent.

Exit

It exists the C-Cast Agent application, closes all associated services, as well as the AppGuard application.

Status Icons

Production Statuses

One of the following status icons is displayed in front of the production name in the C-Cast Agent menu:

Status Icon	Meaning
	The production is correctly configured and is functional.
	The production is not functional. You need to go through the wizard again or check the C-Cast services.

Service Monitoring Statuses

Status Icon	Meaning
	The C-Cast solution is compatible with the C-Cast Central.
	The C-Cast solution is deprecated compared to the C-Cast Central. In this case, it is recommended to upgrade as soon as possible the C-Cast solution to a more recent compatible version.
	The C-Cast solution is not compatible with the C-Cast Central. In this case, you cannot use the C-Cast solution. You need to install a compatible C-Cast solution.

2. Setting up the Production


2.1. Overview and Startup

2.1.1. Opening the Production Setup Wizard


How to Open the Wizard for Initial Setup

To launch the wizard to set up a production for the first time, proceed as follows:

1. Click the C-Cast Agent icon  in the notification area
2. Select the **Start New Production** item from the C-Cast Agent menu:

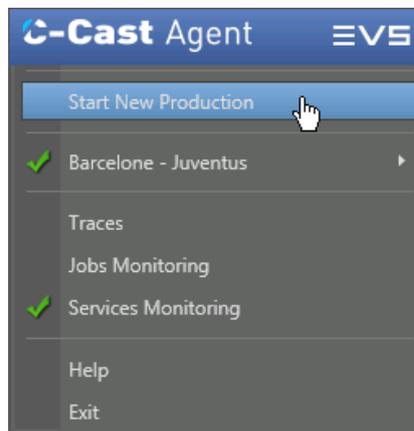

The C-Cast Agent production wizard opens with the focus on first window: 1. Initialization.

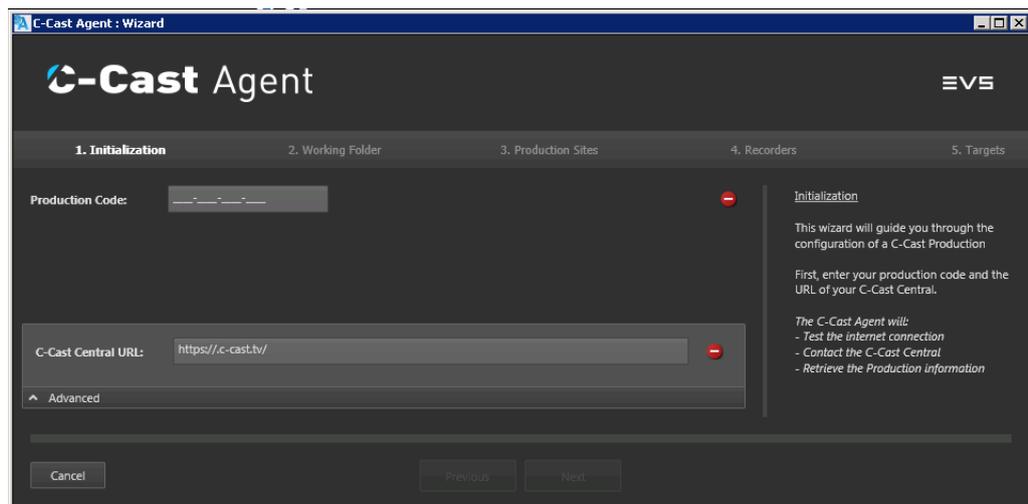


See section "Step 1 - Initialization" on page 10.

How to Open the Wizard for Modifying the Setup

To launch the wizard to modify a production you have set up earlier, proceed as follows:

1. Click the C-Cast Agent icon  in the notification area
2. Select the production name item in the C-Cast Agent menu, and the **Launch Wizard** menu item:

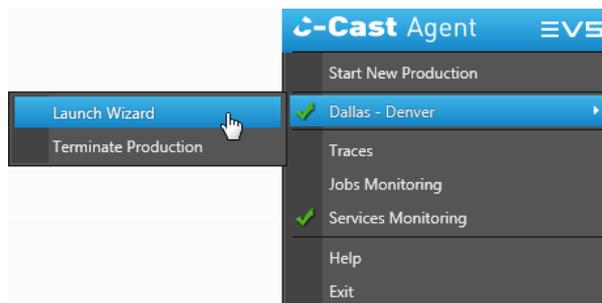


The C-Cast Agent production wizard opens with the focus on first window: 1. Initialization.

3. Click **Next** until you reach the requested window.

See the section corresponding to the configuration step you want to modify.

How to Reactivate a Remotely Terminated Production

If an administrator has remotely terminated a production in the C-Cast Administration module, and you had not previously terminated the given production in C-Cast Agent, you will get a warning message similar to the following one when you try to launch C-Cast Agent:

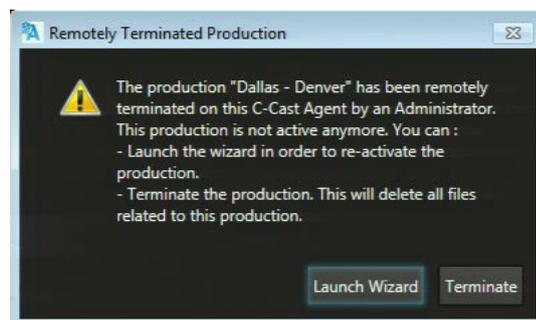

In this message, you can click **Launch Wizard** to reactivate the production, or click **Terminate** to properly close the production in C-Cast Agent.

2.1.2. Overview on the Production Setup

For C-Cast Agent to be functional on a venue , you need to set up the production relevant for the venue using the production setup wizard.

The production setup wizard consists of several windows, each corresponding to one of the configuration steps detailed in this chapter.



The procedure to set up a production has therefore been divided into the following steps, after the initial step "Opening the Production Setup Wizard":

For detailed information on a step, click one of the steps mentioned below to reach the relevant section:

[Step 1 - Initialization](#)

[Step 2 - Working Folder](#)

[Step 3 - Production Sites](#)

[Step 4 - Recorders](#)

[Step 5 - Targets](#)

2.2. Step 1 - Initialization

Introduction

In the **Step 1: Initialization**, you initialize the production. This step allows the C-Cast Agent to establish the communication with and start receiving information from the C-Cast Central.

Procedure

1. Open the production setup wizard as described in the section "Opening the Production Setup Wizard" on page 7.

The wizard opens on page 1. Initialization:

The screenshot shows the '1. Initialization' step of the wizard. The 'Production Code' field is empty. The 'Advanced' dropdown is currently set to 'Advanced'. The right pane contains the following text:

Initialization

This wizard will guide you through the configuration of a C-Cast Production

First, enter your production code and the URL of your C-Cast Central.

The C-Cast Agent will:

- Test the internet connection
- Contact the C-Cast Central

2. In the **Production Code** field, type the production code that you have received and uniquely identifies the production you want to set up.
3. Do one of the following:
 - If you work in a C-Cast production environment, jump directly to step 5.
 - If you work in a C-Cast staging or test environment, click **Advanced** at the bottom of the window to open the Advanced pane.
4. In the Advanced pane, in the **C-Cast Central URL** field, type the URL of the C-Cast Central the C-Cast Agent has to communicate with.

The URL must start with `https://`.

The screenshot shows the '1. Initialization' step with the 'Advanced' pane expanded. The 'Production Code' field now contains 'DEMO-4KNE-008M-5A3C' and has a green checkmark. The 'C-Cast Central URL' field contains 'https://demo.c-cast-staging.tv/' and also has a green checkmark. The right pane contains the following text:

Initialization

This wizard will guide you through the configuration of a C-Cast Production

First, enter your production code and the URL of your C-Cast Central.

The C-Cast Agent will:

- Test the internet connection
- Contact the C-Cast Central
- Retrieve the Production information



5. Click **Next** to validate the information you have entered.

This opens the next configuration window: See section "Step 2 - Working Folder" on page 11.

Results

When you enter the Production code (and the C-Cast Central URL), the application only checks that the format is valid. If the format is not valid, the  icon is displayed . In this case, check you have entered the correct information, and contact your system administrator if necessary.

When you click **Next**, you validate the data entered and proceed to the next step, the C-Cast Agent does the following:

- Establishing the internet connection with C-Cast Central
- Checking that the production code exists in C-Cast Central

2.3. Step 2 - Working Folder

Introduction

In the step **2: Working Folder**, you define a working folder where C-Cast Agent will store the media extracted by Xsquare for the C-Cast workflow.


Prerequisite

You have opened the production setup wizard, and have already configured the first step (1. Initialization) of the setup wizard. See section "Step 1 - Initialization" on page 10.

Procedure

To define the working folder, proceed as follows:

1. In the production setup wizard, open the 2. Working folder window using the **Next** (or **Previous**) buttons:

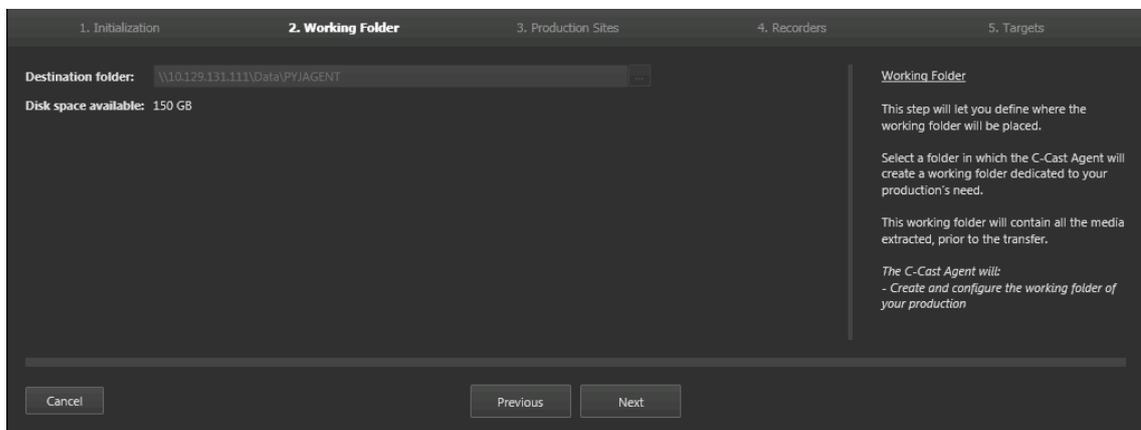

2. In the **Destination folder** field, select a shared folder on the network where you will store the extracted media in one of the following ways:

- Click  and point to the folder.
- Type the UNC path of the targeted folder.

If you type a destination folder that does not exist, the **Next** button will not be available.

3. Click **Next** to validate the information you have entered.

This opens the next configuration window: See section "Step 3 - Production Sites" on page 12

Results

When a destination folder is specified, the disk space available is automatically displayed as a read-only field.

The size of the working folder has to be large enough to store the media generated by Xsquare during a production. The working folder is indeed only purged when you terminate the production.

When you click **Next** to proceed to the next step, a subfolder is created in the path with the name of the production followed by a unique ID, for example `Football 2013-882dc065-24c8-41cc-a017-688a5a124ff9`. The material will be stored in this folder.

2.4. Step 3 - Production Sites

Introduction

In C-Cast Administrator, the administrator has configured production sites involved in the production.

In C-Cast Agent, in the step **3: Production Sites**, you need to associate the C-Cast Agent to a production site. This will make it possible to identify its position and role in the C-Cast workflow.


Prerequisite

You have opened the production setup wizard, and have already configured the steps up to 3. Production Sites. See section "Overview on the Production Setup" on page 8 for links to the previous configuration steps.

Procedure

To select the production site, proceed as follows:

1. In the production setup wizard, open the 3. Production Sites window using the **Next** (or **Previous**) buttons:

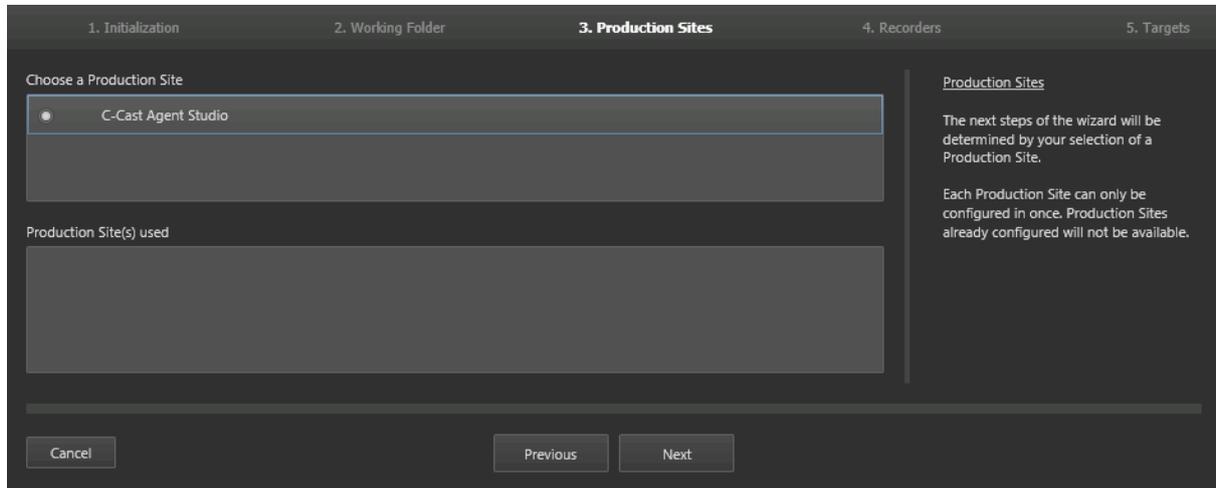

2. In the **Choose a Production Site** area, click the production site corresponding to the place where the C-Cast Agent you are configuring is installed.
The production sites in the **Production Site(s) used** area are already used by another C-Cast Agent in the C-Cast setup, and are therefore unavailable.
3. Click **Next** to validate the selected production site.
This opens the next configuration window: See section "Step 4 - Recorders" on page 13 to go directly to the next step.

Results

The C-Cast Agent is associated to the appropriate production site, which is necessary for C-Cast Agent services and C-Cast Central to manage the C-Cast setup.


2.5. Step 4 - Recorders

2.5.1. Recorders Window

Introduction

In the production setup wizard, the **Recorders** window (step 4) aims at specifying the EVS servers and the record channels the AV content will be extracted from on the production site.

The Recorders window contains the areas highlighted on the screenshot below:

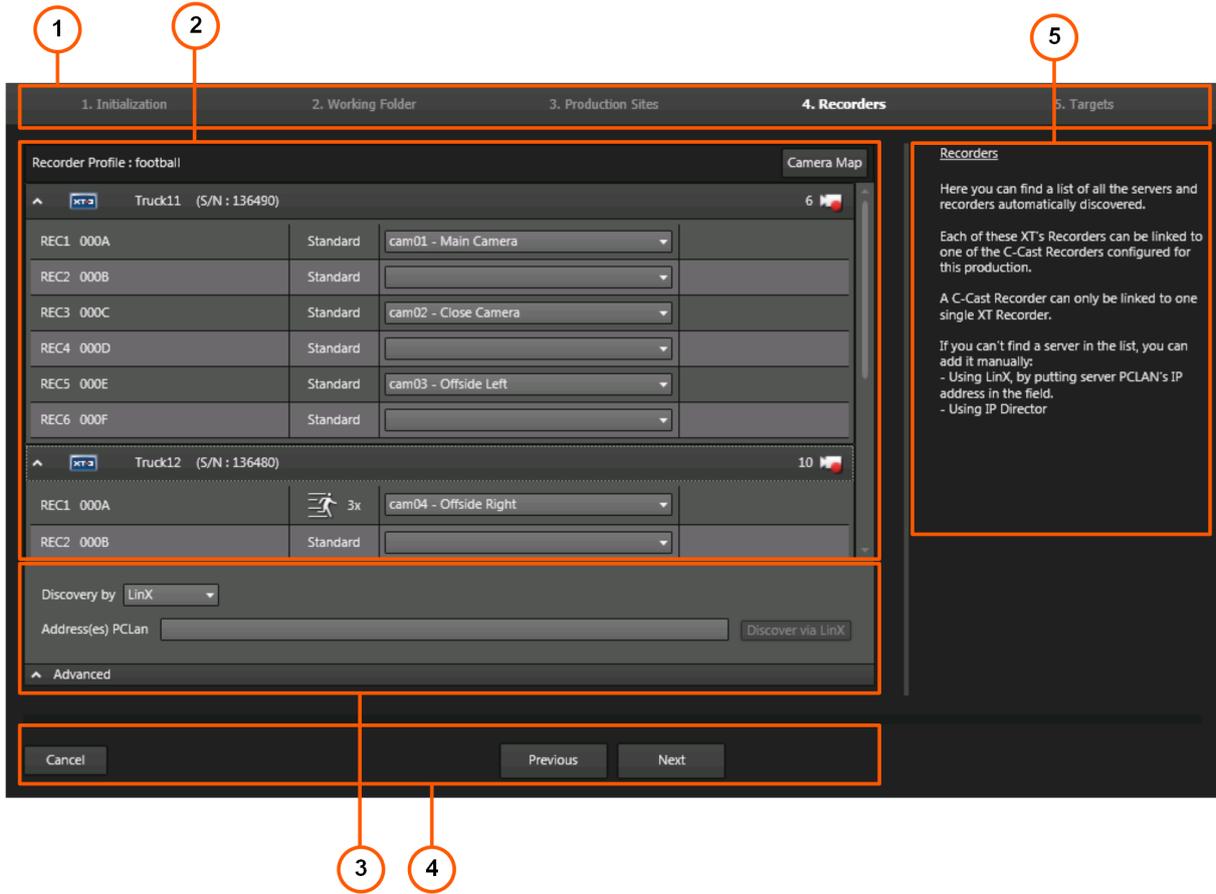

The table below describes the various parts of Recorders window:

Part	Area Name
1.	Item bar
2.	EVS Server area
3.	Advanced area
4.	Action buttons
5.	Help pane

Area Description


Item Bar (1)

The item bar is common to all steps in the production setup wizard.

As you move from one page to the other in the wizard, the item bar shows in bold the configuration step corresponding to the open window.

EVS Server Area (2)

In the EVS Server area, you can map the camera names defined as part of your production in C-Cast Administrator with the actual record channels of the EVS servers installed on the production site:

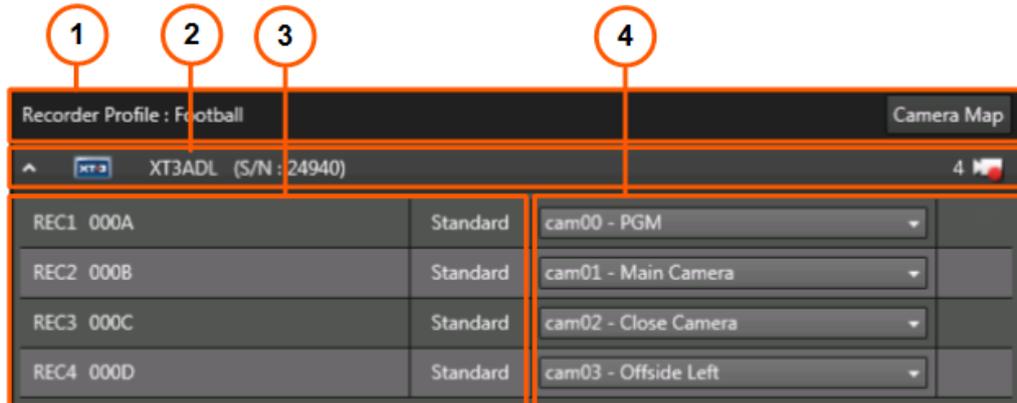

In the EVS Server area, the following fields are available:


Part	Name	Description
1.	Information bar	It displays the following information: <ul style="list-style-type: none"> On the left, name of the recorder profile associated to the C-Cast Agent in production configuration; On the right, Camera Map button to open an illustration with the camera mapping.
2.	EVS Server	Expandable header displaying, from left to right, the following information on each detected EVS server: <ul style="list-style-type: none"> server icon specifying the server series; server name; server serial number; number of record channels in the running configuration  When the header is expanded, the record channels area is displayed below the header.



In the Advanced area, the following fields are available when the LinX protocol is selected in the **Discovery by** field:

Name	Description
Address(es) PCLan	Field to enter the PC LAN IP address of the EVS server
Discover via LinX	Button to launch the discovery process

Automatic Server Discovery via IPDirector API

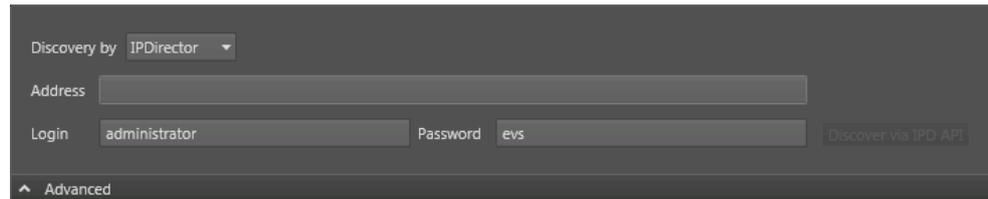

In the Advanced area, the following fields are available when the IPDirector protocol is selected in the **Discovery by** field:

Name	Description
Address	IP address of the computer where the IPDirector API is installed. The IPDirector API you are pointing to must be started when you launch the discovery process
Login	Login to be used by C-Cast Agent to access the API
Password	Password to be used by C-Cast Agent to access the API
Discover via IPD API	Button to launch the discovery process

Action Buttons (4)

The action buttons are similar in all steps of the production setup wizard:

Name	Description
Cancel	Exits the wizard without applying the changes on the last window you have opened.
Previous	Goes back to the previous window, saves the changes on the current window in memory, but does not apply them.
Next	Goes to the next window, saves the changes on the current window in memory, but does not apply them.
Finish	(On the last window) Applies the changes brought to the setup wizard, and exists the wizard.

Help Pane (5)

The help pane is displayed in all windows of the wizard. It provides information on the window, and the actions you have to perform in the window.

2.5.2. Mapping the Recorders

Introduction

In the step **4: Recorders**, you need to specify the record channels the AV content will be extracted from on the production site.

You achieve this by mapping the camera names defined in your production in C-Cast Administrator with the actual record channels of the EVS servers installed on the production site.

The AV content from the record channels will only be available in C-Cast if you perform this recorder mapping.

Prerequisites

Previous Steps Configured

You have opened the production setup wizard, and have already configured the steps up to 4. Recorders. See section "Overview on the Production Setup" on page 8 for links to the previous configuration steps.

EVS Servers Correctly Displaying

When the Recorders window opens, C-Cast automatically discovers the EVS servers using the LinX protocol.

Should you not find the requested EVS servers, click once **Previous** and **Next** to come back to the Recorders window and refresh the server display.

Other discovery processes can also be triggered in the Advanced area. See section "Modifying the Recorder Discovery Process" on page 20 for more information how the other discovery processes.

C-Cast Cameras Selected in C-Cast Administrator

In C-Cast Administrator, in the production configuration, a number of cameras have been selected to be made available in the C-Cast Agent Production Site you have associated to your C-Cast Agent.




Procedure

In C-Cast Agent, you can only map the cameras associated to the C-Cast Agent Production Site in the production configuration in C-Cast Administrator.

To map the recorders, proceed as follows:

1. In the production setup wizard, open the **4. Recorders** window using the **Next** (or **Previous**) buttons:

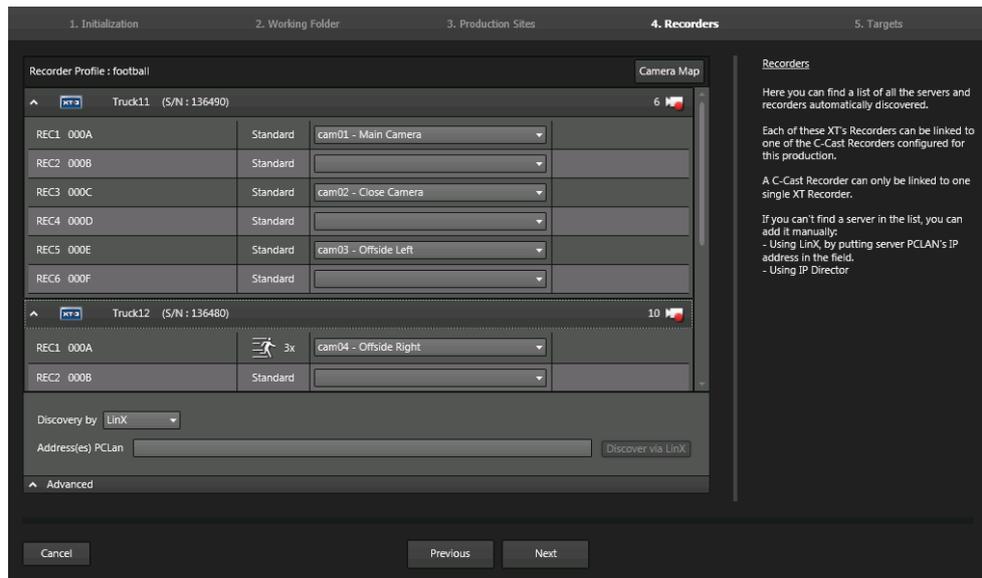

See section "Recorders Window" on page 13 for a detailed description of the Recorders window.

2. For the requested server, select the appropriate C-Cast camera name in front of each record channel whose content you want to make available in C-Cast.

Click the **Camera Map** button if you want to have a look at the camera map to help you assign the right EVS record channel to the C-Cast camera name.

3. Repeat step 3 for all record channels of all EVS servers you want to retrieve AV content from.
4. Click **Next** to validate the recorder mapping.

This opens the next configuration window: See section "Step 5 - Targets" on page 22 to go directly to the next step.

Result

All record channels whose AV content you want to make available from this C-Cast Agent have been mapped to a camera name of your production.

2.5.3. Modifying the Recorder Discovery Process

Introduction

Depending on the C-Cast setup on your production site, you may want or have to modify the way the EVS servers and associated record channels are discovered by C-Cast Agent. By default, the EVS servers are automatically discovered using the LinX protocol.

Two additional discovery processes are available in the Advanced Area of the Recorders window (step 4) in the production setup wizard:


- Automatic discovery via the IPDirector API;
- Manual discovery with LinX using the EVS server PC LAN IP address.

How to Discover the EVS Servers via IPDirector API

To discover the EVS servers via the IPDirector API, proceed as follows:


1. Make sure that the IPDirector API you are going to use for the discovery process is correctly started.
2. In the Recorders window of the production setup wizard (step 4), click **Advanced** at the bottom of the window.

The Advanced area opens:

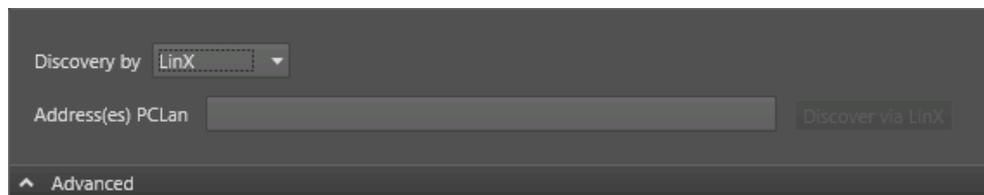

3. Select IPDirector in the **Discovery by** field.

The Advanced area changes to:

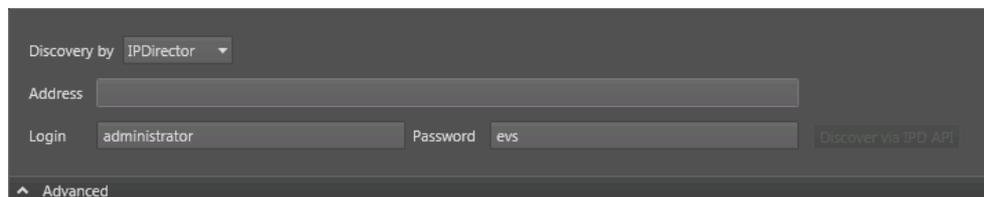

4. In the **Address** field, type the IP address of the computer where the IPDirector API is installed and started.
5. In the **Login** and **Password** fields, type the login and password that C-Cast Agent has to use to connect to the IPDirector API. This must be an administrator login to the IPDirector API.

The **Discover via IPD API** button becomes available.

6. Click the **Discover via IPD API** button.


The list of EVS servers is regenerated.

How to Discover an EVS Server with its IP Address

To discover manually a given EVS server, proceed as follows:

1. In the Recorders window of the production setup wizard (step 4), click **Advanced** at the bottom of the window.

The Advanced area opens:

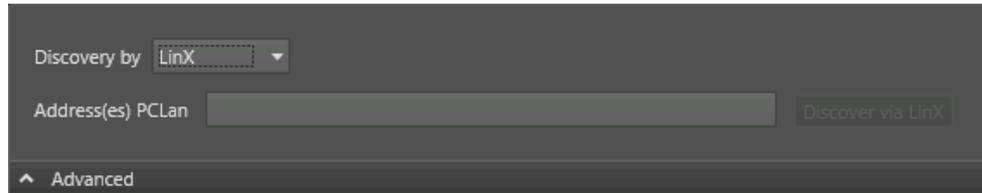

2. In the **Address(es) PCLan** field, type the PC LAN IP address of the requested EVS server.
3. Click the **Discover via LinX** button to trigger the connection process.

The EVS server is added to the list.


2.6. Step 5 - Targets

2.6.1. TargetsWindow

Introduction

In the production setup wizard, the **Targets** window (step 5) aims at viewing and specifying where the AV content extracted on the production site will be sent to in the C-Cast setup.

The Targets window contains the areas highlighted on the screenshot below:

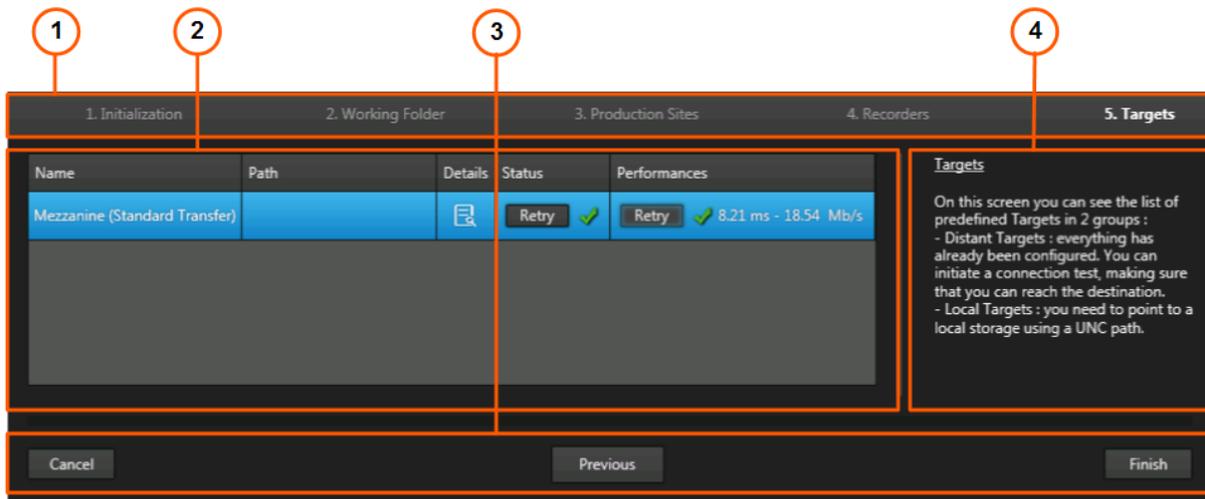

The table below describes the various parts of Targets window:

Part	Area Name
1.	Item bar
2.	Targets area
3.	Action buttons
4.	Help pane

Area Description

Item Bar (1)

The item bar is common to all steps in the production setup wizard.

As you move from one page to the other in the wizard, the item bar shows in bold the configuration step corresponding to the open window.



Targets (2)

Name	Path	Details	Status	Performances
Mezzanine (Standard Transfer)			Retry	Cancel 8.74 ms - 12.43 Mb/s

In the Targets area, the following fields, buttons or status icons are displayed from left to right for each target.

The fields are not editable, and come from the Transfer Profile and Target definitions in C-Cast Administrator, Settings section.

Name	Description
Target Name	Name of the target
Target IP Address	IP Address through which the target can be reached
Details	Icon giving access, through a right-click, to a summary of the transfer and target information
Status	<p>This cell provides information about the connection status to the target, via one of the following icons:</p> <ul style="list-style-type: none"> = failed to connect to target = connection being tested = successfully connected to target <p>This cell includes a Retry button which allows you to try establishing again the connection when the status is on .</p>
Performances	<p>This cell allows you to test the transfer speed of the connection before a production, to determine whether the setup should be adapted.</p> <p>Click the Test button to launch the test. The test is only available if the connection status is .</p> <p>The test status is displayed via one of the following icons:</p> <ul style="list-style-type: none"> = connection to target has been lost = test being initialized <p>As the test is initializing, you can cancel it by clicking Cancel.</p> <ul style="list-style-type: none"> = test finished <p>When the test is over, you can restart it by clicking Retry.</p> <p>The test results are displayed on the right of the icon:</p> <ul style="list-style-type: none"> round-trip time in ms average speed value in Gb/s

Action Buttons (3)

The action buttons are similar in all steps of the production setup wizard:

Name	Description
Cancel	Exits the wizard without applying the changes on the last window you have opened.
Previous	Goes back to the previous window, saves the changes on the current window in memory, but does not apply them.
Next	Goes to the next window, saves the changes on the current window in memory, but does not apply them.
Finish	(On the last window) Applies the changes brought to the setup wizard, and exists the wizard.

Help Pane (4)

The help pane is displayed in all windows of the wizard. It provides information on the window, and the actions you have to perform in the window.

2.6.2. Setting up the Targets

Introduction

In the step **5: Targets**, you will view the various targets, which means the devices and folders where the AV content extracted on the production site will be sent to in the C-Cast setup.

From this window, you will need to perform the following action on targets:

- Checking the targets based on which the media will be extracted and transferred.
- Testing the connection to the distant targets, and detecting connection problems.

Target Types

These are targets for media files that are sent outside the production site.

This is, for example, a target for the mezzanine files (used as source file to generate the distributed outputs). The mezzanine files are indeed stored on C-Cast Central.

Such targets are not editable in C-Cast Agent. Their definition comes from C-Cast Administrator. In C-Cast Agent, you can only test the connection to the targets.

Prerequisite

You have opened the production setup wizard, and have already configured the steps up to 5. Targets. See section "Overview on the Production Setup" on page 8 for links to the previous configuration steps.



How to Test Targets

The targets are automatically tested, and a connection status icon is displayed in the row corresponding to each target.

In case the icon  (failed connection) is displayed on the row of a distant target, click the **Retry** button next to the icon.

This launches the connection process again, and the icon changes to  while C-Cast Agent tries to connect.

If the connection status changes to , the connection is established.

If the connection status remains  for more than 1 minute, or changes to , contact your C-Cast Central administrator.

3. Monitoring the Production

3.1. Overview of the Monitoring Windows

The following monitoring windows are available in C-Cast Agent from the C-Cast Agent menu:

- The [Traces window](#) is available from the **Traces** menu item
- The [Jobs Monitoring window](#) is available from the **Jobs Monitoring** menu item.
- The [Services Monitoring window](#) is available from the **Services Monitoring** menu item.

3.2. Services Monitoring Window

Introduction

In C-Cast Agent, the Services Monitoring window allows you to check that the C-Cast Agent services are correctly started. From this window, you can also edit service connection parameters, and test the connection.

The Services Monitoring window contains the areas highlighted on the screenshot below:

The screenshot shows the 'Services Monitoring' window in C-Cast Agent 3.3. The window contains a table of service status and a configuration panel for the 'EVS Xsquare Service'.

Status	Name	Version	Service IP address/Server name	Port	Local Network IP Address
✓	C-Cast Agent Engine	3.3.6.0	N/A	N/A	N/A
✓	EVS Notification Center	2.1.21.5	127.0.0.1	48888	127.0.0.1
✓	C-Cast Transfer Service	4.0.3.0	127.0.0.1	8000	127.0.0.1
✓	C-Cast Resource Locator Service	6.1.1.0	127.0.0.1	8001	127.0.0.1
✓	C-Cast Thumbnail Extraction Service	5.0.2.0	127.0.0.1	8002	127.0.0.1
✓	EVS Xsquare Service	3.4.7.29	127.0.0.1	9002	127.0.0.1

The configuration panel for the 'EVS Xsquare Service' includes the following fields:

- Type: Xsquare
- Name: EVS Xsquare Service
- Status: Running
- Version: 3.4.7.29
- Message: (empty)
- IP address/Server name: 127.0.0.1:9002
- Local Network IP Address: 127.0.0.1
- Buttons: Test connection, Update
- Advanced section:
 - Specific service IP address/Server name: (empty)
 - Login: Administrator
 - Password: (masked)
 - Add button



The table below describes the various parts of Services Monitoring window:

Part	Area Name
1.	Header area
2.	Services List area
3.	Services Details area

Area Description

Header Area (1)

This area features the C-Cast Agent solution name and version number.

Services List Area (2)

The Services Lists area displays all Windows services linked to C-Cast Agent, and provides the following information on the services. The fields are described from left to right:

Name	Description								
Status	Connection status of the C-Cast Agent service. See section "Monitoring the C-Cast Agent Services" on page 29 for more information.								
Name	Name of the service or the EVS product acting as a service in C-Cast Agent.								
Version	Version number of the service used. Next to the version number, one of the following icons may be displayed if there is an issue related to the compatibility between the given service and the C-Cast solution: <table border="1" data-bbox="643 1355 1396 1713"> <thead> <tr> <th>Icon</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td></td> <td>The service version is unknown</td> </tr> <tr> <td></td> <td>The service version has not been validated with the C-Cast solution.</td> </tr> <tr> <td></td> <td>The service version is not compatible with the C-Cast solution. In this case, roll over the icon, which displays a tooltip providing a link to the compatible service version.</td> </tr> </tbody> </table>	Icon	Meaning		The service version is unknown		The service version has not been validated with the C-Cast solution.		The service version is not compatible with the C-Cast solution. In this case, roll over the icon, which displays a tooltip providing a link to the compatible service version.
Icon	Meaning								
	The service version is unknown								
	The service version has not been validated with the C-Cast solution.								
	The service version is not compatible with the C-Cast solution. In this case, roll over the icon, which displays a tooltip providing a link to the compatible service version.								
Service IP Address/ Server Name	IP address C-Cast Agent used to contact and send requests to the C-Cast Agent service.								

Name	Description
Port	Port number C-Cast Agent used to contact and send requests to the C-Cast Agent service.
Local Network IP Address	IP address the C-Cast Agent service shall use to answer to C-Cast Agent.

Service Details Area (3)

When you open the Services Monitoring window, you first have to double click a service for the Service Details area to be displayed.

The Services Details area displays the detailed information on the service selected in the Services List area.

- In the main zone, all fields from the Services List area are available, as well as a **Message** field where messages are displayed in case of error.

See section "Services List Area (2)" on page 27.

- In the main zone, the buttons have the following role:

Name	Description
Test Connection	Button to test the C-Cast Agent connection to the C-Cast service.
Update	Button to establish the connection with the modified connection settings.
Cross	Button to hide the Service Details area.

- In the Advanced zone, additional fields are displayed to allow users to define new settings for C-Cast Agent to connect to the C-Cast Agent service:

Name	Description
Specific Service IP Address / Server Name	New IP address C-Cast Agent needs to use to communicate with the C-Cast Agent service.
Login	Login C-Cast Agent needs to use to communicate with the C-Cast Agent service
Password	Password C-Cast Agent needs to use to communicate with the C-Cast Agent service
Add	Button to apply the connections settings defined in the Advanced zone. These new settings will overwrite the settings in the main zone of the Service Details area.



3.3. Monitoring the C-Cast Agent Services

Overview of the C-Cast Agent Services

The C-Cast Agent application relies on five services to perform its tasks.

These services, which are custom Windows services, are automatically installed when you install the C-Cast Agent suite:

Service Name	Purpose
C-Cast Agent Engine	Service managing the C-Cast Agent Solution
EVS Notification Center	Service responsible for the communication of C-Cast Agent with C-Cast Central.
C-Cast Transfer Service	Service responsible for the transfer of the generated files to external targets. It can handle the transfers via different protocols.
C-Cast Resource Locator Service	Service responsible to identify the location(s) of all files in the C-Cast workflow. The purpose of this service is to prevent transform and transfer operations to be processed several times. The service is local: if you delete the service, all information related to the resource locations are deleted.
C-Cast Thumbnail Extraction Service	Service responsible for the extraction of the thumbnails to be made available in the thumbnails area (thumbwall) in C-Cast Publisher.
EVS Xsquare Service	Service responsible for the extractions, transcoding and rewrap requested to C-Cast Agent.

Checking the Overall Service Status

The C-Cast Agent services should be configured to:

- be automatically started when you start the C-Cast application
- be automatically restarted after one minute should they accidentally stop running.

When all services are correctly started, the C-Cast Agent icon in the taskbar is blue: .

When one of the services is stopped, the C-Cast Agent icon in the taskbar is red: .

Checking the Individual Service Status

In C-Cast Agent, you can check for each service that the service is correctly started, and can communicate with C-Cast Agent:

- Click the C-Cast Agent icon  in the notification area, and select **Services Monitoring** from the contextual menu.

The Services Monitoring window opens.

The services status is displayed in the **Service State** column and symbolized by one of the following icons:

Icon	Service Status
	Service starting
	Service correctly started
	Service paused
	Service stopping
	Service stopped
	Service shut down
	Error

When a service is stopped, it is automatically restarted within one minute.

When a service is in error state, modify the connection settings to redirect to another service on the network.

Modifying the Connection Settings of a C-Cast Agent Service

If you want your C-Cast Agent to work with a service that is not installed on the C-Cast Agent hardware, for example another Xsquare service, you will have to specify and apply the connection settings for this service.

To modify the connection settings for a service in C-Cast Agent, proceed as follows:

1. Click the C-Cast Agent icon  in the notification area, and select **Services Monitoring** from the contextual menu.

The Services Monitoring window opens.

2. Double click the row corresponding to the service whose connection settings you want to modify.

The Services Details area opens at the bottom of the window with detailed information on the service.

3. In the Services Details area, click  to expand the Advanced area.
4. In the Advanced area, specify the IP address, login and password C-Cast Agent has to use to communicate with the service.
5. Click  next to the password field to move the IP address to the upper part of the Details pane.



- Click **Test connection** in the Services Details area to check whether the C-Cast Agent can contact the service using the given IP Address and the credentials.

If the test is successful, the service state will be .

- Depending on the outcome of the test, do one of the following actions:
 - If the test is unsuccessful, check the settings and repeat steps 4 to 6
 - If the test is successful, click **Update** to validate and apply the new connections settings.

The service connection settings have been modified, and successfully applied.

3.4. Jobs Monitoring Window

Introduction

In C-Cast Agent, the Jobs Monitoring window allows you to monitor all jobs processed by the C-Cast Agent services.

The following screenshot shows an example of the Jobs Monitoring window:

Job ID	Asset Id	Received date	State	Priority	Production	Type	Initiator	Name	Source	Filename	Destination	Extraction	Transfer
6960	7785566-36e3-4471-ba67-3a00708a7783	10-46-21		Low	Demo - Techwriter (DSTR)	Target	IPConnect (C-Cast IF	Studio12_0181	Truck11-REC3	TechWriter_Contrib_7785566-36e3-4471-ba67-3a00708a7783.mxf			
6959	7785566-36e3-4471-ba67-3a00708a7783	10-46-21		Low	Demo - Techwriter (DSTR)	Mezzanine	IPConnect (C-Cast IF	Studio12_0181	Truck11-REC3	64A0575A7927D6332871EF887A809F1C.mp4			
6952	b94bf937-6620-4b53-b289-44e1110e4563	10-46-20		Medium	Demo - Techwriter (DSTR)	Target	IPConnect (C-Cast IF	Studio12_0181	Truck12-REC1	TechWriter_Contrib_b94bf937-6620-4b53-b289-44e1110e4563.mxf			
6951	b94bf937-6620-4b53-b289-44e1110e4563	10-46-20		Medium	Demo - Techwriter (DSTR)	Mezzanine	IPConnect (C-Cast IF	Studio12_0181	Truck12-REC1	54C8F158A823888F332061AA40FE1D.mp4			
6948	b21f3a6f-15a5-4259-a4b9-cebaa6067a54	10-46-20		Medium	Demo - Techwriter (DSTR)	Target	IPConnect (C-Cast IF	Studio12_0181	Truck11-REC5	TechWriter_Contrib_b21f3a6f-15a5-4259-a4b9-cebaa6067a54.mxf			
6947	b21f3a6f-15a5-4259-a4b9-cebaa6067a54	10-46-20		Medium	Demo - Techwriter (DSTR)	Mezzanine	IPConnect (C-Cast IF	Studio12_0181	Truck11-REC5	AA9C73E08FD16788F897407F3E3DF586.mp4			
6944	776e1e82-d3d0-4376-b54a-c3c89062bdc4	10-46-19		Medium	Demo - Techwriter (DSTR)	Target	IPConnect (C-Cast IF	Studio12_0181	Truck12-REC2	TechWriter_Contrib_776e1e82-d3d0-4376-b54a-c3c89062bdc4.mxf			
6943	776e1e82-d3d0-4376-b54a-c3c89062bdc4	10-46-19		Medium	Demo - Techwriter (DSTR)	Mezzanine	IPConnect (C-Cast IF	Studio12_0181	Truck12-REC2	DA716326FC6569F127C5108E71C8E3DA.mp4			
6940	c900009-76e5-4d65-b786-62d3629d58f7	10-46-19		Medium	Demo - Techwriter (DSTR)	Target	IPConnect (C-Cast IF	Studio12_0181	Truck11-REC4	TechWriter_Contrib_c900009-76e5-4d65-b786-62d3629d58f7.mxf			
6939	c900009-76e5-4d65-b786-62d3629d58f7	10-46-19		Medium	Demo - Techwriter (DSTR)	Mezzanine	IPConnect (C-Cast IF	Studio12_0181	Truck11-REC4	1938085516AE4844F395E148A7227F8.mp4			
6936	8d317542-2588-40b9-8132-ab9541bce028	10-46-00		Low	Demo - Techwriter (DSTR)	Target	IPConnect (C-Cast IF	Studio12_0180	Truck11-REC3	TechWriter_Contrib_8d317542-2588-40b9-8132-ab9541bce028.mxf			
6935	8d317542-2588-40b9-8132-ab9541bce028	10-46-00		Low	Demo - Techwriter (DSTR)	Mezzanine	IPConnect (C-Cast IF	Studio12_0180	Truck11-REC3	48FCAD78900892038F492F1ABBC8231.mp4			

Job ID	6940	XSquare Id	13641	Start at	2016/08/09 10:46:20	Extraction Profile	Contribution	Server name	Truck11
Asset Id	c900009-76e5-4d65-b786-62d3629d58f7	Finished at	2016/08/09 10:46:30	Transfer Profile	To local folder P1	Recorder name	REC4		
State	Completed	Elapsed time	00:00:09.532						
Priority	Medium								

Id	Service	State	Started at	Finished at	Elapsed time	Message	Depends on
82e766ee-b5af-4a68-b531-b204a97ed155	VideoExtractionService	Completed	2016/08/09 10:46:20	2016/08/09 10:46:28	00:00:07.659	XSquare job is completed	
8b6c93de-f729-4438-b912-5556b29a7cc5	UpdateMetadataService	Completed	2016/08/09 10:46:28	2016/08/09 10:46:28	00:00:00.022		82e766ee-b5af-4a68-b531-b204a97ed155
0a775e2-b8ee-4d5e-af03-e8c9f95e50dc	TransferService	Completed	2016/08/09 10:46:28	2016/08/09 10:46:30	00:00:01.711	Transfer completed	8b6c93de-f729-4438-b912-5556b29a7cc5

About Jobs

A job sent by the IPConnect initiator to a C-Cast Agent through C-Cast Central, to make AV content available in C-Cast Publisher, will usually be divided into minimum three items in the Jobs Monitoring window. Each item corresponds to one part of the job:

- A group of thumbnails. This file is displayed in the Thumbnails area (thumbwall) in C-Cast Publisher (system job);
- A lo-res file, also called a system rendition. This file can be viewed in the player in C-Cast Publisher (system job);
- A mezzanine file. This is the high-quality source video file.

A job sent from the Publisher initiator to a C-Cast Agent, to generate several output files for the distribution workflow will consist of as many jobs as output files need to be generated. C-Cast Agent will usually try to group jobs in a multi-destination job in Xsquare in order to optimize resource usage.



Field Description

The Jobs Monitoring window contains job-related data that helps monitoring the job process.

By default, the system jobs are not displayed in the grid. You can display them by selecting the **Show System Jobs** check box at the bottom of the page.

Click on a job item to open the details pane with more detailed information about the item, such as the services involved in the job processing.



TIP

The Xsquare ID is specified in the details pane.

If a job requires a rendition that is already available in C-Cast Central, the extraction step is not processed once again, and the job will solely consist in transferring the existing rendition to the requested destination.

Name	Description
Job ID	Unique number which increments for each row in the Jobs Monitoring window.
Asset ID	ID number of the video asset.
Received Date	Date when the C-Cast Agent has received the job.
State	<p>Current status in the job process. The job status is derived from both extraction and transfer progress statuses, and can have the following values:</p> <ul style="list-style-type: none">  Job canceled  Job queued  Job running  Job stopped  Job failed  Job successfully processed
Priority	<p>Priority for processing the job. The processing priority is defined on the asset item in C-Cast Publisher if it differs from the default priority.</p>
Production	Production name.
Type	<p>Type of target. The following types are possible:</p> <ul style="list-style-type: none"> • Mezzanine: job to generate outputs for the distribution workflows. • System (Video): job to generate the video in C-Cast Publisher. • System (Thumbwall): job to generate thumbs in C-Cast Publisher.

Name	Description
Initiator	C-Cast application that requests the job. The following initiators are possible: <ul style="list-style-type: none"> • Publisher (+ name of the user who requested the job) • IPConnect (+ production site name)
Name	Name of the clip.
Source	Source of the clip specified in the following pattern: <ul style="list-style-type: none"> • If this is an EVS server: <server name>-<recorder name>. • If this is a file: <file path>
Filename Destination	Name of the output file.
Extraction	Status of the transform task of the job. <ul style="list-style-type: none"> • If the job is not running, the status is displayed (See State field). • If the job is running, a progress bar is displayed.
Transfer	Status of the transfer task of the job <ul style="list-style-type: none"> • If the job is not running, the status is displayed (See State field). • If the job is running, a progress bar is displayed.


3.5. Traces Window

Introduction

When you need to deliver the log files to the Support team for further investigation on an issue, you can zip and send the **CCast** folder stored in `C:\EVSLogs\CCast`.

In C-Cast Agent, the Traces window also allows you to monitor the messages generated by C-Cast Agent and its services.

The following screenshot shows an example of the Traces window:

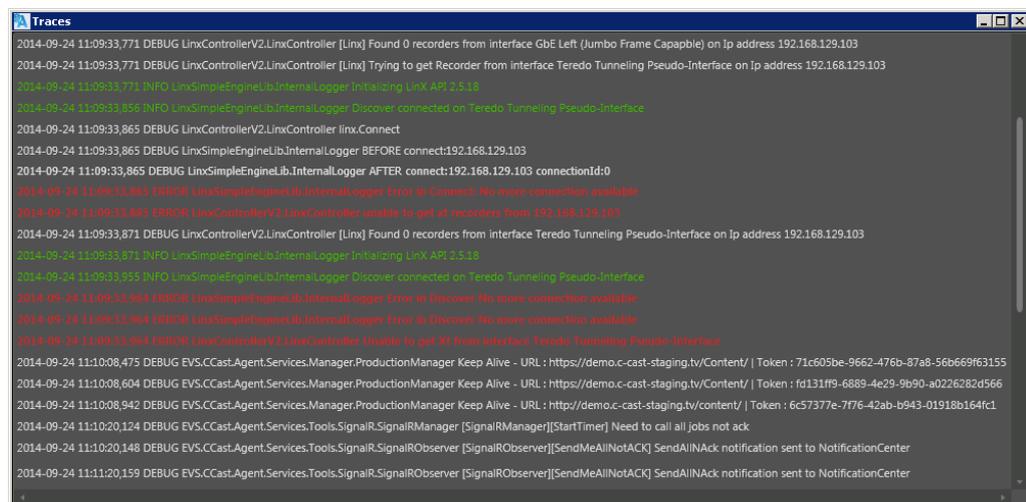



Severity Level

The records are categorized according to their severity level:

Information type	
Debug	Messages, in white font, the developers can use for debug purpose in case of failure.
Information	Messages, in green font, providing useful information to C-Cast Agent users.
Error	Messages, in red font, referring to errors in one of the C-Cast Agent services.
Critical	Messages, in red font, referring to errors that can prevent C-Cast Agent and C-Cast Agent services to work correctly.
Fatal	Messages, in red font, referring to errors that prevent C-Cast Agent and C-Cast Agent services from being used.

Record Components

Each record is made up of the following sequence:

<Date> <Time> <Severity Level> <Code-Related Info> <Message>

Information type	
Date	Date (yyyy-mm-dd) when the error or information has been generated.
Time	Time (hh:mm:ss;ms) when the error or information has been generated.
Severity Level	Degree of importance of the error
Code-Related Info	Information relevant to EVS developers
Message	Message describing the event.

Corporate
+32 4 361 7000

North & Latin America
+1 973 575 7811

Asia & Pacific
+852 2914 2501

Other regional offices
www.evs.com/contact

EVS Headquarters
Liège Science Park
13, rue Bois St Jean
B-4102 Seraing
Belgium

EVS Broadcast Equipment is continuously adapting and improving its products in accordance with the ever changing requirements of the Broadcast Industry. The data contained herein is therefore subject to change without prior notice. Companies and product names are trademarks or registered trademarks of their respective companies.



To learn more about EVS go to www.evs.com