

TABLE OF CONTENTS

1. OVERVIEW	1
2. CARD EDGE CONTROLS.....	2
2.1. DETERMINING CURRENT IP ADDRESS SETTINGS.....	2
2.2. RESTORING FACTORY DEFAULTS.....	2
2.3. CARD EDGE LEDS.....	2
3. CONFIGURATION.....	3
3.1. CONFIGURATION STEPS.....	3
3.2. DEBUG/MONITOR PORT CONNECTION	3
3.3. MAIN MENU	5
3.4. NETWORK CONFIGURATION.....	5
3.5. SERIAL PORT SETUP	6
3.5.1. Parameters	6
3.5.2. Back Plate.....	7
3.5.3. RS-232 Wiring	8
3.5.4. RS-422 Wiring	9
3.6. PRO-BEL PROTOCOL SETUP	10
3.6.1. Refresh Cycle Count.....	10
3.6.2. Display ID Offset.....	10
3.6.3. UMD Text Selection.....	11
3.7. UNDER MONITOR DISPLAY SETUP	11
4. TROUBLESHOOTING TIPS.....	12
4.1. CHECKING PRO-BEL COMMUNICATION.....	12
4.2. CHECKING UMD COMMUNICATION.....	13
5. PERFORMING A FIRMWARE UPGRADE.....	14
5.1. FTP	14
5.2. SERIAL.....	14



Figures

Figure 1-1: Typical 7700PTX-PB Setup	1
Figure 2-1: PTX Card Edge	2
Figure 3-1: Upgrade Jumper	3
Figure 3-2: 'Connect To' Window	4
Figure 3-3: COM1 Properties	4
Figure 3-4: HyperTerminal Main Menu	5
Figure 3-5: 7700PTX Back Plate	7
Figure 3-6: RS-232 Pins	8
Figure 3-7: RS-422 Pins	9
Figure 3-8: UMD Peer Configuration	11
Figure 4-1: Pro-Bel Status	12
Figure 4-2: UMD Peer Status	13

Tables

Table 3-1: 7700PTX-PB Main Menu.....	5
Table 3-2: Serial Port Parameters	6
Table 3-3: RS-232 Wiring	8
Table 3-4: RS-422 Wiring	9
Table 3-5 : Device Number to Display ID Mapping	10
Table 3-6: UMD Text Selection	11

REVISION HISTORY

<u>REVISION</u>	<u>DESCRIPTION</u>	<u>DATE</u>
1.0	First Release	Apr 07
1.1	Updated card edge drawing	Nov 07

Information contained in this manual is believed to be accurate and reliable. However, Evertz assumes no responsibility for the use thereof nor for the rights of third parties, which may be effected in any way by the use thereof. Any representations in this document concerning performance of Evertz products are for informational use only and are not warranties of future performance, either express or implied. The only warranty offered by Evertz in relation to this product is the Evertz standard limited warranty, stated in the sales contract or order confirmation form.

Although every attempt has been made to accurately describe the features, installation and operation of this product in this manual, no warranty is granted nor liability assumed in relation to any errors or omissions unless specifically undertaken in the Evertz sales contract or order confirmation. Information contained in this manual is periodically updated and changes will be incorporated into subsequent editions. If you encounter an error, please notify Evertz Customer Service department. Evertz reserves the right, without notice or liability, to make changes in equipment design or specifications.

This page left intentionally blank

1. OVERVIEW

The 7700PTX-PB is a protocol translator that can accept, on any of its serial 4 serial ports, the Pro-Bel protocols SW-P-06 and SW-P-04. The 7700PTX-PB translates the Pro-Bel protocol to the Image Video protocol then transmits it over TCP to a UMD peer. Figure 1-1 shows how the 7700PTX-PB is typically set up.

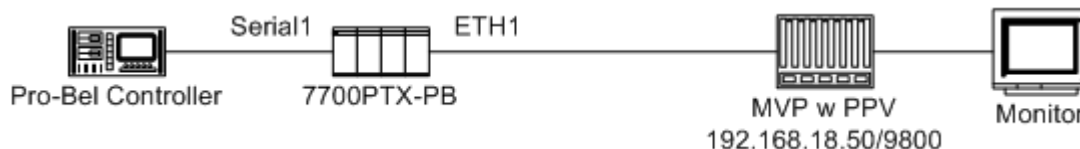


Figure 1-1: Typical 7700PTX-PB Setup

In this example, the Pro-Bel controller is connected to serial port 1 of the 7700PTX-PB. The 7700PTX-PB communicates with two PPVs distributed over two MVP chassis.

2. CARD EDGE CONTROLS

2.1. DETERMINING CURRENT IP ADDRESS SETTINGS

To read the current IP address during normal operation, press the toggle switch DOWN. The IP address can be read on the four-character alphanumeric display.

2.2. RESTORING FACTORY DEFAULTS

To restore all settings to factory defaults, apply power to the card while holding the toggle switch UP until the green LED is illuminated.

2.3. CARD EDGE LEDS

LED 22 is illuminated when Ethernet activity is detected.

All other card edge LEDs are for factory use only.

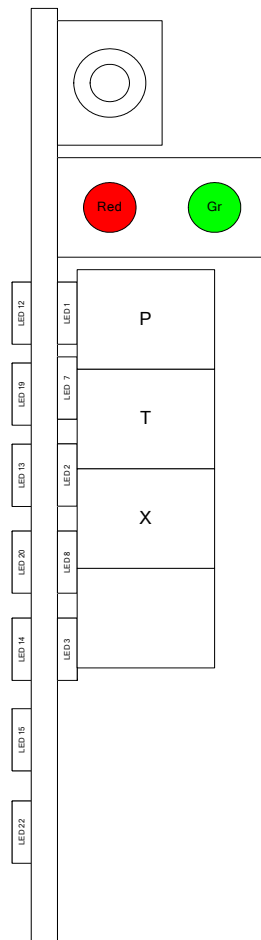


Figure 2-1: PTX Card Edge

3. CONFIGURATION

3.1. CONFIGURATION STEPS

The basic steps required to configure the 7700PTX-PB are as follows:

1. Connect a PC running a console application to the PTX debug/monitor port via the adapter cable.
2. Configure the network parameters of the 7700PTX-PB.
3. Configure the parameters of each serial port to match those of the connected Pro-Bel equipment.
4. Configure the Pro-Bel protocol parameters should changes to the defaults be required.
5. Configure the IP address and TCP port of the UMD peer(s).
6. Save all configuration parameters.
7. Power off the 7700PTX-PB.
8. Physically wire the serial port(s) of the 7700PTX-PB to the Pro-Bel equipment.
9. Power on the 7700PTX-PB.

3.2. DEBUG/MONITOR PORT CONNECTION

The 7700PTX-PB is configured via the debug/monitor port, the header of which is labelled J1. A special Evertz adapter cable allows this port to connect to the COM port of a personal computer. The following steps describe this procedure.

1. Locate the small, keyed, four-pin end of the upgrade cable provided by Evertz.
2. Connect it to the four-pin interface (J1) near the front of the 7700PTX, directly above the card unlock latch.

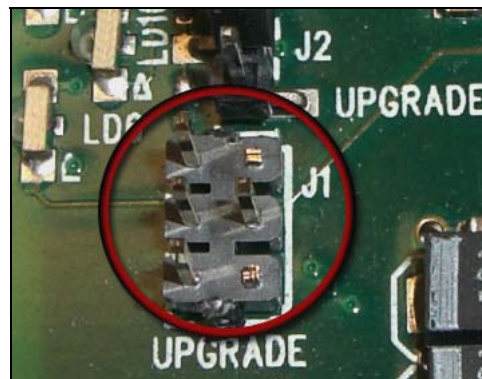


Figure 3-1: Upgrade Jumper

3. Connect the other end of the upgrade cable to a straight-through serial cable. Connect the serial cable to the serial or COM port of the computer.
4. Initiate HyperTerminal on your computer by selecting:
"Start\Programs\Accessories\Communications\HyperTerminal".
5. Enter a name for your connection, for example: PTX.
6. Press the <Enter> key. A new "Connect To" window opens.



Figure 3-2: 'Connect To' Window

7. Select COM1 for the “*Connect using*” setting. If COM1 is in use, choose an alternate COM port.
8. Press the <Enter> key or select OK. This opens the “*COM Properties*” window.

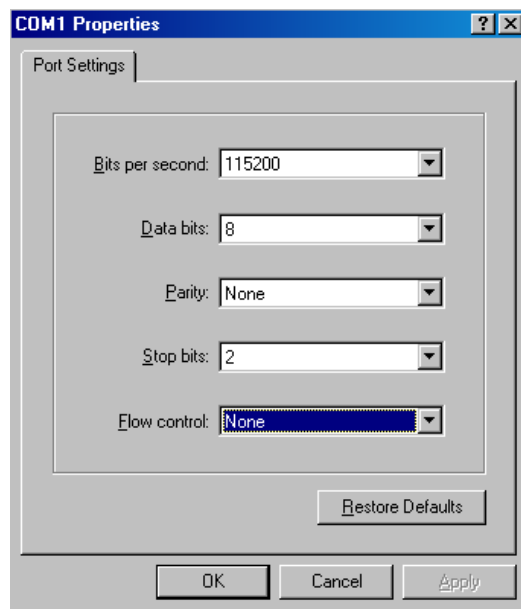


Figure 3-3: COM1 Properties

9. Enter the information as listed in the screen above.
10. Press the <Enter> key or select OK. The “*COM Properties*” window closes, leaving the HyperTerminal window open.
11. Apply power if the 7700PTX-PB does not have power. The boot sequence and *Main Menu* are displayed in the HyperTerminal window.
12. If the 7700PTX-PB has power, press the <Enter> key to view the 7700PTX-PB’s menu system.
13. Various 7700PTX-PB parameters are configurable via the 7700PTX-PB’s menu system, the root of which is called *Main Menu*.

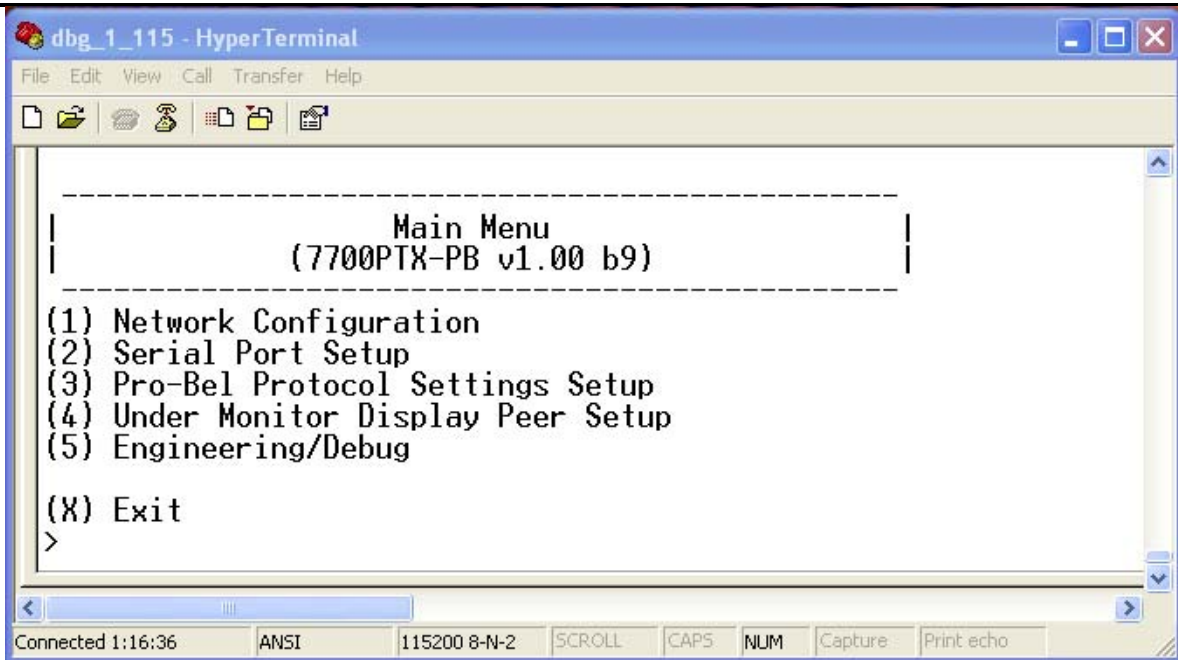


Figure 3-4: HyperTerminal Main Menu

3.3. MAIN MENU

Table 3-1 lists the entries available in the 7700PTX-PB's *Main Menu*.

Entry	Item	Notes
1	Network Configuration	IP address, subnet mask, gateway, etc.
2	Serial Port Setup	Baud rate, number of data bits, etc. of serial ports that are connected to Pro-Bel equipment.
3	Pro-Bel Protocol Settings Setup	Parameters pertaining to the Pro-Bel protocol.
4	Under Monitor Display Setup	IP address and TCP port of UMD peers.
5	Engineering/Debug	Used for troubleshooting.

Table 3-1: 7700PTX-PB Main Menu

3.4. NETWORK CONFIGURATION

1. From the *Main Menu* select *Network Configuration*.
2. If DHCP (Dynamic Host Configuration Protocol) is desired, then the *Use DHCP* field is set to *True*. Otherwise, the IP address, subnet mask, and gateway (if any) are set and the *Use DHCP* field is set to *False*.
3. Once the network settings are configured, select *Save* and *Exit* before exiting the *Network Configuration* to save the settings, otherwise select *Exit*.



The 7700PTX-PB must be rebooted for any network setting changes to take effect.

3.5. SERIAL PORT SETUP

3.5.1. Parameters

The 7700PTX-PB has 4 serial ports. The parameters associated with each serial port are listed in Table 3-2.

Parameter	Special Notes
Baud Rate	
Data Bits	
Parity	
Stop Bits	
Standard	For serial port 4, only RS-232 is valid.

Table 3-2: Serial Port Parameters



The serial port settings of the 7700PTX-PB must match those of the Pro-Bel equipment. The 7700PTX-PB must be rebooted for any serial parameter changes to take effect.

3.5.2. Back Plate

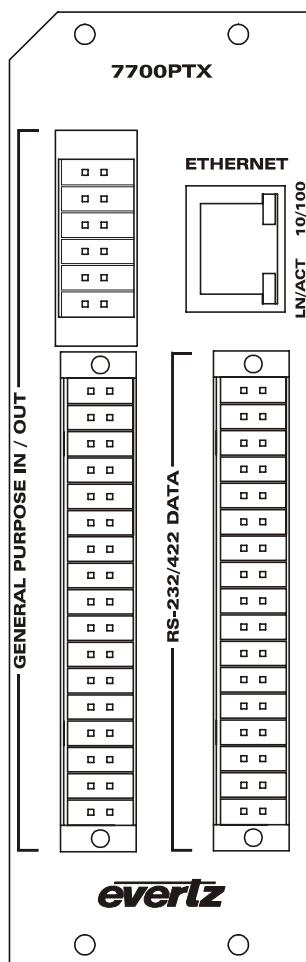


Figure 3-5: 7700PTX Back Plate

3.5.4. RS-422 Wiring

Figure 3-7 displays which pins of the back plate are used for RS-422 serial connections.

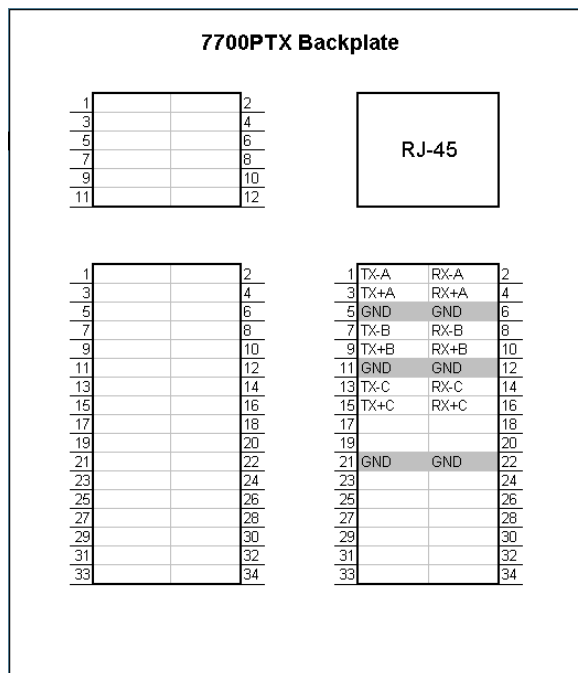


Figure 3-7: RS-422 Pins

Table 3-4 outlines how to connect the 7700PTX-PB to the Pro-Bel equipment for RS-422 operation.

7700PTX-PB			Pro-Bel Equipment
Port	Pin Name	Pin	Pin Name
1	TX-A	1	RX-
	TX+A	3	RX+
	RX-A	2	TX-
	RX+A	4	TX+
	GND	6	GND
2	TX-B	7	RX-
	TX+B	9	RX+
	RX-B	8	TX-
	RX+B	10	TX+
	GND	12	GND
3	TX-C	13	RX-
	TX+C	15	RX+
	RX-C	14	TX-
	RX+C	16	TX+
	GND	22	GND

Table 3-4: RS-422 Wiring



The 7700PTX-PB's fourth serial port is not RS-422 capable.

3.6. PRO-BEL PROTOCOL SETUP

3.6.1. Refresh Cycle Count

The Pro-Bel equipment will send protocol messages to the 7700PTX-PB on a continuous basis. There may not be any changes in the contents of these messages. A message count can be specified when, in the absence of changes, the 7700PTX-PB will refresh the PPV(s) UMD data. By default, this message cycle count is set to 50. Should the 7700PTX-PB need to refresh the PPV(s) more frequently a smaller count should be selected. Should the 7700PTX-PB need to refresh the PPV(s) less frequently a larger count should be selected.

3.6.2. Display ID Offset

This is the value added to Pro-Bel's device number to obtain the display ID which the 7700PTX-PB transmits to the PPV(s). Table 3-5 shows the default display ID offsets. Although 0 – 31 have been allocated, Pro-Bel control software currently uses device numbers 1 – 16.

Pro-Bel Device Number	Serial Port 1 (Offset = 0) Display ID	Serial Port 2 (Offset = 32) Display ID	Serial Port 3 (Offset = 64) Display ID	Serial Port 4 (Offset = 96) Display ID
0	0	32	64	96
1	1	33	65	97
2	2	34	66	98
3	3	35	67	99
4	4	36	68	100
5	5	37	69	101
6	6	38	70	102
7	7	38	71	103
8	8	40	72	104
9	9	41	73	105
10	10	42	74	106
11	11	43	75	107
12	12	44	76	108
13	13	45	77	109
14	14	46	78	110
15	15	47	79	111
16	16	48	80	112
17	17	49	81	113
18	18	50	82	114
19	19	51	83	115
20	20	52	84	116
21	21	53	85	117
22	22	54	86	118
23	23	55	87	119
24	24	56	88	120
25	25	57	89	121
26	26	58	90	122
27	27	59	91	123
28	28	60	92	124
29	29	61	93	125
30	30	62	94	126
31	31	63	95	127

Table 3-5 : Device Number to Display ID Mapping

3.6.3. UMD Text Selection

The setting permits the 7700PTX-PB to select only certain parts of the received UMD text.

Setting	Description
All characters	Use all characters of the received UMD text.
First 8 characters	Use only the first 8 characters of the received UMD text.
Last 8 characters	Use only the last 8 characters of the received UMD text

Table 3-6: UMD Text Selection

3.7. UNDER MONITOR DISPLAY SETUP

Suppose we have the setup of Figure 3-8

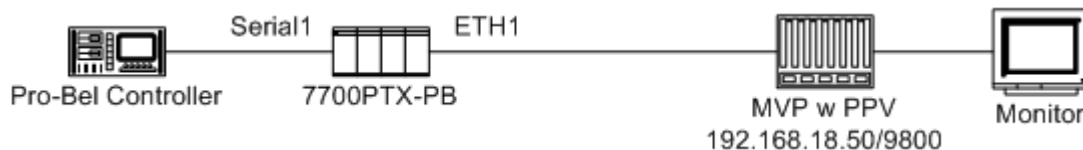


Figure 3-8: UMD Peer Configuration

Where:

- A Pro-Bel device is connected to Serial Port 1 of the 7700PTX-PB.
- The 7700PTX-PB communicates with a PPV with IP address 192.168.18.50, configured to listen for Image Video UMD data on TCP port 9800
- Via the debug console *Main Menu/Under Monitor Display Peer Setup/UMD Peer Setup via Ethernet 1*, configure peer 1 IP address as 192.168.18.50, and its TCP port as 9800.




The 7700PTX-PB must be rebooted for any UMD peer changes to take effect.

4. TROUBLESHOOTING TIPS

4.1. CHECKING PRO-BEL COMMUNICATION

1. From the *Main Menu* select *Engineering/Debug*.
2. Select *Show task statistics*.
3. There are four entries, one for each serial port, listed under the heading *router protocol PCB stats...* If the item *pk rx* is reported as a non-zero hexadecimal value then the 7700PTX-PB is receiving data from the Pro-Bel equipment. If it is consistently reported as 0x00000000 then the 7700PTX-PB is not receiving data from the Pro-Bel equipment. In this case the serial settings or wiring may be incorrect or the Pro-Bel equipment may not be configured properly.

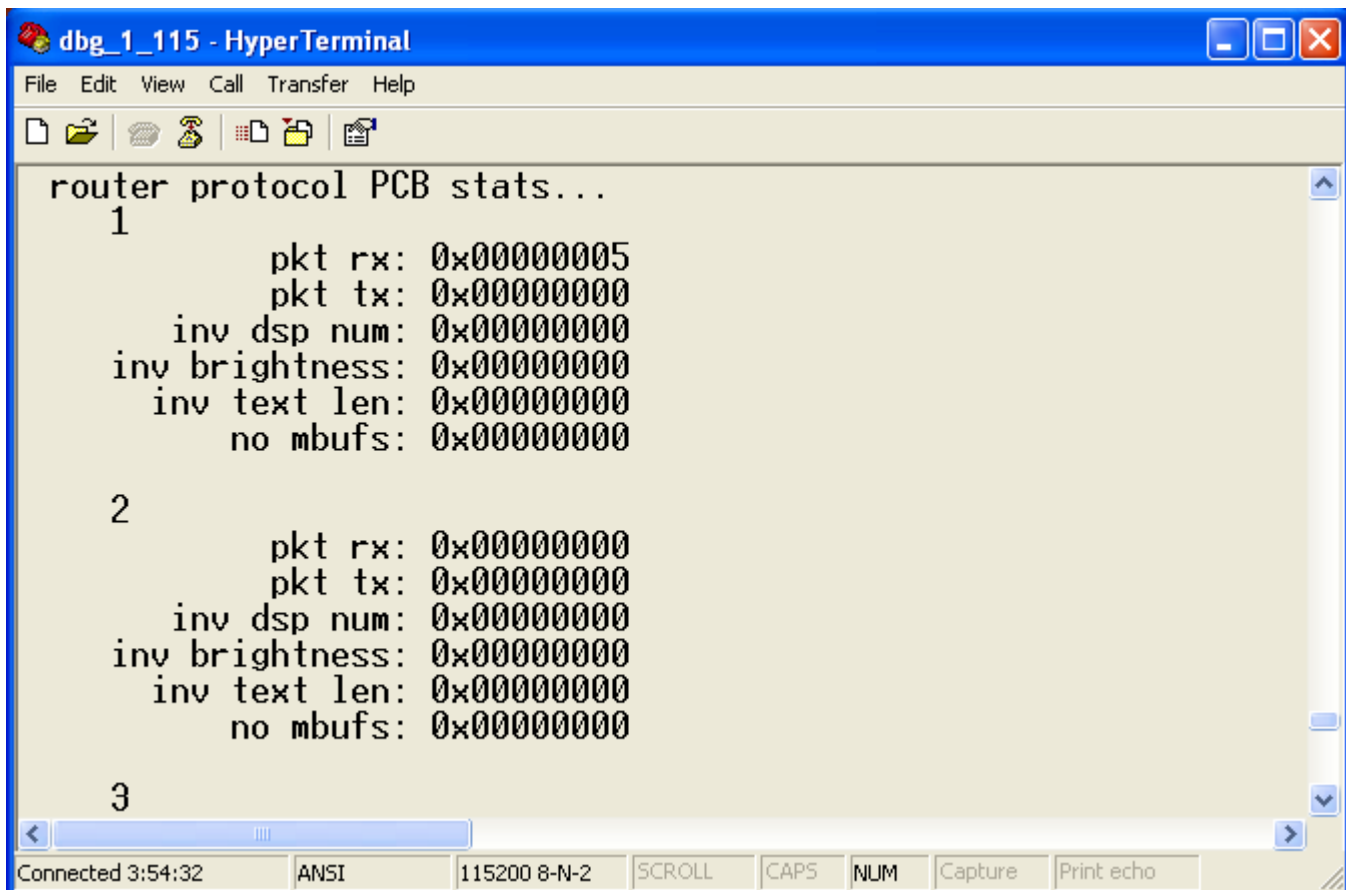

```
dbg_1_115 - HyperTerminal
File Edit View Call Transfer Help

router protocol PCB stats...
1
    pkt rx: 0x00000005
    pkt tx: 0x00000000
    inv dsp num: 0x00000000
    inv brightness: 0x00000000
    inv text len: 0x00000000
    no mbufs: 0x00000000

2
    pkt rx: 0x00000000
    pkt tx: 0x00000000
    inv dsp num: 0x00000000
    inv brightness: 0x00000000
    inv text len: 0x00000000
    no mbufs: 0x00000000


3
```

Connected 3:54:32 | ANSI | 115200 8-N-2 | SCROLL | CAPS | NUM | Capture | Print echo

Figure 4-1: Pro-Bel Status

4.2. CHECKING UMD COMMUNICATION

1. From the *Main Menu* select *Engineering/Debug*.
2. Select *Show task state*.
3. There are up to 12 UMD peer entries listed under the heading *UMD peer status...*. A status reported as *ready* indicates the 7700PTX-PB is able to communicate with that UMD peer. A status consistently reported as something other than *ready* indicates the inability of the 7700PTX-PB to communicate with that UMD peer. Be sure that the UMD peer has been rebooted after being configured to receive the Image Video over TCP.
4. Figure 4-2 shows that the 7700PTX-PB is able to communicate with the UMD peer whose IP address is 192.168.18.40 and who is listening on TCP port 9800.

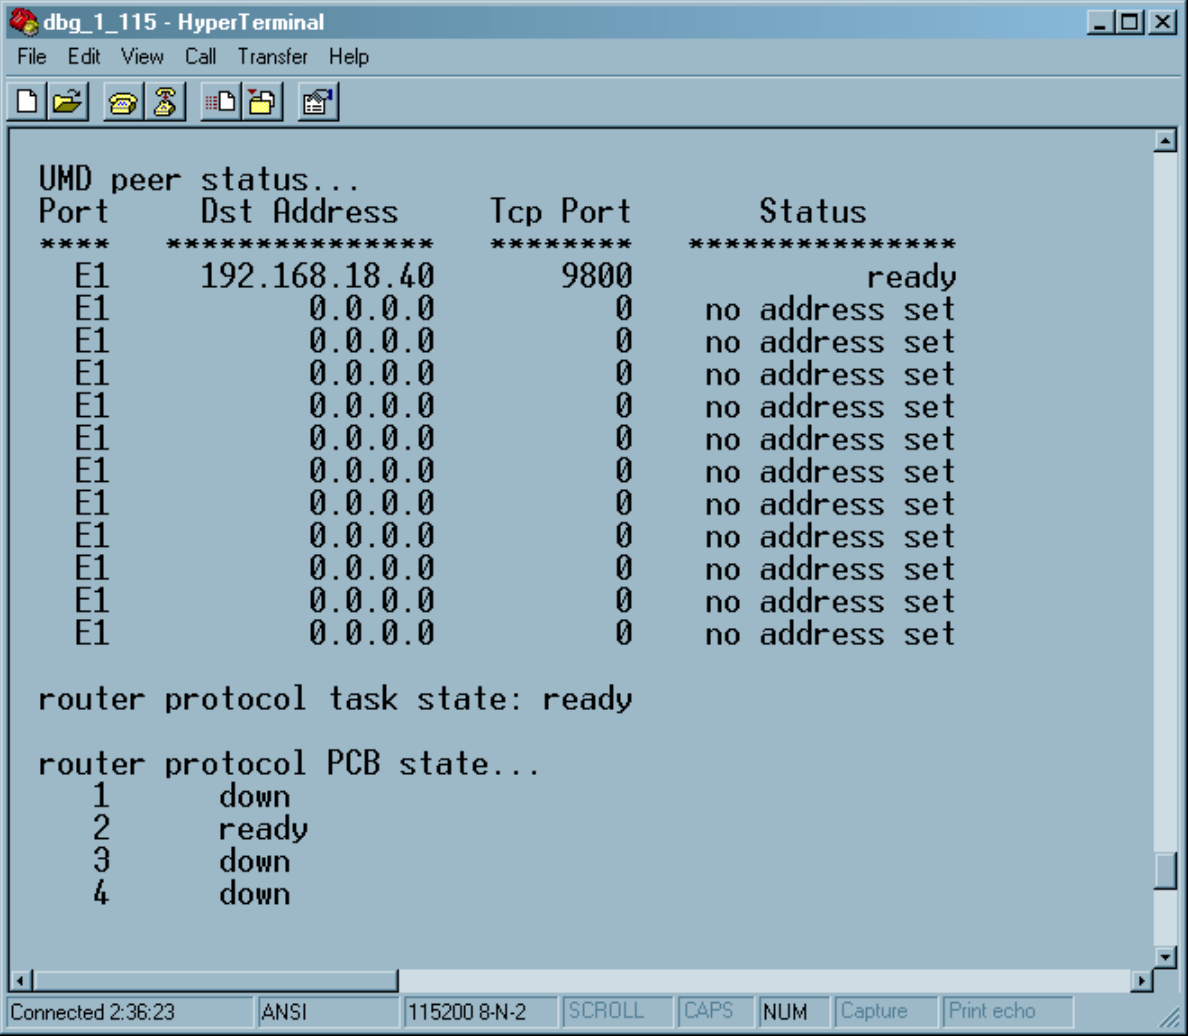

```

dbg_1_115 - HyperTerminal
File Edit View Call Transfer Help

UMD peer status...
Port      Dst Address      Tcp Port      Status
****      *****
E1        192.168.18.40    9800         ready
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set
E1        0.0.0.0          0            no address set

router protocol task state: ready

router protocol PCB state...
1        down
2        ready
3        down
4        down

Connected 2:36:23  ANSI  115200 8-N-2  SCROLL  CAPS  NUM  Capture  Print echo
  
```

Figure 4-2: UMD Peer Status

5. PERFORMING A FIRMWARE UPGRADE

There are two ways to upgrade PTX firmware:

1. Using FTP to perform the upgrade via TCP/IP. (*recommended procedure*)
2. Using a terminal application such as *HyperTerminal* to perform the upgrade via a serial connection.

5.1. FTP

1. Open a command prompt window (in Windows: Start/Programs/Accessories/Command Prompt)
2. Enter the location of the firmware file. For example, type `cd c:\temp`.
3. Enter the command `ftp` followed by the PTX IP address.
For example, type `ftp -A 192.168.18.22`.
4. Enter the FTP command `put` followed by the firmware file name. For example, `put ptx.bin`.
5. When the transfer is complete enter the FTP command: `bye`.
6. Step 5 begins the process of saving the firmware to the non-volatile flash of the PTX. The save process is displayed as a percentage on the PTX LCD. Once the process is complete, the PTX LCD again displays the product name and firmware version.
7. Power off the PTX.
8. Power on the PTX.

5.2. SERIAL

1. Power off the PTX.
2. Connect an adapter cable to a PC running a console or terminal application, such as Windows *HyperTerminal*, to the PTX debug/monitor port.
3. Configure the port settings of the terminal program as follows:

Baud	115200
Parity	no
Data bits	8
Stop bits	2
Flow Control	None

4. Set the PTX run/upgrade jumper to the upgrade position.
5. Power on the PTX.
6. After a few moments, the prompt `PPCBOOT>` will appear. Enter the command `upload`.
7. Start the firmware upload on the terminal Application (for instance, in *HyperTerminal* select Transfer/Send File...), use Xmodem as the transfer protocol, and select the firmware file. For example, `ptx.bin`.
8. Once the upload is complete the message `upload okay` is displayed.
9. Power off the PTX.
10. Set the PTX run/upgrade jumper to the run position.
11. Remove the serial adapter cable.
12. Power on the PTX.