


K2 Summit 3G Production Client Quick Start Guide

071-8873-00

October 12, 2012

Before you begin, unpack the following items.

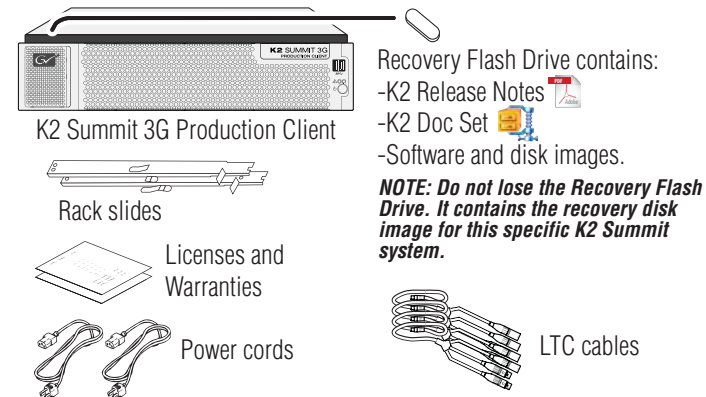

Locate the documentation you need on the Recovery Flash Drive or download from http://www.grassvalley.com/dl/k2_summit

Documentation path to install K2 Summit system with internal storage



Documentation path to install K2 Summit systems with SAN or direct-connect storage



*Cabling Guide packed with RAID primary chassis


1. Make cable connections

Standard bi-directional channels

Each channel (C1, C2, etc.) can be an input (record channel) or an output (play channel). Connect video/audio IN and OUT to each channel, as appropriate for your intended use.

1 Make SDI connections on each channel

Connections per channel (C1, C2, etc.)

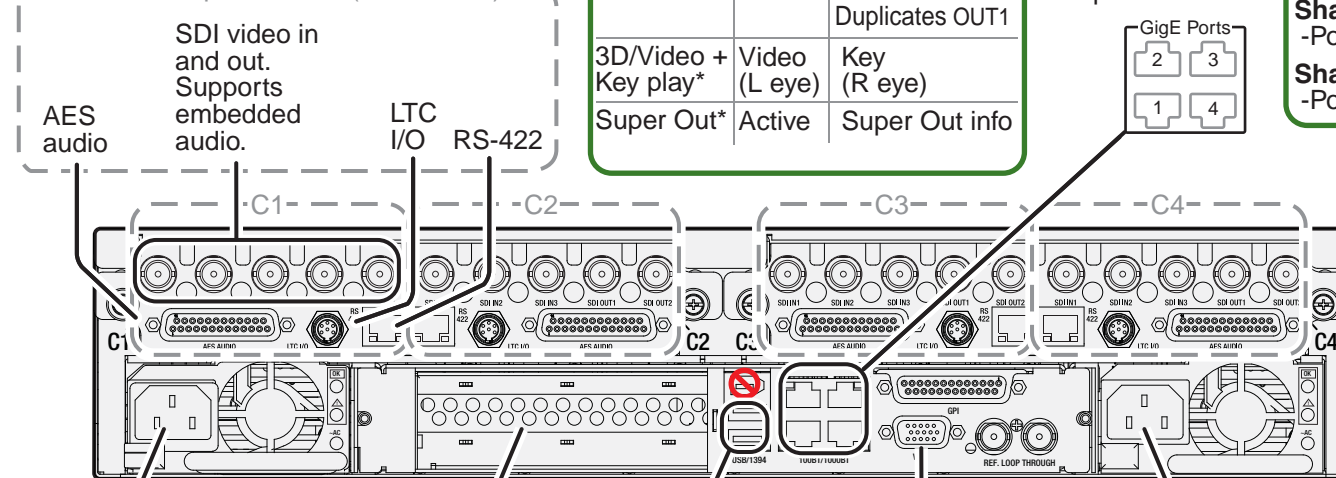


- Connect power cord
- Optional Fibre Channel card for connection to standalone direct-connect storage or shared Fibre Channel storage.
- Connect keyboard and mouse
- Connect VGA monitor
- Connect power cord

SDI connections

	IN1	IN2	IN3
Standard	Active		
Multi-Cam*	Video1	Video2	
3D/Video + Key record*	Video (L eye)	Key (R eye)	
Super Slo-Mo*	Phase1	Phase2	Phase3
	OUT1	OUT2	
Standard	Active	Active	Duplicates OUT1
3D/Video + Key play*	Video (L eye)	Key (R eye)	
Super Out*	Active	Super Out info	

- Connect network cables to Ethernet ports

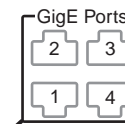

Ethernet cabling

Internal or direct-connect storage:
-Port 1 - Control network
-Port 2 - FTP/Streaming
-Ports 3 & 4 - Not used

Shared iSCSI storage basic:
-Port 1 - Control network
-Port 2 - Media (iSCSI) network

Shared iSCSI storage redundant:
-Port 1 & 4 - Control network
-Port 2 - Media (iSCSI) network A
-Port 3 - Media (iSCSI) network B

Shared FC storage basic:
-Port 1 - Control network

Shared FC storage redundant:
-Port 1 & 4 - Control network

*Some SDI connections require special licensing and configuration. Refer to the *K2 AppCenter User Manual*.

Make other connections as needed. Refer to the *K2 System Guide* for complete instructions.

2. Start up

- Before power on, take note of the chassis serial number, located behind the bezel/fan.
- Identify the Recovery Flash Drive, which is labeled with this unit's serial number. Make sure it remains stored with this specific unit.
- Replace the bezel/fan and identify the following:
Service LED, Standby switch, Power LED
- Press the standby switch to power on.
- Log on with the default Windows admin account:
-Username: Administrator
-Password: adminGV!
- On the Windows desktop, check the system tray. When the network icon indicates connectivity, the K2 Summit system is operational.

Normal startup sequence

Power LED goes on and stays on. Service LED stays off.

3. Configure network and, if necessary, storage

- Use SiteConfig as appropriate for your K2 system and on-site networking.

- Stand-alone internal or direct-connect storage** – Install SiteConfig on a control point PC, discover the K2 Summit Production Client, and configure network interfaces.
- Configure Control Team for the control network.
- If desired, configure Media Connection #1 for the FTP/Streaming network.
Refer to *K2 Release Notes* for instructions.

- Shared storage** – Configure network interfaces as instructed in the *K2 SAN Installation and Service Manual*.
- Configure network name resolution via host files or otherwise, as required by on-site networking. FTP/Streaming network hostnames must include “_he0” suffix.

- Configure storage as follows:

- Internal storage** – No storage configuration is necessary. Storage is pre-configured.
- Direct-connect storage** – Use Storage Utility to Bind RAID disks and make file system. Refer to the *K2 System Guide*.
- Shared storage** – Use the K2 System Configuration application to add the K2 Summit Production Client to the K2 SAN and configure it on the SAN. Refer to the *K2 SAN Installation and Service Manual*.

Default network settings


DHCP is enabled and the chassis serial number is the hostname.

Ethernet connection names

This rear panel GigE port...	Is named this in Windows Network Connections...
1	Control Team (Control Connection #1)
2	Media Connection #1
3	Media Connection #2
4	Control Team (Control Connection #2)

4. Configure channels


- Open AppCenter and logon with the administrator account (User Name=Administrator/Password=adminGV!). If a licensing message appears, refer to *K2 Release Notes*.

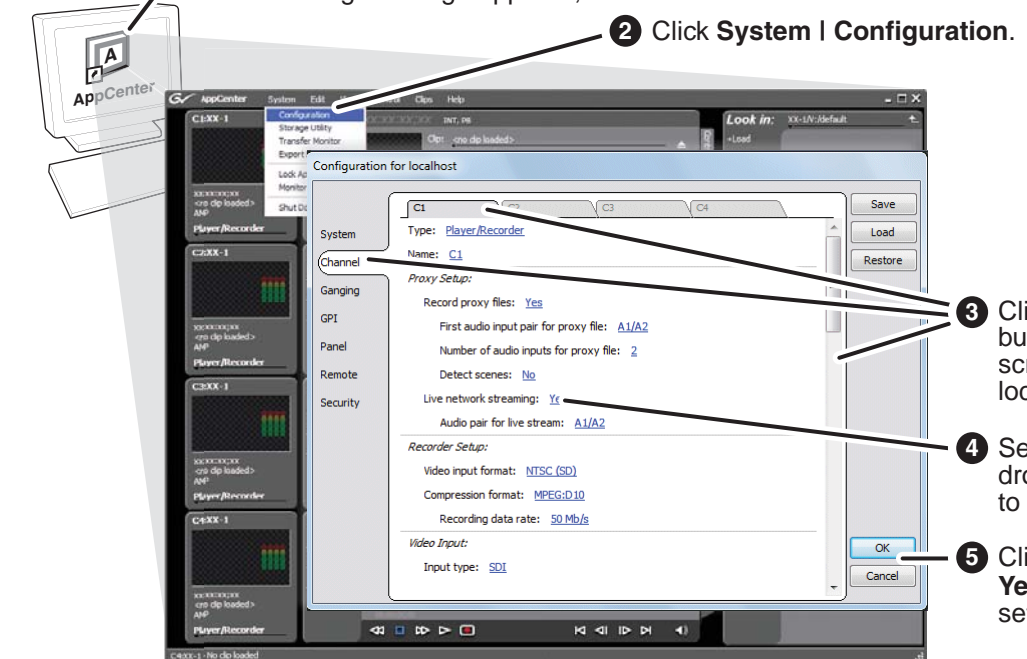


5. Record and play

Bi-directional channels

A channel becomes an input channel when you begin recording. The same channel becomes an output channel when you load a clip for playback.

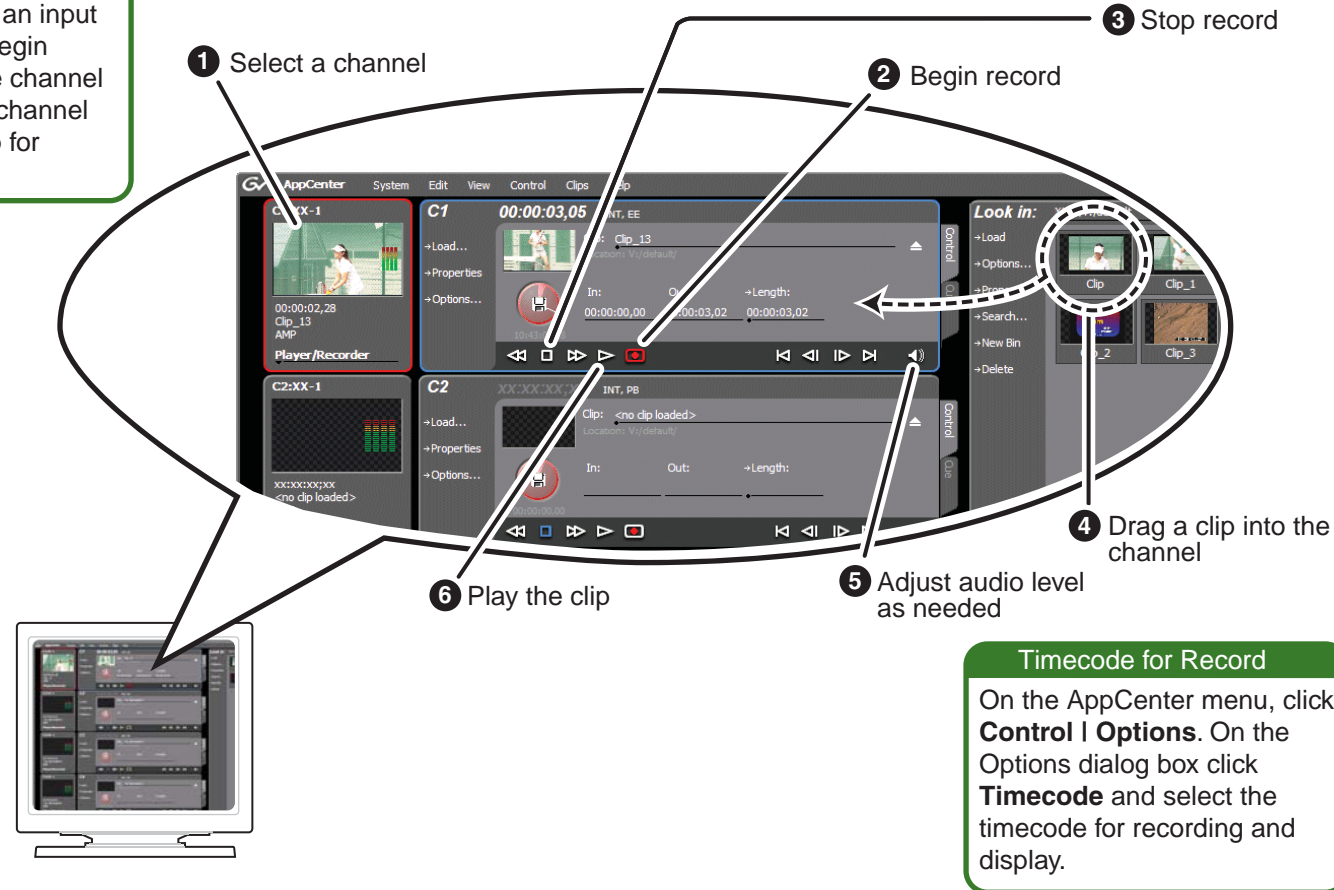


6. Create a playlist

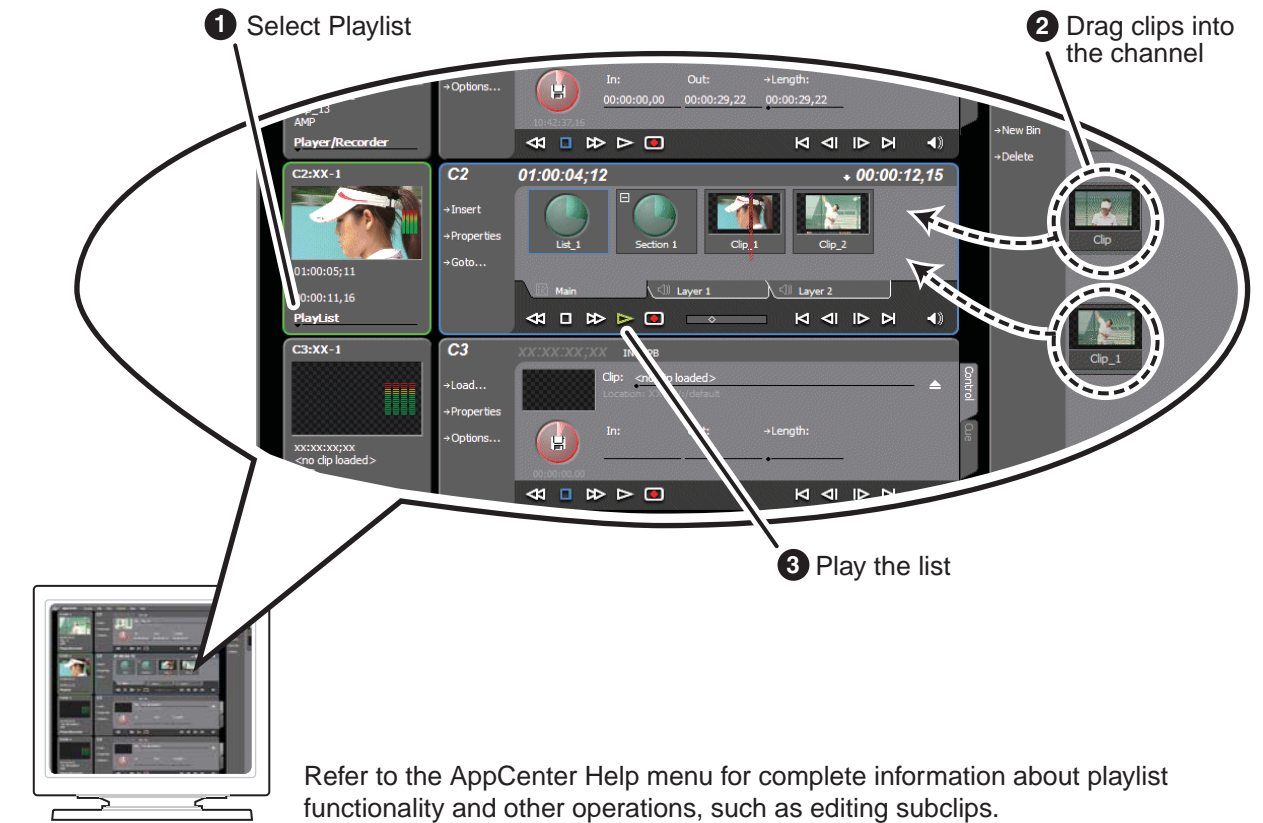

7. Monitor

Click **View | Video Monitor**

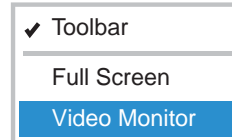


Video monitor support

The VGA resolution must be 1024 x 768 x 32 or greater to support live (moving) video monitoring.



8. For more information...


In AppCenter, click **Help | AppCenter Help Topics** and read the complete documentation for operating and configuring K2 Summit system channels.

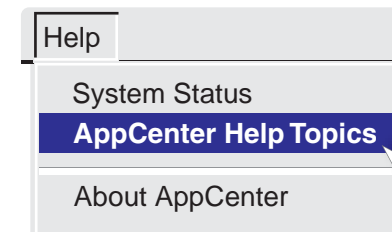

Go to <http://www.grassvalley.com/support> and find solutions to problems.



Find the complete documentation set for K2 products in the K2/STRATUS Doc Set zip file on the Recovery Flash Drive or by downloading from http://www.grassvalley.com/dl/k2_summit.

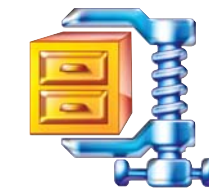

- User Guide
- System Guide
- Service Manual
- SAN Manual
- Cabling Guide



Use the following information to contact product support by phone during business hours. Afterhours phone support is available for warranty and contract customers.

North America	+800 547 8949 +1 530 478 4148
----------------------	----------------------------------

International – For local phone and email support go to: <http://www.grassvalley.com/support/contact>



Copyright © Grass Valley USA, LLC. All rights reserved.