



PESA

USER GUIDE



3GBPS COMPATIBLE DIGITAL VIDEO ROUTING SWITCHER





Thank You !! for purchasing your new PESA video router. We appreciate your confidence in our products. PESA produces quality, state-of-the-art equipment designed to deliver our users the highest degree of performance, dependability and versatility available anywhere. We want you to know that if you ever have a concern or problem with a PESA product, we have a team of engineers, technicians and customer service professionals available 24/7/365 to help resolve the issue.

Our commitment is to continue earning the trust and confidence of our customers throughout the industry by incorporating cutting-edge technology into the highest quality, most cost effective products on the market. And we would like to invite you to tell us how we're doing. If you have any comments or suggestions concerning your PESA equipment, please contact our Customer Service Department.

Again, thank you for choosing PESA and we look forward to a long-term partnership with you and your facility.

SALES, SERVICE AND ORDERING

ASSISTANCE

PESA Corporation
103 Quality Circle, Suite 210
Huntsville AL 35806 USA
www.pesa.com

MAIN OFFICE

Tel: 256.726.9200
Fax: 256.726.9271

SERVICE DEPARTMENT

Tel: 256.726.9222 (24/7)
Toll Free: 800.323.7372
Fax: 256.726.9268
Email: service@pesa.com

© 2012, 2011 PESA, All Rights Reserved.

Jaguar is a trademark of PESA Switching Systems in the United States and/or other countries.

Microsoft, Windows, and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

No part of this publication (including text, illustrations, tables, and charts) may be reproduced, stored in any retrieval system, or transmitted in any form or by any means, including but not limited to electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of PESA.

All information, illustrations, and specifications contained in this publication are based on the latest product information available at the time of publication approval. The right is reserved to make changes at any time without notice.

Printed in the United States of America.

TABLE OF CONTENTS

CHAPTER 1	INTRODUCTION	1-1
1.1	DESCRIPTION	1-1
1.2	FEATURES	1-2
1.3	SPECIFICATIONS	1-2
CHAPTER 2	SYSTEM ARCHITECTURE	2-1
2.1	A BRIEF INTRODUCTION TO THE JAGUAR 3 CONTROL SYSTEM	2-1
2.2	JAGUAR3 FRAME COMPONENTS	2-1
2.3	REAR PANEL LAYOUT	2-3
2.4	SYSTEM INTERCONNECTION	2-5
2.5	POWER SUPPLY/CONTROLLER MODULES	2-7
CHAPTER 3	INSTALLATION.....	3-1
3.1	MOUNT JAGUAR 3 ROUTER IN AN EQUIPMENT RACK	3-1
3.2	INSTALL REAR SUPPORT RAILS	3-2
3.3	EXTERNAL CONTROL SYSTEM CONNECTION.....	3-3
3.4	INTERNAL CONTROL SYSTEM CONNECTION.....	3-4
3.4.1	Jaguar3 Router – Closed Ethernet Loop Configurations	3-5
3.4.2	Integrate Jaguar3 Router Into Facility Network	3-6
3.5	VIDEO CONNECTIONS	3-8
3.6	SYNC REFERENCE CONNECTIONS	3-8
3.7	POWER CONNECTIONS	3-9
CHAPTER 4	OPERATION.....	4-1
4.1	OPERATING JAGUAR3 AS COMPONENT OF A PRC SYSTEM.....	4-1
4.2	PNET CONTROL PANELS – JAGUAR3 STAND-ALONE	4-1
4.3	INTRODUCTION TO PESA’S SWITCHING METHODOLOGY.....	4-2
4.4	PNET SWITCHING METHODS	4-3
4.4.1	All Levels Switch.....	4-3
4.4.2	Breakaway Switch.....	4-4
4.5	PNET SWITCHING MODES	4-4
4.5.1	Hot-Take Switching Mode	4-4
4.5.2	Preset Switching Mode.....	4-4
4.6	CONTROL PANEL CONFIGURATION.....	4-5
4.7	PNET PANEL - KEY FUNCTIONS	4-5
4.8	STATUS AND TALLY FUNCTIONS	4-6
4.8.1	Destination Status	4-7
4.8.2	Source Status	4-7
4.8.3	Switching Levels Status	4-7

TABLE OF CONTENTS (CONT.)

4.9	LOCAL CONTROL PANEL OPERATION	4-8
4.9.1	Performing a Hot-Take, All-Levels Switch	4-8
4.9.2	Hot-Take, Breakaway Switching	4-9
4.9.3	Performing a PRESET Switch	4-11
4.10	APPLYING DESTINATION PROTECT OR LOCK	4-12
CHAPTER 5	ROUTER CONTROL AND CONFIGURATION WITH CATTRAX	5-1
5.1	INTRODUCTION	5-1
5.2	INSTALL CATTRAX APPLICATION ON HOST PC	5-1
5.3	REMOVING CATTRAX INSTALLATION	5-3
5.4	CATTRAX CONTROL APPLICATION	5-3
5.5	NETWORK CONFIGURATION WITH CATTRAX	5-4
5.6	NAVIGATING THE CATTRAX ROUTER SCREENS	5-6
5.6.1	Devices View Window	5-6
5.6.2	Alarms and Events Window	5-7
5.7	JAGUAR3 ROUTER DEVICE PROPERTIES	5-7
5.8	PERC1500-JAG (JAGUAR 3) CONTROLLER DEVICE PROPERTIES DISPLAY	5-8
5.8.1	Setting Jaguar 3 Controller Network Parameters	5-8
5.9	JAGUAR3 STATUS DISPLAY	5-10
5.10	I/O BOARD MENUS	5-10
5.10.1	Status	5-10
5.10.2	Information	5-12
5.11	INTERNAL SYSTEM CONTROLLER (JAGUAR 3) MENUS	5-12
5.11.1	Jaguar 3 File Commands	5-12
5.11.2	Jaguar 3 Information Screen	5-13
5.12	JAGUAR 3 CONTROL MENU	5-14
5.12.1	Matrix Status	5-15
5.12.2	Matrix Preset	5-16
5.12.3	Panel Status	5-17
5.12.4	Salvo Status	5-18
5.12.5	Active/Standby	5-19
5.13	ROUTER CONFIGURATION	5-19
5.14	JAGUAR 3 CONTROLLER CONFIGURATION SCREENS – RIGHT MOUSE CLICK FUNCTIONS	5-21
5.14.1	Copy, Cut, Paste, Delete	5-21
5.14.2	Quick Data Entry Tools	5-21

TABLE OF CONTENTS (CONT.)

5.15	JAGUAR 3 CONTROLLER CONFIGURATION COMMANDS	5-25
5.15.1	System Parameters	5-25
5.15.2	Levels Configuration.....	5-28
5.15.3	Components Configuration.....	5-29
5.15.4	Sources	5-31
5.15.5	Destinations	5-34
5.15.6	Source-Destination (Dest) Blocks Configuration Screen	5-39
5.15.7	Salvo Groups Configuration Screen.....	5-40
5.15.8	Level Include Lists Configuration Screen	5-42
5.15.9	Data Key Lists Configuration Screen.....	5-42
5.15.10	Salvo, Source and Destination Include Lists Configuration Screens	5-45
5.15.11	Panels Configuration Screen.....	5-45
5.16	INCREMENTAL ADD/EDIT (ON-LINE UPDATE)	5-49
5.16.1	Using Online Update Mode	5-49
5.17	OFFLINE CONFIGURATION	5-52
5.18	INCLUDE LISTS FOR CATTRAX WEB INTERFACE.....	5-53
5.18.1	Level Include Lists	5-53
5.18.2	Salvo Include Lists	5-55
5.18.3	Source Include Lists	5-57
5.18.4	Destination Include Lists	5-58
CHAPTER 6	MAINTENANCE AND REPAIR.....	6-1
6.1	PERIODIC MAINTENANCE.....	6-1
6.2	PESA CUSTOMER SERVICE.....	6-1
6.3	REPAIR	6-1
6.4	REPLACEMENT PARTS	6-1
6.5	FACTORY SERVICE	6-1
6.6	SHIPPING INFORMATION	6-1

LIST OF FIGURES

FIGURE 1-1	JAGUAR3 VIDEO ROUTER – WITHOUT LOCAL CONTROL PANEL.....	1-2
FIGURE 2-1	FRAME COMPONENT LAYOUT (TYPICAL).....	2-2
FIGURE 2-2	REAR PANEL CONNECTIONS – PRC BUS INSTALLATION	2-3
FIGURE 2-3	REAR PANEL CONNECTIONS – JAGUAR3 STAND-ALONE PERC1500-JAG CONFIGURATION	2-3
FIGURE 2-4	TYPICAL INSTALLATION – 3500PRO CONTROLLER.....	2-5
FIGURE 2-5	TYPICAL INSTALLATION – PERC2000 CONTROLLER	2-5
FIGURE 2-6	- TYPICAL JAGUAR3 CLOSED LOOP INSTALLATION.....	2-6
FIGURE 2-7	TYPICAL JAGUAR3 NETWORK INSTALLATION	2-6
FIGURE 2-8	POWER SUPPLY/CONTROLLER MODULE (TYPICAL)	2-7

LIST OF FIGURES (CONT.)

FIGURE 3-1 REAR RACK RAIL KIT	3-2
FIGURE 3-2 CONTROL SYSTEM CONNECTION	3-4
FIGURE 3-3 SYSTEM CABLING – CLOSED ETHERNET LOOP	3-6
FIGURE 3-4 SYSTEM CABLING – NETWORK BASED JAGUAR3	3-7
FIGURE 3-5 JAGUAR3 VIDEO I/O CONNECTOR AND CHANNEL IDENTIFICATION	3-8
FIGURE 3-6 SYNC REFERENCE INPUTS	3-9
FIGURE 4-1 PNET CONTROL PANEL LAYOUT (EXCEPT P3232 PANEL)	4-5
FIGURE 4-2 PNET 3232 CONTROL PANEL LAYOUT	4-5
FIGURE 5-1 CATTRAX MAIN DISPLAY SCREEN	5-4
FIGURE 5-2 CATTRAX MAIN DISPLAY SCREEN	5-6
FIGURE 5-3 EXAMPLE DEVICES VIEW WINDOW	5-7
FIGURE 5-4 EXAMPLE ALARMS AND EVENTS SCREEN	5-7
FIGURE 5-5 EXAMPLE DEVICE PROPERTIES DISPLAY	5-8
FIGURE 5-6 EXAMPLE SYSTEM CONTROLLER DEVICE PROPERTIES DISPLAY	5-9
FIGURE 5-7 SYSTEM CONTROLLER DEVICE PROPERTIES	5-9
FIGURE 5-8 STATUS DISPLAY TEXT BOXES	5-10
FIGURE 5-9 I/O BOARD STATUS DISPLAY TEXT BOXES	5-11
FIGURE 5-10 OUTPUT LOCK RATE PULLDOWN	5-11
FIGURE 5-11 I/O BOARD INFORMATION DISPLAY	5-12
FIGURE 5-12 SYSTEM CONTROLLER MENU TREE COMMANDS	5-12
FIGURE 5-13 CONTROLLER FILE COMMANDS	5-13
FIGURE 5-14 EXAMPLE INFORMATION DISPLAY SCREEN	5-14
FIGURE 5-15 MATRIX STATUS DISPLAY	5-15
FIGURE 5-16 MATRIX PRESET DISPLAY	5-16
FIGURE 5-17 PANEL STATUS DISPLAY	5-17
FIGURE 5-18 SALVO STATUS DISPLAY	5-18
FIGURE 5-19 ACTIVE/STANDBY MENU SCREEN	5-19
FIGURE 5-20 TYPICAL RIGHT-CLICK MOUSE COMMANDS	5-21
FIGURE 5-21 SYSTEM PARAMETERS SCREEN	5-25
FIGURE 5-22 LEVELS CONFIGURATION SCREEN	5-28
FIGURE 5-23 COMPONENTS CONFIGURATION SCREEN	5-30
FIGURE 5-24 SOURCES CONFIGURATION SCREEN	5-32
FIGURE 5-25 DESTINATIONS CONFIGURATION SCREEN	5-35
FIGURE 5-26 SOURCE-DESTINATION BLOCK DISPLAY	5-39
FIGURE 5-27 SALVO GROUPS CONFIGURATION SCREEN	5-40
FIGURE 5-28 DATA KEY LISTS CONFIGURATION SCREEN	5-42
FIGURE 5-29 DATA KEY FUNCTION ASSIGNMENT	5-44
FIGURE 5-30 PANELS CONFIGURATION SCREEN	5-45
FIGURE 5-31 ADDING A PANEL CONFIGURATION	5-46
FIGURE 5-32 UPDATE MODE SELECTOR	5-49

LIST OF FIGURES (CONT.)

FIGURE 5-33 ONLINE UPDATE DISPLAY WINDOW	5-50
FIGURE 5-34 ONLINE UPDATE DATA ENTRY	5-51
FIGURE 5-35 OFFLINE CONFIGURATION ICON LOCATIONS.....	5-52
FIGURE 5-36 INITIAL OFFLINE CONFIGURATION SCREEN.....	5-52
FIGURE 5-37 LEVEL INCLUDE LISTS CONFIGURATION SCREEN.....	5-54
FIGURE 5-38 LEVEL INCLUDE LIST DATA ENTRY	5-55
FIGURE 5-39 SALVO INCLUDE LISTS CONFIGURATION SCREEN	5-56
FIGURE 5-40 SOURCE INCLUDE LISTS CONFIGURATION SCREEN	5-57
FIGURE 5-41 SOURCE INCLUDE LISTS DATA ENTRY FIELDS	5-58
FIGURE 5-42 DESTINATION INCLUDE LISTS CONFIGURATION SCREEN.....	5-59
FIGURE 5-43 DESTINATION INCLUDE LISTS DATA ENTRY FIELDS.....	5-60

LIST OF TABLES

TABLE 5-1 AVAILABLE ONLINE UPDATE COMMANDS	5-50
--	------

Chapter 1 Introduction

1.1 DESCRIPTION

PESA's Jaguar3 is a compact, versatile digital video router, compatible with SDI signals up to 3Gbps, 1080p resolution. Housed in a 2RU frame, the Jaguar3 is available in 64 input, 64 output or 32 input, 32 output configurations. Two available control options allow the Jaguar3 to either be incorporated as a component of a multi-frame PESA router system installation; or installed as a stand-alone router, when equipped with the available internal system controller.

When installed as a component of a multi-frame router system, or added to an existing PESA router system, Jaguar3 can communicate with either a 3500PRO or PERC2000 System Controller, as a common controller for all router components. Operator interface with the Jaguar3 is unified with other system components through various remote control panels, devices or applications. An interface cable is provided to adapt the 9-pin RS-422 PRC bus connector to the PRC connector on the Jaguar3 rear panel.

Equipping the Jaguar3 with the available PERC1500-JAG System Controller (P1500-J) capability incorporates the system controller function with the video frame creating a versatile, self-contained router system. Jaguar3 systems with P1500-J capability are fully network compatible, and can communicate with PNet remote control panels, a control software application and other system components over an Ethernet interface; or you may choose to install the router in a totally stand-alone configuration using only a local control panel on the video router frame and a pre-defined, factory programmed operating configuration.

Operator interface with the stand-alone Jaguar3 is through PESA Ethernet-based PNet remote control panels or PESA's Catrax Web control application. One PNet 2RU panel may be installed as a local control panel in place of the standard front cover; a total of up to 80 PNet panels may be interfaced to the PERC1500-JAG controller. In addition to the video router and control panels, the PERC1500-JAG can provide control functions to a stand-alone DRS (DRS-SA) audio router, thereby creating a full-featured video/audio routing system.

Configuration and monitoring functions for the P1500-J controller are performed through operator screens of PESA's Catrax software control application installed on a host PC. Through Catrax you can modify existing, or create any number of special application configuration files that can be easily loaded to the system controller allowing you to change the entire router set-up for specific application requirements in a matter of minutes. When a DRS-SA audio router is present in the system, Catrax allows you to access a full range of digital audio processing tools, including audio test tones, that can be selectively applied to any input or output channel of the audio router frame. Router status, test and monitoring functions are also available through Catrax.

Figure 1-1 illustrates the front of a Jaguar 3 video router without a local control panel attached.



Figure 1-1 Jaguar3 Video Router – Without Local Control Panel

1.2 FEATURES

- 2RU Frame supports 64 Inputs and 64 Outputs
- Available as 64X64 or 32X32
- Auto-EQ on all inputs and Auto Re-clocking on all outputs
- Supports SMPTE 259M, SMPTE 292M and SMPTE 424M to 3Gbps
- Compatible with PESA's 3500PRO and PERC2000 system controllers and the full line of Cheetah remote control panels
- Compatible with external controllers and protocol converters using PESA's P1 interface.
- May be integrated into an existing PESA routing system
- Use stand-alone with PESA's internal small-scale controller

1.3 SPECIFICATIONS

Digital Video Specifications

INPUTS/OUTPUTS

Number	32 or 64
Type	Standard 75 Ohm, self-terminating, unbalanced BNCs with auto-EQ. conforming to SMPTE259M, SMPTE292M and SMPTE424M.
Return Loss	≥15dB 1MHz to 1.5GHz; ≥10dB, 1.5GHz to 3GHz.
Equalization	300m auto-equalization Belden 1694A or equivalent at 270Mbps.; 100m auto-equalization Belden 1694A or equivalent at 1.5Gbps; 80m auto-equalization Belden 1694A or equivalent at 3Gbps
Level	800mVpp, ±10%

SIGNAL SPECIFICATIONS

Rise/Fall	$\leq 600\text{ps} \pm 10\%$ SD SMPTE259M; $\leq 270\text{ps}$ HD SMPTE292M; $\leq 135\text{ps}$ 3G SMPTE424M.
Overshoot	$\leq 10\%$ of amplitude max.
Alignment Jitter	≤ 0.2 UI from 100kHz to 150MHz SMPTE259M or SMPTE292M; ≤ 0.3 UI from 150MHz to 300MHz SMPTE424M.
Timing Jitter	≤ 1.0 UI from 10Hz to 100kHz SMPTE259M or SMPTE292M; ≤ 2.0 UI from 10Hz to 100kHz SMPTE424M.
Reference Inputs	Two independent 75 ohm BNC connectors, 0.5Vpp to 2.0Vpp; PAL, NTSC or Tri-Level sync.
Data Rates	143Mbps to 3Gbps

Environmental & Miscellaneous

Form Factor	2RU
Control	Internal controller supports PESA P-Net Ethernet-based control panels Supports single-bus, multi-bus and XY control panels, using external system controller.
(Serial 422 PRC I/F)	4-wire, full duplex, multi-drop, serial RS422 port capable of accepting PESA PRC control protocol.
AC Input Connections	IEC 320C6 socket (accepts IEC 320 C5 line cord)
Input Voltage	90-260 VAC, 47-63Hz
Operational Temp	0-40 degrees C
Operational Humidity	90% Non-condensing

Chapter 2 System Architecture

2.1 A BRIEF INTRODUCTION TO THE JAGUAR 3 CONTROL SYSTEM

PESA routers, regardless of matrix size or signal type, require a *system controller* function communicating with the router for coordinated operation of the switch matrix, signal processing and other router circuitry. In PESA system architecture, the system controller typically refers collectively to a physical hardware device, the on-board operating firmware and a software control application. Depending on the router and the installation, the system controller device may be resident in a router chassis or located external to it.

Many switching applications incorporate multiple router frames to provide the needed I/O capacity or to switch signals of different format or type within the installation. The entire system is controlled by a common system controller device such as PESA's PERC2000 or 3500PRO, communicating over a proprietary bus protocol called the PESA Routing Control (PRC) bus, that orchestrates operation of the various system components as a unified system. In most router installations there is only one system controller, or two in a system with redundant control capability.

The Jaguar 3 router contains internal control circuitry that allows it to seamlessly integrate into an existing PESA router installation as a component of a multi-frame router installation and communicate with an external system controller (PERC2000 or 3500PRO) through the PRC bus interface connector located on the rear panel. It may also be used as a self-contained, stand-alone router when equipped with the available PERC1500-JAG system controller capability. When equipped for stand-alone operation, the P1500-JAG controller resides in the Jaguar 3 router frame. A PRC-only Jaguar 3 router may be in-field upgraded to incorporate P1500-JAG controller capability and allow the router to function stand-alone.

In order for any system controller to operate, whether external or internal to the router frame, a *configuration file* must be loaded into non-volatile memory on-board the controller device. This file contains programming data for actual signal switching functions of the router system, such as signal input/output assignments, signal names and aliases, switching levels, components and other special router functions. Control panel programming data is also contained in the controller configuration file.

Control and monitoring of a stand-alone Jaguar3 router, as well as creation and modification of configuration files for the P1500-JAG controller, are performed through user screens and menus of PESA's Catrax software control application installed on a Windows™ based PC that serves as a "host" computer for the router installation. Through user input and design, configuration files define all operational aspects for the Jaguar 3. Once created, a configuration file can be stored, edited or downloaded to the P1500-JAG controller device.

2.2 JAGUAR3 FRAME COMPONENTS

A front view illustration of a typical Jaguar3 router frame, equipped with a local control panel, showing location of key components is shown by Figure 2-1. Removing the front cover provides access to the video router boards; primary and, if equipped, secondary power supply/controller modules; and rear panel of the local control panel, if installed.

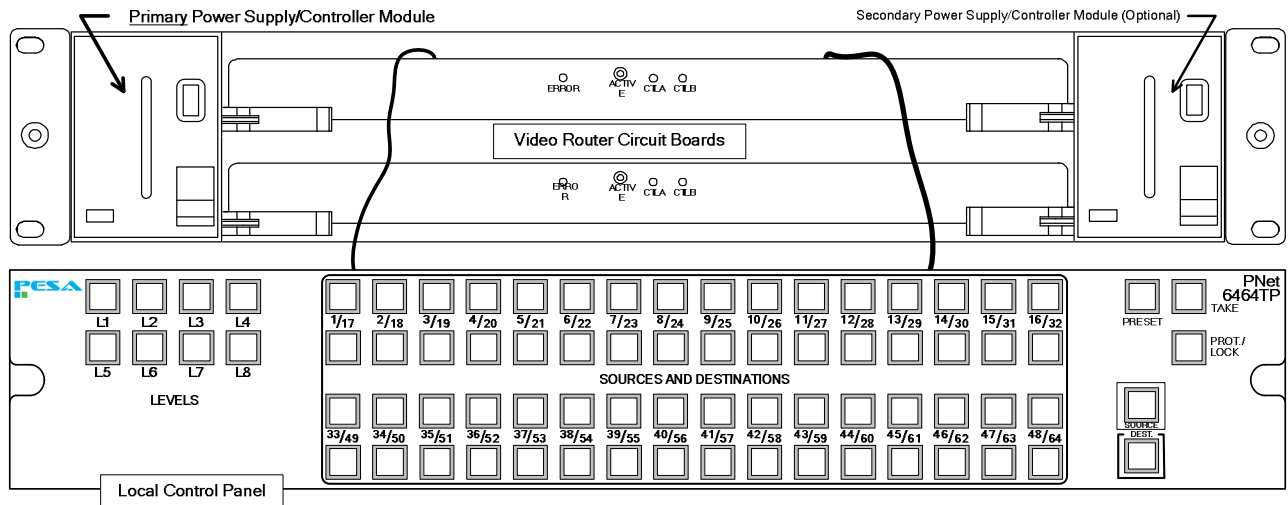


Figure 2-1 Frame Component Layout (Typical)

With all Jaguar3 applications, a minimum of one power supply/controller module is required – installed in the primary power supply module slot. A second power supply/controller module may be installed in the secondary slot for power redundancy. Each Jaguar3 power supply/controller module contains cooling fans for the chassis and a fan controller circuit that monitors and controls operation of the fans.

For stand-alone configuration, the Jaguar3 video frame is equipped with a power supply/controller module supporting the Jaguar-specific P1500-JAG system controller capability installed in the primary power supply module slot. This module combines functions of system controller and power supply into a single removable unit. The system controller (P1500-JAG capability) oversees operation of the router and communicates with other system components through an Ethernet interface. One power supply/controller module is required per system; a second module may be installed at any time, using the secondary slot, to add full redundant power and control capability.

In PRC or stand-alone configurations, video switching and interface circuitry is contained on the Video Router Circuit Board. In addition, the board is equipped with front edge status lights that provide a visual indication of the active system controller and system errors. The board also provides power and dedicated Ethernet connection points for a local control panel.

A local control panel may be installed in place of the front cover **only** on stand-alone Jaguar3 frames with the internal PERC1500-JAG controller capability. Any standard 2RU PNet remote control panel may be used as a local panel. When a PNet panel is attached to the router, power for the panel is derived from the frame power supply, and a dedicated Ethernet interface port is provided on the router rear panel.

2.3 REAR PANEL LAYOUT

Rear panel layout is the same for both PRC and P1500-J stand-alone Jaguar3 routers, the active connectors, however, differ by application.

Rear panel connections used when installing the Jaguar3 to an external system controller over the PRC bus interface are shown by Figure 2-2, and connections used when installing the router as a stand-alone device using the P1500-J controller and Ethernet connectivity between system components are shown by Figure 2-3. A brief introduction to the function of each connector is presented in the following paragraphs.

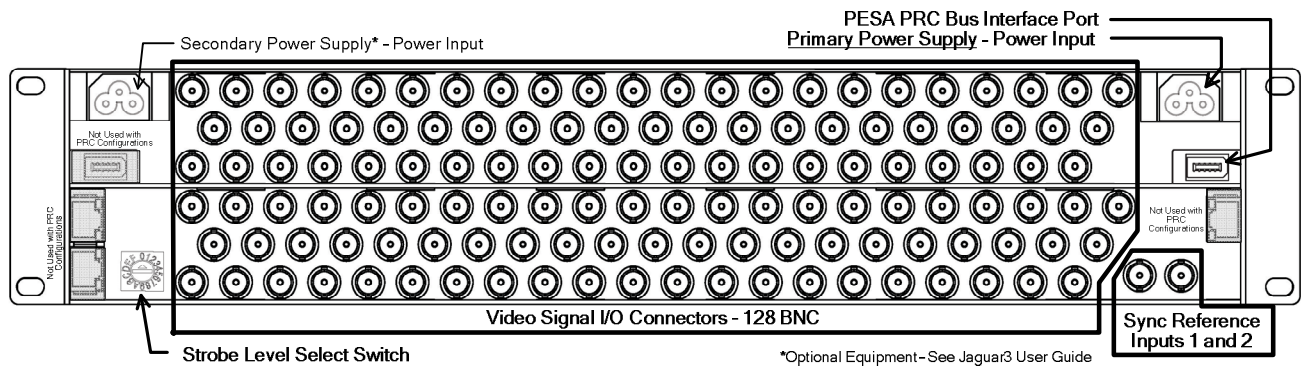


Figure 2-2 Rear Panel Connections – PRC Bus Installation

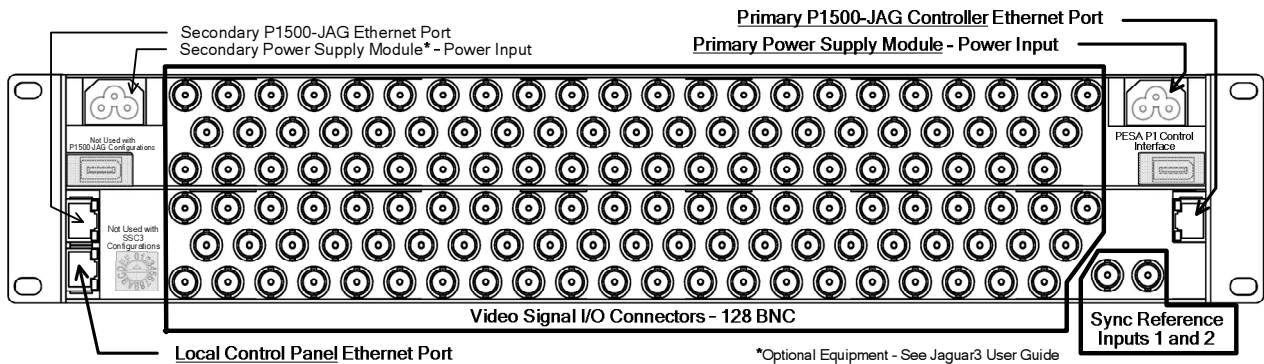


Figure 2-3 Rear Panel Connections – Jaguar3 Stand-Alone PERC1500-JAG Configuration

PESA Routing Control (PRC) Bus Interface Port - Location of the PRC port is shown by Figure 2-2. In PRC Bus systems, this port is the interface connection between the Jaguar3 router and an external 3500PRO or PERC2000 System Controller. An adaptor cable is provided to connect the port connector on the Jaguar3 rear panel to the 9-pin “D” system controller PRC connector.

Ethernet Connection Ports – With stand-alone PERC1500-JAG configuration systems, there are two rear panel RJ45 connectors that interface system controller circuitry internal to the video router to an Ethernet communication port. These are located on each side of the Jaguar3 rear panel, and they are module slot specific, as shown by Figure 2-3. Viewed from the rear, the connector on the right-hand side of the router is the Ethernet port for the controller installed in the primary controller slot, and the left-hand connector is the port for the secondary slot. Connection is through standard Cat5x cable; LEDs on the connector indicate communication activity.

Sync Reference Connectors - There are two BNC connectors on the rear panel for connecting up to two independent sources of sync reference to the Jaguar3. Sync source applied to Input 1 connector is defined as the default sync source. Both inputs are self-terminating. Through controller configuration, either input may be defined as the sync reference source for any router output.

Strobe Level Select Switch – When the Jaguar3 is installed as a component router under command of an external system controller, the frame must be assigned a strobe level within the system, using the Strobe Level Select Switch, Figure 2-2. Any strobe level between 1 and 15 may be selected by rotating the switch to the hexadecimal digit for the desired level setting. To set the router as strobe level 1, set the switch to position 1; to set level 15, set the switch to position F, etc.

Power Cord Connector Access - Each power supply/controller module is fitted into a chassis slot (either slot 1 or slot 2). When a power supply is installed, its 3-prong input power receptacle is accessible through this opening on the frame rear panel. Each power supply carries its own dedicated power receptacle; input power is not bussed between modules. When two power supplies are used (for redundancy) a separate power cord must be attached to each receptacle through its access port. Each access port is equipped with a harness device that secures the cord to help prevent accidentally disconnecting the frame from its power source. Jaguar3 typically ships from the factory with power cord and securing harness pre-installed.

If you need to a remove power cord for any reason, loosen thumb screw on cord harness and pull cord from its mating connector.

Replace cord by aligning mating connectors, firmly seat connector and secure cord with harness and thumb screw.

For personal safety, do not remove power cord while connected to a power source.

Local Control Panel Ethernet Port – With stand-alone PERC1500-JAG installations equipped with a local control panel in place of the front cover, this RJ45 connector, Figure 2-3, is the dedicated access port for directly connecting the local PNet control panel to an Ethernet interface. Connection is through a standard RJ45 connector for use with Cat5x cable. LEDs on connector indicate communication activity.

Video Signal I/O Connectors - 128 BNC connectors for connecting 64 video input signals and 64 output destinations to the Jaguar3 router. 32x32 systems use the 64 BNC connectors located on the lower rear panel board for I/O signal connection.

2.4 SYSTEM INTERCONNECTION

If used as a component of an installation with other PESA routers, such as a Cheetah video matrix router, the controller for the entire router system, either the PESA 3500PRO or PERC2000 System Controller, controls the Jaguar3 router through the proprietary PESA Routing Control (PRC) communication bus. Typical installations are shown pictorially by Figure 2-4-for the 3500PRO controller and Figure 2-5 for the PERC2000 controller.

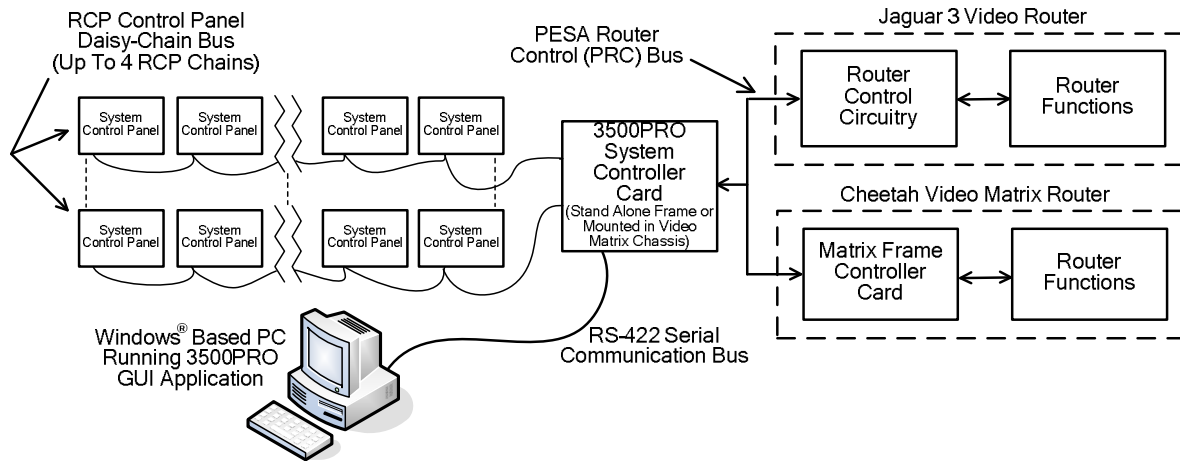


Figure 2-4 Typical Installation – 3500PRO Controller

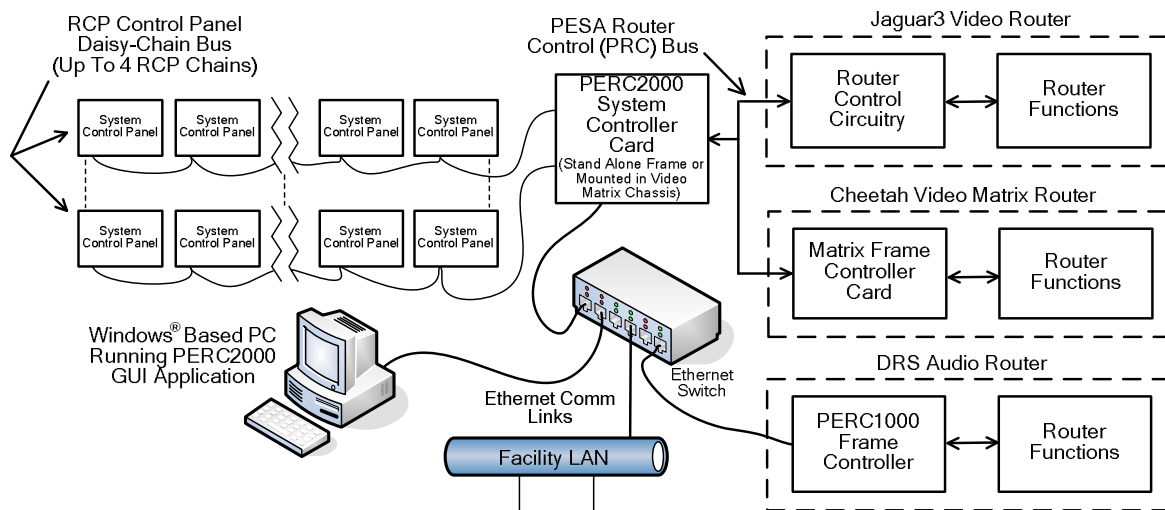


Figure 2-5 Typical Installation – PERC2000 Controller

When used as a stand-alone router, the Jaguar3 router is equipped with an internal controller supporting PESA's P1500-JAG System Controller capability, and communicates over an Ethernet link with a host PC running PESA's Catrax software control application. Operator screens and menus in Catrax allow you to configure and monitor all aspects of the Jaguar3 router through the system controller.

Depending on the application, Jaguar3 system components can communicate over an Ethernet interface configured as a closed Ethernet communication loop established directly between devices through an Ethernet switch; or Ethernet communication may be established over a network.

Figure 2-6 pictorially illustrates a Jaguar3 system interconnected through a closed Ethernet communication loop established using an Ethernet switch device. In this application, no component of the router installation is connected to the facility network. Figure 2-7 illustrates the same components in a network installation. In this application, every router component can be directly connected to the network, and use of the Ethernet switch is optional.

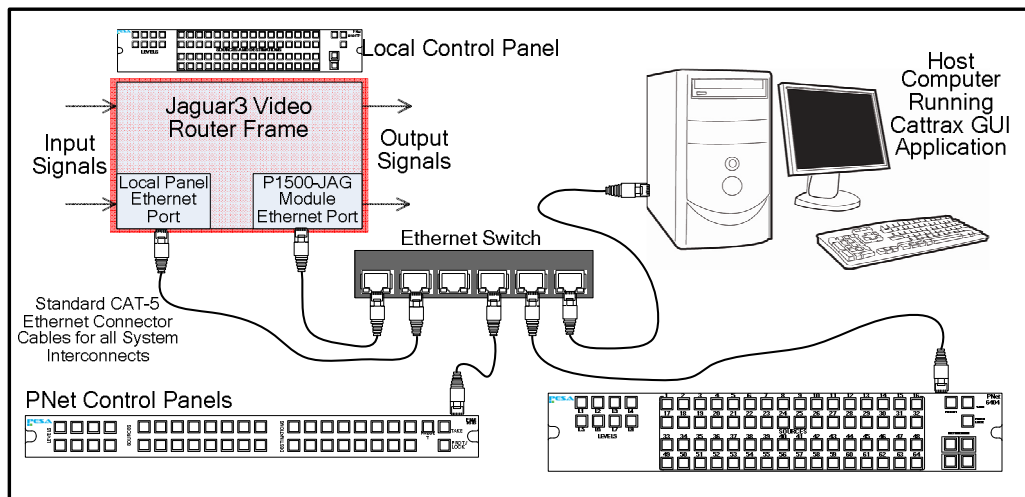


Figure 2-6 - Typical Jaguar3 Closed Loop Installation

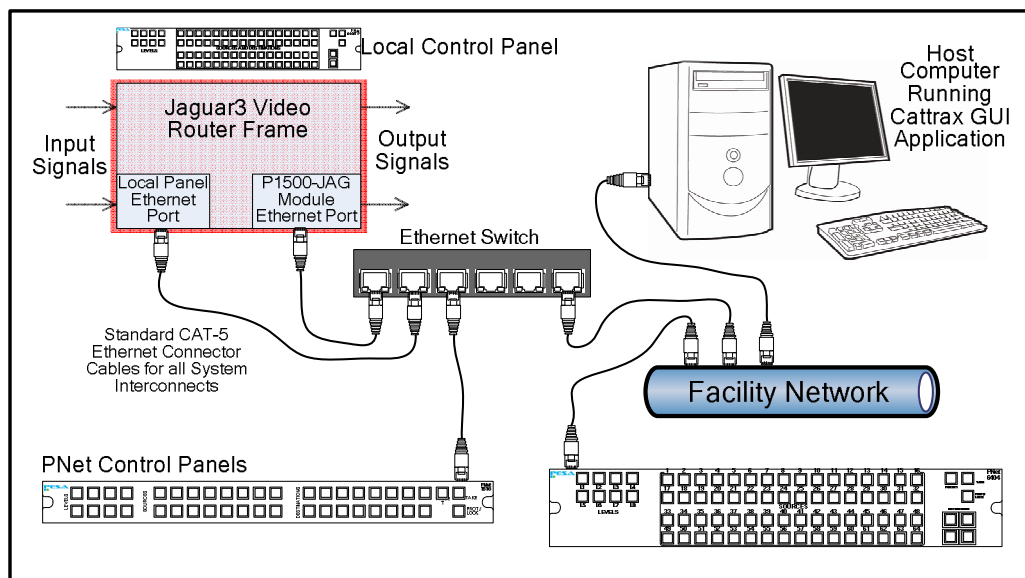


Figure 2-7 Typical Jaguar3 Network Installation

2.5 POWER SUPPLY/CONTROLLER MODULES

The Power Supply/Controller Module used in the Jaguar3 system architecture is a modular unit that can slide into either of the two available slots in the chassis frame. In redundant power supply applications, a power supply/controller module is used in both slots of a chassis frame. A typical power supply/controller module is shown in Figure 2-8.



Figure 2-8 Power Supply/Controller Module (Typical)

In all Jaguar 3 applications, the power supply/controller module contains the power supply circuitry, a pair of fans used to circulate cooling air through the chassis frame, and a controller circuit that controls operation and reports status of the on-board cooling fans.

Power supply/controller modules used in Jaguar 3 routers capable of stand-alone operation perform all the functions of the PRC-only module; plus, these modules are configured with the P1500-JAG system controller capability.

Run/Standby Switch - This switch removes or applies DC operating voltage from the power supply module to the Jaguar 3 circuitry. It does not switch AC power input to the power supply circuitry.


Maintenance Port (MAINT PORT) – The USB style maintenance port connector is not used in current configurations of the Jaguar 3 Power Supply/Controller module and is reserved for future implementation. There is no user accessible function available through this port.

Power (PWR) LED – When lit, indicates the power regulator circuitry is active and DC operating voltage for the router is present.

Chapter 3 Installation


3.1 MOUNT JAGUAR 3 ROUTER IN AN EQUIPMENT RACK

Although rack mounting is not a requirement for operation, the Jaguar3 video router frame is designed for quick installation in a standard 19" equipment rack. If you do choose to rack mount the router frame, be sure that there is sufficient space behind the equipment racks to allow for signal, interconnect and power cables; and around all sides for cooling. Use all chassis mounting holes, and tighten mounting hardware securely by using the rack equipment manufacturer's suggested torque settings.


	<p>Fans mounted inside of this equipment provide forced-air cooling. Do not block airflow around these fans.</p>
---	---

INSTALL VIDEO FRAME

- Detach front cover, or local control panel, from video frame by loosening the two captive thumb screws located on either edge of the front cover.
- If the router is not equipped with a local control panel, pull front cover away from router frame and set aside.
- When removing local control panel, carefully separate control panel from frame to expose power and Ethernet wiring on back side of panel as shown below.

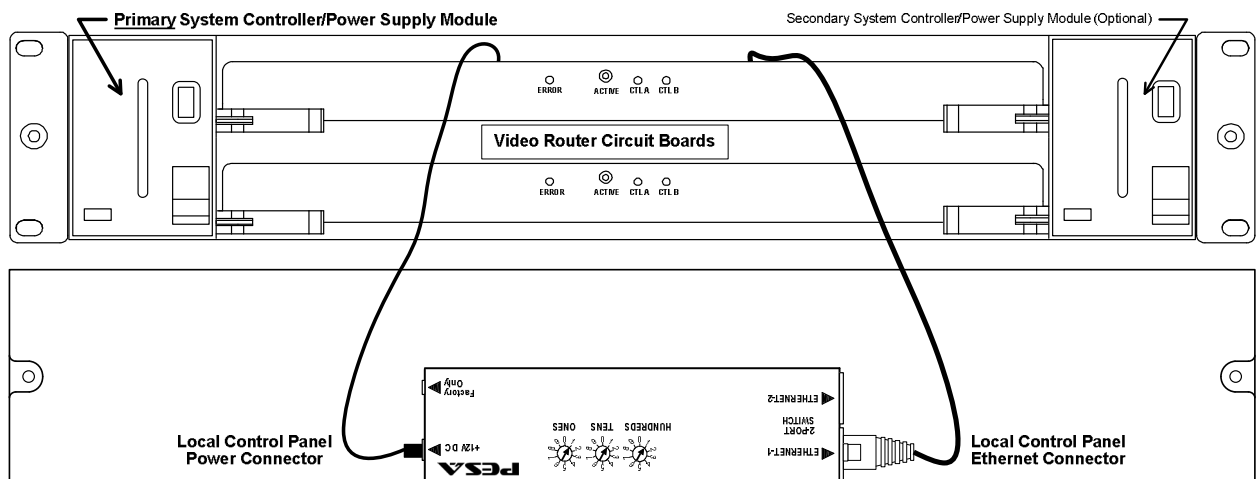

- Disconnect Ethernet cable and power cable from rear of panel and set control panel aside.
- Insert frame assembly into equipment rack and support bottom of frame until all mounting hardware has been installed and properly tightened.

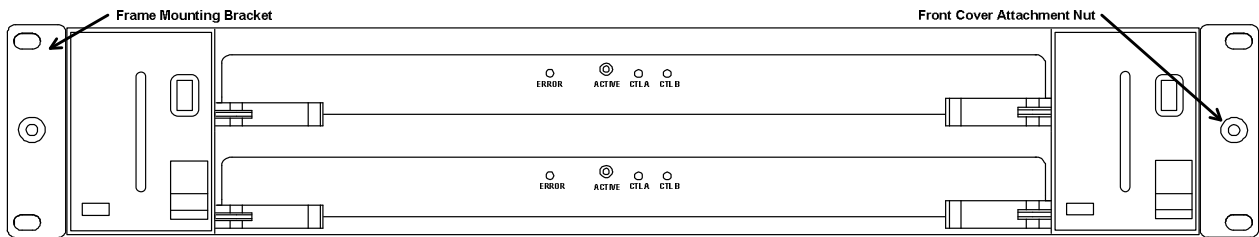

- Install bottom two panel-mounting screws through holes in frame mounting bracket.
- Install top two screws.
- Tighten all panel-mounting screws until secure.
- If no local control panel is used, replace front cover on frame by aligning captive screws with captive nuts on frame mounting brackets and secure by tightening thumb screws.
- Before replacing local control panel on video routing frame, re-attach power and Ethernet cables to connectors on rear of panel. You may attach the Ethernet cable from the router to either connector 1 or 2 on the control panel.

3.2 INSTALL REAR SUPPORT RAILS

Your Jaguar3 router is shipped with a Rear Rack Rail Kit. It is important that this kit be installed as part of the mounting procedure for the frame. Major components included with the kit are shown in Figure 3-1. Each kit consists of two rear rack rails, two rail mounting ears and four screws (not shown) to attach rails to the frame.



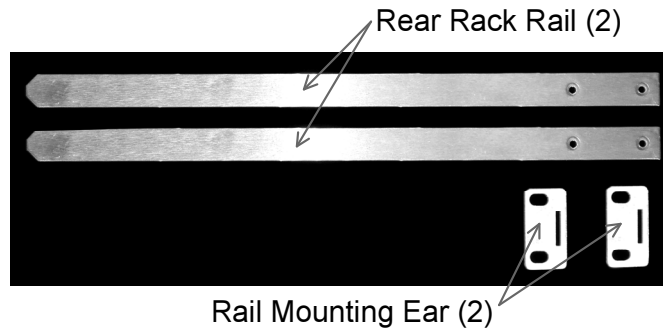


Figure 3-1 Rear Rack Rail Kit

Install Rear Support Rails


- Mount router frame in equipment rack and secure chassis.
- Install one Rear Rack Rail to chassis at the two Rack Rail Attachment Points using two Mounting Screws as shown at right.

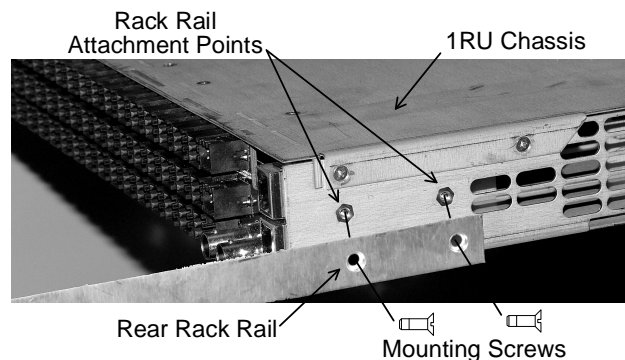

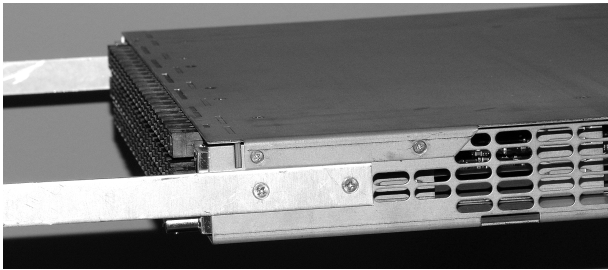

- Repeat on opposite side of chassis using second rack rail and remaining two mounting screws.
- Figure at left shows rear of chassis with both rack rails installed.

- Install rack rail mounting ears by aligning rectangular cutout in mounting ear with one of the rack support rails previously installed and sliding mounting ear onto rail. Ensure that the two screw holes in mounting ear face to outer edge as shown in Figure at right.

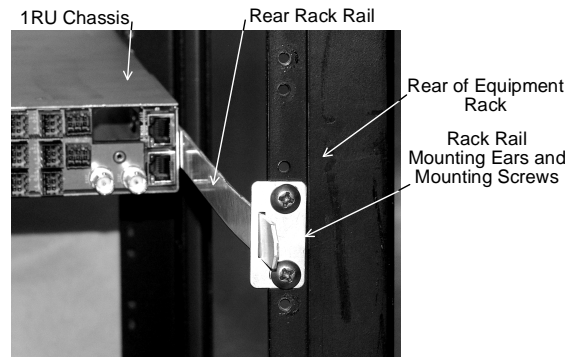

- Secure mounting ear to rear rail of equipment rack using two rack mounting screws (not supplied) as shown. Be sure that screw holes in mounting ear align with screw threads in equipment rack in such a way that the chassis is level in equipment rack from front to rear as shown at left.

- Repeat for the remaining mounting ear and rack rail.

3.3 EXTERNAL CONTROL SYSTEM CONNECTION

When integrating the Jaguar3 router into an existing PESA routing system, control functions are communicated from an external PESA 3500PRO or PERC2000 System Controller through the PESA Router Control (PRC) bus. An adapter cable is provided with the router to connect the PRC Port of the router to the female 9-pin “D” PRC cable. Install the adapter as shown in Figure 3-2, and connect one end of the PRC hook-up cable to the male end of the adapter.

System controller hardware may be mounted in a stand-alone chassis frame, or may be installed in a Cheetah Series video matrix switcher. Regardless of where the controller is located, connect the remaining end of the PRC cable to the “COM3/PRC” port on the chassis. A single controller stand-alone chassis is shown in Figure 3-2 as an example. Regardless of which controller installation method is used in your system, the rear panel port labeled “COM3/PRC” is used to complete connection with the Jaguar3 router.

Strobe level in router configuration files may be thought of as a hardware address. In systems with only one router, the strobe level is normally set to 1; with multiple router frames, such as a Cheetah router for analog signals, a DRS system for audio and a Jaguar3 for routing SDI signals, strobe level identifies to the controller which hardware component contains a particular input or output signal for a desired switching function.

The strobe level switch is normally set at the factory and should not need to be changed. If for any reason you ever need to select a different strobe level for the Jaguar3 router, simply use a small blade screwdriver to set the switch position to the desired strobe setting. Settings are entered as a hexadecimal number.

When frame installation is complete, continue to Paragraph 3.5 and proceed with video signal connections.

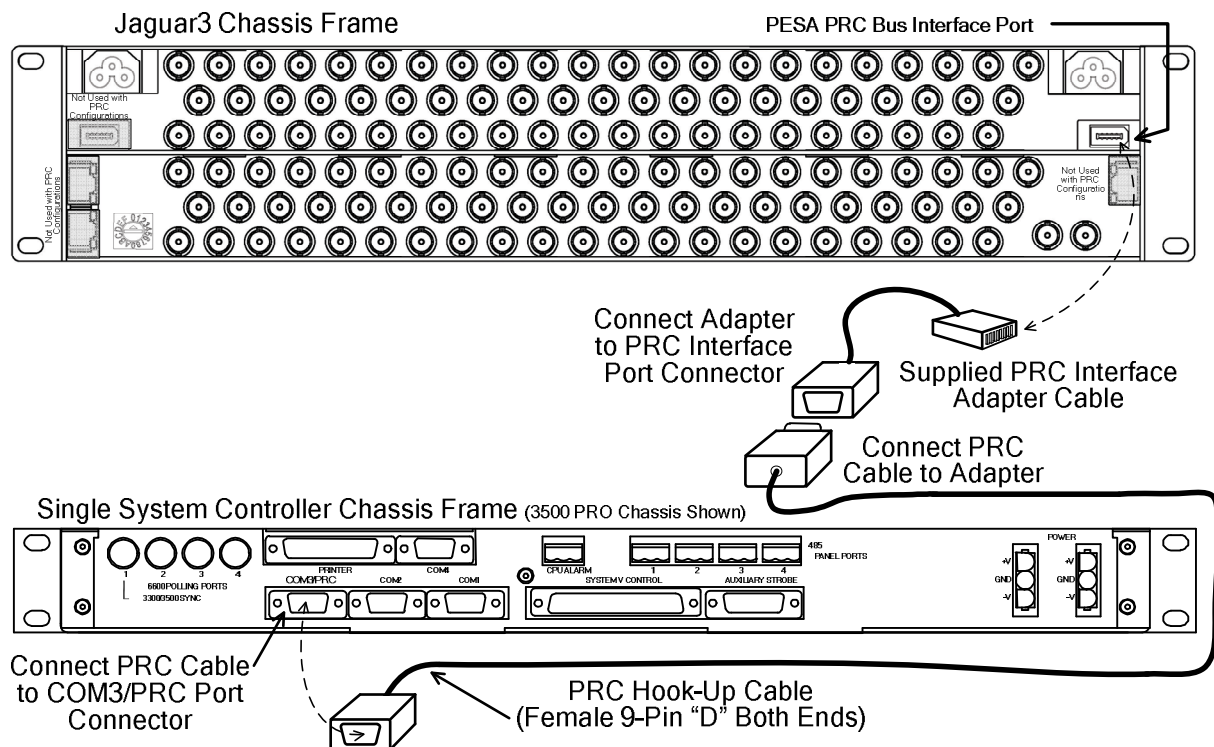


Figure 3-2 Control System Connection

3.4 INTERNAL CONTROL SYSTEM CONNECTION

In stand-alone Jaguar3 applications, the P1500-J controller communicates system commands to the router circuitry, any external PNet control panels, and, if present in the system, DRS-SA audio router frames. In order for the P1500-J to operate, a *configuration file* must be loaded into non-volatile memory on-board the controller device. This file contains programming data for actual signal switching functions of the router, such as signal input/output assignments, signal names and aliases, switching levels, components and other special router functions. PNet panel configuration data is also contained in the controller configuration file.

Control and monitoring of the Jaguar3 router, as well as creation and modification of configuration files are performed through user screens and menus of PESA's Catrax software control application installed on a Windows™ based PC that serves as a "host" computer for the router installation.

Through user input and design, configuration files define all operational aspects for the router. Once created, a configuration file can be stored, edited or downloaded to the P1500-J device.

3.4.1 JAGUAR3 ROUTER – CLOSED ETHERNET LOOP CONFIGURATIONS

In a closed loop arrangement you may choose whether or not to include a host PC as a permanent system component; however, it is not necessary for router operation to have a host PC continuously connected to the PERC1500-JAG once the controller configuration file has been created and downloaded.

In order for the host PC to communicate with the router components, its IP address and other network parameters must be set to a value that allows it to "find" the router components with the following **factory configured IP address values:**

- Primary System Controller – 192.168.1.233 (Video Frame)
- Secondary (Redundant) System Controller – 192.168.1.234 (If Installed)
- Local Control Panel – 192.168.1.236

Once the router system and host PC are communicating, you may use Catrax to set the network parameters, such as IP address, subnet mask and gateway, of the router components to any value best suited to your installation.

Follow Figure 3-3 and connect router components as follows:

- Install a Cat5 Ethernet cable between the Local Control Panel Ethernet Port, **A**, on rear panel of video routing frame and any open port on Ethernet Switch, **C**.
- Install a second Cat5 cable between the Primary System Controller Ethernet Port, **B**, on video frame and any open port on Ethernet Switch, **C**.
- Install a Cat5 cable between the open Ethernet Port on host PC, **D**, and any open port on Ethernet Switch, **C**.

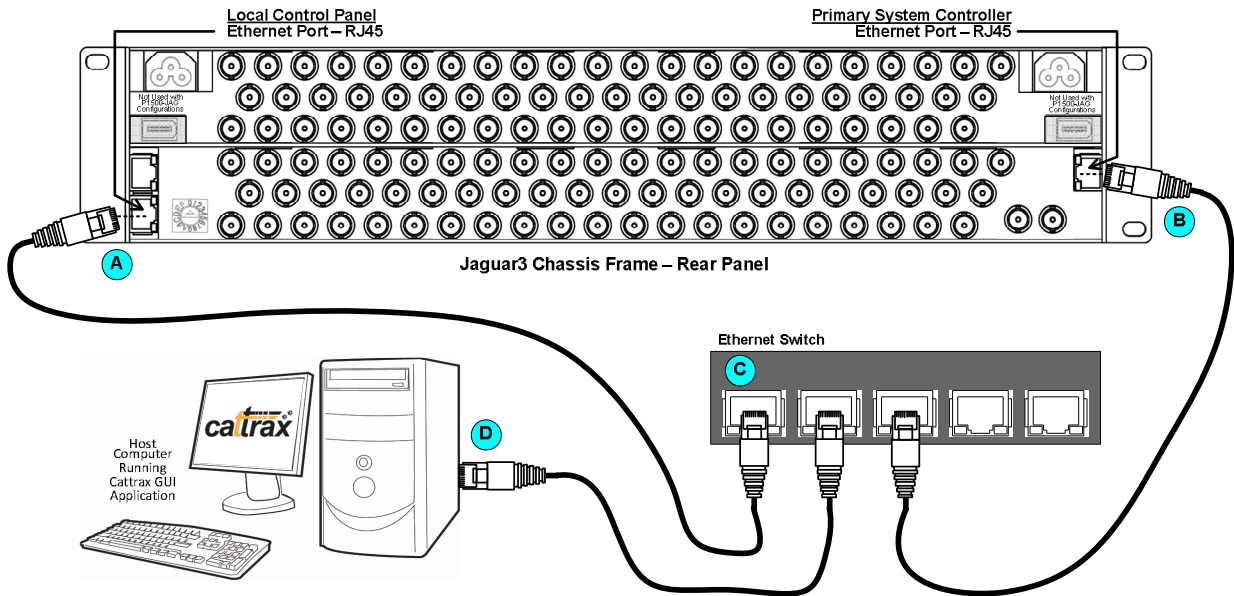


Figure 3-3 System Cabling – Closed Ethernet Loop

3.4.2 INTEGRATE JAGUAR3 ROUTER INTO FACILITY NETWORK

Adding Jaguar3 components to your facility network greatly increases system flexibility and user access; and also allows you to locate the router frame and control panels for maximum convenience and shortest video cable runs. Ethernet communication between the system controller, local control panel and the host PC is conducted over the facility network.

In order for the Jaguar3 components to communicate on the network, the IP address and other network parameters of each router component must be set to a value that is compatible with the network; usually to values assigned by the facility IT administrator.

Jaguar3 router components are preset to the following **factory configured IP address values**:

- Primary System Controller – 192.168.1.233 (Video Frame)
- Secondary (Redundant) System Controller – 192.168.1.234 (If Installed)
- Local Control Panel – 192.168.1.236

If these values are not compatible with your network application, the values may be changed through operator menus available through Catrax.

Figure 3-4 and the procedure sequence below installs Jaguar3 to the facility network using an Ethernet switch to minimize the number of direct network connections.

Using the switch is not a requirement for installation, and it is permissible to directly connect each router component directly to a facility network drop.

Host PC for Catrax may be any compatible computer installed on the facility network.

- Install a supplied Cat5 Ethernet cable between the Local Control Panel Ethernet Port, **A**, on rear panel of video routing frame and any open port on Ethernet Switch, **C**, or directly to an available facility network drop.
- Install a second Cat5 cable between the Primary System Controller Ethernet Port, **B**, on rear panel of video routing frame and any open port on Ethernet Switch, **C**, or directly to an available facility network drop.
- If an Ethernet switch is used, Install a Cat5 cable between any open port on Ethernet Switch, **C**, and an available facility network drop, **D**, to interface the router components with the house network.

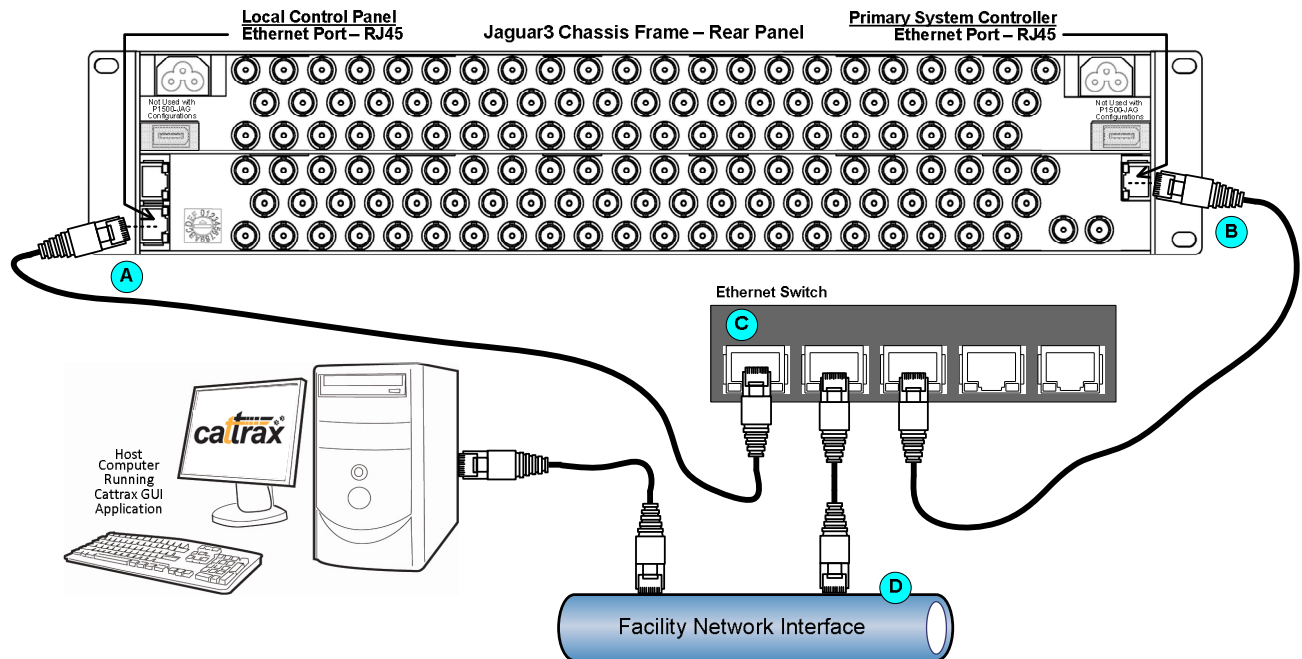


Figure 3-4 System Cabling – Network Based Jaguar3

3.5 VIDEO CONNECTIONS

There are 128 BNC I/O connectors on the Jaguar3 rear panel, 64 each for video input and output signals, as shown in Figure 3-5. Using the figure as a reference, connect video input and output cables to the router.

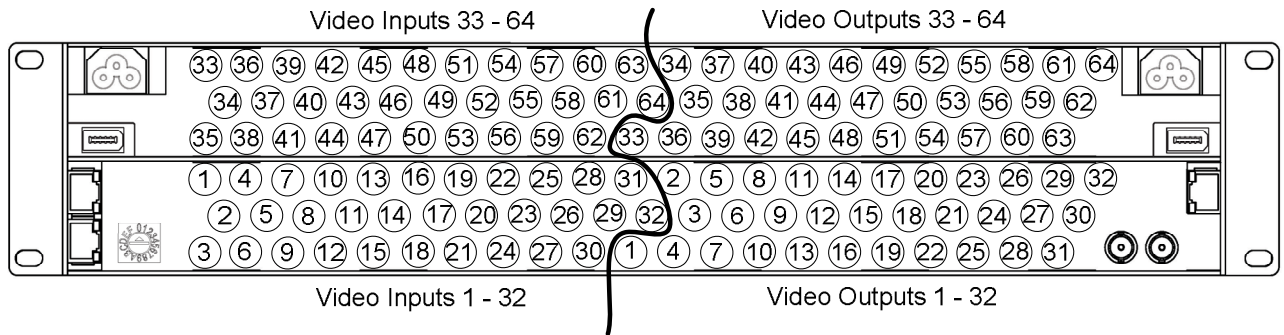


Figure 3-5 Jaguar3 Video I/O Connector and Channel Identification

3.6 SYNC REFERENCE CONNECTIONS

Your Jaguar3 router is capable of operating in either asynchronous or synchronous switching modes. Asynchronous switching occurs when the router is not synchronized with other video equipment in the air chain or production chain through an externally generated sync reference signal. In many applications, asynchronous switching is acceptable, but in other circumstances synchronous, vertical interval timed switching is used to prevent a visual “glitch” in the output signal when sources are switched.

Your Jaguar3 router functions in either mode, but is capable of synchronous, vertical-interval switching by applying a NTSC, PAL or Tri-Level sync source, 0.5V p-p to 2.0V p-p, to the sync reference input.

Sync connectors 1 and 2 on the video frame, Figure 3-6, are terminating connections. Sync input 1 is the default sync source.

Jaguar3 allows you to connect a second source of sync reference to the video frame through Sync Input 2. The second reference signal is often used in facilities dealing with mixed signal formats. Cattract allows you to selectively apply either sync reference signal to any router output.

Jaguar3 Video Frame
Dual Terminated Sync Connectors

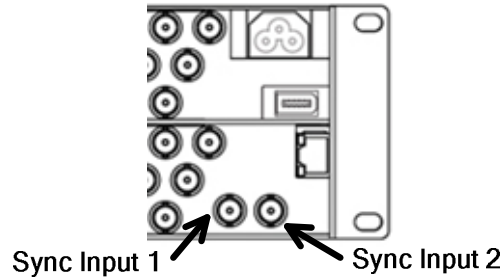


Figure 3-6 Sync Reference Inputs

3.7 POWER CONNECTIONS

Power for the Jaguar3 router is derived from wall receptacles. No special direct wiring or heavy gauge wire is required for this equipment. There are two power connector access ports, one located on the upper left-hand side and the other on the upper right-hand side of the rear panel. These ports allow access to the power receptacle on the power supply/controller module located in the slot associated with each. In a non-redundant power installation, only one of the slots will have a power supply module installed. Attach the power cord through the proper access port to the receptacle on the power supply module. Each power supply carries its own dedicated power receptacle. Input power is not bussed between modules. When two power supplies are used (for redundancy) a separate power cord must be attached to each receptacle through its access port.

Each access port is equipped with a harness device for the input power cord that secures the cord to prevent accidentally disconnecting the frame from its power source. To use the harness, slip the groove on the power cord connector end horizontally into the opening of the harness.

Connecting the power cord to a source of power immediately applies power to the router. Do not apply power for the first time until all signal and control connections have been made and verified.

Before applying power for the first time, please take time to go back over your installation and check for electrically sound connections, proper connector placement and possible wiring errors.

Chapter 4 Operation

4.1 OPERATING JAGUAR3 AS COMPONENT OF A PRC SYSTEM

When Jaguar3 is installed as a router system component under control of an external system controller via a PRC bus connection, operator interface is through system control panels configured through the controller configuration file, a web-based control application such as Catrax Web, or thorough direct commands from the software GUI application.

There are no operations or procedures specific to the Jaguar3 and all commands are communicated through the external system controller. Refer to documentation for the system controller for information on writing and using configuration files, and system control panel documentation for panel operating procedures.

4.2 PNET CONTROL PANELS – JAGUAR3 STAND-ALONE

When Jaguar3 is equipped for stand-alone operation, operator interface is through PESA's network-based PNet control panels that operate with the P1500-JAG controller device, a web-based control application such as Catrax Web, or thorough direct commands from the Catrax software control application.

A local control panel may be installed in place of the router front cover, and external PNet remote panels may be added to the system, up to a system maximum of 80, to greatly enhance operator access and control capability.

All PNet panels communicate with the system controller over an Ethernet interface using standard Cat5 cable and RJ45 connectors, either through a closed-loop Ethernet configuration or with full integration into the facility network. Each panel provides an Ethernet hub loop-thru that allows hook-up cables to be daisy-chained to other panels. PNet control panels are available in configurations that vary the number of sources and destinations each can control, but all panels provide the following common capabilities:

- All-level, audio-follow-video (AFV) switching
- Breakaway switching on up to 8 switching levels
- Operate in hot-take or preset panel modes
- Destination protect and lock features
- Source and destination key channel assignments configurable through Catrax
- Single button "Take" for preset switches
- Illuminated and legendable "soft touch" keys

4.3 INTRODUCTION TO PESA'S SWITCHING METHODOLOGY

In order to get the greatest functionality from your PNet control panels, there are a few basics of the PESA router architecture and control system you need to be familiar with. For this example, assume a router installation in a production facility with multiple signal sources of SDI video and analog stereo audio which we need to route to multiple destinations. For our example installation we are using a Jaguar3 equipped with a PERC1500-JAG controller for video. We also have a stand-alone PESA DRS router under control of the PERC1500-JAG controller for routing audio signals and a local PNet control panel on the front of the video router.

Assume one of the program sources in our example is a network receiver, we'll call it NET1, which provides video and stereo audio signal outputs we need to switch through our router. NET1, while being identified as a single entity, actually produces three totally independent source signals. Similarly, if we have a recorder device we'll identify as a single entity named VTR1 on which we wish to record a program originating from the device called NET1, we must provide all three of the signals from NET1 as inputs to recorder VTR1.

It would be possible to individually switch the three signals from NET1 to VTR1 through our router as single sources to single destinations. We would have to configure an individual source named, for example, NET1VID for the video signal; another individual source named NET1LAUD for the left audio channel, and yet another individual source named NET1RAUD for the right audio channel. Then we would have to take a switch routing NET1VID to the video router output providing a signal to the video input of VTR1, another switch to route the audio; and you get the idea.

Fortunately, router control systems make it a lot easier to route multiple signals simultaneously. PESA routers accomplish this by the use of switching levels, components, sources (source groups) and destinations (destination groups), created and assigned through the controller configuration file.

Loosely defined, a **switching level** is a grouping of like-signals. Considering our example, we have multiple sources of video and stereo audio in our facility; therefore we have three groups of like-signals that we need to pass through our router system: video, left channel audio and right channel audio. Each of these groups can be configured as a switching level of the router. When we create the controller configuration file we would define these three switching levels, and for ease of identification we could name them VID, AUDL and AUDR, respectively.

By defining the switching levels we've told the system controller it has three sets of signals to treat as separate groups. Next, we have to tell the controller where the signals for each level physically enter and exit the router hardware, i.e., which frame of the router system is carrying the signal, and whether or not the switching level contains multiple component signals. This is done by defining the **components** of the switching level in the controller configuration file. PESA's control system requires that every switching level be tied to at least one unique component.

When configuring the Jaguar3 system for our example installation we would create a component entry that identifies, by IP address, the Jaguar video frame as the physical router device for signals assigned to the VID switching level. Likewise, we would create a unique component entry for each audio switching level that identifies the DRS audio router, by IP address, as the physical router for signals assigned to switching levels AUDL and AUDR.

Sources, or source groups, are created in the controller configuration file by configuring signals from one or more switching levels grouped under a common name and switched as a single entity. The source group entry allows you to specify the physical input to the router that you wish to associate with each switching level defined for the source. It is quite common for the same physical input to be used in multiple source definitions.

We previously introduced a receiver named NET1 that provides a video signal and two audio signals used as inputs (sources) to the router. Let's assume we physically connect the video output of the receiver to the Jaguar3 video router as input #1, and the left and right audio signals to the DRS audio router as audio inputs #1 and #2, respectively.

Through controller configuration, we can add a source group entry that creates a router source by the name of NET1 and define that whenever the source named NET1 is selected at a router control panel:

- Physical input #1 to the Jaguar video router is the selected signal for the VID switching level.
- Physical input #1 to the DRS audio router is the selected signal for switching level AUDL.
- Physical input #2 to the DRS router is the selected signal for switching level AUDR.

Destinations, or destination groups, are also configured during creation of the controller configuration file, and define the router outputs just as sources define the router inputs.

Our example destination device is a recorder named VTR1 that requires a video signal and two audio signals derived from outputs (destinations) of the router. Let's assume we physically connect the video input cable of the recorder to the Jaguar3 video router at output #1, and the left and right audio cables to the DRS audio router at audio outputs #1 and #2, respectively.

Through controller configuration, we can add a destination group entry that creates a router destination by the name of VTR1 and define that whenever VTR1 is selected as a destination at a router control panel:

- Physical output #1 from the Jaguar video router is the selected destination for the source signal selected on switching level VID.
- Physical output #1 from the DRS audio router is the selected destination for the source signal selected on switching level AUDL.
- Physical output #2 from the DRS router is the selected destination for the source signal selected on switching level AUDR.

4.4 PNET SWITCHING METHODS

4.4.1 ALL LEVELS SWITCH

All-Levels or **Audio-Follow-Video (AFV)** is the power-on default switching method for the PNet panel, and is the active switching method when *none* of the **LEVELS** pushbuttons are lit. When an AFV switch is performed, signals on all switching levels defined for the source are switched simultaneously to all switching levels defined for the destination.

Using devices NET1 and VTR1 introduced in Paragraph 4.4 for this example, with an AFV switch whenever we select the destination button on a PNet panel assigned to VTR1, and specify NET1 as the source selection to route to the destination, we will route signals assigned to all switching levels defined for NET1 to physical outputs defined for switching levels of VTR1. The actual switches would be:

- Video signal present at physical input #1 to the Jaguar router is routed to output #1 from the video router through switching level VID.
- Audio signal present at input #1 to the DRS audio router is routed to physical output #1 from the DRS audio router through switching level AUDL.
- Audio signal present at input #2 to the DRS audio router is routed to output #2 from the DRS audio router through switching level AUDR.

4.4.2 BREAKAWAY SWITCH

A **Breakaway** switch allows you to selectively choose specific sources for each switching level defined for the destination.

Again, using devices NET1 and VTR1 from previous examples, let's assume that we are recording a program on VTR1 with the video signal originating from receiver NET1, but we'd like to use the audio track from a local audio recorder. Stereo audio signals from the recorder enter the DRS audio router at physical inputs 3 and 4, and we've created a source group, REC1, that defines input 3 as the signal source for switching level AUDL and input 4 as the signal source for switching level AUDR.

Using a breakaway switch we can select NET1 as the source for switching level 1 (VID) and REC1 as the source for switching levels 2 and 3 (AUDL and AUDR). By doing so we specify that the source selected for switching levels 2 and 3 be different from the source selected for switching level 1, and thus place the sources for destination VTR1 in a breakaway condition.

4.5 PNET SWITCHING MODES

4.5.1 HOT-TAKE SWITCHING MODE

Hot-Take is the power-on default mode for the PNet panel, and is the active mode of the panel when the **PRESET** button is **not** illuminated. When Hot-Take is active, anytime you press a **SOURCES** button, the input signals on the selected switching levels for that source are routed immediately to the currently selected destination outputs. If no switching level buttons are lit (all-levels mode), source signals from all switching levels defined for the source group are routed to the destination group outputs.

4.5.2 PRESET SWITCHING MODE

Preset mode allows you to pre-define sources for an all-levels or breakaway switch on the selected destination, but not initiate the switch until you press the **TAKE** button. Preset is the active switching mode of the panel when the **PRESET** button is illuminated. When Preset mode is active, use the **SOURCES** buttons and **LEVELS** buttons to define sources you wish to route to the selected destination when the preset switch is initiated.

4.6 CONTROL PANEL CONFIGURATION

In order for a PNet control panel to be functional, it must have Ethernet communication with the PERC1500-JAG device in the video router frame, it must be assigned a unique hardware panel ID entered through rotary switches on the rear of the control panel, and it must be configured through Catrax into the system controller configuration file. There are several operating parameters we must define for each system control panel as part of creating the configuration file. In addition to defining source and destination groups, we also assign specific switching levels, source groups and destination groups to specific pushbuttons on the PNet control panel through the creation of data key lists.

During control panel configuration a Status Level and Default Destination must be specified for each panel:

- **Status Level** – allows you to specify the switching level that the panel initially statuses by default when a destination is selected, and no specific level has been selected through the *levels* keys. This is also the switching level that the panel uses as the reference level when indicating breakaway routing conditions.
- **Default Destination** – defines the router destination for which the panel displays status when initially powered-up or following a reset.

With panel configuration data entered, the configuration file with panel operating parameters must be downloaded and become the active configuration file used by the system controller in order for the panel to be functional.

The remainder of this chapter discusses system operation and panel configuration using a P3232 control panel set to a hardware panel ID of 1, and a pre-installed factory configuration file for all examples. Refer to Paragraphs 5.15.9 and 5.15.11 of this User Guide for information on configuring PNet panels with Catrax.

4.7 PNET PANEL - KEY FUNCTIONS

PNet control panels, with the exception of the P3232 panel, follow the pushbutton key layout shown by Figure 4-1; Figure 4-2 illustrates layout of the P3232 panel. The function of each key is presented below.

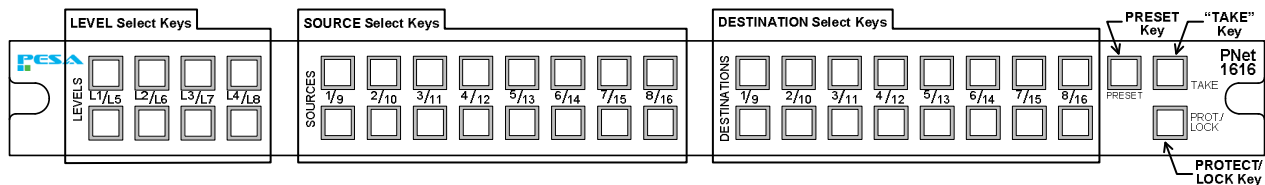


Figure 4-1 PNet Control Panel Layout (Except P3232 Panel)

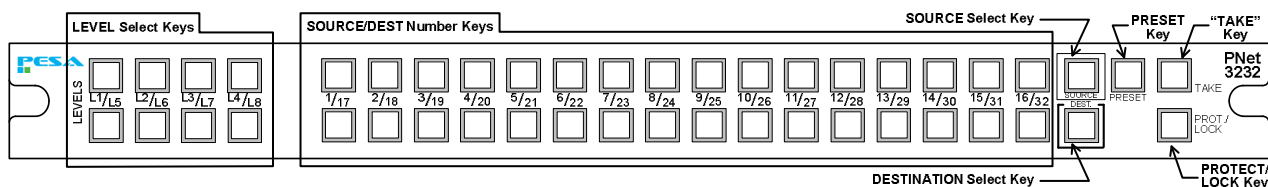


Figure 4-2 PNet 3232 Control Panel Layout

- **Level Keys** - On all PNet panels there are 8 *Level* keys that allow you to select the switching level on which you wish to perform a breakaway switch, or display current status of the selected level for a specific destination.
- **SOURCE Select Keys (All panels except P3232)** – Select source group routed to currently selected destination. Illuminated source button indicates selected source group.
- **DESTINATION Select Keys (All panels except P3232)** – Select destination group to which you wish to route a source. Illuminated button indicates currently selected destination group.
- **SOURCE Select Key (P3232 panel only)** – Pressing the *Source Select* key places the *SOURCE/DEST Number* keys in source select and status mode. When the Source Select key is illuminated, pressing any number key selects the source group routed to currently selected destination.
- **DESTINATION Select Key (P3232 panel only)** - Pressing the *Destination Select* key places the *SOURCE/DEST Number* keys in destination select and status mode. When the Destination Select key is lit, pressing any number key selects the destination group to which you wish to route a source.

You may press the *Dest* key at any time to display the currently selected destination.


- **SOURCE/DEST Number Keys (P3232 panel only)** – Selects the source or destination, depending on which of the Select Keys is lit.
- **Preset and Take Keys** – The *Preset* key allows you to pre-define an all-levels or breakaway switch and manually initiate the switch by pressing the *Take* key. If a source selection on one or more switching levels is changed as a “preset” function, when the “Take” key is pressed, those selected levels will be changed to the new source selected in the preset.
- **Protect/Lock Key** – Selects and indicates lock status of currently selected destination. If the key is not illuminated, the destination is available for switching. A momentary key press places the active destination in “Protect” mode, whereby the protected destination can still be switched by the panel which originally placed the destination in “Protect” mode, but is “Locked” to all other panels and Users. When the Protect/Lock key is unlit, pressing and holding the key for approx. 2 seconds causes the active destination to enter “Lock” mode (Lock/Protect Key Blinking). If the Protect/Lock key is blinking, the selected destination is “Locked” for all users and can not be switched to a different source by any panel or other user without first unlocking the selected destination. Pressing the Lock key causes the lock state to toggle for the active destination.

4.8 STATUS AND TALLY FUNCTIONS

All *active* PNet panel pushbuttons are backlit for ease of viewing in low-light environments. In order to be active on the panel, source, destination and level keys must be defined through the data key list assigned to the panel configuration. Any pushbuttons that are not defined are not backlit, thus providing a visual display of pushbutton status for the current panel configuration. Currently selected pushbuttons illuminate brightly and provide a visual indication of the status and operating mode of the channel or panel. Visual status and tally functions are discussed in the following paragraphs:


4.8.1 DESTINATION STATUS

Indicates the currently selected destination group either as a direct readout on the **Destination** keys, or on the **number** keys when the **Dest.** Pushbutton is selected (P3232 Only). Any destination button that is not backlit indicates there is no destination group defined for the button.

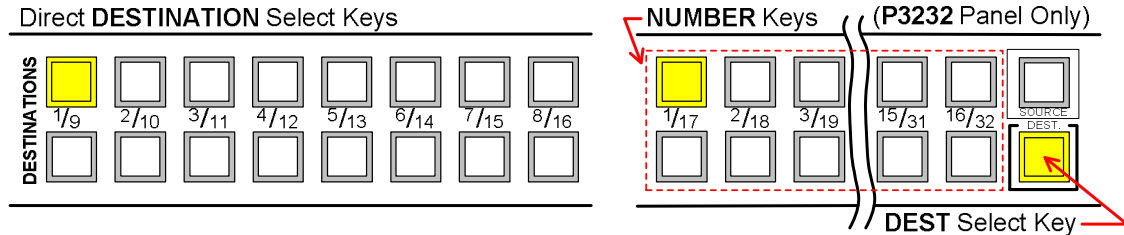

4.8.2 SOURCE STATUS


Indicates the currently selected source group routed to the selected destination group, either as a direct readout on the **Source** keys, or on the **number** keys when the **Source** Pushbutton is selected (P3232 Only).

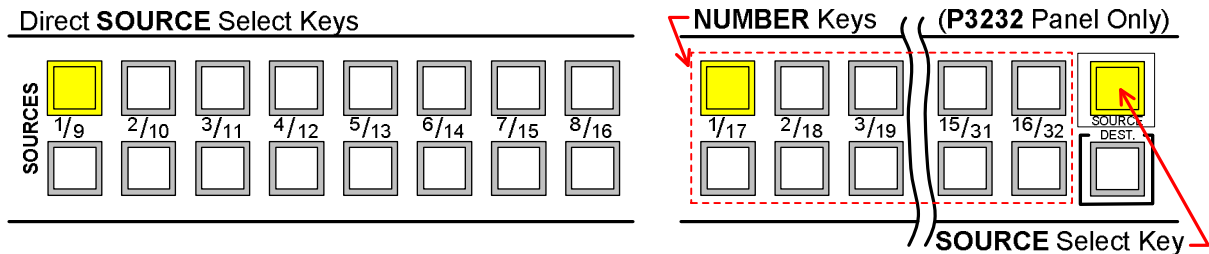

- **Button Dark (No Backlight)** - Indicates there is no source group defined for the button.
 - **Steady Lit Source Button** - Indicates the source group definition is applied to all switching levels.
 - **Blinking Source Button** – If none of the **Level** pushbuttons are illuminated, a blinking source button identifies the source group currently selected on the switching level defined as *status level* for the panel, and indicates the switching levels are in a breakaway condition – meaning the source selected on one or more of the switching levels is different than the displayed source.
- Selecting any of the **level** buttons displays the source currently selected for that switching level - see Switching Levels Status, below.
- **Sources Buttons 1 and 2 Blinking Simultaneously** – This condition indicates a communications error between the PNet panel and the system controller.

4.8.3 SWITCHING LEVELS STATUS

Switching **LEVEL** buttons select the levels for breakaway switching and level status display with the panel operating in either Hot-Take or Preset modes. Each button is a push-on/push-off toggle function, and is illuminated when the level is selected. Any levels button that is not backlit indicates there is no switching level defined for the button.

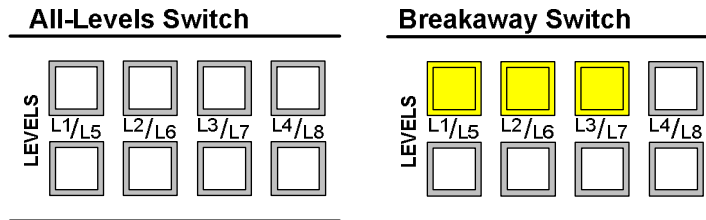

- **No Levels Selected** – Indicates panel is operating in All-Levels Switch mode, and any *Source* button you press will select that source on all switching levels of the source group.

For status tally, when no levels buttons are lit, the illuminated *Source* button indicates source group currently selected on switching level defined as *status level* for the panel.

- **One or More Levels Selected** – Indicates panel is operating in Breakaway Switch mode, and selects switching levels for the breakaway switch. Any *Source* button you press selects that source on selected switching levels of the source group.

Pressing any one of the *level* buttons selects that switching level for status display and the corresponding illuminated *Source* button indicates the currently selected source for the switching level.

If multiple *Levels* buttons are selected (lit), the illuminated *Source* button ALWAYS displays status of the *numerically lowest* selected switching level. A blinking *Source* button indicates the switching levels are in a breakaway condition – meaning the source selected on one or more of the selected switching levels is different than that of the currently displayed level.

Remember, when no levels buttons are brightly lit, the illuminated *Source* button always indicates source group currently selected on the switching level defined as *status level* for the panel.

4.9 LOCAL CONTROL PANEL OPERATION


Procedures in this paragraph discuss operation of the P3232 local control panel included with the Jaguar3 system. With the exception of the Source and Destination select keys, these procedures may be applied to any PNet control panel.

PESA routers are destination oriented, meaning that switches are made by first selecting the destination group and then selecting the signal channels, through source groups, that you wish to route to the destination outputs. Default operation for a PNet panel on power-up or reset is All Levels and Hot Take.

4.9.1 PERFORMING A HOT-TAKE, ALL-LEVELS SWITCH

To perform an all-levels switch, verify that none of the levels keys are illuminated; if any are lit, the panel is operating in breakaway mode. Press any illuminated *levels* keys to toggle the breakaway function off. AFV mode is active when **no** levels keys are lit.

To make switches on all switching levels of a selected input source to a selected output destination, in audio-follow-video (AFV) mode, use the control panel diagram below as a quick reference guide and perform the following steps:

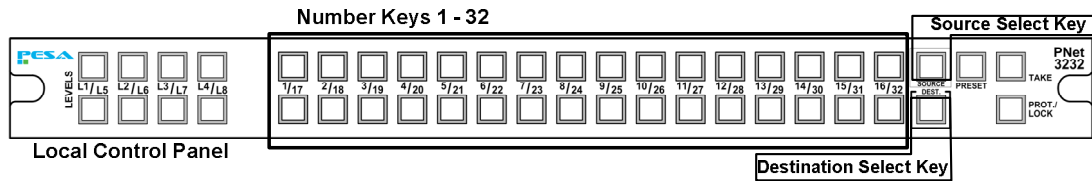

- **Select Desired Output Destination:**

Press the **DESTINATION** Select Key on the local control panel, the button will light.

Press the number key (1 – 32) corresponding to the **Destination** (destination group) you want to select. When you select a destination, output ports defined through the destination group assigned to the destination number key are selected; both the DEST key and the selected number key should be lit.

- **Select Desired Input Source for Selected Destination:**

Press the **SOURCE** Select Key on the local control panel, the source button will light and the number key corresponding to the source selected for the status level of the panel, and *currently* routed to the destination you selected in the previous step will also light. If the button is blinking, this indicates the switching levels are currently in a breakaway condition and one or more of the levels is switched to a source that is different from the source assigned to the status level of the panel.

Press the **number** key (1 – 32) corresponding to the **Source** (source group) you want to route to the destination selected in the previous step.

When you select a source key, input signals defined through the source group assigned to the source number key through router configuration are selected as the individual sources routed to the destination output ports on all switching levels defined for the source group. When a source is selected, the pushbutton lights and the switch immediately occurs.

When you are switching in AFV mode, **Levels** buttons will **not** be lit.

4.9.2 HOT-TAKE, BREAKAWAY SWITCHING

If you are using the factory installed configuration file, the local control panel is pre-configured with the three switching levels assigned to **LEVEL** keys 1, 2 and 3.


Level Key 1 – Selects sources and destinations on the VIDEO switching level.

Level Key 2 – Selects sources and destinations on the AUDIO1 switching level.

Level Key 3 – Selects sources and destinations on the AUDIO2 switching level.

A breakaway switch allows you to switch source signals defined for one or more specific switching levels of a selected source group to the output channels defined for the corresponding switching levels of a selected destination group. For additional information on breakaway switching, refer to Paragraph 4.5.

To perform a breakaway switch, use the control panel diagram below as a quick reference guide and follow the steps below:

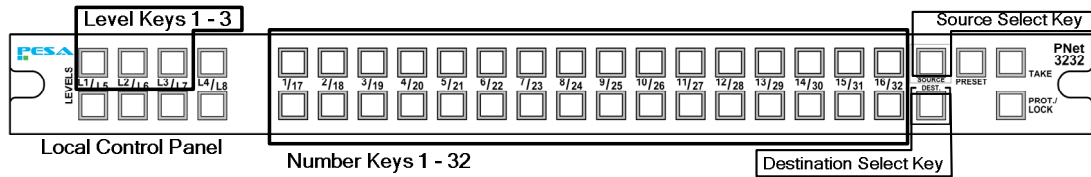

- **Select Desired Output Destination:**

Press the **DESTINATION** Select Key on the local control panel, the button will light.

Press the number key (1 – 32) corresponding to the **Destination** (destination group) to which you want to route sources you specify in the breakaway selection. When you select a destination, output ports defined through the destination group assigned to the destination number key are selected; both the DEST key and the selected number key should be lit.

- **Select Desired Input Source for Selected Destination:**

Press the **SOURCE** Select Key on the local control panel, the source button will light and the number key corresponding to the source selected for the status level of the panel, and currently routed to the destination you selected in the previous step will also light. If the button is blinking, this indicates the switching levels are currently in a breakaway condition and one or more of the levels is switched to a source that is different from the source assigned to the status level of the panel.

Press the **Level** key(s) corresponding to the switching level(s) for which you wish to select source signal(s) to route to the destination output switching levels. You may select any number of switching levels for the breakaway switch. The level button(s) light, and the illuminated number key displays current status of switching levels - depending on which level buttons are selected. Refer to Paragraph 4-9 for information on reading the status display.

Press the number key (1 – 32) corresponding to the **Source** (source group) you want for the breakaway switch on the selected switching level(s) to the destination selected in the previous step.

When you select a source key, input signals defined through the source group assigned to the source number key are routed to destination outputs on only the switching levels defined for the breakaway switch. When a source is selected, the pushbutton lights and the switch immediately occurs.

Using example devices from paragraph 4.4, if you wish to route video from NET1 and audio from REC1 to VTR1, perform the following steps:

- Press the Destination Select key, the button lights.
- Press the number key assigned to destination group VTR1, in this example OUT1.
- Press the Source Select key, the button lights.
- Press level key 1 to select the VID level for breakaway, the button lights.
- Press the number key configured to source group NET1, in this example IN1, the button lights.
- Press level key 1 a second time to de-select VID level, the button is not lit.

- Press level keys 2 and 3 to select switching levels AUD1 and AUD2 for breakaway, the buttons light.
- Press the number key configured to source group REC1, in this example IN2, the button lights.
- Press level keys 2 and 3 a second time to de-select breakaway and return the panel to AFV operation.

4.9.3 PERFORMING A PRESET SWITCH

Preset switching mode is active when the **PRESET** button is illuminated – and remains the active mode of the panel until the button is pressed again to cancel. Preset may be used for All-Levels or Breakaway switches and allows you to pre-define a switch operation and execute the switch, when needed, by pressing the TAKE button. Follow steps below to perform a breakaway switch:

- **Select Desired Output Destination:**

Press the **DESTINATION** select key on the local control panel, the button will light.

Press the number key (1 – 32) corresponding to the **destination group** for which you wish to configure a preset switch, for example OUT1 corresponds to key 1; now both the DEST key and the selected number key should be lit.

- **Place Panel in PRESET Switching Mode:**

Press the **PRESET** pushbutton on the panel, the key illuminates and the number key select function (Dest./Source) changes to Source. The Source Select button lights and the number key corresponding to the source currently routed to the destination you selected in the previous step also lights.

- **Define Sources for PRESET Switch:**

Following procedures introduced in Paragraphs 4.10.1 and 4.10.2 to select sources for an All-Levels or Breakaway switch, use the **number** keys and **level** keys to define sources you wish to route to the selected destination when the preset switch is initiated.

With Preset mode active, the switch does not occur as keys are pressed; however, the panel status tally display changes to indicate pre-defined source for the preset switch.

- **Initiate PRESET Switch:**

Press the **TAKE** pushbutton on the panel to immediately perform the preset switch.

Preset remains the active operating mode of the panel until cancelled by the user.

When a preset switch is completed, and Preset is still the active mode of the panel, the channel status **prior to the switch** is stored as the next preset definition and displayed as preset status by the illuminated number key.

In essence, the preset mode may be used as a toggle function, allowing you to return to the previous status of the channel, until a new preset switch is defined, or preset mode is cancelled.

Remember, when preset mode is active and you have entered a pre-set source definition, the illuminated panel number key displays status of the preset source, **NOT** the currently active source; and will continue to display the preset source until preset mode is cancelled.

- **Cancel PRESET Switching Mode:**

When active, press the **PRESET** pushbutton on the panel to cancel the mode and return the panel to Hot-Take mode. The illuminated number key displays the source currently routed to the selected destination.

4.10 APPLYING DESTINATION PROTECT OR LOCK

Applying protection to a destination prevents another user or an accidental key press from switching the current source selection. The **Protect/Lock** key is used to apply destination protection, and it also provides a visual status of the current protection status of the selected destination. If the Protect/Lock button is **not** illuminated, there is currently no active destination protection and the source selected for the destination may be switched by any panel in the system allowed access to the destination.

There are two protection methods available, each is introduced below:

- **Destination PROTECT** – A momentary press of the Protect/Lock button places the currently selected destination in “Protect” mode, whereby the protected destination can still be switched by the panel which originally placed the destination in “Protect” mode, but is “Locked” to all other panels and users. When the destination is in Protect mode, the Protect/Lock button is steadily illuminated. Pressing the Protect/Lock key toggles the protect mode of the selected destination.
- **Destination LOCK** – Pressing and holding the Protect/Lock button for approx. 2 seconds places the currently selected destination in “Lock” mode (Lock/Protect Key Blinking). In Lock mode the selected destination is “Locked” for all users and can not be switched to a different source by any panel or other user without first unlocking the selected destination. Pressing the Protect/Lock key toggles the protect mode of the selected destination.

Chapter 5 Router Control and Configuration with Cattrax

5.1 INTRODUCTION

PESA's Cattrax software control application provides monitoring, control and configuration capabilities for the stand-alone Jaguar3 router. Cattrax runs on a host PC, interfaced with the system through either a closed Ethernet communication loop using an Ethernet switch, or through the facility network.

Through Cattrax you can view real-time status of virtually every aspect of router operation, modify many system operating parameters, issue manual switches on individual or multiple destinations, create new, or modify existing, configuration files for the system controller, plus many other control and system monitoring functions.

The configuration file loaded into the system controller is where the signal switching functions for the router system, such as signal input/output assignments, signal names and aliases, switching levels, components and other special router functions are defined. Through Cattrax you can create application-specific files that define all operational aspects for the router. Once created, a configuration file can be stored, edited or downloaded to the system controller device to become the active operating router configuration.

5.2 INSTALL CATTRAX APPLICATION ON HOST PC


Cattrax is a graphical user interface (GUI) type software application for use on a standard PC running the Microsoft Windows® XP, Vista or Windows 7 Operating System. The PC must have a CD-ROM drive for installation of Cattrax. A mouse with scroll-wheel is recommended for precise control of device parameter values using slider controls, and a monitor size of 19 inches or larger is also recommended.

Your Cattrax installation disk contains an auto-run file that guides you through the installation process. Examples of the pop-up screens you will see are shown below with the appropriate step. Notice the "X" used in place of actual values on each example screen presented here. During installation the release number of Cattrax software you are installing is displayed.


Install the Cattrax software application as follows:

1. Insert Cattrax CD into CD Drive of host PC.
2. Allow the disk to initiate the auto-run function. When initialization is complete, the banner, as shown at right, is displayed on the desktop. Click **Next** to begin installation of the Cattrax application.
3. If the auto-run function does not automatically launch, navigate to the directory of the disk drive containing the installation CD and double click the **Cattrax.exe** file. The banner shown at right should be displayed on the desktop. Click **Next** to begin installation.




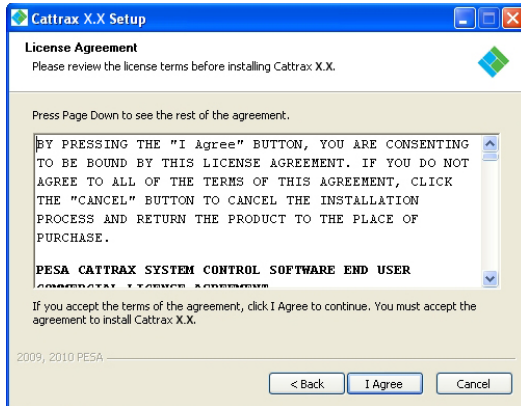

4. Read the license agreement and click **I Agree** to continue, as shown at left.

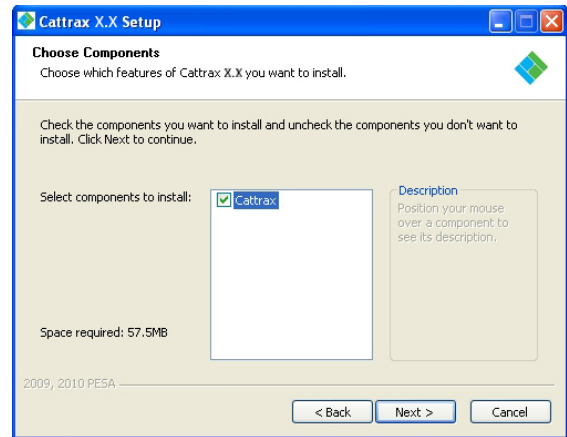


5. The Choose Components window allows you to select the software components you wish to install. During initial installation, the only option is to install the entire program. Ensure that the box next to “Cattrax” in the list box is checked. Click **Next** to continue installation.

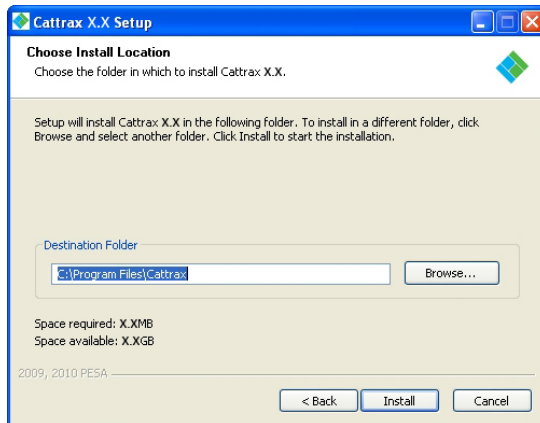

6. By default auto-install creates the folder shown at left for the Cattrax application. If you wish to install the software in a directory or folder other than the default, click **Browse** and navigate to the destination. Click **Install** to continue installation.

7. During installation, an indicator bar tracks progress of software load. Upon completion of installation, an “Installation Complete” prompt is displayed. An example of each screen is shown here.

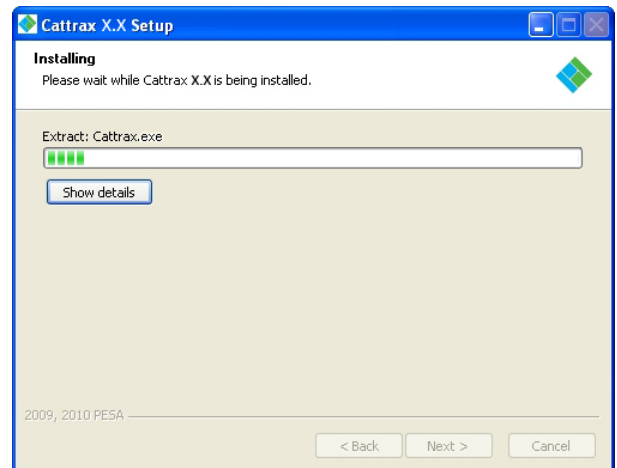




8. Click **Finish** to exit the installation process. During installation a shortcut icon to launch Cattrax is automatically placed on the desktop. If the box next to “Run Cattrax X.X” is checked, the application will start immediately.

5.3 REMOVING CATTRAX INSTALLATION

Should it ever be necessary to remove Cattrax from the PC, the uninstall command is available through the Start menu of the Windows® operating system. A prompt window as shown at right is displayed on the desktop. Click **Uninstall** to complete the command.

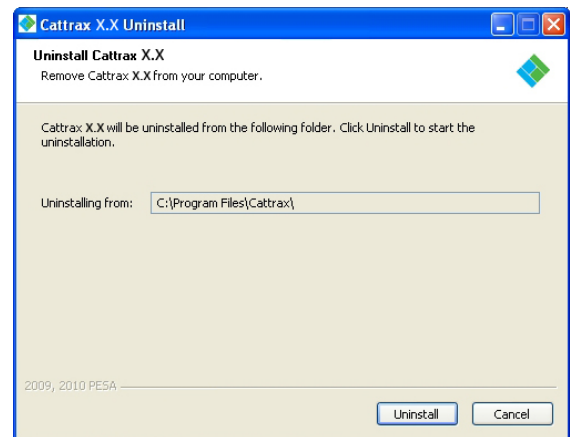

5.4 CATTRAX CONTROL APPLICATION

Cattrax is a multi-system application that communicates with, and controls, many different types of PESA equipment; it incorporates data files for specific equipment into the software structure that contain equipment-specific interface screens, configuration parameters and control functions. In order for Cattrax to “discover” and communicate with a Jaguar3 router, or any other piece of PESA equipment, the proper data file must be present in the version of Cattrax used.

Cattrax automatically searches for PESA equipment through a process called “discovery.” When a piece of equipment is detected on the facility network with Cattrax, the application establishes communication with the equipment and lists it as an active device in the Devices View window.

During installation of Cattrax, an icon is placed on the PC desktop. You may start the application by clicking on the desktop icon, or by navigating to the folder containing the Cattrax program files and clicking on the **Cattrax.exe** file. When Cattrax is first started, an application interface similar to the one shown in Figure 5-1 is displayed on the host PC monitor. As the discovery process continues, a listing of PESA devices discovered on the network is displayed in the Devices View window.


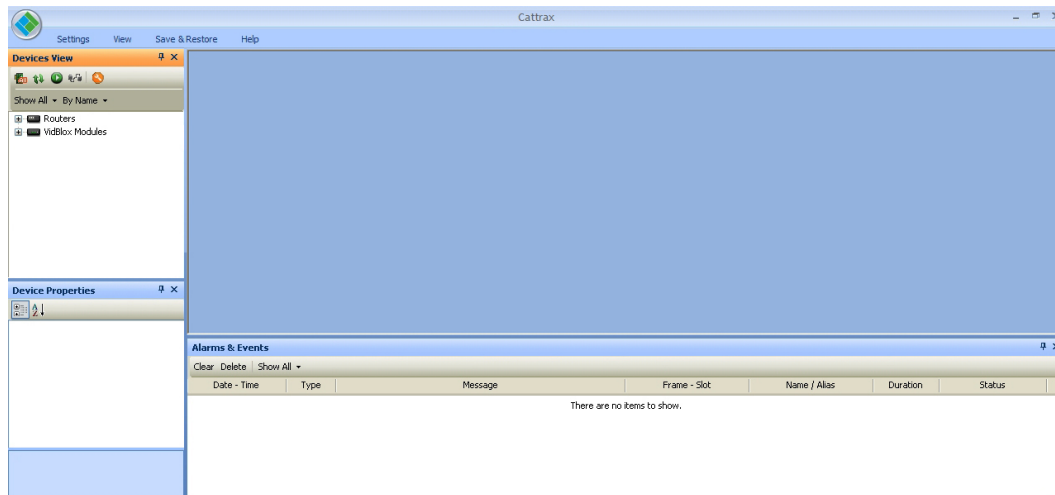


Figure 5-1 Cattrax Main Display Screen

5.5 NETWORK CONFIGURATION WITH CATTRAX

In order for Cattrax to communicate with PESA equipment, the network interface device used by Cattrax must be actively connected to the subnet, or multiple subnets, containing equipment you wish to control. When communicating on a subnet containing PESA network controllable devices, Cattrax should immediately begin the discovery process for all devices configured for the same subnet. In some installations, PESA devices may reside on subnets different from one another within the network. Cattrax allows you to easily select both the network interface device it uses and the subnets on which it communicates through the *Network Preferences* tab under the *Settings* menu.


To view or modify current network communication parameters for Cattrax, click the Network Preferences tab under the Setting menu in the Cattrax menu bar to open the *Device Discovery Configuration* screen as shown here.

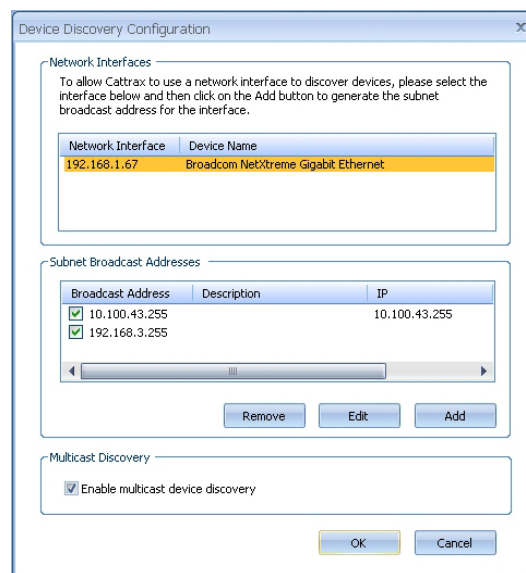

The upper window displays by IP address and name the network interface devices available to Cattrax. In many installations there is only one entry in the window and by default this would be the device used by Cattrax. If there are multiple entries, as would be the case, for example, if the host PC contains both an Ethernet cable NIC and a wireless adapter, the device Cattrax is currently communicating through is shown in bold type. You may select the network interface device you wish Cattrax to use by double-clicking the entry in the listing. Be sure that the network interface device you select is communicating over the subnet(s) containing the Jaguar3 router you wish to control.

Subnets currently available to Cattrax are listed in the second window under the Subnet column. A check in the box beside an entry indicates that Cattrax is actively communicating over that subnet and will automatically discover PESA devices on it. If you wish to prevent Cattrax from communicating over a specific subnet, click the checkbox to remove the check. If you need to add additional subnets or modify address parameters of currently available subnets use the buttons to the right of the display window as follows:

- **Add** – allows you to add subnets to the list of those available. Clicking the Add button opens the screen shown here.

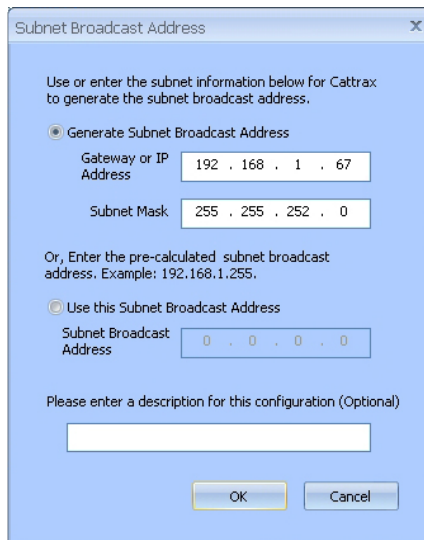

The dialog box is titled "Subnet Broadcast Address" and contains the following elements:

- Instruction: "Use or enter the subnet information below for Cattrax to generate the subnet broadcast address."
- Radio button: "Generate Subnet Broadcast Address" (selected).
- Text fields: "Gateway or IP Address" (192 . 168 . 1 . 67) and "Subnet Mask" (255 . 255 . 252 . 0).
- Text: "Or, Enter the pre-calculated subnet broadcast address. Example: 192.168.1.255."
- Radio button: "Use this Subnet Broadcast Address" (unselected).
- Text field: "Subnet Broadcast Address" (0 . 0 . 0 . 0).
- Text: "Please enter a description for this configuration (Optional)" followed by an empty text box.
- Buttons: "OK" and "Cancel".

Ensure the Generate Subnet Broadcast Address radio button is selected. Enter the subnet address you wish to add in the IP and Subnet Mask fields of the window. Click OK to enter the parameter. The new entry is added to the listing and the checkbox will be checked to activate the new subnet.

- **Edit** – allows you to modify address parameters of any entry in the listing. Highlight the entry you wish to modify and click the Edit button. The Subnet menu is displayed with current parameters for the entry listed. Make any changes you wish and enter OK to commit the changes.
- **Remove** – allows you to remove any subnet from the listing. Highlight the entry you wish to delete and click the Remove button. The entry is immediately removed from the listing.

5.6 NAVIGATING THE CATTRAX ROUTER SCREENS

As shown in Figure 5-2, the Cattrax display screen is divided into five major functional areas: Menu Bar, Devices View Window, Device Properties Window, Menu Display Window and Alarm and Events Window.

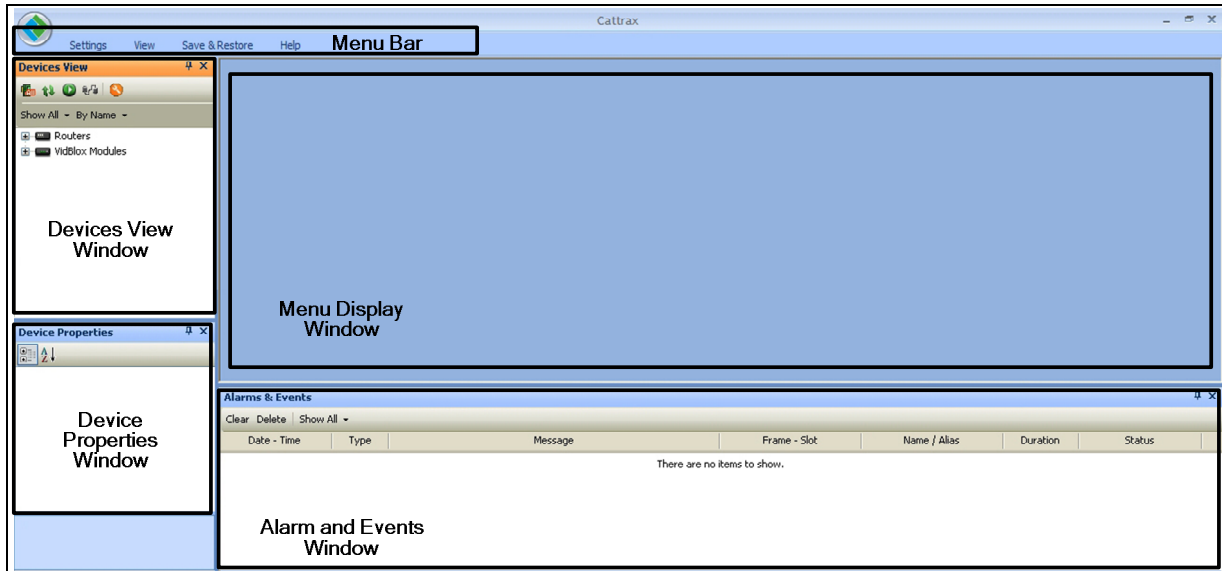


Figure 5-2 Cattrax Main Display Screen

The Menu Bar functions in a similar manner to other Windows® based programs; application specific commands are discussed in detail where appropriate in the operating guide paragraphs.

5.6.1 DEVICES VIEW WINDOW

Cattrax' *Devices View* window, as shown by Figure 5-3, identifies PESA devices on the network. Depending on the view mode selected, Cattrax can display devices that have previously been connected to the network, even if they are currently not active. Depending on the view mode, devices may be displayed in groups by device type as shown. Notice that the heading *Routers* appears in the menu tree with a branch to a Jaguar3 router. When a PESA device is connected to the network, and communication is established, the device ID is displayed as a branch of the menu tree in bold letters. If the *Show Active* mode is selected, only active devices are listed. When the *Show All* view mode is selected the name of devices that have been “discovered” previously but are not currently under active control appear in the menu tree in gray letters; and continue to appear in the menu trees until they are manually removed. You may obtain more information on viewing modes and other operational features and functions of Cattrax by referring to the User Guide for the software application.

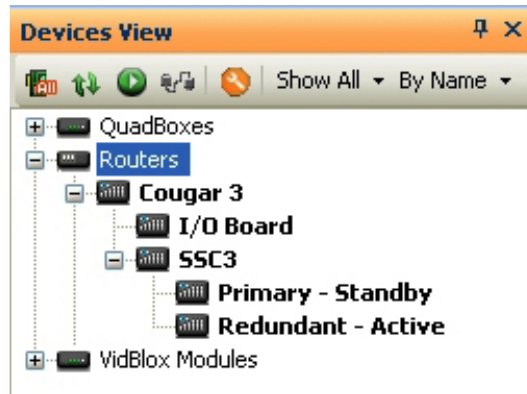


Figure 5-3 Example Devices View Window

5.6.2 ALARMS AND EVENTS WINDOW

The *Alarms and Events* window, Figure 5-4, displays flags when a defined alarm condition occurs or when a defined event occurs within the system. Notice from the example screen that when Cattrax establishes connection with a device, it is flagged as an event; as is disconnecting a device from the network. When a module is discovered and flagged as connected, its identity appears in the Devices View window in bold letters, and the information screen is displayed in the main display window.


Alarms & Events							
Clear Delete Show All ▾							
Date - Time	Type	Message	Type - Serial#	Name / Alias	Duration	Status	
Feb 13-15:43:35	Event	Test Mode Disabled	VidBlox: TX-	VidBlox TX1		<input checked="" type="checkbox"/> Acked	<input checked="" type="checkbox"/> Fixed
Feb 13-15:43:35	Minor	Loopback Monitor Unplugged	VidBlox: TX-	VidBlox TX1	0h 0m	<input type="checkbox"/> Acked	<input type="checkbox"/> Fixed
Feb 13-15:43:34	Major	Fiber Module Missing	VidBlox: TX-	VidBlox TX1	0h 0m	<input type="checkbox"/> Acked	<input type="checkbox"/> Fixed
Feb 13-15:43:34	Event	[VidBlox: TX-] is connected.	VidBlox: TX-	VidBlox TX1		<input checked="" type="checkbox"/> Acked	<input checked="" type="checkbox"/> Fixed
Feb 13-15:43:24	Major	[VidBlox: TX-] is disconnected.	VidBlox: TX-	VidBlox TX1	0h 0m	<input type="checkbox"/> Acked	<input type="checkbox"/> Fixed

Figure 5-4 Example Alarms and Events Screen

5.7 JAGUAR3 ROUTER DEVICE PROPERTIES

When a Jaguar3 router with internal system controller is discovered on the network, its assigned name is added under the Routers parent header. Expanding the menu entry reveals entries for the main circuit boards in the router (denoted as I/O Board) and the internal PERC1500-JAG System Controller (denoted as **Jaguar 3**), Figure 5-5.

Selecting any of the Jaguar3 entries under the parent header displays command or status menus available for the assembly under the *Menu Tree* window area; and also displays operational properties for the selected assembly in the *Device Properties* window area. Figure 5-5 illustrates example Device Properties display for the Jaguar3 Router (left figure) and an I/O Board (right figure). All entries are data display only and can not be modified from the window.

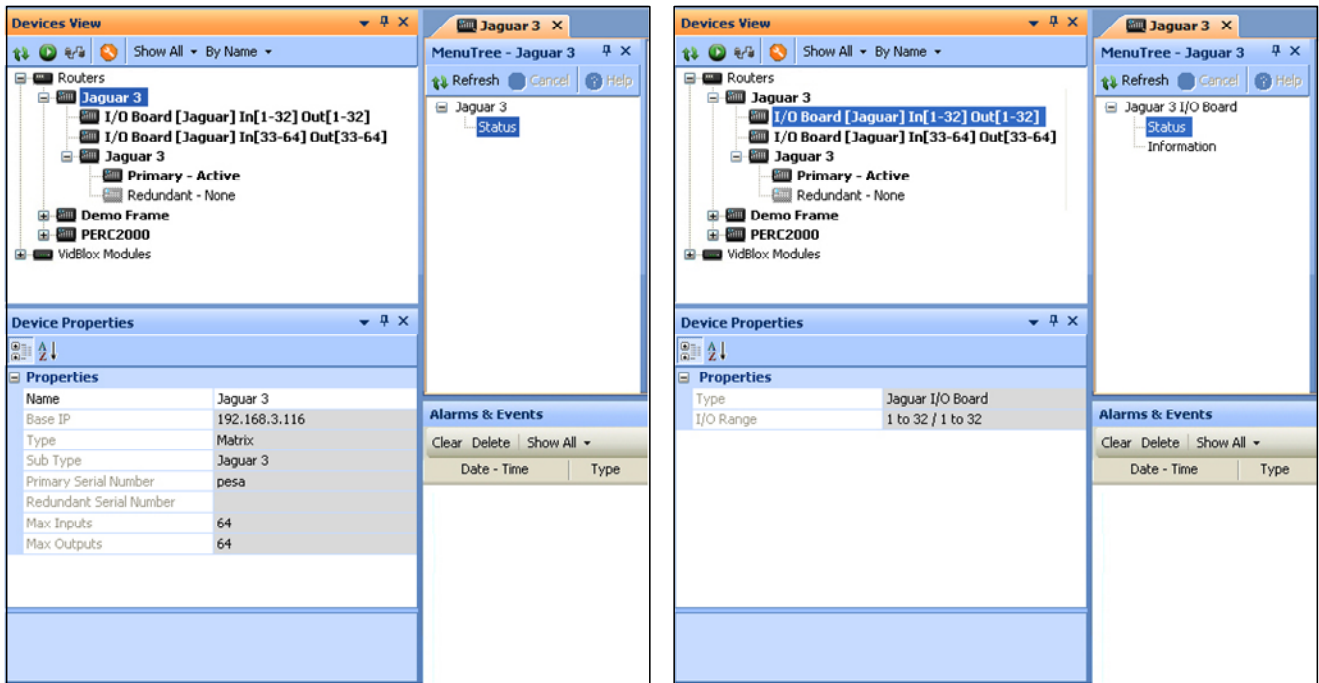

Router Device Properties Display

I/O Board Device Properties Display

Figure 5-5 Example Device Properties Display

5.8 PERC1500-JAG (JAGUAR 3) CONTROLLER DEVICE PROPERTIES DISPLAY

With the top-level **Jaguar 3** controller entry selected, the *Device Properties* window, Figure 5-6, displays controller type and network communication parameters for the internal controller device(s): The upper area of the window, labeled *Jaguar Properties*, is shown with muted fields and displays current status of components of the P1500 controller. Entries in this field cannot be modified.

5.8.1 SETTING JAGUAR 3 CONTROLLER NETWORK PARAMETERS

The lower area of the Device Properties display, labeled *IP Address*, displays current network parameters for the system controller. The Jaguar 3 controller device does not support DHCP protocol, and the factory configured parameters are static until changed.

Factory configured IP address for the system controller:

- PERC1500-JAG installed in primary controller slot - 192.168.1.233
- PERC1500-JAG installed in secondary controller slot – 192.168.1.234

From the Device Properties Display area you may enter new network parameters, including a new **Base IP Address** for the controller devices by entering the new parameters in the active display fields. The newly entered base IP address becomes the assigned address of the primary controller and the secondary controller is assigned the address of *Base IP+1*. Click on *Apply* to apply the changes.

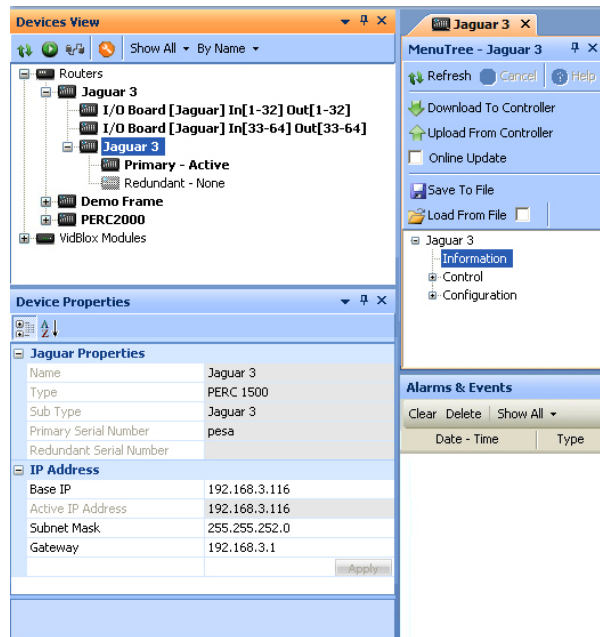


Figure 5-6 Example System Controller Device Properties Display

When you expand the **Jaguar 3** controller entry of the *Devices View* tree, a listing appears that identifies the active or standby status of the Primary and Redundant controller devices, as shown by Figure 5-7. If a redundant controller is present, the current active or standby status of each device is indicated. If no controller device is installed in the redundant slot, the entry is muted and the status is shown as none. When you select either of the device entries, operational parameters for that particular device are shown in the Device Properties display area.

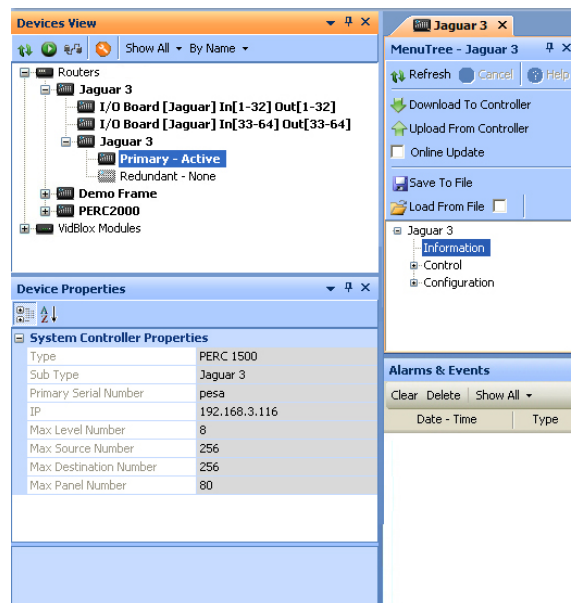


Figure 5-7 System Controller Device Properties

5.9 JAGUAR3 STATUS DISPLAY

Selecting the top level Jaguar3 router entry in the Devices View window displays the Status Overview text boxes as shown in Figure 5-8. The chassis graphic is included on the screen to identify primary and redundant controller module locations.

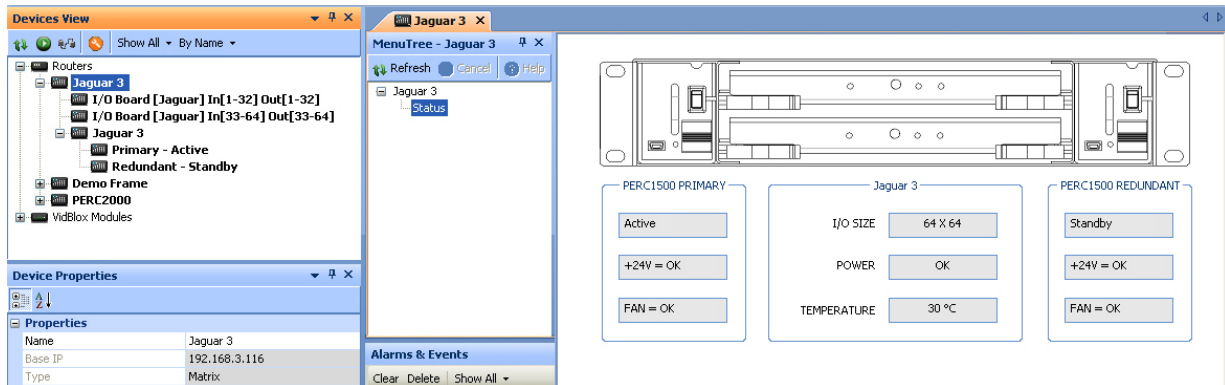


Figure 5-8 Status Display Text Boxes

- **PERC1500 Primary** - Displays following status information for primary P1500 device installed in the primary controller slot:
 - Active/Standby status of controller installed in primary slot
 - OK/Error status of 24V power output from module
 - OK/Error status of controller cooling fan
- **Jaguar 3** - Displays real-time status information for the Jaguar3 router:
 - Matrix size of router in syntax of number of inputs x number of outputs
 - OK/Error status of power feed to main board
 - Measured temperature of surface of main board
- **PERC1500 Redundant** - Displays following status information for secondary P1500 device, if second module is installed in the redundant controller slot:
 - Active/Standby status of controller installed in redundant slot
 - OK/Error status of 24V power output from module
 - OK/Error status of controller cooling fan

5.10 I/O BOARD MENUS

Commands and screens contained under the **I/O Board** parent header in the Devices View Window provide additional and more detailed information of the current operating status of the router main boards.

5.10.1 STATUS

The *I/O Board Status* screen, Figure 5-9, provides real-time display of the following matrix board parameters:

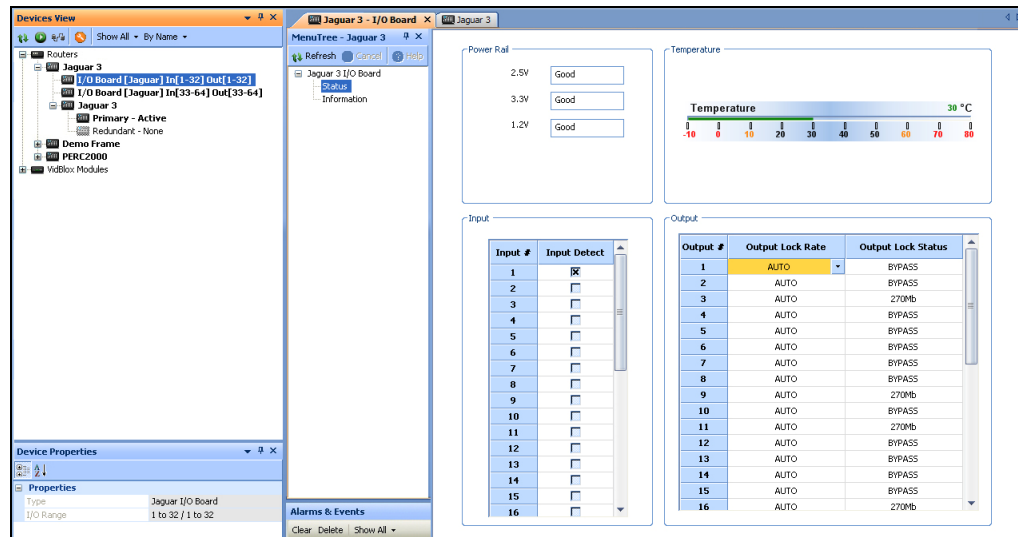


Figure 5-9 I/O Board Status Display Text Boxes

- **Power Rail** - Displays the real-time Good/Bad status of each voltage rail present on the selected main router board.
- **Temperature** - Meter display provides a direct analog readout of current surface temperature of selected main router board.
- **Input** - The Input box displays current status of physical signal input ports to the router. The left-hand column labeled *Input #* lists, by port number, physical inputs available on the router. The right-hand column, labeled *Input Detect*, identifies whether a video signal is currently connected to the physical input. An X in the box associated with a particular input indicates presence of a video signal to the input port.
- **Output** - The Output box displays current status of video output signals from the router. The left-hand column labeled *Output #* lists, by port number, physical outputs of the router. The right-hand column, labeled *Output Lock Status*, displays the re-clocked data rate of the video signal at the output port. The middle column labeled *Output Lock Rate*, opens a pull-down selection box, Figure 5-10, that allows you to specify a data rate for the output signal; select automatic (Auto) rate selection; or Bypass the output re-clocker devices.

Output #	Output Lock Rate	Output Lock Status
1	AUTO	BYPASS
2	Bypass	BYPASS
3	Auto	270Mb
4	HD	BYPASS
5	3G	BYPASS
6	AUTO	BYPASS
7	AUTO	BYPASS
8	AUTO	BYPASS
9	AUTO	270Mb

Figure 5-10 Output Lock Rate Pulldown

5.10.2 INFORMATION

The *I/O Board Information* screen, Figure 5-11, provides real-time display of selected matrix board configuration data.

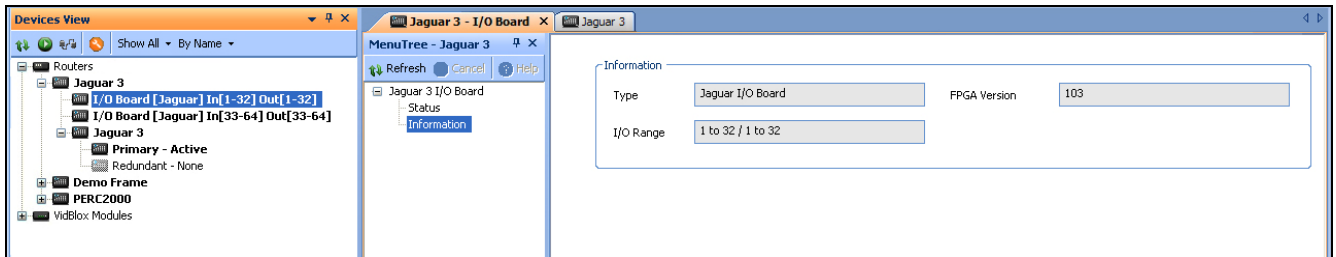


Figure 5-11 I/O Board Information Display

- **Information -**
 - **Type** – Identifies the device as a Jaguar I/O Board.
 - **I/O Range** – Displays the numerical range of the input and output ports of the router.
 - **FPGA Version** – Identifies the version number of firmware code loaded into the on-board FPGA device.

5.11 INTERNAL SYSTEM CONTROLLER (JAGUAR 3) MENUS

Commands and screens contained under the **Jaguar 3** controller header in the *Devices View* window, Figure 5-12, allow you to control and monitor functions of the P1500 system controller module internal to the Jaguar3 video router frame; as well as create, modify or save router configuration files for the controller.

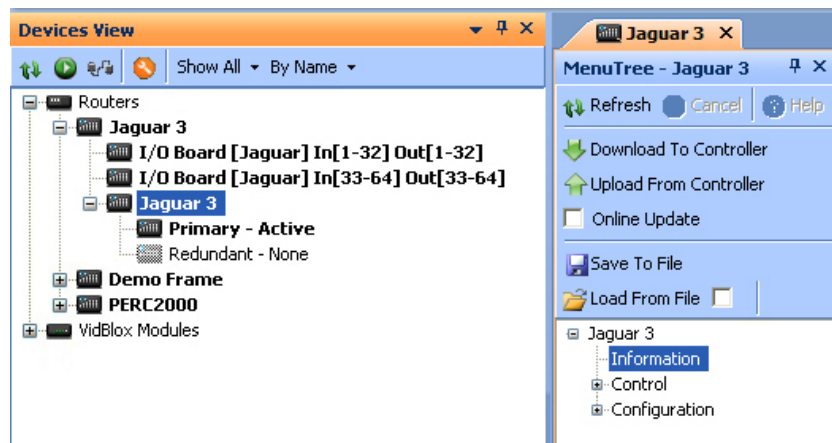


Figure 5-12 System Controller Menu Tree Commands

5.11.1 JAGUAR 3 FILE COMMANDS

Anytime the Jaguar 3 controller menu entry is selected from the *Devices View* window, a shaded box containing commands that are specific to the router configuration file is displayed as the top item of the Menu Tree, as shown by Figure 5-13.

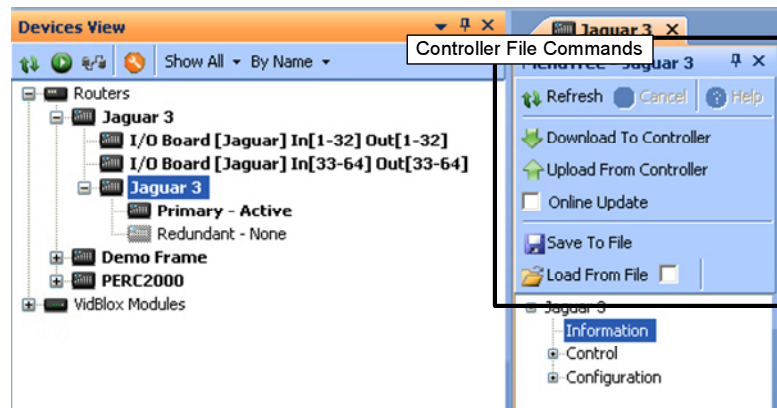


Figure 5-13 Controller File Commands

- **Refresh** – Refreshes currently displayed menu.
- **Cancel** – Cancels a requested action.
- **Help** – Access help files.
- **Download To Controller** – Downloads the currently open configuration to the system controller. The currently active controller configuration will be deleted from controller memory and replaced with the downloaded file.
- **Upload From Controller** – Reads and opens the configuration file currently stored in system controller memory.
- **Online Update** – If the GUI is actively connected to the system controller, checking this selection activates the online update function. Refer to Paragraph 5.16 of this User Guide.
- **Save To File** - Saves the configuration file currently open in Catman under a filename of your choosing.
- **Load From File** – Allows you to load and open a saved configuration file from media such as a hard drive or thumb drive for review or modification. Anytime a saved file is loaded as the currently displayed configuration file, a check mark appears in the small box beside the Load from File command entry as a visual indication that the configuration file currently open in Catman is not the currently active controller configuration file.

5.11.2 JAGUAR 3 INFORMATION SCREEN

When the Jaguar 3 controller *Information* entry is selected from the menu tree, the screen shown by Figure 5-14 displays the following status information for controllers present in the video frame.

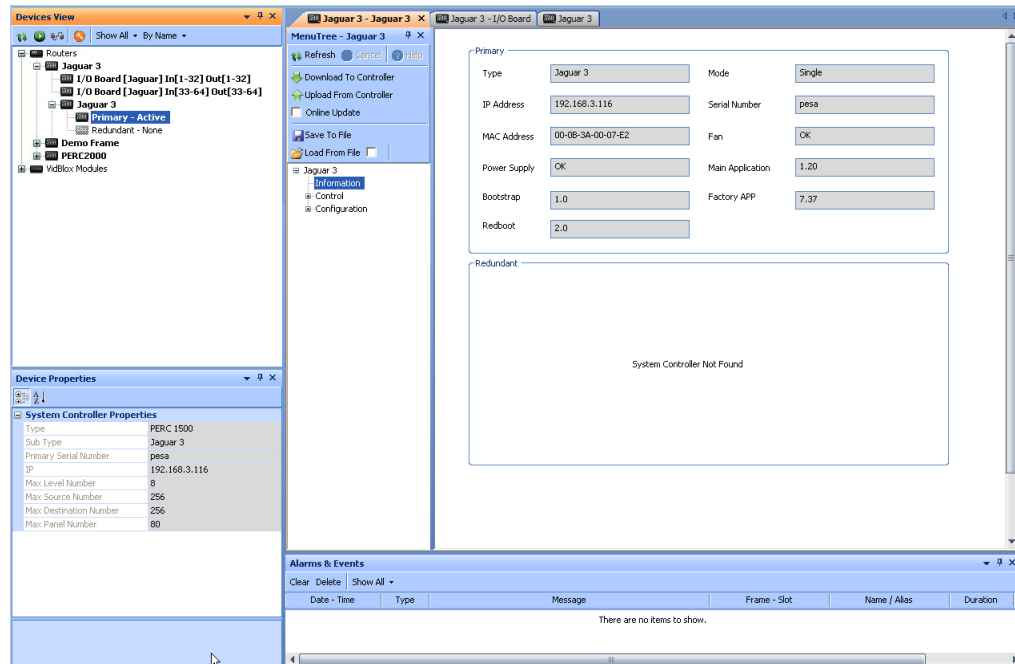


Figure 5-14 Example Information Display Screen


- **Type** – Identifies the controller as a Jaguar 3 (P1500-J) controller device for a Jaguar3 router frame.
- **Mode** – If a redundant controller is installed, this entry identifies whether the indicated controller device is currently functioning as the active or standby device for the frame.
- **IP Address** – Displays the IP address assigned to the indicated small scale controller device. The Primary controller assumes the base IP address assigned to the router and the Redundant controller, if present, assumes the IP address of base IP + 1.
- **Serial Number** – Displays the serial number of the controller device installed in the indicated position.
- **MAC Address** – Identifies assigned MAC address for module.
- **Main Application** – Indicates revision level of main program firmware loaded into controller.
- **Power Supply** – Displays the status of the power supply device contained on the indicated controller module.
- **Fan** – Indicates current status of cooling fan on-board the indicated controller module.

5.12 JAGUAR 3 CONTROL MENU

Commands and screens contained under the Jaguar 3 controller *Control* parent header in the Menu Tree allow you to monitor status and issue direct control commands to certain functions of the system controller.

5.12.1 MATRIX STATUS

The *Matrix Status* screen, Figure 5-15, allows you to monitor current status of the entire switching matrix, presented in a spreadsheet format of rows and columns. For each listed destination the spreadsheet columns provide the following information:

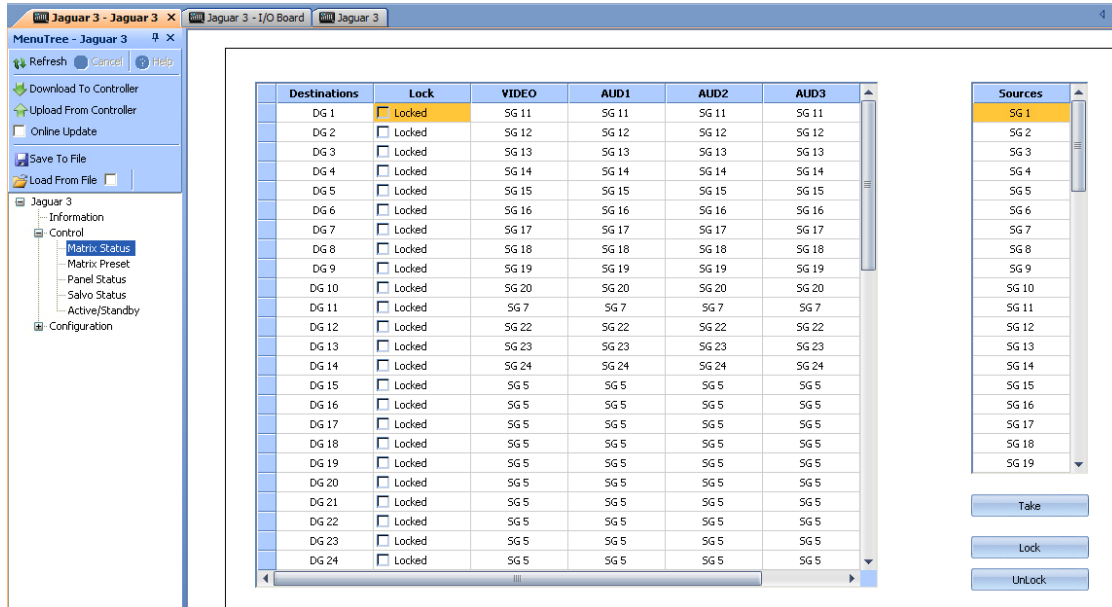

Destinations	Lock	VIDEO	AUD1	AUD2	AUD3
DG 1	<input checked="" type="checkbox"/> Locked	SG 11	SG 11	SG 11	SG 11
DG 2	<input type="checkbox"/> Locked	SG 12	SG 12	SG 12	SG 12
DG 3	<input type="checkbox"/> Locked	SG 13	SG 13	SG 13	SG 13
DG 4	<input type="checkbox"/> Locked	SG 14	SG 14	SG 14	SG 14
DG 5	<input type="checkbox"/> Locked	SG 15	SG 15	SG 15	SG 15
DG 6	<input type="checkbox"/> Locked	SG 16	SG 16	SG 16	SG 16
DG 7	<input type="checkbox"/> Locked	SG 17	SG 17	SG 17	SG 17
DG 8	<input type="checkbox"/> Locked	SG 18	SG 18	SG 18	SG 18
DG 9	<input type="checkbox"/> Locked	SG 19	SG 19	SG 19	SG 19
DG 10	<input type="checkbox"/> Locked	SG 20	SG 20	SG 20	SG 20
DG 11	<input type="checkbox"/> Locked	SG 7	SG 7	SG 7	SG 7
DG 12	<input type="checkbox"/> Locked	SG 22	SG 22	SG 22	SG 22
DG 13	<input type="checkbox"/> Locked	SG 23	SG 23	SG 23	SG 23
DG 14	<input type="checkbox"/> Locked	SG 24	SG 24	SG 24	SG 24
DG 15	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 16	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 17	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 18	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 19	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 20	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 21	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 22	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 23	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5
DG 24	<input type="checkbox"/> Locked	SG 5	SG 5	SG 5	SG 5

Figure 5-15 Matrix Status Display

- **Destinations** – This column is a listing, by name, of every destination in the system as assigned through the Destinations Configuration screen.
- **Lock** – If a check mark appears in the box, the destination is locked. Destinations can be locked from system remote control panels or from this status screen.
- **Switching Levels** – There is a column for each switching level as assigned through the Levels Configuration screen.

For each destination, the lock status is displayed and the source switched to it is identified by switching level(s). For example, looking at Figure 5-15, the destination named DG1 is currently in an unlocked status and the source named SG11 is switched to DG1 on the VIDEO level. If any cell in a switching level column is blank, there is no active switch for the indicated level.

A scroll box on the right-hand side of the screen contains a list of all sources by name as assigned through the Sources Configuration screen. Three click buttons labeled **Take**, **Lock** and **UnLock** are located beneath the scroll box. Using the source list and the click buttons you can make on the fly changes to the matrix configuration. Suppose that while monitoring the matrix status screen, you have a need to change the source of destination DG4 from SG14 to SG8 on the VIDEO level:

- Click the cursor in the cell on DG4 row under the VIDEO column – the cell will highlight.
- Locate SG8 in the Sources scroll list and click in the cell – it will highlight.

- The switch may be taken in one of two ways: you may double click on the source entry or click on the **Take** button. Once the switch is taken, the destination status cell for VIDEO will reflect the new source selection.
- **Lock** and **Unlock** buttons allow you to lock or unlock a destination. Move the cursor to the cell under the Lock column of the destination you wish to lock or unlock. If the destination is currently unlocked, clicking the lock button will lock it; if the destination is currently locked, clicking the unlock button will unlock it.

5.12.2 MATRIX PRESET

The *Matrix Preset* screen, Figure 5-16, allows you to preset switches for any valid destination and source pairing in the system. Preset switches can be taken simultaneously, or selectively, directly from this menu screen.

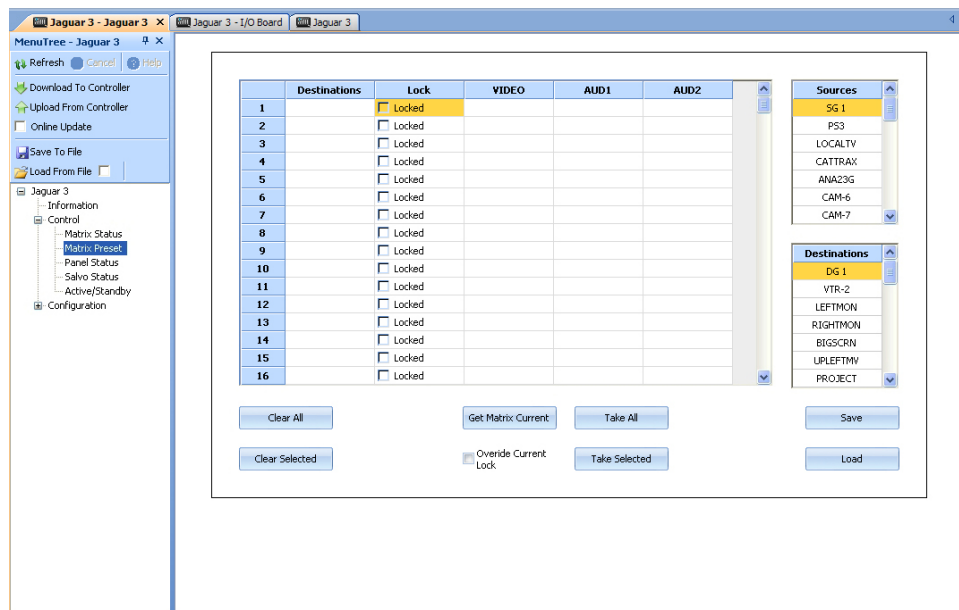


Figure 5-16 Matrix Preset Display


- **To Preset a Switch:**

- Move the cursor to a clear cell under the **Destinations** column and click to highlight the cell. Locate the desired destination for the switch in the **Destinations** scroll box and double click the entry. The selected destination name displays in the cell.
- If you wish to lock the destination once the switch is made, click the box in the **Lock** column.
- Move the cursor to the cell under the column of the level on which you wish the switch to occur and click to highlight the cell. Locate the desired Source for the switch in the **Sources** scroll box and double click the entry to paste the selection in the cell. Repeat this procedure for all switching levels on which you wish the switch to occur.
- Repeat the previous steps to define other destinations, sources and levels on which you wish to take a switch.

- Pressing the **Take All** button causes all the preset switches to occur simultaneously.
- Switches can be selectively chosen by highlighting one or more destination cells and pressing the **Take Selected** button.
- **Clear All** - Clears all preset entries from the screen.
- **Clear Selected** - Clears only highlighted presets from the list.
- **Get Matrix Current** - Polls the controller device and displays current status of the switch matrix.
- **Override Current Lock** – If you have preset a switch combination that will modify a currently locked switch, checking this box will temporarily override the lock, allow the preset switch and re-lock the path.
- **Take All** – Clicking this button will execute all switches entered on the matrix preset screen.
- **Take Selected** – Clicking this button will execute only switches that are highlighted on the matrix preset screen.
- **Save** – Saves the current preset matrix screen for future use.
- **Load** – Loads a saved preset matrix file.

5.12.3 PANEL STATUS

The *Panel Status* screen, Figure 5-17, displays the current status of all PNet control panels in the router system. Each entry in the spreadsheet is described below:

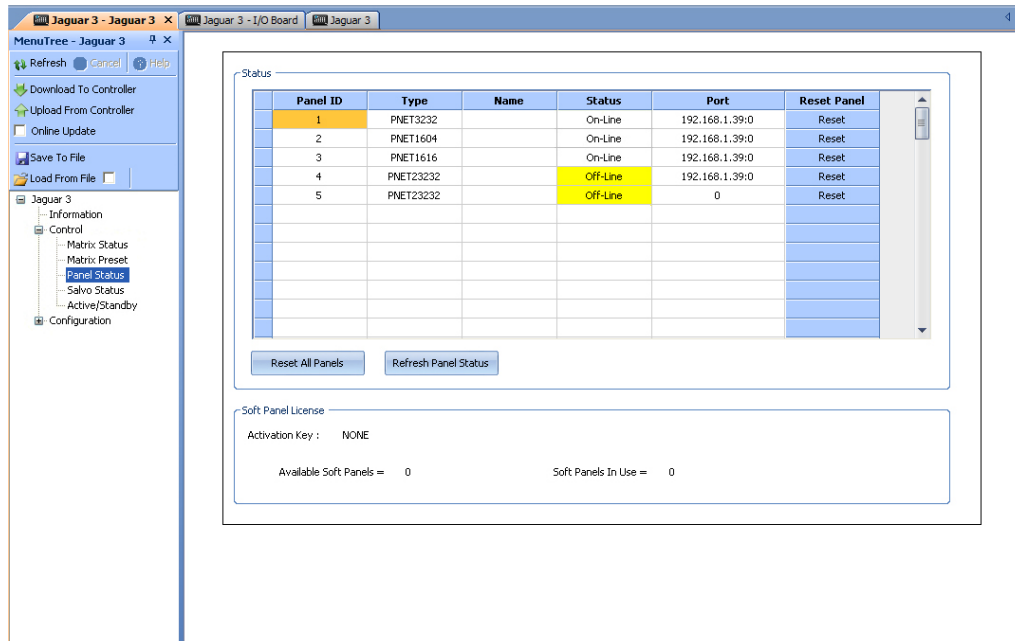

Panel ID	Type	Name	Status	Port	Reset Panel
1	PNET3232		On-Line	192.168.1.39:0	Reset
2	PNET1604		On-Line	192.168.1.39:0	Reset
3	PNET1616		On-Line	192.168.1.39:0	Reset
4	PNET23232		Off-Line	192.168.1.39:0	Reset
5	PNET23232		Off-Line	0	Reset

Reset All Panels Refresh Panel Status

Soft Panel License
 Activation Key : NONE
 Available Soft Panels = 0 Soft Panels In Use = 0

Figure 5-17 Panel Status Display

- #### 5.12.4 SALVO STATUS

The screenshot displays the Jaguar 3 software interface. On the left is a 'MenuTree - Jaguar 3' sidebar with a tree view containing 'Information', 'Control', 'Matrix Preset', 'Matrix Status', 'Panel Status', 'Salvo Status' (highlighted), 'Active/Standby', and 'Configuration'. Below the tree are buttons for 'Refresh', 'Cancel', 'Help', 'Download To Controller', 'Upload From Controller', 'Online Update', 'Save To File', and 'Load From File'. The main area features a table with columns 'Destinations', 'VIDEO', 'AUDIO 1', and 'AUDIO 2'. The table lists 20 destinations (OUT1 to OUT20), all with 'IN1' in the other columns. To the right of the table is a 'Salvo Groups' list with 'ALL IN1', 'DIAGONAL', and 'UNDO' selected. A 'Fire Salvo' button is at the bottom right.

Destinations	VIDEO	AUDIO 1	AUDIO 2
OUT1	IN1	IN1	IN1
OUT2	IN1	IN1	IN1
OUT3	IN1	IN1	IN1
OUT4	IN1	IN1	IN1
OUT5	IN1	IN1	IN1
OUT6	IN1	IN1	IN1
OUT7	IN1	IN1	IN1
OUT8	IN1	IN1	IN1
OUT9	IN1	IN1	IN1
OUT10	IN1	IN1	IN1
OUT11	IN1	IN1	IN1
OUT12	IN1	IN1	IN1
OUT13	IN1	IN1	IN1
OUT14	IN1	IN1	IN1
OUT15	IN1	IN1	IN1
OUT16	IN1	IN1	IN1
OUT17	IN1	IN1	IN1
OUT18	IN1	IN1	IN1
OUT19	IN1	IN1	IN1
OUT20	IN1	IN1	IN1

Salvo Groups

- ALL IN1
- DIAGONAL
- UNDO

Fire Salvo

Selecting an entry in the **Salvo Groups** listing displays the destinations and sources, by switching level, contained in the salvo group. You may immediately “take” the salvo group by clicking the **Fire Salvo** button.

5.12.5 ACTIVE/STANDBY

For both the Primary and Redundant PERC1500-JAG controller in the frame, the *Active/Standby* status screen, Figure 5-19, displays the IP address and current operating mode. If the router is not equipped with a redundant controller module, the IP address of the primary module is displayed and the mode box indicates that the module is the *single* controller for the router. If the router contains a redundant controller, the *active* or *standby* status of each module is displayed along with a pair of radio buttons that allow you to swap the active controller. You may use the *Set Mode* buttons in either controller status window to initiate the status toggle. A pop-up prompts you to verify the action before the status toggle is implemented.

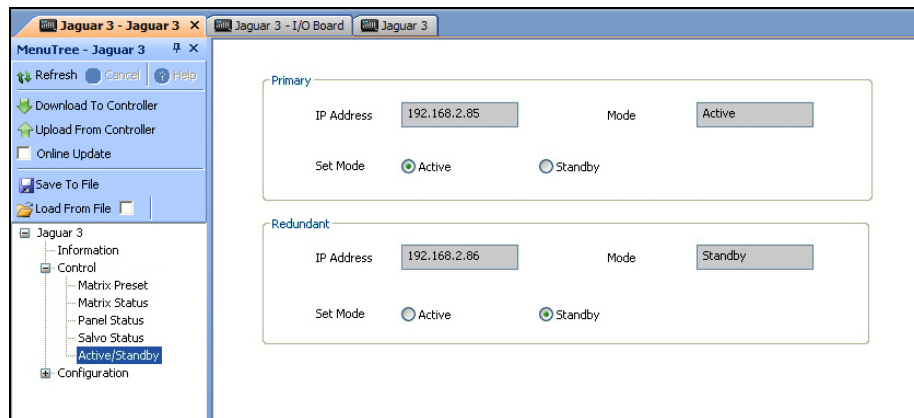


Figure 5-19 Active/Standby Menu Screen

5.13 ROUTER CONFIGURATION

Configuring a routing switcher requires working knowledge of the hardware and the router operational modes and functions. The configuration capabilities available through Catrax and presented in the following paragraphs assume the user has the knowledge of switching functions and terminologies required to configure a system. Be aware that system changes you can make through the commands and screens discussed in the following paragraphs configure virtually all operational aspects of the Jaguar 3 router.

- **Mistakes or erroneous entries made in many of the following configuration steps can cause serious problems ranging from incorrect sources being switched to total shutdown of the router.**
- **Be sure you know exactly what you want to do before you make changes to router configuration.**

When the Jaguar 3 controller *Configuration* menu tree is first accessed, there is no configuration file data loaded or open in the Catrax control software. You have two options from which to select the type of configuration operation you wish to perform, either option allows you to view or modify an existing configuration file:

- Load an existing configuration file from a previously saved and stored file.
- Upload the currently active configuration file stored in Jaguar 3 controller flash memory. This action requires that the host PC and the Jaguar 3 router be connected via an Ethernet interface.

In order to view or modify the currently active configuration file loaded into the Jaguar 3 controller, you must upload the configuration file from the active system controller by one of two methods:

- Select the **Upload from Controller** command from the System Controller File commands menu as shown in Figure 5-13.
- Select any command from the Jaguar 3 Configuration menu trees and you will be prompted with a decision box giving you the option to upload the current configuration file from the controller's flash memory.

Until you have performed one of these two actions, there is no “working” file data loaded into Catrax, and every time you select any configuration menu item, with no configuration file loaded, you will be prompted with a decision box to upload the current configuration file from the controller.

As most configuration data is entered or modified through Catrax menu commands, it is stored on the host PC – and only on the host PC. Changes entered do not get saved to a file, written to the Jaguar 3 controller, or become active, until the operator issues a command through Catrax to either save or download the configuration data. Once a configuration file is created or modified, use the “**Download to Controller**” command in the File Commands menu to immediately download the file to the system controller hardware and activate the configuration changes.

It is not necessary to have an active connection between the host computer and the system controller to create and save a configuration file. But in order to download a configuration, upload the current configuration file from the controller or to perform any status monitoring or maintenance/diagnostics procedures the host PC must have communication with the Jaguar 3 router.

Each configuration file will be different to satisfy a specific system requirement. However, the following are some basic steps that are common to building each router configuration file.

- Assign System Operating Parameters.
- Set up Levels and Components for the application.
- Define and assign Sources and Destinations for each level that correspond to external equipment connected to the router.
- Define special application functions such as Source-to-Destination Blocks and Salvo Groups.
- Configure PNet Control Panels and define specific application functions to configurable control panel keys.

5.14 JAGUAR 3 CONTROLLER CONFIGURATION SCREENS – RIGHT MOUSE CLICK FUNCTIONS

As with most applications based on the Microsoft Windows® operating system, Catrax contains several application-specific functions for various configuration command or data entry operations that are accessed by clicking the right mouse button and selecting the desired operation. Functions and commands presented on the right click menu vary greatly between screens and data entry cells or fields. The example shown by Figure 5-20 illustrates a typical menu for Jaguar3 specific data entry editing and short-cut functions. Not all commands shown below will appear on every right-click menu.

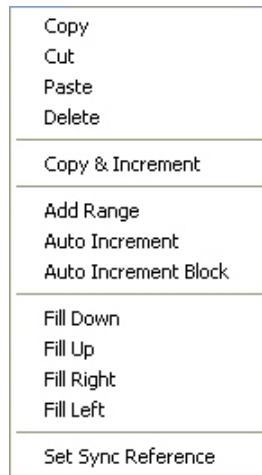


Figure 5-20 Typical Right-Click Mouse Commands

5.14.1 COPY, CUT, PASTE, DELETE

The Copy, Cut, Paste and Delete Commands in Catrax function exactly as the standard Windows® functions.

5.14.2 QUICK DATA ENTRY TOOLS

For many data entry operations, such as source and destination spreadsheets, that require you to enter repetitive information, such as Inputs, Outputs, etc., there are additional commands available from the right mouse click menu. Commands vary depending on the system screen and grid column you are working with:

Copy & Increment

Copy & Increment allows you to quickly fill fields of a configuration grid by duplicating the text and incrementing the numerical value of a starting entry into fields selected by a user-defined data block. Copy & Increment always fills in all valid fields of the data grid lines within the selected block, but it behaves differently depending on where from the grid you select the starting values fields.

If you choose a starting field from any of the name columns of the grid, and do not include any of the numerical entry fields in the switching level columns when defining the size of the fill block, as shown by the diagram below, the text entry of the name will be duplicated in each field of the defined block, and the numerical value associated with the name fields only will be incremented by one in each successive field of the fill block. All of the numerical values in the switching level columns will be filled with zeros, as shown.

DEMOD 1	10

→

DEMOD 1	10
DEMOD 2	0
DEMOD 3	0
DEMOD 4	0
DEMOD 5	0

Copy and Increment Example 1

If you choose a starting field from the name columns of the grid, and you do include numerical entry fields under the switching level columns when defining the fill block, as shown below, the text entry of the name will be duplicated in each field of the defined block, and the numerical value associated with the name will be incremented by one in each successive field of the fill block. All of the numerical values in the switching level columns included in the data block will be incremented by one in each successive field, as shown. Numerical fields NOT included in the defined data block will be filled with zeros.

There are a couple of rules you need to be aware of when using the Copy and Increment function:

- The fill block you define with the mouse must include at least one of the name columns, and the name entry in the starting field must end in a numerical value, such as DEMOD1, DEMOD2, etc.
- Numerical values under any of the switching level columns will be incremented by one up to the maximum number of physical inputs or outputs defined for the level. If the fill block contains additional lines after any level column reaches the maximum number, any successive fields in that column will be filled with zeros.

DEMOD 1	10

→

DEMOD 1	10
DEMOD 2	11
DEMOD 3	12
DEMOD 4	13
DEMOD 5	14

Copy and Increment Example 2

Auto Increment

The Auto Increment function increments the numerical value of a starting entry into the fields of a user-defined fill block located below and in the same column as the starting entry. You must choose a starting field from a numerical entry field in any of the switching level columns when defining the fill block, as shown by the diagram below. Numerical values in the selected column will be incremented by one in each successive field, as shown. The Auto Increment function will only add numerical values if every line of the fill block already has a name, such as assigned to a source or destination, associated with the level.

Numerical values under the selected switching level column will be incremented by one up to the maximum number of physical inputs or outputs defined for the level. If the fill block contains additional lines after any switching level column reaches the maximum number, any successive fields in that column will be filled with zeros.

DEMOD 1	10		DEMOD 1	10
DEMOD 2			DEMOD 2	11
DEMOD 3			DEMOD 3	12
DEMOD 4			DEMOD 4	13
DEMOD 5			DEMOD 5	14

Auto Increment Function

Auto Increment Block

Auto Increment Block is very similar to the Auto Increment function, the difference being that it allows the fill block to consist of multiple switching level columns, as shown by the diagram. Auto increment block always uses the field in the upper left corner of the fill block as the starting value entry, and fills successive fields with numerical values, incremented by a value of one, from left to right and top to bottom. The Auto Increment Block function will only add numerical values if every line of the fill block already has a name, such as assigned to a source or destination, associated with the level.

Numerical values filled in the switching level columns will be incremented by one up to the maximum number of physical inputs or outputs defined for the level in the starting entry field. If the fill block contains additional fields after any field in the block reaches the maximum number, any successive fields in the remainder of the fill block will be filled with zeros.

AUD 1	10		AUD 1	10	11
AUD 2			AUD 2	12	13
AUD 3			AUD 3	14	15
AUD 4			AUD 4	16	17
AUD 5			AUD 5	18	19

Auto Increment Block Function

Fill-Down

Fill-Down fills in the fields below a selected field with the selected number. First, select the field with the number you want to duplicate and then, select the fields below it. Right-click and select Fill-Down to fill in the fields with the selected number, as shown.


5	

5
5
5
5
5

Fill-Down Command

Fill-Up


Fill-Up fills in fields above a selected field with the same information. First, select the field with the number you want to duplicate and then, select the fields above it. Right-click and select Fill-Up to fill in the fields with the selected information, as shown by the diagram.

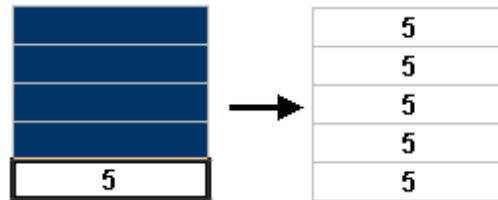

Fill-Up Command

Fill-Right


Fill-Right fills in the fields to the right of a selected field with the selected number(s). First, select the fields with the numbers you want to duplicate and then, select the fields to the right. Right-click and select Fill-Right to fill in the fields with the selected numbers. You can select either one field or several fields with this function, as shown.

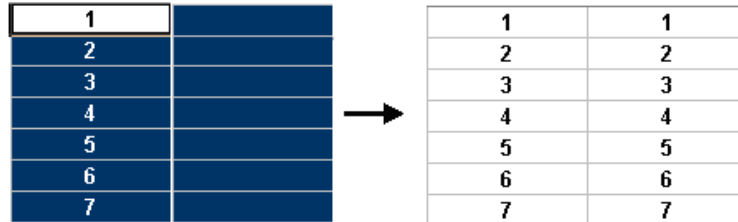

Fill-Right Command

Fill-Left

Fill-Left fills in the fields to the left of a selected field with the selected number(s). First, select the fields with the numbers you want to duplicate and then, select the fields to the left. Right-click and select Fill-Left to fill in the fields with the selected numbers. You can select either one field or several fields with this function, as shown by the diagram

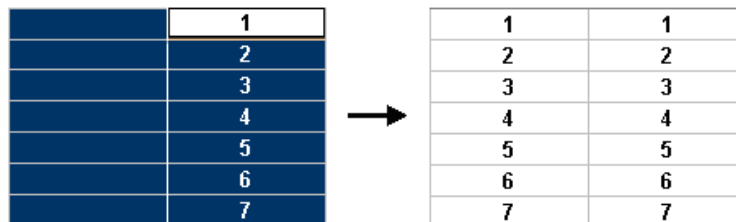


Fill-Left Command

5.15 JAGUAR 3 CONTROLLER CONFIGURATION COMMANDS

Each command contained under the Jaguar 3 controller *Configuration* parent header in the Menu Tree window is discussed in the following paragraphs.

5.15.1 SYSTEM PARAMETERS

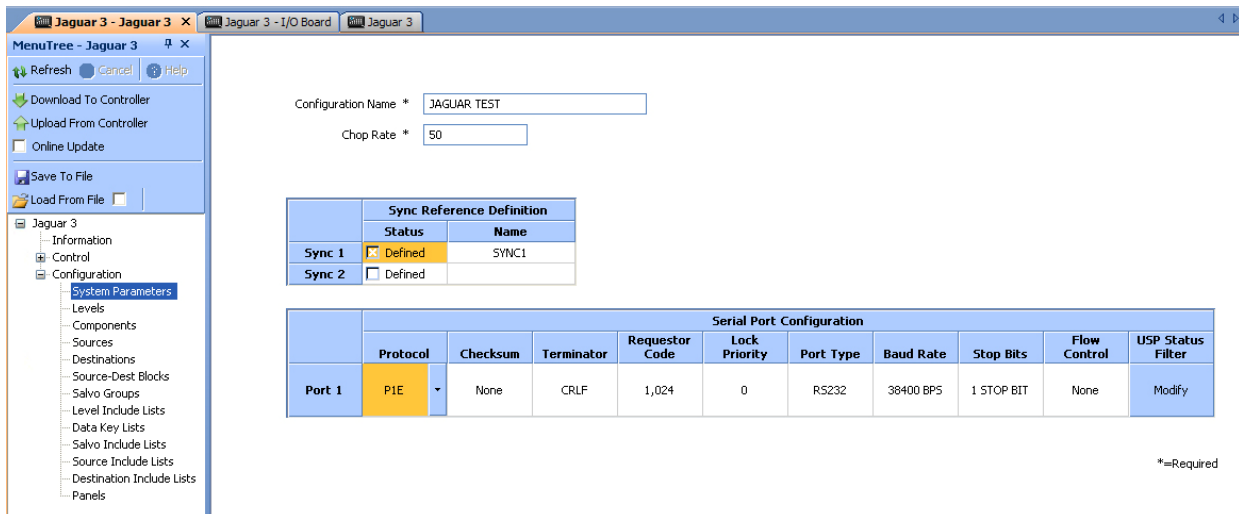

Configuration Name * JAGUAR TEST

Chop Rate * 50

Sync Reference Definition	
Status	Name
<input checked="" type="checkbox"/> Defined	SYNC1
<input type="checkbox"/> Defined	

Serial Port Configuration										
	Protocol	Checksum	Terminator	Requestor Code	Lock Priority	Port Type	Baud Rate	Stop Bits	Flow Control	USP Status Filter
Port 1	PIE	None	CRLF	1,024	0	RS232	38400 BP5	1 STOP BIT	None	Modify

*Required

Figure 5-21 System Parameters Screen

- **Configuration Name** - This field allows you to name the configuration file. Type the desired name in the Configuration Name box. Configuration names may have up to 32 alphanumeric characters.
- **Chop Rate** - Chop Rate indicates the frame rate of switches used by the Chop mode of operation. To change the chop rate, enter the desired value in the Chop Rate box. Any desired Chop Rate between 1 and 255 frames is supported by the controller. Default value of this parameter is 10 frames.
- **Sync Reference Definition** - Jaguar3 allows input of up to two sources of external Sync Reference signals for synchronizing switching times and destination output signals. The cells in this field allow you to define the sync sources.
 - **Status** – When a sync source is attached to the indicated input and the source is defined in the configuration, click in the Defined box. An X in the box indicates that the sync source is defined.
 - **Name** – Enter an alphanumeric string in each cell to assign a name to the sync source.

- **Serial Port Configuration** - The Serial Port Configuration portion of the System Parameters Window allows you to configure the serial port on the Jaguar 3 controller.

The following data fields are used for port configuration:

- **Protocol** - This entry allows you to choose, from a pull-down menu, the protocol defining the format used when sending data through the serial port on the Jaguar 3 controller.

	Protocol	Checksum
Port 1	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> None PIE </div>	None

- **None** – Select *None* when using PNet panels or other Ethernet interface control method
 - **PIE** – Select *PIE* when using an external control method that interfaces to Jaguar3 through the serial data port and supports the PESA PIE interface protocol in accordance with PESA document 81-9062-0407-0)
- **Checksum** - A checksum determines how the validity of transmitted data is confirmed. There are three available checksum types:
 - **NONE** - No validity checking.
 - **PESA** - Data validity is checked using PESA's standard method. (See Protocol documentation.)
 - **HEX** - Data validity is checked using a standard HEX-ASCII checksum.
 - **Terminator** - Terminator identifies the character(s) used to denote the end of a data packet or command string. Three terminators are available:
 - **CR** - A carriage return.
 - **LF** - A line feed.
 - **CRLF** - A carriage return followed by a line feed.


- **Requestor Code** - A Requester Code is used in conjunction with Lock Priority to determine if a lock or protect function can be removed. When a lock or protect has been assigned by a port (or panel), it can only be removed by another port (or panel) with a higher lock priority or with the same lock priority and same requester code.

Permitted range of requester codes is 1 – 65535; requester code not explicitly defined automatically defaults to 1024.

- **Lock Priority** - Lock Priority is used in conjunction with Requester Code to determine if a lock or protect function can be removed. When a lock or protect has been assigned by a port or panel, it can only be removed by another port or panel with a higher lock priority, or with the same lock priority and same requester code. The lower the lock priority number, the higher the priority.

Port lock priorities not explicitly defined automatically default to “0” which gives absolute authority to clear any lock or protect on the system. Permitted range of lock priorities is 0-255 (“0” is Highest Priority).

- **Port Type** - This pull down menu allows you to assign either the RS-422 or RS-232 operational protocol to the bus being configured.
- **Baud Rate** - Baud rate is the data transfer rate through the serial port measured in Baud (bits per second). A baud rate of either 9600 or 38400 may be assigned to any of the serial buses.
- **Stop Bits** - In asynchronous communications, a stop bit indicates that a byte of data has just been transmitted. Every byte of data is preceded by a start bit and followed by a stop bit. Either 1 or 2 stop bits may be selected for the serial port.
- **Flow Control** - Flow Control is a serial data stream parameter that specifies a control method for data transmission. Flow control options available through a pull-down menu in PERC2000 include RTS/CTS, XON/XOFF or NONE.
- **USP Status Filter** - The USP Status Filter determines which events are reported when the port is defined as USP. An example Status Filter Selection Screen is shown below, and identifies the events that may be selected for reporting. To activate an event, click in the box beside the desired entry. A check in the box indicates the item is selected.

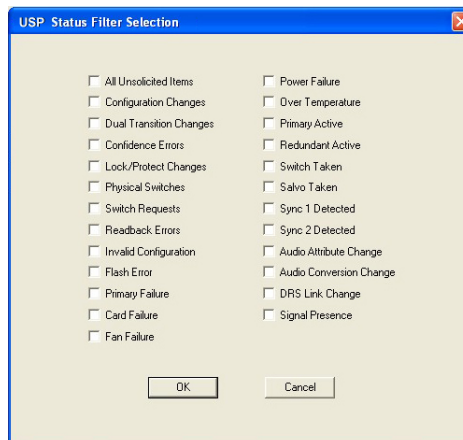

5.15.2 LEVELS CONFIGURATION

When the **Levels** menu entry is selected, the *Levels* configuration screen, Figure 5-22, is displayed. From this screen you can assign and enter operational parameters for up to 8 system switching levels. The box labeled *Levels* on the left side of the display window contains a listing of all the assigned switching levels in the router, by nickname; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing switching levels.

When you configure a switching level: add and name the level, define the I/O size of the level and level properties, then select the component or components that map the desired physical hardware and I/O signals to the switching level. Remember that each switching level must have at least one mapped component; from a configuration process this means that the components you wish to map must be created before you can define the switching level.

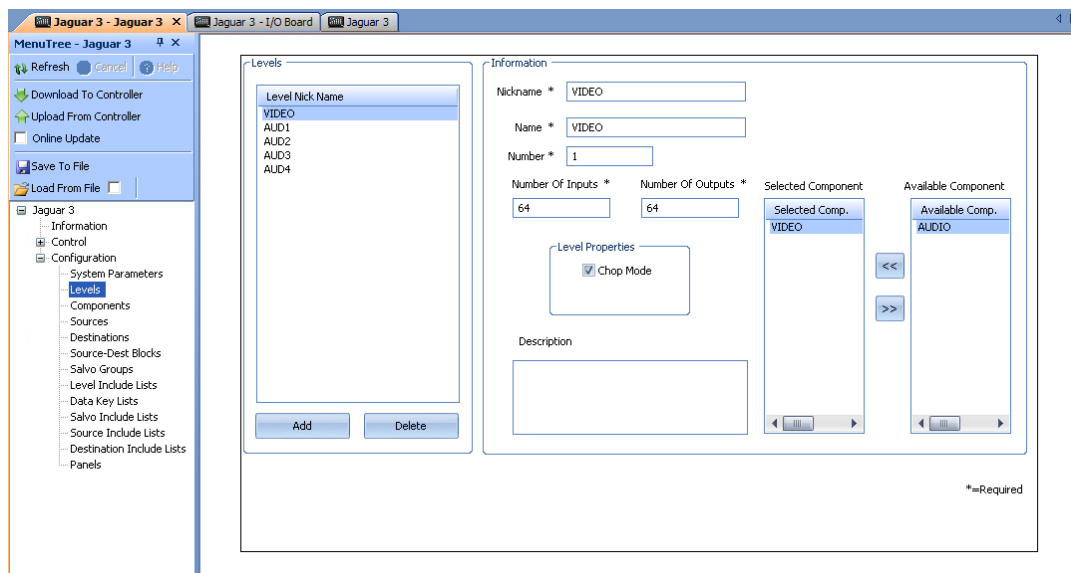


Figure 5-22 Levels Configuration Screen

- **Adding a Level** –Jaguar 3 allows a maximum of 8 switching levels. To add a level, click the **Add** button at the bottom of the Levels box to access a blank set-up screen in the Information box.
- **Deleting a Level** - To delete a level, locate the nickname of the level you wish to delete in the Levels box and click on the name to select it. Click **Delete** at the bottom of the box.
- **Nickname** – The assigned Nickname is a label associated with the level and is the character string displayed on status display screens for the defined switching level. In order to assign the level a nickname, click the cursor in the *Nickname* field and enter the nickname label text.

Once nickname text is assigned to a level, the nickname character string is displayed as a sub-entry in the Levels box. Any time you wish to return to the set-up screen for a particular level, simply click on the nickname sub-entry under the Level Nick Name header.

- **Name** - The *Name* field allows a longer and more descriptive name for the level. This field is often used to assign a name to the level that more accurately identifies its function.


Generally, when assigning names and nicknames, the *Name* field is a longer more precise description of the defined level and the *Nickname* field is a shortened acronym or mnemonic used to identify the level on display devices or screens.

- **Number** - The user-assignable *Number* field allows you to enter a number that determines the display order if you sort the switching levels by number, and also determines the entry display order when scrolling through levels on remote control panels. Each switching level may be assigned a sort number with the caveat that each entry must be numeric, greater than zero, must be unique among other level entries and must be consecutive.
- **Number of Inputs** – Enter the number of input sources associated with the defined level.
- **Number of Outputs** – Enter the number of output signals associated with the defined level.
- **Chop Mode** - When this box is checked it indicates the level is “chop enabled” and may be included in a chop function.
- **Description** - Description is a free text field where you can enter a full description of the switching level or add notes or information as desired. This field is solely for discretionary use and has no effect on the defined level characteristics.
- **Selected Component** – Components that you select to associate to the switching level you are configuring are listed in this column.
- **Available Component** – This column contains a listing of all available components that may be associated to the switching level.

Initially, all configured components are listed in the *Available Component* list box. Listed components are moved between the two list boxes using the two arrows between the boxes. In order to move a source from available to selected, highlight the component you want to assign to the switching level and click the arrow pointing from the available list to the selected list. You may list any number of sources you wish to block. In order to unblock a source, highlight and move the source name from the blocked list to the available list using the arrow pointing to the available list.

5.15.3 COMPONENTS CONFIGURATION

When the **Components** menu entry is selected, the *Components* configuration screen, Figure 5-23, is displayed. From this screen you can create and enter operational parameters for various system components. In PESA’s switching architecture, a **component** defines a physical switch matrix, or matrix segment, that routes a specific group of signals. The box labeled *Components* on the left side of the display window contains a listing of all the components in the system, by nickname; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing components.

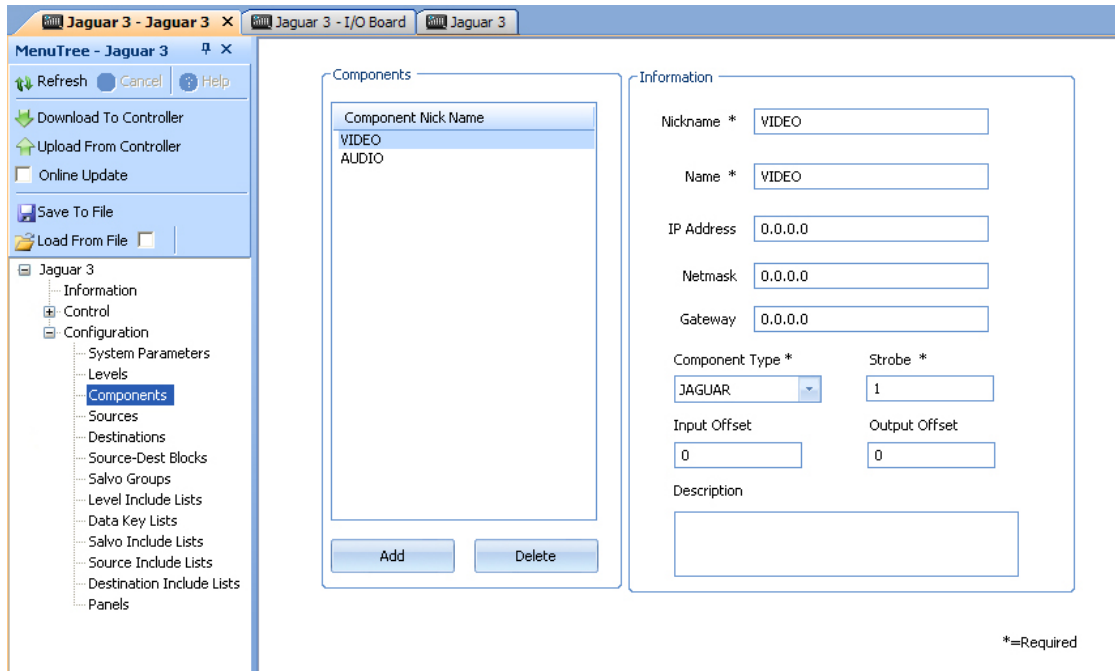

MenuTree - Jaguar 3

Refresh Cancel Help

Download To Controller

Upload From Controller

Online Update

Save To File

Load From File

Jaguar 3

- Information
- Control
- Configuration
 - System Parameters
 - Levels
 - Components**
 - Sources
 - Destinations
 - Source-Dest Blocks
 - Salvo Groups
 - Level Include Lists
 - Data Key Lists
 - Salvo Include Lists
 - Source Include Lists
 - Destination Include Lists
 - Panels

Components

Component Nick Name

VIDEO

AUDIO

Add Delete

Information

Nickname * VIDEO

Name * VIDEO

IP Address 0.0.0.0

Netmask 0.0.0.0

Gateway 0.0.0.0

Component Type * JAGUAR

Strobe * 1

Input Offset 0

Output Offset 0

Description

*=Required

Figure 5-23 Components Configuration Screen

- **Adding a Component** – PERC1500-JAG allows a maximum of 64 components. To add a component, click the **Add** button at the bottom of the Components box to access a blank set-up screen in the Information box.
- **Deleting a Component** - To delete a component, locate the nickname of the component you wish to delete in the Components box and click on the name to select it. Click **Delete** at the bottom of the box.
- **Nickname** – The assigned Nickname is a label (up to 8 characters) associated with the component and is the character string displayed in the *Component Nick Name* listing area. In order to assign the component a nickname, click the cursor in the *Nickname* field and enter the nickname label text.

Once nickname text is assigned to a component, the nickname character string is displayed as a sub-entry in the Components box. Any time you wish to return to the set-up screen for a particular component, click on the nickname sub-entry under the Components Nick Name header.


- **Name** - The Name field is where a longer, more descriptive name is defined for the component. Generally, when assigning names and nicknames, the *Name* field is a more precise description of the defined component and the *Nickname* field is a shortened acronym or mnemonic.
- **IP Address, Netmask, Gateway** - Enter the network parameters of the router frame in which the component sources reside.

- **Component Type** - Component Type is a pull-down menu list containing the types of hardware devices controlled by the PERC1500-JAG controller in the Jaguar3 application from the following options:
 - **DRS** – Identifies that the component you are configuring is tied to a switching level routed through a DRS-SA audio router.
 - **JAGUAR** – Identifies the component you are configuring is tied to a switching level routed through the Jaguar3 video router.
- **Strobe** - Strobe defines a numeric digit identifying the physical hardware routing the component.
- **Input and Output Offset** - Offset defines the numerical difference between the physical input or output number and the level input or output number for a given source or destination.
- **Description** - Description is a free text field where you can enter a full description of the switching component or add notes or information as desired. This field is solely for discretionary use and has no effect on the defined component characteristics.

5.15.4 SOURCES

Click the **Sources** entry under the *Configuration* Menu Tree to access the *Source* configuration screen, Figure 5-24. This screen allows you to define source groups in the router configuration. Note the *Sources* configuration screen is in the form of a database spreadsheet with data entries for each source group made on individual rows from left to right. Each source group is assigned a name, and the physical inputs to the router you wish to associate with the source group are assigned by switching level. In router terminology, this screen essentially maps each physical source (input) to the router to its logical input by switching level and source group nomenclature. Individual physical inputs to the Jaguar3 router may be assigned to multiple source groups.

Cattrax also allows you to assign a number to each entry in the spreadsheet. The number you enter in this **Number** column determines the display order if you sort the list entries by number, and also determines the entry display order when scrolling through lists on remote control panels. This feature provides a simple method by which you can control display grouping by signal name or type, or add source entries to existing display groupings and maintain continuity to the grouping by signal type or name sequence.

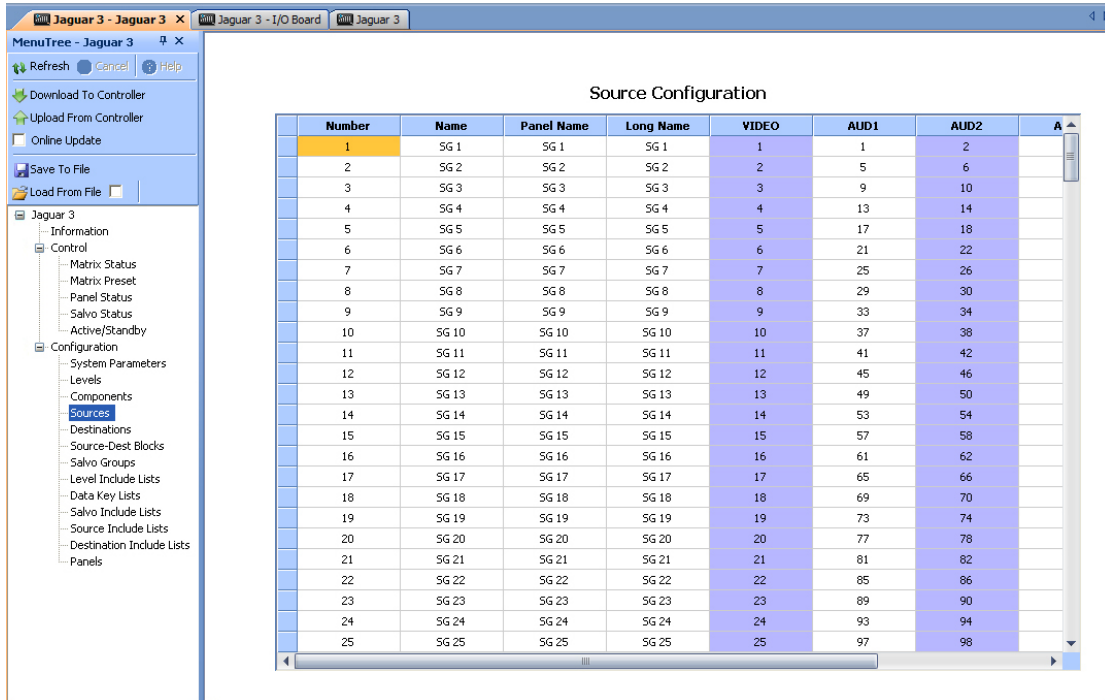

Number	Name	Panel Name	Long Name	VIDEO	AUD1	AUD2	A
1	SG 1	SG 1	SG 1	1	1	2	
2	SG 2	SG 2	SG 2	2	5	6	
3	SG 3	SG 3	SG 3	3	9	10	
4	SG 4	SG 4	SG 4	4	13	14	
5	SG 5	SG 5	SG 5	5	17	18	
6	SG 6	SG 6	SG 6	6	21	22	
7	SG 7	SG 7	SG 7	7	25	26	
8	SG 8	SG 8	SG 8	8	29	30	
9	SG 9	SG 9	SG 9	9	33	34	
10	SG 10	SG 10	SG 10	10	37	38	
11	SG 11	SG 11	SG 11	11	41	42	
12	SG 12	SG 12	SG 12	12	45	46	
13	SG 13	SG 13	SG 13	13	49	50	
14	SG 14	SG 14	SG 14	14	53	54	
15	SG 15	SG 15	SG 15	15	57	58	
16	SG 16	SG 16	SG 16	16	61	62	
17	SG 17	SG 17	SG 17	17	65	66	
18	SG 18	SG 18	SG 18	18	69	70	
19	SG 19	SG 19	SG 19	19	73	74	
20	SG 20	SG 20	SG 20	20	77	78	
21	SG 21	SG 21	SG 21	21	81	82	
22	SG 22	SG 22	SG 22	22	85	86	
23	SG 23	SG 23	SG 23	23	89	90	
24	SG 24	SG 24	SG 24	24	93	94	
25	SG 25	SG 25	SG 25	25	97	98	

Figure 5-24 Sources Configuration Screen

- **Number** - The user-assignable *Number* field allows you to enter a number that determines the display order if you sort sources by number, and also determines the entry display order when scrolling through sources on remote control panels. Each source group row entry may be assigned a sort number with the caveat that each entry must be numeric, greater than zero, must be unique among other source entries and must be consecutive.
- **Name, Panel Name and Long Name** - The next three columns allow you to assign identifying names and/or acronyms to each source group according to the following formats:
 - **Name** – Any combination of up to 8 alphanumeric characters may be used to identify the source group.
 - **Panel Name** - Any combination of up to 8 alphanumeric characters may be used to identify the group. The entry made in this column is the text string that will appear in the switching level columns on the Matrix Status display screen.
 - **Long Name** – This column is essentially a free text space where you may enter a name up to 32 characters in length for the source. This name is only displayed on this configuration screen and may be used to more clearly identify an external device or system.
- **Switching Levels** - To the right side of the three name columns you will see columns corresponding to each system switching level. The numerical entry in the columns on each row assigns the physical input to the router associated with the source group for that switching level.

For example, look at entry number 2 in Figure 5-24 labeled SG 2. Notice that the numeric entry for SG 2 in the VIDEO column is a 2. This entry tells the system controller that the video signal associated with the source group identified as SG 2 will be present at physical input (BNC) number 2 of the Jaguar3 video router.

The numeric entries for source group SG 2 in the columns corresponding to switching level AUD1 and AUD2 are 5 and 6, respectively. In this case, the numeric entries indicate that the audio signal associated with switching level AUD1 is the signal present at physical input number 5 of the DRS audio router frame, and the signal associated with AUD2 is physically present at input 6 of the audio router.

When you select source group SG 2 as the source for a router destination, the physical inputs for all switching levels associated with the source group are switched simultaneously to the physical outputs for all switching levels associated with the destination group.

Only one source entry per switching level is allowed. A level may be left undefined on a source group entry. Physical inputs may be assigned to multiple source groups.


- **Navigating the Sources Spreadsheet** - From the Sources configuration screen, you may view all assigned source groups, add a single source group or a range of groups to the configuration, delete a source or modify parameters of an existing source group.
 - **Add Source** – If you wish to add a single source group entry, use the scroll bar and move the display to the empty row beneath the last source entry in the spreadsheet. Click the cursor in the Name cell on the empty row and begin typing the name of the source group you wish to add. Enter the sort order index number you wish to associate with the new source group in the Number column. The name you entered is copied in all three of the name entry cells. If you wish to change any of the name entries, such as panel name or long name, click the cursor in the cell you wish to modify and enter the changes, followed by the *Enter* key. Once the new source is entered, you may click the cursor in a switching level cell and enter the physical router input you wish to assign to the source for that level. You may continue adding single sources in this manner up to the maximum number of allowable sources for the controller.
 - **Delete Source** – If you wish to remove a source group entry from the configuration spreadsheet, move the cursor to the number column of the source row you wish to delete and right click. Select delete from the right click menu. You will be prompted to verify the action before the source is removed.
 - **Spreadsheet Right Mouse Click Functions** - When you right-click on any cell in the Source configuration spreadsheet, a pop-up menu will appear providing command options for the cell, as shown below. Command items appearing in the pop-up menu will vary depending on which commands are pertinent for data entered in the selected cell. Paragraph 5-14 discusses the function of common commands available from the pop-up menu. All commands listed and discussed below may or may not appear in the pop-up menu for a specific cell.

- **Add Range** – Adds a range of sources using a category index type of naming scheme, as shown by the diagram below. You define the base name, such as “CAM”, the starting index – such as 3 and the number of sources to create – such as 5. This example would create sources “CAM 3” to “CAM 7”.

5.15.5 DESTINATIONS

Click the **Destinations** entry under the *Configuration* Menu Tree to access the *Destination* configuration screen, Figure 5-25. This screen allows you to define destination groups in the router configuration. Note the Destinations screen is in the form of a database spreadsheet with data entries for each destination group made on individual rows from left to right. Each destination group is assigned a name, and the physical outputs from the router you wish to associate with the destination group are assigned by switching level. In router terminology, this screen essentially maps each physical destination (output) from the router to its logical output by switching level and destination group nomenclature.

Catrrax also allows you to assign a number to each entry in the spreadsheet. The number you enter in this **Number** column determines the display order if you sort the list entries by number, and also determines the entry display order when scrolling through lists on remote control panels. This feature provides a simple method by which you can control display grouping by signal name or type, or add destination entries to existing display groupings and maintain continuity to the grouping by signal type or name sequence.

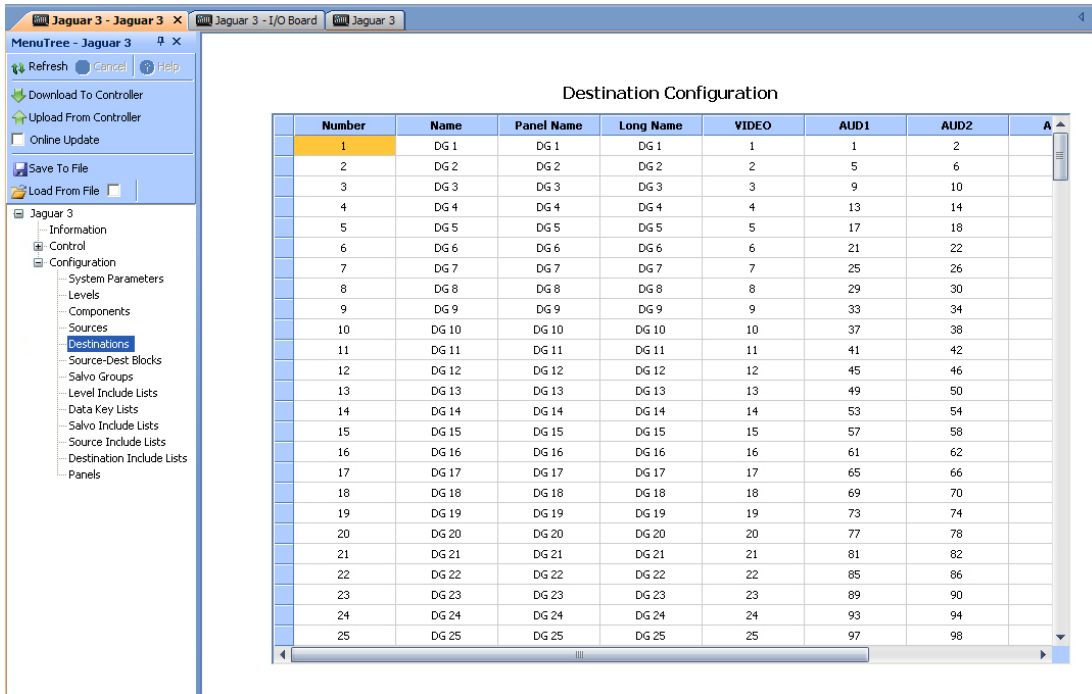

Number	Name	Panel Name	Long Name	VIDEO	AUD1	AUD2	
1	DG 1	DG 1	DG 1	1	1	2	
2	DG 2	DG 2	DG 2	2	5	6	
3	DG 3	DG 3	DG 3	3	9	10	
4	DG 4	DG 4	DG 4	4	13	14	
5	DG 5	DG 5	DG 5	5	17	18	
6	DG 6	DG 6	DG 6	6	21	22	
7	DG 7	DG 7	DG 7	7	25	26	
8	DG 8	DG 8	DG 8	8	29	30	
9	DG 9	DG 9	DG 9	9	33	34	
10	DG 10	DG 10	DG 10	10	37	38	
11	DG 11	DG 11	DG 11	11	41	42	
12	DG 12	DG 12	DG 12	12	45	46	
13	DG 13	DG 13	DG 13	13	49	50	
14	DG 14	DG 14	DG 14	14	53	54	
15	DG 15	DG 15	DG 15	15	57	58	
16	DG 16	DG 16	DG 16	16	61	62	
17	DG 17	DG 17	DG 17	17	65	66	
18	DG 18	DG 18	DG 18	18	69	70	
19	DG 19	DG 19	DG 19	19	73	74	
20	DG 20	DG 20	DG 20	20	77	78	
21	DG 21	DG 21	DG 21	21	81	82	
22	DG 22	DG 22	DG 22	22	85	86	
23	DG 23	DG 23	DG 23	23	89	90	
24	DG 24	DG 24	DG 24	24	93	94	
25	DG 25	DG 25	DG 25	25	97	98	

Figure 5-25 Destinations Configuration Screen

- **Number** - The user-assignable *Number* field allows you to enter a number that determines the display order if you sort destinations by number, and also determines the entry display order when scrolling through destinations on remote control panels. Each destination group row entry may be assigned a sort number with the caveat that each entry must be numeric, greater than zero, must be unique among other destination entries and must be consecutive.
- **Name, Panel Name and Long Name** - The next three columns allow you to assign identifying names and/or acronyms to each destination according to the following formats:
 - **Name** – Any combination of alphanumeric characters may be used to identify the destination.
 - **Panel Name** - Any combination of up to 8 alphanumeric characters may be used to identify the destination. The entry made in this column is the text string that will appear in the switching level columns on the Matrix Status display screen.
 - **Long Name** – This column is essentially a free text space where you may enter a name up to 32 characters in length for the destination. This name is only displayed on this configuration screen and may be used to more clearly identify an external device or system.
- **Switching Levels** - To the right side of the three name columns you will see columns corresponding to each system switching level. The numerical entry in the columns on each row assigns the physical output from the router associated with the destination group for that switching level.

For example, look at entry number 2 in Figure 5-25 labeled DG 2. Notice that the numeric entry for DG 2 in the VIDEO column is a 2. This entry tells the system controller that the video signal associated with the destination group identified as DG 2 will be present at physical output (BNC) number 2 of the Jaguar3 video router.

The numeric entries for destination group DG 2 in the columns corresponding to switching level AUD 1 and AUD 2 are 5 and 6, respectively. In this case, the numeric entries indicate that the output signal associated with switching level AUD 1 for destination DG 2 is the signal present at physical output number 5 of the DRS audio router frame, and the signal associated with AUD 2 is physically present at output 6 of the audio router.

When you select destination group DG 2 as the output for a selected source group, the physical inputs for all switching levels associated with the source group are switched simultaneously to the physical outputs for all switching levels associated with the destination group.

Only one destination entry per switching level is allowed. An entry of 0 (zero) in any of the switching level cells indicates that there is no physical output defined for that switching level for the indicated destination group.

- **Navigating the Destinations Spreadsheet** - From the Destinations configuration screen, you may view all assigned destination groups, add a single destination group or a range of destinations to the configuration, delete a destination or modify parameters of an existing destination group.
- **Add Destination** – If you wish to add a single destination entry, use the scroll bar and move the display to the empty row beneath the last destination entry in the spreadsheet. Click the cursor in the Name cell on the empty row and begin typing the name of the destination group you wish to add. Enter the sort order index number you wish to associate with the new destination group in the Number column. The name you entered is copied in all three of the name entry cells. If you wish to change any of the name entries, such as panel name or long name, click the cursor in the cell you wish to modify and enter the changes, followed by the *Enter* key. Once the new destination name is entered, you may click the cursor in a switching level cell and enter the physical router output you wish to assign as the destination for that level. You may continue adding single destinations in this manner up to the maximum number allowable for the controller.
- **Delete Destination** – If you wish to remove a destination group entry from the configuration spreadsheet, move the cursor to the number column of the destination row you wish to delete and right click. Select delete from the right click menu. You will be prompted to verify the action before the destination is removed.
- **Spreadsheet Right Mouse Click Functions** - When you right-click on any cell in the Destination configuration spreadsheet, a pop-up menu appears providing command options for the cell, as shown below. Command items appearing in the pop-up menu will vary depending on which commands are pertinent for data entered in the selected cell. Paragraph 5-14 discusses the function of common commands available from the pop-up menu. All commands listed and discussed below may or may not appear in the pop-up menu for a specific cell.

Copy
Cut
Delete

Copy & Increment


Add Range

- **Set Sync Reference** - The Jaguar3 router accepts up to two sources of external Sync Reference signals for synchronizing switching times and destination output signals. PERC1500-JAG allows you to assign either of the sync signals to any single destination or multiple destinations simultaneously.

tion of PESA
5-37

2	AVID 2	AVID 2	AVID 2	2
3	AVID 3	AVID 3	AVID 3	3
4	AVID 4	AVID 4	AVID 4	4
5	AVID 5	AVID 5	AVID 5	5
6	VTR 1	VTR 1	VTR 1	6
7	VTR 2	VTR 2	VTR 2	7
8	VTR 3	VTR 3	VTR 3	8
9	VTR 4	VTR 4	VTR 4	9
10	VTR 5	VTR 5	VTR 5	10
11	VTR 6	VTR 6	VTR 6	11
12	VTR 7	VTR 7	VTR 7	12
13	GRAPHIC1	GRAPHIC1	GRAPHIC1	0
14	GRAPHIC2	GRAPHIC2	GRAPHIC2	0
15	GRAPHIC3	GRAPHIC3	GRAPHIC3	0
16	GRAPHIC4	GRAPHIC4	GRAPHIC4	0

Click the cursor in the single cell corresponding to the destination and level, or to selected multiple destination cells you wish to map to a sync reference. Right click and select the “Set Sync Reference” option from the menu. A window, as shown in the diagram below, displays identifying the level and current destination you are configuring at the top. In the middle of the window you assign a sync source to the destination using the pull-down menu boxes.

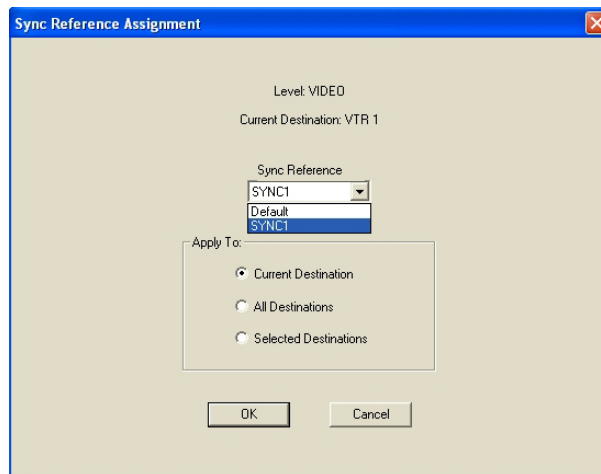

Three radio buttons allow you to assign the sync source to only the Current Destination, All Destinations or Selected Destinations. Choose the Selected Destinations option when multiple cells have been highlighted.

In the example shown, by selecting “Set Sync Reference” in the spreadsheet cell for VTR 1 on the Video level, the window below appears and shows VTR 1 on the VIDEO level as the current destination. By selecting SYNC1 from the pull-down we have assigned the physical output named VTR 1 on the VIDEO level to synchronize to the reference input named SYNC1 for the current destination only.

5.15.6 SOURCE-DESTINATION (DEST) BLOCKS CONFIGURATION SCREEN

When the **Source-Dest Blocks** menu entry is selected, the configuration screen, as shown by Figure 5-26, is displayed. From this screen you can selectively block any source group from being switched to a designated destination group. The box labeled *Blocks* on the left side of the display window contains a listing of destinations with at least one source block assignment; and the box labeled *Information* on the right side contains the following data entry cells used to create new or modify existing source block assignments:


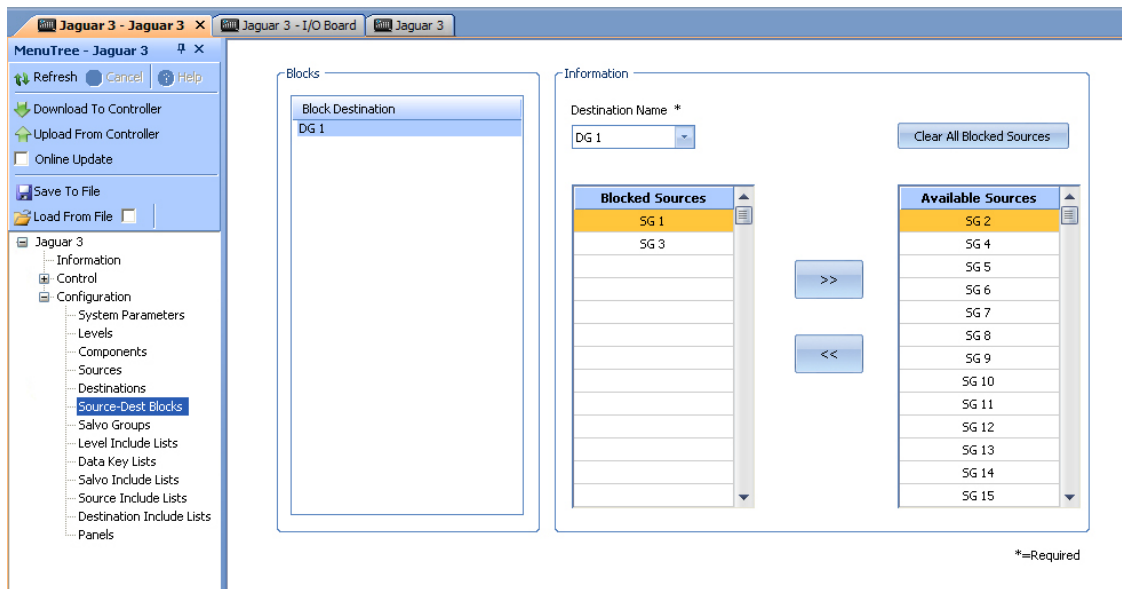


Figure 5-26 Source-Destination Block Display

- **Destination Name** – This is a pull-down listing of all destinations in the configuration, identified by name, as shown in the illustration below. To select a destination to which you wish to apply a source block, open the listing with the arrow icon, and select the destination name from the list.

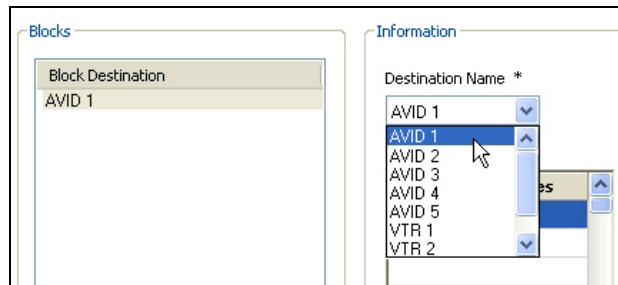

- **Blocked Sources** – Sources you wish to block from access by the named destination are listed in this column.
- **Available Sources** – This column contains a listing of all the sources which may be switched to the named destination.


In order to assign a source block to a specific destination, locate the desired destination in the Destination Name pull down list and highlight the name.

Initially, all sources are listed in the Available Sources list box. Listed sources are moved between the two list boxes using the two arrows between the boxes. In order to move a source from available to blocked, highlight the source you want to block from access by the destination and click the arrow pointing from the available list to the blocked list. You may list any number of sources you wish to block. In order to unblock a source, highlight and move the source name from the blocked list to the available list using the arrow pointing to the available list.

The Block Destination field contains a listing of all destinations, by name, with at least one blocked source. If you wish to access source block configuration for a specific destination, click on the destination name in the listing. From the configuration screen you may move sources from blocked to available using the arrow keys, or you may clear all source blocks for the destination by clicking the *Clear All Blocked Sources* button. If all source blocks are removed, the destination name is removed from the Block Destination listing.

5.15.7 SALVO GROUPS CONFIGURATION SCREEN

When the **Salvo Groups** menu entry is selected, the *Salvo* configuration screen, Figure 5-27, is displayed. From this screen you can create and define salvo groups for the router configuration. The box labeled *Salvos* on the left side of the display window contains a listing of all the defined salvo groups in the router configuration, by name; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing salvo groups.

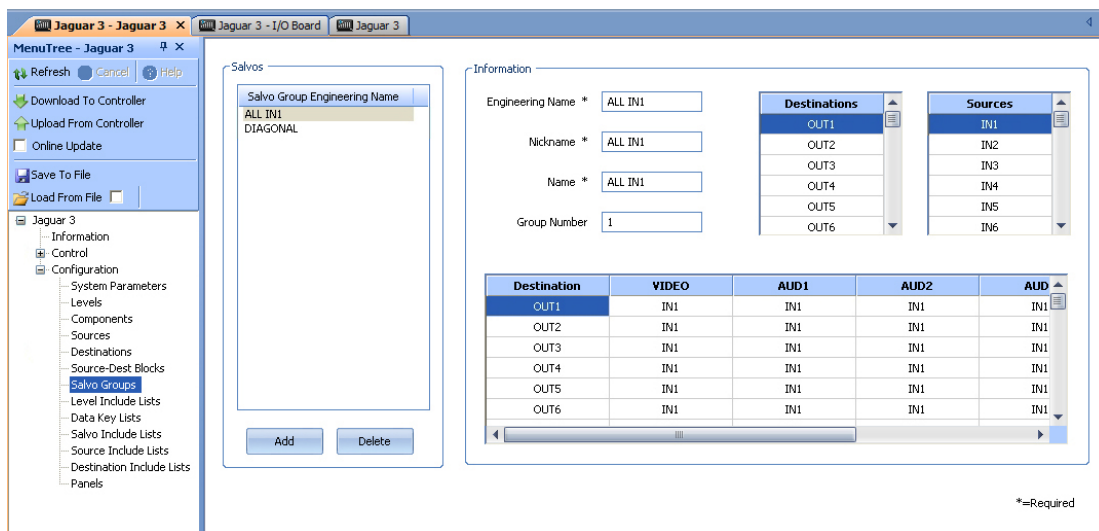

Destination	VIDEO	AUD1	AUD2	AUD
OUT1	IN1	IN1	IN1	IN1
OUT2	IN1	IN1	IN1	IN1
OUT3	IN1	IN1	IN1	IN1
OUT4	IN1	IN1	IN1	IN1
OUT5	IN1	IN1	IN1	IN1
OUT6	IN1	IN1	IN1	IN1

Figure 5-27 Salvo Groups Configuration Screen

The example screen shown in Figure 5-27 illustrates a salvo group named **ALL IN1** that, when “fired”, switches the source group named IN1 to all defined destination groups. Salvo groups are “fired” from the Salvo Status menu screen (refer to Paragraph 5.12.4) and when executed, all switches defined in the salvo group are simultaneously switched. All switches in a salvo are taken within the same vertical interval.

- **Adding a Salvo Group** – PERC1500-JAG allows a maximum of 64 salvo groups. To add a salvo group, click the **Add** button at the bottom of the Salvos box. A place-holder name is added to the *Salvo Group Engineering Name* list box and a set-up screen with the name entry fields pre-filled is displayed in the Information box. You may change the name field entries to the descriptive name you would like to use for the salvo group.
- **Deleting a Salvo Group** - To delete a salvo group, locate the name of the group you wish to delete in the Salvo Group Engineering Name list box and click to select it. Click **Delete** at the bottom of the box.
- **Engineering Name, Nickname, Name and Group Number** - Salvo group names may be from one to eight characters in length and constructed using uppercase letters, numbers, and spaces; however, the first character must be a letter. Three fields are provided for naming the salvo group. PESA recommends that you choose a name that is descriptive of the function of the salvo. In this example, the name ALL IN1, signifies a salvo that switches the input signals defined by source group IN1, to the physical outputs associated with every defined destination group. Each of the name fields is discussed below:
 - **Engineering Name** – Up to 8 alphanumeric characters are allowed when assigning the Engineering Name to the salvo group.
 - **Nickname** – Up to 8 alphanumeric characters are allowed when assigning the Nickname to the salvo group.
 - **Name** – This field is essentially a free text space where you may enter a descriptive name, up to 32 characters in length, for the salvo group. This name is only displayed on this configuration screen and may be used to more clearly comment the salvo function.
- **Group Number** – The group number is sequentially assigned by the software and is not user definable.
- **Defining A Salvo Group** - Click the cursor in the top cell of the *Destination* column. Locate the first destination you wish to assign to the salvo group from the Destinations list at the top of the screen and double-click the entry to copy the destination name into the cell. In like manner, move the cursor to the cells under the various switching level columns and using the entries in the Source list double-click the name of the source you wish to switch to the indicated level of the destination. If desired, you may enter additional destinations and assign sources to them.

5.15.8 LEVEL INCLUDE LISTS CONFIGURATION SCREEN

Refer to Paragraph 5.18.

5.15.9 DATA KEY LISTS CONFIGURATION SCREEN

The *Data Key Lists* configuration screen, Figure 5-28, allows you to generate one or more named lists which assign specific functions to each configurable key on a PNet Ethernet remote control panel. Multiple panels may share a data key list as long as they are the same panel type. Click the **Data Key Lists** parent entry in the Jaguar 3 controller *Configuration* menu to display the configuration screen.


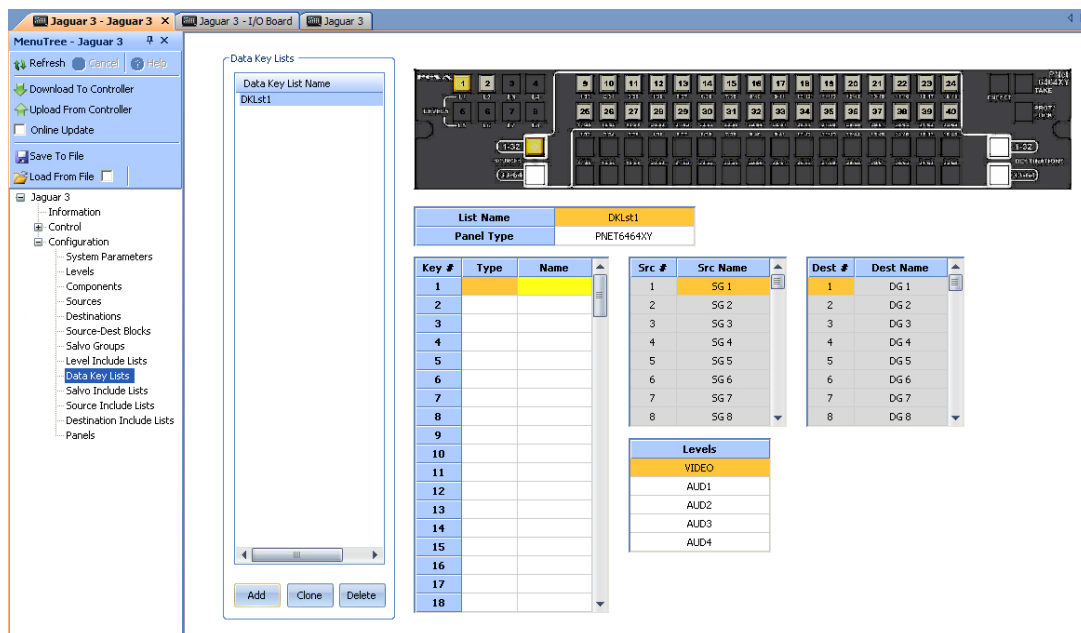


Figure 5-28 Data Key Lists Configuration Screen

- **Adding a Data Key List** –To add a data key list, click the **Add** button at the bottom of the *Data Key Lists* box. A place-holder name is added to the list name box and a pop-up box appears with a listing of the panel types you may set up through the system controller, as shown by the diagram below. Select the panel type you are configuring. To make the programming task more straightforward, a visual image of the panel type you have selected is displayed at the top of the configuration screen. The place-holder list name is automatically inserted into the *List Name* field below the graphic; however, you may change it to the name you would like to use for the data key list.

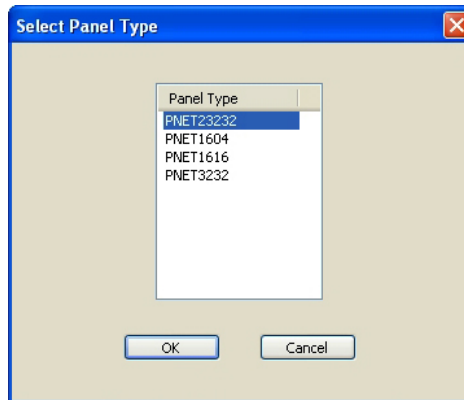

- **Deleting a Data Key List** - To delete a data key list, locate the name of the list you wish to delete in the Data Key List Name box and click to select it. Click **Delete** at the bottom of the box.
- **Defining List Name and Panel Type** - Note the fields labeled *List Name* and *Panel Type*, Figure 5-29. Enter a name for the data key list. PESA recommends you assign a name that is somewhat descriptive of the function of the data key list or the panel it controls. In this example we have used the List Name PNET3232 to indicate that this list programs the key functions of a 32 source, 32 destination panel. List names may be structured using uppercase letters, numbers, and spaces. The first character must be a letter.

The Panel Type field displays the model number of the panel associated with the data key list name.

Data Key Lists

Data Key List Name

- PNET3232
- PNET1616
- PNET1604
- PNET23232

List Name

PNET3232

Panel Type

PNET3232

Key #	Type	Name
1	LEV	VIDEO
2	LEV	AUDIO 1
3	LEV	AUDIO 2
4		
5		
6		
7		
8		
9	SRC	IN1
10	SRC	IN2
11	SRC	IN3
12	SRC	IN4
13	SRC	IN5
14	SRC	IN6
15	SRC	IN7
16	SRC	IN8
17	SRC	IN9
18	SRC	IN10
19	SRC	IN11

Src #	Src Name
1	IN1
2	IN2
3	IN3
4	IN4
5	IN5
6	IN6
7	IN7
8	IN8
9	IN9
10	IN10
11	IN11
12	IN12
13	IN13
14	IN14

Dest #	Dest Name
1	OUT1
2	OUT2
3	OUT3
4	OUT4
5	OUT5
6	OUT6
7	OUT7
8	OUT8
9	OUT9
10	OUT10
11	OUT11
12	OUT12
13	OUT13
14	OUT14

Levels

VIDEO

AUDIO 1

AUDIO 2

Figure 5-29 Data Key Function Assignment

- **Assigning Data Functions to Configurable Panel Keys** - PNet panel keys are categorized into four distinct sections – Level Keys (always keys 1 thru 8), Source Keys and Destination Keys. The fourth category is the function keys for Take, Preset and Lock/Protect operations; these are fixed on every panel type.

Below the name and type fields you will see a list field with a column labeled *Key #* on the left-hand side. The numbers in the *Key #* column correspond to the number assigned to each key of the panel as depicted by the on-screen graphic. You may click in any cell of the key row to highlight the data entry fields.

On the right-hand side of the screen you will see three scroll lists for Sources, Destinations and Levels. Each *Key #* entry in the list can be assigned to only one type of function, and when you highlight any key row, only the selection box for the function type that is valid for the selected key will be active, and the remaining two boxes will appear muted with a gray foreground.

For example, refer to Figure 5-29 and you will see that the row for *Key # 1* is highlighted and the entries indicate that this key is assigned to the switching level (LEV) named VIDEO. Notice that with *Key# 1* row highlighted, only the selection box for Levels is active and the Source (Src) and Destination (Dest) lists are shown as muted. This indicates that Level is the only valid function for the key, and that neither a source nor destination assignment may be made to it.

For any key you wish to assign, highlight the key # row. You can do this either by clicking in the cell or by mouse clicking on button number on the graphic image. With the row highlighted, select the entry from the active scroll menu box you wish to associate with the key and double click the entry. The function type and name assigned to the key are automatically entered in the list fields.

5.15.10 SALVO, SOURCE AND DESTINATION INCLUDE LISTS CONFIGURATION SCREENS

Refer to Paragraph 5.18.

5.15.11 PANELS CONFIGURATION SCREEN

The *Panels* configuration screen, Figure 5-30, allows you to add PNet control panels to the system, program the functionality of each panel, and review the configuration of existing panels. Clicking on the **Panels** parent entry in Jaguar 3 controller *Configuration* menu brings up the Panels configuration screen.

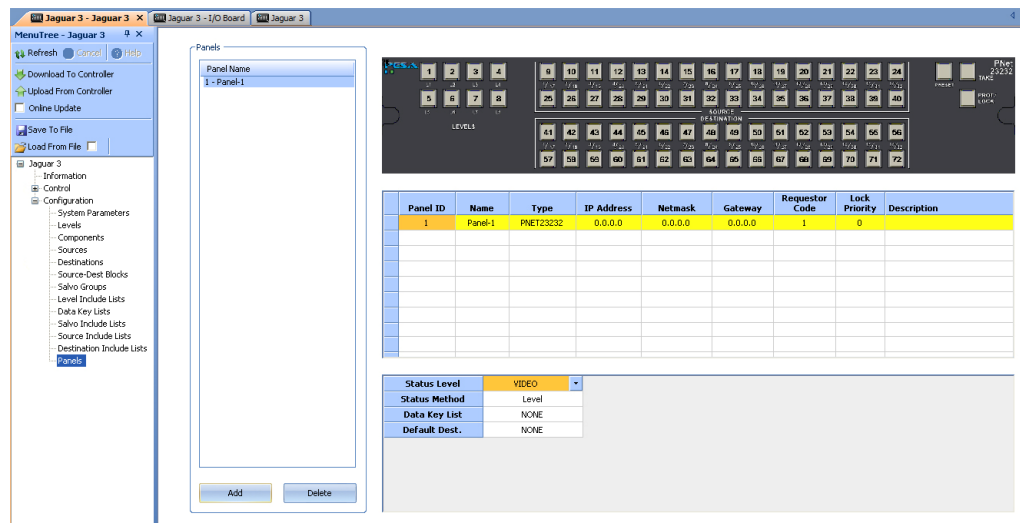


Figure 5-30 Panels Configuration Screen

- **Adding a Control Panel** –To add a PNet control panel, click the **Add** button at the bottom of the *Panel Name* list box. A place-holder name is added to the list name box; however, it may be changed through the configuration set-up entries. Choosing the Add function also creates a data entry row in the panel configuration box for you to enter set-up data for the new panel.
- **Deleting a Data Key List** - To delete a control panel, locate the name of the panel you wish to delete in the Panel Name box and click to select it. Click **Delete** at the bottom of the box.
- **Defining a Control Panel** - In the middle of this screen you will see a spreadsheet format table, Figure 5-31, with an entry for each PNet panel in the system. Anytime a panel entry in the listing window is highlighted, a graphic image of that panel type is displayed at the top of the configuration screen. If you are adding a new panel to the listing, the graphic image of the panel is displayed once the panel type parameter is selected. Displaying a graphic image allows you to verify the panel type as well as provide a visual cue of the features and functions of the specific panel.

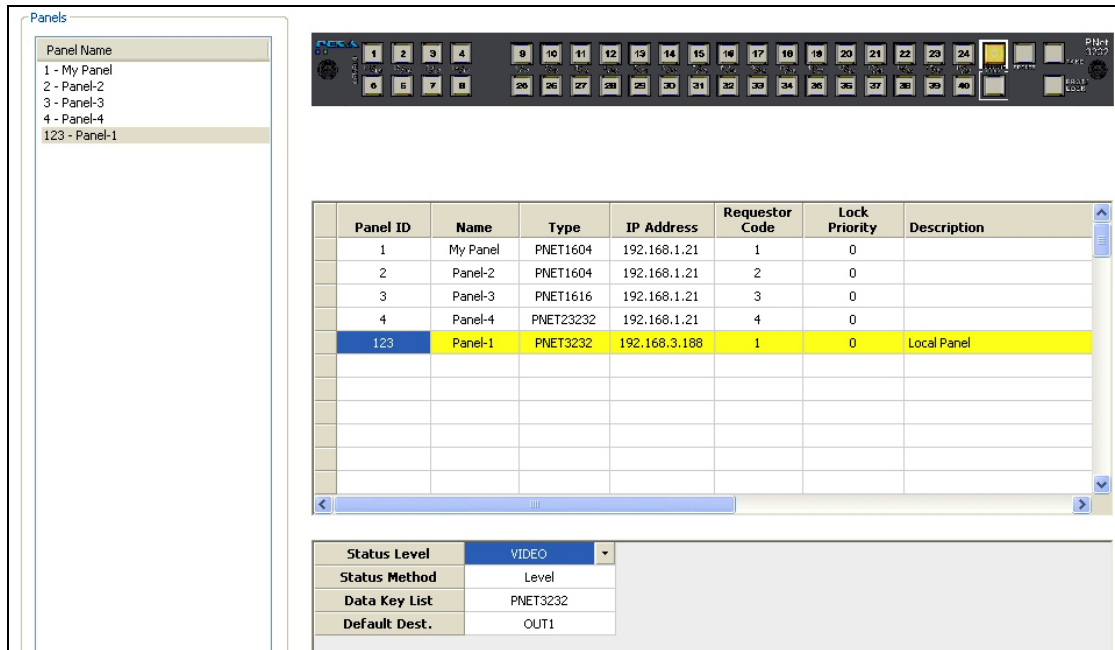


Figure 5-31 Adding a Panel Configuration

- **Enter Panel Configuration Data**

- **Panel ID** – Enter the hardware ID number assigned to the panel in the Panel ID column. This is a unique number assigned to each remote control panel in the system as set by rotary switches on the rear of each PNet control panel.
- **Name** – This entry allows you to assign a name to each panel. If you are adding a new panel, the place-holder name entered by Catrax will initially appear in this column. You may change the name to a more descriptive panel name if you wish. A panel name may consist of a mix of alphanumeric characters. This is the text string displayed in other configuration and status screens to identify the panel.
- **Type** – This column allows you to select the panel type using a pull-down menu of all PESA PNet panel model numbers. Click in the *Type* cell and open the pull-down menu. Select the model number of the panel you are installing and click the entry. The model number appears in the cell and a graphic image of the panel is displayed on the configuration screen.
- **IP Address** – Each PNet panel must be assigned a valid IP address that is compatible with the facility network. In most cases, IP addresses are issued by the facility network administrator. Enter the IP address of the panel in this column.

- **Destination Protect and Lock Functions**

There are two similar methods, *Protect* and *Lock*, by which a user can prevent or control another user's ability to make switches on particular, defined destinations (output signals) by assigning codes and priorities to PNet panels in the system. Every PNet panel in the system is assigned a code number, called its Requestor Code; and is also assigned a numerical Lock Priority value as part of the Panels Configuration process.

A Protect function may be applied to a destination through any PNet panel with lock/protect capability. Once protect is applied, the protected destination can only be switched to a different source by the panel originating the protect function or by a PNet panel other than the originating panel if the panel attempting the switch meets one of these conditions:

- The panel attempting the switch is configured with the same requestor code and an equal lock priority as the originating panel.
- Any panel with a higher lock priority regardless of requestor code.

A Lock function is very similar to protect, and may be applied to a destination through a remote control panel with lock/protect capability. Once a lock is applied, the locked destination can only be switched to a different source by the panel originating the lock function or by a PNet panel other than the originating panel if the panel attempting the switch has a higher lock priority than the originating panel.

The key difference between protect and lock is that when a destination is protected, any panel meeting the criteria to override the protect function may make switches on the destination just as it would to any other unprotected destination. When a destination is locked, however, no panel may make a switch on the destination until the lock has been cleared from the destination by a panel authorized to do so.

- **Requestor Code and Lock Priority Values**

When PNet panels are configured through Catrax, each panel in the system is assigned a unique address that identifies that panel, and only that panel, on the Ethernet. Each panel with lock/protect capability is also assigned a requestor code value between 1 and 65535, and a lock priority value between 0 and 255.

By default, the requestor code is assigned the same value as the panel address. However, there may be certain circumstances of an installation that require an exception to this numbering scheme. If you wish to allow two separate panels identical control over a protected destination, you may assign the same requestor code and lock priority to each panel.

Lock priority is a numerical value that determines the rights of a panel to place or remove a lock or override a protect function on a destination. Panels with lower lock priority values have greater control over lock/protect functions. A panel assigned lock priority of 255 has the lowest priority, and a panel assigned a lock priority of zero (0) has the highest priority.

Let's look at an example. Suppose you assign a panel a requestor code of 201 and a lock priority of 2, and assume we issue a protect function to a destination through this panel. Since it is the originating panel, it may continue to switch the destination, but other panels in the system may not switch that destination unless the panel attempting to make the switch also has a requestor code of 201 and lock priority of 2, or unless it has a lock priority of 1 or 0, regardless of its requestor code.

Now suppose this same panel issues a lock function to a destination. The lock could only be cleared by the originating panel or by a panel with a higher lock priority. A panel with a lock priority of zero (0) can override any protect function or clear any lock function.

- **Description** –The Description column is a free text field where you can enter a description of the panel and its function or any other data you wish to enter concerning this panel.
- **Enter Panel Parameters**
 - Once the panel information is entered, enter the specific operational parameters for the panel in the box located beneath the panel, as shown in the illustration below. Each cell in this table uses a pull-down menu to display the options available. In order to enter or change any selection in the configuration, click in the cell containing the parameter you want to change and click on the pull-down arrow. From the pull-down menu, click on the selection you want to enter for the panel configuration. This table contains the following entries:

Status Level	VIDEO ▾
Status Method	Level
Data Key List	PNET3232
Default Dest.	OUT1

- **Status Level** – Status Level is the default switching level displayed or controlled by the panel. To assign or edit the Status Level click in the cell and change the level selection from the pull-down menu.
- **Status Method** – The pull-down menu in this cell should always be set to *Level* in the Jaguar3 system application.
- **Data Key List** – This entry determines the function of the configurable panel keys by assigning a Data Key List to the panel. The desired data key list is chosen from the pull-down menu associated with the cell. Only data key lists which are valid for the panel type are included in the pull-down menu.
- **Default Destination** – This entry assigns the default destination to the panel. In operation, the default destination determines which destination is displayed and controlled on initial panel power-up.

5.16 INCREMENTAL ADD/EDIT (ON-LINE UPDATE)

Using commands available through Jaguar3's On-Line Update feature, you can make limited changes to the controller configuration on-the-fly, without having to upload, modify and re-load the configuration file. Changes you make to the configuration using this feature are written into on-board system controller memory, and become a permanent part of the configuration until modified or until the configuration file is re-loaded.

5.16.1 USING ONLINE UPDATE MODE

In order to use Online Update, the configuration file loaded and open in Catrax must initially be the same file as currently loaded into the PERC1500-JAG controller. You may ensure they are the same by uploading the current file from the controller before selecting online update mode. Anytime the host PC and the PERC1500-JAG controller are connected and communicating, and the currently active controller file is loaded into Catrax, you may select the **Online Update** mode by clicking the box in the Controller File Commands menu, as shown by Figure 5-32. When Online Update is active, the Online Update Bar window is displayed beneath the main display window, as shown by Figure 5-33.

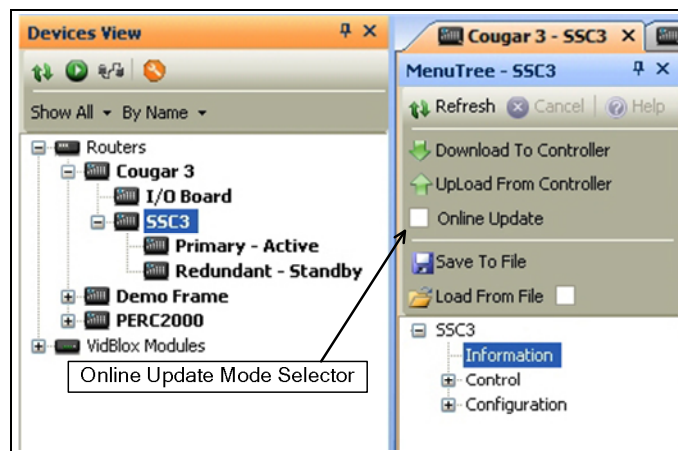


Figure 5-32 Update Mode Selector

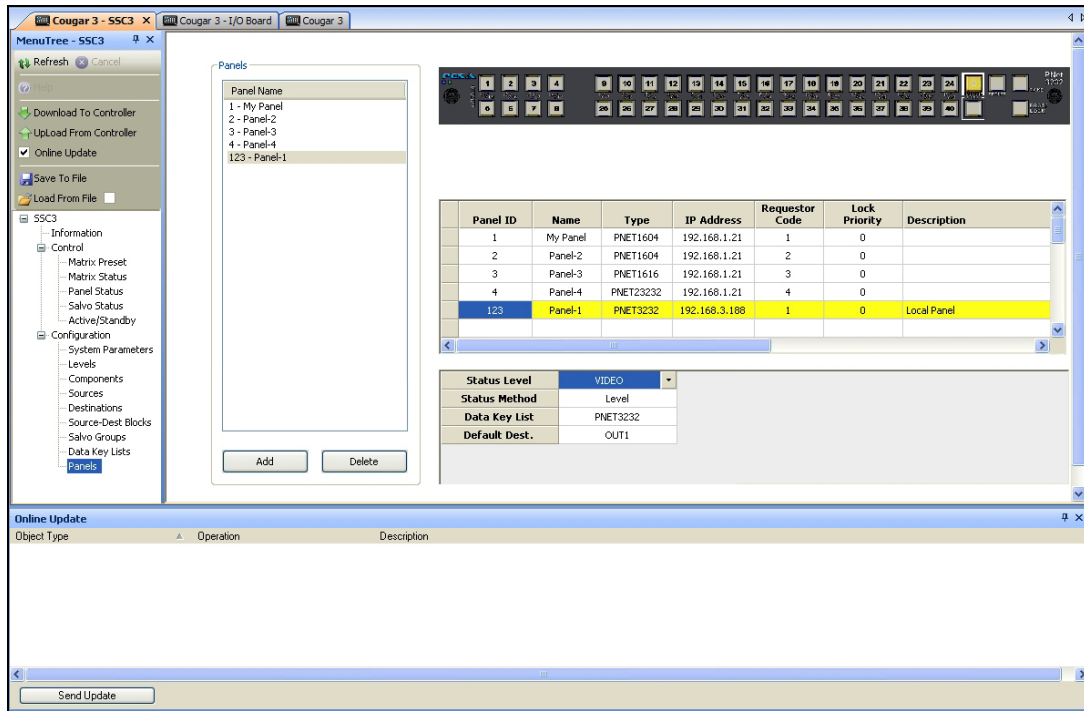


Figure 5-33 Online Update Display Window

Through the online update function, a limited set of configuration commands are available as shown by Table 5-1. As you make additions, modifications or deletions to available configuration parameters, each change you make is listed in the online update bar display area, as shown in Figure 5-34

Table 5-1 Available Online Update Commands

Configuration Parameter	Add Data	Delete Data	Modify Data
Configuration Information	N/A	N/A	Yes
Sources	Yes	No	Yes
Destinations	Yes	No	Yes
Source-Destination Blocks	Yes	Yes	N/A
Salvo Groups	No	No	No
Data Key Lists	Yes	No	Yes
Panels	Yes	No	Yes

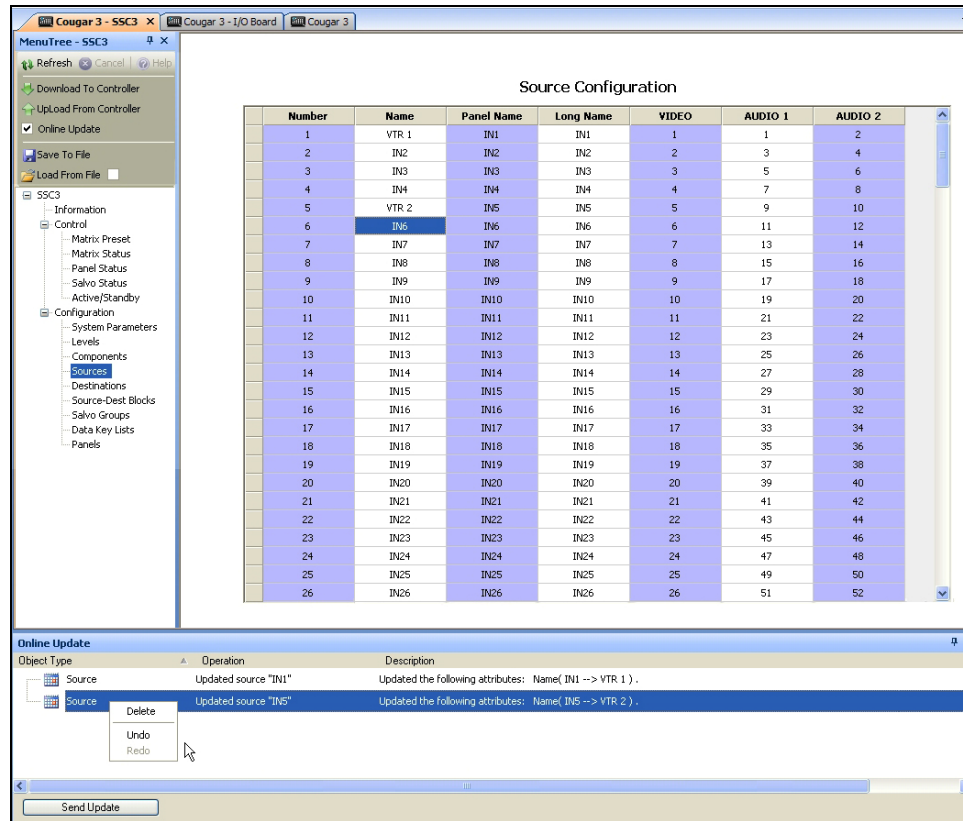


Figure 5-34 Online Update Data Entry

In the example shown, we have changed the entry in the Name column for source group number 1 from IN1 to VTR 1, and the entry for source group number 5 from IN5 to VTR 2. These changes appear in the online update display area, as well as the main display grid. Changes you make do NOT become active in the controller until you click the **Send Update** button at the bottom of the update display area.

Highlighting any line in the update display listing selects that line and allows you to use the right-click menu to edit the line using the following options, as shown in Figure 5-34:

- **Delete** – Selecting Delete will permanently remove the item from the update listing. You will be prompted prior to deletion of the item.
- **Undo** – Selecting Undo will immediately remove the item from the listing, however, the Undo command is not immediately permanent, and the item can be retrieved using the Redo command.
- **Redo** – Selecting Redo restores items removed with the Undo command. To use the Redo function, move the cursor into the update display window and right-click. Click on the Redo function and the last item deleted will be restored. You may continue to click the Redo selection to restore previously removed items in the order they were removed using the Undo command.

To exit Online Update mode or to abort configuration modifications you have entered, remove the check from the Online Update box in the Controller File Commands menu, as shown by Figure 5-32. If modifications will be discarded by the action, you will be prompted prior to online update mode being closed.

5.17 OFFLINE CONFIGURATION

Cattrax' Offline Configuration mode allows you to create or modify a controller configuration file whether or not an active system controller is selected in the Devices View listing. To use offline configuration it is not necessary that a system controller be found on the Ethernet communication network; however, the upload from or download to controller functions will not be available. Offline configuration is often used when creating an entirely new P1500-J configuration file for the Jaguar 3 router.

Access Offline Configuration mode by clicking either icon as shown by Figure 5-35:

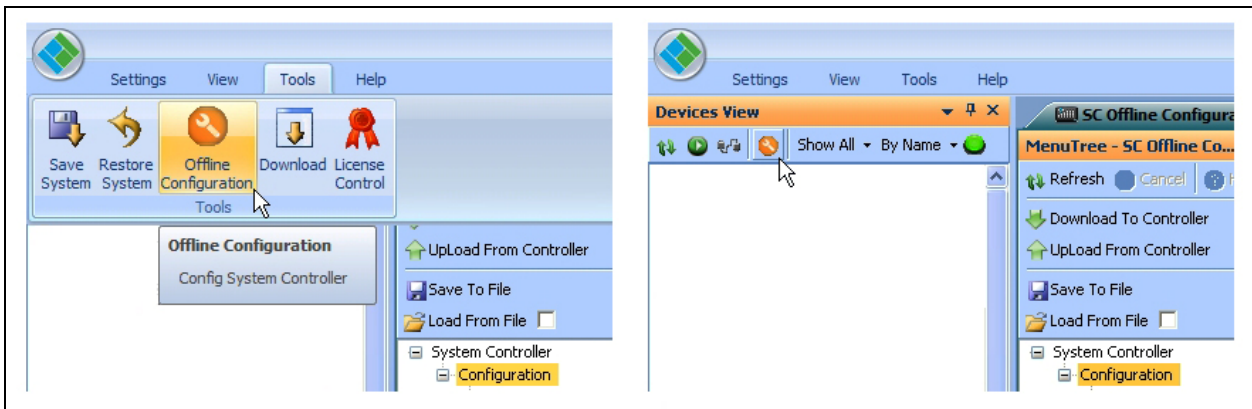


Figure 5-35 Offline Configuration Icon Locations

You will be prompted to select the type of controller device you wish to configure using the pull-down box as shown on the left in Figure 5-36. Once the selection is made, the initial screen is opened, as shown on the right side of the figure.

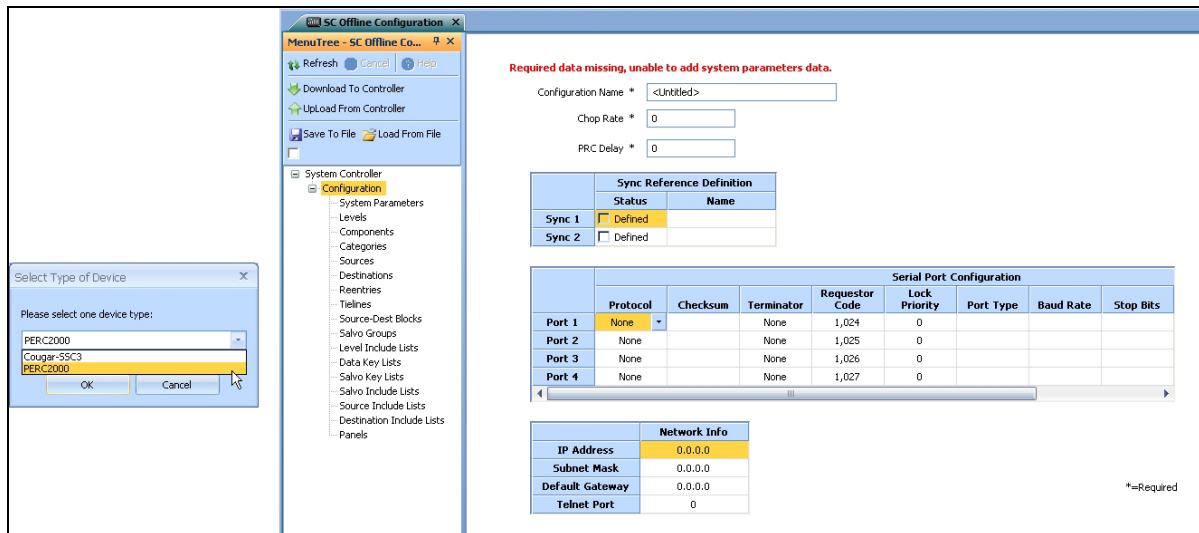


Figure 5-36 Initial Offline Configuration Screen

When this screen is first accessed, there is no configuration file data loaded or open in the Cattrax application, and you have three options from which to select the type of configuration operation you wish to perform:

- Treat the screens as a “clean slate” and generate a new configuration file by entering hardware and router configuration data for download to the controller, or save the “new” file to a storage media such as a hard drive of the host PC or other memory device.
- Load an existing configuration file from a previously saved and stored file using the *Load From File* command.
- Upload the currently active configuration file stored in system controller flash memory, if there is an active system controller on the Ethernet, using the *Upload From Controller* command. When you select the upload command a pull-down box appears prompting you to select the system controller you wish to upload from.

Options 2 and 3 allow you to view or modify an existing configuration file.

All menu and command screens discussed in Paragraph 5-15 are available with offline configuration.

As configuration data is entered or modified through Cattrax menu commands, it is stored on the host PC – and only on the host PC. Changes entered do not get saved to a file, written to the system controller, or become active, until the operator issues a command through Cattrax to either save or download the configuration data. Once a configuration file is created or modified, use the *Download To Controller* command in the File Commands menu to immediately download the file to the system controller hardware and activate the configuration changes.

5.18 INCLUDE LISTS FOR CATTRAX WEB INTERFACE

When Jaguar 3 is used in a stand-alone configuration, with the PERC1500-Jag Controller installed in the router chassis and exclusively using PNet control panels for operation, the various Include Lists Configuration Settings have no effect on system operation and there is no requirement to enter data into any of the include list screens.

In PESA control system architecture, an Include List allows you to create named lists of switching levels, sources, destinations and salvos. A list can then, through panel configuration, be associated by name to a remote control device and define the particular levels, sources, destinations and salvos over which that device can have control. Include lists are not used when configuring PNet panels.

PESA’s Cattrax Web is a web-based control application that allows intranet or internet control of PESA routers, including the Jaguar 3, and may be used as the sole router operating platform or in conjunction with PNet hardware or PNet Soft panels. Cattrax Web uses Include Lists as part of its configuration process to assign access privileges to web control operators. When an installation incorporates Cattrax Web for control of Jaguar 3, the include lists discussed in the following paragraphs must be created and loaded into controller memory as part of router configuration.

5.18.1 LEVEL INCLUDE LISTS

The *Level Include Lists* configuration screen, Figure 5-37, allows you to selectively build a named list of switching levels which, when assigned to a specific system control device or application, designates the levels that device is authorized to control. Multiple panels and devices may share a Level Include List. Click the **Level Include Lists** parent entry in the Configuration menu tree to display the configuration screen.

The box labeled *Level Include Lists* on the left side of the display window contains, by name, the level include lists that have been created; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing level include lists.

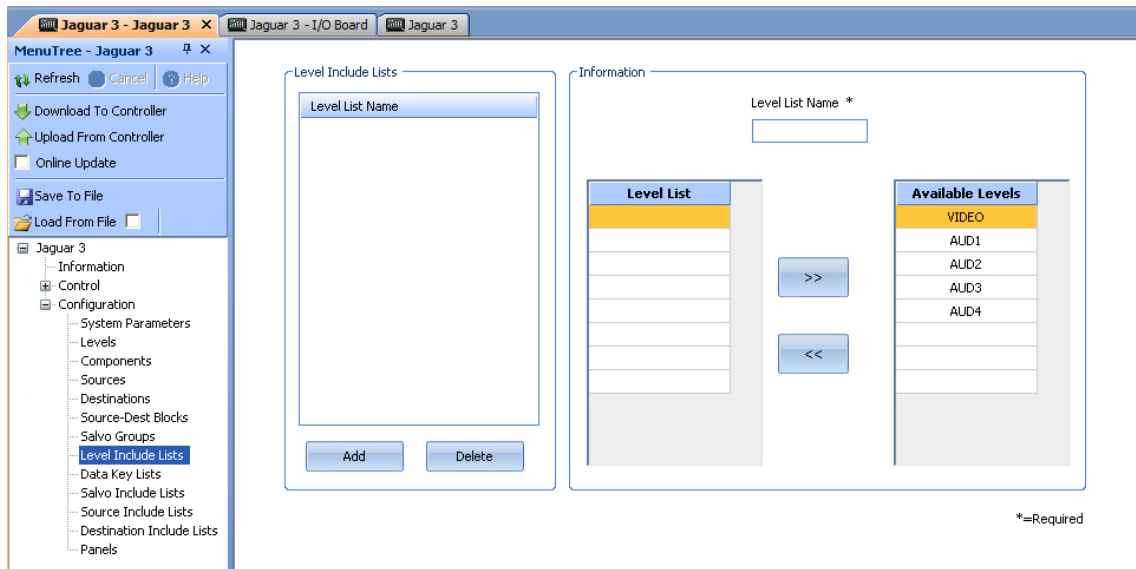


Figure 5-37 Level Include Lists Configuration Screen

- **Adding a Level Include List** –To add a level include list, click the **Add** button at the bottom of the Level Include Lists box. A place-holder name is added to the Level List Name list box and a set-up screen with the Level List Name entry field pre-filled is displayed in the Information box. You may change the name field entry to the descriptive name you would like to use for the level include list.
- **Deleting a Level Include List** - To delete a level include list, highlight the name of the list you wish to delete in the Level Include Lists box. Click **Delete** at the bottom of the box.
- **Level List Name** – This field is where you assign a name to the Level Include List. Names can be from one to eight characters in length and are constructed using uppercase letters, numbers, and spaces; however, the first character must be a letter. PESA recommends that you choose a name which is somewhat descriptive of the function of the level include list.
- **Level List** – Levels listed in this column are accessible by remote control devices functioning under the named level include list.
- **Available Levels** – This column contains a listing of all switching levels which may be included in the level include list.

Initially, all levels are listed in the Available Levels list box. Listed levels are moved between the two list boxes using the two arrows between the boxes, as shown by Figure 5-38. In order to move a level from the available list to the level include list, highlight the level you want to include in the list and click the arrow pointing from the available list to the include list. In order to disallow a level from the include list, highlight and move the level name from the include list to the available list using the arrow pointing to the available list.

Information

Level List Name *

Level List
Video
Audio 1
Audio 2

>>
<<

Available Levels
Audio 3
Audio 4
Audio 5
Audio 6
Audio 7
Audio 8

*=Required

Figure 5-38 Level Include List Data Entry

5.18.2 SALVO INCLUDE LISTS

The *Salvo Include Lists* configuration screen, Figure 5-39, allows you to selectively build a named list of salvo groups which, when assigned to a specific system control device or application, designates the salvo groups that panel is authorized to control. Multiple panels and devices may share a Salvo Include List. Click the **Salvo Include Lists** parent entry in the Configuration menu tree to display the configuration screen.

The box labeled *Salvo Include Lists* on the left side of the display window contains, by name, the salvo include lists that have been created; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing salvo include lists.

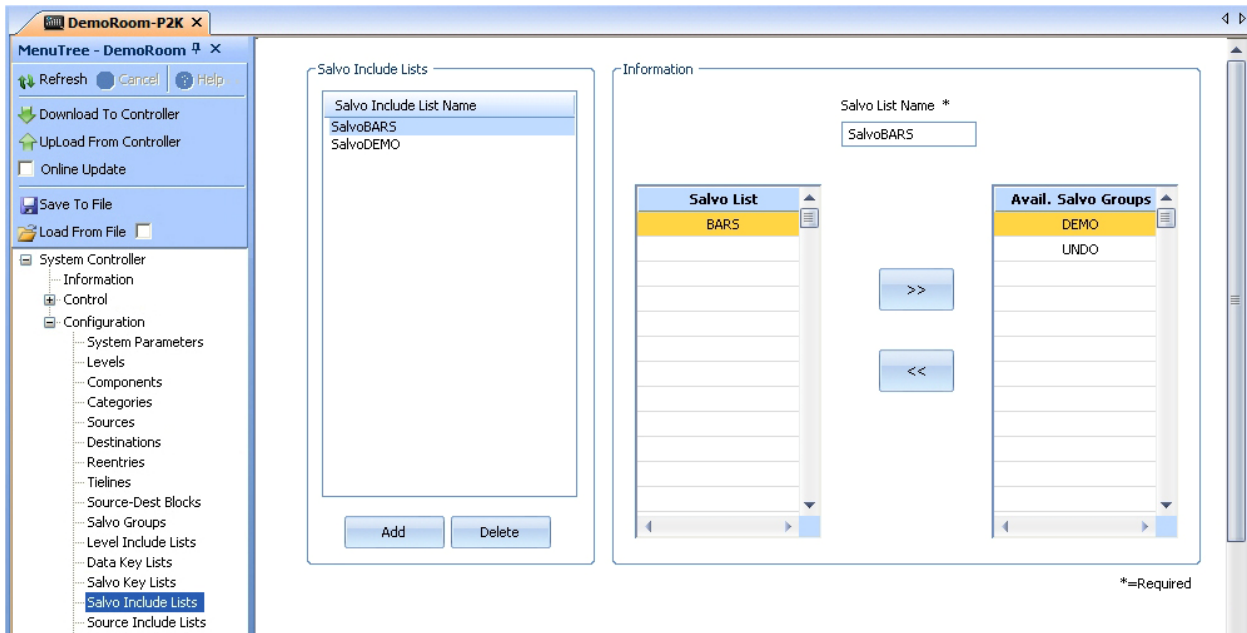


Figure 5-39 Salvo Include Lists Configuration Screen

- **Adding a Salvo Include List** –To add a salvo include list, click the **Add** button at the bottom of the Salvo Include Lists box. A place-holder name is added to the Salvo List Name list box and a set-up screen with the Salvo List Name entry field pre-filled is displayed in the Information box. You may change the name field entry to the descriptive name you would like to use for the salvo include list.
- **Deleting a Salvo Include List** - To delete a salvo include list, highlight the name of the list you wish to delete in the Salvo Include Lists box. Click **Delete** at the bottom of the box.
- **Salvo List Name** – This field is where you assign a name to the Salvo Include List. PESA recommends that you choose a name which is somewhat descriptive of the function of the salvo include list. Salvo List names may be from one to eight characters in length and are constructed using uppercase letters, numbers, and spaces; however, the first character must be a letter.
- **Salvo List** – Salvo groups listed in this column are accessible by remote control devices functioning under the named salvo include list.
- **Available Salvo Groups** – This column contains a listing of all salvo groups which may be included in the salvo include list.

Initially, all salvo groups are listed in the Available Salvo Groups list box. Listed salvo groups are moved between the two list boxes using the two arrows between the boxes. In order to move a salvo group name from the available list to the salvo include list, highlight the salvo group you want to include in the list and click the arrow pointing from the available list to the include list. In order to disallow a salvo group from the include list, highlight and move the salvo group name from the include list to the available list using the arrow pointing to the available list.

5.18.3 SOURCE INCLUDE LISTS

The *Source Include Lists* configuration screen, Figure 5-40, allows you to selectively build a named list of sources which, when assigned to a specific system control device or application, designates the sources that device is authorized to control. Multiple panels and devices may share a Source Include List. Click the **Source Include Lists** parent entry in the Configuration menu tree to display the configuration screen.

The box labeled *Source Include Lists* on the left side of the display window contains, by name, the source include lists that have been created; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing source include lists.

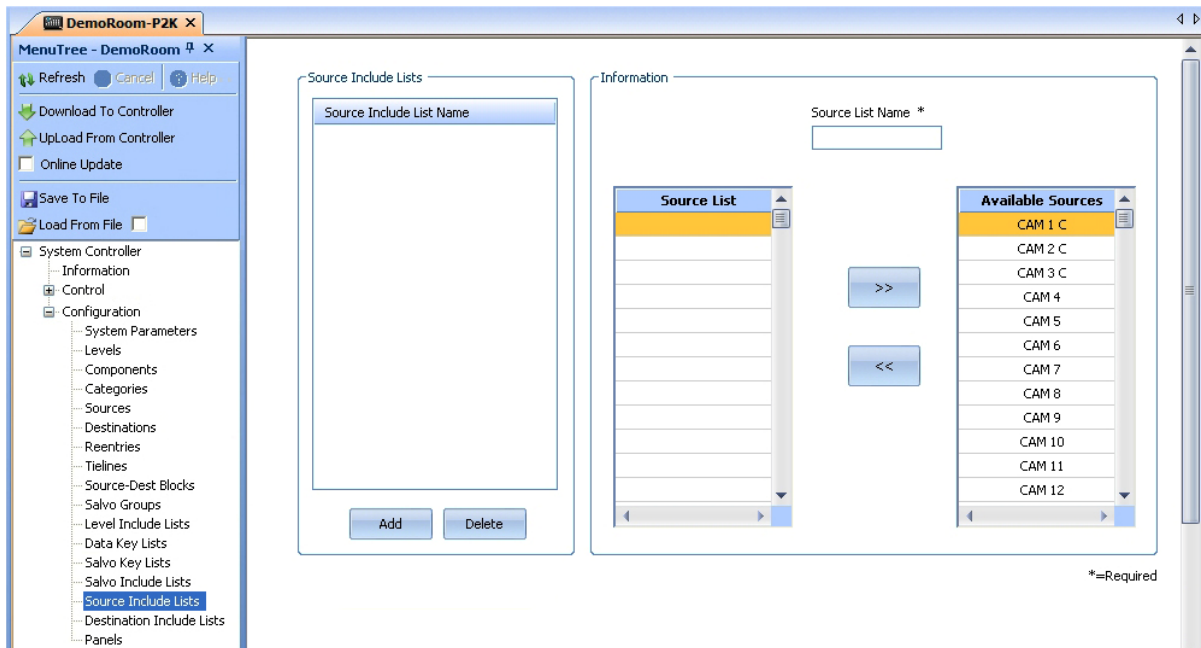



Figure 5-40 Source Include Lists Configuration Screen

- **Adding a Source Include List** –To add a source include list, click the **Add** button at the bottom of the Source Include Lists box. A place-holder name is added to the Source Include List Name list box and a set-up screen with the Source List Name entry field pre-filled is displayed in the Information box. You may change the name field entry to the descriptive name you would like to use for the source include list.
- **Deleting a Source Include List** - To delete a source include list, highlight the name of the list you wish to delete in the Source Include Lists box. Click **Delete** at the bottom of the box.
- **Source List Name** – This field is where you assign a name to the Source Include List. Names can be any combination of letters and numbers up to eight characters. PESA recommends that you choose a name which is somewhat descriptive of the function of the source include list. Source List names may be from one to eight characters in length and are constructed using uppercase letters, numbers, and spaces; however, the first character must be a letter.

- **Source List** – Sources listed in this column are accessible by remote control devices functioning under the named source include list.
- **Available Sources** – This column contains a listing of all sources which may be included in the source include list.

Initially, all sources are listed in the Available Sources list box. Listed sources are moved between the two list boxes using the two arrows between the boxes, Figure 5-41. In order to move a source name from the available list to the source include list, highlight the source you want to include in the list and click the arrow pointing from the available list to the include list. In order to disallow a source from the include list, highlight and move the source name from the include list to the available list using the arrow pointing to the available list.

Source Include Lists created for the configuration are listed in the *Source Include List Name* box. If you wish to access the configuration screen for a specific source include list, click on the name in the listing.

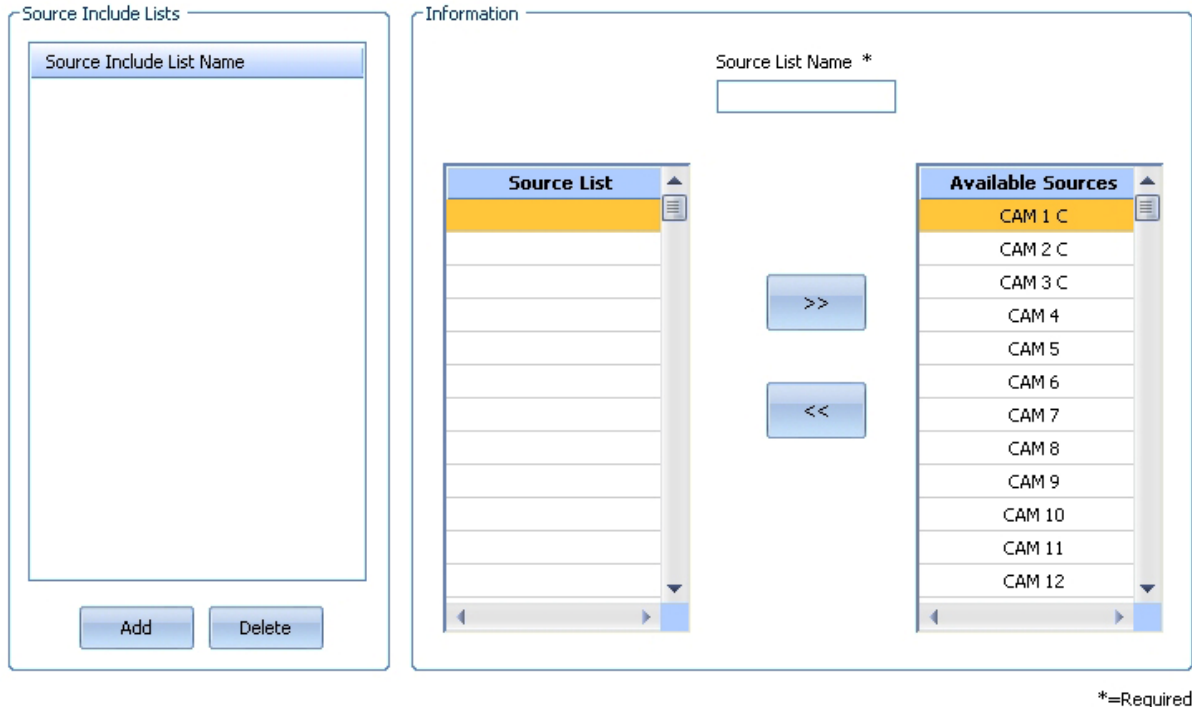

*=Required

Figure 5-41 Source Include Lists Data Entry Fields

5.18.4 DESTINATION INCLUDE LISTS

The *Destination Include Lists* configuration screen, Figure 5-42, allows you to selectively build a named list of destinations which, when assigned to a specific system control device or application, designates the sources that device is authorized to control. Multiple panels and devices may share a Destination Include List. Click the **Destination Include Lists** parent entry in the Configuration menu tree to display the configuration screen. .

The box labeled *Destination Include Lists* on the left side of the display window contains, by name, the destination include lists that have been created; and the box labeled *Information* on the right side contains the data entry cells used to create new or modify existing source include lists.


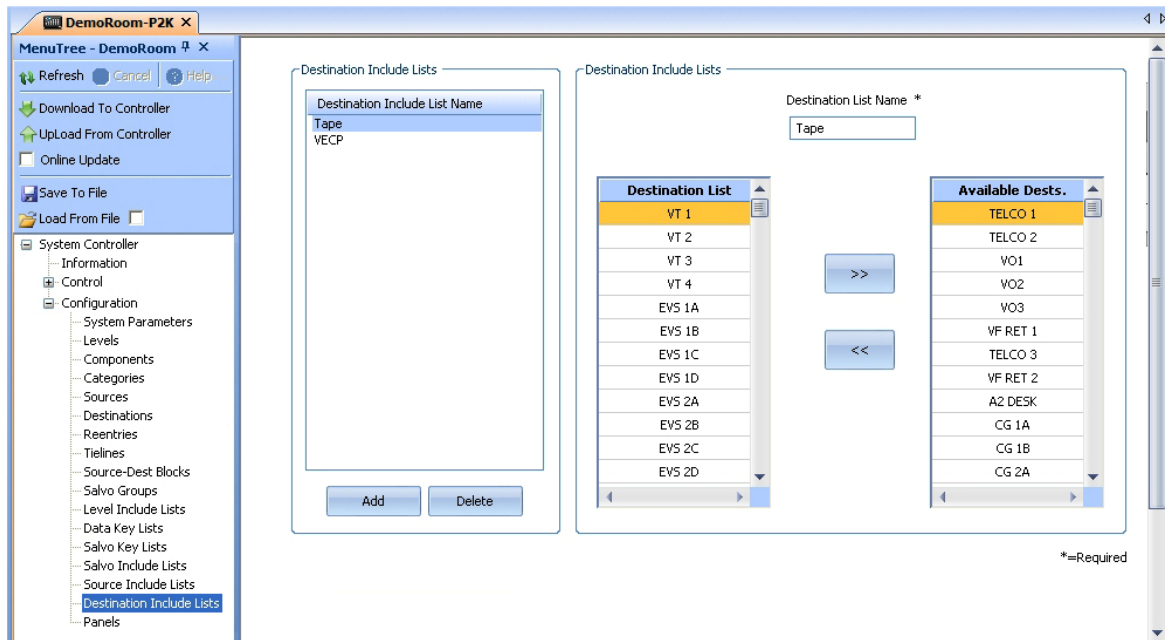


Figure 5-42 Destination Include Lists Configuration Screen

- **Adding a Destination Include List** – To add a destination include list, click the **Add** button at the bottom of the Destination Include Lists box. A place-holder name is added to the Destination Include List Name list box and a set-up screen with the Destination List Name entry field pre-filled is displayed in the Information box. You may change the name field entry to the descriptive name you would like to use for the destination include list.
- **Deleting a Destination Include List** - To delete a destination include list, highlight the name of the list you wish to delete in the Destination Include Lists box. Click **Delete** at the bottom of the box.
- **Destination List Name** – This field is where you assign a name to the Destination Include List. Names can be any combination of letters and numbers up to eight characters. PESA recommends that you choose a name which is somewhat descriptive of the function of the destination include list. Destination List names may be from one to eight characters in length and are constructed using uppercase letters, numbers, and spaces; however, the first character must be a letter.
- **Destination List** – Destinations listed in this column are accessible by remote control devices functioning under the named destination include list.
- **Available Sources** – This column contains a listing of all destinations which may be included in the destination include list.

Initially, all destinations are listed in the Available Destinations list box. Listed destinations are moved between the two list boxes using the two arrows between the boxes, Figure 5-43. In order to move a destination name from the available list to the destination include list, highlight the destination you want to include in the list and click the arrow pointing from the available list to the include list. In order to disallow a destination from the include list, highlight and move the destination name from the include list to the available list using the arrow pointing to the available list.

Destination Include Lists created for the configuration are listed in the *Destination Include List Name* box. If you wish to access the configuration screen for a specific destination include list, click on the name in the listing.

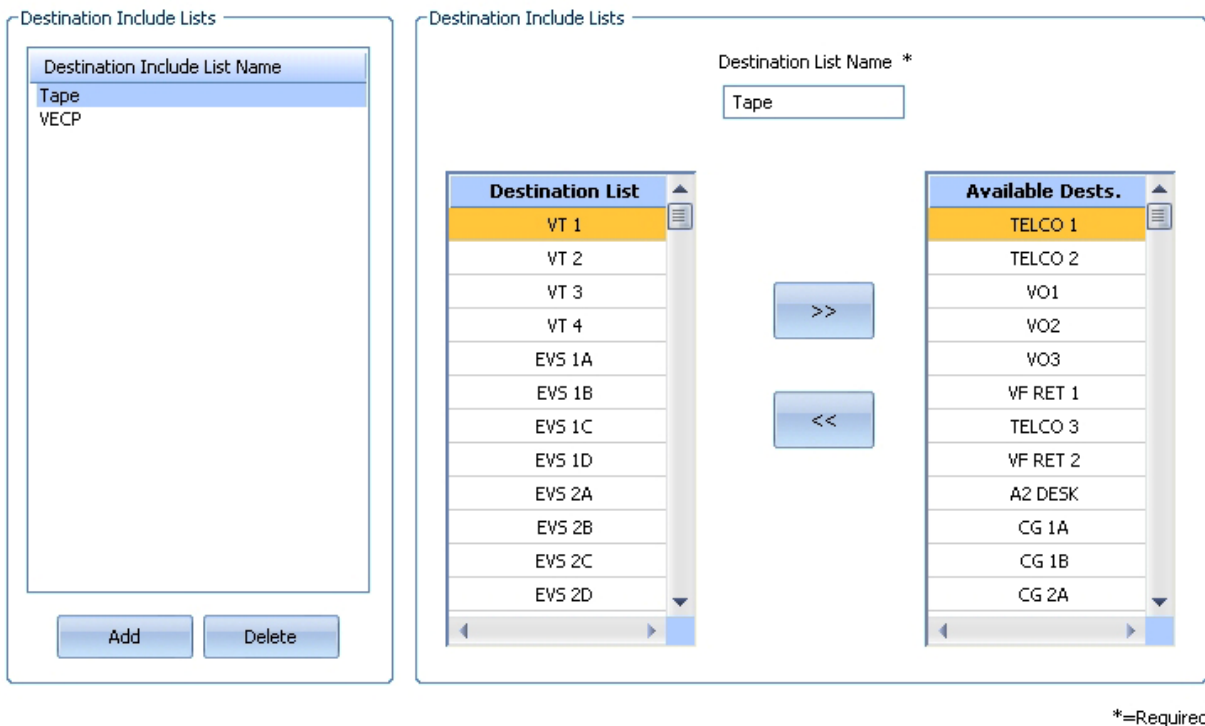

Destination Include Lists

Destination Include List Name

Tape
VECP

Add Delete

Destination Include Lists

Destination List Name *

Tape

Destination List

VT 1
VT 2
VT 3
VT 4
EVS 1A
EVS 1B
EVS 1C
EVS 1D
EVS 2A
EVS 2B
EVS 2C
EVS 2D

Available Dests.

TELCO 1
TELCO 2
VO1
VO2
VO3
VF RET 1
TELCO 3
VF RET 2
A2 DESK
CG 1A
CG 1B
CG 2A

*=Required

Figure 5-43 Destination Include Lists Data Entry Fields

Chapter 6 Maintenance and Repair

6.1 PERIODIC MAINTENANCE


No periodic maintenance is required.

6.2 PESA CUSTOMER SERVICE

If you are experiencing any difficulty with your Jaguar3 router system, please contact PESA's Customer Service Department. Skilled technicians are available to assist you 24 hours a day, every day of the year.

6.3 REPAIR

Before attempting to repair this equipment, please consult your warranty documents and PESA's Customer Service Department. Unauthorized repairs may void your warranty.

	<p>PC boards in this equipment contain Surface Mount Technology (SMT) components. Special tools and skills are required to replace these components without causing damage to adjacent areas.</p> <p>Failure to consult with Customer Service before attempting to repair these boards may void your warranty.</p>
---	--

6.4 REPLACEMENT PARTS

Only parts of the highest quality are used in the design and manufacture of this equipment. If the inherent stability and reliability are to be maintained, replacement parts must be of the same high quality. Please consult our Customer Service Department before installing any parts not purchased from PESA.

6.5 FACTORY SERVICE

Before returning any equipment to PESA for service or repair, please contact our Customer Service Department for an RMA number.

MAIN OFFICE

Tel: 256.726.9200

Fax: 256.726.9271

EMAIL: SALESTEAM@PESA.COM

SERVICE DEPARTMENT

Tel: 256.726.9222 (24/7)

Toll Free: 800.323.7372

Fax: 256.726.9268

EMAIL : service@pesa.com

6.6 SHIPPING INFORMATION

Ship return items to the following address:

PESA Switching Systems
103 Quality Circle, Suite 210
Huntsville AL 35806 USA



PESA