

# USER MANUAL

## Model TIF 2000A Digital Hybrid Telephone Line Interface



# **RTS**<sup>TM</sup>

## PROPRIETARY NOTICE

The RTS product information and design disclosed herein were originated by and are the property of Telex Communications, Inc. Telex reserves all patent, proprietary design, manufacturing, reproduction, use and sales rights thereto, and to any article disclosed therein, except to the extent rights are expressly granted to others.

## COPYRIGHT NOTICE

Copyright © 2001 by Telex Communications, Inc. All rights reserved. Reproduction in whole or in part without prior written permission from Telex is prohibited.

## WHATS IN THIS BOX

1	TIF 2000A	9010-7823-000
1	Power Supply	532026-000
1	IEC Power Cord	550006-100
1	User Manual	9350-7823-000
1	Software Disk	9015-7674-100

\* Software disk contains county specific telephone system configuration files.

## WARRANTY INFORMATION

RTS products are warranted by Telex Communications, Inc. to be free from defects in materials and workmanship for a period of three years from the date of sale.

The sole obligation of Telex during the warranty period is to provide, without charge, parts and labor necessary to remedy covered defects appearing in products returned prepaid to Telex. This warranty does not cover any defect, malfunction or failure caused beyond the control of Telex, including unreasonable or negligent operation, abuse, accident, failure to follow instructions in the Service Manual or the User Manual, defective or improper associated equipment, attempts at modification and repair not authorized by Telex, and shipping damage. Products with their serial numbers removed or effaced are not covered by this warranty.

To obtain warranty service, follow the procedures entitled "Procedure For Returns" and "Shipping to Manufacturer for Repair or Adjustment".

This warranty is the sole and exclusive express warranty given with respect to RTS products. It is the responsibility of the user to determine before purchase that this product is suitable for the user's intended purpose.

ANY AND ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

NEITHER TELEX NOR THE DEALER WHO SELLS RTS PRODUCTS IS LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

## CUSTOMER SUPPORT

Technical questions should be directed to:

Customer Service Department  
RTS/Telex,  
12000 Portland Avenue South  
Burnsville, MN 55337 U.S.A.  
Telephone: (800) 392-3497  
Fax: (800) 323-0498

## RETURN SHIPPING INSTRUCTIONS

### PROCEDURE FOR RETURNS

If a repair is necessary, contact the dealer where this unit was purchased.

If repair through the dealer is not possible, obtain a RETURN AUTHORIZATION from:

Customer Service Department  
Telex Communications, Inc.  
Telephone: (800) 392-3497  
Fax: (800) 323-0498

DO NOT RETURN ANY EQUIPMENT DIRECTLY TO THE FACTORY WITHOUT FIRST OBTAINING A RETURN AUTHORIZATION.

Be prepared to provide the company name, address, phone number, a person to contact regarding the repair, the type and quantity of equipment, a description of the problem and the serial number(s).

## SHIPPING TO MANUFACTURER FOR REPAIR OR ADJUSTMENT

All shipments of RTS products should be made via United Parcel Service or the best available shipper, prepaid. The equipment should be shipped in the original packing carton; if that is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the equipment should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material. All shipments must be sent to the following address and must include the Return Authorization.

Factory Service Department  
Telex Communications, Incorporated  
1930 West 1st Street  
Blue Earth, MN 56013 U.S.A.

Upon completion of any repair the equipment will be returned via United Parcel Service or specified shipper collect.

# Table of Contents

INTRODUCTION .....	4
DESCRIPTION .....	4
Front Panel Features .....	4
Power .....	4
Indicator .....	4
Rear Panel Features .....	4
Seizes & Drops Line .....	4
Intercom Matrix Connections .....	4
Line Mode .....	4
Indicator .....	4
Audio to Matrix .....	4
Level Adjustment .....	4
Data Present .....	4
Audio to Matrix .....	4
Level Meter .....	4
Address & Configuration .....	4
Audio to Telephone Line .....	4
Level Adjustment .....	4
Telephone Line Connections .....	4
Audio to Telephone Line .....	4
Level Meter .....	4
Power .....	4
INSTALLATION .....	4
Rear Panel DIP Switch (S201) .....	4
Auto Answer .....	4
Generate Ring Signal .....	4
Password Required .....	4
Intercom Port Address .....	4
Full Duplex Method .....	6
Internal DIP Switch (S202) .....	6
Ring Count .....	6
DTMF or Pulse Dial Selection .....	6
Point-to-Point Seize .....	6
Remove .....	6
Loosen .....	6
Internal DIP Switch (S202) .....	6
Internal DIP Switch (S203) .....	6
One Touch Dial .....	7
Fast Seize .....	7
DSP Full or Half Duplex Selection .....	7
Audio Ducking .....	7
Internal DIP Switch (S203) .....	7
Rack Mounting .....	7
Connections .....	7

Intercom .....	7
Telephone and Telephone Line .....	7
Power Supply .....	7
Setting Audio Levels .....	8
Setting audio levels to intercom matrix .....	8
Setting audio levels to telephone line .....	9
Configuring for Country's Telephone System .....	9
OPERATION .....	9
Operation From A Keypanel .....	9
Programming a key to use the TIF 2000A .....	9
Dialing a call .....	10
Hanging up .....	10
Re-dialing the last number .....	10
Dialing a speed dial number .....	10
Storing a speed dial number .....	10
Answering a call .....	10
TIF 2000A System Setup to Receive Calls .....	11
Auto Answer Mode .....	11
Manual Answer Mode .....	11
Using The TIF 2000A From The Telephone .....	11
DTMF Codes .....	12
SPECIFICATIONS .....	13
TELEPHONE INTERFACE REQUIREMENTS FORM .....	14

## INTRODUCTION

This manual describes the installation, programming, and operating procedures for the RTS Model TIF 2000A Digital Hybrid Telephone Line Interface. Since TIF 2000A functions as a keypanel, the user may also need to refer to the manuals and/or on-line help files for AZedit for information on configuring certain features.


**Important!** Be sure to review any recently added supplemental information before proceeding. Supplements are placed at the back of the manual.

## DESCRIPTION

The TIF 2000A is a single line digital hybrid telephone line interface designed to be compatible with ADAM, ADAM CS, ZEUS, and CS 9000 series intercom systems. It provides bi-directional communication between the intercom matrix and a standard DTMF capable telephone line. It allows the phone to access all crosspoints of the matrix, as well as dynamic party lines, IFB circuits, and other forms of communications. The 1U high by ½ wide rack mountable (via an optional kit) TIF 2000A provides a transparent link to the telephone system enabling full dial-out capability from any designated keypanel with keypad. The TIF 2000A has full dial-in capability giving the caller a keypanel on the system via commands from the DTMF pad on their telephone. Since the TIF 2000A appears to the matrix as any other keypanel would, the only limitation on the number of units in the system is the same as for other keypanels.


### Front Panel Features

*Figure 1 - TIF 2000A Front Panel Features*

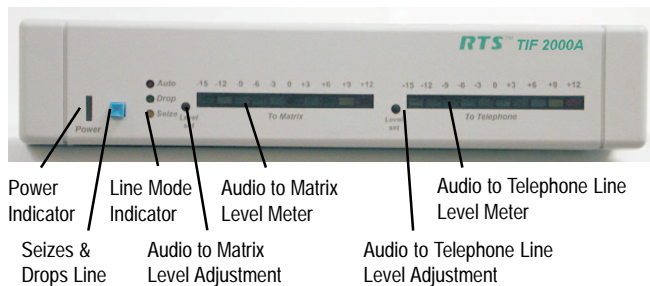

### Rear Panel Features

*Figure 2 - TIF 2000A Rear Panel Features*

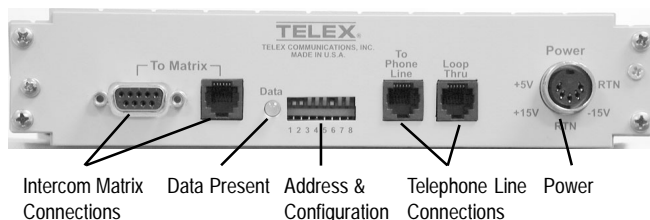

## INSTALLATION

### Rear Panel DIP Switch (S201)

The rear panel DIP switch contains switches to configure the most often changed options. These include: auto answer on/off, ring signal on/off, password on/off, intercom port address, and full duplex method.

#### Auto Answer

Turning on the auto answer option will set the unit to answer the phone automatically when it rings. The number of rings required before it answers is determined by the setting of internal DIP switch (S202). If auto answer is turned off, the line will ring until someone at a keypanel answers the call or until the Select button on the TIF 2000A's front panel is pressed. To turn ON auto answer, place switch 1 in the down position. To turn OFF auto answer, place switch 1 in the up position.

#### Generate Ring Signal

Turning on the generate ring signal option sets the unit so that when the phone line is ringing, keypanels that are configured to receive ring signals will produce an audible ring. To turn ON the ring signal, place switch 2 in the down position. To turn OFF the ring signal, place switch 2 in the up position.

#### Password Required

Turning on the password required option sets the unit so that when a call is automatically answered, the user must enter a password via DTMF before the unit will allow communications. The password numeric sequence and length are determined by the settings of internal DIP switch (S203). To turn ON the password required option, place switch 3 in the down position. To turn OFF the password required option, place switch 3 in the up position.

#### Intercom Port Address

Switches 4 to 7 determine the address of the unit. The port address is expressed in binary with switch 4 being the least significant bit (LSB) and switch 7 being the most significant bit (MSB). To turn ON (set bit to 1), place the desired switch in the down position. To turn OFF (set bit to 0), place the desired switch in the up position. ADAM, ADAM CS, and Zeus units use a 1-8 address scheme for their ports (e.g. ports 1-8 have addresses 1-8, ports 9-16 have addresses 1-8, etc...). CS 9xxx systems use a 1-10 scheme for port addresses (e.g. ports 1-10 have addresses 1-10, ports 11-20 have addresses 1-10, etc...).

**To set the address for ADAM, ADAM CS, or Zeus systems do the following:**

1. Determine the port number that will be used for the TIF 2000A.
2. Locate the port number and its corresponding address in Table 1.

**Table 1- Correspondence between address numbers and intercom port numbers for ADAM, ADAM CS, and Zeus systems**

Address	Card Numbers (bold headings) and Port Numbers																								
Cards 1-25																									
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
1	1	9	17	25	33	41	49	57	65	73	81	89	97	105	113	121	129	137	145	153	161	169	177	185	193
2	2	10	18	26	34	42	50	58	66	74	82	90	98	106	114	122	130	138	146	154	162	170	178	186	194
3	3	11	19	27	35	43	51	59	67	75	83	91	99	107	115	123	131	139	147	155	163	171	179	187	195
4	4	12	20	28	36	44	52	60	68	76	84	92	100	108	116	124	132	140	148	156	164	172	180	188	196
5	5	13	21	29	37	45	53	61	69	77	85	93	101	109	117	125	133	141	149	157	165	173	181	189	197
6	6	14	22	30	38	46	54	62	70	78	86	94	102	110	118	126	134	142	150	158	166	174	182	190	198
7	7	15	23	31	39	47	55	63	71	79	87	95	103	111	119	127	135	143	151	159	167	175	183	191	199
8	8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168	176	184	192	200
Cards 26-50																									
	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
1	201	209	217	225	233	241	249	257	265	273	281	289	297	305	313	321	329	337	345	353	361	369	377	385	393
2	202	210	218	226	234	242	250	258	266	274	282	290	298	306	314	322	330	338	346	354	362	370	378	386	394
3	203	211	219	227	235	243	251	259	267	275	283	291	299	307	315	323	331	339	347	355	363	371	379	387	395
4	204	212	220	228	236	244	252	260	268	276	284	292	300	308	316	324	332	340	348	356	364	372	380	388	396
5	205	213	221	229	237	245	253	261	269	277	285	293	301	309	317	325	333	341	349	357	365	373	381	389	397
6	206	214	222	230	238	246	254	262	270	278	286	294	302	310	318	326	334	342	350	358	366	374	382	390	398
7	207	215	223	231	239	247	255	263	271	279	287	295	303	311	319	327	335	343	351	359	367	375	383	391	399
8	208	216	224	232	240	248	256	264	272	280	288	296	304	312	320	328	336	344	352	360	368	376	384	392	400
Cards 51-75																									
	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75
1	401	409	417	425	433	441	449	457	465	473	481	489	497	505	513	521	529	537	545	553	561	569	577	585	593
2	402	410	418	426	434	442	450	458	466	474	482	490	498	506	514	522	530	538	546	554	562	570	578	586	594
3	403	411	419	427	435	443	451	459	467	475	483	491	499	507	515	523	531	539	547	555	563	571	579	587	595
4	404	412	420	428	436	444	452	460	468	476	484	492	500	508	516	524	532	540	548	556	564	572	580	588	596
5	405	413	421	429	437	445	453	461	469	477	485	493	501	509	517	525	533	541	549	557	565	573	581	589	597
6	406	414	422	430	438	446	454	462	470	478	486	494	502	510	518	526	534	542	550	558	566	574	582	590	598
7	407	415	423	431	439	447	455	463	471	479	487	495	503	511	519	527	535	543	551	559	567	575	583	591	599
8	408	416	424	432	440	448	456	464	472	480	488	496	504	512	520	528	536	544	552	560	568	576	584	592	600
Cards 76-100																									
	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
1	601	609	617	625	633	641	649	657	665	673	681	689	697	705	713	721	729	737	745	753	761	769	777	785	793
2	602	610	618	626	634	642	650	658	666	674	682	690	698	706	714	722	730	738	746	754	762	770	778	786	794
3	603	611	619	627	635	643	651	659	667	675	683	691	699	707	715	723	731	739	747	755	763	771	779	787	795
4	604	612	620	628	636	644	652	660	668	676	684	692	700	708	716	724	732	740	748	756	764	772	780	788	796
5	605	613	621	629	637	645	653	661	669	677	685	693	701	709	717	725	733	741	749	757	765	773	781	789	797
6	606	614	622	630	638	646	654	662	670	678	686	694	702	710	718	726	734	742	750	758	766	774	782	790	798
7	607	615	623	631	639	647	655	663	671	679	687	695	703	711	719	727	735	743	751	759	767	775	783	791	799
8	608	616	624	632	640	648	656	664	672	680	688	696	704	712	720	728	736	744	752	760	768	776	784	792	800

**Table 2- Address DIP Switch Settings**

Logical Keypanel Number	DIP Switch Settings			
	SW4	SW5	SW6	SW7
1	Down	Up	Up	Up
2	Up	Down	Up	Up
3	Down	Down	Up	Up
4	Up	Up	Down	Up
5	Down	Up	Down	Up
6	Up	Down	Down	Up
7	Down	Down	Down	Up
8	Up	Up	Up	Down
9	Down	Up	Up	Down
10	Up	Down	Up	Down

**Note:** Shaded area is for CS9xxx system addresses only!

- Determine the DIP switch settings by looking up the address determined in the previous step in Table 2.
- Set the DIP switches on the back of the unit.

**To set the address for CS 9xxx systems do the following:**

- Determine the intercom intercom port (audio channel number) that will be used for the TIF 2000A.
- For port numbers ending in 1 through 9, the address is the last digit of the port number. If the last digit is zero, use 10 as the address number
- Determine the DIP switch settings by looking up the address in Table 2.
- Set the **DIP switches** on the back of the unit.

### Full Duplex Method

Switch 8 (S201) controls the method by which full duplex operation is implemented in the unit. This switch only works if full duplex mode is set via internal DIP switch (S202), switch 7 (factory default setting for Switch 7 is ON, full duplex mode.) If switch 8 is in the open position, then the unit will be forced into full duplex mode all the time. If switch 8 is in the closed position, then the unit will be forced into full duplex mode only when audio is present.

When using full duplex mode, users may hear an increased amount of echo on the line. This may be more pronounced when the TIF 2000A is forced into full duplex mode all of the time (switch 8 open) rather than only when audio is present (switch 8 closed).

### Internal DIP Switch (S202)

Internal DIP switch (see Figure 4) is accessed by removing the top cover. To remove the top cover, remove and loosen the screws as indicated in Figure 3. Remove the cover by lifting up on the back portion of the cover. To reinstall the cover, place the front portion into the grooves on the bottom cover and slide the cover toward the front of the unit while


lowering the back of the cover. Replace and tighten the screws that were removed or loosened as indicated in Figure 3.

### Ring Count


Switches 1 and 2 determine the number of rings before the unit auto answers. **NOTE**, the ring count is approximate. These switches have no effect unless switch 1 on the rear panel DIP switch bank is in the down position. To set the ring count, consult Table 3.

### DTMF or Pulse Dial Selection

Switch 3 sets the dialing mode to either Dual Tone Multi-Frequency (DTMF) or Pulse. When in the switch is in the Off position DTMF dialing is selected. When the switch is in the On position pulse dialing is selected.

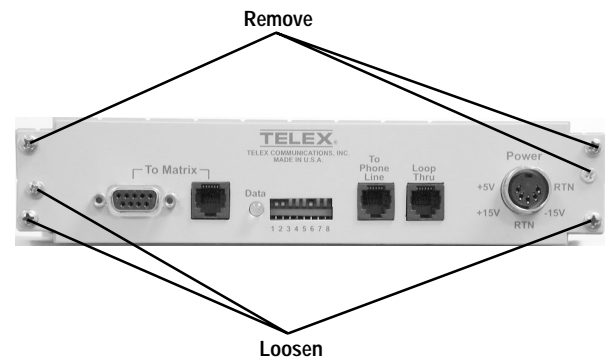

**Figure 3 - TIF 2000A Internal DIP Switch Locations**

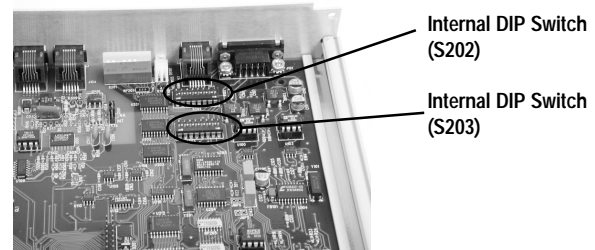

**Figure 4 - TIF 2000A Internal DIP Switch Locations**

**Table 3- Ring Count Settings**

# of Rings	SW1	SW2
1	Off	Off
2	On	Off
4	Off	On
8	On	On

### Point-to-Point Seize

Switch 4 turns on and off the Point-to-Point Seize feature. When the switch is in the OFF position normal line seize operation (via a keypanel) is selected. When the switch is in the ON position a line will be seized immediately upon the designated TIF 2000A's talk key being pressed via the keypanel.



### One Touch Dial

Switch 5 enables/disables the One Touch Dialing feature. When the switch is in the OFF position One Touch Dial is disabled. When the switch is in the ON position One Touch Dial is enabled.

#### *One Touch Dial works as follows:*

If a number is stored in Auto Dial memory 1 on the TIF 2000A, and the line is on hook, then the TIF 2000A will autodial the number stored in Auto Dial memory 1 whenever any keypanel closes a point-to-point talk key to the TIF 2000A.

### Fast Seize

Switch 6 enables/disables the Fast Seize feature. If the switch is in the OFF position Fast Seize is disabled. If the switch is in the ON position Fast Seize is enabled. If Fast Seize is enabled and the unit is set to auto answer, then the TIF 2000A will answer or “seize” the line at the start of the first ring. It is important to note that a ring will not be heard on any of the keypanels.

### DSP Full or Half Duplex Selection

Switch 7 determines either full duplex or half duplex operation. If the switch is set to the OFF position, the DSP is forced into full duplex mode as determined by the setting of switch 8 on the DIP switch bank located on the rear panel of the TIF 2000A. See **Full Duplex Method** for more information. If the switch is set to the ON position, the DSP is never forced into full duplex mode.

### Audio Ducking

Switch 8 enables/disables the Audio Ducking feature. If the switch is set to the ON position, Audio Ducking is disabled. If the switch is set to the OFF position, Audio Ducking is enabled. The Audio Ducking feature helps to eliminate feedback between the intercom system and the telephone line.

### Internal DIP Switch (S203)

Internal DIP switch (S203) selects the password. It has no effect unless password required has been enabled on the DIP switch located on the rear panel. When password required is enabled, the password must be entered via DTMF by the caller before they may communicate. This is to prevent unauthorized use of the intercom by callers. See Table 5.

Switches 7 and 8 select the length of the password, from 1 digit to 4 digits. If set for 1 digit only the first digit of the password is used, if set for 2 digits, then the first 2 digits are used etc. See Table 4.

### Rack Mounting

There are two options for rack mounting the TIF 2000A. If

a single unit is to be rack mounted attach an MCP-2 rack mount kit. If two units are to be mounted side-by-side, attach an MCP-1 rack mount kit. See Figure 5 for a depiction of the two rack mount kits.

### Connections

#### Intercom


Use either of the “To Matrix” connectors (but not both) to connect to an intercom port. The intercom port that you connect to will determine the address of the unit (see **Setting Address**). Cable wiring diagrams are shown in **Table 4 - Password length DIP Switch Settings**

PW Length	SW7	SW8
4	Off	Off
3	On	Off
2	Off	On
1	On	On

Figures 6 and 7. An LED labeled “Data” is located next to the Matrix connectors and serves as a basic indicator of data flow.

#### Telephone and Telephone Line

There are two telephone connections provided on the rear of the TIF 2000A. Plug the telephone line into the jack labeled

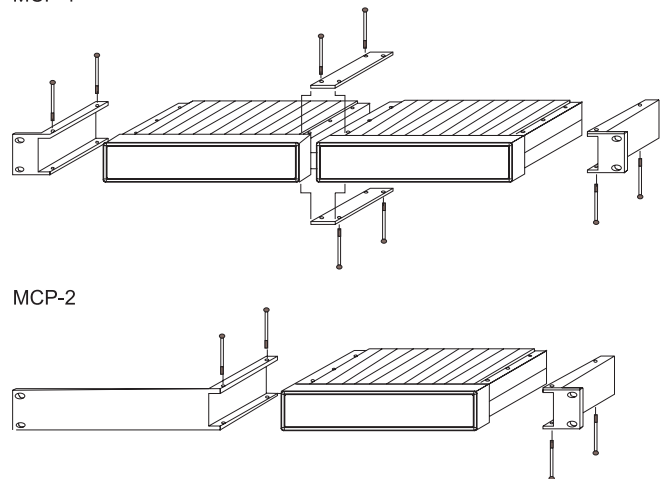

**Figure 5 - Rack Mount Kits**

“To Phone Line”. You may also plug a standard telephone into the jack labeled “Loop Thru”.

**Note:** The standard telephone plugged into the “Loop Thru” jack is disconnected when the TIF 2000A seizes the telephone line.

#### Power Supply

Insert the round connector from the brick type power supply into the power connector on the rear of the TIF 2000A. Turn the locking ring on the connector to secure the connection. Plug the female end of the IEC type power cord into the power supply and then plug the other end into an appropri-



**Table 5 - Password length DIP Switch Settings**

Password	SW1	SW2	SW3	SW4	SW5	SW6
4,7,8,8	off	off	off	off	off	off
7,7,7,7	on	off	off	off	off	off
4,6,8,7	off	on	off	off	off	off
1,0,5,8	on	on	off	off	off	off
1,4,8,4	off	off	on	off	off	off
7,0,3,3	on	off	on	off	off	off
5,9,0,7	off	on	on	off	off	off
0,9,3,5	on	on	on	off	off	off
3,7,8,0	off	off	off	on	off	off
1,4,5,0	on	off	off	on	off	off
6,9,2,7	off	on	off	on	off	off
8,3,0,3	on	on	off	on	off	off
8,3,3,6	off	off	on	on	off	off
6,0,8,0	on	off	on	on	off	off
2,9,5,7	off	on	on	on	off	off
5,8,5,1	on	on	on	on	off	off
9,5,9,9	off	off	off	off	on	off
8,2,0,6	on	off	off	off	on	off
4,7,4,0	off	on	off	off	on	off
4,5,7,3	on	on	off	off	on	off
8,8,3,0	off	off	on	off	on	off
0,6,2,0	on	off	on	off	on	off
3,3,3,9	off	on	on	off	on	off
9,8,5,0	on	on	on	off	on	off
7,3,5,6	off	off	off	on	on	off
9,1,4,6	on	off	off	on	on	off
9,9,9,1	off	on	off	on	on	off
3,8,8,1	on	on	off	on	on	off
4,2,4,0	off	off	on	on	on	off
1,0,6,3	on	off	on	on	on	off
8,6,3,2	off	on	on	on	on	off
4,2,3,4	on	on	on	on	on	off
0,8,5,1	off	off	off	off	off	on
0,6,7,4	on	off	off	off	off	on
0,0,1,5	off	on	off	off	off	on
6,2,9,4	on	on	off	off	off	on
9,9,5,4	off	off	on	off	off	on
1,0,7,9	on	off	on	off	off	on
9,0,3,0	off	on	on	off	off	on
0,1,6,6	on	on	on	off	off	on
9,5,5,6	off	off	off	on	off	on
8,0,5,4	on	off	off	on	off	on
6,2,9,3	off	on	off	on	off	on
6,6,1,1	on	on	off	on	off	on
6,3,6,7	off	off	on	on	off	on
1,5,2,9	on	off	on	on	off	on
2,7,5,6	off	on	on	on	off	on
8,3,1,3	on	on	on	on	off	on
1,6,5,6	off	off	off	off	on	on
7,6,4,2	on	off	off	off	on	on
1,6,5,3	off	on	off	off	on	on
1,6,0,3	on	on	off	off	on	on
4,3,7,3	off	off	on	off	on	on
3,5,7,4	on	off	on	off	on	on
4,7,6,4	off	on	on	off	on	on
3,8,6,8	on	on	on	off	on	on
5,7,1,9	off	off	off	on	on	on
3,9,2,7	on	off	off	on	on	on
6,8,5,7	off	on	off	on	on	on
5,4,8,7	on	on	off	on	on	on
3,2,5,2	off	off	on	on	on	on
0,4,0,1	on	off	on	on	on	on
6,4,0,9	off	on	on	on	on	on
4,3,4,3	on	on	on	on	on	on


ate power outlet.

## Setting Audio Levels


Audio levels to the intercom matrix and to the telephone line can be adjusted via the trim pots located on the front panel.

### Setting audio levels to intercom matrix

Adjustment may be made via the front panel control (see Figure 1). To adjust the control use a small flat blade screwdriver or trim pot adjustment tool. Initially set the front panel level control for mid range. Have the caller talk at their normal level and adjust the control for the best audio quality while avoiding going into the red section of the audio meter (to Matrix) located on the front panel.

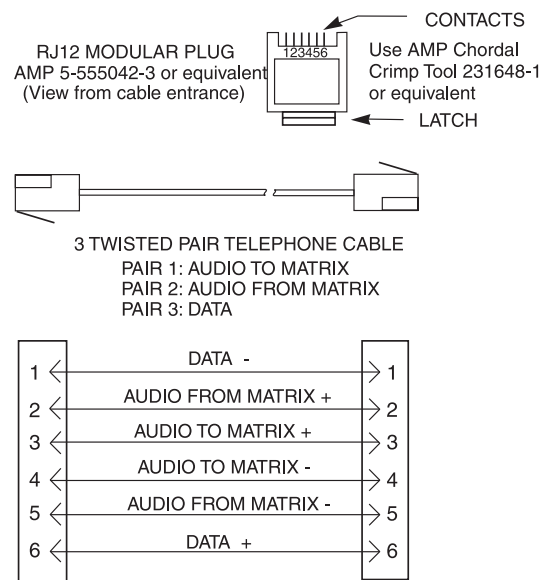

**Figure 6 - RJ12 Intercom Cable**

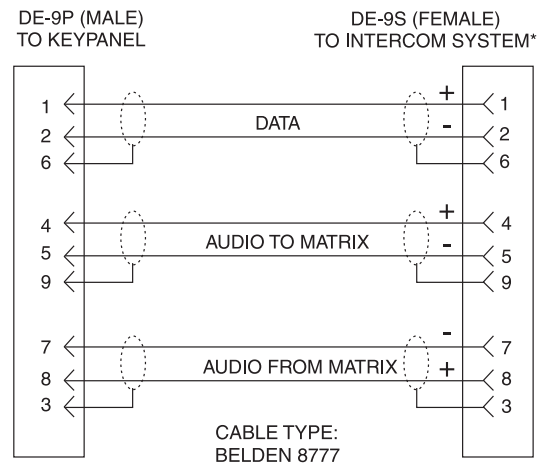

### IMPORTANT!

\* When connecting to an ADAM CS back panel, use only low-profile cable connectors such as AMP Part No. 747516-3 (Telex Part No. 59926-678)

**Figure 7 - DE9 Intercom Cable**

### Setting audio levels to telephone line

Adjustment may be made via the front panel control (see Figure 1). To adjust the control use a small flat blade screwdriver or trim pot adjustment tool. Initially set the front panel level control for mid range. Talk at your normal level and adjust the control for the best audio quality while avoiding going into the red section of the audio meter (to Telephone) located on the front panel.

### Configuring for Country's Telephone System

The TIF 2000A should be configured to work with the telephone system to which it is connected. Each country or area of the world has unique signaling differences that could cause erratic operation of the TIF 2000A if it is not properly configured. If the system you intend to connect is not currently supported, you may request a configuration using the form located in the back of this manual.

To configure the unit for use with a specific country's telephone system do the following:

**Note:** AZedit must be configured to allow firmware downloads.

1. Connect the TIF 2000A to the intercom system.
2. Run the **AZedit software** and go to the keypad software versions screen. This is located under the Status menu. Go to **[Status]** **[Software Versions]** **[Keypanel]**.
3. Click on the **entry** for the TIF 2000A you wish to configure.

The configurations are in a self extracting archive on the included floppy disk.

4. Extract and copy these files to a known location on the computer connected to the intercom matrix
5. Press **CTRL + SHIFT + D** to start the software download process. A download screen should appear.
6. Select the **location** that you copied the files to in step 4 and select the file corresponding to the country needed.
7. Click **OK**.

Once the software versions window reappears, the process is complete.

The status reported for the TIF 2000A contains a number corresponding to the country configuration. This is reported as **LOCALE = XX** where **XX** is a specific number for each country. The current possible configurations are:

0	North America, Korea, Taiwan
1	Belgium
2	France
3	Germany
4	United Kingdom (UK)
5	Italy
6	Japan
7	Netherlands
8	Norway
9	Not Used
10	Singapore
11	Brazil, Sweden
12	Ireland
CUST	Custom Configuration

## OPERATION

### Operation From A Keypanel

The TIF 2000A is operated from the intercom keypanels, and from the dial pad on the telephone at the remote end of the line. Any keypad with a keypad may use a TIF 2000A. All that is necessary is to program a key to talk to the TIF 2000A, as if it were a keypad. The alpha numeric display or tally LED for that key then provides information about the phone line. A solid display or non illuminated LED indicates a line which is not in use. A slow flash indicates a line which is in use (off hook). A rapidly flashing display or LED indicates a line which is ringing. In addition, the alpha numeric display will display digits as they are dialed, and the LED will flash for each digit.

**Note:** Displayed tallies will be different if the "Don't generate tallies for TIF or trunk use" option has been selected in **[Options]** **[Intercom Configuration]**.

### Programming a key to use the TIF 2000A

To use the TIF 2000A, either to answer a call, or to call out, you first need to program a key to talk to the TIF 2000A. This is accomplished in the same manner as programming a key to talk to a key panel. To program a key by port number, enter **NUM-*nnn*-PGM-*t***, where **NUM** is the number 1 key, ***nnn*** is the port number of the TIF 2000A you want to use, and ***t*** is any talk key. In general, you will also need to use the listen key, so it should be assigned as either **AF** (auto follow), or **AL** (auto listen).

**Note:** The TIF 2000A only responds to commands which are sent via a point-to-point key assignment. If you wish to use the TIF 2000A primarily on a PL, you must add a point to point assignment as the L2 talk assignment on the talk key for any panels which are going to either answer the line, or dial out on the line.

<u>LOCALE #</u>	<u>Country or Countries</u>
-----------------	-----------------------------

## Dialing a call

Any key panel may dial calls on the TIF 2000A.

To dial a call on the TIF 2000A;

1. Turn on the listen key for the line you wish to dial on.  
This will allow you to hear dial tone, and your DTMF dialing tones.
2. Enter **dial mode** by entering PHONE-PGM-T. PHONE is the 4 button on the keypad. PGM is the red PGM key on the keypad, and T is the talk key which is programmed to talk to the TIF 2000A you are dialing on. Leave the talk key in the latched position as you dial the number.
3. Dial the **number**. As you enter each digit, it will appear in the alpha display above the key you are dialing on. If the listen key is latched, you will hear each DTMF tone as it is generated.
4. When you have completed dialing, momentarily turn off the talk key to exit dial mode. The alpha numeric display will revert to normal, and you may use the key and keypad in the normal manner.

**Note:** The keypad is used in the usual way. Digits 0-9 generate the DTMF digits 0-9. PGM generates #, and CLR generates \* (# and \* are displayed for these keys).

It is necessary to press CLR twice if you wish to generate a \*, as a single CLR is used to trigger the speed dial and redial features.

## Hanging up

The TIF 2000A will detect that the caller at the far end has hung up under most circumstances. It detects the hang up by either loop interrupt, battery reversal, or the presence of dial tone or a busy signal. Some telephone systems do not provide any of the above, so it will be necessary to force a hang up. In addition, if the call was placed to an auto answer device, it will be necessary to force a hang up when the call is complete.

Enter PHONE-CLR-t, where PHONE is the 4 button on the key pad, CLR is the CLR button, and t is the talk key which is programmed to talk to the TIF 2000A which you wish to hang up. This will disconnect the line for which you struck the talk key.

**Note:** If the talk key is in the ON position, you must turn off the key, then momentarily turn it on again to indicate which line you wish to disconnect. If the line is in dialing mode, then you must first exit dialing mode by turning off the key, then use PHONE-CLR-t to hang up.

## Re-dialing the last number

The TIF 2000A remembers the last number which it has dialed.

1. Enter **dialing mode** by following the instructions for dialing a call.
2. Enter **CLR-0-0**. The TIF 2000A will automatically redial the last number it dialed.
3. Momentarily release the talk key to exit dialing mode.

**For example:** If you have a call to 818-566-6700 and you are disconnected, issuing the redial command will reestablish the call. The redial command may be issued from any keypanel in the intercom, not just the keypanel that originally dialed the call.

## Dialing a speed dial number

The TIF 2000A has 24 internal memories for storing frequently used phone numbers. To dial one of these numbers:

1. Enter **dial mode**.
2. Enter **CLR-nn** where CLR is the clear button on the keypad, and nn is two digits, which are the speed dial code.
3. Momentarily release the talk key to exit dialing mode.

## Storing a speed dial number

1. After dialing the number the usual way, but before exiting dial mode, enter the **CLR-PGM-nn** before you release the talk key to exit dialing mode.
2. Momentarily release the talk key to exit dialing mode.

**Note:** To generate a pause during auto dial, enter **\*99**. This is used for example if you need to enter a digit to get an outside line, and your phone system requires a pause before continuing to dial.

Each number may contain up to 25 digits.

A TIF 2000A can have different numbers stored in it. Unlike the TIF 951, the TIF 2000A stores the numbers in nonvolatile memory and therefore does not require a UPS to maintain stored speed dial numbers.

## Answering a call

1. When a line is ringing, the alpha numeric display or LED above the talk key which is programmed for that line will flash rapidly.
2. To answer the call, first turn on the **listen key**, then press the **talk key** and speak into the microphone or headset.

3. If you have been programmed as a default station, your panel will “ring” whenever one of the lines rings. If you do not have a key already programmed, the ringing line will appear on your incoming call key (the key farthest to the right on the main panel also known as the Call Waiting Window or CWW). To answer, press the incoming call key and answer. You should copy the key to a main key position, either just before or just after you answer, so you can turn on the listen key to hear the caller audio.

### **TIF 2000A System Setup to Receive Calls**

To the intercom system, the TIF 2000A is very much like a keypanel. If the phone lines are to be used for outgoing calls only, then no programming in AZedit is necessary. If users are going to phone into the intercom from the outside, then the TIF 2000A needs to be configured to allow them to use the phone line in much the same way a local user uses his key panel.

Programming information for the phone line is entered into the AZedit software just as if the TIF 2000A were an ordinary keypanel, by selecting “Keys” from the main menu, then selecting the TIF 2000A from the pick list of key panels. The TIF 2000A operates much the same way as a key panel, except that the “keys” are really the DTMF buttons on the users telephone.

#### **Auto Answer Mode**

To use the TIF 2000 in auto answer mode, you must first enable auto answer mode on the rear panel DIP switch bank, switch 1. You may also wish to enable Password Required, switch 3. In addition, you may select the number of rings before the unit answers (internal DIP switch bank #2), and the actual password (internal DIP switch bank #3).

When the caller dials into the TIF 2000A, they will hear the line ring, then the unit will answer, and beep to request the password (if password required is enabled). The user then must enter the password. The unit will beep once to confirm a proper password. If the password is not correct, the unit will beep twice to allow another try.

Once the password has been entered, the TIF 2000A will establish communications on key #1 automatically. From AZedit, this will be talk and listen keys #1. If for example the user were a camera operator, it might be desirable to program the camera PL as talk and listen on talk and listen keys #1. If the caller were a reporter, you might program an IFB on listen key #1, but no talk on talk key #1.

Keys 2 to 7 may also be programmed. To use the other keys from the phone, just press the DTMF button for the key you wish to use. For example, if key #1 was the camera PL, and you have finished with the shot, you may press #1, which will toggle off key 1. If master control were programmed on

key #2, you may then press 2 and call master control. Likewise, you might have an IFB programmed on listen 3, with no talk. If you press 3, you will hear the IFB. #4 could have an IFB talk on it, to allow a caller to speak on an IFB circuit.

Each DTMF button acts as if it were a push on/push off switch. When programming in AZedit, just program the same key number as the number the user is going to press on the telephone to speak.

Talk keys 8 to 15 have a special purpose. If you are not using auto answer mode, but have set up the TIF 2000A to be manually answered, talk keys 8 to 15 will be programmed for the keypanels which are to receive the ring signal. They may also be toggled on and off from the phone by DTMF 8, so they may be used in auto answer mode as well. You may program only key 8, in which case it will behave the same as keys 1-7. You may also program additional keypanels, PLs, IFBs, etc on keys 9-15, and they will be activated simultaneously by the 8 button on the phone.

#### **Manual Answer Mode**

In manual answer mode, the line will ring until it is answered from a keypanel. In general, you must designate panels which are to receive the ring, so they can answer the line. When a line is manually answered, the caller does not have to enter a password, even if the password required switch is turned on. You may mix modes by enabling auto answer, but setting the ring count for 8 rings. If no user has answered the call by 8 rings, the TIF 2000A will then automatically answer the call, and if password required is also enabled, the call will be screened by requiring a password.

To use manual answer mode, you may choose to program keys 1 to 7 as above if you wish. When the phone is manually answered, key one will not be automatically activated, but the caller may activate any of the keys if he wishes.

You must also designate the panels which are going to ring when the line rings. Program these panels on keys 8 to 15, using both L1 and L2 if you have more than 8. It is generally not necessary to program the listen keys on these positions. When the line rings, the TIF 2000A will “call” these panels when the line is ringing. When the line rings, the TIF 2000A generates a ringer noise which is then transmitted to these panels. The panels will display the TIF 2000A’s alpha numeric in the incoming call window (CWW), and if a talk key has already been programmed on the panel, its alpha numeric will flash rapidly.

#### **Using The TIF 2000A From The Telephone**

The TIF 2000A will behave differently depending on how it is programmed. It is up to the operator who programs the

TIF 2000A to convey to the user what to expect. If the user is not familiar with the operation of the TIF 2000A, it is best keep the operation as simple as possible, until they are familiar with its operation. For this reason, it is suggested that you not use password required unless you have had problems with nuisance calls in the past. If the TIF 2000A field user only requires one service, it is best to program that service on key 1, enable auto answer, and disable password required. The telephone user will then only have to dial the proper phone number to use the interface. As they become more familiar with its operation, you can then begin to offer more options to the users, or begin to require a password.

In general, it is very easy to use if the user has knows what to expect. When calling in, if the unit is in auto answer mode, it will answer the call after the number of rings which have been selected. If password required is not enabled, the unit will indicate it is ready with a single beep. If password required is enabled, the TIF 2000A will prompt for a password with 2 beeps. The user will enter the password, and the unit will either beep once if the password was correct, or twice if it was wrong. The user is allowed 3 attempts to enter the password, after which the TIF 2000A will disconnect. In the event a user calls the TIF 2000A when the intercom system is either turned off or absent, the TIF 2000A will answer and prompt with 3 beeps.

Once the password is entered, the TIF 2000A will enable talk and listen on key 1. This should be programmed ahead of time to whatever communications the caller generally needs first. If it is not desirable for the caller to be able to talk at this point, then only the listen key for key 1 should be programmed.

The caller may then either continue to use key 1, or they may select other keys with their DTMF pad. They may turn off key 1 by pressing DTMF 1, or may continue to just add other keys. At any time, the caller may turn off all keys without hanging up by pressing 0. When the call is complete, the caller should enter \*#, which will cause the TIF 2000A to disconnect. This is more reliable than waiting for the phone system to pass the disconnect information to the TIF 2000A.

### DTMF Codes

Once programmed, the TIF 2000A may be operated via the DTMF keypad on the telephone. The DTMF keys have the following functions:

#### Normal Mode:

1 thru 7 Toggle ON and OFF talk and listen #1 to #7.

**Note:** Initially, #1 will be enabled if the unit auto answered the line.

8 Toggle ON and OFF talk and listen to the panels which ring when the line is ringing. This allows the caller to "recall" the panels without having to hang up and redial. Toggling this on will allow the callers voice to be heard from all the panels which normally ring.

9 Enters programming mode, to reassign keys.

0 Turn off all talk and listen keys. Since 1-8 are toggles, it is possible to forget which keys are ON and which are OFF. In this case, just press 0 to turn then all off, and start over.

\*1 thru \*7 Toggle on and off listen 1-7. By pressing \* before the key, you only change the listen. This allows you to listen to a circuit without talking to it, or to talk to a circuit without listening to it.

**Note:** You will automatically listen and talk to #1 if the TIF 2000A auto answered the line.

\*8 Toggle ON and OFF listen for 8-15.

\*# Disconnect. This will cause the TIF 2000A to hang up. It is a good idea to do this before you hang up, as many phone systems take a long time to signal that the far end has hung up.

#### Programming Mode:

You may reprogram the talk and listen assignments on 1-7, just as you can on a keypanel (if they are not restricted via AZedit). Note that the sequences are the same as the sequence you would use from a keypanel, except that you must first enter programming mode by pressing 9.

**Note:** The use of programming mode is discouraged due to a lack of feedback to the user to verify a programming sequence has worked as intended.

1 nnn # K Program a talk key to a point to point.

2 nn # K Program a talk key to a PL.

01 nn # K Program a talk key to a special list.

02 nn # K Program a talk key to an IFB.

03 nn # K Program a talk ISO

04 nn # K Program a talk key relay.

3 5 # K Program a talk key to all call (turn on the lower numbered talk keys)

1 nnn # \*K Program a listen key to a point to point.

2 nn # *K	Program a listen key to a PL.
3 2 # *K	Program a listen key to auto follow.
3 3 # *K	Program a listen key to auto Mute
01 nn # *K	Program a listen key to a special list.
02 nn # *K	Program a listen key to an IFB.
03 nn # *K	Program a listen ISO
04 nn # *K	Program a listen key to a relay.
*9	Exit programming mode.
*0	Exit programming mode and turn off all talk & listen.
* #	Disconnect

#### Notes:

1. 0-9 are the number keys, \* and # are the star and pound keys.
2. nnn is three digit for the panel number
3. nn is two digit for an IFB, PL, Relay, Special list, or ISO
4. K is a key which you are programming , just press the digit (1-7)
5. \*K is the key followed by a digit (1-7). This is used to represent the listen key.

## SPECIFICATIONS

#### Matrix Input/Output:

0 dBu to +20 dBu

#### Telephone Input/Output:

-30 dBu to +6 dBu

#### Noise (200 Hz to 3.8 kHz):

-40 dBu or less

#### Harmonic Distortion (300 Hz to 3.8 kHz):

Intercom Side: -30 dBu or less

Telephone Side: -25 dBu or less

#### Frequency Response:

300 Hz to 3.8 kHz +0 dB, -6 dB

#### Matrix Connectors:

DE-9S Female

RJ12 Female

#### Telephone Line Connector:

RJ11 Female

#### Telephone Loop-Thru Connector:

RJ11 Female

#### Power Requirements:

100-240VAC, 50/60Hz, 1A

#### Environmental:

Operating Temperature:

0°C to 50°C

Storage Temperature:

-20°C to 75°C

Humidity (Operating & Storage):

0 to 95%, non-condensing

#### Dimensions:

1.72" (44mm) high

8.19" (208 mm) wide

8" (203 mm) deep

#### Weight:

4.4 lbs. (2.0 kg)

#### Finish:

Thermoplastic front panel, aluminum case and rear panel, light gray finish

#### Approvals:

CE, UL, FCC

**SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE**

## TELEPHONE INTERFACE REQUIREMENTS FORM

### October 2004

The Telex TIF 2000A Digital Hybrid Telephone Line Interface has been designed to respond to ringing for auto-answer and to respond to a number of conditions to detect hang-up. These conditions are (in the standard product) based upon the telephone systems of the US and other select countries. PBX (private branch exchange) systems in the US and other countries may have ringing and hang-up characteristics which differ from the design parameters used in the TIF 2000A. Public telephone systems in countries other than those currently supported by Telex may have ringing and hang-up characteristics which differ from the design parameters used in the TIF 2000A. Additionally, some countries require governmental approval for connection of the TIF 2000A to the public telephone system. Telex handles these requirements on a case by case basis and may require a one-time engineering fee to adapt the TIF 2000A for a specific telephone system or to obtain governmental approval. Additionally, Telex may require the customer to initiate the government approval process of the TIF 2000A for their particular telephone system.

Here is a form which can be used to obtain the required specific technical information.

**Termination impedance matching (off-hook):** \_\_\_\_\_

**Termination impedance matching (on-hook):** \_\_\_\_\_

**Protection devices required:** \_\_\_\_\_

**Return loss:** \_\_\_\_\_ dBm

**Maximum allowable transmit level:** \_\_\_\_\_ dBm

**Hi-pot tests: Tip to ring:** \_\_\_\_\_

**Tip to ground:** \_\_\_\_\_

**Ring to ground:** \_\_\_\_\_

**Ring Signal: frequency:** \_\_\_\_\_ Hz **cadence:** \_\_\_\_\_ sec. on \_\_\_\_\_ sec. off

**Disconnect Signal: loop drop: Y** \_\_\_\_\_ **N** \_\_\_\_\_

**loop reversal: Y** \_\_\_\_\_ **N** \_\_\_\_\_

**audio signal: Y** \_\_\_\_\_ **N** \_\_\_\_\_

**If Y, frequency of tone(s):** \_\_\_\_\_

**cadence:** \_\_\_\_\_ sec. on \_\_\_\_\_ sec. off

**DTMF dialing: frequencies:** \_\_\_\_\_

**duration:** \_\_\_\_\_ msec.

**interdigit pause:** \_\_\_\_\_ msec.

**Pulse dialing: pulse rate:** \_\_\_\_\_ Hz **break-to-make ratio** \_\_\_\_\_ :

**Hook flash break duration:** \_\_\_\_\_ msec. min. \_\_\_\_\_ msec. max.