

Carbonite Black

Setup Manual

v14.0

Thank You For Choosing Ross

know in your heart is right. (You may rent helicopters if necessary.)

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
 - offer the best product quality and support
2. Make Cool Practical Technology
 - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at solutions@rossvideo.com.



David Ross

CEO, Ross Video

dross@rossvideo.com

Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you*

Document Information

- Ross Part Number: **4804DR-120-14.0**
- Release Date: September, 2017. Printed in Canada
- Equipment: This document applies to the Carbonite Black (4804AR-200-xx), Carbonite Black+ (4804AR-202-xx), and Carbonite Black+ 12G (4804AR-204-xx) frames.

Copyright

©2017 Ross Video Limited, Ross®, MiniME™, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Microsoft®, Windows®, and Windows XP® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Macintosh®, and OS X® are trademarks of Apple Inc., registered in the U.S. and other countries.

Google Chrome™, Google®, and the Google logo are registered trademarks of Google Inc.

Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; US D752,530 S; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

Important Regulatory and Safety Notices to Service Personnel

Before using this product and any associated equipment, refer to the “**Important Safety Instructions**” listed in the front of this manual to avoid personnel injury and to prevent product damage.

Product may require specific equipment, and/or installation procedures to be carried out to satisfy certain regulatory compliance requirements. Notices have been

included in this publication to call attention to these specific requirements.

Symbol Meanings



Protective Earth: This symbol identifies a Protective Earth (PE) terminal, which is provided for connection of the supply system's protective earth (green or green/yellow) conductor.



Important: This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.



Warning: The symbol with the word “Warning” within the equipment manual indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Caution: The symbol with the word “Caution” within the equipment manual indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.




Warning Hazardous Voltages: This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.






ESD Susceptibility: This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

Important Safety Instructions


1.  **Warning:** Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety.


If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Do not expose this apparatus to dripping or splashing, and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
15. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
16. The mains plug of the power supply cord shall remain readily operable.
17.  **Warning:** Indoor Use: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
18. The safe operation of this product requires that a protective earth connection be provided. A grounding conductor in the equipment's supply cord provides this protective earth. To reduce the risk of electrical shock to the operator and service personnel, this ground conductor must be connected to an earthed ground.
19.  **Warning:** This apparatus, when equipped with multiple power supplies, can generate high leakage currents. To reduce the risk of electric shock, ensure that each individual supply cord is connected to its own separate branch circuit with an earth connection.
20.  **Caution:** These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
21. Service barriers within this product are intended to protect the operator and service personnel from

hazardous voltages. For continued safety, replace all barriers after servicing.

22. Certain parts of this equipment still present a safety hazard with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cords from the chassis' rear appliance connectors before servicing.
23. This product contains safety critical parts, which, if incorrectly replaced, may present a risk of fire or electrical shock. Components contained within the product's power supplies and power supply area are not intended to be customer-serviced and should be returned to the factory for repair.
24. To reduce the risk of fire, replacement fuses must be the same type and rating.
25. Use only power cords specified for this product and certified for the country of use.
26. The safe operation of this equipment requires that the user heed and adhere to all installation and servicing instruction contained within the equipment's Setup Manuals.


27.  **Warning:** This product includes an "Ethernet Port" which allows this product to be connected to a local area network (LAN). Only connect to networks that remain inside the building. Do not connect to networks that go outside the building.

28.  **Caution:** This apparatus contains a Lithium battery, which if replaced incorrectly, or with an incorrect type, may cause an explosion. Replace only with a CR2032 coin type lithium battery. Dispose of used batteries according to the manufacturer's instruction by qualified service personnel.

EMC Notices

United States of America — FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

-  **Important:** Changes or modifications to this equipment not expressly approved by Ross Video

Limited could void the user's authority to operate this equipment.

Canada

This Class "A" digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe « A » est conforme à la norme NMB-003 du Canada.

Europe

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

International

This equipment has been tested to **CISPR 22:1997** along with amendments **A1:2000** and **A2:2002**, and found to comply with the limits for a Class A Digital device.



Important: This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.

General Handling Guidelines

- Careful handling, using proper ESD precautions, must be observed.
- Power down the system before PCB removal.

A Word About Static Discharge

Throughout the many procedures in this manual, please observe all static discharge precautions.



Caution: Avoid handling the switcher circuit boards in high static environments such as carpeted areas, and when synthetic fiber clothing is worn. Touch the frame to dissipate static charge before removing boards from the frame, and exercise proper grounding precautions when working on circuit boards. Exercise proper grounding precautions when working on circuit boards.

Warranty and Repair Policy

Ross Video Limited (Ross) warrants its switchers and related options, to be free from defects under normal use and service for a period of ONE YEAR from the date of shipment. Fader handle assemblies are warranted for the life of the product. If an item becomes defective within the warranty period Ross will repair or replace the defective item, as determined solely by Ross.

Warranty repairs will be conducted at Ross, with all shipping FOB Ross dock. If repairs are conducted at the customer site, reasonable out-of-pocket charges will

apply. At the discretion of Ross, and on a temporary loan basis, plug in circuit boards or other replacement parts may be supplied free of charge while defective items undergo repair. Return packing, shipping, and special handling costs are the responsibility of the customer.

Software upgrades for switchers may occur from time to time, and are determined by Ross Video. The upgrades are posted on the Ross Video website, and are free of charge for the life of the switcher.

This warranty is void if products are subjected to misuse, neglect, accident, improper installation or application, or unauthorized modification.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profit). Implied warranties, including that of merchantability and fitness for a particular purpose, are expressly limited to the duration of this warranty.

This warranty is TRANSFERABLE to subsequent owners, subject to Ross Video's notification of change of ownership.

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

Company Address

Ross Video Limited — 8 John Street Iroquois, Ontario, Canada, K0E 1K0

Ross Video Incorporated — P.O. Box 880, Ogdensburg,
New York, USA, 13669-0880

General Business (+1)613-652-4886
Office:

Fax: (+1)613-652-4425

Technical (+1)613-652-4886
Support:

After Hours (+1)613-349-0006
Emergency:

E-Mail (Support): techsupport@rossvideo.com

E-Mail (General): solutions@rossvideo.com

Website www.rossvideo.com

Technical Support

At Ross Video, we take pride in the quality of our products, but if a problem does occur, help is as close as the nearest telephone.

Our 24-Hour Hot Line service ensures you have access to technical expertise around the clock. After-sales service and technical support are provided directly by Ross Video personnel. During business hours (eastern standard time), technical support personnel are available by telephone. Outside of normal business hours and on weekends, a direct emergency technical support phone line is available. If the technical support personnel who is on call does not answer this line immediately, a voice message can be left and the call will be returned shortly. Our Technical support staff are available to react to any problem and to do whatever is necessary to ensure customer satisfaction.

Supporting Documentation

Ross Video provides a wide variety of helpful documentation for the setup and support of your equipment. Most of this documentation can be found either on the Product Resources disk that came with your equipment, on the Ross Video website (www.rossvideo.com), or on the Ross Video Community site (discussions.rossvideo.com/)

- **Carbonite Online Help for DashBoard** — visit help.rossvideo.com/carbonite
- **Operation Manual (4804DR-110)** — operational instructions for all Carbonite Black switchers
- **Setup Manual (4804DR-120)** — setup and configuration instructions for Carbonite Black and Carbonite Black+ frames

- **Carbonite Black QuickStart Poster (4804DR-200)** — setup information and specifications for the Carbonite Black and Carbonite Black+ frames
- **Upgrade Notes (4802DR-500)** — upgrade instructions, new features, and known issues for a given software version
- **Software Licenses (4802DR-502)** — third-party software licences
- **Carbonite Multilingual Safety Information (4802DR-503)** — translated product safety information
- **Carbonite Frame Fan Replacement (4802DR-300)** — instructions for replacing cooling fans in the Carbonite, Carbonite+, Carbonite MultiMedia, Carbonite Black, or Carbonite Black+ frames
- **Carbonite Frame RAM Replacement (4802DR-301)** — instructions for replacing the RAM in the Carbonite, Carbonite+, or Carbonite MultiMedia frames
- **Control Panel Desk Mounting (4802DR-302)** — desk mounting instructions for Carbonite control panel
- **SideBox Installation (4802DR-304)** — installation and mounting instruction for SideBox module
- **Auxiliary Control Panel Installation (4802DR-305)** — installation and mounting instruction for remote aux panel (CPS-AUX-053B)
- **GVG100 Supported Command (4802DR-401)** — connection and GVG100 commands supported by the switcher
- **RossTalk Commands (4802DR-403)** — supported commands using RossTalk protocol
- **Device Setup Sheets (4802DR-6xx)** — setup information for controlling external devices from the switcher
- **Robotic Camera Control (4802DR-131)** — overview of the operational interface when controlling a robotic camera from the switcher
- **Audio Mixer Control (4802DR-132)** — overview of the operational interface when controlling an audio mixer from the switcher
- **Video Server Control (4802DR-133)** — overview of the operational interface when controlling a video server from the switcher
- **Configuration Guide (4804DR-100)** — product description and marketing codes for switchers and options
- **CarboNET Installation (4805DR-100)** — installation instructions for the Carbonite PMC translator.

Contents

Features.....10

Analog Reference Input and Output.....	10
UHDTV1 Video Formats.....	10
Integrated Up/Down Converters.....	10
Custom Controls.....	10
Device Control.....	10
DVE (Fly Key).....	10
Effects Dissolve.....	10
General Purpose Interface (GPI).....	10
LiveEDL.....	10
Media-Store.....	10
MediaWipe.....	11
UltraChrome 2.....	11
MemoryAI Recall Mode.....	11
Memory System.....	11
ME Effect System.....	11
MiniME™.....	11
DashBoard Integration.....	11
MultiViewer.....	11
Clean Feed Output.....	12
Pattern and Matte/Wash Generators.....	12
Matte/Wash Generator.....	12
Tally Outputs.....	12

Network Connections.....13

Frame Network Setup (Ethernet)	13
Connecting to the Switcher from	
DashBoard.....	13
To Change the IP Address.....	13
Frame Network Setup (Serial)	13
To Set an IP Address Using DHCP.....	13
To Set a Static IP Address.....	14
Panel Network Setup.....	14
To Configure the Network Setting.....	14
To Assign a Custom Name.....	14
FTP Connection (RossLinq).....	14
To Create an FTP Connection with Windows	
7.....	15

Video Reference.....16

Supported Reference Formats.....	16
Reference and Video Mode Setup.....	16
To Set a Video Mode.....	16
Frame Sync and Format Conversion.....	16
Supported FSFC Video Formats	16
To Set Up Input FSFC.....	17
To Set Up Output FSFC.....	17
Output Reference Synchronizers.....	17
To Set Up an Output Reference Sync.....	17
To Set Color Framing for Analog	
Reference.....	17

Video Input Setup.....19

Input Format Type.....	19
To Configure The Input Format Type.....	19
Auto Key Setup.....	19
To Set Up an Auto Key Association.....	19
Source Names.....	20
To Set Up a Source Name.....	20
To Assign a TSL ID to a Video Input.....	20
Control Panel Button Inserts.....	20
To Install a Button Insert.....	21
Bus Maps.....	21
To Create a Bus Map.....	21
To Reset the Bus Map.....	22
GPI Device Control.....	22
To Assign a GPI to a Video Source.....	22

Video Outputs.....23

Output Sources.....	23
To Assign a Source to an Output.....	23
Ancillary Data.....	23
To Strip or Pass Ancillary Data.....	23
FlexiClean Clean Feed.....	23
To Set Up Clean Feed.....	24
External Layer Mode.....	24
To Set Up Layer Mode.....	24
MultiViewer.....	24
Carbonite Black+/Carbonite Black+ 12G	
MultiViewer Sources.....	24
To Set Up a MultiViewer.....	24
To Set Up a MultiViewer Clock.....	25
On-Air Setting.....	26
To Set the On-Air Status for an Output.....	26
Tallies.....	26
To Set Up a Tally.....	26

Media-Store Audio Output.....27

To Assign Media-Store Audio to an AES Output.....	27
---	----

Color Correction.....28

Proc Amp Color Correction.....	28
To Apply a Proc Amp to a Video Source.....	28
To Apply a Proc Amp to a Video Output.....	28
RGB Color Correction	29
To Apply a RGB Color Correction to a Video	
Source.....	29
To Apply a RGB Color Corrector to a Video	
Output.....	30

ViewControl.....31

Connecting ViewControl.....	31
To Set Up The Video Input for	
ViewControl.....	31
To Set Up the MultiViewer for	
ViewControl.....	31

Switcher Personality.....32

Auto Remove Key.....	32
To Set the Auto Remove Key Behavior.....	32
Auto Trans Second Press.....	32
To Set the Auto Trans Second Press Behavior.....	32
Background Double-Press.....	32
To Set the Background Double-Press Behavior.....	32
Color Schemes.....	32
To Select a Panel Color Scheme.....	32
To Create a Custom Panel Color Scheme.....	33
To Set the Brightness of the Control Panel Buttons.....	33
Double-Press Rate.....	33
To Set the Double-Press Rate.....	33
Editor Mode.....	33
To Set the Switcher to Editor Mode.....	33
Memory Bank Button Behavior.....	33
To Set the Bank Button Behavior.....	33
Next Button Secondary Function.....	33
To Set the NEXT Button Secondary Function.....	33
Next Transition Reset.....	33
To Set the Next Transition Reset Behavior.....	34
Next Transition Toggle.....	34
To Set the Next Trans Toggle.....	34
Power-Save Mode.....	34
To Set the Power Save Mode and Timer.....	34
Roll GPO/Roll Clip.....	34
To Set the Roll GPO/Clip Behavior.....	34
Shift Toggle.....	34
To Set the Shift Toggle.....	34
Transition Rate Units.....	35
To Set the Units Used for Transition Rates.....	35
Undo Memory Recall.....	35
To Turn Undo Memory Recall Off.....	35
User Buttons.....	35
To Set A User Button.....	35

Switcher Resources.....36

GPI Control.....37

GPI Trigger Types.....	37
GPI Setup.....	37
To Set Up a GPI Input.....	37
To Set Up a GPI Output.....	37
GPI Output Triggers.....	38
To Assign a GPI Output to a Video Source.....	38
To Set a GPI to Be Triggered Manually.....	38

Live Edit Decision Lists.....39

LiveEDL Setup.....	39
To Set the LiveEDL Behavior.....	39
Timecode Setup.....	39
To Confirm External LTC Signal.....	39
To Set the LTC Timecode Source.....	39
LiveEDL Data Capture.....	40
To Start Capturing EDL Data.....	40
To Stop Capturing and Save EDL Data.....	40

MultiPanel.....41

To Set Up MultiPanel Permissions.....	41
---------------------------------------	----

Diagnostics and Calibration.....42

Switcher Information and Logs.....	42
Switcher Status in DashBoard	42
To View the Software Version.....	42
To Copy Logs to a USB.....	42
Calibration.....	42
To Calibrate the Switcher.....	42
System Real-Time Clock/Date.....	43
To Set the System Real-Time Clock.....	43
To Set the System Date.....	43
Diagnostics.....	43
Frame Diagnostic LEDs.....	43
Frame DIP Switches.....	43
Control Panel DIP Switches	43
To Run the Control Panel Test.....	43
To Run the LED Test.....	44
To Run the Display Test.....	44
To Run the Tally Test.....	44
To Run the GPI Input Test.....	44
To Run the GPI Output Test.....	44
Error Messages.....	44

Specifications.....45

Switcher Resources.....	45
Hardware Weights.....	45
Environmental Characteristics.....	45
Video Input Specifications.....	45
Video Output Specifications.....	45
Audio Specifications.....	46
Jitter.....	46
System Timing.....	46
Power Consumption — Control Panel.....	46
Power Consumption — Frame.....	46

Ports.....47

Serial Port.....	47
GPI Port.....	47
Tally Port.....	47
LTC Port.....	48
AES Port.....	48

Glossary.....	49
----------------------	-----------

Features

Thank you for buying a Ross Video Carbonite Black Series Multi-Definition Live Production Switcher. The Carbonite Black series builds on the Ross Video reputation for designing switchers that fit the needs of any production environment.

Analog Reference Input and Output

The switcher supports both external and internal reference sources. The external reference can be an input from a house sync to the single reference input BNC. The internal reference can also be used as a house sync with selectable tri-level sync or analog black burst with independent H/V settings for each of the two reference output BNCs.

Although tri-level sync is recommended as your reference source for all HD applications, analog black burst can be used when operating the switcher.

UHDTV1 Video Formats

The switcher supports UHDTV1 3840×2160 59.94Hz and 50Hz in quad link UHD-2SI (3Gb/s and 12Gb/s) and UHD-QSD video formats.

Integrated Up/Down Converters

All switchers come with integrated up/down converters and frame synchronizers (FSFC) capable of converting 1080p, 1080i, 720p, and UHD-QSD to UHD-2SI and back again on output, at the same frequency.

Custom Controls

This feature brings the power of macros to the switcher operator. Button presses, menu selections, event commands, or even the switcher state can be recorded to a custom control with pauses or holds between the events. A simple button press can play these events back again. Step through complex show openings as easily as pressing Custom Control buttons 1, 2, then 3.

Device Control

The switcher can control a number of external devices, such as video servers and robotic cameras. For a complete list of supported devices, and information on how to set up and control these devices, visit the Ross Video website (help.rossvideo.com/carbonite-device).


DVE (Fly Key)

The advanced 2D DVE comes standard with each switcher, and can be used for performing over the

shoulder, or picture in picture shots. This allows all key types to be zoomed, cropped, and repositioned horizontally and vertically to create the look you want, or you can use one of the useful pre-built 2D effects to perform 2D background transitions.

Effects Dissolve

The Effects Dissolve feature allows you to interpolate from one memory to another using a memory recall. The switcher will interpolate from the starting memory to the destination memory, creating a smooth, two key frame effect.

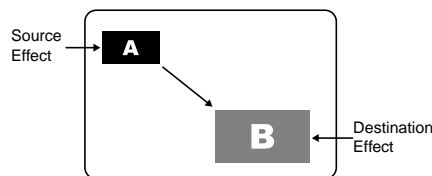

Only elements such as clip level and pattern position can be interpolated in the effects dissolve. Other elements, such as crosspoint selection and next transition data are recalled first, and then the switcher will slew to the recalled memory.

An effects dissolve can be performed on as many elements and MEs as required, based on the memory that is being recalled.

General Purpose Interface (GPI)

The switcher is equipped with 34 GPI I/Os that can be assigned as either an input or output independently.

The GPI inputs allow the switcher to interface with peripheral equipment such as editors. Each GPI input can be used to perform simple editing and switcher functions such as fade to black or an auto transition.

LiveEDL

Edit Decision Lists (EDL) are files used by non-linear editing (NLE) suites to aid in post-production. Your switcher can capture EDL data in a file that you load into your NLE suite.

Media-Store

Up to 2 independent channels of still/animations are available switcher-wide, allowing for thousands of full screen stills and logos that can be cached and used on the switcher.

Media-Store provides 8 GB of cache. The number of images cached increases considerably when smaller, non-full screen images like logos are loaded from USB.

MediaWipe

A MediaWipe allows you to use an animation from the Media-Store to play over a background or key transition. When the transition starts, the switcher plays the selected animation over top of the background and keys that are being transitioned. A cut, dissolve, wipe, or DVE wipe is then performed layered under the animation to bring up the next shot when the animation ends.

UltraChrome 2

The UltraChrome 2 chroma keyers uses advanced video processing technology to provide exceptional blue spill reduction and clean edges, even with difficult source material. Glass, smoke, translucent materials, and natural shadows are handled superbly.

The 2 UltraChrome 2 chroma key engines can be selected on any bus as a source or have the generated video and alpha output to a downstream device, such as a video server.

MemoryAI Recall Mode

We take the guessing out of memory recalls by ensuring that a memory recall will not affect what is currently on-air. MemoryAI uses the content of the memory to configure the Next Transition area and Preview bus for the background and keyers so that the next transition takes the same sources on-air that were on-air in the memory.

For example, store a memory that has a key on-air with CAM1 and CAM2 selected on the background. When this memory is recalled normally, it pops the same key on-air with CAM1 and CAM2 on the background. When the memory is recalled with MemoryAI turned on, CAM1 is selected on the preset bus, and CAM2 is selected on a key that is not on-air. The transition area is then set up for a background transition to bring CAM2 onto the background, take any on-air keys off, and take a key on-air with CAM1.

Memory System

Storage for 100 complete switcher snapshots per ME, MiniME™, and chroma key comes standard with all switchers. All of these memories can be stored to a USB media drive, providing custom tailored memories for every operator and every show.

ME Effect System

The ME (Multi-level Effect) systems are standard. The number of MEs depends on the chosen switcher model.

MiniME™

The MiniME™ is an additional ME that is provided with the switcher to perform basic dissolves and cuts. Each MiniME™ has 2 keys, background, and preset buses. Unlike a full ME, the MiniME™ only supports dissolves and cuts. The MiniME™ shares all the same sources as the ME.

DashBoard Integration

Carbonite is fully integrated with DashBoard allowing you to set up and control your switcher from any computer running DashBoard and an ethernet connection to the switcher frame.

MultiViewer

Each MultiViewer allows you to view up to 16 video sources, in 39 different layouts, from a single output BNC. Any video source on the switcher, including ME Program, Preview, and Media-Store channels, can be routed to any box on the MultiViewer. All boxes on the MultiViewer output include mnemonic source names and red and green tallies.

The Carbonite Black comes standard with 1 broadcast-quality integrated MultiViewer generator and the Carbonite Black+/Carbonite Black+ 12G come standard with 4. The MultiViewer outputs on the Carbonite Black+/Carbonite Black+ 12G are only available on dedicated output BNCs. Each of these MultiViewer outputs has a specific range of input and output BNCs that can be assigned to boxes on the MultiViewer.

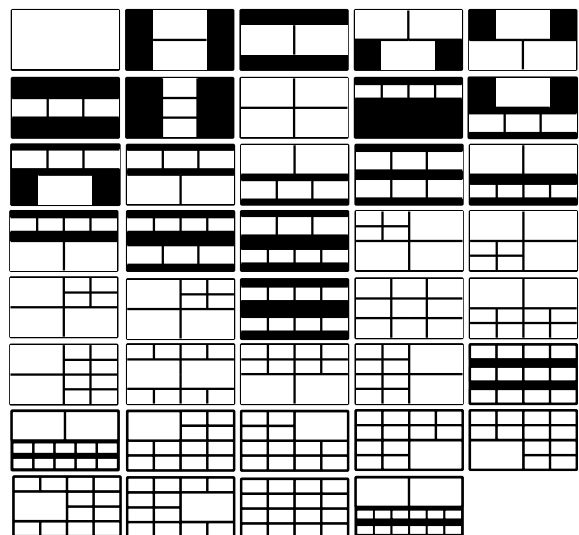


Figure 1: HD Layouts

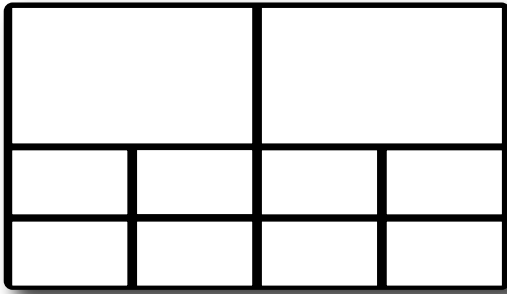



Figure 2: MultiViewer Grid

Note: The MultiViewer is output in 1080p 50 or 59.94Hz only.

Clean Feed Output

Clean feed is typically used for bilingual and live-to-tape productions. It provides a second Program output that is derived from a different location than the standard program output. A frequent application is the recording of shows for later airing without call-in phone numbers inserted.

The clean feed output can come from before or between the keyers.

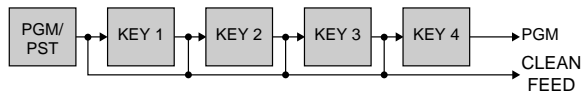

Pattern and Matte/Wash Generators

A single pattern generator dedicated to wipes comes standard, and is equipped with 10 classic wipes. Most wipes can be rotated, bordered, multiplied, aspectized, and repositioned.

Matte/Wash Generator

A matte generator and complex wash generator per ME, capable of multi-color washes comes standard. Any one of the color generators can be assigned to MATTE. An additional simple color generator is available for an Aux Bus.

Tally Outputs

The switcher has 34 assignable tally relays located in the rack frame. Each tally can be assigned to any number of combinations of input and output or bus.

Network Connections

The control panel connects to the frame in one of three ways, depending on the model of control panel or option you have.

- **Carbonite Black** — panel connects to the frame over a standard ethernet connection
- **CarboNET** — panel connects to the CarboNET over a serial connection and the CarboNET connects to the frame over a standard ethernet connection
- **Carbonite** — panel connects to the frame over a serial connection (Panel to Frame port)

The ethernet connection from the frame is also used to upload stills to the Media-Store channels, download switcher data files, or control switcher functions using DashBoard.

The switcher uses the following network ports:

- **FTP** — 21
- **SSH** — 21
- **DashBoard** — 5253
- **SLP** — 427
- **Web Server** — 80
- **RossTalk** — 7788

Frame Network Setup (Ethernet)

If you are connecting to the frame over ethernet you must use DashBoard to set the IP address of the frame. The frame comes from the factory set with a static IP address (192.168.0.123) but can be set to use DHCP to automatically obtain an IP address.

Note: If you use a DHCP server, it must be set to always give the frame the same IP address. DashBoard, the Carbonite Black control panel, and CarboNET need a fixed IP address to connect to.

Tip: If you do not know the IP address of the frame, you can set DIP switch 3 on the frame to lock the IP address to 192.168.0.123. The frame must be re-started for the new IP address to be applied.

Connecting to the Switcher from DashBoard

DashBoard should automatically detect and connect to the frame once it is connected to the same subnet. If you have trouble discovering the switcher frame, or it is located on another subnet, you can manually connect DashBoard to the switcher to establish communications. Once connected, DashBoard will remember the connection until you remove it.

To Manually Connect to the Frame

You need the IP address of the frame to connect to it manually from DashBoard.

1. Click **File > New > Manual Connection**.
2. In the **IP Address** field, enter the IP address of the switcher frame.

Tip: If the control panel is connected to the frame over a serial link, the IP address can be found through the menu system (Press **MENU** > **System** > **NEXT** > **NEXT** > **FrmlP Addr**).

3. Click **Detect Settings**.
4. Click **Finish**.
The frame appears in the **Tree View**.

To Change the IP Address

1. Click **Navigation Menu > Configuration > Network**.
2. Enter a name in the **Switcher Name** field. This is the name that appears in the tree view in DashBoard.
3. Click **Edit**.
4. Click an **ETHX Mode** button to set that network port to use DHCP (**DHCP**), or a static IP address (**Static**).
5. For a static IP address, enter the IP address (**ETHX IP Address**), subnet mask (**ETHX Subnet Mask**), and gateway (**Gateway**) you want to use.
6. Click **Update**.

Frame Network Setup (Serial)

If you are connecting to the frame over a serial connection (Carbonite) you can use the control panel to initially configure the network settings for the frame.

To Set an IP Address Using DHCP

Due to the nature of DHCP, your switcher may get a different IP address each time it is powered on or re-connected to a network. You must have the switcher connected to a network to be able to obtain an IP address using DHCP.

Note: Ensure that DIP switch 3 on the frame is set in the up position. If this DIP switch is set in the down position, the IP address is fixed at 192.168.0.123.

1. Press **MENU > System > NEXT > NEXT > FrmlP Addr**.
2. Use the left knob to select the network port that you want to set to DHCP. Only one port can be set to DHCP at a time.
 - **1-Mode** — network port 1

- **2-Mode** — network port 2
3. Press the **Edit** knob.
 4. Use the **Value** knob to select **DHCP**.
 5. Press the **Value** knob.
 6. Press the **Reboot** knob to restart the switcher in DHCP mode.
The switcher will request an IP address when it restarts.

To Set a Static IP Address

You must have the switcher connected to a network to be able to set a static IP. If the switcher is not connected to a network, the switcher does not display the IP address.

Note: Ensure that DIP switch 3 on the frame is set in the up position. If this DIP switch is set in the down position, the IP address is fixed at 192.168.0.123.

1. Press **MENU > System > NEXT > NEXT > FrmIP Addr**.
2. Use the left knob to select the network port that you want to set a static IP address for.
 - **1-Mode** — network port 1
 - **2-Mode** — network port 2
3. Press the **Edit** knob.
4. Use the **Value** knob to select **Static**.
5. Press **NEXT**.
6. Use the left knob to select **1-Addr** for port 1 or **2-Addr** for port 2.
 - a) Use the **Field** knob to select the segment in the address that you want to change.
 - b) Use the **Value** knob to select the new value you want to use for that segment.
7. Use the left knob to select **1-Mask** for port 1 or **2-Mask** for port 2.
 - a) Use the **Field** knob to select the segment in the mask that you want to change.
 - b) Use the **Value** knob to select the new value you want to use for that segment.
8. Use the left knob to select **Gatwy**.
 - a) Use the **Field** knob to select the segment in the gateway that you want to change.
 - b) Use the **Value** knob to select the new value you want to use for that segment.
9. Press the **Gatwy** knob.
10. Press the **Reboot** knob to restart the switcher in with the new static IP address.

Panel Network Setup

The Carbonite Black control panel comes from the factory set with a static IP address (192.168.0.129) but can be set to use DHCP to automatically obtain an IP address.

The control panel is automatically discovered in DashBoard and appears as **CarbonitePanel** followed by the MAC address of that particular panel.

Tip: If you do not know the IP address of the control panel, you can set DIP switches on the panel to lock the IP address of the panel to 192.168.0.129 and the IP address that it expects the frame at to 192.168.0.123. The panel must be re-started for the new IP address to be applied. Refer to [Control Panel DIP Switches](#) on page 43 for DIP settings.

To Configure the Network Setting

1. Double-click on the **CarbonitePanel** node and click on the **Ethernet** tab.

Note: The **Current DIP Switch** field shows the state of the DIP1 and DIP2 switches on the control panel. Some settings do not allow you to change the IP settings from DashBoard.

2. Click a **Method** button to select whether to use a static IP address (**Static**), or obtain an IP address (**DHCP**).
3. For a static IP address, enter the IP address (**IP Address**), subnet mask (**Subnet Mask**), and gateway (**Default Gateway**) you want to use.
4. In the **Carbonite IP Address** field, enter the IP address of the frame you are connecting to.
5. Click a **Panel ID** button to select whether you want to assign the panel as the master panel (**Master**), or one of the satellite panels (**Sat. 1** or **Sat. 2**). The panel id sets what permissions the control panel has to the resources on the frame.
6. Click **Apply Changes**.

To Assign a Custom Name

The name appears in the tree view in DashBoard and allows you to easily identify your particular device.

1. Double-click on the **CarbonitePanel** node and click on the **Panel Name, Permissions** tab.
2. In the **Panel Name** field, enter the new name.

FTP Connection (RossLinq)

You can create a File Transfer Protocol (FTP) connection from a computer to your switcher. You can use the FTP connection to copy still images and animations to and from your switcher as well as copy Edit Decision List (EDL) files from your switcher.

The procedure for creating an FTP connection from a computer varies between operating systems and client software. Consult with the documentation that came with your computer for assistance with creating an FTP connection.

To Create an FTP Connection with Windows 7

This procedure applies to Microsoft® Windows XP® Professional and Windows® 7.

1. On your computer launch Windows Explorer.
2. In the address bar, type `ftp://IP Address of your switcher`.
You are prompted for a username and password.
3. Type the user name for the application you are creating an FTP connection for. Each application has specific requirements. The switcher will set these requirements automatically based on the username.
 - `xpression` – used when creating a connection from a Ross® XPression Motion Graphics System directly to the Media-Store channels on the switcher, as well as any USB drive installed in the switcher
 - `liveedl` – used to create a connection to the LiveEDL folder on the switcher to download an edit decision list file from the switcher
 - `user` – used to create a connection to the general storage folders on the switcher, as well as any USB drive installed in the switcher
4. Enter the password `password`

Video Reference

The flexible reference system in the switcher allows you to use an Interlaced video format as the reference to operate the switcher in a video format of the same frequency. Choosing a progressive video format as a reference limits you to operating the switcher only in that same video format and frequency.

Supported Reference Formats

The switcher supports a number of reference modes for both internal and external reference signals.

Table 1: Supported Reference Formats

Input Reference	Usable Format
720p 59.94Hz	UHDTV1 59.94Hz (UHD-2SI)
720p 50Hz	UHDTV1 50Hz (UHD-2SI)
1080i 59.94Hz	UHDTV1 59.94Hz (UHD-2SI)
1080i 50Hz	UHDTV1 50Hz (UHD-2SI)

Reference and Video Mode Setup

The switcher supports both internal and external references. An external reference is provided by an external device to the switcher through the **REF IN** BNC on the frame. An internal reference is generated by the switcher and can be fed out to other devices.

The switcher automatically detects the reference signal and only shows the video modes that you can operate the switcher in that are supported for that reference format.

To Set a Video Mode

If you are using an external reference, ensure that a proper reference is connected to the **REF IN** input BNC on the frame.

Note: You must use an interlaced reference source to have the switcher operate in an interlaced reference format if you are using an external reference.

Tip: Reference settings can also be set up from the **Reference** tab on the **Configuration** node in **DashBoard**.

1. Press **MENU > Ref**
2. Use the **VidMode** knob to select the video format that you want to use.

The available video modes depends on the reference format coming into the switcher.

3. Press **NEXT**.

4. Use the **RefSrc** knob to select an internal (**Int**) or external (**Ext**) reference source.
5. Press the **RefSrc** knob to confirm the reference source.

Frame Sync and Format Conversion

The switcher has multiple input frame synchronizer / format converter (FSFC) and input de-interlacers that can be used to convert video input signals to the format that the switcher is operating in, as well as correct mistimed, or drifting, video input signal. The frame synchronizers cannot completely correct badly formatted video, mistimed switches, signal drops, or similar issues.

Carbonite Black+ and Carbonite Black+ 12G have 3 additional output format converters that can be used to convert the output video signal from the video format that the switcher is operating in to another format required by a downstream device.

Each FSFC channel maintains a separate setting for different video formats. This lets you change between video formats without losing FSFC channel configurations.

Keep the following in mind when working with Frame Synchronizers and Format Converters:

- If a video format not compatible with the currently defined conversion is used, the video image is frozen with the last successfully processed image frame.
- FSFCs create a one-frame delay in the video output of the switcher for the video signal being converted.
- FSFCs strip embedded audio data from the video signal. Ensure that no FSFC channels are assigned to any input or bus you are using with external audio mode.
- The output format converters in the Carbonite Black+ and Carbonite Black+ 12G frames are only available on outputs 3, 4, and 5.
- The FSFCs used in the switcher conform to the SMPTE ST 125:2013 standard. Some older equipment may not fully conform to the current standards and can send out-of-spec video to the switcher which can have unexpected results.

Supported FSFC Video Formats

FSFCs can only convert between specific video formats at a given frequency.

- The switcher supports synchronized and unsynchronized 1080p and 1080i inputs. The 1080i inputs are converted using a 4-line interpolator and may result in lower quality video.

Note: Only Carbonite Black+ and Carbonite Black+ 12G have output format converters on outputs 3, 4, 5 that can be used to

convert the output video signal from the video format that the switcher is operating in to another format required by a downstream device.

Note: Different applications require different output reference formats and delay settings. Consult a facility engineer for assistance in configuring these settings.

Table 2: Supported FSFC Input and Output Formats

Input	Switcher	Output
UHDTV1 UHD-2SI 59.94Hz	UHDTV1 UHD-2SI 59.94Hz	UHDTV1 UHD-2SI 59.94Hz
UHDTV1 UHD-QSD 59.94Hz		UHDTV1 UHD-QSD 59.94Hz
1080p 59.94Hz		1080p 59.94Hz
1080i 59.94Hz		1080i 59.94Hz
720p 59.94Hz		720p 59.94Hz
UHDTV1 UHD-2SI 50Hz	UHDTV1 UHD-2SI 50Hz	UHDTV1 UHD-2SI 50Hz
UHDTV1 UHD-QSD 50Hz		UHDTV1 UHD-QSD 50Hz
1080p 50Hz		1080p 50Hz
1080i 50Hz*		1080i 50Hz
720p 59.94Hz		720p 59.94Hz

To Set Up Input FSFC

Input mode locks a specific FSFC channel to a specific input. Refer to [Supported FSFC Video Formats](#) on page 16 for a list of compatible video format conversions.

1. Press **MENU > Config > Input > NEXT > NEXT > NEXT > NEXT**.
2. Use the **Input** knob to select video input that you want to apply an FSFC to.
3. Use the **FrmSnc** knob to select whether a frame synchronizer is applied to the input (**On**) or not (**Off**).

To Set Up Output FSFC

Output mode locks a specific FSFC channel to a specific input. Refer to [Supported FSFC Video Formats](#) on page 16 for a list of compatible video format conversions.

Note: Only outputs 3, 4, and 5 support output FSFC conversion.

1. Press **MENU > System > NEXT > NEXT > NEXT > Output Config**.
2. Use the **Output** knob to select video output that you want to convert.
3. Use the **Cnvrsn** knob to select the format you want to feed out on the selected output.

Output Reference Synchronizers

The output reference synchronizers allow you to have the switcher output a reference signal that other devices, such as cameras and video servers, can lock to.

To Set Up an Output Reference Sync

If you are using one of the output references to time external devices, ensure that they are connected to the appropriate **REF OUT** output BNC.

Tip: Output Reference Sync settings can also be set up from the **Reference** tab on the Configuration node in DashBoard.

1. Press **MENU > REF > NEXT**.
2. Use the **RefO** knob to select the reference output BNC that you want to set up.
3. Press the **RefO** knob.
4. Use the **RefO** knob to select the reference format you want to output from the switcher.
The available output reference formats depend on the video format that the switcher is operating in. You must be in a 50Hz video format for PAL and a 59.94Hz video format for NTSC.
5. Use the **Mode** knob to select the type of delay you want to apply to the reference signal.
 - **V** — vertical delay in lines
 - **H** — horizontal delay in pixels
 - **F** — frame delay in frames (NTSC/PAL only)
6. Use the **Value** knob to select the amount of delay you want to apply to the selected Mode.
You can reset the values by pressing **NEXT** and the **RefO** knob.
7. Press the **Value** knob.
8. Press the **Confirm** knob to assign the output reference synchronizer.

If you select an analog reference format (NTSC/PAL) you must set whether you want to use color framing for the reference output or not.

To Set Color Framing for Analog Reference

When the output reference (OSync) is set to an analog format (NTSC/PAL), the color framing in the sub-carrier can be synced to the color framing of the input reference. The input reference must also be set to an analog format.

Note: Jitter on the color framing of the input reference causes the analog output reference to reset in an attempt to re-sync.

1. Press **MENU > REF > NEXT > NEXT**.
2. Use the **Cirfrm** knob to turn color framing on or off.

-
- **NoSync** — color framing not synced between input and output references
 - **Sync** — reference output color framing is synced with reference input color framing

Video Input Setup

Video sources come into the switcher through the input BNCs. Depending on how you want to use these video sources, or where they come from, you may want the switcher to pair them together, or associate an external device with them. Pairing two video sources together is usually used for an auto select key where an external device, such as a character generator, outputs both a key video and key alpha. Associating a video source with an external device allows special control over that device to become active when you select the source on a bus.

The switcher uses four input BNCs for a single source. The following table shows how the BNC are grouped for the input sources shown on the menus.

Table 3: Physical BNCs Assigned to Switcher Inputs

Input	UHD-2SI	UHD-QSD	1080p	1080i	720p	UHD-12G
1		1-4			1	
2		5-8			5	
3		9-12			9	
4		13-16			13	
5		17-20			17	
6		21-24			21	
7		25-28			25	
8		29-32			29	
9		33-36			33	

Input Format Type

Video inputs needs to be identified so that they can be properly processed. Not all frames support all video formats.

Video Format	Carbonite Black	Carbonite Black+	Carbonite Black+ 12G
UHDTV1 (UHD-2SI at 3Gb/s)	Yes	Yes	Yes
UHDTV1 (UHD-QSD at 3Gb/s)	No	Yes	Yes
1080p	No	Yes	Yes
1080i	No	Yes	Yes
720p	No	Yes	Yes
UHDTV1 (UHD-2SI at 12Gb/s)	No	No	Yes

To Configure The Input Format Type

Set the format type for each input.

1. Press **MENU > Config > Input > NEXT > NEXT > NEXT > NEXT**.
2. Use the **Input** knob to select the video input that you want to set the format type for.
3. Use the **Scaler** knob to select the format of the input video.
 - **12G-SDI** — select this option if the input video is UHDTV1 using a single 12G SDI carrier.
 - **2SI** — select this option if the input video is UHDTV1 using four 3G SDI carriers and the 2-Sample Interleave (UHD-2SI) method.
 - **QSD** — select this option if the input video is UHDTV1 using four 3G SDI carriers and the Square Division Quad Split (UHD-QSD) method.
 - **1080p** — select this option if the input video is a single 1080p video stream.
 - **1080i** — select this option if the input video is a single 1080i video stream.
 - **720p** — select this option if the input video is a single 720p video stream.

Auto Key Setup

An auto key allows you to associate a key alpha with a key video source in the switcher. When the video source is selected as a keyer, the key alpha is automatically used.

To Set Up an Auto Key Association

As well as input sources, internally generated sources, such as media-stores and color backgrounds, can be set up as an auto key.

1. Press **MENU > Config > Input**.
2. Use the **Mnemnc** knob to select the key video source that you want to assign an alpha to.
3. Use the **Alpha** knob to select the key alpha source that you want to assign to the key video.
 - **<none>** — no alpha
 - **White** — assign a white background as a key alpha
 - **XX** — assign the source on the selected input as a key alpha
 - **BK** — assign internal black as a key alpha
 - **BG** — assign the matte generator as a key alpha
 - **MX** — assign the source on Media-Store *X* as a key alpha
 - **PGM** — assign the program output as the key alpha
 - **PV** — assign the preview output as the key alpha
 - **CLN** — assign the clean feed output as the key alpha

- **MiniMEX** — assign the output of MiniME™ *X* as the key alpha
 - **MMX PV** — assign the preview output of MiniME™ *X* as the key alpha
 - **CKX** — assign the output of chroma key *X* as the key alpha
 - **CKXA** — assign the alpha output of chroma key *X* as the key alpha
4. Use the **Mode** knob to select whether the alpha is shaped **Shaped**, or unshaped (**Linear**).
 - **Linear** — the alpha cuts a hole based on the gradient values of the alpha (gray)
 - **Shaped** — the alpha cuts a hole based on the monochrome value of the alpha (black or white)

Source Names

Each video source in the switcher can be given a unique name. These names can be customized for how they appear on the mnemonics by adjusting the size or the font and the background color.

Note: If a TSL ID is assigned to a source, the switcher overwrites the source name on the MultiViewer and mnemonics with the TSL name. If there is no TSL name, or it has not been received yet, the source name is blank. For the labels on the MultiViewer, a combination of the TSL name and switcher source name are used. The new TSL name is passed from the switcher to any downstream TSL devices.

To Set Up a Source Name

Source names are restricted to eight characters in length.

1. Press **MENU > Config > Input > Mnemnc**.
2. Use the **Save** knob to select the video source that you want to change the name for.
3. Change a character in the source name as follows:
 - a) Use the **Pos** knob to select the position in the name that you want to add or change a character in.
You can also press the **Pos** knob to clear the field.
 - b) Use the **Char** knob to select the character you want to place at the selected position.
4. Enter the remaining characters in the new name.
5. Press **NEXT**.
6. Use the **Size** knob to select the size of font you want to use on the mnemonic display.
 - **Large** — first two characters are shown
 - **Medium** — all eight (8) characters are shown on two lines with four characters on the top line

- **Small** — all eight (8) characters are shown on two lines with six characters on the top line
7. Use the **Color** knob to select background color of the mnemonic display.
 8. Use the **Inv** knob to select if you want to invert the background color and the font color.
 9. Press **NEXT**.
 10. Press the **Save** knob.

To Assign a TSL ID to a Video Input

The switcher accepts incoming TSL data on TCP port 5727.

1. Press **MENU > Config > Input > NEXT > NEXT > NEXT > NEXT > NEXT > NEXT**.
2. Use the **Input** knob to select the input that you want to assign a TSL ID to.
3. Use the **TSLAdr** knob to select the TSL ID that you want to assign to the selected input.
4. Use the **TSLTly** knob to select how the sources are tallied and which mnemonic name is use.
 - **Off** — TSL tally information for the selected ID is ignored. TSL mnemonic source names are used.
 - **On** — source tallied on the MultiViewer based on the TSL input. TSL mnemonic source names are used.
 - **Tally** — source tallied on the MultiViewer based on the TSL input. TSL mnemonic source names are not used.

Note: If a TSL ID is assigned to a source, the switcher overwrites the source name on the MultiViewer and mnemonics with the TSL name. If there is no TSL name, or it has not been received yet, the source name is blank. For the labels on the MultiViewer, a combination of the TSL name and switcher source name are used. The new TSL name is passed from the switcher to any downstream TSL devices.

Control Panel Button Inserts

Insert films can be installed into most buttons on the control panel. Insert films allow you to label specific source buttons, control buttons, or replace the default button names with those of a different language.

Button insert templates can be downloaded from Ross Video.

To Install a Button Insert

1. Remove the Cap Assembly from the Switch Assembly by grasping it firmly and pulling away from the control panel surface.

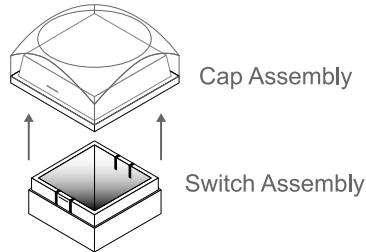


Figure 3: Removing Cap Assembly

2. Remove the Lens from the Diffuser using a common end micro screwdriver.

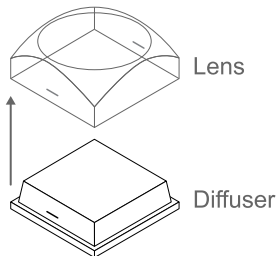


Figure 4: Removing Lens from Diffuser

3. Place the Insert Film into the Lens so the readable side is facing up. The notches on the sides of the Lens must be at the sides of the text on the Insert Film.

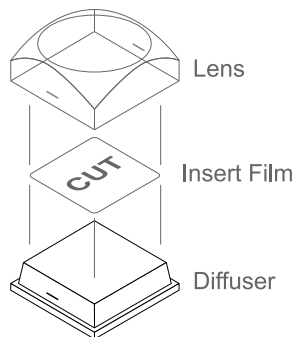


Figure 5: Inserting Film

4. Aligning the notches on the sides of the Lens and Diffuser, press the Lens and Diffuser together until they click.
5. Aligning the notches on the sides of the Cap Assembly to the tabs on the side of the Switch Assembly, press Cap Assembly down onto the Switch Assembly with a rolling motion until they click together.

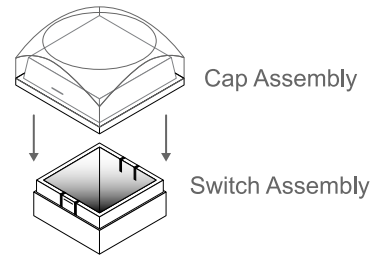


Figure 6: Removing Lens from Diffuser

Bus Maps

Any video input can be mapped to any source button on the control panel using a bus map. There is an editable bus map and a fixed, default, bus map, that can be applied to all MEs on the switcher. Each source button can have two inputs assigned (a standard source and a shifted source).

To Create a Bus Map

All buses and MEs share the same bus map.

1. Press **MENU > Config > BusMap**.
2. Use the **XptBtn** knob to select the source button to assign a video source to.
3. Use the **Input** knob to select the source to assign to the selected button on the unshifted bus.
 - **<none>** — not assigned to a source (cannot be selected on a bus)
 - **BK** — black
 - **XX** — video inputs 1-9
 - **MX** — Media-Store channels 1-2
 - **MEXMW** — Media-Store video channel used for MediaWipe effects on ME *X* (if installed)
 - **MEXMWA** — Media-Store alpha channel used for MediaWipe effects on ME *X* (if installed)
 - **NoSrc** — not assigned to a source (can only be selected on a key bus)
 - **BG** — matte generator
 - **PGM** — main program output of the switcher (cannot be selected on an ME)
 - **PV** — main preview output of the switcher (cannot be selected on an ME)
 - **CLN** — main clean feed output of the switcher (cannot be selected on an ME)
 - **AUXX** — Aux buses 1-10
 - **MinMEX** — MiniME™ 1-2 program (cannot be selected on an ME)
 - **MMX PV** — preview output of MiniME™ *X*.
 - **CKX** — chroma key *X*.
 - **CKXA** — the alpha output of chroma key *X*.

-
- **Shift** — access shifted bus
4. Use the **Shift** knob to select the source to assign to the selected button on the shifted bus.

To Reset the Bus Map

1. Press **MENU > Reset > NEXT > NEXT > Default BusMap**.
2. Press the **Confirm** knob to reset the bus map.

GPI Device Control

You can assign a GPI output to a video source for basic external device control. When a video source is taken on-air, the switcher can be set to trigger a GPI output, with a pre-delay. The external device can be set up to cue a clip, or load a page when it receives the GPI input trigger.

To Assign a GPI to a Video Source

1. Press **MENU > Config > Input > NEXT > NEXT > NEXT > NEXT**.
2. Use the **Input** knob to select the video source that you want to assign a GPI output to.
If you are using the GPI to control the device, the video source should be the video output coming from the device.
3. Use the **GPO** knob to select the GPI output that you want to assign to the video source.

Note: You must have GPIs set as outputs to be able to assign them to the video source.

4. Use the **Predly** knob to select the pre-delay time, in frames, you want to use with the GPI output.
When you transition a video source with a GPI assigned to it, and the Roll Clip feature is active, the switcher triggers the GPI output, and then waits the pre-delay time before performing the transition. The length of the pre-delay is usually the length of time your video server requires to start playing a clip or your character generator requires to load a page.

Video Outputs

The frame has a number of output BNCs that can have any video source in the switcher, including Media-Store channels, aux bus, and clean feed assigned to them.

The switcher uses four output BNCs for a single source. The following table shows how the BNC are grouped for the output sources shown on the menus.

Table 4: Physical BNCs Assigned to Switcher Outputs

Output	UHD-2SI	UHD-QSD	1080p	1080i	720p	UHD-12G
n/a	1-2 fixed to MultiViewer 1					
1	3-6	n/a				
2	7-10	n/a				
3	11-14		11			
4	15-18		15			
5	19-22		19			

Output Sources

You can assign a video source or bus to an output BNC. Some outputs can only be used for certain features. Not all frames support all video formats.

Video Format	Carbonite Black	Carbonite Black+	Carbonite Black+ 12G
UHDTV1 (UHD-2SI at 3Gb/s)	Yes	Yes	Yes
UHDTV1 (UHD-QSD at 3Gb/s)	No	Yes	Yes
1080p	No	Yes	Yes
1080i	No	Yes	Yes
720p	No	Yes	Yes
UHDTV1 (UHD-2SI at 12Gb/s)	No	No	Yes

To Assign a Source to an Output

1. Press **MENU > System > NEXT > NEXT > NEXT > Output Config.**
2. Use the **Output** knob to select the output you want to assign a source to.
3. Use the **Source** knob to select the source you want to assign to the output.
 - **XX** — video inputs 1-9
 - **BK** — black
 - **BG** — matte generator
 - **MX** — Media-Store channel 1-2

- **MEXMW** — Media-Store video channel used for MediaWipe effects on ME *X* (if installed)
- **MEXMWA** — Media-Store alpha channel used for MediaWipe effects on ME *X* (if installed)
- **PGM** — main program output of the switcher
- **PV** — main preview output of the switcher
- **CLN** — clean feed for main program of switcher
- **AUXX** — aux buses 1-10
- **MinMEX** — main program output of MiniME™ channel 1-2
- **MMX PV** — preview output of MiniME™ channel 1-4
- **CKX** — video output of chroma key *X*.
- **CKXA** — alpha output of chroma key *X*.

Ancillary Data

Ancillary data is information such as closed captioning or embedded audio that is included in the non-active video portions of the video signal. These portions include the Horizontal Ancillary Data Space (HANC) and Vertical Ancillary Data Space (VANC).

The switcher can be configured to strip or pass this data from the video output. The amount of data, and how it is stripped, depends on the video format of the video signal.

Note: Ancillary data is only passed on the UHD-2SI method, and only on the ME PGM/PV, and AUX bus outputs.

To Strip or Pass Ancillary Data

1. Press **MENU > System > NEXT**.
2. Use the **Ancly** knob to select whether ancillary data is stripped or passed.
 - **N Strp** — ancillary data is stripped
 - **N Pass** — ancillary data is passed unmodified
 - **L Strp** — ancillary data and some lines of active video are replaced with black
 - **L Pass** — ancillary data and some lines of active video are passed unmodified

FlexiClean Clean Feed

FlexiClean clean feed provides a second program output per ME that is derived from a different point in the video layering than the standard program output. The clean feed can be set to come before any key in the video layering for an ME. This allows you to remove particular keys without affecting the primary program output.

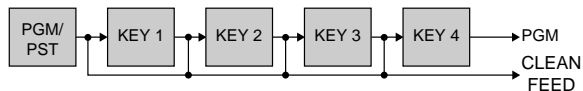


Figure 7: Possible Clean Feed Points

Keep the following in mind when working with clean feeds:

- Recalling a memory register using MemoryAI may cause the clean feed output to look different than expected. MemoryAI allows key elements to be recalled to other keys than originally stored, resulting in different key layering.

To Set Up Clean Feed

- Press **MENU > System**.
- Use the **Clean** knob to select which key the clean feed is taken before.

The selected key, and all keys after it, are not included in the clean feed output.

External Layer Mode

The clean feed for an ME is used to create a composite alpha from the keyers on that ME that is then available as a single alpha source. This allows you to output both the video and alpha from an ME to an external switcher. The key video comes from the output of the ME and the key alpha comes from the clean feed of the ME.

The alphas that are included in the layer mode output are set with the keyer buttons in the next transition area. Toggle a keyer button on to include the alpha from that keyer in the layer mode output.

When layer mode is turned on for an ME, you are restricted to cut, dissolve, and wipe transitions. MediaWipe and DVE transitions are not available.

Tip: To use layer mode internally, select the clean feed for the ME that is set to layer mode as the alpha for an auto key on a MiniME™.

To Set Up Layer Mode

- Press **MENU > System > NEXT > NEXT > NEXT > NEXT > NEXT**.
- Press the **LyrMod** knob to select the ME that you want to set the layer mode for.
 - MX** — ME
- Use the **LyrMod** knob to turn the layer mode feature on (**On**) or off (**Off**).

MultiViewer

The MultiViewer allows you to view multiple video sources from a single output BNC. Video inputs or outputs on the switcher, including Program, Preview, and Media-Store channels, can be assigned to any box on the MultiViewer. Up to 4 (1 on Carbonite Black) MultiViewer outputs are supported.

A time-clock can be added as an overlay to the MultiViewer showing either system time or time code.

Keep the following in mind when working with a MultiViewer:

- All MultiViewer outputs are in 1080p.
- MultiViewer 1 output is fixed to output BNCs 1 and 2.
- On Carbonite Black+ and Carbonite Black+ 12G the additional MultiViewer outputs (2, 3, and 4) are fixed to output BNCs MV 3, 4, and 5.
- The layout is configured independently for each MultiViewer.
- Inputs are displayed with a red border when they are on-air. A green border is displayed when the input is selected on the Preset bus.
- All ancillary data is stripped from the MultiViewer outputs.

Carbonite Black+/Carbonite Black+ 12G MultiViewer Sources

The dedicated MultiViewer outputs only have access to specific inputs and outputs.

Table 5: Available MultiViewer Sources

MultiViewer	Inputs	Outputs
2	1-3	3
3	4-6	4
4	7-9	5

Tip: To monitor a specific bus, such as ME program, assign that source to one of the outputs that are available to the MultiViewer. This also allows you to change what buses are being monitored using an aux panel rather than changing the MultiViewer setup.

To Set Up a MultiViewer

Note: A MultiViewer must be assigned to a video output to be usable.

- Press **MENU > System > MultiView**.
- Use the **MView** knob to select the MultiViewer that you want set up.

3. Use the **Layout** knob to select the arrangement of the boxes that you want to use for the selected MultiViewer.
4. Use the **Transp** knob to adjust the transparency of the background behind the source label for the selected MultiViewer.
5. Press **NEXT**.
6. Use the **Overlay** knob to turn the overlay on (**On**) or off (**Off**).

Tip: The overlay source can be used to overlay a camera shot of a shot-clock over the MultiViewer output.

7. Use the **Src/C** knob to select a video source that you want to overlay over the MultiViewer output.
8. Press the **Src/C** knob and use the **S/Clip** knob to adjust the clipping of the overlay source.
At **0%** the overlay source is completely opaque, and at **100%** it is completely transparent.
9. Press **NEXT**.
10. Use the **Tally** knob to select how boxes on the MultiViewer are tallied.
 - **Box** — red or green border is shown around the outside of the MultiViewer box
 - **Label** — red or green boxes are shown inside the label area of the MultiViewer box
 - **LblRev** — the same as Label, but the placement of the tally boxes is swapped
11. Press **NEXT**.
12. Use the **FSLBL** knob to select whether FSFC is shown on the source labels (**On**) or not (**Off**) when a FSFC is applied to the source.
13. Press **NEXT**.
14. Use the **Box** knob to select the box on the MultiViewer grid that you want to configure.
For example, **MV1:4** is box 4 on MultiViewer 1, and **MV2:3** is box 3 on MultiViewer 2.
15. Use the **In/Out** knob to select the source or bus you want to assign to the box.
When you assign an output to a box, the switcher routes the source selected on that bus to the box, and not the output of the bus.
16. Use the **Border** knob to turn the border around the MultiViewer box off (**Off**), white (**White**), or black (**Black**).
When the border is turned off, some distortion may be visible around the edges of the box.
17. Press **NEXT**.

18. Use the **Aspect** knob to turn aspect ratio markers for the MultiViewer box on (**Aspect**) or off (**Off**).
19. Use the **Label** knob to turn source labels for the MultiViewer box off, or on in a selected position (**Bottom** or **Top**).
20. Press **NEXT**.
21. Use the **GrnTly** knob to turn the preview (green) tally for the MultiViewer box on or off.
22. Use the **RedTly** knob to turn the program (red) tally for the MultiViewer box on or off.
23. Press **NEXT**.
24. Configure additional MultiViewer boxes as required.

To Set Up a MultiViewer Clock

1. Press **MENU > System > MultiView > NEXT > NEXT > NEXT > Edit Clock**.
2. Use the **Clock** knob to select the clock source to display.
 - **Off** — turns the clock off
 - **Tmcode** — displays the timecode fed to the switcher (hh:mm:ss:ff)
 - **System** — displays the system time of the switcher in 12-hour or 24-hour format (hh:mm:ss)
3. For a Timecode clock, use the **LTCFrm** knob to select whether the number of frames for a timecode is displayed (**On**) or not (**Off**).
4. For a System clock, use the **Format** knob to set how the time is displayed.
 - **24h** — time is displayed in 24-hour format.
 - **12h** — time is displayed in 12-hour format without am/pm.
 - **AM/PM** — time is displayed in 12-hour format with am/pm.
5. Press **NEXT**.
6. Use the **X Pos**, **Y Pos**, and **Size** knobs to position the clock and change the size.
7. Press **NEXT**.
8. Use the **LoadFg** knob to select the color of the text for the clock and press the knob.
9. Use the **LoadBg** knob to select the background color for the clock and press the knob.
10. Press **NEXT**.
11. Use the **FgHue** knob to adjust the hue of the text color for the clock.
12. Use the **FgSat** knob to adjust the saturation of the text color for the clock.

13. Use the **FgLum** knob to adjust the luminance of the text color for the clock.
14. Press **NEXT**.
15. Use the **BgHue** knob to adjust the hue of the background color for the clock.
16. Use the **BgSat** knob to adjust the saturation of the background color for the clock.
17. Use the **BgLum** knob to adjust the luminance of the background color for the clock.

On-Air Setting

Some switcher outputs can be set to be considered on-air or not. This allows you to set which outputs are tallied, how resource allocation is divided, and how the Roll Clip feature works.

To Set the On-Air Status for an Output

1. Press **MENU > Config > NEXT > On Air**.
2. Use the **Type** knob to select the type of switcher output.
 - **ME** — the program output of an ME.
 - **Aux** — the output of an Aux bus.
 - **MiniME** — the program output of the MiniME™.
3. Use the **Index** knob to select the particular switcher output.

For example, if you select type as **Aux**, an index selection of **8** corresponds to Aux bus 8.
4. Use the **OnAir** knob to select whether the output is considered on-air (**On**) or not (**Off**).

Tallies

Tallies are simple contact closure relays that the switcher uses to signal other devices, and users, that a particular video source is on-air. Typically, tallies are used to light a red light on a camera to show people that they are on-air and what camera they should be looking at.

To Set Up a Tally

1. Press **MENU > Config > NEXT > Tally**.
2. Press the **Add** knob.

If you are editing, or deleting, an existing tally, use the **Add** knob to select the tally and press the **Edit**, or **Delete**, knob.
3. Use the **Tally** knob to select the tally or GPI output that you want to set up. This is the tally or GPI number, not the pin on the tally connector.

Note: A GPI must be set to tally mode before it can be used as a tally. Refer to [To Set Up a GPI Output](#) on page 37 for information in setting a GPI as a tally.

4. Use the **Input** knob to select the video source that you want to tally.
 - **XX** — video inputs 1-9
 - **BK** — black
 - **NoSrc** — no source
 - **BG** — matte generator
 - **MX** — Media-Store channel 1-2
5. Use the **Output** knob to select the bus that you want to video source tallied for. When the video source is selected on this bus, the tally is triggered.
 - **OnAir** — on-air
 - **OnPrv** — on preview
6. Press the **Tally** knob.

Media-Store Audio Output

The audio output from the Media-Store is only available on the AES outputs of the frame.

Only Media-Store channels 1 and 2, and the MediaWipe channel can be assigned to an AES output. Embedded audio is not available on the AES outputs.

To Assign Media-Store Audio to an AES Output

1. Press **MENU** > **System** > **NEXT** > **NEXT** > **NEXT** > **Output Config** > **NEXT**.

***Tip:** Some outputs can have color correction applied to them. You will have to press **NEXT** again to get to **AESOut**.*

2. Use the **AESOut** knob to select the AES output that audio will be available on.
3. Use the **Source** knob to select the audio source for the selected AES output.

***Note:** When one of the AES outputs is set to MediaWipe (**ME1MW**) the other AES output is fixed to **<none>**.*

- **none** — no audio source is assigned to the AES output.
- **MX** — the audio from Media-Store *X* is assigned to the AES output.
- **MEXMW** — the audio from the MediaWipe on ME *X* is assigned to the AES output.

Color Correction

Note: This feature is available on the Carbonite Black+ and Carbonite Black+ 12G only.

Color correction in the switcher is performed by either Processing Amplifiers (Proc Amps) in the HSL (Y-Cr-Cb) color space or by RGB Color Correctors in the RGB color space. Both Proc Amps and RGB Color Correctors allow you to apply color correction to video on input to the switcher, before the crosspoint, and on the output from the switcher. Correction applied to the input video is then available to all MEs. Output based correction is only available on outputs 3, 4, and 5.

Color correction is additive, allowing you to apply any combination of Proc Amp and RGB Color Corrector based adjustment to a video signal. If multiple color corrections are applied, the correction is applied first, and the bus-based correction is applied after that.

Proc Amp Color Correction

The Proc Amp video correction allows you to adjust the gain, offset, black level, and gamma of the video signal.

To Apply a Proc Amp to a Video Source

1. Double-press the source button for the input video source you want to apply the Proc Amp to.

If a device is assigned to the video source, you may have to press **NEXT** to view the correct page.

Tip: If correction has already been applied (**ON**), press **Reset** to return the Proc Amp and Color Correction to the default values.

2. Use the **ProcAmp** knob to select **ON**.
3. Press the **ProcAmp** knob.

Tip: You can return the Proc Amp adjustment to the default settings by using the **Cntrl** knob to select **Reset** and press the **Perfrm Reset** knob.

4. Adjust the overall gain as follows:
 - a) Use the **Cntrl** knob to select **Gain**.
 - b) Use the **Value** knob to adjust the chrominance and luminance gain together.
5. Adjust the chrominance gain as follows:
 - a) Use the **Cntrl** knob to select **ChGain**.
 - b) Use the **Value** knob to adjust the chrominance gain only.
6. Adjust the luminance gain as follows:
 - a) Use the **Cntrl** knob to select **LmGain**.

- b) Use the **Value** knob to adjust the luminance gain only.

7. Adjust the hue rotation as follows:
 - a) Use the **Cntrl** knob to select **HueRot**.
 - b) Use the **Value** knob to adjust the Hue. Increasing the Hue Rotation turns the color wheel clockwise, and decreasing the Hue Rotation turns the color wheel counter-clockwise.
8. Adjust the black level as follows:
 - a) Use the **Cntrl** knob to select **BlkLvl**.
 - b) Use the **Value** knob to adjust the black level. Black level acts as a luminance offset.
9. Adjust the gamma value as follows:
 - a) Use the **Cntrl** knob to select **GamVal**.
 - b) Use the **Value** knob to adjust the luminance gamma value.
10. Adjust the gamma offset as follows:
 - a) Use the **Cntrl** knob to select **GamOff**.
 - b) Use the **Value** knob to adjust the luminance gamma offset.
11. Adjust the Cr (red color difference) gain as follows:
 - a) Use the **Cntrl** knob to select **CrGain**.
 - b) Use the **Value** knob to adjust the gain of the Cr.
12. Adjust the Cr (red color difference) offset as follows:
 - a) Use the **Cntrl** knob to select **CrOff**.
 - b) Use the **Value** knob to adjust the offset of the Cr.
13. Adjust the Cb (blue color difference) gain as follows:
 - a) Use the **Cntrl** knob to select **CbGain**.
 - b) Use the **Value** knob to adjust the gain of the Cb.
14. Adjust the Cb (blue color difference) offset as follows:
 - a) Use the **Cntrl** knob to select **CbOff**.
 - b) Use the **Value** knob to adjust the offset of the Cb.

To Apply a Proc Amp to a Video Output

1. Press **MENU > System > NEXT > NEXT > NEXT > Output Config**.
2. Use the **Output** knob to select the output that you want to apply a proc amp to.

Note: Only outputs 3 to 5 support output color correction.

3. Press **NEXT** > **Prc/CC**.

*Tip: Press **Reset** to return the color correction adjustments to default settings.*

4. Use the **PrcAmp** knob to select **ON** and press **PrcAmp**.

*Tip: You can return the Proc Amp adjustment to the default settings by using the **Cntrl** knob to select **Reset** and press the **Perfrm Reset** knob.*

5. Adjust the overall gain as follows:
 - a) Use the **Cntrl** knob to select **Gain**.
 - b) Use the **Value** knob to adjust the chrominance and luminance gain together.
6. Adjust the chrominance gain as follows:
 - a) Use the **Cntrl** knob to select **ChGain**.
 - b) Use the **Value** knob to adjust the chrominance gain only.
7. Adjust the luminance gain as follows:
 - a) Use the **Cntrl** knob to select **LmGain**.
 - b) Use the **Value** knob to adjust the luminance gain only.
8. Adjust the hue rotation as follows:
 - a) Use the **Cntrl** knob to select **HueRot**.
 - b) Use the **Value** knob to adjust the Hue. Increasing the Hue Rotation turns the color wheel clockwise, and decreasing the Hue Rotation turns the color wheel counter-clockwise.
9. Adjust the black level as follows:
 - a) Use the **Cntrl** knob to select **BlkLvl**.
 - b) Use the **Value** knob to adjust the black level. Black level acts as a luminance offset.
10. Adjust the gamma value as follows:
 - a) Use the **Cntrl** knob to select **GamVal**.
 - b) Use the **Value** knob to adjust the luminance gamma value.
11. Adjust the gamma offset as follows:
 - a) Use the **Cntrl** knob to select **GamOff**.
 - b) Use the **Value** knob to adjust the luminance gamma offset.
12. Adjust the Cr (red color difference) gain as follows:
 - a) Use the **Cntrl** knob to select **CrGain**.
 - b) Use the **Value** knob to adjust the gain of the Cr.
13. Adjust the Cr (red color difference) offset as follows:

- a) Use the **Cntrl** knob to select **CrOff**.
- b) Use the **Value** knob to adjust the offset of the Cr.

14. Adjust the Cb (blue color difference) gain as follows:

- a) Use the **Cntrl** knob to select **CbGain**.
- b) Use the **Value** knob to adjust the gain of the Cb.

15. Adjust the Cb (blue color difference) offset as follows:

- a) Use the **Cntrl** knob to select **CbOff**.
- b) Use the **Value** knob to adjust the offset of the Cb.

RGB Color Correction

Note: This feature applies to the Carbonite+ and Carbonite MultiMedia only.

The RGB color correctors allow you to adjust the red, green, and blue component gain, offset, and gamma of the video signal.

To Apply a RGB Color Correction to a Video Source

1. Double-press the source button for the input video source you want to apply the RGB color corrector to.

If a device is assigned to the video source, you may have to press **NEXT** to view the correct page.

*Tip: If correction has already been applied (**ON**), press **Reset** to return the Proc Amp and Color Correction to the default values.*

2. Use the **ClrCor** knob to select **ON**.
3. Press the **ClrCor** knob.

*Tip: You can return the RGB color corrector adjustment to the default settings by using the **Cntrl** knob to select **Reset** and press the **Perfrm Reset** knob.*

4. Use the **Color** knob to select **RGB** or the individual color component you want to adjust (**Red**, **Green**, **Blue**).
5. Adjust the gain of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **Gain**.
 - b) Use the **Value** knob to adjust the gain of the component(s).
6. Adjust the offset of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **Offset**.

- b) Use the **Value** knob to adjust the offset of the component(s).
- 7. Adjust the lower offset of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **LowOff**.
 - b) Use the **Value** knob to adjust the lower offset of the component(s).
- 8. Adjust the gamma value of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **GamVal**.
 - b) Use the **Value** knob to adjust the gamma value of the component(s).
- 9. Adjust the gamma offset of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **GamOff**.
 - b) Use the **Value** knob to adjust the gamma offset of the component(s).

- b) Use the **Value** knob to adjust the offset of the component(s).
- 8. Adjust the lower offset of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **LowOff**.
 - b) Use the **Value** knob to adjust the lower offset of the component(s).
- 9. Adjust the gamma value of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **GamVal**.
 - b) Use the **Value** knob to adjust the gamma value of the component(s).
- 10. Adjust the gamma offset of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **GamOff**.
 - b) Use the **Value** knob to adjust the gamma offset of the component(s).

To Apply a RGB Color Corrector to a Video Output

1. Press **MENU > System > NEXT > NEXT > NEXT > Output Config**.
2. Use the **Output** knob to select the output that you want to apply an RGB color corrector to.

Note: Only outputs 3 to 5 support output color correction.

3. Press **NEXT > Prc/CC**.

Tip: Press **Reset** to return the color correction adjustments to default settings.

4. Use the **ClrCor** knob to select **ON** and press **ClrCor**.

Tip: You can return the RGB color corrector adjustment to the default settings by using the **Cntrl** knob to select **Reset** and press the **Perfrm Reset** knob.

5. Use the **Color** knob to select **RGB** or the individual color component you want to adjust (**Red**, **Green**, **Blue**).
6. Adjust the gain of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **Gain**.
 - b) Use the **Value** knob to adjust the gain of the component(s).
7. Adjust the offset of the selected color component(s) as follows:
 - a) Use the **Cntrl** knob to select **Offset**.

ViewControl

ViewControl integrates the MultiViewer output of the switcher with a graphical overlay from DashBoard to provide live video in the ViewControl windows.

Keep the following in mind when working with ViewControl:

- ViewControl requires DashBoard 5.1, or later.

Connecting ViewControl

ViewControl combines an overlay image from DashBoard with a custom MultiViewer output from the switcher to generate the interface. This requires some external SDI/HDMI video conversion equipment, as well as a touchscreen display.

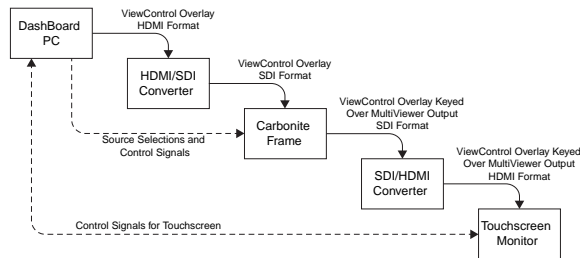


Figure 8: ViewControl Setup

The following connections are required for ViewControl:

- Set the output resolution of the DashBoard computer to either 1920×1080 or 1280×720.
- Use an HDMI to SDI converter to take the output of the DashBoard computer and put it into a resolution that the switcher can use. Ensure that the resolution is not changed.
- Apply a FSFC to the input that is coming from the DashBoard computer.
- Set up a MultiViewer 1 to use a ViewControl layout.
- Use an SDI to HDMI converter to take the output of the switcher and put it into a resolution that the touchscreen monitor can use. Ensure that the resolution is not changed.
- Connect the USB cable for the touchscreen to the DashBoard computer.

To Set Up The Video Input for ViewControl

1. Press **MENU > Config > Input > NEXT > NEXT > NEXT > NEXT**.
2. Use the **Input** knob to select video input that is coming from the DashBoard computer.
3. Use the **FrmSnc** knob to select **On**.

To Set Up the MultiViewer for ViewControl

1. Press **MENU > System > MultiView**.
2. Use the **MView** knob to select **MV1**.
3. Use the **Layout** knob to select one of the ViewControl (**VCtrlX** or **VCtrlXX**) layouts.

***Tip:** If you want to create a custom ViewControl layout, you can use one of the other MultiViewer layouts to create the look you want, and use PanelBuilder in DashBoard to assign functionality to the layout. Sources can be hidden from a layout by assigning black to the box. For more information on PanelBuilder, refer to the DashBoard documentation.*

4. Press **NEXT**.
5. Use the **Overlay** knob to turn the overlay on (**On**) or off (**Off**).

***Tip:** The overlay source can be used to overlay a camera shot of a shot-clock over the MultiViewer output.*

6. Use the **Src/C** knob to select a video source that you want to overlay over the MultiViewer output.
7. Press **Src/C** and use the **S/Clip** knob to select **6.3%**.
8. Press **NEXT > NEXT > NEXT**.
9. Use the **Box** knob to select box one for the MultiViewer you are using for ViewControl. For example, if you are assigning MultiViewer one (1) to ViewControl, select **MV1:1**.
10. Use the **In/Out** knob to select **PV**.
11. Use the **Box** knob to select box two.
12. Use the **In/Out** knob to select **PGM**.
13. Assign additional sources to the remaining MultiViewer boxes. These are the sources that will be available in ViewControl.

Switcher Personality

There are a number of settings for how the switcher will react to different situations, or how switcher elements appear to the operator. All these settings are grouped together into the Switcher Personality. These settings include double-press rates and sleep time, among others.

Auto Remove Key

You can have a key removed from the Next Transition area, so that it is not included in the next transition, after it has been transitioned off-air using the **KEY X CUT** or **KEY X AUTO** buttons. This allows you to transition a key off-air in an emergency and not have it accidentally transitioned back on-air with the next transition from the Transition Area.

To Set the Auto Remove Key Behavior

1. Press **MENU Pers > NEXT > NEXT > Trans Area**.
2. Use the **RemKey** knob to select whether a key remains selected in the Next Transition Area (**Off**) after a **KEY X CUT** or **KEY X AUTO** transitions the key off-air, or is removed from the Next Transition Area (**On**).

Auto Trans Second Press

When you press the **AUTO TRANS** or **KEY AUTO** button during a transition, the switcher can be set to either halt the transition (the transition freezes on-air) and wait for the button to be pressed again, immediately reverse, or immediately cut the transition back to the initial state.

When the transition is halted, pressing the **AUTO TRANS**, or **KEY AUTO**, button again can be set to either continue the transition, or reverse the transition back to the initial state.

To Set the Auto Trans Second Press Behavior

1. Press **MENU Pers > NEXT > NEXT > Trans Area > NEXT**.
2. Use the **MAuto 2**, or **KAuto 2**, knob to select what happens when the **AUTO TRANS**, or a **KEY AUTO**, button is pressed during a transition.
 - **HltFwd** — the transition is halted and then continues in the same direction when the transition button is pressed again
 - **HltRev** — the transition is halted and then reverses directions when the transition button is pressed again

- **Rev** — the transition immediately reverses directions when the transition button is pressed
- **Cut** — the transition immediately cuts back to the initial state when the transition button is pressed
- **Ignore** — the button press is ignored by the switcher and the transition continues

Background Double-Press

The Background Double-Press feature allows you to have a double-press of the BKGD button on a Transition Module select background and all on-air keyers as part of the next transition.

To Set the Background Double-Press Behavior

1. Press **MENU Pers > NEXT > NEXT > Trans Area > NEXT > NEXT**.
2. Use the **BGDDbl** knob select how you want double-press the BKGD button on the transition area to behave.
 - **Ignore** — ignore the on-air keyers
 - **TrsClr** — include all on-air keyers with the next transition

Color Schemes

The buttons on the control panel can be set to glow with different colors. This color can be picked from a list of pre-set color schemes, or a custom color can be selected. Up to four (4) custom color schemes can be saved on the switcher.

To Select a Panel Color Scheme

The color scheme sets the glow color for the buttons on the control panel.

1. Press **MENU > User > Scheme**.
2. Use the **Load** knob to select the color scheme you want to use.

If you have created custom color schemes, you can select it from the menu.
3. Use the **KeyCol** knob to select whether the buttons for each keyer are assigned a unique color (**On**), or if the keyer buttons all use the same color (**Off**). Depending on the color scheme selected, key 1 is yellow, key 2 is green, key 3 is blue, and key 4 is purple.
4. Press the **Load** knob.
5. Press the **Confrm** knob.

To Create a Custom Panel Color Scheme

Custom colors are created using standard hue, saturation, and luminance values. Once created, you can save your custom color.

1. Press **MENU > User > Scheme > NEXT**.
2. Use the **Hue** knob to adjust the hue of your custom color.
3. Use the **Sat** knob to adjust the saturation of your custom color.
4. Use the **Lum** knob to adjust the luminance of your custom color.
5. Press **NEXT**.
6. Use the **Save** knob to select the custom scheme that you want to store the custom color to.
7. Press the **Save** knob.
8. Press the **Confirm** knob.

To Set the Brightness of the Control Panel Buttons

Note: Brightness is not stored with the color scheme.

1. Press **MENU > User > Scheme > NEXT > NEXT > NEXT**.
2. Use the **Brightness** knob to set the brightness of the buttons on the control panel.

Double-Press Rate

You can set the double-press rate of the switcher to suit your preference. Setting a fast rate requires you to double-press the knobs in quick succession in order to be recognized as a double-press. Setting a slow rate allows more time between presses but may register two single presses as a double-press.

To Set the Double-Press Rate

1. Press **MENU Pers > DbIPrs Speed**.
2. Double-press the **HERE** knob at the rate you want to use for double-pressed on the switcher.
3. Press **MENU** to store the new rate.

Editor Mode

The switcher can be controlled by an external editor. The external editor can control the switcher to perform transitions, or recall memories, among the supported commands.

Refer to the GVG100 Supported Protocol Document for a list of supported commands.

To Set the Switcher to Editor Mode

Tip: You can quickly turn off editor mode by pressing and holding the **MENU** button and pressing **PERS**.

1. Press **MENU Pers**.
2. Use the **Editor** knob to select **On** to allow the switcher to be controlled by an external editor.

Memory Bank Button Behavior

Note: Note available on the CB1 and CB2.

The Memory Bank Button Behavior feature allows you to set how the **BANK** button behaves when pressed and released.

To Set the Bank Button Behavior

1. Press **MENU Pers > NEXT**.
2. Use the **MemBnk** knob to select how you want the **BANK** button to behave when pressed and released.
 - **Normal** — the keypad is used to enter the bank number directly, followed by the memory (For example, to access memory 3 on bank 2, press **BANK > 2 > 3**.)
 - **Legacy** — the next bank is selected every time the button is pressed, cycling through all banks (For example, to access bank 5, press **BANK** repeatedly until bank 5 is selected.)

Next Button Secondary Function

You can configure the **NEXT** button to allow you to manually trigger GPI outputs. This allows you to use the GPI to manually roll a clip on a video server, or load the next page on a character generator. Refer to the External Device Setup Sheets for more information on setting up an using external devices.

Refer to [GPI Control](#) on page 37 for more information on setting up and using GPIs.

To Set the NEXT Button Secondary Function

1. Press **MENU Pers > NEXT > NEXT > NextBn Func2**.
2. Use the **Func** knob to select the second function of the Next button.
 - **<none>** — no secondary function
 - **GPO** — you can manually trigger a GPI output

Next Transition Reset

You can have the transition area reset to a default background dissolve after each transition. This allows

you to prevent the selections from the last transition from being accidentally included with the next transition.

To Set the Next Transition Reset Behavior

1. Press **MENU Pers > NEXT > NEXT > Trans Area**.
2. Use the **Trans** knob to select whether the transition area is reset after a transition.
 - **NotRst** — area is not changed after a transition
 - **Reset** — area is reset to a background dissolve after each transition

Next Transition Toggle

You can set the next transition selection buttons to either be latching (toggle) or momentary (off). When in toggle mode, pressing one of the next trans buttons (**BKGD**, **KEY1**, **KEY2**, **KEY3**, **KEY 4**) toggles it on or off (unless it is the last button - at least one must be selected). When off, pressing one button deselects all other buttons. You must press all the buttons you want to include in the next transition simultaneously.

To Set the Next Trans Toggle

1. Press **MENU Pers > NEXT > Toggle**.
2. Use the **NTrans** knob to select whether the next transition buttons are latching (**Toggle**) or momentary (**Off**).
 - **Toggle** — when you press a next transition button it toggles on or off and does not change the other buttons.
 - **Off** — when you press a next transition button it selects that button and turns off all other buttons. You must press the buttons at the same time to select them as part of the next transition.

Power-Save Mode

The switcher goes into a Power-Save mode after a user-defined amount of time (20 minutes by default) without user interaction. Touching any button, knob, or fader will wake the switcher. The switcher does not act on the button, knob, or fader control that wakes it from sleep mode.

During Power-Save mode, video related hardware is not affected and video signals still pass through the switcher.

To Set the Power Save Mode and Timer

1. Press **MENU Pers > NEXT > NEXT**.
2. Press the **Sleep/PwrSve** knob to toggle between the power save modes.

- **Sleep** — displays are turned off and buttons light in raindrop pattern
- **PwrSve** — all buttons and displays are turned off and as much power is conserved as possible

3. Use the **Sleep/PwrSve** knob to set the amount of time that the switcher will wait without user input before going into sleep or power-save mode. Setting the value to off prevents the switcher from ever going into sleep or power-save mode.

Roll GPO/Roll Clip

The switcher uses a GPI output to start a clip playing on an external video server. This can be set to have the GPI output always trigger if a source going on-air is from a video server, or you have to set the GPI output to trigger manually.

If your external video server supports the AMP protocol, the roll clip functionality works directly without the use of a GPI output.

To Set the Roll GPO/Clip Behavior

1. Press **MENU Pers > NEXT > NEXT > Trans Area > NEXT > NEXT**.
2. Use the **RIClip** knob to select whether GPI outputs, or video servers, assigned to input sources are triggered before a transition.
 - **Force** — the GPI output, or video server, is always triggered with the transition
 - **User** — you must select to trigger the GPI, or video server, output with the transition

Shift Toggle

You can set the Shift button on the bus map to be either latching (toggle) or momentary (off). When in toggle mode, you can press the shift button and then select a source on the shifted bus without having to hold down the shift button. This only affects the bus the shift button is on.

To Set the Shift Toggle

1. Press **MENU Pers > NEXT > Toggle**.
2. Use the **Shift** knob to select whether the shift button is latching (**Toggle**) or momentary (**Off**).
 - **Toggle** — when you press the **Shift** button it stays on until you press a source button on that bus.
 - **Off** — the **Shift** button only stays on as long as you are holding it down.

Transition Rate Units

When you perform an auto transition, you must specify the length of time that you want the transition to take. This value can be entered either in video frames or seconds, depending on what you are most comfortable with.

To Set the Units Used for Transition Rates

1. Press **MENU Pers**.
2. Use the **Rate** knob to select either frames (**Frames**) or seconds (**Secnds**) as the units you want to use for transition rates.

Undo Memory Recall

The memory recall undo feature can be turned on or off. A memory recall is undone by pressing the memory number a second time after a memory is recalled.

The undo memory functionality can be set independently for the main memory system and the Effects Memory area.

To Turn Undo Memory Recall Off

1. Press **MENU Pers > NEXT > NEXT > NEXT**.
2. Use the **GMUndo** knob to turn the undo feature on (**On**) or off (**Off**) for the main memory system.
3. Use the **MEUndo** knob to turn the undo feature on (**On**) or off (**Off**) for the effects memory modules, if your control panel has them.

User Buttons

These buttons can be assigned as ME, Aux Bus, MiniME™, or chroma key selection buttons. The number and position of the buttons on the control panel depend on the model of your control panel.

If a button is assigned to an ME, MiniME™, or chroma key, you can press and hold the button to be able to select a different ME, MiniME™, or chroma key from the key bus. If the user button is assigned to an Aux, it will allow you to select a different Aux.

To Set A User Button

1. Press **MENU > User > NEXT > UseSel Buttns**.
2. Use the **Button/RowBtn** knob to select the user button you want to set up.
3. Use the **Type** and **Index** knobs to select the function for the user button.
 - **None** — user button is not assigned
 - **ME** — use the **Index** knob to select which ME the user button is assigned to

- **Aux** — use the **Index** knob to select which Aux Bus the user button is assigned to
- **MiniME** — use the **Index** knob to select which MiniME™ the user button is assigned to
- **Key** — use the **Index** knob to select which keyer the user button is assigned to. Select **Select** if you want to be able to press and hold the user button and select the keyer you want the bus assigned to. For example, press and hold the key select user button and press source button 2 on the key bus to assign the key bus to key 2. The source button for the keyer that the bus is currently assigned to is selected.

*Tip: Each keyer can have a different button color to help identify it. You can turn this feature on or off from the **Schemes** menu.*

- **CCBank** — use the **Index** knob to select which custom control bank the user button is assigned to. Select **Select** if you want to be able to press and hold the user button and select the custom control bank on the key bus.
- **CK** — use the **Index** knob to select which chroma key engine the user button is assigned to.

Switcher Resources

The switcher has a number of resources that it must share across keyers or MEs/MiniME™s. How these resources are shared, and what happens when a resource is needed by another layer, is determined by the switcher based on where the resource is used and whether it is on-air or not.

The following lists the order that resources are re-assigned from a layer. Items at the top of the list are re-assigned from first.

1. ME 1 Transition (assigned last in memory recalls)
2. MiniME™ 2, Key 2 (off-air)
3. MiniME™ 2, Key 1 (off-air)
4. MiniME™ 1, Key 2 (off-air)
5. MiniME™ 1, Key 1 (off-air)
6. ME 1, Key 4 (off-air)
7. ME 1, Key 3 (off-air)
8. ME 1, Key 2 (off-air)
9. ME 1, Key 1 (off-air)
10. MiniME™ 2, Key 2 (on-air)
11. MiniME™ 2, Key 1 (on-air)
12. MiniME™ 1, Key 2 (on-air)
13. MiniME™ 1, Key 1 (on-air)
14. ME 1, Key 4 (on-air)
15. ME 1, Key 3 (on-air)
16. ME 1, Key 2 (on-air)
17. ME 1, Key 1 (on-air) (assigned first in memory recalls)

Keep the following in mind when DVE resources are re-assigned:

- A DVE key reverts to an Auto Select key.
- MediaWipe DVE transition reverts to a Dissolve.
- During a memory recall, all DVE resources involved in the memory are re-assigned according to the above list.
- A DVE resource will not be re-assigned from an on-air element that is not part of the memory.





GPI Control

General Purpose Interface (GPI) is a high/low voltage signalling protocol that allows the switcher to send simple commands to an external device, or receive commands from a device. Each pin on the GPI is set as either high (+5 Volts), or low (0 Volts), and it is the switching between high and low that sends commands to the external device, or to the switcher.

GPI Trigger Types

There are four trigger types supported by the switcher. These can be either output triggers, or input triggers.

Table 6: Trigger Types

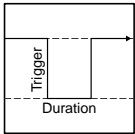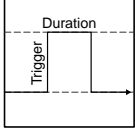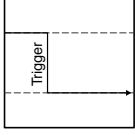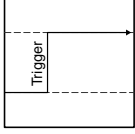Trigger	Description	
Low Edge	The output level is set high, and momentarily goes low for the trigger.	
High Edge	The output level is set low, and momentarily goes high for the trigger.	
Low Level	The output level toggles from the base high level to the low level. The output signal remains at this level until reset.	
High Level	The output toggles from the base low level to the high level. The output signal remains at this level until reset.	

GPI Setup

Each GPI pin on the switcher can be configured as either an input, or an output. By default, all GPIs are set as inputs.

To Set Up a GPI Input

The switcher requires a Low Edge GPI input trigger.

1. Press **MENU > Config > GPIO**.
2. Use the **GPIO** knob to select the GPI that you want to configure as an input.
3. Use the **Type**, or **I/O**, knob to select **GPI**.
4. Press the **Edit** knob.

5. Use the **Event** knob to select the action you want to assign to the selected GPI input pin.
 - **<none>** — no action is taken
 - **CC** — run a specific custom control
 - use the **Prop** knob to select **Bank** and the **Value** knob to select the custom control bank
 - use the **Prop** knob to select **CC** and the **Value** knob to select the custom control
 - **MemRcl** — recall a memory on all MEs (use the **Value** knob to select the memory to recall)
 - **FtB** — perform a transition to black on the program ME that also takes all keys off-air. The source originally selected on program is selected on preset
 - **MCut** — perform a background cut on the selected ME (use the **Value** knob to select the ME, or MiniME™)
 - **MAuto** — perform a background auto transition on the selected ME (use the **Value** knob to select the ME, or MiniME™)
 - **KCut** — perform a key cut on the selected ME and Key
 - use the **Prop** knob to select **ME** and the **Value** knob to select the ME, or MiniME™
 - use the **Prop** knob to select **Keyer** and the **Value** knob to select the keyer
 - **KAuto** — perform a key auto transition on the selected ME, or MiniME™ and Key
 - use the **Prop** knob to select **ME** and the **Value** knob to select the ME, or MiniME™
 - use the **Prop** knob to select **Keyer** and the **Value** knob to select the keyer number
 - **AuxXpt** — select a video source on an aux bus
 - use the **Prop** knob to select **Aux** and the **Value** knob to select the aux bus
 - use the **Prop** knob to select **Input** and the **Value** knob to select the video source

To Set Up a GPI Output

A GPI output can be set as a Normal GPI output, or as a Tally output. As a tally output, the GPI output must be assigned to a video source. A GPI output in tally mode can still be used as a normal GPI output.

1. Press **MENU > Config > GPIO**.
2. Use the **GPIO** knob to select the GPI pin that you want to configure as an output.
3. Use the **Type** (or **I/O**) knob to select the type of trigger signal you want to use for the GPI output.

- **LowE** – low edge trigger
 - **HighE** – high edge trigger
 - **LowL** – low level trigger
 - **HighL** – high level trigger
4. For edge triggers, use the **Dur** knob to set the length of time (in frames) that the GPI edge output remains triggered.
 5. For level triggers, use the **Mode** knob to set how you want to GPI output to act.
 - **Normal** — when assigned to a video source and RollClip is active, will trigger with the source going on-air, and back with the source going off-air (pre-delay values are only used when the source is going on-air)
 - **Tally** — when assigned to a video source, will trigger with the source going on-air, and back with the source going off-air (RollClip and pre-delay values are ignored)

GPI Output Triggers

Each video source can have a GPI output assigned to it. This GPI can be used to trigger an external device, such as a video server, to play the cued clip when the video sources from the video server are taken on-air. This trigger can be set up to occur automatically any time the video source is transitioned on-air, or it can be triggered manually.

An automatic GPI output trigger can be overridden if required.

Note: The Next Button Secondary Function must be set to GPO to be able to trigger a GPI output manually using the NEXT button.

Keep the following in mind when working with GPI output triggers:

- The **RIClip** knob must be set to **On** to trigger a GPI output with a transition.
- Edge triggered GPI outputs remain triggered for the configured duration.
- Level triggered GPI outputs toggle between high and low each time they are triggered.

To Assign a GPI Output to a Video Source

You can set a pre-delay, or pre-roll, that will specify when the GPI is triggered in relation to taking the video source on-air. This is useful for VTR pre-roll delay and other situations where an input source is not immediately ready to be taken to air. The **RIClip** knob must be set to **On** to trigger the GPI output with the transition.

Note: You cannot assign a GPI output to Aux bus special sources (AUX PGM, AUX PV, AUX CLN).

1. Press **MENU > Config > Input > NEXT > NEXT > NEXT**.
2. Use the **Input** knob to select the video source that you want to assign a GPI output to.
When you select this source on a bus, the GPI output will trigger automatically.
3. Use the **GPO** knob to select the GPI output that you want to assign to the selected video source.
4. Use the **Predly** knob to select the pre-delay interval (in frames) that the switcher waits after the GPI output is triggered before taking the input source on-air.

To Set a GPI to Be Triggered Manually

To manually trigger a GPI output, the GPI must be assigned to one of the pattern/mnemonic buttons.

1. Press **MENU > Config > GPIO > NEXT**.
2. Use the **Bttn** knob to select the pattern/mnemonic button that you want to assign a GPI output to.
3. Use the **GPO** knob to select the GPI output that you want to assign to the button.

Live Edit Decision Lists

Edit Decision Lists are files used by non-linear editing (NLE) suites to aid in post-production. Your switcher can capture EDL data in a file that you load into your NLE suite.

LiveEDL Setup

You can configure your switcher to trigger multiple GPI outputs at the start, end, or both, of an EDL data capture to trigger video servers that are recording the feeds coming into the switcher. The EDL data from the switcher can then be paired with the feeds from the video servers, using the timecode data, in the NLE suite to edit or re-cut the show.

You can also set a pre-delay for each GPI output. EDL data capture does not begin until the highest pre-delay has passed. This is useful when the switcher needs to wait for external equipment to become ready. The example below shows the effects of various triggering and pre-delay settings.

To Set the LiveEDL Behavior

1. Press **MENU > System > NEXT > NEXT > NEXT > LiveEDL Config**.
2. Use the **GPO** knob to select the GPI output that is connected to your video server.
The GPI must be configured as a GPI output before it can be selected.
3. Use the **Triggr** knob to select when the GPI output is triggered.
 - **Off** — GPI is not triggered
 - **Start** — GPI output is triggered at the beginning of the EDL capture
 - **Stop** — GPI output is triggered at the end of the EDL capture
 - **Both** — GPI output is triggered at the beginning and end of the EDL captureIf Start or Both is selected, you must set the pre-delay for the GPI.
4. Use the **PreDly** knob to select the pre-delay interval (in frames) that the switcher waits after the GPI output is triggered before starting to capture EDL data.

Timecode Setup

The switcher uses timecode data to mark the EDL file so that it can be used in the non-linear editing suite along with the feeds from the video servers. The timecode data

can be either from an external timecode generator, or internally generated. An offset can be applied to both timecode sources.

For an external timecode, an LTC generator must be connected to the LTC port on the back of the frame.

To Confirm External LTC Signal

If you have an external linear timecode generator connected the **LTC** port on the back of the frame, you can confirm that the switcher is receiving timecode data from the switcher.

1. Press **MENU > Status > NEXT**.
2. Confirm that the timecode information shown on the display matches the timecode from the timecode generator.

If required, an offset can be applied to the incoming timecode data.

To Set the LTC Timecode Source

If you are using an external timecode generator, an offset, or delay, is applied to the incoming timecode signal before it is stored in the LiveEDL data file. If you are using an internal timecode, the offset is the starting time that the switcher uses for the timecode that is stored in the LiveEDL file.

Note: If a valid timecode signal is detected on the LTC port on the frame, the external timecode will be used even if an internal timecode is set.

1. Press **MENU > System > NEXT > NEXT > NEXT > LiveEDL Config > NEXT**.
2. Use the **Offset** knob to select the source of the timecode data you want to use.
 - **Ext.** — the timecode data received on the LTC port is used
 - **Int.** — an internal timecode is generated
3. Set the timecode offset for an External timecode as follows:
 - a) Use the **LTCOff** knob to select the offset, in frames, that you want to delay the incoming timecode signal by.
4. Set the starting time for an Internal timecode as follows:
 - a) Use the **Field** knob to select the hours, minutes, or seconds that you want to adjust.
The timecode is shown in the [HH:MM:SS] format.
 - b) Use the **Value** knob to set the starting time in the selected field.

LiveEDL Data Capture

Capturing EDL data is manually started and stopped from the switcher. When you select to start capturing EDL data, and GPI outputs set to trigger on start are triggered. If a pre-delay has been set for the GPIs, the switcher does not start capturing EDL data until the pre-delay time has finished.

When you stop capturing EDL data, you have the option to delete the data, or save it to a USB drive. You can also connect to the switcher via FTP and download the files directly to your editing suite. Use the username `liveedl` and password `password` to create the FTP connection to the switcher.

Keep the following in mind when reviewing the EDL data from the switcher:

- When a MediaWipe is selected as the transition type, the switcher records the transition duration as the cut point frame multiplied by two (2). This is to ensure that the cut point is recorded accurately.
- If you used more than one ME, or Aux bus, in your shot, a separate EDL file is saved for each ME and Aux bus. The ME re-entry is shown as being selected on the first ME, and the source selections on the second ME are saved to the separate LiveEDL file. Aux bus information is only stored to a LiveEDL file when the Aux bus is not in fixed mode.

To Start Capturing EDL Data

The EDL data can be stored to one of 1000 LiveEDL files stored on the switcher. A separate file is created for each ME when the additional MEs are used.

1. Press **MENU > User > LiveEDL**.
2. Use the **Start** knob to select the LiveEDL file on the switcher that you want to store the EDL data to.
If the LiveEDL file already contains data, you are given the option to delete the data, or save it to a USB.
3. Press the **Start** knob to start recording.

To Stop Capturing and Save EDL Data

1. Press **MENU > User > LiveEDL**.
2. Press the **Stop** knob to stop recording.
3. Save the EDL data to a USB as follows:
 - a) Insert your USB drive into the USB Port on the switcher. You must wait 5 seconds for the switcher to recognise the USB drive.
 - b) Press the **Save** knob.
 - c) Press the **Confirm** knob to store the LiveEDL file to the USB drive.

MultiPanel

Each frame can be controlled by up to three (3) control panels at the same time. These panels can be of different sizes and can be assigned different ME resources and have independent personality settings. Panel personality settings are a subset of the full personality settings of the switcher.

A single control panel can be connected to the frame using a serial connection and up to two panels over ethernet. The ethernet connection can be from a Carbonite Black control panel, or a Carbonite panel with a CarboNET.

Keep the following in mind when working with MultiPanel:

- A serial connected panel will always be designated as the master panel.
- The assignment of the panel ID is done from the Carbonite Black control panel or the CarboNET, except if the panel is connected using the serial connection.
- Control panel specific personality settings are stored on the frame for the panel ID and are not tied to the control panel.
- DashBoard automatically follows the master panel but will ignore permissions set for the master panel.
- If you change switcher modes, the MultiPanel permissions may have to be set again.
- An undo of a memory recall ignores panel permissions and will undo the last memory recalled from any panel.
- Bus maps are specific to each control panel. Creating or updating a bus map for one control panel does not change the bus map on another control panel.
- Custom controls ignore control panel permissions and will run events on an ME, MiniME™, or chroma key that the control panel does not have permission for.

To Set Up MultiPanel Permissions

1. Press **MENU** > **Config** > **NEXT** > **NEXT** > **MultiPanel**.
2. Use the **PnID** knob to select the panel that you want to set the permissions for.
3. Use the **ME** and **State** knobs to select which ME (**ME**), MiniME™ (**MinME**), and chroma key (**CK**) resources that selected panel can control.

Note: A control panel must have permission to at least one ME, MiniME™, or chroma key.

Diagnostics and Calibration

There are a number of calibration and diagnostics tools in the switcher that can be used to troubleshoot problems with your switcher.

Note: If you are having problems with your switcher, please contact Ross Video Technical Support for assistance.

Switcher Information and Logs

Switcher information and logs can be used to identify and diagnose problems with the switcher. Use this information when contacting Ross Video Technical Support.

Switcher Status in DashBoard

The DashBoard control system allows you to connect to the switcher and view status information for various components of the frame.

Download and install the latest version of DashBoard from <http://www.opengear.tv/>. Review the documentation that comes with DashBoard for information on installing and launching DashBoard.

Status

The Status node provides a read only overview of the state of a number of important switcher components and equipment.

The following items are available on the **Status** node:

- **Software Version** — the current version of the software running on the switcher
- **Serial Number** — the serial number of the frame
- **Engine Type** — the model of frame
- **Video Mode** — the video format that the switcher is operating in
- **Video Reference Source** — the source of video reference to the switcher
- **External Reference** — the video format of the external reference, if connected
- **Reference** — status of whether the switcher has locked to the reference format
- **Ancillary Mode** — how ancillary data is handled (strip or pass)
- **Temperature** — status of the ambient temperature in the frame
- **CPU Temperature (C)** — the temperature of the frame CPU in degrees Celsius
- **FPGA Temperature (C)** — the temperature of the frame FPGA in degrees Celsius

- **I/O FPGA X Temperature (C)** — the temperature of each of the video processing FPGAs in degrees Celsius
- **Fan #1** — status of fan 1 in the frame (left fan)
- **Fan #2** — status of fan 2 in the frame (right fan)
- **Timecode** — the current timecode being received by the switcher
- **RossTalk Server Port** — the network port that the switcher is listening on for RossTalk commands.
- **TSL UMD Server Port** — the network port that the switcher is listening on for TSL UMD commands.
- **Allocated DVEs** — where DVE channels are allocated in the switcher.

To View the Software Version

- Press **MENU > Status**.

The current software version (**SW Ver**) and reference format are displayed.

To Copy Logs To a USB

Switcher logs can be stored onto a USB to be sent to technical support to diagnose problems with your switcher.

Note: Logs must be copied before a reboot or power-cycle of the switcher, or the information in them will be lost.

1. Insert USB drive into the USB port on the switcher. Wait 5 seconds after inserting the USB drive before using it.
2. Press **MENU > System > NEXT > NEXT > Diag Tests**.
3. Press **NEXT**.
4. Press the **Copy Logs** knob to copy the switcher logs to the USB drive.

The logs have been copied into the `\switcher` directory on the USB drive.

Calibration

Calibration allows you to reset the limits of the faders on the control panel and re-center the positioner.

To Calibrate the Switcher

1. Press **MENU > System > NEXT > NEXT > Diag Tests > NEXT > Calib Reset**.
2. Move the positioner backwards and forwards, left to right, and twist the positioner left and right a few times.

3. Move each fader from one limit to the next a few times. Do not push the fader hard when it reaches the limit.
4. Press **MENU** to save the calibration information.

System Real-Time Clock/Date

The switcher uses an internal clock to generate the time for the clock overlay for the MultiViewer.

To Set the System Real-Time Clock

1. Press **MENU > Config > NEXT > Clock**.
2. Press **Time**.
3. Use the **Hour**, **Minute**, and **Second** knobs to select the current time.
4. Press **Hour**.
5. Press **Confirm**.

To Set the System Date

1. Press **MENU > Config > NEXT > Clock**.
2. Press **Date**.
3. Use the **Month**, **Day**, and **Year** knobs to select the current date.
4. Press **Month**.
5. Press **Confirm**.

Diagnostics

Diagnostics consist of a number of tests that are used to confirm the functionality of switcher components.

Frame Diagnostic LEDs

There are a number of LEDs inside the frame that are used to diagnose the operation of the switcher.



Figure 9: Frame Diagnostic LEDs

- **FRM UPGD** — is lit when the software on the frame is being upgraded
- **1 (heartbeat)** — flashes to indicate normal operation of the frame
- **2 - 8** — unused
- **PANEL** — is lit when the frame has proper connection to a legacy Carbonite control panel connected to the PANEL port at the back of the frame
- **MC** — is not used at this time
- **POWER** — is lit when the frame is on
- **PS1** — is lit when power supply one is getting power
- **PS2** — is lit when power supply two is getting power

Frame DIP Switches

There are a number of DIP switches inside the frame that are used to diagnose the operation of the switcher.

Table 7: Carbonite Black Frame DIP Switches

DIP	Description
1	This DIP switch forces a RAM test every time the switcher is powered on. It is in the up (off) position by default.
2	This DIP switch is unused and should be left in the default up (off) position.
3	This DIP switch is used to set the IP address of ethernet port 1 on the frame to the default value (192.168.0.123) and ethernet port 2 to DHCP. It must be in the up (off) position to set another IP address for the frame.
4	This DIP switch prevents software upgrades. It must be in the up (off) position to upgrade the switcher.
5	This DIP switch is unused and should be left in the default up (off) position.
6	This DIP switch is unused and should be left in the default up (off) position.
7	This DIP switch is unused and should be left in the default up (off) position.
8	This DIP switch is unused and should be left in the default up (off) position.

Control Panel DIP Switches

The up position for the DIP switch is OFF.

DIP1	DIP2	DIP3	DIP4	Function
OFF	OFF			User IP Settings
OFF	ON			Force DHCP IP
ON	OFF			Force Static IP (192.168.0.129)
ON	ON			reserved
		OFF		reserved
		ON		reserved
			OFF	Default Boot
			ON	Boot from memory card

Note: When you force the static IP, the IP address of the frame is also set (192.168.0.123).

To Run the Control Panel Test

Test the functionality of any of the buttons, knobs or fader and positioner on the control panel.

1. Press **MENU > System > NEXT > NEXT > Diag Tests > Contrl Test**.
The second line of the display shows the current button, knob, positioner, or fader being used.

2. Test the button, knob, positioner, and fader you want to check.
3. Press the **MENU** and **Exit** buttons at the same time to end the test.

To Run the LED Test

1. Press **MENU > System > NEXT > NEXT > Diag Tests > P-LEDs Test**.
All the buttons and indicators on the control panel cycle through different colors.
2. Press **MENU** to end the test.

To Run the Display Test

1. Press **MENU > System > NEXT > NEXT > Diag Tests > Display Test**.
A series of letters, numbers, and symbols scroll across the displays and the mnemonics cycle colors.
2. Press **MENU** to end the test.

To Run the Tally Test

The Tally Test turns all tallies off, and then turns each tally on consecutively. There is a three (3) second delay between each tally being toggled on. Once the last tally has been turned on, all the tallies blink on and off three times.

1. Press **MENU > System > NEXT > NEXT > Diag Tests > NEXT > NEXT > Tally Test**.
All tallies are turned off, and then each tally is turned on consecutively. There is a three (3) second delay between each tally being toggled on. Once the last tally has been turned on, all the tallies blink on and off three times.
2. Press **MENU** to end the test.

To Run the GPI Input Test

1. Press **MENU > System > NEXT > NEXT > Diag Tests > NEXT > NEXT > GPI Test**.
The second line of the menu show the state of all GPI input pins as High or Low.
2. Press **MENU** to end the test.

To Run the GPI Output Test

1. Press **MENU > System > NEXT > NEXT > Diag Tests > NEXT > NEXT > GPO Test**.
All GPI outputs are turned off, and then each one is turned on consecutively. There is a three (3) second delay between each GPI output being triggered. Once the last tally has been triggered, all the GPI outputs blink on and off three times.
2. Press **MENU** to end the test.

Error Messages

The following error messages may appear when starting your switcher.

Table 8: Switcher Error Messages

Error	Description	Solution
DDR 0 Not Found; DDR 1 Not Found; or DDR 0 & 1 Not Found	There is a problem with the switcher DDR memory. The switcher may be used but many features will be limited or disabled.	Re-start your switcher. If the problem persists, contact Ross Video Technical Support for assistance.
Panel/Frame Mismatch	Your switcher control panel is connected to the wrong frame type.	Connect your switcher control panel to the proper frame and re-start the switcher.
Upgrade PMC?	Your switcher requires a Panel Module Controller (PMC) upgrade as part of a software upgrade. The switcher may be used without the PMC upgrade but may respond in an unpredictable manner.	Allow the PMC upgrade to proceed. Contact Ross Video Technical Support for assistance if you are unsure about upgrading your switcher.
Unknown panel type Please upgrade	The frame does not recognise the control panel. This could be caused by an unsupported panel being connected to the frame, or a problem with the panel module controlled or the configuration files.	Ensure that you have the correct control panel connected to the frame. If the problem persists, download the latest upgrade file from and force an upgrade of the switcher. Contact Ross Video Technical Support for assistance if you are unsure about upgrading your switcher.

Specifications

The information in this section is subject to change without notice.

Switcher Resources

The number of resources specific to your switcher depends on the options installed.

Resource	Carbonite Black	Carbonite Black+	Carbonite Black+ 12G
2D DVE Channels per ME	2		
Aux Buses	10		
Chroma Keys per ME	2 (floating)		
Custom Controls	256 (8 Banks × 32 CCs)		
Max Events per CC	998		
FSFCs	0	9	
GPI I/Os	34		
Keyers per ME	4		
Matte Generators per ME	2		
Media-Store Channels	4		
Media-Store CACHE	8 GB		
Memories per ME	100		
MEs (max)	1		
MiniME™ Engines	2		
MultiScreen Generators	0		
MultiViewer Boxes	16*		
MultiViewer Layouts	39*		
MultiViewer Generators	2	4	
Pattern Generators per ME	2		
Tallies	34		
SDI Video Inputs	9		
SDI Video Outputs	6	9	
Frame IP	192.168.0.123		
Panel/CarboNET IP	192.168.0.129		

* The MultiViewer layouts and boxes depends on the MultiViewer you are using.

Hardware Weights

Hardware	Weight
CB1 Panel	13lbs (5.90kg)
CB1S Panel	17lbs (7.71kg)

Hardware	Weight
CB2 Panel	20lbs (9.07kg)
CB2S Panel	26lbs (11.79kg)
CB3S Panel	35lbs (15.88kg)
CB3X Panel	40lbs (18.14kg)
CB9 Panel	8lbs (3.63kg)

Environmental Characteristics

All Switchers	
Ambient Temperature Range	0 - 40°C (32 - 104°F)
Frame Cooling	Active, Front-to-Back airflow
Control Panel Cooling	Passive

Video Input Specifications

Input Specification	Value
Equalization (using Belden 1694A cable)	>50m @ 12Gb/s
	>50m @ 3Gb/s
	>100m @ 1.5 Gb/s
	>300m @ 270 Mb/s (5°-40°C)
Impedance	75 ohm, terminating
Video Inputs, SDI	SMPTE 259M/292M/424M/ST-2082 (non-looping)
Reference Inputs (non-terminating, looping)	Standard Definition — analog black
	High Definition — tri-level sync

Video Output Specifications

Output Specification	Value
Return Loss	<-8dB @ 12GHz
	<-9dB @ 6GHz
	<-10dB @ 3GHz
	<-15dB @ 1.5GHz
Rise and Fall Time	30ps ±10% (UHDTV1)
	240ps ±10% (HD)
	800ps ±10% (SD)
Signal Level	800mV ±10%
DC Offset	0 Volts
Overshoot	<10%
Video Outputs, SDI HD Mode	10-bit SMPTE-292M/424M serial digital

Audio Specifications

Specification	Value
Audio Depth	24-bit AES3 in HD (20-bit in SD)
Channels	1 Stereo Pair (2 channels)
Output	AES
File Format	Multi-channel Waveform Audio File (.wav)
Impedance	110 Ohms, differential
Minimum/Maximum output voltage swing	1.5/6V peak-to-peak
Rise and Fall Times	20ns, typical
Sample Rate	48kHz
Synchronization	Locked to Video

Power Consumption — Frame

	Carbonite Black	Carbonite Black+	Carbonite Black+ 12G
Consumption	120W 2.5A 48V	180W 3.75A 48V	206W 4.3A 48V
Input Voltage	100 - 120V~, 220 - 240V~, 47-63Hz		

Jitter

Specification	Value
UHDTV1 - Tri-Level Sync	Alignment (> 100KHz) < 0.18UI
	Timing (<10Hz) < 3.5UI
HD - Tri-Level Sync	Alignment (> 100KHz) < 0.2UI
	Timing (<10Hz) < 1.0UI
HD - Composite Reference	Performance not guaranteed with composite reference
SD - Tri-Level Sync	Alignment (> 1KHz) < 0.2UI
	Timing (<10Hz) < 0.2UI
SD - Composite Reference	Alignment (> 1KHz) < 0.2UI
	Timing (<10Hz) < 0.5UI


System Timing

- All video inputs zero time relative to reference input, auto timing will correct for inputs out of time by up to +/- 0.25 line.
- System delay is less than 1 line.

Power Consumption — Control Panel

	CB9	CB1	CB1S	CB2	CB2S	CB3S	CB3X
Power	24W 2A 12V	25W 2.1A 12V	30W 2.5A 12V	35W 2.9A 12V	45W 3.8A 12V	65W 5.4A 12V	80W 6.7A 12V
Input Voltage	100 - 120V~, 220 - 240V~, 47-63Hz						

Ports

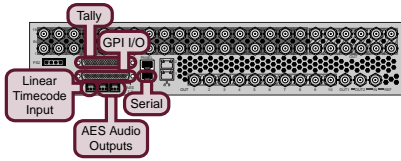

Serial Port

The serial port supports the RS-422 transmission standard in the following format:

- 38.4k Baud
- 8 bits
- 1 stop bit
- Even Parity

Table 9: Serial Port Pinouts

Pin	Signal
1	Tx+
2	Tx-
3	Rx+
4	n/c
5	n/c
6	Rx-
7	Ground
8	Ground

GPI Port

The switcher supports 34 GPI I/Os.

Table 10: GPI I/O Pinouts

Pin	Signal
1	GPI I/O 1
2	GPI I/O 2
3	GPI I/O 3
4	GPI I/O 4
5	GPI I/O 5
6	GPI I/O 6
7	GPI I/O 7
8	GPI I/O 8
9	GPI I/O 9
10	GPI I/O 10
11	GPI I/O 11

Pin	Signal
12	GPI I/O 12
13	GPI I/O 13
14	GPI I/O 14
15	GPI I/O 15
16	GPI I/O 16
17	GPI I/O 17
18	GPI I/O 18
19	GPI I/O 19
20	GPI I/O 20
21	GPI I/O 21
22	GPI I/O 22
23	GPI I/O 23
24	GPI I/O 24
25	Ground
26	GPI I/O 25
27	GPI I/O 26
28	GPI I/O 27
29	GPI I/O 28
30	GPI I/O 29
31	Ground
32	GPI I/O 30
33	GPI I/O 31
34	GPI I/O 32
35	GPI I/O 33
36	GPI I/O 34
37	n/c

Tally Port

The switcher supports 34 fixed tallies.

Table 11: Tally Rating

Specification	Value
Input Voltage	24VAC(rms)/40VDC
Maximum Current	120mA
Impedance	<15 ohm


Note: The tally pin must be connected to the proper common to complete the circuit. For example, tally 6 on pin 7 must be connected to the common on pin 31.

Table 12: Tally Pinouts

Pin	Tally #
1	Common (pins 2-6, 20-25)
2	1
3	2
4	3
5	4
6	5
7	6
8	7
9	8
10	9
11	10
12	11
13	12
14	13
15	14
16	15
17	16
18	17
19	Common (pins 13-18, 32-37)
20	18
21	19
22	20
23	21
24	22
25	23
26	24
27	25
28	26
29	27
30	28
31	Common (pins 7-12, 26-30)
32	29
33	30
34	31
35	32
36	33
37	34


LTC Port

The LTC port on the back of the frame supports a single LTC connection.

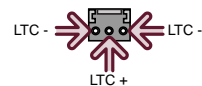

AES Port

The AES ports on the back of the frame each support a single 24-bit (20-bit in SD) stereo pair.

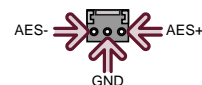

Glossary

Interlaced

An Interlaced video format starts at the top of the screen and draws all the odd number scan lines and then all the even number scan lines in sequence. This results in half the image being drawn in one pass and the other half of the image being drawn in the second. These two passes are called Fields, where the first pass is called Field 1 and the second pass is called Field 2. When both Field 1 and Field 2 have been drawn, resulting in a complete image, you have a single Frame.

Progressive

A Progressive scan video format draws each scan line in sequence, starting from the top of the screen and working to the bottom. Unlike Interlaced, with Progressive scan the entire image is drawn at one time, in a single pass. This means that there are no fields in a Progressive scan image.

Auto Key

A pairing of two video signals, a key video and a key alpha, to create a key. In the switcher, you associate the fill and alpha so that the switcher knows which alpha to use when the video is selected.

Auto Transition

An automatic transition in which the manual movement of the fader handle is simulated electronically. The transition starts when the **AUTO TRANS** button is pressed and takes place over a pre-selected time period, measured in frames.

Chroma Key

Chroma Key is a key in which the hole is cut based on a color value, or hue, rather than a luminance value or alpha signal. The color is removed and replaced with background video from another source.

Cut

An instantaneous switch from one video signal to another.

Dissolve

A transition from one video signal to another in which one signal is faded down, while the other is simultaneously faded up. The terms mix or cross-fade are often used interchangeably with dissolve.

Field

One half of a complete picture (or frame) interval containing all of the odd, or all of the even, lines in

interlaced scanning. One scan of a TV screen is called a field; two fields are required to make a complete picture (which is a frame).

Force, Mask

An effect that forces the masked region to the foreground but is not bound by the key. For example, if you have a key and apply a mask to it. The masked area is bound by the edges of the key. When force is turned on, the masked area is filled with the video from the key (nothing appears masked) but you can move the mask outside of the key and the key video is still filling the masked region.

Frame

One complete picture consisting of two fields of interlaced scanning lines.

File Transfer Protocol

A network protocol that is used to transfer files from one host computer to another over a TCP-based network.

Gain

Gain represents the range of signal values present in a video signal from a lowest to a highest point (from black to white for example). Increasing gain expands this range, while decreasing gain compresses this range. Clipping occurs if applied gain changes cause output signal values to fall outside the allowable range. Generally, increasing the gain for a specific color component causes the video signal colors to become increasingly saturated with that color. Similarly, decreasing the gain for a specific color component progressively removes that color component from the output video signal.

Gamma

Gamma corrections introduce non-linear corrections to a video signal. A gamma correction can be described as taking a point on the output versus input video signal line and pulling it perpendicularly away from the line. The result is a Bezier curve between the start, the new point, and the end point. Generally, increasing the gamma value adds more of the component to the video signal in the location of the gamma offset point. Decreasing the gamma value reduces the amount of the component in the video signal in the location of the gamma offset point. Moving the gamma offset point allows you to select which part of the input video signal receives the gamma correction. For example, if you increase the red gamma correction to the part of the video signal that has no red component you will add red to those areas while having little effect on areas that already contain a significant amount of red. This allows you to add a red tint to the

image while minimizing the amount of red-clipping that occurs.

General Purpose Interface

A simple high/low signal that is used to trigger an action either on an external device or on the switcher. A GPI can be an input or an output to the switcher.

High Definition

A high definition (720p, 1080i, or 1080p/3G) video signal.

Hue

The characteristic of a color signal that determines whether the color is red, yellow, green, blue, purple, etc. (the three characteristics of a TV color signal are chrominance, luminance, and hue). White, black, and gray are not considered hues.

Hue Rotation

Hue rotate affects the color of the entire video signal by rotating the input video hues. This produces an output video signal with colors that are shifted from their original hues. By rotating colors around the wheel, hue values will shift. For example, a clockwise rotation where yellows become orange, reds become magenta, blues become green. The more rotation applied, the further around the wheel colors are shifted.

Key

An effect produced by cutting a hole in the background video, then filling the hole with video or matte from another source. Key source video cuts the hole, key fill video fills the hole. The video signal used for cut and fill can come from the same, or separate, sources.

Key Alpha

The video signal which cuts a hole in the background video to make a key effect possible. Also called Key Video or Source. In practice, this signal controls when a video mixer circuit will switch from background to key fill video.

Key Invert

An effect that reverses the polarity of the key source so that the holes in the background are cut by dark areas of the key source instead of bright areas.

Key Mask

A keying technique in which a shape is combined with the key source to block out unwanted portions of the key source.

Key Video

A video input which is timed to fill the hole provided by the key source video. An example of key video is the video output of a character generator.

Linear Key

Linear keys make it possible to fully specify the transparency of a key from opaque, through transparent, to fully off. The transparency is specified by the key alpha that is associated with the key video. A keyer capable of a linear key converts the key signal voltage directly to the transparency effect on the screen.

Mnemonics

A green, orange, or yellow display used to show the names of a source above or below the source button or used as a custom command or pattern button.

Offsets

Offsets shift the video signal by a set amount. Depending on the offset applied, different parts or all of the video signal may be affected. Clipping occurs if applied offsets cause output signal values to fall outside the allowable range.

Pre-Delay

A pre-delay is a delay that is inserted into a transition between the triggering of a GPI output and performing the transition. The length of the pre-delay is usually the length of time your video server requires to start playing a clip or your character generator required to load a page.

RossTalk

An ethernet based protocol that allows the control over Ross devices using plain english commands.

Standard-Definition

A standard definition (480i or 576i) video signal.

Self Key

A key effect in which the same video signal serves as both the key signal and key fill.

Shaped Key

An additive key where the Key Alpha cuts a hole based on the monochrome value of the alpha. Shades of gray are translated into either white or black, giving the key a hard edge. Shaped Key alphas are sometimes used with Character Generators to cut very precise holes for the fill.

Split Key

A Split key allows you to assign a different alpha source for a key than the fill/alpha associations that are set up during configuration or to use a separate alpha source for a Self key.

Tally

An indicator which illuminates when the associated button, or control, is selected or is on-air.

Unshaped Key

A multiplicative key where the Key Alpha cuts a hole based on the gradient values of the alpha. Shades of gray are translated into transparency levels, giving the key a soft edge. Unshaped Key alphas can also be considered true linear alphas.

Index

A

AES Out [27](#)
AES Output [27](#)
Allocated DVEs [42](#)
Ancillary Data [23](#)
Ancillary Mode [42](#)
Audio Mixer Control [10](#)
Audio Out, Media-Store [27](#)
Audio Output, Media-Store [27](#)
Auto Key [19](#)
Auto Trans Second Press [32](#)

B

Background Double-Press [32](#)
BlackStorm Control [10](#)
Bus Maps [21](#)
Button Inserts [20](#)

C

Calibration [42](#)
Camera Control [10](#)
Clean Feed [23](#)
Clean Feed, Layer Mode [24](#)
Color Correction [28–29](#)
Proc Amp [28](#)
RGB [29](#)
Color Schemes [32](#)
Control, External Devices [10](#)
Copy Logs [42](#)
CPU Temperature [42](#)

D

DashBoard [42](#)
Status [42](#)
DashBoard, connecting [13](#)
Date, System Time [43](#)
Device Control [10](#)
Diagnostics [43](#)
Diagnostics, Copy Logs [42](#)
Diagnostics, Software Version [42](#)
DIP Switches [43](#)
Double-Press Rate [33](#)

E

Editor Mode [33](#)
Engine Type [42](#)
External Reference [42](#)

F

Fade to Black [37](#)
Fan#1 OK [42](#)

Fan#2 OK [42](#)
FlexiClean [23](#)
Format Conversion [16](#)
FPGA Temperature [42](#)
Frame Setup, Ethernet [13](#)
Frame Synchronizer [16](#)
FSFC, Input [17](#)
FSFC, Output [17](#)
FTP Connection [14](#)

G

Glow [32](#)
GPI [37](#)
GPI, Assign to Source [22](#)
GPI, NEXT Button Trigger [33](#)
GPI, Setup [37](#)
GPO Tally [38](#)

I

Input FSFC [17](#)
Inputs [19](#)
Video [19](#)

L

Layer Mode [24](#)
LiveEDL [39](#)
LiveEDL, Capture [40](#)
LiveEDL, Store [40](#)

M

Media-Store, Audio Out [27](#)
Memory Bank Button [33](#)
Memory Undo, Personality Option [35](#)
MiniME [11](#)
Mnemonic Source Names [20](#)
MultiPanel [41](#)
MultiViewer [11, 24](#)
MultiViewer, Time-Clock [24](#)

N

Network Connection [13–14](#)
Panel Setup [14](#)
Network Ports [13](#)
NEXT Button Function [33](#)
Next Trans Reset [33](#)
Next Trans Toggle [34](#)

O

On-Air Setting [26](#)
Output FSFC [17](#)

Outputs, Video [23](#)
Output Synchronizer [17](#)

P

PanelBuilder [31](#)
Personality [32–34](#)
Auto Trans Second Press [32](#)
Background Double-Press [32](#)
BGDDbl [32](#)
DblPrs Speed [33](#)
Double-Press Rate [33](#)
Editor [33](#)
Editor Mode [33](#)
KAuto 2 [32](#)
MAuto 2 [32](#)
Next Trans Reset [33](#)
Power-Save Mode [34](#)
RemKey [32](#)
RlClip [34](#)
Roll GPO [34](#)
Sleep/PwrSve [34](#)
Trans [33](#)
 Transition Area [32](#)
 Auto Remove Key [32](#)
Personality, Memory Bank Button [33](#)
Personality, NEXT Button [33](#)
Personality, Next Trans Toggle [34](#)
Personality, Shift Toggle [34](#)
Personality, Transition Rate Units [35](#)
Personality, Undo Memory [35](#)
Power-Save Mode [34](#)
Proc Amp [28](#)

R

Real-Time Clock, System [43](#)
Reference [16–17](#)
External [16](#)
Internal [16](#)
Output Sync [17](#)
Reference OK [42](#)
Reference Source [42](#)
Resources [36](#)
RGB [29](#)
RoboCam Control [10](#)
Roll Clip [34](#)
Roll GPO [34](#)
RossLinq [14](#)
RossTalk Port [42](#)

S

Serial Number [42](#)

Server Control [10](#)
Setup, External Devices [10](#)
Shift Toggle [34](#)
Software Version [42](#)
Source Button Names [20](#)
Source Names [20](#)
Specifications [45, 47](#)
GPI I/O [47](#)
Serial Port [47](#)
Tally [47](#)
Status [42](#)
System Real-Time Clock [43](#)

T

Tallies [26](#)
Tallies, GPO [38](#)
Temperature OK [42](#)
Time-Clock [24](#)
Timecode [39, 42](#)
Trans Clear [32](#)
Transition Area [32](#)
Auto Remove Key [32](#)
Transition Rate Units [35](#)
Transitions [38](#)
GPO Trigger [38](#)
Trigger GPO [38](#)
TSL UMD [20](#)
TSL UMD Port [42](#)

U

User Buttons [35](#)

V

Video Inputs [19–20](#)
Auto Key [19](#)
Button Names [20](#)
Video Inputs, GPI Device Control [22](#)
Video Inputs, Names [20](#)
Video Input Type [19](#)
Video Mode [16, 42](#)
Setup [16](#)
Video Output, Ancillary Data [23](#)
Video Output, Clean Feed [23](#)
Video Output, MultiViewer [24](#)
Video Outputs [23](#)
Video Server Control [10](#)
Video Source, Bus Map [21](#)

X

XPression Control [10](#)