

# Camera Control Unit

## Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference.

HDCU3100  
HDCU3170

---

# Table of Contents

<b>Overview</b> .....	<b>3</b>
System Configuration .....	4
<b>Location and Function of Parts</b> .....	<b>8</b>
Front Panel .....	8
Rear Panel .....	10
Option Kits .....	12
<b>Status Display</b> .....	<b>13</b>
Displaying the Status Screen .....	13
Status Display Screen .....	13
<b>Menu Settings</b> .....	<b>15</b>
Changing Menu Item Settings .....	15
Menu Tree .....	17
Menu List .....	21
<b>Appendix</b> .....	<b>47</b>
Precautions .....	47
Digital Triax Transmission (HDCU3170) .....	47
Error Messages .....	47
<b>Specifications</b> .....	<b>48</b>
HDCU3100/HDCU3170 .....	48
HKCU-FB30 .....	49
HKCU-SFP30 .....	49
HKCU-SM30 .....	50

---

# Overview

The HDCU3100 Camera Control Unit connects to an HDC3500 Color Camera, HDC3100 Fiber Color Camera, or HDC2000-series<sup>1)</sup> or HSC300RF/100RF HD Color Camera, with an optical fiber cable, and carries out signal processing, provides an interface with external equipment, and supplies power to the camera.

The HDCU3170 Camera Control Unit connects to an HDC3500 Color Camera<sup>2)</sup> or HDC3170 Triax Color Camera, with a triax cable, and carries out signal processing, provides an interface with external equipment, and supplies power to the camera.

The unit is equipped with a down-converter for converting HD signals<sup>3)</sup> transferred from the camera to SD signals<sup>4)</sup> and an up-converter for converting SD signals to HD signals, which give the unit the flexibility to operate in both high-definition and standard-definition camera systems.

The unit may be combined with an RCP-1500/1000 series Remote Control Panel (optional) to form a camera control system. In addition, by combining the unit with an MSU-1000/1500 Master Setup Unit (optional), you can form a system capable of controlling multiple cameras.

Operation in an IP transmission system is also supported by attaching the HKCU-SFP30 ST-2110 Interface Kit (optional) to the HDCU3100/HDCU3170.

Connection with Sony cameras that support optical fiber transmission over a single-mode fiber cable is also supported by attaching the HKCU-SM30 Single Mode Fiber Connector Kit (optional).

In addition, the HDCU3170 can support both fiber and triax transmission by attaching the HKCU-FB30 Optical Fiber Connector Kit (optional).

- 1) HDC2000 series: HDC2000/2580/2500/2400/1700
- 2) Attachment of the optional HKC-TR37 Triax Transmission Adaptor and HKC-CN50 Side Panel Attachment Kit is required.
- 3) HD (high-definition) signals: Generic name for 1125-/750-line HDTV signals.
- 4) SD (standard-definition) signals: Generic name for NTSC/PAL signals, 525/625 component signals, and 525/625 composite signals.


\* Some models may not be available in certain countries or regions.

# System Configuration

## Note


Production of some of the peripherals and related devices shown in the figures may have been discontinued. For advice on choosing devices, please contact your Sony representative or dealer.

## Connection example (optical fiber transmission)

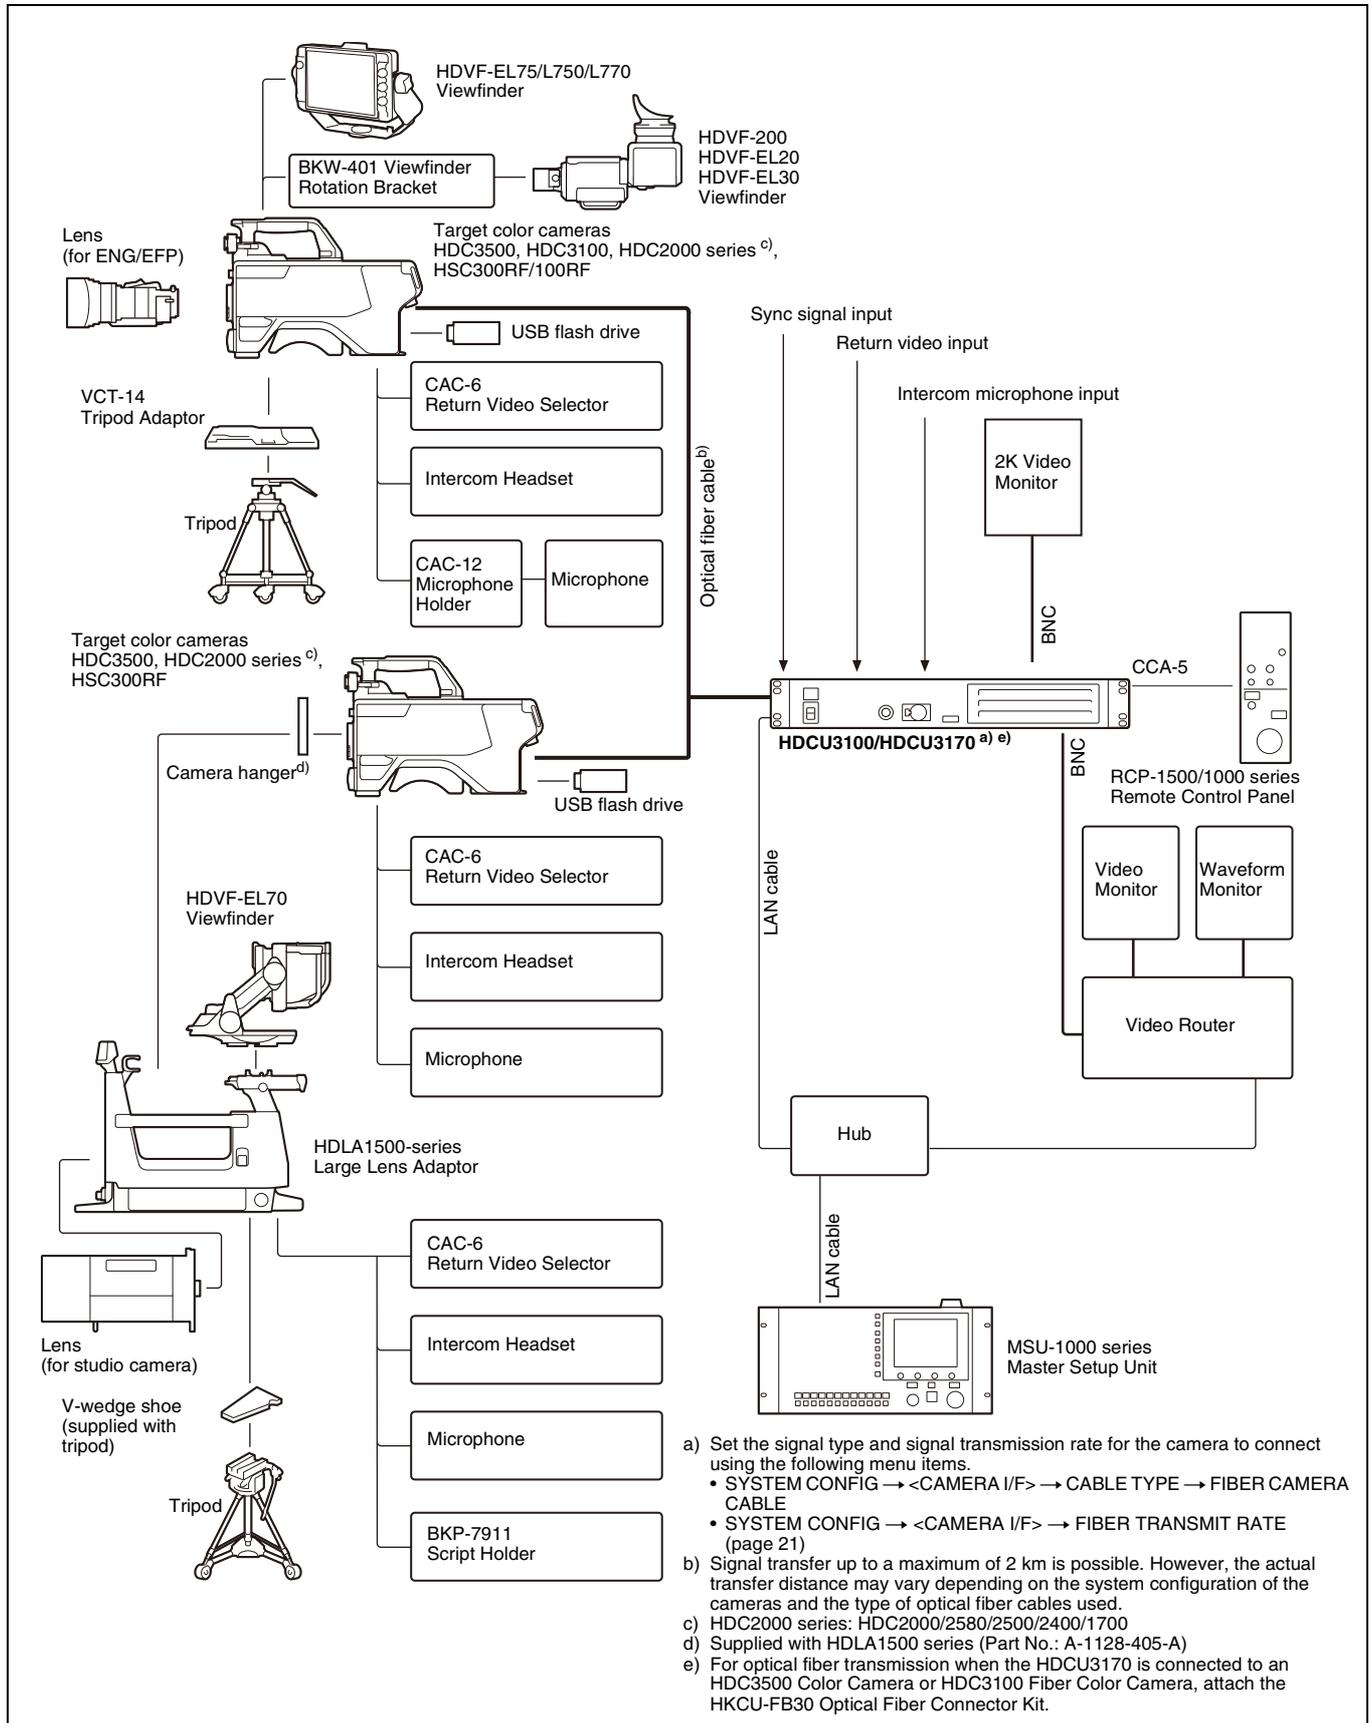


- Set the signal type and signal transmission rate for the camera to connect using the following menu items.
  - SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE → FIBER CAMERA CABLE
  - SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE (page 21)
- Signal transfer up to a maximum of 2 km is possible. However, the actual transfer distance may vary depending on the system configuration of the cameras and the type of optical fiber cables used.
- HDC2000 series: HDC2000/2580/2500/2400/1700
- Supplied with HDLA1500 series (Part No.: A-1128-405-A)
- For optical fiber transmission when the HDCU3170 is connected to an HDC3500 Color Camera or HDC3100 Fiber Color Camera, attach the HKCU-FB30 Optical Fiber Connector Kit.


## Connection example (digital triax transmission)

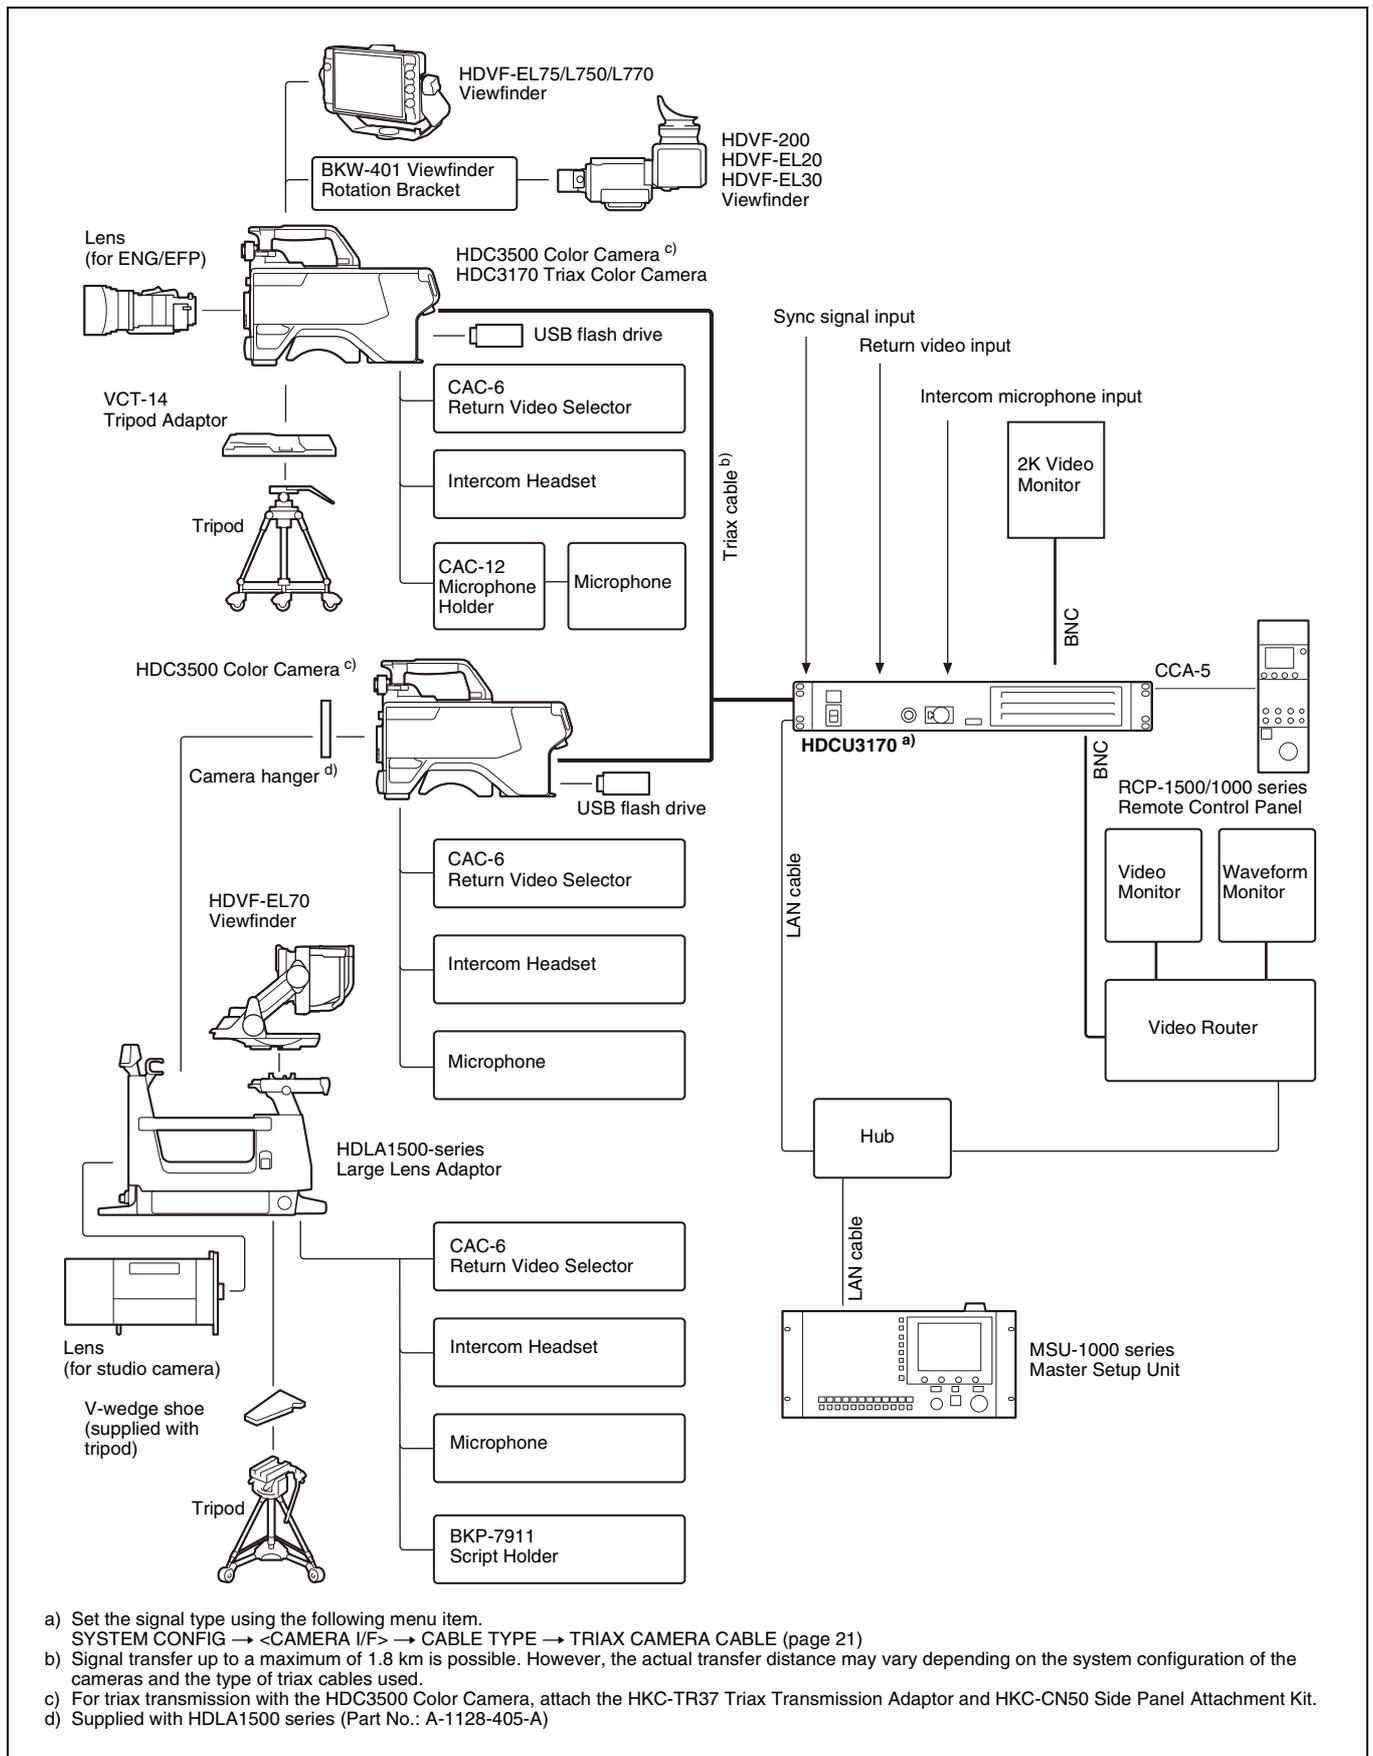


## Connection example (IP connection)

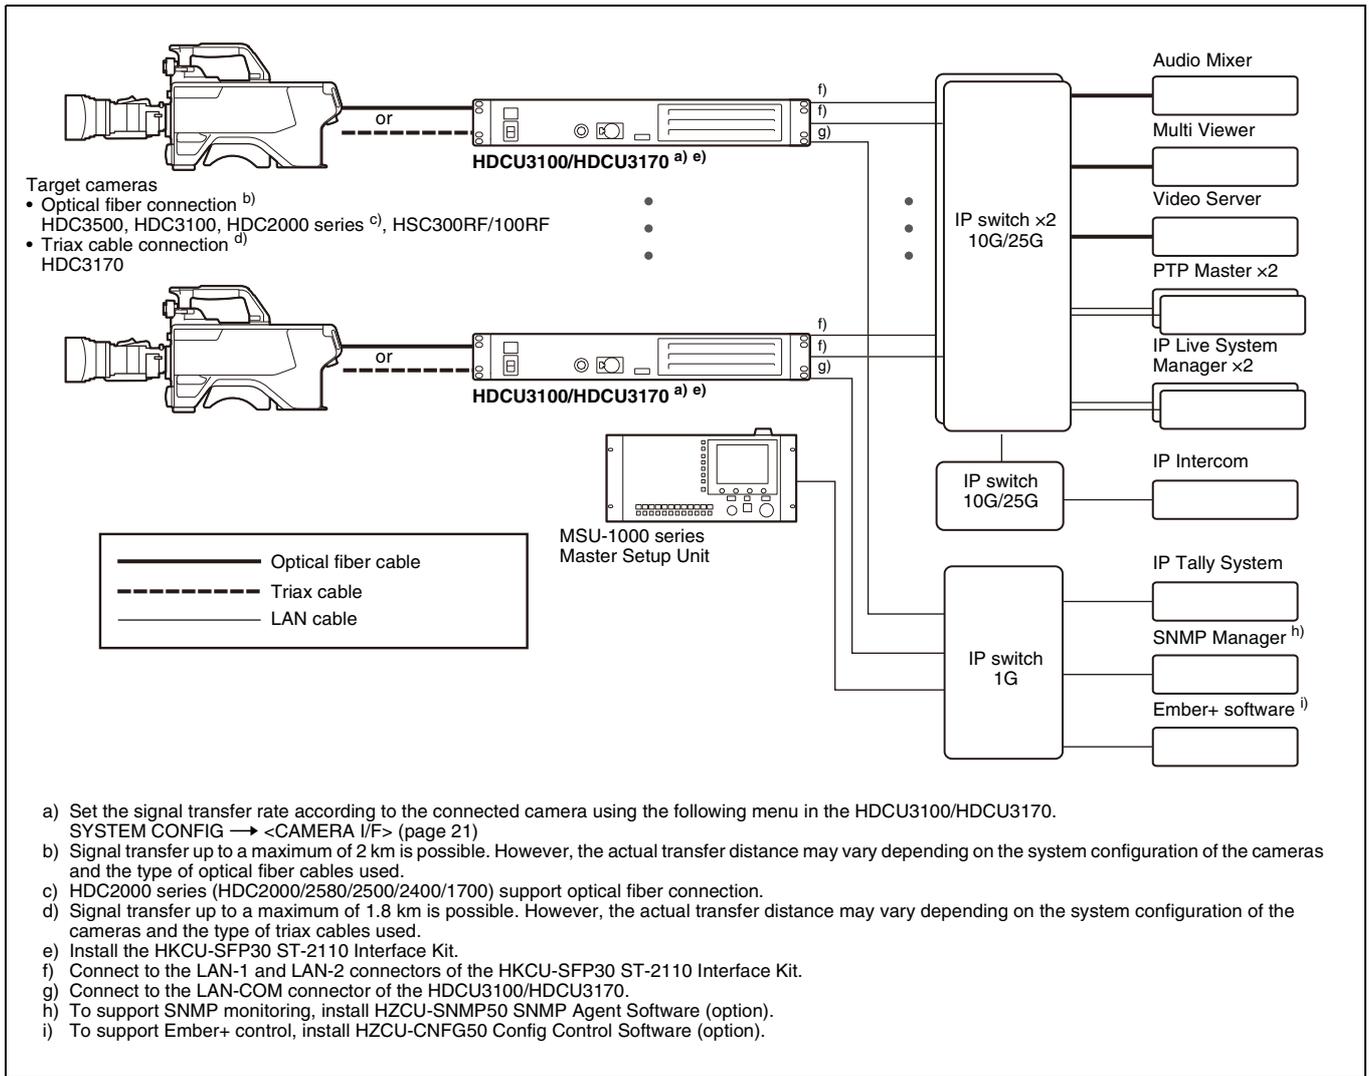


## Connection example (coax connection)

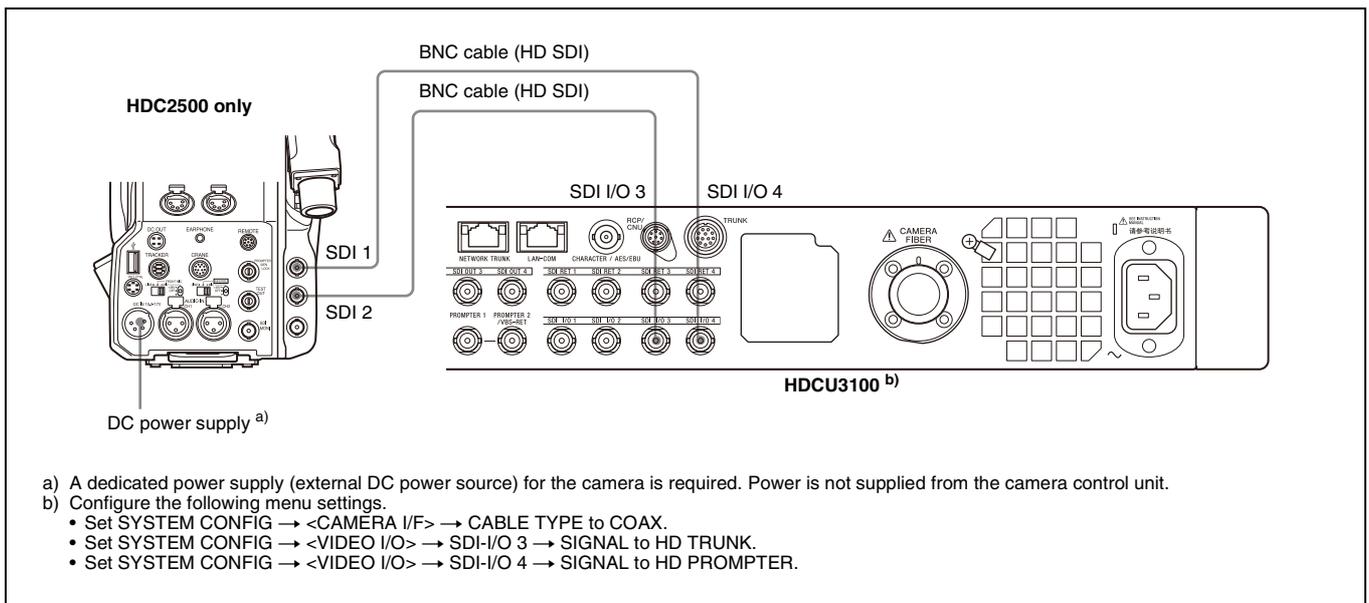

## Connection example (coax (HDCE) connection)

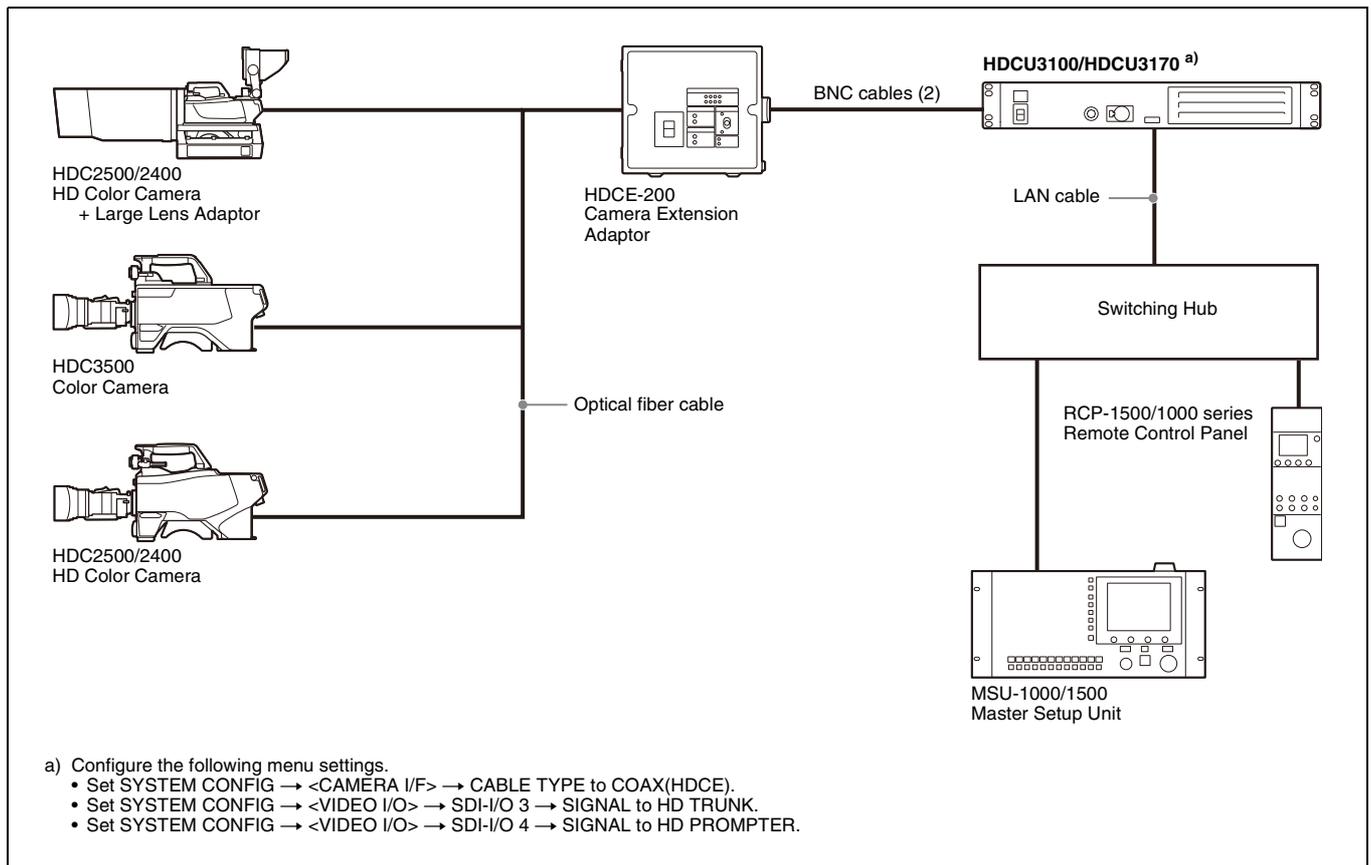


## Connection example (single-mode fiber connection)

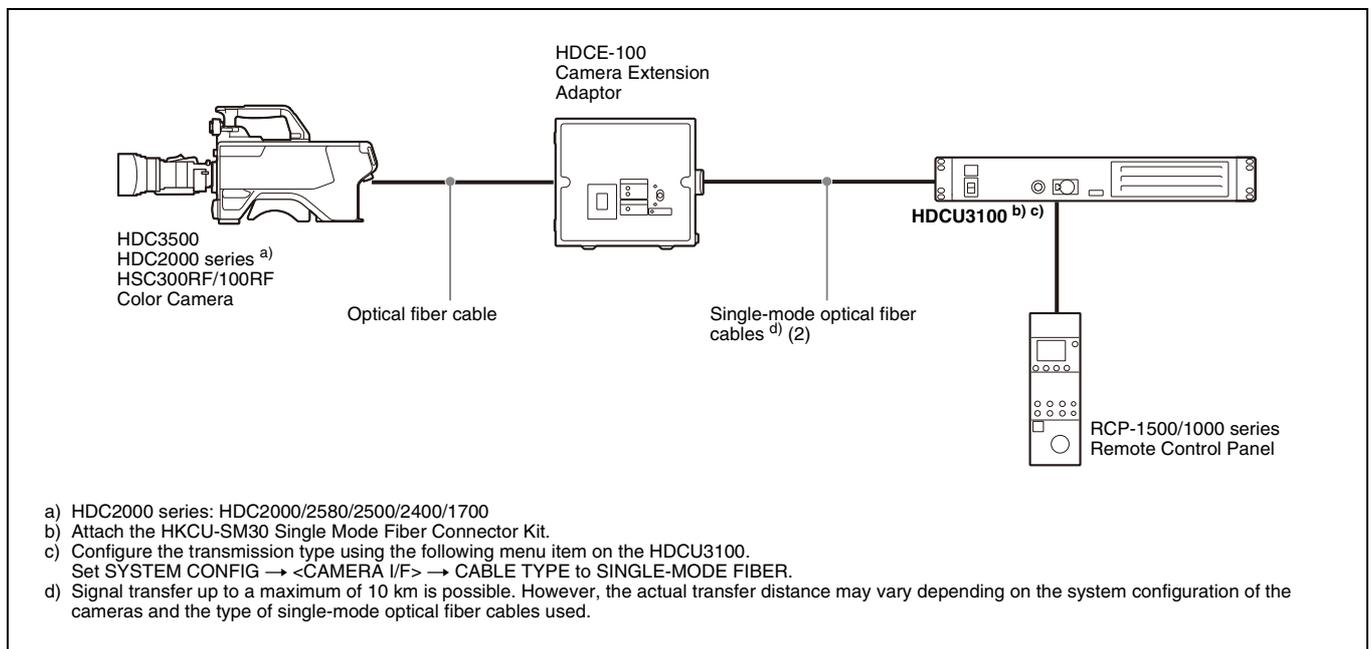


# Location and Function of Parts

## Front Panel

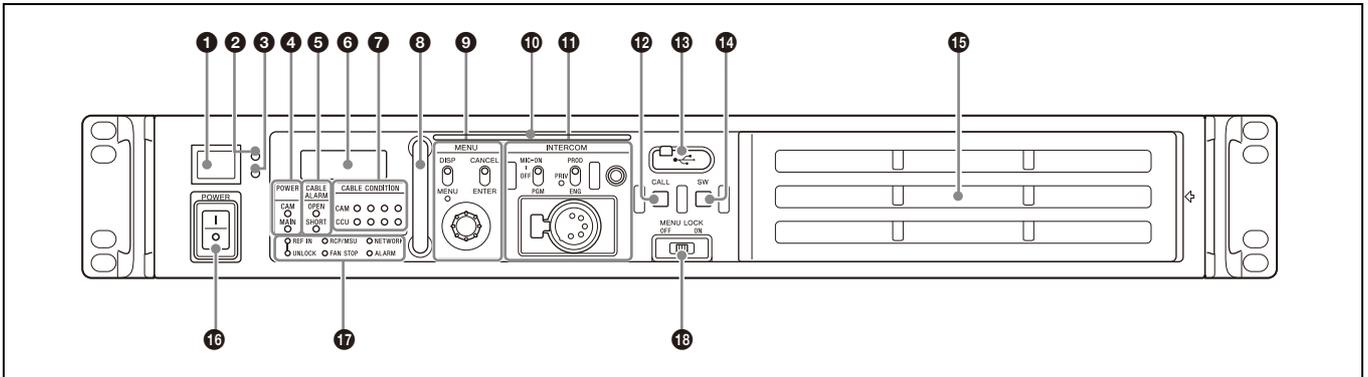

### 1 Red tally indicator

Lights in red when this unit receives a red tally signal. You can attach the supplied number plate here.

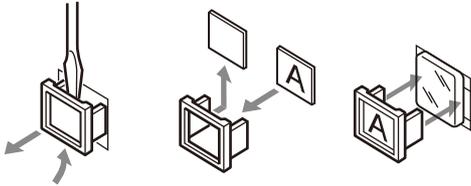

### 2 Yellow tally indicator

Lights in yellow when this unit receives a yellow tally signal.

### 3 Green tally indicator

Lights in green when this unit receives a green tally signal.

### 4 POWER indicators

**CAM:** Lights when power is being supplied to the camera.  
**MAIN:** Lights when the unit is turned on. In addition, this flashes when a fan error occurs.

### 5 CABLE ALARM indicators

**OPEN:** Lights up when a camera is not connected to the CAMERA FIBER connector on the rear panel of this unit via an optical fiber cable (HDCU3100) or to the CAMERA TRIAX connector via a triax cable (HDCU3170). Power is not supplied to the camera while this indicator is lit.

**SHORT:** Lights up when an overcurrent flows through the optical fiber cable (HDCU3100) or triax cable (HDCU3170). Power is not supplied to the camera while this indicator is lit.

### 6 CCU number display

Displays the camera number set in the CCU menu.

### 7 CABLE CONDITION (signal reception status) indicators

Indicates the communication status of the camera (CAM) and camera control unit (CCU).

### Optical fiber transmission

**When the two indicators on the right (green) are lit:** Reception status is excellent.

**When the second indicator from the right (green) is lit:** Reception status is good.

**When the second indicator from the left (yellow) is lit:** Reception status is low.

**When the indicator on the left (red) is lit:** Reception status is at the lowest level.

### Triax transmission

**When the two indicators on the right (green) are lit:** Cable reception status is excellent.

**When the second indicator from the right (green) is lit:** Cable reception status is good.

**When the second indicator from the left (yellow) is lit:** Cable reception status is low.

**When the indicator on the left (red) is lit:** Cable reception is poor or close to the guaranteed cable transmission limit.

**When all indicators are not lit:** The guaranteed cable transmission limit has been exceeded or the cable is OPEN circuit.


### 8 Guard bar

#### Note

Do not pull the guard bar with excessive force.

### 9 MENU control block

DISP/MENU lever and indicator  
 CANCEL/ENTER lever

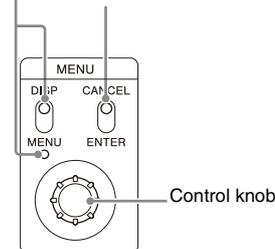

### DISP/MENU lever and indicator

Selects the status display or setup menu display. In setup menu mode, the indicator turns on.

- **CANCEL/ENTER lever**

In setup menu mode, used to cancel and enter settings.

- **Control knob (rotary encoder)**

In status screen mode, used to change the displayed page. In setup menu mode, used to move the cursor on a page and to change menu settings.

Pushing the control knob has the same function as setting the CANCEL/ENTER level to ENTER.

- ⑩ **SIGNAL BAR indicator**


Indicates the output status of the video signal.

**During gray signal output:** Off

**During color bar output:** Lights in the color specified with the MAINTENANCE → <FRONT PANEL> → SIGNAL BAR → READY COLOR menu item.

**During camera video output:** Lights in a white flowing pattern.

- ⑪ **INTERCOM audio input/output and control block**

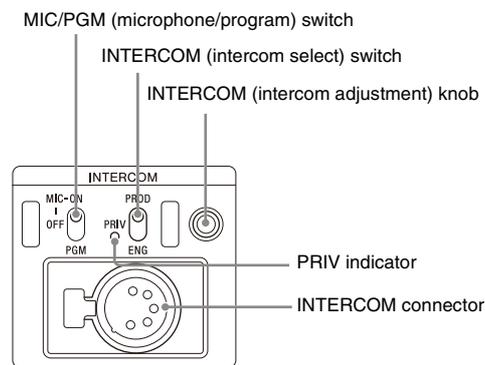

- **INTERCOM (intercom adjustment) knob**

Adjusts the headset audio level.

- **MIC/PGM (microphone/program) switch**

**ON:** Turns the headset microphone on.

**OFF:** Turns the headset microphone off.

**PGM:** Selects program audio output.

- **INTERCOM (intercom select) switch**

Selects the intercom signal input/output connection source for the INTERCOM connector on the front panel.

**PROD:** Connects the producer line.

**PRIV:** Blocks the connection to the producer line or engineer line, allowing private intercom talk between the CCU and the camera.

**ENG:** Connects the engineer line.

- **PRIV (private) indicator**

Lights when the intercom is in private mode.

- **INTERCOM connector (XLR 5-pin)**

Connects the intercom headset.

- ⑫ **Call button**

When pressed, this outputs a call signal to the camera or external control device (the RCP-1500/1000 series Remote Control Panel, etc.) that are connected to this unit. Use this when you want to call and speak with the camera operator or external control device operator via intercom. This button lights in red when it is pressed or the call button of other equipment is pressed.

- ⑬ **USB port**

Used to connect to a USB device.

- ⑭ **Assignable button**

You can set a function for this button via the CCU menu.

- ⑮ **Filter cover**

Press the filter cover in the direction of the arrow while pulling it to remove it.

The filter (black sponge) is placed under the cover. If the filter becomes dirty, you can remove it and clean it with cold or warm water. When using a detergent, use a neutral solution. Be sure to dry the filter thoroughly before replacing it on the unit.

- ⑯ **POWER switch**

Turns the entire camera system on and off, including the unit, the camera, and the RCP-1500/1000 series Remote Control Panel connected to the REMOTE connector of this unit.

Switch to **I** to turn the power on, and switch to **O** to turn the power off.

- ⑰ **Status display indicators**

**REF IN (green):** Indicates presence of reference input signal.

**UNLOCK (red):** The input reference is not locked.

**RCP/MSU:** Displays the status when there is a remote control panel connected.

**On:** Indicates that external control equipment (MSU-1000/1500 Master Setup Unit, RCP-1500/1000 series Remote Control Panel, or other equipment) is connected.

**Off:** Indicates that external control equipment is not connected.

*For details, see "NETWORK menu" (page 40).*

**NETWORK:** Displays the network genlock status when using the HKCU-SFP30 ST-2110 Interface Kit.

**Low-speed flashing:** PTP master not detected

**High-speed flashing:** Genlock initiated

**Lit:** Genlock achieved

**Not lit:** Network genlock setting disabled


**ALARM:** Lights when various errors occur.

**FAN STOP:** Lights when the fan is stopped.

- ⑱ **Menu lock switch**

Locks out operation of the front panel menu operation area.

## Rear Panel

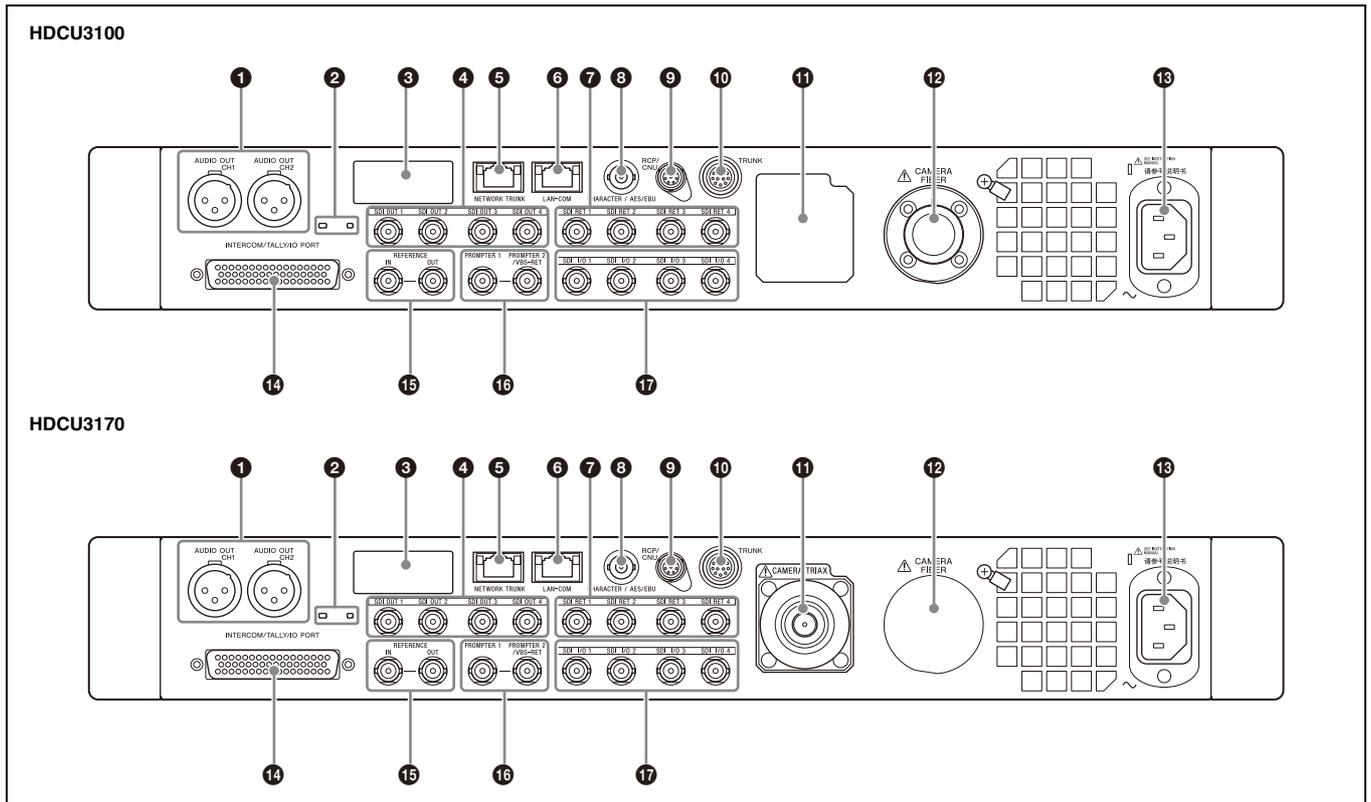

### 1 AUDIO OUT CH1, CH2 (audio output 1, 2) connectors (XLR 3-pin)

Used to output the audio signal to the AUDIO IN connectors of the video camera.

### 2 Rear indicator

Displays calls and statuses.

### 3 Option kit mounting port

One of the following option kits can be attached.

- HKCU-SFP30 ST-2110 Interface Kit
- HKCU-SM30 Single Mode Fiber Connector Kit

For an overview of option kits, see "Option Kits" (page 12).

### 4 SDI OUT (3G/HD/SD SDI output) 1/2/3/4 connectors

The signal from the video camera may be output as four 3G SDI signals, HD SDI signals or SD SDI signals. They can output signals with superimposed text characters and markers.

For details on settings, contact a Sony service or sales representative.

### 5 NETWORK TRUNK connector (RJ-45 8-pin)

Used to connect the device connected to the NETWORK TRUNK connector of a camera with the network connection device.

### 6 LAN-COM connector (RJ-45 8-pin)

Used to connect to a LAN. Connect a LAN hub (10BASE-T/100BASE-TX), using a LAN cable (shielded type of category 5 or more).

### 7 SDI RET (3G/HD/SD SDI return video input) 1/2/3/4 connectors (BNC-type)

Four different 3G/HD/SD SDI return video input signals may be received independently. The selection of RET 1 to 4 is made by the return switch of the video camera. The aspect ratio can also be selected for an SD signal.

The type of input signal on RET 1 to 4 may be set individually using the setup menu, or using the MSU-1000 series Master Setup Unit.

For details on the setup menu, contact a Sony service or sales representative.

Refer also to the Master Setup Unit manual.

### 8 CHARACTER (character output) / AES/EBU connector (BNC-type)

**CHARACTER:** Outputs the self-diagnostic results or setup menu of the unit as an SD analog video signal.

**AES/EBU:** Outputs the AES/EBU format digital audio signal that is input to the video camera.

### 9 RCP/CNU connector (round 8-pin)

Used to connect to an MSU-1000 series Master Setup Unit, CNU-700 Camera Command Network Unit, or RCP-1500/1000 series Remote Control Panel via a CCA-5 Connection Cable. Control signals are sent and received via this connector. When using an RCP-1500/1000 series unit, power is also supplied.

### 10 TRUNK connector (round 12-pin)

Used to connect to the CCU connector on a camera via an RS-232C or RS-422A interface. Communication with up to two channels is available.

### 11 HDCU3100: Option kit mounting port

The optional HKCU-SM30 Single Mode Fiber Connector Kit can be attached.

*For an overview of option kits, see "Option Kits" (page 12).*

### 11 HDCU3170: CAMERA TRIAX connector

Used to connect a video camera, using a triax cable. All video camera signals, including power supply, control, video, and audio, are sent and received over one triax cable.

### 12 HDCU3100: CAMERA FIBER connector

Used to connect a video camera, using an optical fiber cable. All video camera signals, including power supply, control, video, and audio, are sent and received over one optical fiber cable.

#### Note

Dust on the connection surface of the optical fiber cable may result in transmission errors. When not connected, always cover the end of the connector with the supplied cap.

### 12 HDCU3170: Option kit mounting port

The optional HKCU-SM30 Single Mode Fiber Connector Kit can be attached.

*For an overview of option kits, see "Option Kits" (page 12).*

### 13 ~ AC IN (AC power input) connector

Use the specified AC power cord to connect to an AC power supply. The AC power cord can be secured to this unit, using the plug holder (optional).

### 14 INTERCOM/TALLY/IO PORT (intercom / tally / input/output) connector (D-sub 50-pin)

Used to input and output intercom, tally, and program audio signals. Connect to the intercom/tally/program audio connector of the intercom system.

**REAR PREVIEW function:** Pin 10 is assigned for the output pin of the REAR PREVIEW function.

### 15 REFERENCE IN/OUT connectors (BNC-type)

Input an HD tri-level reference sync signal or SD reference signal (black burst signal, or black burst signal with 10-field ID) to the REFERENCE IN connector.

The input signal is output from the REFERENCE OUT connector as is (loop-through output). When not using loop-through output, terminate the unused connector at 75 ohms. When a sync signal is not input to the REFERENCE IN connector, an SD composite sync or HD tri-level sync signal generated by the internal sync signal generator will be output from the REFERENCE OUT connector.

### 16 INPUT area

#### 1 PROMPTER (tele-prompter input) 1/2 connectors (BNC-type)

Input the prompter signal of 1 channel or 2 channels depending on the setting of PROMPTER2/VBS-RET on the <REAR I/F> page of the SYSTEM CONFIG menu and PROMPTER CHANNEL MODE on the <TRUNK/PROMPTER> page of the MAINTENANCE menu. When PROMPTER2/VBS-RET is set to DISABLE, the input signal is output from the other connector as-is (loop-through). If loop-through output is not used, terminate the unused connector at

75 ohms. When PROMPTER2/VBS-RET is set to ENABLE, both connectors become inputs and they are terminated at 75 ohms inside the unit.

If the signal used is a 1.0 Vp-p, 75-ohm analog signal, it may be output from the PROMPTER OUT connector of the video camera with a frequency bandwidth of 5 MHz, regardless of signal format.

#### Note

Only the PROMPTER 1 connector functions on the HDCU3170.

#### 2 VBS-RET (VBS return video input) connector\* (BNC-type)

A single VBS return signal can be received independently.

\* This connector doubles as the PROMPTER 2 connector.

The RET selection is made by the return switch of the video camera. The type of input signal on each line of RET may be set individually using the setup menu, or using the MSU-1000 series Master Setup Unit. The aspect ratio may also be selected for SD signals.

*For details on setup menu operations, contact a Sony service or sales representative.*

*Refer also to the Master Setup Unit manual.*

*For details on how to select the signal, contact a Sony service or sales representative.*

#### 17 SDI I/O (3G/HD-SDI input/output) 1/2/3/4 connectors (BNC-type)

These can be used as return video inputs, HD prompter inputs, camera video signal outputs, and HD-TRUNK outputs. Set them in NETWORK TRUNK on the <TRUNK/PROMPTER> page of the MAINTENANCE menu according to the application.

## Option Kits


### Note

For safety, only a qualified technician with service training should perform tasks inside the unit.

For details about installation, contact a Sony service or sales representative.

### HKCU-FB30 Optical Fiber Connector Kit


This unit is an option kit that can be installed in the option kit mounting port ⑫ on the rear of the HDCU3170 and supports optical fiber transmission.

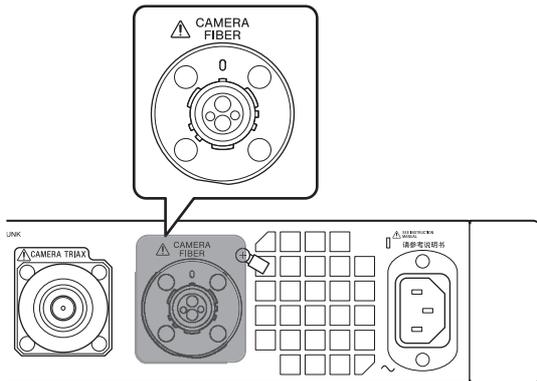

When a video camera is connected using an optical fiber cable, all video camera signals, including power supply, control, video, and audio, are sent and received over one optical fiber cable.

### HKCU-SFP30 ST-2110 Interface Kit

This unit is an option kit that can be installed in the option kit mounting port ⑬ on the rear of the HDCU3100/HDCU3170 Camera Control Unit and enables connection with SMPTE ST 2110 compliant devices.

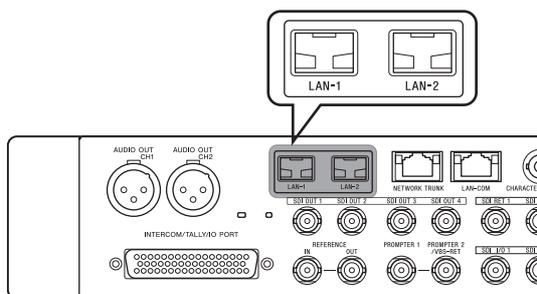

IP video signals and audio input/output, intercom, and network synchronization are performed using the LAN-1 and LAN-2 connectors (SFP+/SFP28). This enables three IP outputs and three IP inputs for HD signals on the HDCU3100/HDCU3170. For RCP/MSU device connection and IP tally input, use the LAN-COM connector.

The input/output signal format is set using <OUTPUT FORMAT3> and <RETURN FORMAT3> in the setup menu of the HDCU3100/HDCU3170.


### Notes

- HDCU3100/HDCU3170 software version 1.10 or later is required.
- An OTM-10GSR1 or other SFP+ module or SFP28 module is required to use IP output.


### HKCU-SM30 Single Mode Fiber Connector Kit

This unit is an option kit that can be installed in the option kit mounting port ⑪ on the rear of the HDCU3100 Camera Control Unit or in the option kit mounting port ⑬ on the rear of the HDCU3170, and supports single mode fiber transmission.

### HDCU3100

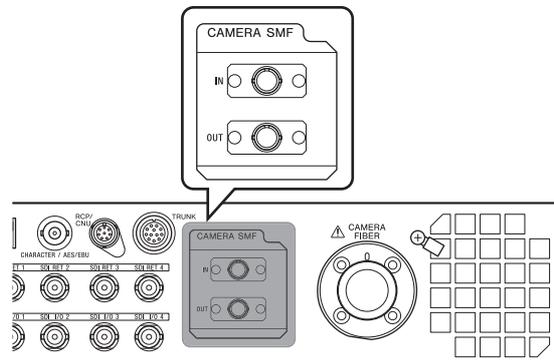

### HDCU3170

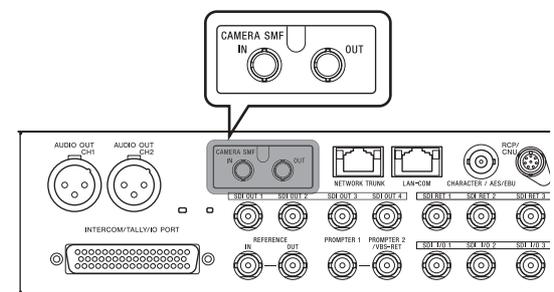

The CAMERA SMF IN connector inputs the video signal from the camera, audio (microphone) signal, HD-TRUNK signal, and NETWORK TRUNK signal.

The CAMERA SMF OUT connector outputs the return video signal to the camera, prompter video signal, program audio signal, and NETWORK TRUNK signal. The RS-422A and RS-232C interfaces are also supported.

### Notes

- HDCU3100/HDCU3170 software version 2.00 or later is required.
- Dust on the connection surface of the connector may result in transmission errors. When not connected, always cover the end of the connector with a cap.

# Status Display

The CCU system status can be monitored using a video monitor connected to the CHARACTER, SDI OUT 3, or SDI OUT 4 connector.

## Note


To use the SDI OUT 3 or SDI OUT 4 connector, set SYSTEM CONFIG → <OUTPUT FORMAT1> → SDI-OUT3 or SDI-OUT4 → MONITOR in the setup menu to M.

For information on monitoring and changing settings, see “Menu Settings” (page 15).

## Displaying the Status Screen

The menu screen is controlled using the knob and levers in the MENU control block on the front panel.

DISP/MENU lever

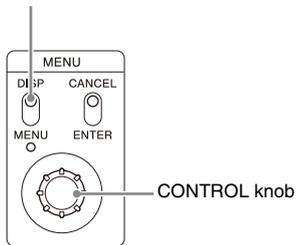

### To display the status screen

Set the DISP/MENU lever to the DISP position. The most recently viewed status screen page is displayed. (When first powered on, the camera settings page is displayed.) Turning the CONTROL knob changes the displayed page.

### To exit the status screen display


In status screen display mode, set the DISP/MENU lever to the DISP position.

## Status Display Screen

The following information is displayed on the status display screen.

- System status
- Input/output signal format information of each SDI connector
- Camera and unit audio status
- Camera and unit intercom status
- Warning display

## Camera settings

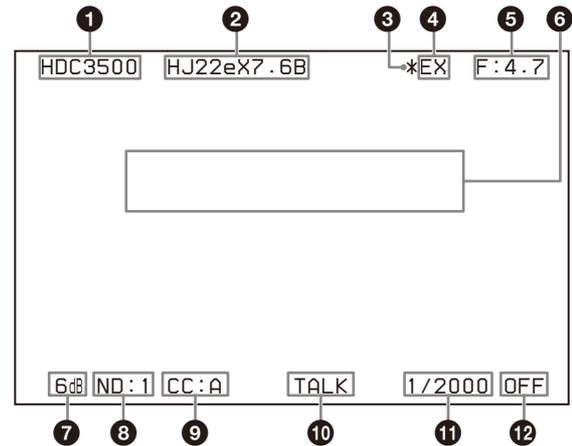

### 1 Camera name indication

Displays the name of the connected camera.

### 2 Lens file name indication

Displays the lens file name.

### 3 F drop indication

Displayed when an F drop occurs.

### 4 EX (lens extender) indication

Displayed during use of the lens extender.

### 5 F-stop value indication

Displays the lens F-stop value (iris value).

### 6 Camera auto control information area

**Top:** Displays the Auto Setup type and execution status.  
**Bottom:** Displays the execution item.

### 7 Gain value indication

Displays the video output signal gain setting value (dB).

### 8 ND filter indication

Displays the currently selected ND filter type.

### 9 CC filter indication

Displays the currently selected CC filter type.

### 10 Camera microphone status indication

Displayed when the camera microphone is on.

### 11 Shutter speed/Clear scan frequency indication

Displays the shutter speed. When ECS is on, displays the clear scan frequency.

### 12 Shutter/ECS indication

Displays the on/off state of the shutter/ECS.

## Notes

- Items that are turned off using the <DISPLAY> page settings of the VIDEO/MONITOR menu are not displayed.
- A “-” mark is displayed for each item when a camera is not connected.

## System status

```
*System Status*                01/06

Camera Format :1080/59.94P

Camera Cable :Connected
Cable Type  :Fiber Camera Cable
Power Supply :On
Cable Length :~100m

CAM            < OK
CCU            < OK

Reference    :Not Detected
              Unlock

CCU No. :96      RCP/MSU:Connected
```

**Camera Format:** Signal format of connected camera

**Camera Cable:** Camera cable connection status

**Camera Type:** Camera cable type

**Power Supply:** Camera power supply status

**Cable Length:** Cable length (fiber transmission only)

(Not displayed for TRIAX, COAX, and COAX (HDCE) cable type connections.)

**CAM:** Camera light sensor level (fiber transmission only)

**CCU:** Control unit light sensor level (fiber transmission only)

**Reference:** Reference signal format used and genlock status

("Not Detected" is displayed when a reference signal is not input)

**CCU No.:** CCU number setting status

**RCP/MSU:** RCP/MSU connection status

## Input/output signal format status of SDI connectors

### SDI-OUT connectors

```
*Multi Format1*                02/06

SDI-OUT

1:1080/59.94i (PsF)/RGB444/3G
  OETF:HLG_BT.2100 Color:BT.2020

2:1080/59.95i (PsF)/RGB444/3G
  OETF:HLG_BT.2100 Color:BT.2020

3:1080/59.95i (PsF)/RGB444/3G
  OETF:HLG_BT.2100 Color:BT.2020

4:1080/59.95i (PsF)/RGB444/3G
  OETF:HLG_BT.2100 Color:BT.2020
```

### SDI-I/O connectors

```
*Multi Format2*                03/06

SDI-I/O

1:1080/59.94i (PsF)/RGB444/3G
  OETF:HLG_BT.2100 Color:BT.2020

2:1080/59.95i (PsF)/RGB444/3G
  OETF:HLG_BT.2100 Color:BT.2020

3:(HD Trunk)

4:(Disable)
```

## IP-OUT connectors

```
*Multi Format2*                03/06

IP-OUT

1:C 1080/59.94P/3G-A
  OETF:HLG_BT.2100 Color:BT.2020
  SOURCE:CAMERA

2:M 1080/59.94P/3G-A
  OETF:HLG_BT.2100 Color:BT.2020
  SOURCE:CAMERA

3:C 1080/59.94P/3G-A
  OETF:HLG_BT.2100 Color:BT.2020
  SOURCE:HD TRUNK
```

## Camera and unit audio status

```
*Audio*                        04/06

Camera
  MIC Gain CH1 :60dB
              CH2 :60dB

CCU
  AES/EBU Out :AES/EBU
  Analog Out  :AES/EBU
```

**Camera MIC Gain CH1:** Camera microphone circuit 1 amp gain status

**Camera MIC Gain CH2:** Camera microphone circuit 2 amp gain status

**CCU AES/EBU Out:** Output format of the AES/EBU connector

**CCU Analog Out:** Output format of the analog output connector

## Camera and unit intercom status

```
*Intercom*                     05/06

Camera
  Engineer      :MIC On
  Producer      :MIC Off

CCU
  MIC/PGM      :MIC Off
  Line         :System
```


**Camera Engineer:** Camera microphone status of the ENG line of the camera

**Camera Producer:** Camera microphone status of the PROD line of the camera

**CCU MIC/PGM:** Status of MIC/PGM switch on the front of the unit

**CCU Line:** Intercom system connection status

## Warning display

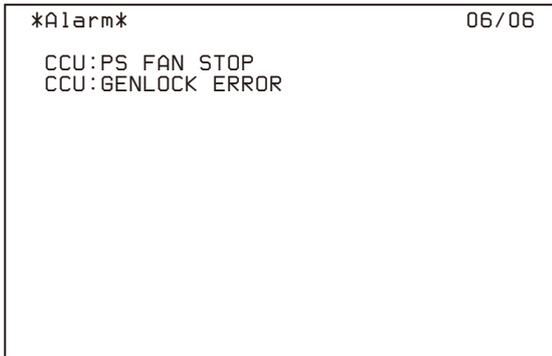

Displays any warning that occurs.

## Menu Settings


The CCU system and peripheral settings can be checked and modified using a video monitor connected to the CHARACTER, SDI OUT 3, or SDI OUT 4 connector.

### Note

To use the SDI OUT 3 or SDI OUT 4 connector, set SYSTEM CONFIG → <OUTPUT FORMAT1> → SDI-OUT3 or SDI-OUT4 → MONITOR in the setup menu to M.

## Changing Menu Item Settings

The menu screen is controlled using the knob and levers in the MENU control block on the front panel. Setting the CANCEL/ENTER lever to the ENTER position and pressing the CONTROL knob perform the same function.

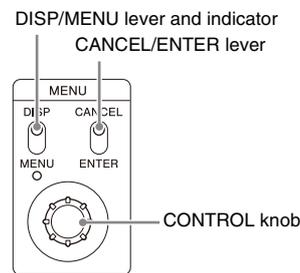


### To display a menu page

Set the DISP/MENU lever to the MENU position. When first powered on, the CCU MENU page is displayed.

When <OUTPUT FORMAT1> → SDI-OUT4 → MONITOR is set to C (characters are not added), you can hold the DISP/MENU lever in the MENU position for 3 seconds to force display of the CCU MENU.

### To display the CCU MENU page

In menu display mode, turn the CONTROL knob to move the pointer (➔) to TOP in the upper right corner of the menu page, then press the CONTROL knob. The CCU MENU showing the menu configuration is displayed.

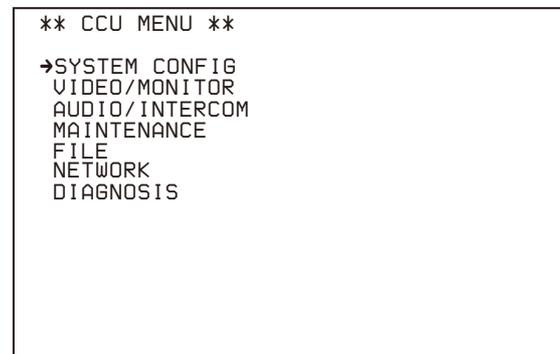

Menu name	Description
SYSTEM CONFIG	Input/output signal format and system-related settings
VIDEO/MONITOR	Video-related settings

Menu name	Description
AUDIO/INTERCOM	Audio- and intercom-related settings
MAINTENANCE	CCU configuration settings
FILE	CCU file-related settings
NETWORK	Network-related settings
DIAGNOSIS	Displays the unit status.


### To select an item in the CCU MENU

Turn the CONTROL knob to move the pointer (➡) to the desired menu item, then press the CONTROL knob. The most recently viewed page in the selected menu is displayed.

### To change the displayed page

- 1 Turn the CONTROL knob to move the pointer (➡) to the page number, then press the CONTROL knob.

The pointer (➡) changes to a flashing question mark (?).

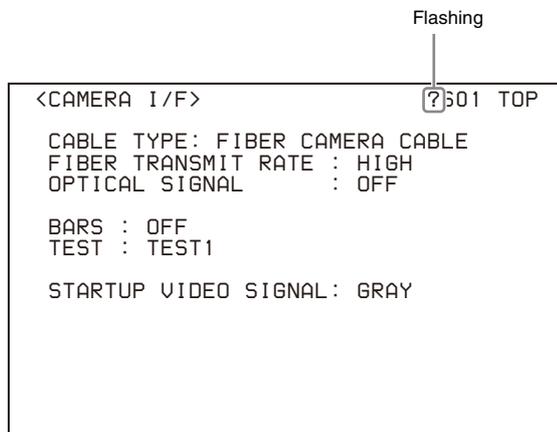

- 2 Turn the CONTROL knob to change the displayed page to the desired page, then press the CONTROL knob.

The question mark (?) changes back to the pointer (➡). Items on the page can now be selected and changed.

### To change a menu item setting

If a question mark (?) is displayed beside the page number, press the CONTROL knob to restore the pointer (➡). Items on the page can now be selected and changed.

- 1 Turn the CONTROL knob to move the pointer to the desired item, then press the CONTROL knob.  
The pointer (➡) changes to a flashing question mark (?).
- 2 Turn the CONTROL knob to change the setting.

#### To cancel a changed setting

Set the CANCEL/ENTER lever to the CANCEL position before pressing the CONTROL knob. The item is restored to its current setting.

#### To suspend menu changes

Set the DISP/MENU lever to the MENU position to exit the menu screen.  
The DISP/MENU lever can be set to the MENU position again to restart the operation.

- 3 Press the CONTROL knob.

The question mark (?) changes back to the pointer (➡), and the item setting is registered.

- 4 Repeat steps 1 to 3 to change other settings on the same page.

### To enter a character string

Some menu items require a character string input.

Moving the pointer (➡) to an item with a character string input and pressing the CONTROL knob displays a rectangular cursor and a list of selectable characters.

Turning the CONTROL knob moves the cursor between characters. The following menu item has character strings:

- VIDEO/MONITOR menu → <BAR CHARACTER> page → BAR CHARACTER

- 1 Move the text cursor to the input position, then press the CONTROL knob.

A second cursor is displayed in the character list.

- 2 Turn the CONTROL knob to move the cursor to the desired character, then press the CONTROL knob.

Repeat steps 1 and 2 to enter other characters.

- Select INS to insert a space character at the cursor position.
- Select DEL to delete the character at the cursor position.
- Select RET to return to step 1 without changing the string.
- Entering the maximum number of characters (up to the right edge) moves the cursor to ESC on the lower right of the character list.

- 3 Turn the CONTROL knob to move the cursor to END, then press the CONTROL knob.

The new input string is registered.

#### To cancel the character string setting

Turn the CONTROL knob to move the cursor to ESC, then press the CONTROL knob.

### To exit the menu display


In menu display mode, set the DISP/MENU lever to the MENU position.

# Menu Tree

## SYSTEM CONFIG menu

### Note


Items marked with "a)" are not available on the HDCU3170 in triax transmission mode.

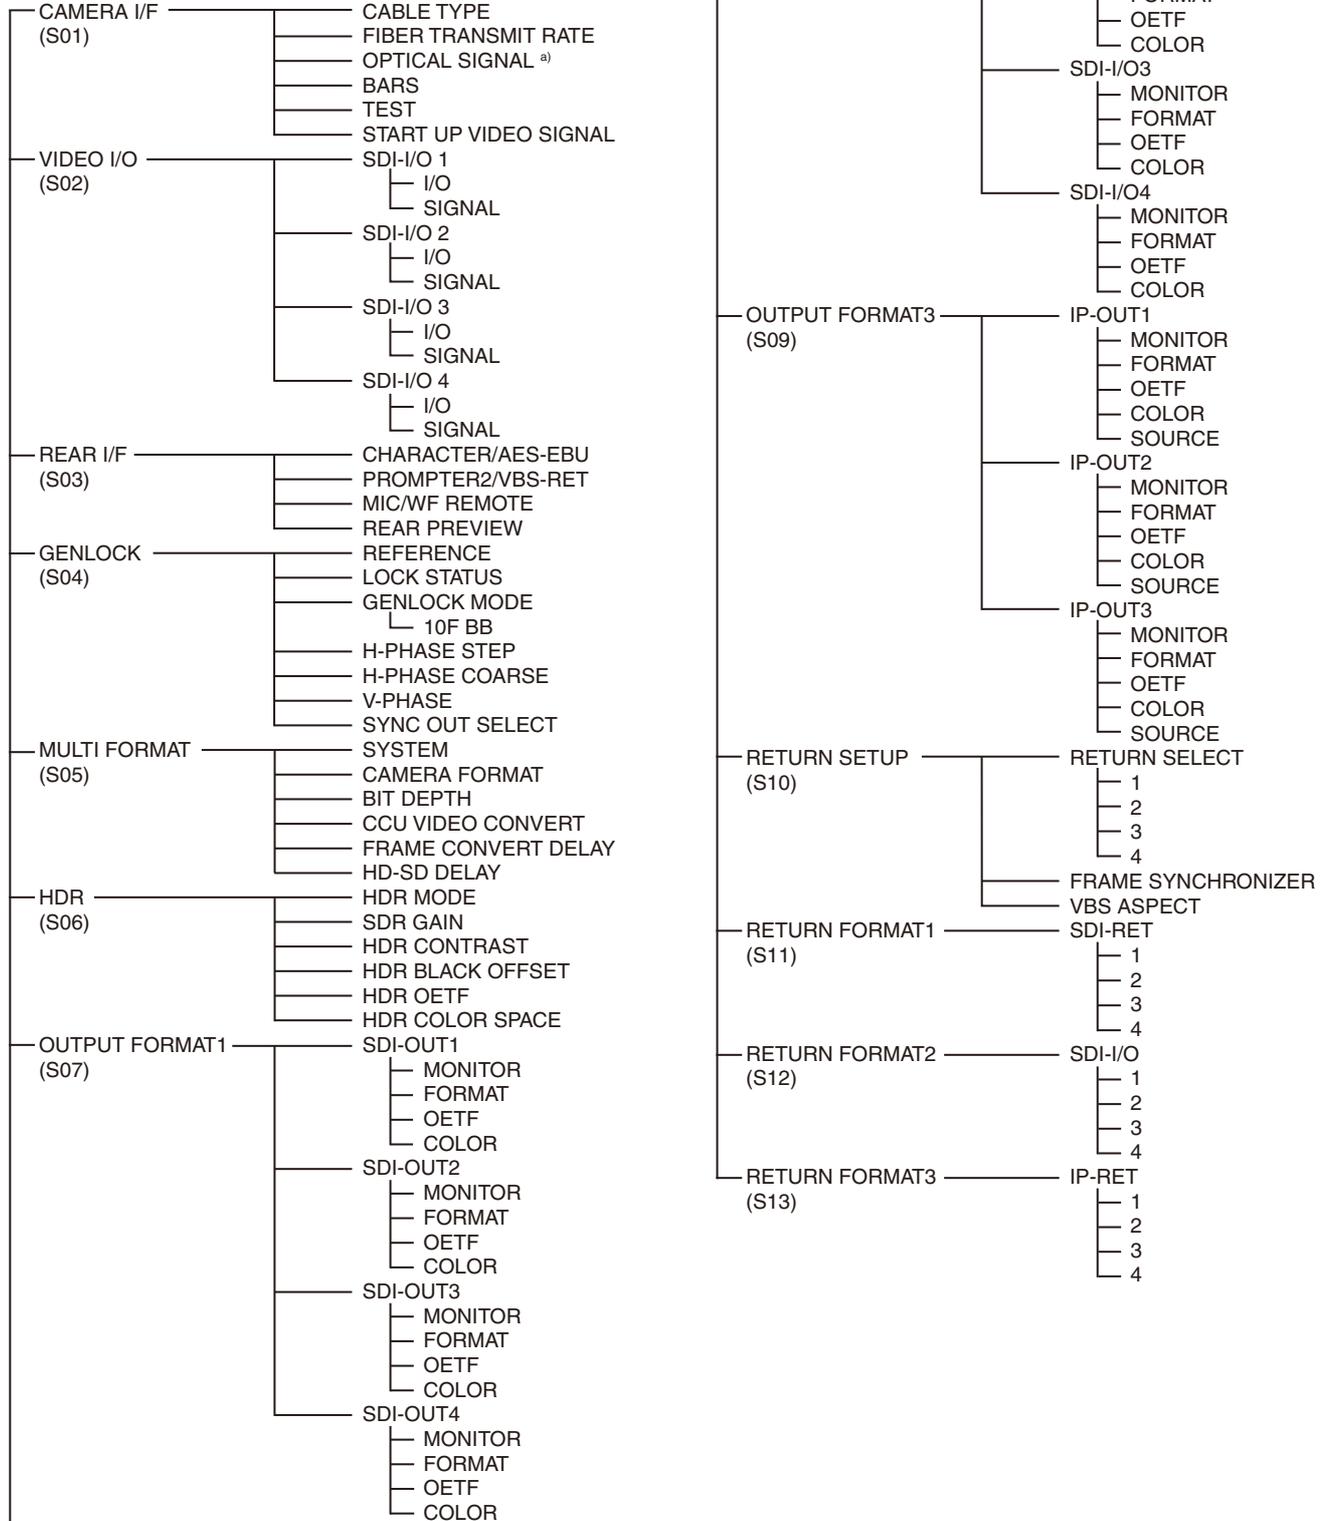


## VIDEO/MONITOR menu

### Note

Items marked with "a)" are not available on the HDCU3170 in triax transmission mode.

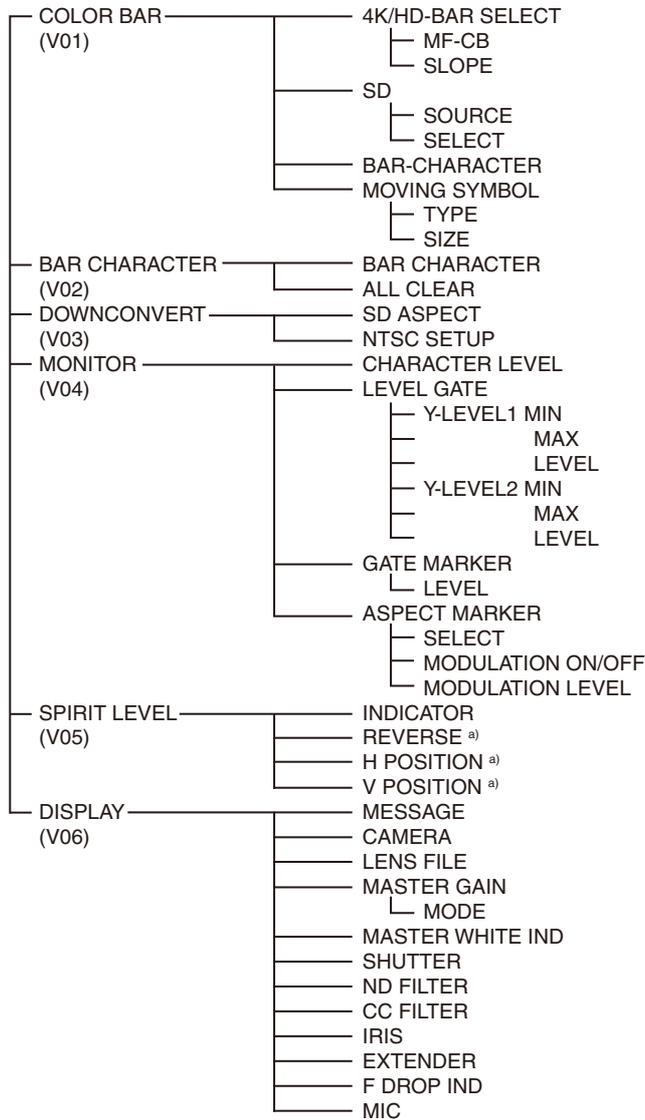


## AUDIO/INTERCOM menu

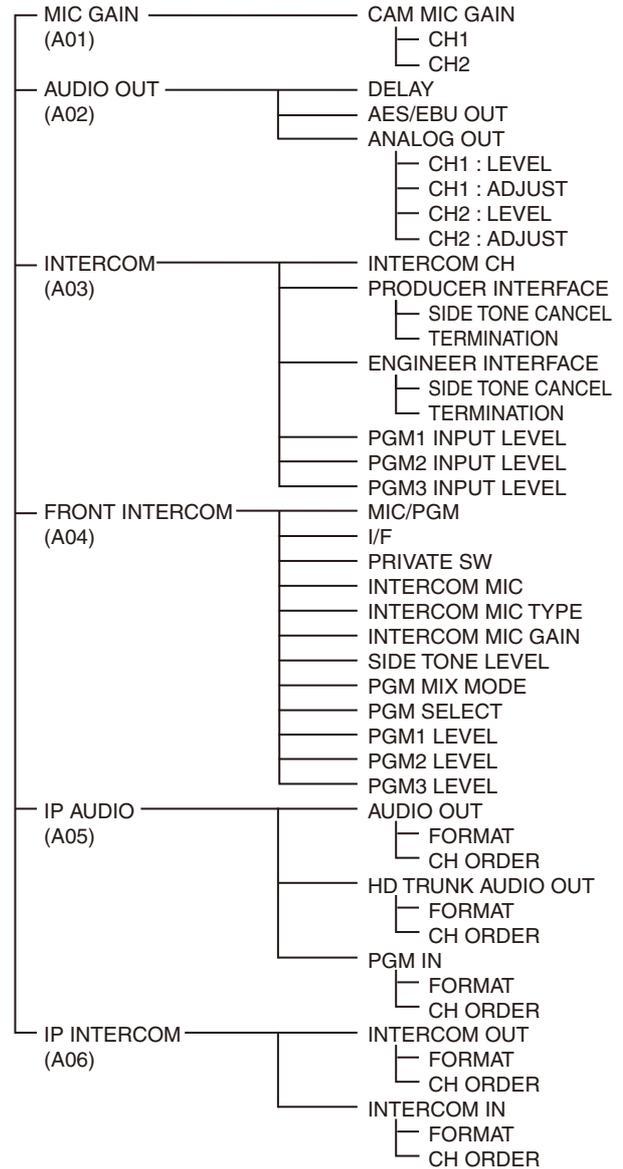


## MAINTENANCE menu

### Note


Items marked with "a)" are not available on the HDCU3170 in triax transmission mode.

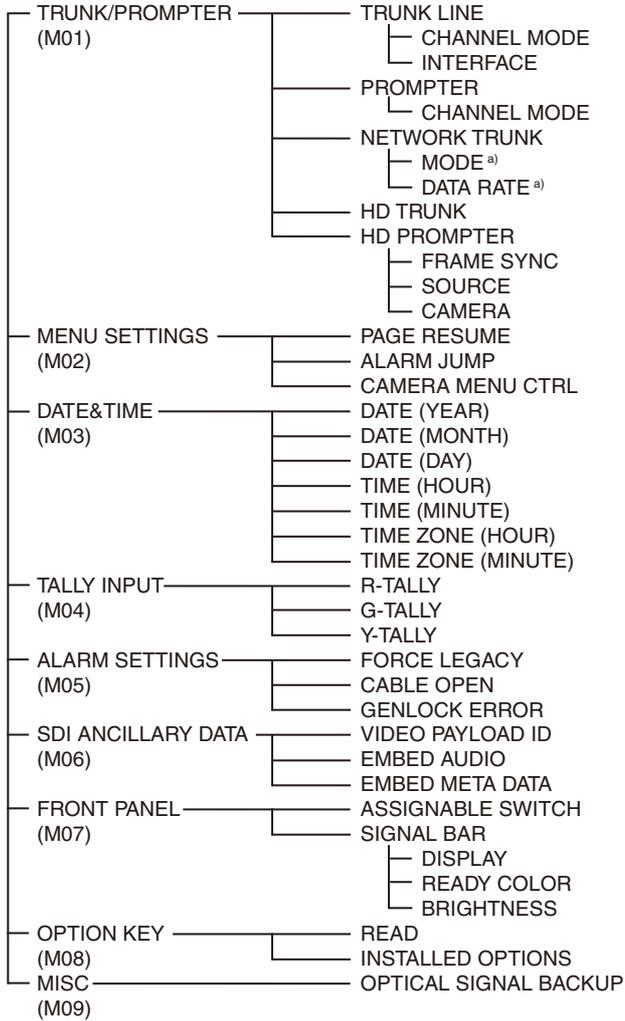


## FILE menu

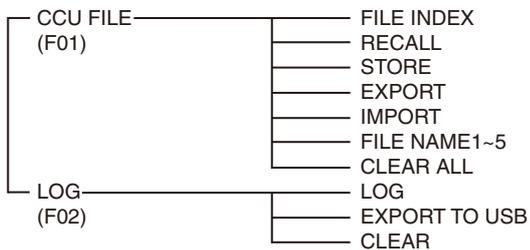


## NETWORK menu

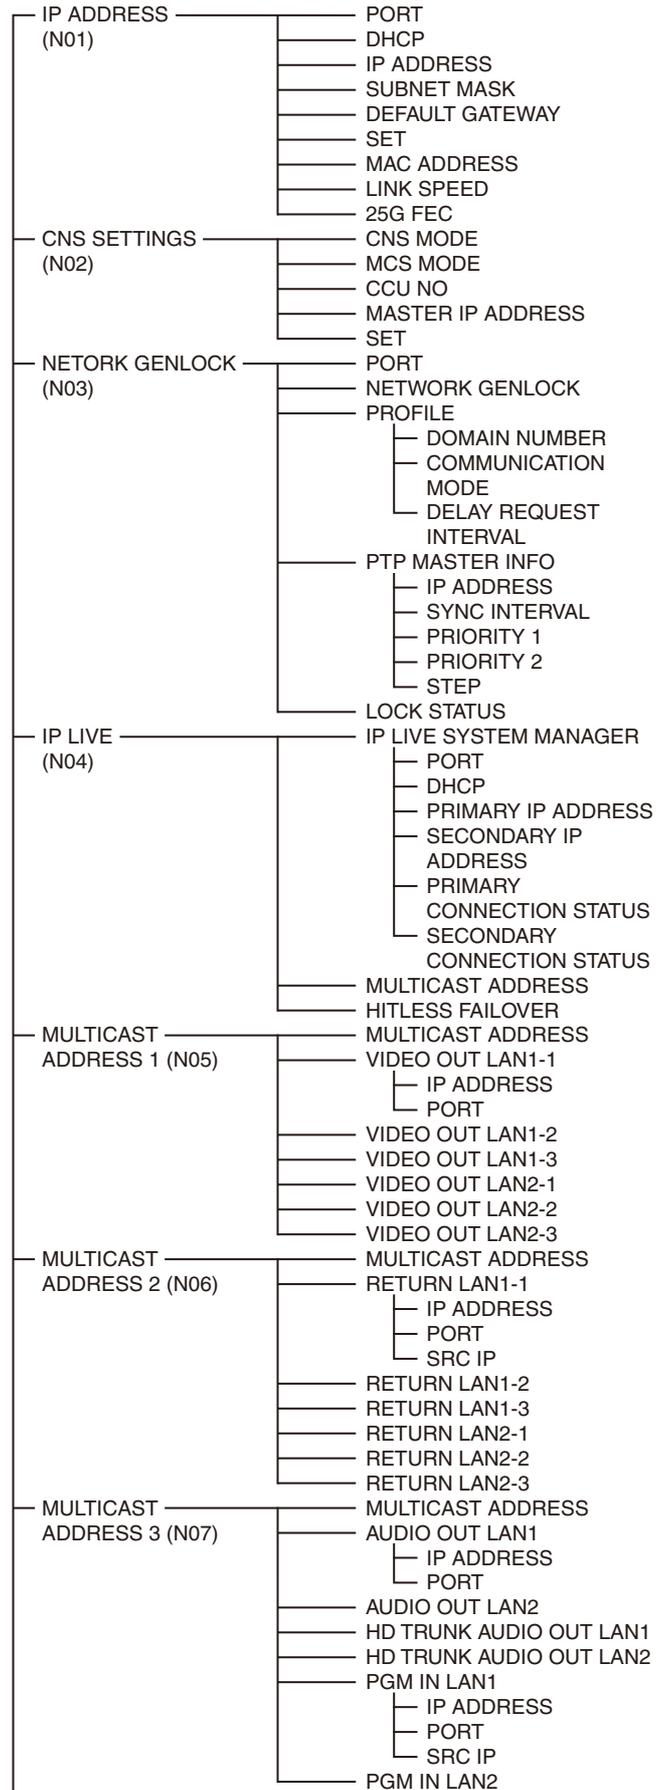

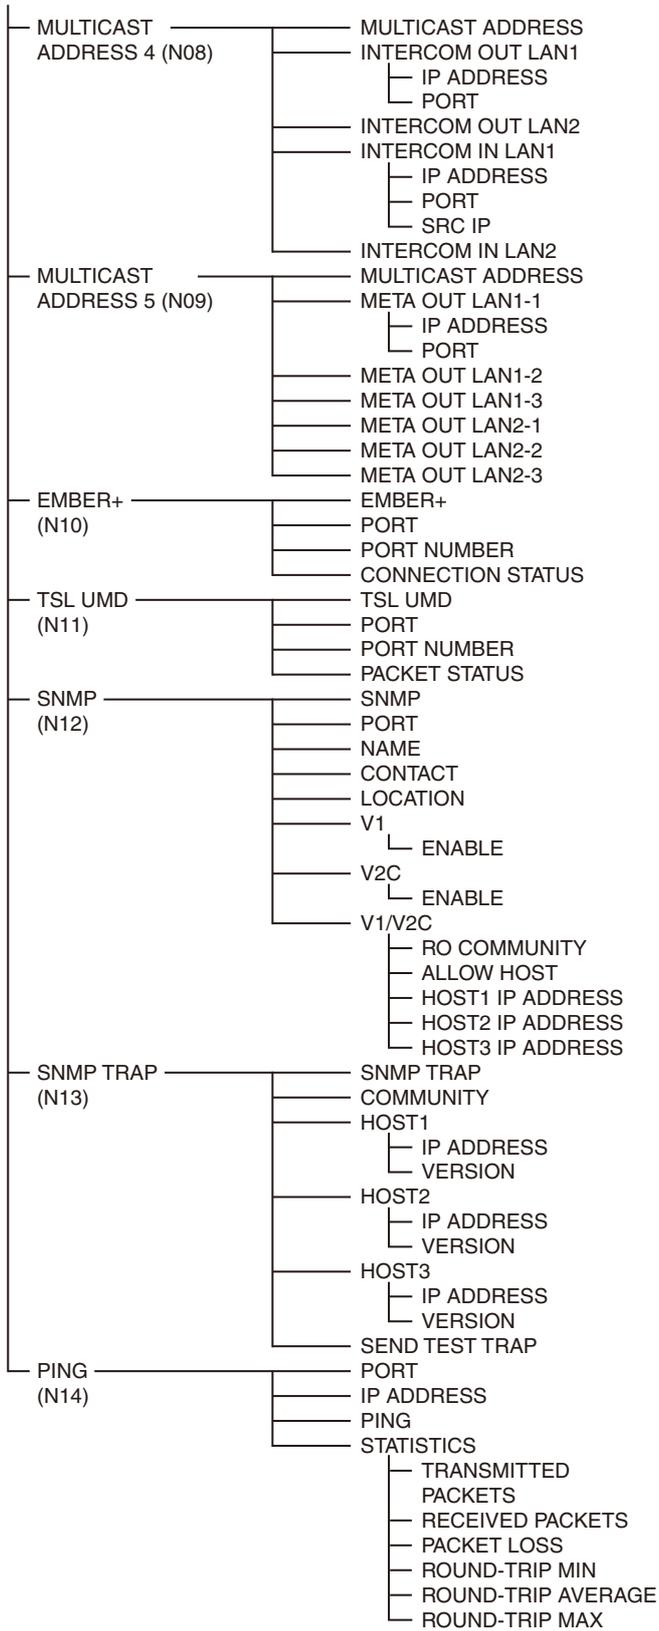

## DIAGNOSIS menu

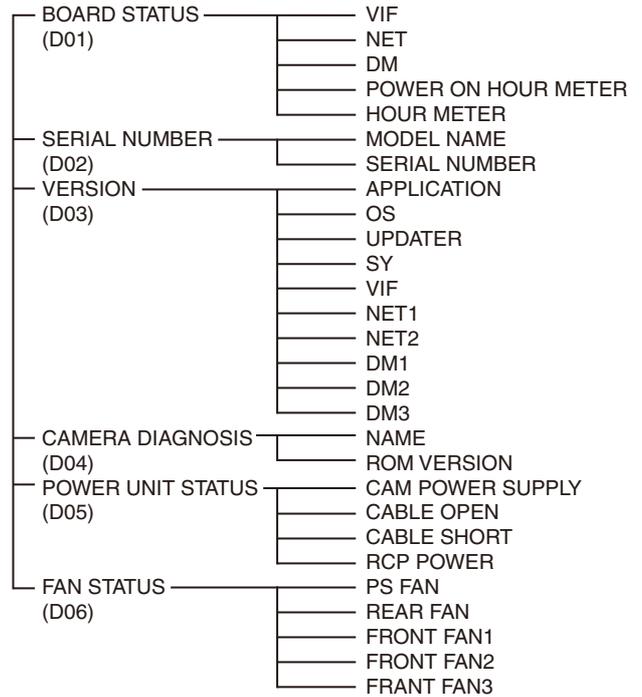

## Menu List

### Note

The following conventions are used in the menu list table.

**Settings column values (e.g. ON, OFF, 0):** Default settings are underlined

**Execute via ENTER:** Press the CONTROL knob or move the CANCEL/ENTER lever to the ENTER position to execute.

## SYSTEM CONFIG menu

### Note

Items marked with "a)" are not available on the HDCU3170 in triax transmission mode.

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<CAMERA I/F> S01	CABLE TYPE	<u>FIBER CAMERA CABLE</u> , COAX, COAX(HDCE), SINGLE-MODE FIBER, TRIAX CAMERA CABLE	Specifies the cable type used for connecting the camera.  <b>FIBER CAMERA CABLE:</b> Select when using the HDCU3100 or when using the HDCU3170 with HKCU-FB30 installed. <b>TRIAx CAMERA CABLE:</b> Select when using the HDCU3170. <b>SINGLE-MODE FIBER:</b> Selectable only when the HKCU-SM30 is installed.
	FIBER TRANSMIT RATE	<u>HIGH</u> , HD, ---	Sets the transfer rate when an optical fiber cable is connected.  <b>HIGH:</b> When the HDC3500/3100 or HDC2000 series is connected <b>HD:</b> When the HSC300RF/100RF is connected <b>---</b> : When CABLE TYPE is set to COAX, COAX(HDCE), or TRIAX CAMERA CABLE
	OPTICAL SIGNAL <sup>a)</sup>	ON, <u>OFF</u>	Turns the optical signal output from the CCU to the camera ON/OFF.  (Displayed only when connected using optical fiber composite cable.)
	BARS	<u>OFF</u> , ON	Turns color bars ON/OFF.
	TEST	<u>OFF</u> , TEST1, TEST2	Turns TEST SAW ON/OFF.
	START UP VIDEO SIGNAL	<u>BARS</u> , GRAY	Selects the signal to output until the unit connects with the camera after power-on.

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<VIDEO I/O> S02	SDI-I/O 1		Sets SDI I/O 1.
	I/O	IN, <b>OUT</b>	Selects input or output.
	SIGNAL	When OUT is selected in I/O: <b>(SDI-OUT)</b> When IN is selected in I/O: <b>(SDI-RET)</b>	Sets the signal function.
	SDI-I/O 2		Sets SDI I/O 2.
	I/O	IN, <b>OUT</b>	Selects input or output.
	SIGNAL	When OUT is selected in I/O: <b>(SDI-OUT)</b> When IN is selected in I/O: <b>(SDI-RET)</b>	Sets the signal function.
	SDI-I/O 3		Sets SDI I/O 3.
	I/O	IN, <b>OUT</b>	Selects input or output.
	SIGNAL	When OUT is selected in I/O: SDI-OUT, <b>HD TRUNK</b> <sup>a)</sup> When IN is selected in I/O: <b>(SDI-RET)</b>	Sets the signal function.
	SDI-I/O 4		Sets SDI I/O 4.
	I/O	IN, <b>OUT</b>	Selects input or output.
	SIGNAL	When OUT is selected in I/O: <b>(SDI-OUT)</b> When IN is selected in I/O: SDI-RET, <b>HD PROMPTER</b> <sup>a)</sup>	Sets the signal function.
<REAR I/F> S03	CHARACTER/AES-EBU	<b>CHARACTER</b> , AES-EBU	Sets the function to assign to the CHARACTER/AES-EBU connector. <b>CHARACTER:</b> Set to VBS output on which character superposition is performed. <b>AES-EBU:</b> Set to AES-EBU output.
	PROMPTER2/VBS-RET	<b>ENABLE</b> , DISABLE	Sets the function to assign to the PROMPTER2/VBS-RET connector. <b>ENABLE:</b> Set to both signal input for the second tele-prompter and VBS return signal input. (VBS return signal only when using HDCU3170) <b>DISABLE:</b> The PROMPTER1 input signal is output as is (loop-through output). If loop-through output is not used, terminate the connector at 75 ohms.
	MIC/WF REMOTE	<b>MIC REMOTE</b> , WF REMOTE	Switches the function of pins 36 to 43 when a D-sub 50-pin board is mounted as the INTERCOM/TALLY/IO PORT connector.
	REAR PREVIEW	<b>MOMENTARY</b> , TOGGLE	Sets the operation mode of the REAR PREVIEW connector output.

**SYSTEM CONFIG**

Page name Page No.	Item	Set value	Description
<GENLOCK> S04	REFERENCE	NOT DETECTED, EXT IN, 1080/59.94I, 1080/23.98PsF, 720/59.94P, 1080/50I, 1080/24PsF, 720/50P	Signal input of the REFERENCE IN connector. (Display only)
	LOCK STATUS	When HD or SD is selected in GENLOCK MODE: LOCKED, NOT LOCKED	Lock status of the external reference signal. (Display only)
	GENLOCK MODE	HD, <b>SD</b> , NETWORK	Sets the lock mode of the external reference signal.
<b>Notes</b>			
<ul style="list-style-type: none"> <li>• NETWORK is displayed only when the HKCU-SFP30 ST-2110 Interface Kit is installed.</li> <li>• Set to NETWORK if operating within an SMPTE ST 2110 compliant system.</li> <li>• When set to NETWORK, an external reference input on the REFERENCE IN connector is not required, and network synchronization operates using the LAN-1 and LAN-2 connectors. The network synchronization setting is configured on the &lt;NETWORK GENLOCK&gt; page of the NETWORK menu.</li> </ul>			
	10F BB	<b>OFF</b> , ON	Sets whether to use the 10-field ID added to the external reference signal. This can be selected when GENLOCK MODE is SD and <MULTI FORMAT> page → SYSTEM is 1.001 (525).
	H-PHASE STEP	When HD is selected in GENLOCK MODE: -3.01 to 3.45 μsec <b>0.00</b> When SD is selected in GENLOCK MODE: -8.29 to 9.48 μsec <b>0.00</b>	Adjusts the horizontal lock phase in relation to the reference signal (steps).
	H-PHASE COARSE	-99 to 99, <b>0</b>	Adjusts the horizontal lock phase in relation to the reference signal (fine adjustment).
	V-PHASE	<b>0</b> to 7	Adjusts the vertical lock phase in relation to the reference signal (line).
	SYNC OUT SELECT	<b>SD SYNC</b> , HD SYNC	Sets the output signal of the REFERENCE OUT connector.

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<MULTI FORMAT> S05	SYSTEM	<b>1.001(525)</b> , 1.000(625)	Selects the operating frequency of the system.
	CAMERA FORMAT	When 1.001(525) is selected in SYSTEM: 1080/59.94P (4K/HDR), 1080/59.94P, <b>1080/59.94I</b> , 1080/29.97PsF, 1080/23.98PsF, 720/59.94P, 1080/59.94I (RGB444), 1080/29.97PsF (RGB444), 1080/23.98PsF (RGB444), 1080/59.94I(2x), 720/59.94P(2x)  When 1.000(625) is selected in SYSTEM: 1080/50P (4K/HDR), 1080/50P, <b>1080/50I</b> , 1080/25PsF, 1080/24PsF, 720/50P, 1080/50I (RGB444), 1080/25PsF (RGB444), 1080/24PsF(RGB444), 1080/50I(2x), 720/50P(2x)	Selects the system format. Only 1080/59.94P and 1080/50P are displayed when using HDCU3170.  <b>Note</b> The formats available for selection vary depending on the active format of the connected camera.
	BIT DEPTH	10BIT, 12BIT	Sets the RGB4:4:4 output bit length, and changes the CCU output format.  This can be selected only when CAMERA FORMAT is set to 1080/59.94I (RGB444), 1080/29.97PsF (RGB444), 1080/23.98PsF (RGB444), 1080/50I (RGB444), 1080/25PsF (RGB444), or 1080/24PsF (RGB444).  Not displayed when using HDCU3170.
	CCU VIDEO CONVERT	<b>DISABLE</b> , ENABLE	Sets the video converter function. When ENABLE is selected, set FRAME SYNCHRONIZER to ON. <b>Tip:</b> When CCU VIDEO CONVERT is set to ENABLE, the video convert function within the CCU introduces a delay, which is compensated for by advancing the camera signal.
	FRAME CONVERT DELAY	0.8, 1.2, <b>1.6</b> F@23.98PsF	Sets the video delay time for 2-3 Pulldown. This is enabled only when SYSTEM is 1.001 (525). Not displayed when using HDCU3170.
	HD-SD DELAY	<b>LINE</b> , FRAME	Sets the phase output for SD signals down-converted from HD signals. The delay duration display will be as follows when CAMERA FORMAT is set to a 1080 format. <b>When LINE is selected:</b> 90H <b>When FRAME is selected:</b> 1 frame The delay duration display will be as follows when CAMERA FORMAT is set to a 720 format. <b>When LINE is selected:</b> 120H <b>When FRAME is selected:</b> 2 frames

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<HDR> S06	HDR MODE	<b>OFF</b> , LIVE HDR	<b>OFF</b> : Normal shooting operation. <b>LIVE HDR</b> : Used for LIVE HDR shooting.
	<b>Note</b>		
	When LIVE HDR is selected, camera paint functions can be used for both HDR output and SDR output. However, some paint functions are not supported for HDR output.		
	SDR GAIN	-15 to 0.0, <b>0</b> dB	Enabled in LIVE HDR mode only. Gain setting applied to SDR output
	HDR CONTRAST	100 to 566%	Enabled in LIVE HDR mode only. HDR output contrast maintained by setting SDR GAIN (Display only)
	HDR BLACK OFFSET	-99 to 99, <b>0</b>	Enabled in LIVE HDR mode only. HDR output black offset
	HDR OETF	<b>S-Log3</b> , HLG_BT2100, HLG_Live	Sets the gamma curve of the video output.
HDR COLOR SPACE	<b>BT709</b> , BT2020	Selects the color space of the video output. <b>BT709</b> : Sets the color output format to BT709. <b>BT2020</b> : Sets the color output format to BT2020.	
<OUTPUT FORMAT1> S07	SDI-OUT1		Sets the output for the SDI OUT 1 connector.
	MONITOR	<b>C</b>	Sets whether to add characters to the output signal. <b>C</b> : Characters are not added.
	<b>Note</b>		
	This is fixed to C.		
	FORMAT	See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).	Sets the output signal format for the SDI OUT 1 connector.
	OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.
	COLOR	BT709, BT2020	Selects the color space of SDI OUT1 video output. Fixed to BT709 when using HDCU3170. <b>BT709</b> : Sets the color output format to BT709. <b>BT2020</b> : Sets the color output format to BT2020.
	SDI-OUT2		Sets the output for the SDI OUT 2 connector.
	MONITOR	<b>C</b>	Sets whether to add characters to the output signal. <b>C</b> : Characters are not added.
	<b>Note</b>		
	This is fixed to C.		
FORMAT	See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).	Sets the output signal format for the SDI OUT 2 connector.	
OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.	
COLOR	BT709, BT2020	Selects the color space of SDI OUT2 video output. Fixed to BT709 when using HDCU3170. <b>BT709</b> : Sets the color output format to BT709. <b>BT2020</b> : Sets the color output format to BT2020.	

**SYSTEM CONFIG**

Page name Page No.	Item	Set value	Description	
<OUTPUT FORMAT1> S07	SDI-OUT3		Sets the output for the SDI OUT 3 connector.	
	MONITOR	<b>C</b> , M	Sets whether to add characters to the output signal. <b>C</b> : Characters are not added. <b>M</b> : Characters are added.	
	FORMAT	See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).	Sets the output signal format for the SDI OUT 3 connector.	
	OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.	
	COLOR	BT709, BT2020	Selects the color space of SDI OUT3 video output. Fixed to BT709 when using HDCU3170. <b>BT709</b> : Sets the color output format to BT709. <b>BT2020</b> : Sets the color output format to BT2020.	
	SDI-OUT4		Sets the output for the SDI OUT 4 connector.	
	MONITOR	C, <b>M</b>	Sets whether to add characters to the output signal. <b>C</b> : Characters are not added. <b>M</b> : Characters are added.	
				<p><b>Note</b></p> <p>When this is set to C (characters are not added), the CCU MENU will not be displayed. To display it, hold the DISP/MENU lever in the MENU position for 3 seconds.</p>
	FORMAT	See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).	Sets the output signal format for the SDI OUT 4 connector.	
	OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.	
COLOR	BT709, BT2020	Selects the color space of SDI OUT4 video output. Fixed to BT709 when using HDCU3170. <b>BT709</b> : Sets the color output format to BT709. <b>BT2020</b> : Sets the color output format to BT2020.		

**SYSTEM CONFIG**

Page name Page No.	Item	Set value	Description
<OUTPUT FORMAT2> S08	SDI-I/O1		Sets the output for the SDI I/O 1 connector.
	MONITOR	C	Sets whether to add characters to the output signal. <b>C:</b> Characters are not added.
	<b>Note</b>		
	This is fixed to C.		
	FORMAT	<i>See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).</i>	Sets the output signal format for the SDI I/O 1 connector.
	OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.
	COLOR	BT709, BT2020	Selects the color space of SDI I/O1 video output. Fixed to BT709 when using HDCU3170. <b>BT709:</b> Sets the color output format to BT709. <b>BT2020:</b> Sets the color output format to BT2020.
	SDI-I/O2		Sets the output for the SDI I/O 2 connector.
	MONITOR	C	Sets whether to add characters to the output signal. <b>C:</b> Characters are not added.
	<b>Note</b>		
	This is fixed to C.		
	FORMAT	<i>See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).</i>	Sets the output signal format for the SDI I/O 2 connector.
OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.	
COLOR	BT709, BT2020	Selects the color space of SDI I/O2 video output. Fixed to BT709 when using HDCU3170. <b>BT709:</b> Sets the color output format to BT709. <b>BT2020:</b> Sets the color output format to BT2020.	
SDI-I/O3		Sets the output for the SDI I/O 3 connector.	
MONITOR	C	Sets whether to add characters to the output signal. <b>C:</b> Characters are not added.	
<b>Note</b>			
This is fixed to C.			
FORMAT	<i>See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).</i>	Sets the output signal format for the SDI I/O 3 connector.	
OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.	
COLOR	BT709, BT2020	Selects the color space of SDI I/O3 video output. Fixed to BT709 when using HDCU3170. <b>BT709:</b> Sets the color output format to BT709. <b>BT2020:</b> Sets the color output format to BT2020.	

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<OUTPUT FORMAT2> S08	SDI-I/O4		Sets the output for the SDI I/O 4 connector.
	MONITOR	C	Sets whether to add characters to the output signal. <b>C:</b> Characters are not added.
	<b>Note</b>		
	This is fixed to C.		
	FORMAT	<i>See "Formats settable for the SDI OUT / SDI I/O connectors" (page 31).</i>	Sets the output signal format for the SDI I/O 4 connector.
OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.	
COLOR	BT709, BT2020	Selects the color space of SDI I/O4 video output. Fixed to BT709 when using HDCU3170. <b>BT709:</b> Sets the color output format to BT709. <b>BT2020:</b> Sets the color output format to BT2020.	
<OUTPUT FORMAT3> S09 Displayed only when HKCU-SFP30 is installed.	IP-OUT1		Sets the IP OUT1 connector output.
	MONITOR	C	Sets whether to add characters to the output signal. <b>C:</b> Characters are not added.
	<b>Note</b>		
	This is fixed to C.		
	FORMAT	Output format	Sets the output signal format of the IP OUT1 connector.
	OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.
	COLOR	BT709, BT2020	Selects the color space of IP OUT1 video output. Fixed to BT709 when using HDCU3170. <b>BT709:</b> Sets the color output format to BT709. <b>BT2020:</b> Sets the color output format to BT2020.
	SOURCE	CAMERA	Selects the signal source to output.
	IP-OUT2		Sets the IP OUT2 connector output.
	MONITOR	<b>C</b> , M	Sets whether to add characters to the output signal. <b>C:</b> Characters are not added. <b>M:</b> Characters are added.
	FORMAT	Output format	Sets the output signal format of the IP OUT2 connector.
	OETF	<b>SDR</b> , HDR OETF	Sets the gamma curve of the video output. Fixed to SDR when using HDCU3170.
	COLOR	BT709, BT2020	Selects the color space of IP OUT2 video output. Fixed to BT709 when using HDCU3170. <b>BT709:</b> Sets the color output format to BT709. <b>BT2020:</b> Sets the color output format to BT2020.
SOURCE	CAMERA	Selects the signal source to output.	

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<OUTPUT FORMAT3> S09 Displayed only when HKCU-UHD30 is installed.	IP-OUT3		Sets the IP OUT3 connector output.
	MONITOR	C, <b>M</b>	Sets whether to add characters to the output signal. <b>C</b> : Characters are not added. <b>M</b> : Characters are added.
	<b>Notes</b>		
	<ul style="list-style-type: none"> <li>Fixed to M when SOURCE is set to CAMERA.</li> <li>Fixed to C when SOURCE is set to HD TRUNK.</li> </ul>		
	FORMAT	Output format	Sets the output signal format of the IP OUT3 connector.
	OETF	SDR	Sets the gamma curve of the video output.
COLOR	<b>BT709</b>	Selects the color space of IP OUT3 video output. <b>BT709</b> : Sets the color output format to BT709.	
SOURCE	<b>CAMERA</b> , HD TRUNK	Selects the signal source to output.	
<RETURN SETUP> S10	RETURN SELECT		Sets the format of the return signal to be input.
	1	<b>SDI-RET1</b> , SDI-RET2, SDI-RET3, SDI-RET4, SDI-I/O1, SDI-I/O2, SDI-I/O3, SDI-I/O4, VBS-RET, IP-RET1, IP-RET2, IP-RET3	For details on the selectable RETURN FORMAT options for each SYSTEM (system operating frequency) setting and CAMERA FORMAT (system format) setting in <MULTI FORMAT>, see "Formats settable for RETURN FORMAT" (page 30).
	2	SDI-RET1, <b>SDI-RET2</b> , SDI-RET3, SDI-RET4, SDI-I/O1, SDI-I/O2, SDI-I/O3, SDI-I/O4, VBS-RET, IP-RET1, IP-RET2, IP-RET3	
	3	SDI-RET1, SDI-RET2, <b>SDI-RET3</b> , SDI-RET4, SDI-I/O1, SDI-I/O2, SDI-I/O3, SDI-I/O4, VBS-RET, IP-RET1, IP-RET2, IP-RET3	
	4	SDI-RET1, SDI-RET2, SDI-RET3, <b>SDI-RET4</b> , SDI-I/O1, SDI-I/O2, SDI-I/O3, SDI-I/O4, VBS-RET, IP-RET1, IP-RET2, IP-RET3	
	FRAME SYNCHRONIZER	<b>OFF</b> , ON	Sets the frame synchronizer function for the return signal. Fixed to ON when using HDCU3170.
	VBS ASPECT	SQUEEZE, LETTER BOX, <b>EDGE CROP</b>	Sets the aspect of the VBS input signal.
<RETURN FORMAT1> S11	SDI-RET		
	1	1080/59.94P/3G, 1080/50P/3G, <b>1080/59.94I(PsF)</b> , 50I(PsF), 1080/23.98PsF, 24PsF, 720/59.94P, 50P, 525/59.94I(PsF), 625/50I(PsF)	Sets the format of the return signal to be input to the SDI-RET connector.
	2		When an SD signal is set (525, 625, NTSC, or PAL), set the aspect ratio of the input signal.
	3		When 525/625 is selected, set the aspect ratio of the input signal.
	4		<b>SQUEEZE, LETTER BOX, EDGE CROP</b> 1080/23.98PsF, 24PsF, 720/59.94P, 50P not displayed when using HDCU3170.
<RETURN FORMAT2> S12	SDI-I/O		
	1	1080/59.94P, 1080/50P, <b>1080/59.94I(PsF)</b> , 50I(PsF), 1080/23.98PsF, 24PsF, 720/59.94P, 50P, 525/59.94I(PsF), 625/50I(PsF)	Sets the format of the return signal to be input to the SDI-I/O connector.
	2		1080/23.98PsF, 24PsF, 720/59.94P, 50P not displayed when using HDCU3170.
	3		
	4		

SYSTEM CONFIG			
Page name Page No.	Item	Set value	Description
<RETURN FORMAT3> S13	IP-RET		Sets the format of the return signal to be input on the LAN connectors.
	1	IP-RET1,2	
	2	1080/59.94P, 1080/50P, <b>1080/59.94I(PsF)</b> ,	
	3	1080/50I(PsF)  IP-RET3 1080/59.94I(PsF), 1080/50I(PsF)	

### Formats settable for RETURN FORMAT

SYSTEM CONFIG → <MULTI FORMAT> page → SYSTEM settings	HDC3500/3100 HDC2000 series <sup>1)</sup>  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to FIBER CAMERA CABLE, and SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE is set to HIGH)	HSC300RF/100RF  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to FIBER CAMERA CABLE, and SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE is set to HD)	HDC3170 HDC3500 with HKC-TR37 attached  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to TRIAX CAMERA CABLE)
<b>1001</b>	1080/59.94P <b>1080/59.94I</b> 1080/29.97PsF 1080/23.98PsF 720/59.94P 1080/59.94I (RGB444) 1080/29.97PsF (RGB444) 1080/23.98PsF (RGB444) 1080/59.94I (2x) 720/59.94P (2x)	<b>1080/59.94I</b> 1080/29.97PsF 1080/23.98PsF 720/59.94P	1080/59.94P <b>1080/59.94I</b> 720/59.94P  720/59.94P is displayed when CCU VIDEO CONVERT is set to ENABLE.
1000	1080/50P 1080/50I 1080/25PsF 1080/24PsF 720/50P 1080/50I (RGB444) 1080/25PsF (RGB444) 1080/24PsF (RGB444) 1080/50I (2x) 720/50P (2x)	1080/50I 1080/25PsF 1080/24PsF 720/50P	1080/50P 1080/50I 720/50P  720/50P is displayed when CCU VIDEO CONVERT is set to ENABLE.

1) HDC2000 series: HDC2000/2580/2500/2400/1700

## Formats settable for the SDI OUT / SDI I/O connectors

SYSTEM CONFIG → <MULTI FORMAT> page → CAMERA FORMAT settings	HDC3500/3100 HDC2000 series <sup>1)</sup>  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to FIBER CAMERA CABLE, and SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE is set to HIGH)	HSC300RF/100RF  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to FIBER CAMERA CABLE, and SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE is set to HD)	HDC3170 HDC3500 with HKC-TR37 attached  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to TRIAX CAMERA CABLE)
1080/59.94P(4K/HDR)	1080/59.94P/3G-A 1080/59.94P/3G-B 1080/59.94I 720/59.94P 525/59.94I  720/59.94P is displayed when CCU VIDEO CONVERT is set to ENABLE.	—	—
1080/59.94P <sup>2)</sup>	1080/59.94P/3G-A 1080/59.94P/3G-B 1080/59.94I 720/59.94P 525/59.94I  720/59.94P is displayed when CCU VIDEO CONVERT is set to ENABLE.	—	1080/59.94P/3G-A 1080/59.94P/3G-B <b>1080/59.94I</b> 720/59.94P 525/59.94I  720/59.94P is displayed when CCU VIDEO CONVERT is set to ENABLE.
<b>1080/59.94I</b>	<b>1080/59.94I</b> 525/59.94I	<b>1080/59.94I</b> 525/59.94I	—
1080/29.97PsF	1080/29.97PsF 525/29.97PsF	1080/29.97PsF 525/29.97PsF	—
1080/23.98PsF	1080/23.98PsF 1080/59.94I 525/59.94I	1080/23.98PsF 1080/59.94I 525/59.94I	—
720/59.94P	720/59.94P 525/59.94I	720/59.94P 525/59.94I	—
1080/59.94I(RGB444)	1080/59.94I (RGB444)/3G-B 1080/59.94I 525/59.94I	—	—
1080/29.97PsF(RGB444)	1080/29.97PsF (RGB444)/3G-B 1080/29.97PsF 525/29.97PsF	—	—
1080/23.98PsF(RGB444)	1080/23.98PsF (RGB444)/3G-B 1080/23.98PsF 1080/59.94I 525/59.94I	—	—
1080/59.94I(2x)	1080/59.94I (2x)/3G-B 1080/59.94I (2x)/Link-A 1080/59.94I (2x)/Link-B 1080/59.94I 525/59.94I	—	—
720/59.94P(2x)	720/59.94P (2x)/3G-B 720/59.94P (2x)/Link-A 720/59.94P (2x)/Link-B 720/59.94P 525/59.94I	—	—

SYSTEM CONFIG → <MULTI FORMAT> page → CAMERA FORMAT settings	HDC3500/3100 HDC2000 series <sup>1)</sup>  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to FIBER CAMERA CABLE, and SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE is set to HIGH)	HSC300RF/100RF  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to FIBER CAMERA CABLE, and SYSTEM CONFIG → <CAMERA I/F> → FIBER TRANSMIT RATE is set to HD)	HDC3170 HDC3500 with HKC-TR37 attached  (When SYSTEM CONFIG → <CAMERA I/F> → CABLE TYPE is set to TRIAX CAMERA CABLE)
1080/50P(4K/HDR)	1080/50P/3G-A 1080/50P/3G-B 1080/50I 720/50P 625/50I  720/50P is displayed when CCU VIDEO CONVERT is set to ENABLE.	–	–
1080/50P <sup>2)</sup>	1080/50P/3G-A 1080/50P/3G-B 1080/50I 720/50P 625/50I  720/50P is displayed when CCU VIDEO CONVERT is set to ENABLE.	–	1080/50P/3G-A 1080/50P/3G-B 1080/50I 720/50P 625/50I  720/50P is displayed when CCU VIDEO CONVERT is set to ENABLE.
1080/50I	1080/50I 625/50I	1080/50I 625/50I	–
1080/25PsF	1080/25PsF 625/25PsF	1080/25PsF 625/25PsF	–
1080/24PsF	1080/24PsF 1080/50I 625/50I	1080/24PsF 1080/50I 625/50I	–
720/50P	720/50P 625/50I	720/50P 625/50I	–
1080/50I(RGB444)	1080/50I (RGB444)/3G-B 1080/50I 625/50I	–	–
1080/25PsF(RGB444)	1080/25PsF (RGB444)/3G-B 1080/25PsF 625/25PsF	–	–
1080/24PsF(RGB444)	1080/24PsF (RGB444)/3G-B 1080/24PsF 1080/50I 625/50I	–	–
1080/50I(2x)	1080/50I (2x)/3G-B 1080/50I (2x)/Link-A 1080/50I (2x)/Link-B 1080/50I 625/50I	–	–
720/50P(2x)	720/50P (2x)/3G-B 720/50P (2x)/Link-A 720/50P (2x)/Link-B 720/50P 625/50I	–	–

1) HDC2000 series: HDC2000/2580/2500/2400/1700

2) Not displayed when using HDCU3170.

## VIDEO/MONITOR menu

### Note

Items marked with "a)" are not available on the HDCU3170 in triax transmission mode.

VIDEO/MONITOR				
Page name Page No.	Item	Set value	Description	
<COLOR BAR> V01	4K/HD-BAR SELECT	<b>BAR 16:9(100%)</b> , BAR 16:9(75%), SMPTE 16:9(BLACK), SMPTE 16:9(-I/Q), BAR 4:3(100%), BAR 4:3(75%), SMPTE 4:3(BLACK), SMPTE 4:3(-I/Q), MF-ARIB(75%), MF-ARIB(100%), MF-ARIB(+I), MF-SMPTE(-I,Q), MF-SMPTE(75%,Q), MF-SMPTE(100%,Q), MF-SMPTE(+I,Q), HD-CUSTOM, SDI CHECK FIELD, Y-RAMP, Y/C-RAMP, HD-CUSTOM2	Selects the color bars of 4K output/HD output.	
	MF-CB	<b>MODIFY</b> , EVEN	Sets the stripe width for multi-format color bar output. <b>MODIFY</b> : Stripe width adjusted to prevent colors mixing in 4:3 Edge Crop mode. <b>EVEN</b> : Stripe width in accordance with standard.	
	SLOPE	<b>WIDE</b> , NARROW	Sets the color difference signal band of the color bars. <b>WIDE</b> : Band not limited. <b>NARROW</b> : Band is limited to prevent ringing.	
	SD			
	SOURCE	4K/HD BAR, <b>SD BAR</b>	Selects the color bar signal source for output to SD. <b>4K/HD BAR</b> : Down converts the 4K/HD color bars and then outputs it. <b>SD BAR</b> : Outputs the SD color bars selected in SELECT.	
	SELECT	When SYSTEM CONFIG menu → <MULTI FORMAT> page → SYSTEM is set to 1.001(525): <b>SMPTE</b> , EIA, FULL, 95%, NTSC100%, Y/C-RAMP, Y-RAMP When SYSTEM CONFIG menu → <MULTI FORMAT> page → SYSTEM is set to 1.000(625): <b>SMPTE</b> , EIA, FULL, 95%, PAL100%, Y/C-RAMP, Y-RAMP	Selects the SD color bars.	
	BAR-CHARACTER	ON, <b>OFF</b>	Sets the character superposition on the color bar signal.	
<BAR CHARACTER> V02	MOVING SYMBOL	ON, <b>OFF</b>	Sets symbol moving on the color bar screen.	
	TYPE	0, 1, 2	Selects the symbol type.	
	SIZE	<b>SMALL</b> , LARGE	Selects the symbol size.	
	BAR CHARACTER		Sets the character string to be displayed on each of lines 1 to 16.	
<DOWNCONVERT> V03	ALL CLEAR		Clears all the character strings set for BAR CHARACTER.	
	SD ASPECT	SQUEEZE, <b>EDGE CROP</b> , LETTER BOX	Selects the aspect ratio for SD output.	
	NTSC SETUP	<b>7.5</b> , 0 IRE	Sets the NTSC signal setup level.	

VIDEO/MONITOR				
Page name Page No.	Item	Set value	Description	
<MONITOR> V04	CHARACTER LEVEL	1, 2, 3, 4, <b>5</b>	Sets the brightness of text in menus, etc.	
	LEVEL GATE	<b>OFF</b> , 1&2, 1, 2, (---)	Sets level gate display. <b>OFF</b> : Level gate is not displayed. <b>1</b> : Displays level gate 1. <b>2</b> : Displays level gate 2. <b>1&amp;2</b> : Displays level gate 1 & 2. <b>(---)</b> : Displayed when a camera is not connected. (Display only)	
	Y-LEVEL1	MIN 0 to 108% <b>49</b>	Sets the minimum detection level for level gate 1 display.	
		MAX 0 to 108% <b>61</b>	Sets the maximum detection level for level gate 1 display.	
		LEVEL -99 to 99 <b>-25</b>	Sets the zebra display level to be added to the detection area.	
	Y-LEVEL2	MIN 0 to 108% <b>74</b>	Sets the minimum detection level for level gate 2 display.	
		MAX 0 to 108% <b>108</b>	Sets the maximum detection level for level gate 2 display.	
		LEVEL -99 to 99 <b>-25</b>	Sets the zebra display level to be added to the detection area.	
	GATE MARKER	<b>OFF</b> , ON, (---)	Sets the display of the gate signal detected by the camera. <b>OFF</b> : Gate signal is not displayed. <b>ON</b> : Displays zebra in the area (skin gate, etc.) detected by the camera. <b>(---)</b> : Displayed when a camera is not connected. (Display only)	
		LEVEL -99 to 99 <b>0</b>	Sets the zebra display level to be added to the detection area.	
	ASPECT MARKER	<b>OFF</b> , ON	Sets aspect marker display.	
		SELECT <b>4:3</b> , 13:9, 14:9, EU VISTA, VISTA, CINEMA, FOLLOW DC	Selects the marker type.	
		MODULATION ON/ OFF <b>OFF</b> , ON	Sets the mask function for outside the marker frame.	
		MODULATION LEVEL -99 to 99 <b>0</b>	Sets the mask level.	
	<SPIRIT LEVEL> V05	INDICATOR	<b>OFF</b> , ON, ---	Sets spirit level display. This can be set when connected with a camera which has a lens that supports serial communication attached. HDCU3170: Fixed to ---
		REVERSE <sup>a)</sup>	<b>OFF</b> , ON	Selects the indicator move direction for tilting.
H POSITION <sup>a)</sup>		0 to 99 <b>50</b>	Spirit level display position (horizontal)	
V POSITION <sup>a)</sup>		0 to 99 <b>50</b>	Spirit level display position (vertical)	

VIDEO/MONITOR			
Page name Page No.	Item	Set value	Description
<DISPLAY> V06  Sets the items to be displayed on the camera setting status page of the status display screen.	MESSAGE	<b>ALL</b> , WARNING, OFF	Sets the display of messages for the camera auto setup operation status, warnings that occur in the system, etc. <b>ALL</b> : Displays all messages. <b>WARNING</b> : Displays system warning messages and menu control messages. <b>OFF</b> : Displays only menu control messages.
	CAMERA	<b>ON</b> , OFF	Displays or hides the model name of the connected camera.
	LENS FILE	<b>ON</b> , OFF	Displays or hides the LENS FILE name.
	MASTER GAIN	<b>ON</b> , OFF	Displays or hides the master gain setting value.
	MODE	<b>STEP GAIN</b> , MASTER WHITE, F DROP GAIN, TOTAL GAIN	Switches the MASTER GAIN display mode. <b>STEP GAIN</b> : Displays the STEP GAIN value. <b>MASTER WHITE</b> : Displays the MASTER WHITE GAIN value. <b>F DROP GAIN</b> : Displays the F DROP GAIN value. <b>TOTAL GAIN</b> : Displays the total value of the STEP GAIN, MASTER GAIN, and F DROP GAIN values combined.
	MASTER WHITE IND	<b>ON</b> , OFF	Displays or hides the enabled status of the master white gain.
	SHUTTER	<b>ON</b> , OFF	Displays or hides the shutter speed/ECS frequency setting value.
	ND FILTER	<b>ON</b> , OFF	Displays or hides the ND filter type.
	CC FILTER	<b>ON</b> , OFF	Displays or hides the CC filter type.
	IRIS	<b>ON</b> , OFF	Displays or hides the iris status.
	EXTENDER	<b>ON</b> , OFF	Displays or hides the lens extender/digital extender status.
	F DROP IND	<b>ON</b> , OFF	Display or hides the F-drop status.
	MIC	<b>ON</b> , OFF	Displays or hides the camera microphone switch status.

## AUDIO/INTERCOM menu

AUDIO/INTERCOM			
Page name Page No.	Item	Set value	Description
<MIC GAIN> A01	CAM MIC GAIN		Sets the camera microphone gain.
	CH1	(---), 20, 30, 40, 50, <b>60</b> dB	Set according to the microphone used.
	CH2	(---), 20, 30, 40, 50, <b>60</b> dB	(---): Displayed when a camera is not connected. (Display only)
<AUDIO OUT> A02	DELAY	0, 5, 11, 16, 21, 27, 32, 37, 43, 48, 53, 59, 64, 69, 75, 80 ms	Sets the camera microphone output phase.
	AES/EBU OUT	<b>MIC1/2</b> , AES/EBU	Selects the AES/EBU output. <b>MIC1/2</b> : Outputs the camera MIC1/2 input from the AES/EBU connector of the CCU. <b>AES/EBU</b> : Outputs the camera AES/EBU input from the AES/EBU connector of the CCU.
	ANALOG OUT	<b>MIC1/2</b> , AES/EBU	Selects the MIC OUT ANALOG output. <b>MIC1/2</b> : Outputs the camera MIC1/2 input from the AUDIO OUT connector of the CCU. <b>AES/EBU</b> : Outputs the camera AES/EBU input from the AUDIO OUT connector of the CCU.
	CH1: LEVEL	-20, <b>0</b> , +4 dBu	Sets the AUDIO CH1 output level.
	CH1: ADJUST	-99 to 99, <b>0</b>	
	CH2: LEVEL	-20, <b>0</b> , +4 dBu	Sets the AUDIO CH2 output level.
	CH2: ADJUST	-99 to 99, <b>0</b>	

AUDIO/INTERCOM				
Page name Page No.	Item	Set value	Description	
<INTERCOM> A03	INTERCOM CH	1CH(PROD), <b>2CH(PROD&amp;ENG)</b>	Selects the intercom channel number to be used.	
	PRODUCER INTERFACE	CLEAR COM, <b>4WIRE</b> , RTS	Sets the producer line intercom system.	
	SIDETONE CANCEL	-99 to 99 <b>0</b>	Sets the side tone cancel level. (Setting is possible when CLEAR COM or RTS)	
	TERMINATION	<b>OFF</b> , ON	Sets termination resistance (200 ohms). (Setting is possible when CLEAR COM or RTS) <b>OFF</b> : Displayed when 4WIRE is selected in PRODUCER INTERFACE. (Display only)	
	ENGINEER INTERFACE	CLEAR COM, <b>4WIRE</b> , RTS	Sets the engineer line intercom system.	
	SIDETONE CANCEL	0 to 99 <b>0</b>	Sets the side tone cancel level. (Setting is possible when CLEAR COM or RTS)	
	TERMINATION	<b>OFF</b> , ON	Sets termination resistance (200 ohms). (Setting is possible when CLEAR COM or RTS) <b>OFF</b> : Displayed when 4WIRE is selected in ENGINEER INTERFACE. (Display only)	
	PGM1 INPUT LEVEL	-20, <b>0</b> , +4 dBu	Sets the PGM1 input level.	
	PGM2 INPUT LEVEL	-20, <b>0</b> , +4 dBu	Sets the PGM2 input level.	
	PGM3 INPUT LEVEL	-20, <b>0</b> , +4 dBu	Sets the PGM3 input level.	
	<FRONT INTERCOM> A04	MIC/PGM	(PGM ON), (MIC OFF), (MIC ON)	CCU front panel MIC/PGM switch position. (Display only)
		I/F	(PROD), (ENG), (PRIVATE)	CCU front panel INTERCOM switch position. (Display only)
		PRIVATE SW	<b>ENABLE</b> , DISABLE(SET TO ENG)	Operation when the INTERCOM switch on the front panel is set to the PRIVATE position (PRIV indicator) <b>ENABLE</b> : Private operation <b>DISABLE(SET TO ENG)</b> : ENG line operation
		INTERCOM MIC	<b>DYNAMIC</b> , ECM, CARBON	Sets the headset microphone connected to the INTERCOM connector on the front panel. <b>CARBON</b> : Carbon microphone (power supply, 20 dB gain) <b>ECM</b> : Electret condenser microphone (power supply, 40 dB gain) <b>DYNAMIC</b> : Dynamic microphone (no power supply, 60 dB gain)
INTERCOM MIC TYPE		BALANCED, <b>UNBALANCED</b>	Sets the headset microphone connected to the INTERCOM connector on the front panel. <b>BALANCED</b> : Balanced microphone <b>UNBALANCED</b> : Unbalanced microphone	
INTERCOM MIC GAIN		-6, <b>0</b> , +6 dB	Sets the microphone input gain.	
SIDE TONE LEVEL		0 to 99 <b>50</b>	Sets the side tone level.	
PGM MIX MODE		<b>OFF</b> , INCOM+PGM, L-INCOM/R-PGM	<b>OFF</b> : Signals are not mixed. <b>INCOM+PGM</b> : INCOM and PGM signals are mixed. <b>L-INCOM/R-PGM</b> : Outputs an INCOM signal through the left channel and a PGM signal through the right.	
PGM SELECT		<b>PGM1</b> , PGM2, PGM3, PGM1+PGM2+PGM3	Selects the PGM audio output from the FRONT INTERCOM connector.	
PGM1 LEVEL		0 to 99, <b>50</b>	Sets the MIX level of PGM1.	
PGM2 LEVEL		0 to 99, <b>50</b>	Sets the MIX level of PGM2.	
PGM3 LEVEL		0 to 99, <b>50</b>	Sets the MIX level of PGM3.	

AUDIO/INTERCOM			
Page name Page No.	Item	Set value	Description
<IP AUDIO> A05 Displayed only when HKCU-SFP30 is installed.	AUDIO OUT		
	FORMAT	L24/48kHz/1ms/2ch, L24/48kHz/ 1ms/4ch, L24/48kHz/1ms/8ch, L24/48kHz/0.125ms/2ch, L24/ 48kHz/0.125ms/4ch, L24/48kHz/ 0.125ms/8ch, <b>L24/48kHz/ 0.125ms/16ch</b>	Sets the audio format.
	CH ORDER	MIC1, MIC2, AES/EBU1, AES/ EBU2	Displays the channel order.
	HD TRUNK AUDIO OUT		
	FORMAT	L24/48kHz/1ms/2ch, L24/48kHz/ 1ms/4ch, L24/48kHz/1ms/8ch, L24/48kHz/0.125ms/2ch, L24/ 48kHz/0.125ms/4ch, L24/48kHz/ 0.125ms/8ch, <b>L24/48kHz/ 0.125ms/16ch</b>	Sets the audio format.
	CH ORDER	THROUGH	Displays the channel order.
	PGM IN		
	FORMAT	L24/48kHz/1ms/2ch, L24/48kHz/ 1ms/4ch, L24/48kHz/1ms/8ch, L24/48kHz/0.125ms/2ch, L24/ 48kHz/0.125ms/4ch, L24/48kHz/ 0.125ms/8ch, <b>L24/48kHz/ 0.125ms/16ch</b>	Sets the audio format.
	CH ORDER	PGM1, PGM2, PGM3	Displays the channel order.
	<IP INTERCOM>		
A06 Displayed only when HKCU-SFP30 is installed.	INTERCOM OUT		
	FORMAT	L24/48kHz/1ms/2ch, L24/48kHz/ 1ms/4ch, L24/48kHz/1ms/8ch, <b>L24/48kHz/0.125ms/2ch</b> , L24/ 48kHz/0.125ms/4ch, L24/48kHz/ 0.125ms/8ch, L24/48kHz/0.125ms/ 16ch	Sets the audio format.
	CH ORDER	ENG, PROD	Displays the channel order.
	INTERCOM IN		
	FORMAT	L24/48kHz/1ms/2ch, L24/48kHz/ 1ms/4ch, L24/48kHz/1ms/8ch, <b>L24/48kHz/0.125ms/2ch</b> , L24/ 48kHz/0.125ms/4ch, L24/48kHz/ 0.125ms/8ch, L24/48kHz/0.125ms/ 16ch	Sets the audio format.
	CH ORDER	ENG, PROD	Displays the channel order.

## MAINTENANCE menu

### Note

Items marked with “a)” are not available on the HDCU3170 in triax transmission mode.

MAINTENANCE			
Page name Page No.	Item	Set value	Description
<TRUNK/PROMPTER> M01	TRUNK LINE		
	CHANNEL MODE	When <CAMERA I/F> → CABLE TYPE is FIBER CAMERA CABLE and FIBER TRANSMIT RATE is HIGH: <b>2CH(MAX 75Kbps)</b> , 1CH(MAX 150Kbps) When <CAMERA I/F> → CABLE TYPE is FIBER CAMERA CABLE and FIBER TRANSMIT RATE is HD: 1CH(MAX 38Kbps) When <CAMERA I/F> → CABLE TYPE is TRIAX CAMERA CABLE: <b>2CH(MAX 19Kbps)</b> , 1CH(MAX 38Kbps)	Sets the number of channels to be used.
	INTERFACE	<b>232C</b> , 422A	Sets the communication line mode. When FIBER TRANSMIT RATE is set to HD, this is fixed at 422A.
	PROMPTER		
	CHANNEL MODE	<b>2CH</b> , 1CH	Sets the number of prompter lines. Fixed to 1CH when using HDCU3170.
			<p><b>Note</b></p> <p>The number of lines will vary depending on the number of prompter lines of the connected camera.</p>
	NETWORK TRUNK		Not displayed when using HDCU3170.
	MODE <sup>a)</sup>	<b>OFF</b> , NETWORK, NETWORK+VIDEO	Sets the mode for the network trunk. <b>OFF:</b> NETWORK TRUNK is not used. <b>NETWORK:</b> NETWORK TRUNK is used (maximum 1 Gbps). <b>NETWORK+VIDEO:</b> NETWORK TRUNK is used at the same time as HD TRUNK/HD PROMPTER (maximum 100 Mbps).
	DATA RATE <sup>a)</sup>	100Mbps, 1Gbps	Displays the data transfer rate. (Display only)
	CAMERA	(ENABLE), (DISABLE)	Displays “ENABLE” or “DISABLE” for CAMERA. (Display only) Fixed to DISABLE when using HDCU3170.
	HD TRUNK	(ENABLE), (DISABLE)	Displays “ENABLE” or “DISABLE” for HD TRUNK. (Display only) Fixed to DISABLE when using HDCU3170.
	HD PROMPTER	(ENABLE), (DISABLE)	Displays “ENABLE” or “DISABLE” for HD PROMPTER. (Display only) Fixed to DISABLE when using HDCU3170.
	FRAME SYNC	OFF, ON, (ON)	Turns the frame synchronizer function ON/OFF.
	SOURCE	<b>SDI-I/O4</b> , IP-RET3	Sets the HD prompter signal source. IP-RET3 is selectable only when the HKCU-SFP30 ST-2110 Interface Kit is installed.

MAINTENANCE				
Page name Page No.	Item	Set value	Description	
<MENU SETTINGS> M02	PAGE RESUME	<b>ON</b> , OFF	Turns the menu mode resume page display function ON/OFF.	
	ALARM JUMP	ON, <b>OFF</b>	Turns the error-related page display function ON/OFF for when an error occurs while in menu mode.	
	CAMERA MENU CTRL	<b>OFF</b> , ON	Displays the Camera menu.	
			<p><b>Note</b></p> <ul style="list-style-type: none"> <li>If CAM MENU is set to ON, CCU menu operations cannot be performed because only Camera menu operations are available.</li> <li>The Camera menu is not displayed when SD signal is output.</li> </ul>	
<DATE&TIME> M03	DATE (YEAR)	17 to 99	Sets the date and time.	
	DATE (MONTH)	1 to 12		
	DATE (DAY)	1 to 31	<p><b>Note</b></p> When this is changed, all logs stored on the unit will be deleted.	
	TIME (HOUR)	0 to 23		
	TIME (MINUTE)	0 to 59		
	TIME ZONE (HOUR)	-23 to +23, <b>0</b>	Sets the time zone.	
	TIME ZONE (MINUTE)	<b>0</b> to 59		
<TALLY INPUT> M04	R-TALLY	<b>CONTACT</b> , POWER(24V), POWER(TTL)	RED tally input setting	
	G-TALLY	<b>CONTACT</b> , POWER(24V), POWER(TTL)	GREEN tally input setting	
	Y-TALLY	<b>CONTACT</b> , POWER(24V), POWER(TTL)	YELLOW tally input setting	
<ALARM SETTINGS> M05	FORCE LEGACY	OFF, <b>ON</b>	Set to OFF to not display the FORCE LEGACY alarm.	
	CABLE OPEN	OFF, <b>ON</b>	Set to OFF to not display the CABLE OPEN alarm.	
	GENLOCK ERROR	OFF, <b>ON</b>	Set to OFF to not display the GENLOCK ERROR alarm.	
<SDI ANCILLARY DATA> M06	VIDEO PAYLOAD ID	<b>LATEST</b> , 2002, 2010, 2011, 2017	Selects the standard year of the payload ID to be added to the SDI VIDEO output.	
	EMBED AUDIO	OFF, <b>ON</b>	Sets whether to embed audio in the SDI VIDEO output.	
	EMBED META DATA	OFF, <b>ON</b>		
<FRONT PANEL> M07	ASSIGNABLE SWITCH	<b>NONE</b> , BARS, CAM POWER, FORCE LEGACY, OPTICAL SIGNAL	Sets the function to be assigned to the assignable button on the front panel. <b>NONE</b> : No assignment. <b>BARS</b> : Sets the color bar output to ON/OFF. <b>CAM POWER</b> : Sets camera power to ON/OFF. <b>FORCE LEGACY</b> : Forces the communication mode to LEGACY mode. <b>OPTICAL SIGNAL</b> : Turns the optical signal output from the CCU to the camera ON/OFF. (Disabled when using HDCU3170)	
	SIGNAL BAR			
	DISPLAY	OFF, <b>ON</b>	Switches the signal bar display on the front panel.	
	READY COLOR	<b>WHITE</b> , GREEN, BARS	Sets the color for the ready status (during color bar output).	
	BRIGHTNESS	LOW, MIDDLE, <b>HIGH</b>	Sets the signal bar brightness level.	
	<OPTION KEY> M08	READ	Execute with ENTER.	Reads the installation key from the USB flash drive.
		INSTALLED OPTIONS		List of installed options. (Display only)
	<MISC> M09	OPTICAL SIGNAL BACKUP	ENABLE, <b>DISABLE</b>	Sets whether to save the state of the OPTICAL SIGNAL setting on the <CAMERA I/F> page of the SYSTEM CONFIG menu for the next startup.

## FILE menu

FILE			
Page name Page No.	Item	Set value	Description
<CCU FILE> F01	FILE INDEX	1 to 5, <b>1</b>	Selects the file number of the target for operation.
	RECALL		Loads the CCU file from the internal memory.
	STORE		Saves the CCU file to the internal memory.
	EXPORT		Exports the CCU file to the USB flash drive. The path for the USB flash drive is "MSSONY/PRO/CAMERA/HDCU3100."
	IMPORT		Imports the CCU file from the USB flash drive. The path for the USB flash drive is "MSSONY/PRO/CAMERA/HDCU3100."
	FILE NAME1 to 5	NO_FILE	Sets the CCU file name. ASCII code, 1 to 32 characters
	CLEAR ALL		Deletes all CCU files.
<LOG> F02	LOG	ENABLE, <b>DISABLE</b>	Enables or disables saving of log files.
	EXPORT TO USB		Saves logs to the USB flash drive. (Execute via EXEC.) The path for the USB flash drive is "MSSONY/PRO/CAMERA/HDCU3100."
	CLEAR		Deletes logs stored internally on the unit. (Execute via EXEC.)

**Note**

Logs for up to 30 days are stored. Logs are deleted when the 30-day maximum is reached, starting with the oldest.

## NETWORK menu

NETWORK			
Page name Page No.	Item	Set value	Description
<IP ADDRESS> N01	PORT	LAN-COM, LAN1, LAN2	Selects the port for which to set the IP address.
	DHCP	ON, <b>OFF</b>	Enables or disables DHCP. When LAN1 or LAN2 is selected, DHCP is set to OFF (fixed).
	IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the IP address.
	SUBNET MASK	<b>0.0.0.0</b> to 255.255.255.255	Sets the subnet mask.
	DEFAULT GATEWAY	<b>0.0.0.0</b> to 255.255.255.255	Sets the default gateway.
	SET		A "SET OK?" message is displayed. Press ENTER again to confirm the change. (Execute via ENTER.)
	MAC ADDRESS	<b>000000000000</b> to ffffffff	Displays the MAC address of each port.
	LINK SPEED	10G, <b>25G</b>	Displays the link speed. Displayed only when LAN1 or LAN2 is selected.
	25G FEC	OFF, <b>RS-FEC</b> , FC-FEC	Sets the FEC mode on 25G. Displayed only when LAN1 or LAN2 is selected.

**Note**

Set to the same setting as the port of the connected IP switch.

NETWORK			
Page name Page No.	Item	Set value	Description
<CNS SETTINGS> N02	CNS MODE	<b>LEGACY</b> , BRIDGE, MCS	Sets the communication mode.
	MCS MODE	CLIENT	Indicates that the unit is the client when MCS mode is selected. (Display only)
	CCU NO	When MCS is selected in CNS MODE: Blank, 1 to 96 When LEGACY or BRIDGE is selected in CNS MODE: Blank, 1 to 96, A to Z	Sets the CCU number.
	MASTER IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the master device IP address for MCS mode.
	SET		A "SET OK?" message is displayed. Press ENTER again to confirm the change. (Execute via ENTER.)
<NETWORK GENLOCK> N03 Displayed only when HKCU-SFP30 is installed.	PORT	<b>LAN1</b> , LAN2	Selects the port to use.
	NETWORK GENLOCK	DISABLE, <b>ENABLE</b>	Enables/disables network genlock.
	PROFILE	ST2059-2	Displays the supported profile. Only the ST2059-2 profile is supported.
	DOMAIN NUMBER	0 to 127, <b>127</b>	Sets the domain number.
	<b>Note</b>		
	Set to the domain number of the connected master device.		
	COMMUNICATION MODE	<b>MULTICAST MODE</b> , MIXED MODE	<b>MIXED MODE</b> : Unicast communication with master <b>MULTICAST MODE</b> : Multicast communication with master
	DELAY REQUEST INTERVAL	-7 to -1, <b>-3</b>	Displays the response rate to the PTP master.
	PTP MASTER INFO		Displays values acquired from the PTP master.
	IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Displays the IP address of the currently locked PTP master device.
SYNC INTERVAL	-7 to -1, <b>-3</b>	Displays the Sync Interval setting of the master device.	
PRIORITY 1	0 to 255, <b>128</b>	Displays the priority level of the PTP master.	
PRIORITY 2	0 to 255, <b>128</b>	The lower the value, the higher the priority.	
STEP	ONE-STEP, <b>TWO-STEP</b>	Displays the mode in which timestamps are sent. <b>ONE-STEP</b> : Sent in Sync packet <b>TWO-STEP</b> : Sent in Follow-up packet	
LOCK STATUS	<b>NOT IN USE</b> , NO MASTER, LOCKING, LOCKED	Displays the genlock operation status. <b>NOT IN USE</b> : PTP operation stopped <b>NO MASTER</b> : PTP master not available <b>LOCKING</b> : Locking in progress <b>LOCKED</b> : Locking completed	

NETWORK				
Page name Page No.	Item	Set value	Description	
<IP LIVE>	IP LIVE SYSTEM MANAGER			
N04 Displayed only when HKCU-SFP30 is installed.	PORT	DISABLE, <b>LAN1&amp;LAN2</b>	Sets the IP Live System Manager (LSM). <b>DISABLE:</b> Do not communicated with LSM. <b>LAN1&amp;LAN2:</b> Redundancy communication with LAN-1 and LAN-2.	
	<b>Note</b>			
	Restart the unit after changing the PORT setting.			
	DHCP	<b>OFF</b>	Sets the IP address of the LSM (fixed OFF).	
	PRIMARY IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the IP address of LSM1.	
	SECONDARY IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the IP address of LSM2.	
	PRIMARY CONNECTION STATUS	<b>DISCONNECTED</b> , CONNECTING, CONNECTED	Displays the LSM1 connection status <b>DISCONNECTED:</b> Disconnected <b>CONNECTING:</b> Establishing communication <b>CONNECTED:</b> Communication established	
	SECONDARY CONNECTION STATUS	<b>DISCONNECTED</b> , CONNECTING, CONNECTED	Displays the LSM2 connection status <b>DISCONNECTED:</b> Disconnected <b>CONNECTING:</b> Establishing communication <b>CONNECTED:</b> Communication established	
	MULTICAST ADDRESS	<b>AUTO</b> , MANUAL	Sets the mode switching method for the multicast address settings of IP streams. Fixed to AUTO when PORT is set to LAN1&LAN2, and uses multicast addresses configured from LSM. Fixed to MANUAL when PORT is set to DISABLE, and uses the addresses set manually using the MULTICAST ADDRESS 1 to 5 pages.	
		HITLESS FAILOVER	<b>ON</b> , OFF	Enables/disables IP stream redundancy.
<MULTICAST ADDRESS 1>	MULTICAST ADDRESS	<b>AUTO</b> , MANUAL	Displays the mode for the multicast address settings of the IP stream.	
N05 Displayed only when HKCU-SFP30 is installed.	VIDEO OUT LAN1-1			
	IP ADDRESS	224.0.0.1 to 239.255.255.255	Displays the destination IP address.	
	PORT	<b>100 to 65535</b>	Displays the destination port number.	
	VIDEO OUT LAN1-2			
	VIDEO OUT LAN1-3			
	VIDEO OUT LAN2-1			
	VIDEO OUT LAN2-2			
	VIDEO OUT LAN2-3			
	<MULTICAST ADDRESS 2>	MULTICAST ADDRESS	<b>AUTO</b> , MANUAL	Displays the MULTICAST ADDRESS setting of the <MULTICAST SETTING> page.
	N06 Displayed only when HKCU-SFP30 is installed.	RETURN LAN1-1		
IP ADDRESS		224.0.0.1 to 239.255.255.255	Displays the destination IP address.	
PORT		<b>100 to 65535</b>	Displays the destination port number.	
SRC IP		<b>0.0.0.0</b> to 255.255.255.255	Displays the stream source IP address.	
RETURN LAN1-2				
RETURN LAN1-3				
RETURN LAN2-1				
RETURN LAN2-2				
RETURN LAN2-3				

NETWORK				
Page name Page No.	Item	Set value	Description	
<MULTICAST ADDRESS 3> N07 Displayed only when HKCU-SFP30 is installed.	MULTICAST ADDRESS	<b>AUTO</b> , MANUAL	Displays the MULTICAST ADDRESS setting of the <MULTICAST SETTING> page.	
	AUDIO OUT LAN1			
	IP ADDRESS	224.0.0.1 to 239.255.255.255	Displays the destination IP address.	
	PORT	<b>100 to 65535</b>	Displays the destination port number.	
	AUDIO OUT LAN2			
	HD TRUNK AUDIO OUT LAN1			
	HD TRUNK AUDIO OUT LAN2			
	PGM IN LAN1			
	IP ADDRESS	224.0.0.1 to 239.255.255.255	Displays the destination IP address.	
	PORT	<b>100 to 65535</b>	Displays the destination port number.	
	SRC IP	<b>0.0.0.0</b> to 255.255.255.255	Displays the stream source IP address.	
	PGM IN LAN2			
	<MULTICAST ADDRESS 4> N08 Displayed only when HKCU-SFP30 is installed.	MULTICAST ADDRESS	<b>AUTO</b> , MANUAL	Displays the MULTICAST ADDRESS setting of the <MULTICAST SETTING> page.
	INTERCOM OUT LAN1			
IP ADDRESS	224.0.0.1 to 239.255.255.255	Displays the destination IP address.		
PORT	<b>100 to 65535</b>	Displays the destination port number.		
INTERCOM OUT LAN2				
INTERCOM IN LAN1				
IP ADDRESS	224.0.0.1 to 239.255.255.255	Displays the destination IP address.		
PORT	<b>100 to 65535</b>	Displays the destination port number.		
SRC IP	<b>0.0.0.0</b> to 255.255.255.255	Displays the stream source IP address.		
INTERCOM IN LAN2				
<MULTICAST ADDRESS 5> N09 Displayed only when HKCU-SFP30 is installed.	MULTICAST ADDRESS	<b>AUTO</b> , MANUAL	Displays the MULTICAST ADDRESS setting of the <MULTICAST SETTING> page.	
	META OUT LAN1-1			
	IP ADDRESS	224.0.0.1 to 239.255.255.255	Displays the destination IP address.	
	PORT	<b>100 to 65535</b>	Displays the destination port number.	
	META OUT LAN1-2			
	META OUT LAN1-3			
	META OUT LAN2-1			
	META OUT LAN2-2			
META OUT LAN2-3				
<EMBER+> N10	EMBER+	<b>DISABLE</b> , ENABLE	Enables/disables configuration using Ember+.	
	<b>Note</b>			
	Can be enabled by installing HZCU-CNFG50 Config Control Software (option).			
	PORT	<b>LAN-COM</b>	Displays the connection port name.	
	PORT NUMBER	<b>9000</b>	Displays the TCP port number for the Ember+ connection.	
	CONNECTION STATUS	<b>DISCONNECTED</b> , CONNECTING, CONNECTED	Displays the connection status of Ember+ communication <b>DISCONNECTED</b> : Disconnected <b>CONNECTING</b> : Establishing communication <b>CONNECTED</b> : Communication established	

NETWORK			
Page name Page No.	Item	Set value	Description
<TSL UMD> N11	TSL UMD	<b>DISABLE</b> , ENABLE	Enables/disables IP Tally using TSL UMD V5.0.
	PORT	<b>LAN-COM</b>	Displays the connection port name.
	PORT NUMBER	<b>9000</b>	Displays the UDP port number of the TSL UMD connection.
	PACKET STATUS	<b>NOT RECEIVED</b> , RECEIVED	Displays the receive status of TSL UMD packets. The ID and corresponding Red, Green, and Yellow On/Off status are displayed when received. Up to five IDs can be displayed. "AND MORE" is displayed if there are more than five.
<SNMP> N12	SNMP	ENABLE, <b>DISABLE</b>	Enables/disables SNMP.
	<b>Note</b>		
	Can be enabled by installing HZCU-SNMP50 SNMP Agent Software (option).		
	PORT	<b>LAN-COM</b>	Displays the connection port name.
	NAME		Displays the system name (ASCII code, up to 32 characters).
	CONTACT		Displays the system administrator's name (ASCII code, up to 32 characters).
	LOCATION		Displays the system installation location (ASCII code, up to 32 characters).
	V1		
	ENABLE	ENABLE, <b>DISABLE</b>	Enables/disables SNMP V1.
	V2C		
	ENABLE	ENABLE, <b>DISABLE</b>	Enables/disables SNMP V2C.
	V1/V2C		
	RO COMMUNITY	<b>sony</b>	Displays the ReadOnly community name (ASCII code, up to 32 characters).
	ALLOW HOST	<b>ANY</b> , SPECIFIC	Sets the hosts that can be connected. <b>ANY</b> : Allow access from all IP addresses. <b>SPECIFIC</b> : Allow access only from IP addresses configured using the HOST IP ADDRESS items.
HOST1 IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the address of a host that can connect with access permission when ALLOW HOST is set to SPECIFIC.	
HOST2 IP ADDRESS			
HOST3 IP ADDRESS			
<SNMP TRAP> N13	SNMP TRAP	ENABLE, <b>DISABLE</b>	Enables/disables SNMP traps. Selectable when SNMP is enabled. Fixed to DISABLE when SNMP is disabled.
	COMMUNITY		Displays the trap community name (ASCII code, up to 32 characters).
	HOST1		
	IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the trap notification address.
	VERSION	V1, V2C	Sets the trap version.
	HOST2		
	IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the trap notification address.
	VERSION	V1, V2C	Sets the trap version.
	HOST3		
	IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the trap notification address.
	VERSION	V1, V2C	Sets the trap version.
	SEND TEST TRAP	<b>EXEC</b>	Sends a test trap.

NETWORK			
Page name Page No.	Item	Set value	Description
<PING> N14	PORT	<b>LAN-COM</b>	Selects the PING transmission destination port.
	IP ADDRESS	<b>0.0.0.0</b> to 255.255.255.255	Sets the IP address for the PING transmission destination port.
	PING		PING transmission. (Execute via EXEC.)
	STATISTICS		Displays the PING execution results.
	TRANSMITTED PACKETS	<b>0</b> to 5	Number of transmitted packets.
	RECEIVED PACKETS	<b>0</b> to 5	Number of received packets.
	PACKET LOSS	<b>0</b> to 100 %	Packet loss rate.
	ROUND-TRIP MIN	<b>0.0</b> to 1000000.0 ms	Minimum round-trip delay time.
	ROUND-TRIP AVERAGE	<b>0.0</b> to 1000000.0 ms	Average round-trip delay time.
	ROUND-TRIP MAX	<b>0.0</b> to 1000000.0 ms	Maximum round-trip delay time.

## DIAGNOSIS menu

DIAGNOSIS			
Page name Page No.	Item	Display	Description
<BOARD STATUS> D01	VIF	OK, POWER ERROR, PLD ERROR, TEMP WARNING	VIF board self-diagnosis result
	NET	OK, POWER ERROR, PLD ERROR, TEMP WARNING	HKCU-SFP30 board (option) self-diagnostics result
	DM	OK, POWER ERROR, PLD ERROR, TEMP WARNING	DM board (option) self-diagnostics result
	POWER ON HOUR METER	99999 H	Accumulated power-on time from power on.
	HOURLY METER	99999 H	Accumulated power-on time
	<SERIAL NUMBER> D02	MODEL NAME	
SERIAL NUMBER			Serial number
<VERSION> D03	APPLICATION		Unit software version
	OS		Unit software version
	UPDATER		Unit software version
	SY		ROM version of SY PLD (SY board)
	VIF		ROM version of VIF PLD (VIF board)
	NET1		ROM version of HKCU-SFP30 board (option)
	NET2		ROM version of HKCU-SFP30 board (option)
	DM1		ROM version of DM1 board (option)
	DM2		ROM version of DM2 board (option)
	DM3		ROM version of DM3 board (option)
<CAMERA DIAGNOSIS> D04	NAME		Model name of connected camera
	ROM VERSION	X.XX	ROM version of camera
<POWER UNIT STATUS> D05	CAM POWER SUPPLY	ON, OFF	Displays the status of power supply to the camera.
	CABLE OPEN	OK, OPEN	Displays the cable OPEN status.
	CABLE SHORT	OK, SHORT	Displays the cable SHORT status.
	RCP POWER	OK, ERROR	Displays the status of power supply to the RCP.

<b>DIAGNOSIS</b>			
<b>Page name Page No.</b>	<b>Item</b>	<b>Display</b>	<b>Description</b>
<FAN STATUS> D06	PS FAN	OK, STOP	Displays the power supply unit fan operation status.
	REAR FAN	OK, STOP	Displays the rear panel fan operation status.
	FRONT FAN1	OK, STOP	Displays the front panel fan 1 operation status.
	FRONT FAN2	OK, STOP	Displays the front panel fan 2 operation status.
	FRONT FAN3	OK, STOP	Displays the front panel fan 3 operation status.

# Appendix

## Precautions

If the unit is suddenly taken from a cold to a warm location, or if ambient temperature suddenly rises, moisture may form on the outer surface of the unit and/or inside of the unit. This is known as condensation. If condensation occurs, turn off the unit and wait until the condensation clears before operating the unit. Operating the unit while condensation is present may damage the unit.

The fan and battery are consumable parts that will need periodic replacement.

When operating at room temperature, a normal replacement cycle will be about 5 years.

However, this replacement cycle represents only a general guideline and does not imply that the life expectancy of these parts is guaranteed. For details on parts replacement, contact your dealer.

The life expectancy of the electrolytic capacitor is about 5 years under normal operating temperatures and normal usage (8 hours per day; 25 days per month). If usage exceeds the above normal usage frequency, the life expectancy may be reduced correspondingly.

## Operating environment

- Avoid high-temperature rooms and near sources of heat.
- Do not place in locations with strong electric or magnetic field.
- Dry location with good ventilation.
- Avoid locations exposed to sunlight or strong lighting.

## Avoid violent impacts

Dropping the unit, or otherwise imparting a violent shock to it, is likely to cause it to malfunction.

## Do not cover with cloth

While the unit is in operation, do not cover it with a cloth or other material. This can cause the temperature to rise, leading to a malfunction.

## After use

Set the POWER switch to the OFF position.

## Care

If the body or panels of the unit become dirty, wipe them with a dry cloth. For severe dirt, use a soft cloth steeped in a small amount of neutral detergent, then wipe dry. Do not use volatile solvents such as alcohol or thinners, as these may damage the finish.

## To prevent electromagnetic interference from portable communications devices

The use of portable telephones and other communications devices near this unit can result in malfunctions and interference with audio and video signals.

It is recommended that the portable communications devices near this unit be powered off.

## Digital Triax Transmission (HDCU3170)

A powerful error-correction function is incorporated for the transmission between the camera and CCU. However, if an error occurs on long-distance transmission because of external noise or for some other reason, the compensation by interpolation that partially uses the previous picture may operate.

In digital triax transmission, the following video delay in transmission may occur.

- The video delay in transmission between the camera and the CCU is approx. 9 ms to 12 ms.
- A delay of about 1 frame occurs on the viewfinder display if a camera image is sent back from the CCU to the camera as a return signal.
- An appropriate delay is applied to the MIC 1 and 2 audio signals from the CCU to match the video delay.
- A certain time is required for the video signal transmitted between the camera and the CCU to stabilize after power is applied. This is not a malfunction.

## Transmission Distances

The maximum and minimum transmission distances allowed for triax cable connection are shown in the table below. The distances may vary according to the conditions, such as the total power requirements (including the power supply to the camera from the CCU) and cable degradation.

Allowable transmission range when using triax cables with the following characteristics:

Attenuation: 3.8 to 68.4 dB at 100 MHz (including the connector loss)

Cable type (example)		Max. distance	Min. distance
Fujikura	8.5 mm dia.	900 m (2953 ft)	50 m (164 ft)
Fujikura	14.5 mm dia.	1800 m (5906 ft)	100 m (328 ft)
Belden 9232	13.2 mm dia.	1300 m (4265 ft)	75 m (246 ft)

## Error Messages

When an error is detected in this unit or the camera, the ALARM indicator turns on and an error message is displayed on this unit.

Error Messages	Description
CCU:XXX POWER ERROR	Board power supply error (XXX is the board name)
CCU:XXX PLD ERROR	PLD error (XXX is the board name)
CCU:XXX TEMP WARNING	Board temperature error (XXX is the board name)
CCU:OPTICAL CONDITION OK	Light sensor level on CCU side dropped
CCU:OPTICAL CONDITION WARNING	
CCU:OPTICAL CONDITION CARE	
CCU:OPTICAL CONDITION ERROR	
CCU:PS FAN STOP	Power supply block FAN error
CCU:PS CABLE SHORT	CAMERA connector optical fiber cable/triax cable short-circuit connection error
CCU:PS CABLE OPEN	CAMERA connector optical fiber cable/triax cable open-circuit connection error


Error Messages	Description
CCU:PS RCP POWER SUPPLY ERROR	Remote control panel (connected to REMOTE connector) power supply error
CCU:PS TEMP WARNING	Power supply unit temperature error
CCU:PS POWER ERROR	Power supply unit input/output error
CCU:PS POWER WARNING	
CCU:FRONT FAN1 STOP	Front board FAN1 stop
CCU:PS REAR FAN STOP	Power supply block rear FAN error
CCU:GENLOCK ERROR	External reference sync error
CCU:FORCE LEGACY	FORCE LEGACY is set for CNS MODE
CCU:10FIELD-ID ERROR	10-field ID is not detected even though the 10F BB setting is On
CCU:SET DATE&TIME	Invalid date

# Specifications

## HDCU3100/HDCU3170

General	
Power requirements	100 V to 240 V AC, 50/60 Hz
Current consumption	4.5 A (max.)
Operating temperature	5 °C to 40 °C (41 °F to 104 °F)
Storage temperature	-20 °C to +60 °C (-4 °F to +140 °F)
Mass	HDCU3100: Approx. 7.3 kg (16 lb 1.5 oz) HDCU3170: Approx. 8.1 kg (17 lb 14 oz)

### Dimensions (Unit: mm (inches))

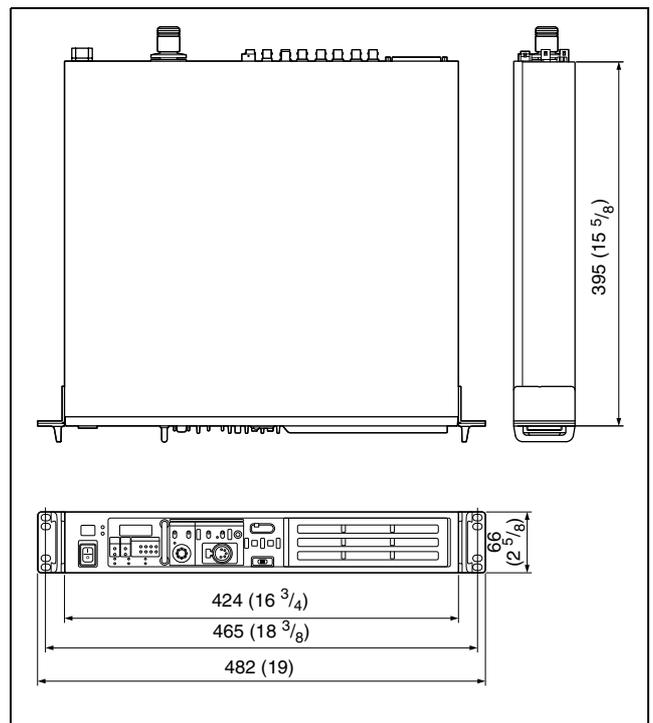

Input/output connectors	
CAMERA FIBER	HDCU3100: Optical fiber connector (1)
CAMERA TRIAX	HDCU3170: Triax connector (1)
INTERCOM/TALLY/IO PORT	D-sub 50-pin connector (1) <ul style="list-style-type: none"> <li>• INTERCOM (PROD/ENG), 4W: 0 dBu, RTS: 0 dBu, CC: -14 dBu</li> <li>• PGM, 3 systems, 0 dBu/-20 dBu</li> <li>• TALLY (R, G, Y)</li> <li>• FLAG</li> </ul>
RCP/CNU	8-pin multi-connector (1)
TRUNK	12-pin (1)
LAN-COM	8-pin (1)
NETWORK TRUNK	8-pin (1)

SDI I/O 1 to 4	3G/HD/SD SDI I/O BNC-type (4) 3G SDI: SMPTE ST424/425 Level-A/B, 0.8 Vp-p, 75 ohms, 2.970 Gbps/ 2.967 Gbps HD SDI: SMPTE ST292, 0.8 Vp-p, 75 ohms, 1.485 Gbps/1.4835 Gbps SD SDI: SMPTE ST259, 0.8 Vp-p, 75 ohms, 270 Mbps 3G SDI/HD SDI/SD SDI, character signal selectable
----------------	--

REFERENCE IN/OUT	BNC-type (2), loop-through output HD: SMPTE ST274, tri-level sync, 0.6 Vp-p, 75 ohms SD: Black burst (NTSC: 0.286 Vp-p, 75 ohms/PAL: 0.3 Vp-p, 75 ohms) or NTSC 10F-BB
------------------	---

#### Input connectors

AC IN	100 V to 240 V AC (1)
-------	-----------------------

SDI RET 1 to 4	BNC-type (4) 3G SDI: SMPTE ST424/425, 2.970 Gbps/ 2.967 Gbps HD SDI: SMPTE ST292, 1.485 Gbps/ 1.4835 Gbps SD SDI: SMPTE ST259, 270 Mbps
----------------	--

PROMPTER 1 PROMPTER 2/VBS- RET	BNC-type (2), loop-through output during 1CH mode, terminate internally at 75 ohms during 2CH mode, analog signal, 1.0 Vp-p, 75 ohms
--------------------------------------	---

#### Output connectors

AUDIO OUT CH1, CH2	XLR 3-pin, male (2), 0 dBu/-20 dBu/ +4 dBu
-----------------------	---

CHARACTER/AES/ EBU	BNC-type (1), VBS, 1 Vp-p, 75 ohms AES/EBU format AES/EBU selectable
-----------------------	--

SDI OUT 1 to 4	3G/HD/SD SDI OUTPUT BNC-type (4) 3G SDI: SMPTE ST424/425 Level-A/B, 0.8 Vp-p, 75 ohms, 2.970 Gbps/ 2.967 Gbps HD SDI: SMPTE ST292, 0.8 Vp-p, 75 ohms, 1.485 Gbps/1.4835 Gbps SD SDI: SMPTE ST259, 0.8 Vp-p, 75 ohms, 270 Mbps 3G SDI/HD SDI/SD SDI, character signal selectable
----------------	---

#### Supplied accessories

Number plates (1 set)
-----------------------

Before Using This Unit (1)
----------------------------

Operating Instructions (CD-ROM) (1)
-------------------------------------

#### Optional accessories

HKCU-SFP30 ST-2110 Interface Kit
----------------------------------

HKCU-SM30 Single Mode Fiber Connector Kit
---

HKCU-FB30 Optical Fiber Connector Kit
---------------------------------------

HZCU-CNFG50 Config Control Software
-------------------------------------

HZCU-SNMP50 SNMP Agent Software
---------------------------------

United States and Canada: Power cord set (1-551-812-XX) Other areas: Power cord set (1-782-929-XX)
---

United States and Canada: Plug holder B (2-990-242-01) Other areas: Plug holder C (3-613-640-01)
---

CCA-5-3 Connection Cable (3 meters), CCA-5-10 Connection Cable (10 meters)
---

Service Manual
----------------

#### Related devices

HDC3500 Color Camera
----------------------

HDC3100 Fiber Color Camera
----------------------------

HDC3170 Triax Color Camera
----------------------------

HDC2000 HD Color Camera
-------------------------

HDC2580/2500/2400/1700 HD Color Camera
--

HSC300RF/100RF HD Color Camera
--------------------------------

RCP-1500/1000 series Remote Control Panel
---

MSU-1000 series Master Setup Unit
-----------------------------------

## HKCU-FB30

#### General

Operating temperature	5 °C to 40 °C (41 °F to 104 °F)
-----------------------	---------------------------------

Storage temperature	-20 °C to +60 °C (-4 °F to +140 °F)
---------------------	-------------------------------------

Dimensions (w / h / d, excluding protrusions)	57 × 58 × 86 mm (2 1/4 × 2 3/8 × 3 1/2 in.)
--	--

Mass	CN board: Approx. 60 g (2.1 oz.)
------	----------------------------------

#### Supplied accessories

Optical module (1)
--------------------

LEMO connector (1)
--------------------

Harness (2)
-------------

Screws 3×8 (4)
----------------

Screws 3×6 (7)
----------------

Operating Instructions (1)
----------------------------

## HKCU-SFP30

#### General

Power consumption	40 W
-------------------	------

Operating temperature	5 °C to 40 °C (41 °F to 104 °F)
-----------------------	---------------------------------

Storage temperature	-20 °C to +60 °C (-4 °F to +140 °F)
---------------------	-------------------------------------

Dimensions (w / h / d, excluding protrusions)	115 × 32 × 250 mm (4 5/8 × 1 5/16 × 9 7/8 in.)
--	---

Mass	0.4 kg (14 oz.)
------	-----------------

#### I/O connectors

Connectors	SFP+, SFP28
------------	-------------

Number of lines	2
-----------------	---

Signal type	10GBASE-**, 25GBase-** (depending on SFP+/SFP28 transceiver module)
-------------	--

For information about the supported SFP+ and SFP28 transceiver modules (e.g. OTM-10GSR1), contact your Sony sales or service representative.

#### Supplied accessories

Fan assembly (1)
------------------

60-pin harness (2)
--------------------

20-pin harness (1)
--------------------

Power supply harness (1)
--------------------------

Screws M3×6 (5)
-----------------

Screws M2.6×5 (2)
-------------------

Bracket (1)
-------------

Operating Instructions (1)
----------------------------

## HKCU-SM30

General	
Power consumption	1.3 W
Operating temperature	5 °C to 40 °C (41 °F to 104 °F)
Storage temperature	-20 °C to +60 °C (-4 °F to +140 °F)
Dimensions (w / h / d, excluding protrusions)	112 × 16 × 150 mm (4 1/2 × 2 1/32 × 6 in.)
Mass	CN board: Approx. 120 g (4.2 oz.)
Input/output connectors	
CN board	ST connectors for single-mode fiber cables (2)
Supplied accessories	
SC-ST optical conversion adapter (2)	
SC-LC optical fiber cable (1)	
Harness (3)	
Screws M3×6 (5)	
Screws M2×5 (7)	
Screws +2.6×5 (2)	
Connector holder (2)	
Connector plate (1)	
Operating Instructions (1)	

Design and specifications are subject to change without notice.

### Notes

- Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.
- SONY WILL NOT BE LIABLE FOR CLAIMS OF ANY KIND MADE BY USERS OF THIS UNIT OR MADE BY THIRD PARTIES.
- SONY WILL NOT BE LIABLE FOR THE TERMINATION OR DISCONTINUATION OF ANY SERVICES RELATED TO THIS UNIT THAT MAY RESULT DUE TO CIRCUMSTANCES OF ANY KIND.

SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND RESULTING FROM A FAILURE TO IMPLEMENT PROPER SECURITY MEASURES ON TRANSMISSION DEVICES, UNAVOIDABLE DATA LEAKS RESULTING FROM TRANSMISSION SPECIFICATIONS, OR SECURITY PROBLEMS OF ANY KIND.

Depending on the operating environment, unauthorized third parties on the network may be able to access the unit. When connecting the unit to the network, be sure to confirm that the network is protected securely.

### Open Software Licenses

On the basis of license contracts between Sony and the software copyright holders, this product uses open software.

To meet the requirements of the software copyright holders, Sony is obligated to inform you of the content of these licenses.

For the content of these licenses, see the PDF files in the "License" folder of the supplied CD-ROM.

### MPEG-4 Visual Patent Portfolio License

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR

- (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR
- (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

MPEG LA is offering licenses for (i) manufacturing/sales of any storage media storing MPEG-4 Visual video information (ii) distribution/broadcasting of MPEG-4 Visual video information in any manner (such as online video distribution service, internet broadcasting, TV broadcasting). Other usage of this product may be required to obtain license from MPEGLA. Please contact MPEG LA for any further information. MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206, <http://www.mpegla.com>